



This manual is for reference and historical purposes, all rights reserved.

This creation is copyright© by M. Butkus, NJ, U.S.A.

These creations may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

If you find this manual useful, how about a donation of \$2 to:

M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701

and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or

\$18.00 for a hard to read Xerox copy.

This will allow me to continue this site, buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal, go to my web site

www.orphancameras.com and choose the secure PayPal donation icon.

Split-image Prism Rangefinder



Brief instructions for use of the ALPA 6 Camera

Brief Instructions for use of the



Model 6

The blue flashbulbs for color film synchronize identically as the ones for black and white film.
If the flashbulbs are used with the X-contact, do not operate the release button before winding the camera, as the flashbulbs would fire for nothing.
PF is the abbreviation for flashbulbs made by Philips, while FP means bulbs for focal plane shutters.

Note:

* For all flashbulbs with a long peak, it is unnecessary to use slower shutter speed than indicated above.

Flashbulbs TYPE									
Shutter setting	Philips			Osram			Sylvania		
	PF 1 PF 5 PF 38 PF 60	PF 100	PF 45 PF 24 *	XM 1 XM 5	SF 2	3	Bantam 8 Press 25 Press 40 0 2	FP 26 *	2 A *
1/10 sec.	X	X		X			X		
1/10 - 1/1000								M	
1/25		M			X				X
1/25 - 1/1000			M						
1/50 - 1/1000								M	
									M

Synchronization of the different flashbulbs