
INSTRUCTION BOOK

OPERATING INSTRUCTIONS

**TERMLINE[®] LOAD RESISTOR
MODELS 8141 & 8141-010**



Bird Electronic Corporation
Cleveland (Solon) Ohio USA

© Copyright 1998 by Bird Electronic Corporation
Instruction Book Part Number 920-8141 Rev. D

Termaline[®] is a Registered Trademark
of Bird Electronic Corporation

Safety Precautions

The following are general safety precautions that are not necessarily related to any specific part or procedure and do not necessarily appear elsewhere in this publication.

Keep Away From Live Circuits

Operating personnel must at all times observe general safety precautions. Do not replace components inside equipment with the high voltage supply turned on. To avoid casualties, always remove power.

Do Not Service Or Adjust Alone

Under no circumstances should any person reach into an enclosure for the purpose of service or adjustment of equipment except in the presence of who is capable of rendering aid.

Safety Earth Gound

An uninterruptible earth ground must be supplied from the main power source to test instruments. Grounding one conductor of a two conductor power cable is not sufficient protection. Serious injury or death can occur if this grounding is not properly supplied.

Shock Hazard

Do not attempt to disconnect an RF transmission line while RF power is present. Radiated RF power is a potential health hazard.

Resuscitation

Personnel working with or near high voltages should be familiar with modern methods of resuscitation.

Safety Symbols

WARNING


Warning notes call attention to a procedure, which if not performed correctly, could result in personal injury.

CAUTION

Caution notes call attention to procedure, which if not performed correctly, could result in damage to the equipment.

This symbol appears on the equipment indicating there is important information in the instruction manual regarding that particular area.



 **NOTE:** Calls attention to supplemental information.

Warning Statements

The following safety warnings appear in the text where there is danger to operating and maintenance personnel, and are repeated here for emphasis.

WARNING

Never attempt to disconnect RF equipment from the transmission line while RF power is being applied. Leaking RF energy is a potential health hazard.

WARNING

This product contains a resistor substrate made of beryllium oxide. This is a potentially toxic ceramic and may be harmful to your health. Beryllia oxide must be disposed of in accordance with the legal statutes dealing with hazardous material.

Do not attempt to repair this unit, but return to BIRD ELECTRONIC CORPORATION.

Caution Statements

The following equipment cautions appear in the text whenever the equipment is in danger of damage and are repeated here for emphasis.

CAUTION

Do not operate this equipment over the rated 250 watts continuously.
Damage to the resistive element will result.

Safety Statements



USAGE

ANY USE OF THIS INSTRUMENT IN A MANNER NOT SPECIFIED BY THE MANUFACTURER MAY IMPAIR THE INSTRUMENT'S SAFETY PROTECTION.

USO

EL USO DE ESTE INSTRUMENTO DE MANERA NO ESPECIFICADA POR EL FABRICANTE, PUEDE ANULAR LA PROTECCIÓN DE SEGURIDAD DEL INSTRUMENTO.

BENUTZUNG

WIRD DAS GERÄT AUF ANDERE WEISE VERWENDET ALS VOM HERSTELLER BESCHRIEBEN, KANN DIE GERÄTESICHERHEIT BEEINTRÄCHTIGT WERDEN.

UTILISATION

TOUTE UTILISATION DE CET INSTRUMENT QUI N'EST PAS EXPLICITEMENT PRÉVUE PAR LE FABRICANT PEUT ENDOMMAGER LE DISPOSITIF DE PROTECTION DE L'INSTRUMENT.

IMPIEGO

QUALORA QUESTO STRUMENTO VENISSE UTILIZZATO IN MODO DIVERSO DA COME SPECIFICATO DAL PRODUTTORE LA PROZIONE DI SICUREZZA POTREBBE VENIRNE COMPROMESSA.



SERVICE

SERVICING INSTRUCTIONS ARE FOR USE BY SERVICE - TRAINED PERSONNEL ONLY. TO AVOID DANGEROUS ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING UNLESS QUALIFIED TO DO SO.

SERVICIO

LAS INSTRUCCIONES DE SERVICIO SON PARA USO EXCLUSIVO DEL PERSONAL DE SERVICIO CAPACITADO. PARA EVITAR EL PELIGRO DE DESCARGAS ELÉCTRICAS, NO REALICE NINGÚN SERVICIO A MENOS QUE EST CAPACITADO PARA HACERLO.

WARTUNG

ANWEISUNGEN FÜR DIE WARTUNG DES GERÄTES GELTEN NUR FÜR GESCHULTES FACHPERSONAL.

ZUR VERMEIDUNG GEFÄHRLICHE, ELEKTRISCHE SCHOCKS, SIND WARTUNGSARBEITEN AUSSCHLIEßLICH VON QUALIFIZIERTEM SERVICEPERSONAL DURCHZUFÜHREN.

ENTRETIEN

L'EMPLOI DES INSTRUCTIONS D'ENTRETIEN DOIT ÊTRE RÉSERVÉ AU PERSONNEL FORMÉ AUX OPÉRATIONS D'ENTRETIEN. POUR PRÉVENIR UN CHOC ÉLECTRIQUE DANGEREUX, NE PAS EFFECTUER D'ENTRETIEN SI L'ON N'A PAS ÉTÉ QUALIFIÉ POUR CE FAIRE.

ASSISTENZA TECNICA

LE ISTRUZIONI RELATIVE ALL'ASSISTENZA SONO PREVISTE ESCLUSIVAMENTE PER IL PERSONALE OPPORTUNAMENTE ADDESTRATO. PER EVITARE PERICOLOSE SCOSSE ELETTRICHE NON EFFETTUARE ALCUNA RIPARAZIONE A MENO CHE QUALIFICATI A FARLA.

About This Manual

This instruction book covers the models 8141 and 8141-010 Termaline Load Resistor.

This instruction book is arranged so that essential information on safety is contained in the front of the book. Reading the Safety Precautions Section before operating the equipment is strongly advised.

The remainder of this Instruction Book is divided into Chapters and Sections. At the beginning of each chapter, a general overview describes the contents of that chapter.

Operation

First time operators should read Chapter 1 - Introduction, and Chapter 3 - Installation, to get an overview of equipment capabilities and how to install it. An experienced operator can refer to Chapter 4 - Operating Instructions. All instructions necessary to operate the equipment, are contained in this section.

Maintenance

All personnel should be familiar with preventative maintenance found in Chapter 5 - Maintenance. If a failure should occur, the troubleshooting section will aid in isolating and repairing the failures.

Parts

For location of major assemblies or parts, refer to the parts lists and associated drawings in Chapter 5.

Changes To This Manual

We have made every effort to ensure this manual is accurate at the time of publication. If you should discover any errors or if you have suggestions for improving this manual, please send your comments to our factory. This manual may be periodically updated, when inquiring about updates to this manual refer to the part number and revision level on the title page.

Table Of Contents

Safety Precautions	i
Safety Symbols	ii
Warning Statements	ii
Caution Statements	iii
Safety Statements.	iii
About This Manual	v
Introduction	1
General	1
Purpose And Function	1
Performance Characteristics and Capabilities	1
Dimensions and Weight	1
Power and Utility Requirements	2
Environmental Requirements	2
Items Supplied	2
Items Required	2
Tools and Test Equipment	2
Theory Of Operation	3
General	3
Installation	5
General	5
Operating Instructions	7
Start-up	7
Normal Operation	7

Shutdown	7
Emergency Shutdown	8
Maintenance	9
Troubleshooting.	9
Cleaning.	9
Outside Surface	9
Inspection.	10
Preventive Maintenance.	10
RF Assembly Test	10
DC Resistance	10
Disassembly.	11
RF Input Connector.	11
Coolant Oil & Diaphragm	11
RF Load Resistor Assembly	12
Reassembly	12
RF Input Connector.	12
Coolant Oil & Diaphragm	12
RF Load Resistor Assembly	13
Repairs.	13
Customer Service.	13
Storage	14
Shipment	14
Replacement Parts List	14

Chapter 1

Introduction

General This instruction book is intended for use by operators of the Models 8141 and 8141-010 Termaline Load Resistor.

This chapter contains introductory information including product specifications; items supplied; and accessory items.

Purpose And Function The Models 8141 and 8141-010 Termaline Load Resistor are portable, general purpose 50 ohm coaxial transmission line terminations. They are self-contained units requiring no outside power source or additional equipment. They provide accurate, dependable, and practically nonreflective terminations for testing and adjusting transmitters under nonradiating conditions from dc to 2500 MHz.

The models are rectangular in shape with transverse cooling fins spaced evenly along its entire length. Their short length makes it particularly useful in locations. Also, the ten pounds total weight is a convenience in portable use. Mounting holes are provided, see Chapter 3, Installation.

The RF connector, on the front face of the unit, is a Female N similar to UG-58A/U, but is a "Quick-Change" design permitting rapid and easy interchange with other AN type connectors.

Performance Characteristics and Capabilities The loads will absorb and dissipate as heat up to 250W of RF power in continuous duty. It can handle up to 20 percent overload for a maximum of ten minutes overload without damage, provided a half-hour interval is maintained for cooling between power applications. The design of the resistor and its impedance matching shell keeps the VSWR below 1.1 to 1.0 from dc to 1000 MHz, 1.2 to 1.0 from 1000 to 1800 MHz and 1.3 to 1.0 from 1800 to 2500 MHz. With its "QC" type of connector Model 8141 can be adapted to coaxial cables equipped with any of a variety of standard connectors.

Dimensions and Weight Consult the Specification Sheet for the size and weight of each load

Power and Utility Requirements	Other than the RF power input the Models 8141 and 8141-010 has no need for an external source of power or utility services.
Environmental Requirements	The loads should be operated in as clean and vibration free an environment as possible. The ambient temperature range should remain within -40°C to +45°C (-40°F to +113°F) for proper operation.
Items Supplied	The models are a self-contained unit, there are no additional parts other than this instruction book supplied. The load is prefilled at the factory with the proper amount of coolant.
Items Required	No additional items are required other than a coaxial cable for connecting the RF source to the load. The load is furnished with a Female N type connector. The cable should be equipped with a Male N type plug. If the cable has any other type of standard connector, then the load should be ordered with the appropriate type of mating connector.
Tools and Test Equipment	Only a screwdriver is needed for disassembling for service. An ohmmeter or resistance bridge with an accuracy of one percent or better at 50 ohms, is useful for checking resistor condition.

Specifications

Impedance	50 ohms nominal
VSWR	
dc-1000 MHz	1.1:1 maximum
1000-18000 MHz	1.2:1 maximum
1800-2500 MHz	1.3:1 maximum
Connectors	Bird Quick Change "QC" Female N Normally supplied.
Power Range	250 W continuous, 300 W intermittent (10 Minutes maximum).
Frequency Range	dc to 2500 MHz
Dimensions	9-9/16"L x 5-15/16"W x 8-1/2"H (243 x 151 x 216 mm)
Ambient Temperature	40°C to +45°C (-40°F to +113°F)
Weight	10 lb (4.5 kg)
Operating Position	Horizontal only
Finish	Light grey powder coat

General The Models 8141 and 8141-010 Termaline Load Resistor consists essentially of a cylindrical film type resistor immersed in a dielectric coolant. The resistor, individually selected for its accuracy, is enclosed in a special tapered housing which provides a linear reduction in surge impedance directly proportional to the distance along the resistor. This produces the uniform, practically reflectionless line termination over the stated frequencies of the load.

The dielectric coolant is chosen for its desirable electrical properties and thermal characteristics. Cooling of the load is accomplished by natural fluid and air convection. The 0.35 gallon (1.3 liter) of dielectric coolant carries the electrically generated heat from the resistor to the walls of the cylindrical cooling tank. The tank is encased in a set of heavy gauge aluminum radiator fins, which are firmly pressed on the cylinder. The heat from the dielectric oil is transferred to the surrounding air through the fins by natural convection.

A synthetic rubber diaphragm located in the rear dome of the load allows for the expansion of the coolant as the temperature rises.

General Position the Model 8141 and 8141-010 Termaline Load Resistor to provide at least six inches of unobstructed space around and above the unit. Place the load to permit the shortest possible cable length between the unit and the transmitting equipment.

Operate the load in a horizontal position only, with the handle on top. The load may be free-standing or fastened to any convenient flat surface. The front and rear fins are made extra thick and bent outward 90° to form mounting flanges. Fasten the Model 8141 by its mounting brackets with 1/4 machine screws and nuts or No. 12 wood screws if desired. The four 9/32 inch holes in the mounting brackets form a base rectangle of 7-15/32" x 5-1/8" (189.7 x 130.2 mm) for the Model 8141 and 7/13/32" x 5/1/8" (180 x 130.2 mm) for the Model 8141-010.

Operating Instructions

Start-up Connect the Models 8141 and 8141-010 Termaline Load Resistor to the transmitting equipment under test with 50 ohm coaxial cable such as RG-213/U or equal, equipped with a Male N type plug (UG-21E/U or equal) which mates with the RF input connector of the load. After the transmitter has been connected to the load, proceed according to the transmitter manufacturer's instruction.

Due to the difference in VSWR between the dummy load and the transmitter's antenna, readjustment of the transmitter may be required when returning to the original antenna.

CAUTION

Do not operate this equipment over the rated 250 watts continuously. Damage to the resistive element will result.

The unit will sustain an intermittent input of 300 W maximum for up to ten minutes with half-hour off intervals between power applications.

Normal Operation The loads will dissipate 250W of RF power safely and continuously without an operator in attendance.

As stated previously, the load can be overloaded to 300W of RF power for a maximum of ten minutes at a time with an interval of at least a half-hour in between to permit the load to cool off. Because of the additional heat that must be given off by the cooling fins under these conditions, touch the load with caution to avoid the possibility of painful burns.

Shutdown The only way to turn off the equipment is to cut off power from the RF generator. Allow sufficient time for the load to cool down after removing RF power before handling it.

**Emergency
Shutdown**

WARNING

Never attempt to disconnect RF equipment from the transmission line while RF power is being applied. Leaking RF energy is a potential health hazard.

Turn off the equipment by removing power from the RF generator.

Troubleshooting

For corrections requiring repair or replacement of components, refer to the appropriate section for your specific model.

Table 1
Troubleshooting

Problem	Possible Cause	Correction
Coolant oil leak around clamping band or radiator	Clamping bands not tight	Tighten slightly with screwdriver
	Faulty O-ring (front)	Replace O-ring
	Faulty diaphragm	Replace diaphragm
Overheating of the radiator	Transmitter power too high	Reduce transmitter power
	Coolant oil level too low	Add more coolant oil to the radiator
	Accumulation of dirt on cooling fins	Clean cooling fins
	Faulty RF section assembly, check Rdc	Replace if needed
High or low dc resistance values	Loose or faulty RF connector	Tighten or replace as needed
	Faulty RF section assembly	Replace if needed

Cleaning

Outside Surface The outside surface of the instrument, especially the cooling fins, should be wiped free of dust and dirt when necessary. Clean the RF input connector with a clean dry cloth. Use an aerosol type non residue forming contact cleaner on the inaccessible portions. Take special care to clean the metallic contact surfaces and exposed face of the teflon insulator.

Inspection

With the rugged and simple construction of loads, periodic inspection will be necessary at only about six month intervals. Inspection should include the items listed below:

- a. Cleanliness - Keep the housing and connector free of grime.
- b. Oil Leakage - Check for coolant oil seepage from the radiator tank, and particularly at the front and rear near the under side of the clamping band. See Troubleshooting Chart if leakage is observed. Check tightness of the clamping screw.
- c. Inspect the load for completeness and general condition of the equipment.

Preventive Maintenance

The load requires only nominal routine care. It is designed to operate for long periods of time, if care is taken not to exceed its power handling capabilities.

The principal item of preventive maintenance is cleanliness. Keep the cooling fins clear of accumulated dust and grime. They interfere with the efficient and rapid transfer of heat from the fins to the surrounding air and therefore could cause the unit to overheat. Keep the coolant level up.

RF Assembly Test

DC Resistance The electrical condition of the load resistor itself may be ascertained generally from its dc resistance at room temperature.

It must be remembered that VSWR and RF impedance are the prime requisites of a good dummy load, however, occasionally checking the dc resistance will offer an indication of a failing load.

Normally the dc resistance of the load will be a nominal 50 ohms. Stabilization of the resistive film or temperature can cause a change in the dc resistance. Always check the load when its temperature is between 20 and 25 degrees Celsius.

Check and record the dc resistance value of the load before it is put into service. Use a resistance bridge or ohmmeter

with an accuracy of one percent or better at 50 ohms for this purpose.

If the load is used frequently, daily to weekly, it would be wise to check the resistance on a monthly schedule. If however, the load is used more infrequently you may want to set up a six month to yearly schedule accordingly. If there is no change or even a slight change in dc resistance there is no cause for alarm, however, if there is a drastic change greater than two ohms, this could be an indication of a failing load.

These tests are by no means a dire necessity to the operation of the load but merely guidelines for the users information and advisement.

Disassembly

There are no special techniques required for the repair or replacement of components. A screwdriver is the only tool needed. The following paragraphs outline component removal.

RF Input Connector

The input connector is a "Quick-Change" design which permits easy interchange with the use of only a screwdriver. This process does not interfere with the essential coaxial continuity of the load resistor's RF input or the coolant oil seal. For replacement, proceed as follows:

- a. Remove the four 8-32 x 5/16 inch pan head machine screws from the corners of the RF connector.
- b. Pull the connector straight out of its socket.

Coolant Oil & Diaphragm

To examine the coolant oil and diaphragm, remove the diaphragm cover. Proceed as follows:

- a. Stand the load vertically, with the back end up.
- b. Loosen the clamp screw to release the clamping band.

- c. Remove the diaphragm cover and lift the diaphragm from the back end of the radiator tank. The diaphragm should be soft and pliable. If it is hard or shows signs of surface cracks, replace it. (Bird P/N 2430-015).
- d. The coolant level should be about one inch below top of the cylinder. If oil appears contaminated, replace. Use only the specified coolant, Bird P/N 5-1070.

**RF Load
Resistor
Assembly**

To replace the load resistor assembly proceed as follows:

- a. Stand the radiator vertically with RF input connector up.
- b. With a screwdriver, loosen the 10-32 clamping screw on the clamp band that holds the RF section in place. Remove the clamping band.
- c. Lift the RF section straight up and out of the radiator tank. Hold for a short time over tank to allow oil to drain back in.
- d. Inspect the O-Ring seal just inside the sloped flange of the mounting ring. Replace this seal, Bird P/N 5-230, if it shows any evidence of cuts or deterioration such as hardening or surface cracks.

Reassembly

**RF Input
Connector**

To install a new connector, reverse the procedures in paragraph RF Input Connector, Disassembly. Be sure that the projecting center contact pin on the connector is carefully engaged and properly seated with the mating socket of the load resistor input.

**Coolant Oil &
Diaphragm**

Inspect the diaphragm and coolant oil as indicated in disassembly.

- a. Put the diaphragm back in place on the radiator tank.

- b. Press the cup-like swelling in the center of the diaphragm down into the tank to remove the trapped air bubble. To allow the air to escape, pry the diaphragm away from the edge of the tank. Through the same opening add more oil, if necessary, until the oil level is flush with the top of the tank.
- c. Replace the diaphragm cover and the clamping band. Tighten the clamping screw.

**RF Load
Resistor
Assembly**

To install assembly, reverse the disassembly procedures in paragraph RF Load Resistor Assembly, Disassembly.

Repairs

WARNING

This product contains substrate made of beryllium oxide. This is a potentially toxic ceramic and may be harmful to your health. Beryllia oxide must be disposed of in accordance with the legal statutes dealing with hazardous material.

Do not attempt to repair this unit, but return to BIRD ELECTRONIC CORPORATION.

Repairs beyond what is covered in this instruction book will require return of the equipment to Bird Electronic Corporation for service. Please consult the factory.

**Customer
Service**

Any maintenance or service procedure beyond scope of those provided in this section should be referred to a qualified service center. Bird Electronic Corporation maintains a complete repair and calibration facility at the following address:

Service Group

U.S.A. Sales and Manufacturing

Bird Electronic Corporation
30303 Aurora Road
Cleveland (Solon), Ohio 44139-2794
Phone: (440) 248-1200
Fax: (440) 248-5426

Sales Offices

For the location of the sales office nearest you, give us a call or visit our Web site at

<http://www.bird-electronic.com>

Storage No special preparation for storage is required other than to cover the equipment to keep it free of dust and dirt accumulations. Storage in a dry, dust and vibration free environment is recommended. The storage temperature should preferably remain within the working temperature range of -40°C to +45°C (-40°F to +113°F).

Shipment Wrap and secure the RF connector with tape to keep out foreign material during shipment. Pack and brace the load in a shipping container, a corrugated paper container should suffice.

Replacement Parts List Models 8141 and 8141-010

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	Radiator assembly	2440-015
2	1	RF section assembly	8141-002
3	1	Coolant .35 gallons (1.3 liter)(1 gallon container)	5-1070-2
4	1	"QC" connector	See below*
5	2	Clamp band assembly	2430-055
6	1	O-Ring seal	5-230
7	1	Diaphragm	2430-015
8	1	Diaphragm cover	2430-148

***Available QC Type Connectors**

N-Female	4240-062	LT-Male	4240-012
N-Male	4240-063	C-Female	4240-100
HN-Female	4240-268	C-Male	4240-110
HN-Male	4240-278	UHF-Female(SO-230	4240-050
LC-Female	4240-031	UHF-Male (PL-259)	4240-179
LC-Male	4240-025	7/8" EIA Air Line	4240-002
LT-Female	4240-018		

DECLARATION OF CONFORMITY

Manufacturer: Bird Electronic Corporation
30303 Aurora Road
Cleveland, Ohio 44139-2794

Product: TERMALINE LOAD RESISTOR
Models: 8140-010 8141

The undersigned hereby declares, on behalf of Bird Electronic Corporation of Cleveland, Ohio, that the above-referenced product, to which this declaration relates, is in conformity with the provisions of the following standards;

1. European Standard EN 61010-1:1993 - Safety, Group II.

This standard is in accordance with Council Directive 73/23/EEC and 93/68/EEC.

The technical documentation file required by this directive is maintained at the corporate headquarters of Bird Electronic Corporation, 30303 Aurora Road, Cleveland, Ohio.

A handwritten signature in blue ink, appearing to read 'Ken DeVore', is written over a horizontal line.

Ken DeVore
QA/Metrology Manager
Bird Electronic Corporation

Limited Warranty

All products manufactured by Seller are warranted to be free from defects in material and workmanship for a period of one (1) year, unless otherwise specified, from date of shipment and to conform to applicable specifications, drawings, blueprints and/or samples. Seller's sole obligation under these warranties shall be to issue credit, repair or replace any item or part thereof which is proved to be other than as warranted; no allowance shall be made for any labor charges of Buyer for replacement of parts, adjustment or repairs, or any other work, unless such charges are authorized in advance by Seller.

If Seller's products are claimed to be defective in material or workmanship or not to conform to specifications, drawings, blueprints and/or samples, Seller shall, upon prompt notice thereof, either examine the products where they are located or issue shipping instructions for return to Seller (transportation-charges prepaid by Buyer). In the event any of our products are proved to be other than as warranted, transportation costs (cheapest way) to and from Seller's plant, will be borne by Seller and reimbursement or credit will be made for amounts so expended by Buyer. Every such claim for breach of these warranties shall be deemed to be waived by Buyer unless made in writing within ten (10) days from the date of discovery of the defect.

The above warranties shall not extend to any products or parts thereof which have been subjected to any misuse or neglect, damaged by accident, rendered defective by reason of improper installation or by the performance of repairs or alterations outside of our plant, and shall not apply to any goods or parts thereof furnished by Buyer or acquired from others at Buyer's request and/or to Buyer's specifications. In addition, Seller's warranties do not extend to the failure of tubes, transistors, fuses and batteries, or to other equipment and parts manufactured by others except to the extent of the original manufacturer's warranty to Seller.

The obligations under the foregoing warranties are limited to the precise terms thereof. These warranties provide exclusive remedies, expressly in lieu of all other remedies including claims for special or consequential damages. SELLER NEITHER MAKES NOR ASSUMES ANY OTHER WARRANTY WHATSOEVER, WHETHER EXPRESS, STATUTORY, OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS, AND NO PERSON IS AUTHORIZED TO ASSUME FOR SELLER ANY OBLIGATION OR LIABILITY NOT STRICTLY IN ACCORDANCE WITH THE FOREGOING.