

CHAPTER

56

Windows

CHAPTER 56 Windows

Subject/Page	Date	COC	Subject/Page	Date	COC
EFFECTIVE PAGES			56-11-00 (cont.)		
1 thru 2	Jun 15/2009		6	Feb 10/2007	
			7	Feb 10/2007	
56-CONTENTS			8	Feb 15/2009	
O 1	Jun 15/2009		9	Feb 10/2007	
2	BLANK		O 10	BLANK	
56-00-00			D 11	Jun 15/2009	
1	Oct 10/2002		D 12	Jun 15/2009	
2	Oct 10/2002		D 13	Jun 15/2009	
R 3	Jun 15/2009		D 14	Jun 15/2009	
O 4	Jun 15/2009		D 15	Jun 15/2009	
D 5	Jun 15/2009		D 16	Jun 15/2009	
D 6	BLANK		56-12-00		
56-10-00			1	Feb 10/2007	
O 1	Jun 15/2009		2	Feb 15/2009	
R 2	Jun 15/2009		3	Feb 10/2007	
R 3	Jun 15/2009		R 4	Jun 15/2009	
O 4	BLANK		D 5	Jun 15/2009	
56-11-00			D 6	BLANK	
1	Oct 10/2002		56-21-00		
2	Feb 10/2007		1	Feb 15/2009	
3	Feb 10/2007		2	Feb 15/2009	
R 4	Jun 15/2009		3	Jun 10/2007	
O 5	Jun 15/2009		4	Feb 15/2009	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

56-EFFECTIVE PAGES

CHAPTER 56
Windows

Subject/Page	Date	COC	Subject/Page	Date	COC
56-22-00					
1	Feb 15/2009				
2	Jun 10/2006				
3	Jun 10/2007				
4	Feb 15/2009				
56-31-00					
1	Oct 10/2002				
2	Oct 10/2002				
3	Oct 10/2004				
4	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

56-EFFECTIVE PAGES

D633A101-HAP

Page 2
Jun 15/2009

CHAPTER 56
Windows

<u>CH-SC-SU</u>	<u>Subject</u>	<u>Page</u>	<u>Effectivity</u>
56-00-00	WINDOWS - INTRODUCTION	2	HAP ALL
56-10-00	WINDOWS - FLIGHT COMPARTMENT - INTRODUCTION	2	HAP ALL
56-11-00	WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.1 WINDOW	2	HAP ALL
56-11-00	WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.3 WINDOW	6	HAP ALL
56-12-00	WINDOWS - CONTROL CABIN SLIDING WINDOWS - NO. 2 OPENABLE WINDOW	1	HAP ALL
56-21-00	WINDOWS - PASSENGER CABIN WINDOWS - GENERAL DESCRIPTION	1	HAP ALL
56-22-00	WINDOWS - EMERGENCY EXIT WINDOW - GENERAL DESCRIPTION	1	HAP ALL
56-31-00	WINDOWS - DOOR-MOUNTED WINDOWS - GENERAL DESCRIPTION	2	HAP ALL

56-CONTENTS

D633A101-HAP

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

Page 1
Jun 15/2009

THIS PAGE IS INTENTIONALLY LEFT BLANK

56-00-00

D633A101-HAP


Page 1
Oct 10/2002

WINDOWS - INTRODUCTION**General**

These are the types of windows on the airplane:

- Flight compartment windows (fixed and sliding)
- Passenger compartment windows
- Emergency exit windows
- Door-mounted windows.

All the windows can hold cabin pressurization loads and have fail safe properties.

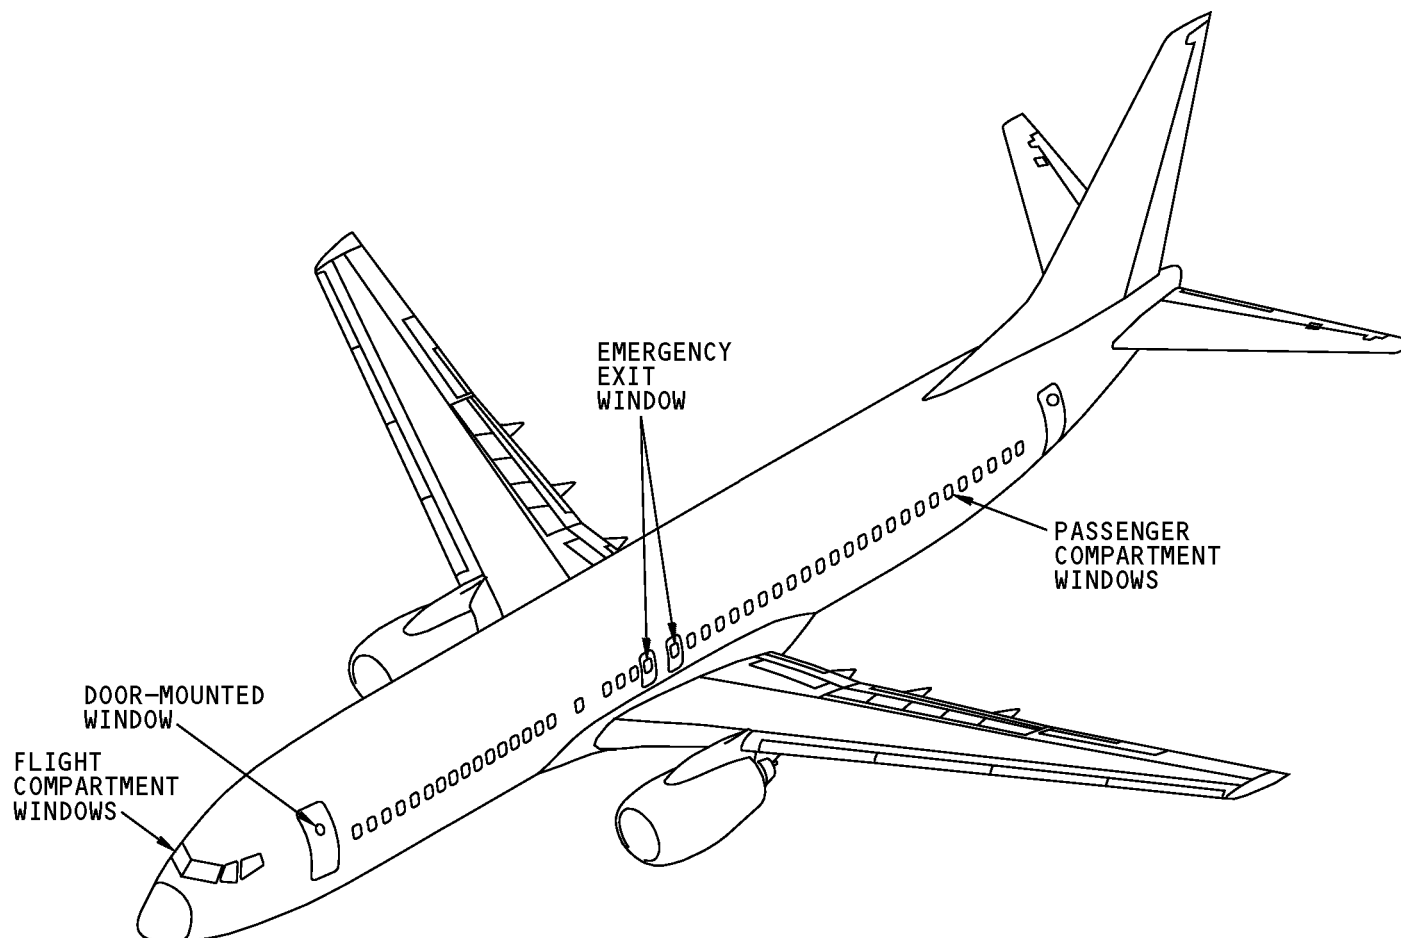

WINDOWS - INTRODUCTION


56-00-00-001

EFFECTIVITY
HAP 001-013, 015-026, 028-054

56-00-00

D633A101-HAP

Page 3
Jun 15/2009

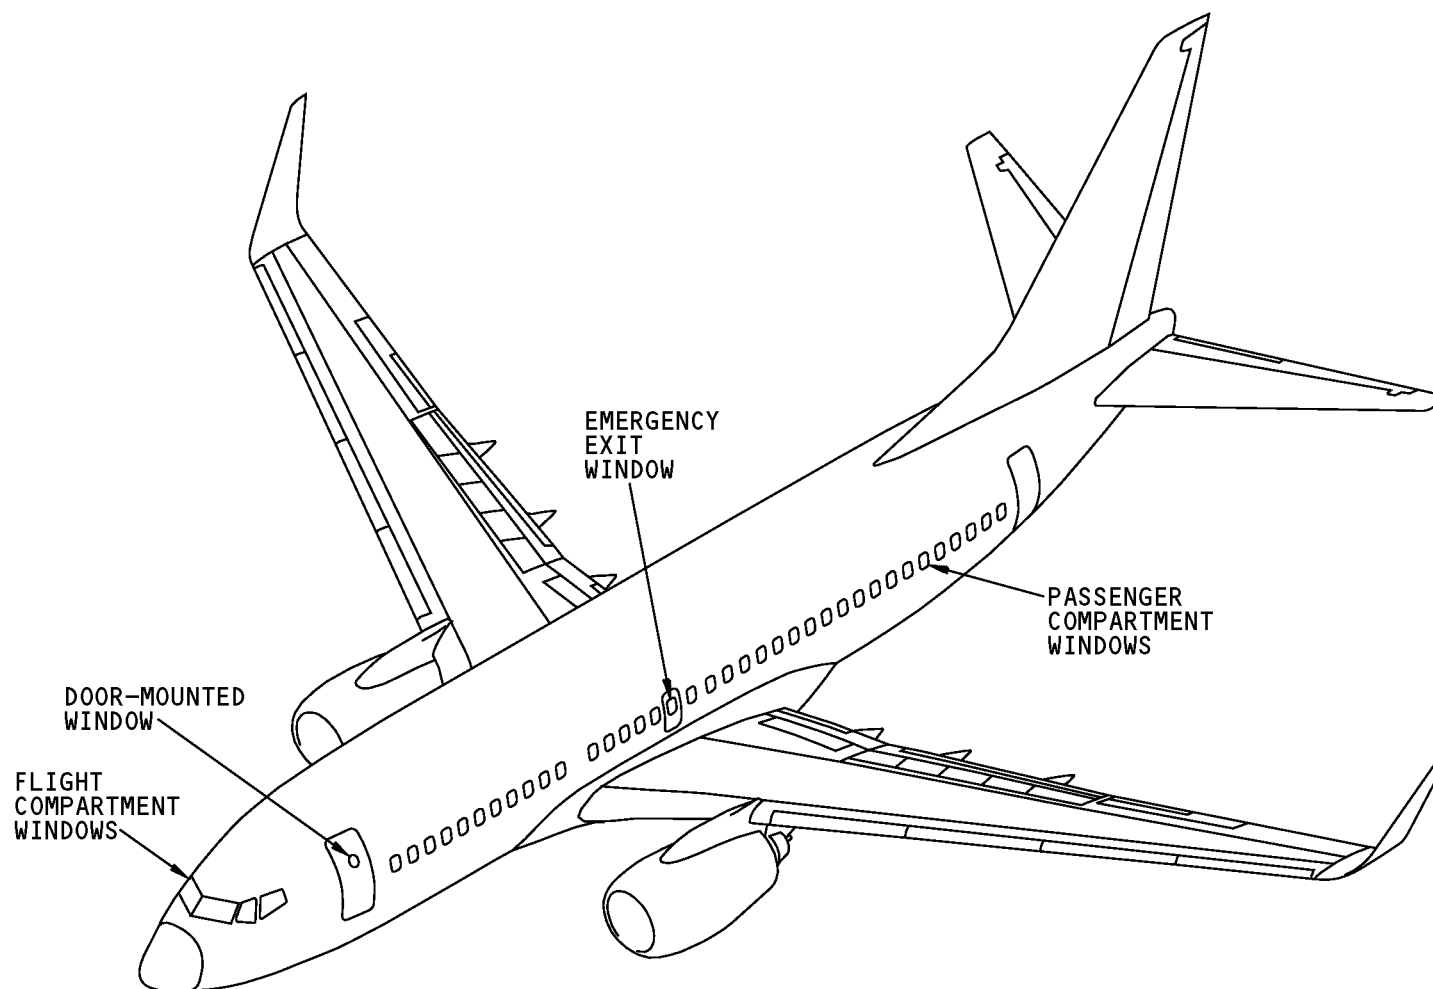

WINDOWS - INTRODUCTION

EFFECTIVITY
HAP 101-999

56-00-00

D633A101-HAP

Page 4
Jun 15/2009

THIS PAGE IS INTENTIONALLY LEFT BLANK

56-10-00

D633A101-HAP

Page 1
Jun 15/2009

WINDOWS - FLIGHT COMPARTMENT - INTRODUCTION

General Description

Six windows are symmetrically located around the forward end of the flight compartment. The windows are designated right and left windows No.1, No.2, and No.3, as shown on Figure 1. The corresponding left and right windows are identically opposite assemblies.

Flight compartment windows No.1, and 3 are fixed and do not open. Window No.2 is a sliding window that opens.

The No.1, No.2, and heated No. 3 flight compartment windows are of laminated construction. The design of the No.1, windows which are the pilots' windshields, and the No.2 window, is to carry pressure loads and to withstand bird impact. The design of the No.3 window is to carry pressure loads.

A gasket or rubber-beaded seal attached to the edge of the windows makes a pressure seal. The aerodynamic smoother fills the space between the window frame and the fuselage skin on the No. 1, and No. 3 to make an aerodynamic seal. The aerodynamic smoother has an added function as a weather seal to keep out moisture.

Construction


The No.1, No.2, heated No.3, flight compartment windows are of laminated construction. The design of the No.1, windows which are the pilots' windshields, and the No.2 window, is to carry pressure loads and to withstand bird impact. The design of the No.3 window is to carry pressure loads.

EFFECTIVITY
HAP ALL

56-10-00

D633A101-HAP

Page 2
Jun 15/2009

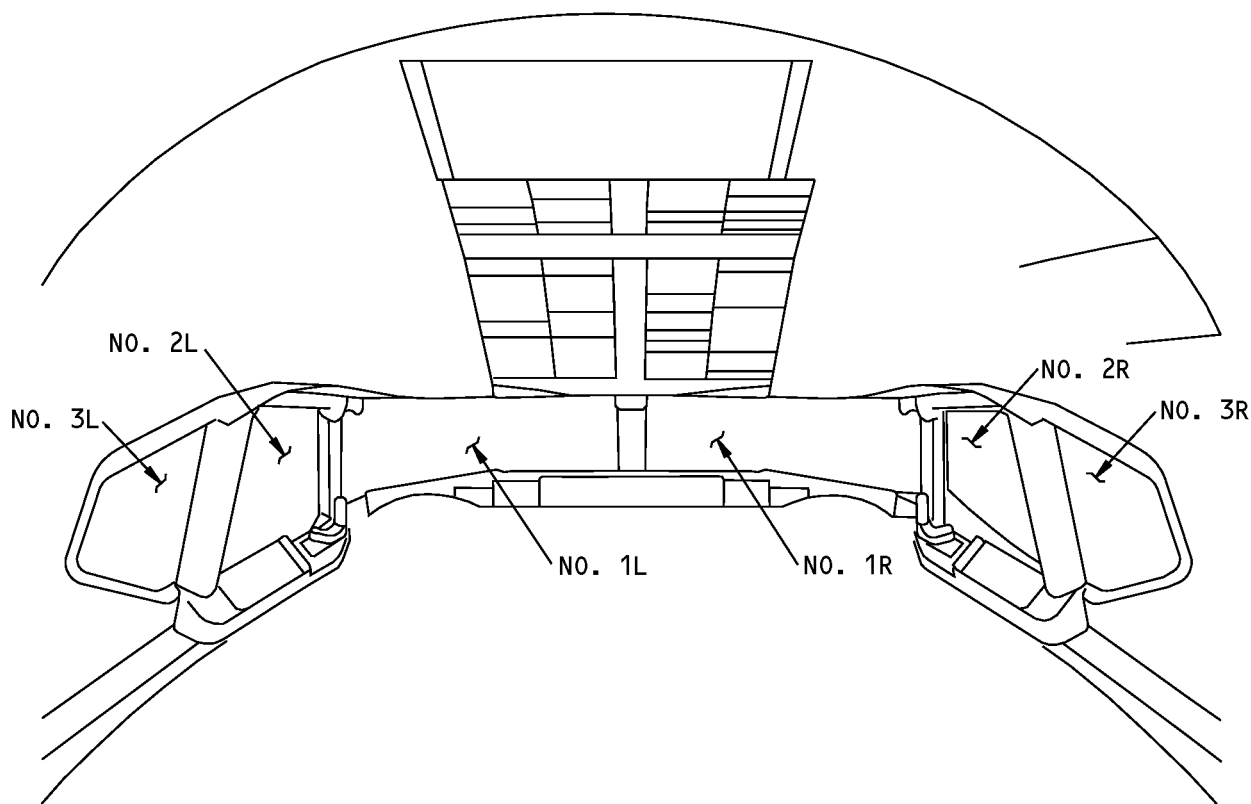

FLIGHT COMPARTMENT WINDOWS

WINDOWS - FLIGHT COMPARTMENT - INTRODUCTION

56-10-00-001

EFFECTIVITY
HAP ALL

56-10-00

D633A101-HAP

Page 3
Jun 15/2009

THIS PAGE IS INTENTIONALLY LEFT BLANK

56-11-00

D633A101-HAP

Page 1
Oct 10/2002

WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.1 WINDOW

General

The left No. 1 window is the pilot's windshield. The right No. 1 window is the co-pilot's windshield. The left and right windshields are opposite assemblies and installations. The windshields install internal to the airplane.

The windshields have laminated transparent layers, a phenolic edge material, and weigh approximately 50 lb (23 kg). The windshields use bolts to attach to the fuselage structure through the phenolic edge material.

Construction

Each windshield is a laminated assembly of layers of glass and vinyl or urethane. The structural inner glass pane carries pressure loads. The vinyl interlayer is structural for bird impact resistance and fail-safe pressure loads.

The current windshield manufactured by PPG has these layers: an non-structural outer glass pane, a non-structural urethane interlayer, a structural vinyl (polyvinyl butyral or PVB) interlayer, a non-structural urethane interlayer and an structural inner glass pane.

Current windshields can have a temporary rain repellant hydrophobic coating applied. Some older airplanes have an engaged or disengaged liquid rain repellant system. Windshield wipers supply a sufficient quantity of rain removal without a secondary rain repellant system.

Window Heat

A conductive film is located on the inner surface of the outer glass pane, which is a part of the windshield heat system that supplies the anti-fog and the anti-ice function. Bus bars, embedded in the windshield contact the conductive film near the top and bottom edges of the windshield. Along the edges of the windshield near the conductive film, there are two embedded temperature control sensors.


One control sensor is necessary to operate the windshield heat system. The second control sensor is a spare sensor that can be connected if the first sensor does not operate. Wires from the bus bars and sensors extend through the windshield to the terminals on the top and bottom edges.

EFFECTIVITY
HAP ALL

56-11-00

D633A101-HAP

Page 2
Feb 10/2007

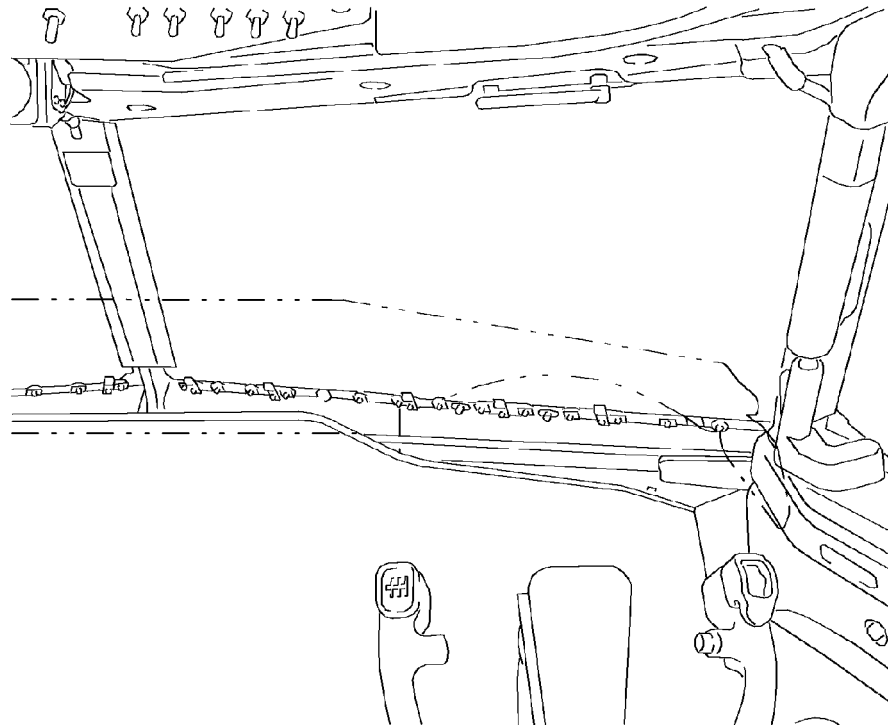

(RIGHT SIDE SHOWN)




WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.1 WINDOW (WINDSHIELD)

EFFECTIVITY
HAP ALL

56-11-00

D633A101-HAP

Page 3
Feb 10/2007

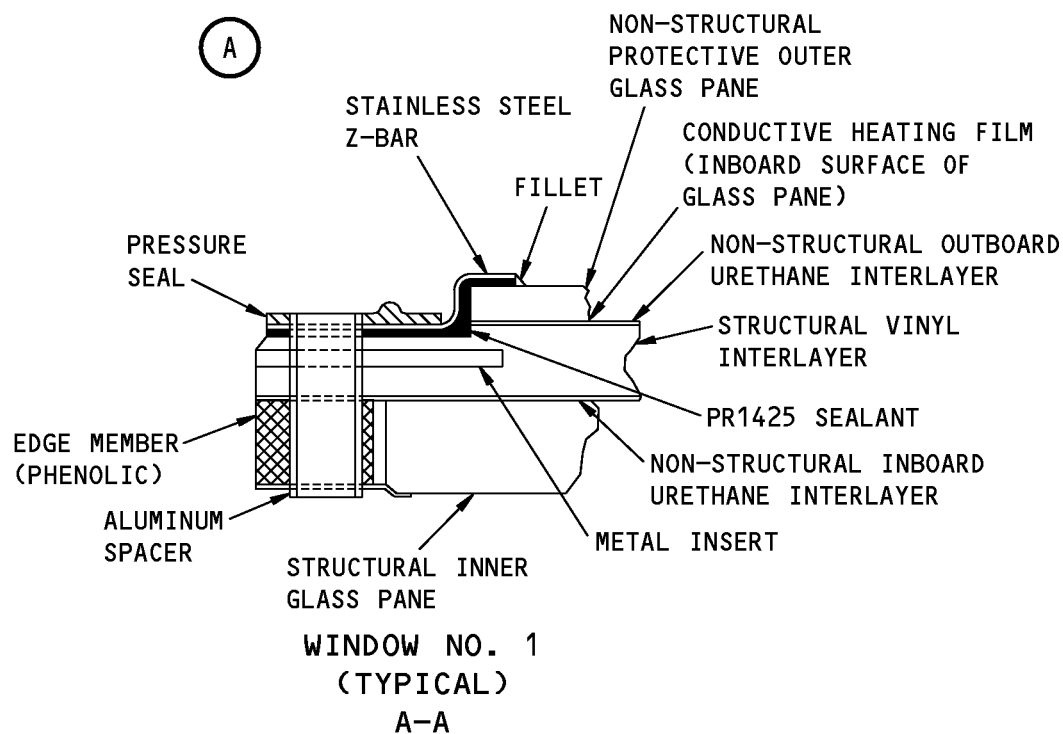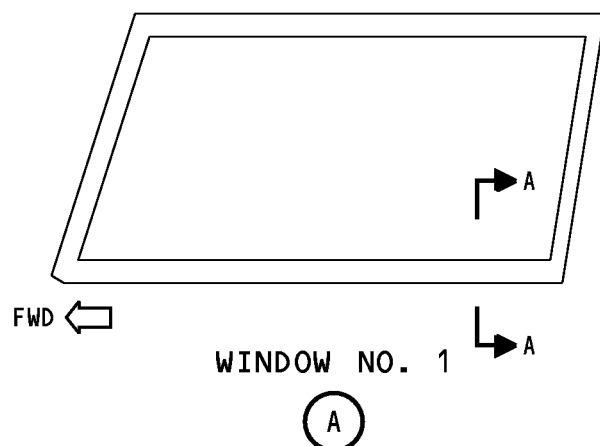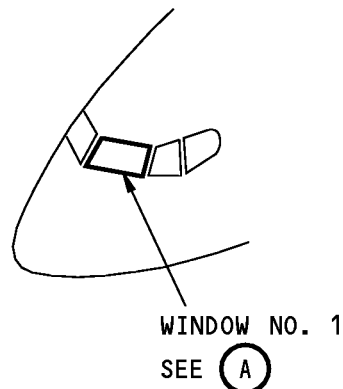

WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.1 WINDOW CONSTRUCTION

56-11-00-001

EFFECTIVITY
HAP ALL

56-11-00

D633A101-HAP

Page 4
Jun 15/2009

THIS PAGE IS INTENTIONALLY LEFT BLANK

56-11-00

D633A101-HAP

Page 5
Jun 15/2009

WINDOWS - CONTROL CABIN FIXED WINDOWS - NO.3 WINDOW

General

The left No. 3 window is the pilot's side window. The right No. 3 window is the co-pilot's side window. The left and right windows are opposite assemblies and installations. The windows install internal to the airplane.

The windows have laminated transparent layers, a phenolic edge material, and weigh approximately 25 lb (11 kg). The windows use bolts to attach to the fuselage structure through the phenolic edge material.


Construction

There is one current manufacturer for the window. Each window is a laminated assembly of layers of glass, vinyl and urethane. The structural inner glass pane carries the pressure loads. The vinyl interlayer is structural for fail-safe pressure loads.

The window manufactured by PPG has these layers: an non-structural outer glass pane, a non-structural urethane interlayer, a structural vinyl (polyvinyl butyral or PVB) interlayer, a non-structural urethane interlayer and an inner structural glass pane.

Window Heat

A conductive film is located on the outer surface of the inner glass pane, which is a part of the window heat system that supplies the anti-fog function. Bus bars, embedded in the window contact the conductive film near the top and bottom edges of the window. The thermal switch attached to the bottom edge of the window controls the heat.

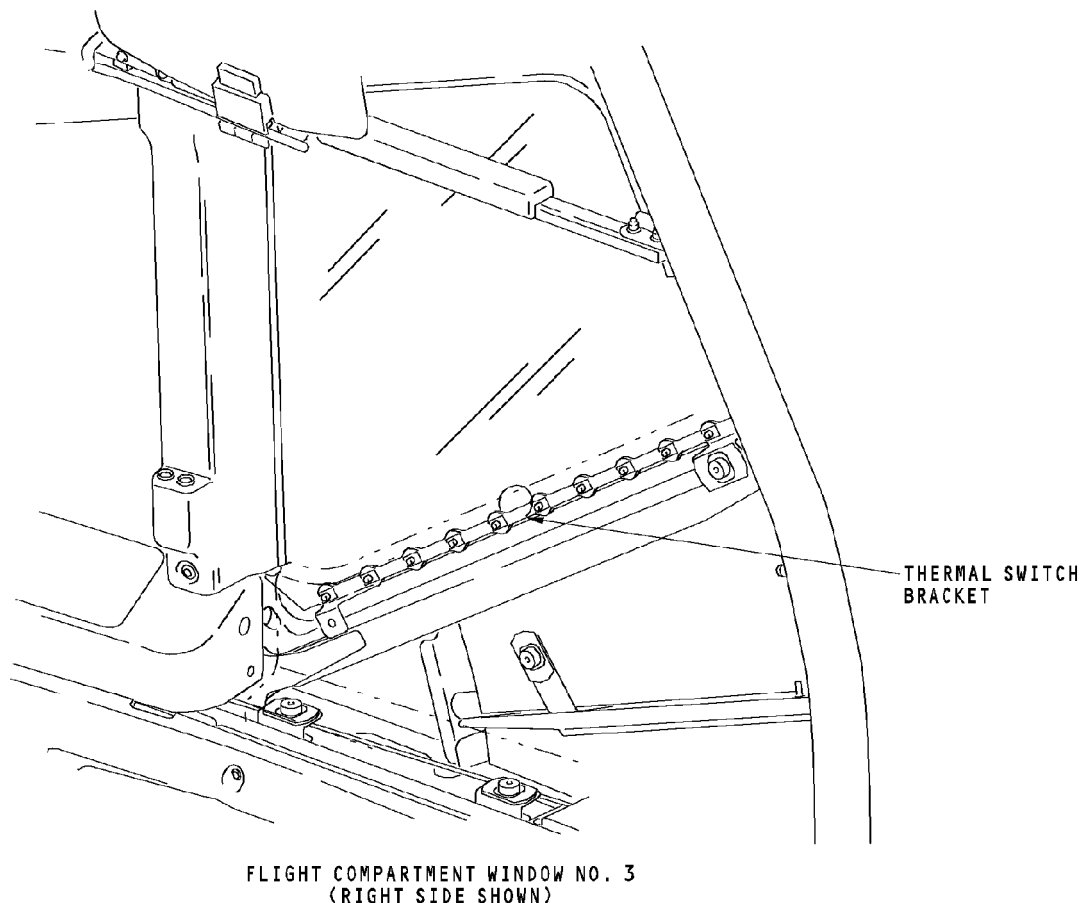

WINDOWS - CONTROL CABIN FIXED WINDOWS - NO. 3 WINDOW


56-11-00-005

EFFECTIVITY
HAP ALL

56-11-00

D633A101-HAP

Page 7
Feb 10/2007

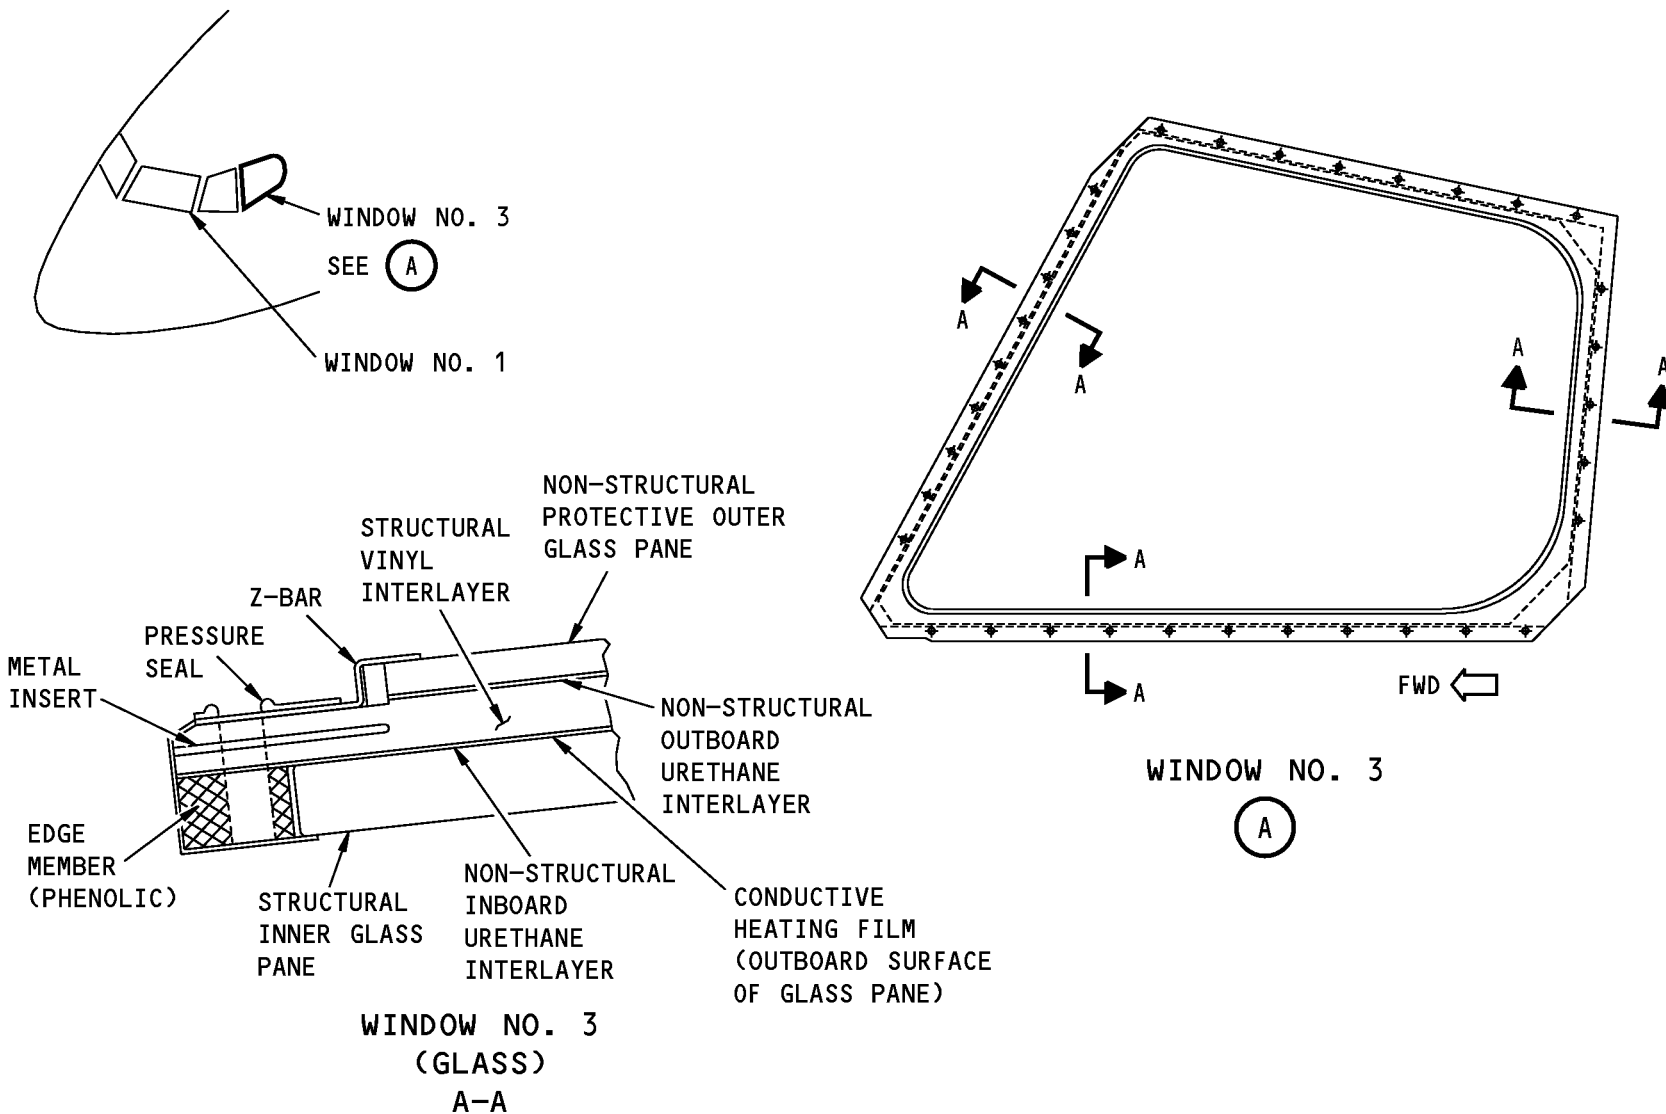

WINDOWS - CONTROL CABIN FIXED WINDOWS - HEATED NO. 3 WINDOW CONSTRUCTION




EFFECTIVITY

HAP 023-026, 028-054, 101-999; HAP 001-013, 015-022 POST SB 737-56-1014

56-11-00

D633A101-HAP

Page 8
Feb 15/2009

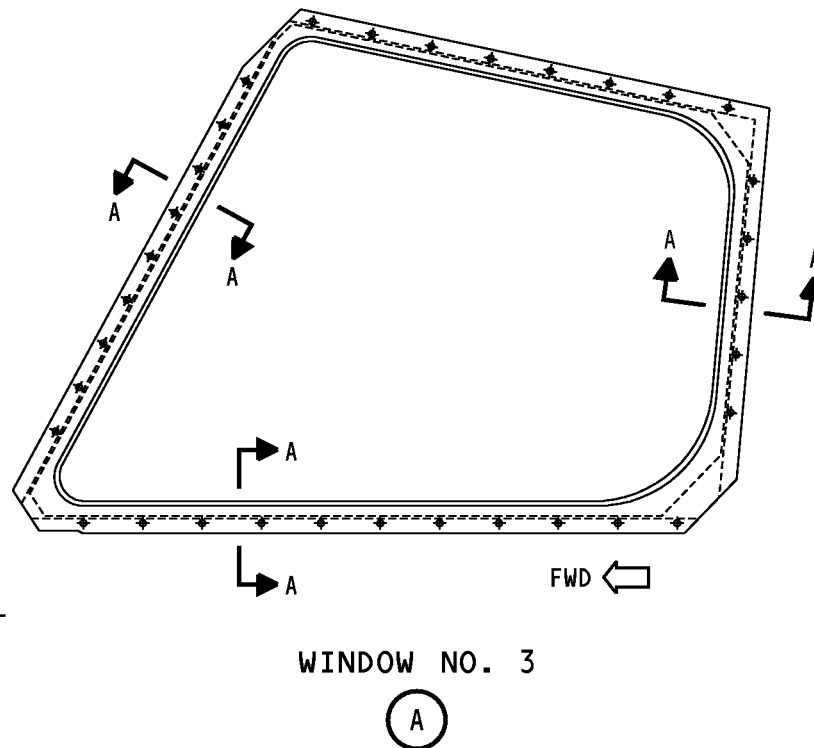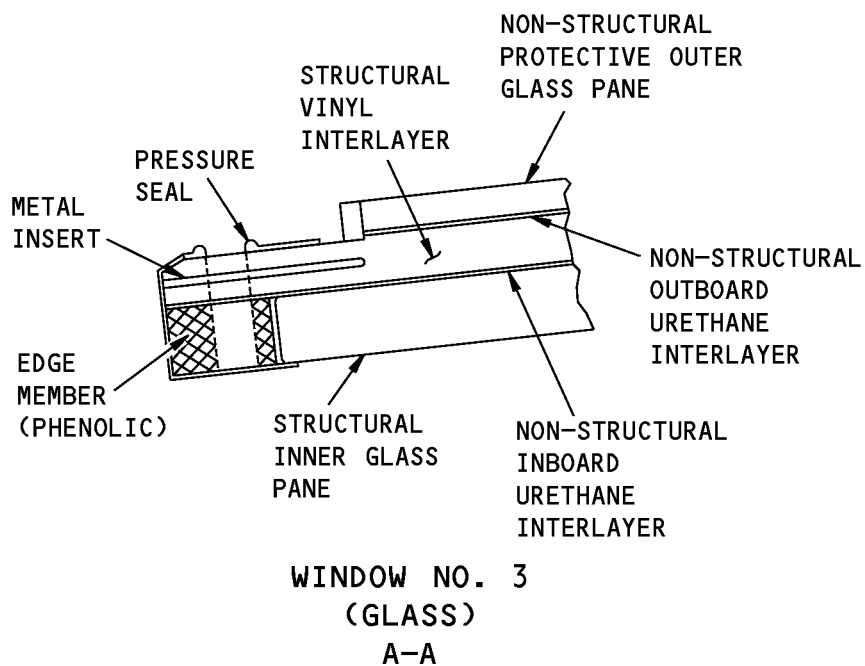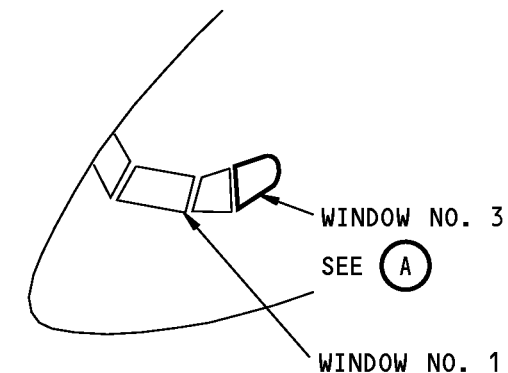

WINDOWS - CONTROL CABIN FIXED WINDOWS - HEATED NO. 3 WINDOW CONSTRUCTION

EFFECTIVITY

HAP 001-013, 015-022 PRE SB 737-56-1014

56-11-00

D633A101-HAP

Page 9
Feb 10/2007

WINDOWS - CONTROL CABIN SLIDING WINDOWS - NO. 2 OPENABLE WINDOW**Purpose**

The left No. 2 window is the pilot's side window. The right No. 2 window is the co-pilot's side window. The left and right windows are opposite assemblies and installations. The No. 2 window is openable as an emergency exit.

You can operate the right window from outside of the airplane as an emergency exit.

General

The windows have laminated transparent layers, a metal insert, and weigh approximately 30 lb (14 kg). The window is clamped into a movable frame that forms the openable window assembly that slides fore and aft in a track. Because the side windows are plugs, internal cabin pressure holds the windows to the fuselage frame.

Construction

Each window is a laminated assembly of layers of glass and vinyl or urethane. The structural inner glass pane carries pressure loads. The vinyl interlayer is structural for bird impact resistance and fail-safe pressure loads.

The current window manufactured by PPG has these layers: an non-structural outer glass pane, a non-structural urethane interlayer, a structural vinyl (polyvinyl butyral or PVB) interlayer, a non-structural urethane interlayer and an structural inner glass pane.

Window Heat

A conductive film is located on the inner surface of the outer glass pane, which is a part of the window heat system that supplies the anti-fog and the anti-ice function. Bus bars, embedded in the window contact the conductive film near the forward and aft edges of the window. Along the edges of the window near the conductive film, there are two embedded temperature control sensors.

Physical Description

The No. 2 openable window has these parts:

- Handle with trigger
- Bellcranks
- Guide Pin
- Pushrods
- Clothes guard protector
- Link
- Springs
- Window open latch plate
- Upper roller
- Upper track
- Lower roller
- Lower track

WINDOWS - CONTROL CABIN SLIDING WINDOWS - NO. 2 OPENABLE WINDOW

- Latch mechanism rod
- External access door
- External release handle.

Functional Description

To open the window, operate the handle. This turns a bellcrank, which is connected to other bellcranks at the rear, top, and bottom of the window. This moves the window inboard. The guide pin prevents backward movement of the window until there is sufficient clearance. This allows the window to move back to the latched open position. When the window is moved to the rear, the lower aft roller moves to the window open latch plate. The window open latch plate is spring-loaded to lock the window in the open position.

The window is unlocked from its locked open position when you pull forward on the latch mechanism rod. This releases the window open latch plate and lets the window move forward. While the window moves forward, it resets the window open latch plate. Move the window forward by its handle until it touches the forward stops. As the handle is turned, the window is moved outboard, guided by the guide pin in the track, until the window is closed against the section 41 frame. When you release the handle, a trigger bolt latches the window closed.

Normal Operation

To open the window, hold the trigger and turn the handle back and inboard. After the window moves inboard, move it back until it locks it in the open position.

To close the window, pull forward on the latch mechanism rod to unlock the window. Hold the trigger and move the window forward until you can turn the handle forward and outboard. When you release the trigger, the window latches.

Emergency Operation

To open the window, push the external access door, and pull the external release handle. This will unlatch the window and move the window inwards. Then move the window to the rear.

HAP 044-054, 102-999; HAP 001-013, 015-026, 028-043, 101 POST SB 737-56-1024

Window Frame Scuff Plate

A scuff plate is attached to the upper forward corner of the fuselage frame for the No.2 window. This scuff helps to prevent contact between the movable frame and the bolt heads on the fuselage frame.

HAP ALL

Training Information Point


WARNING: BE CAREFUL WHEN YOU DO WORK ON THE WINDOW NO. 2. THE OUTPUT VOLTAGE OF THE AUTOTRANSFORMER IS 250-350 VOLTS. THIS CAN CAUSE INJURY TO PERSONS.

EFFECTIVITY
HAP ALL

56-12-00

D633A101-HAP

Page 2
Feb 15/2009

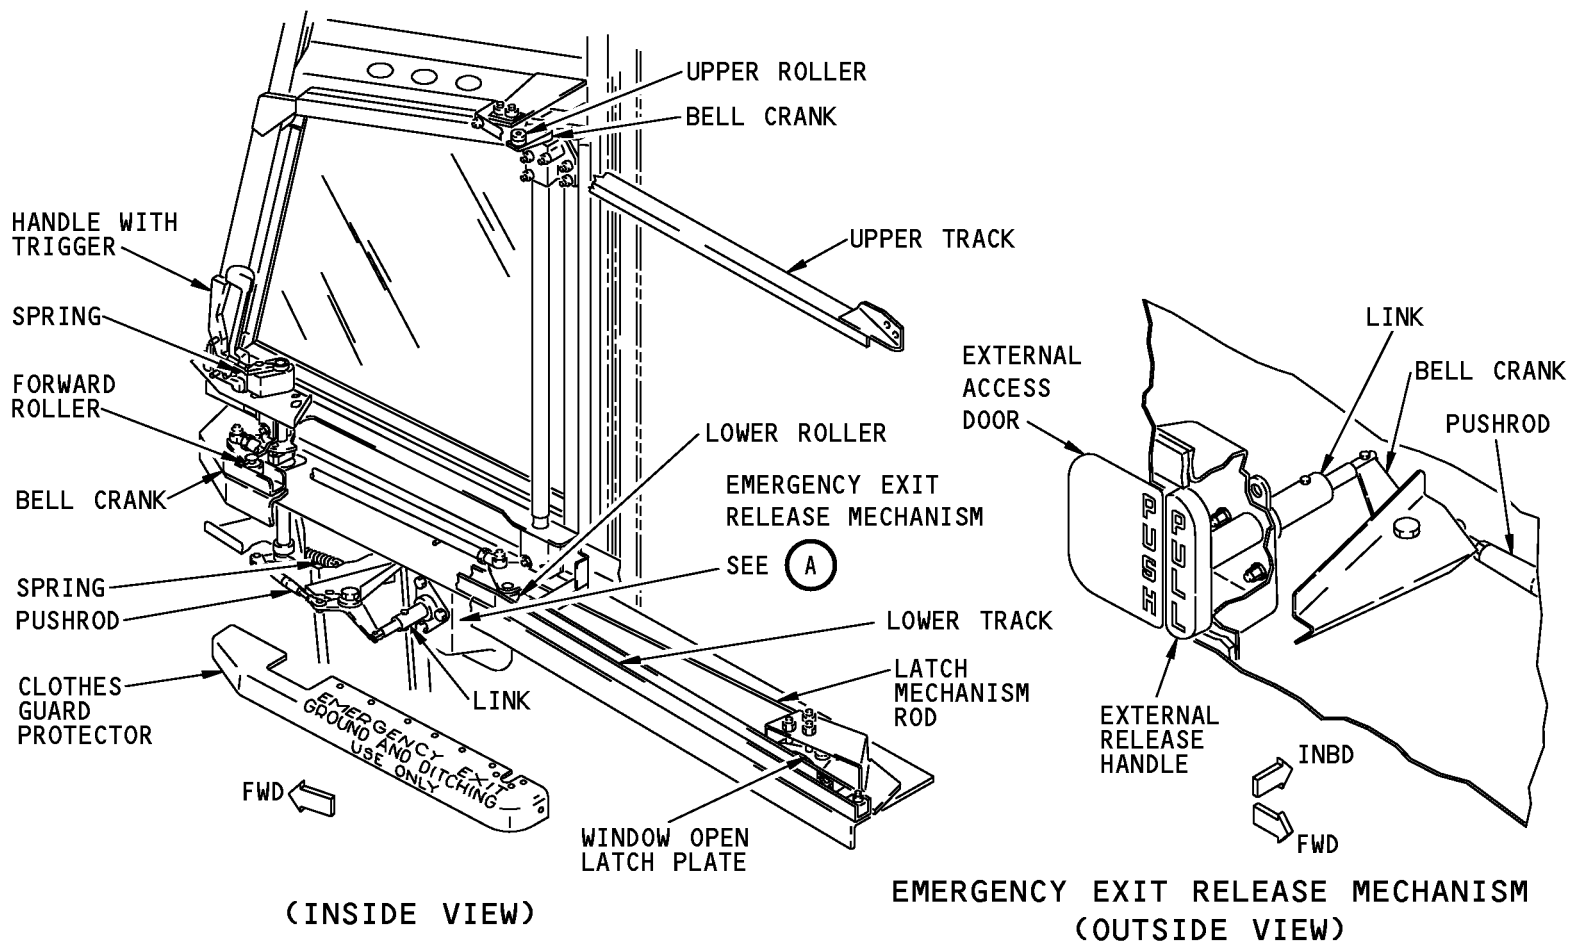




WINDOWS - CONTROL CABIN SLIDING WINDOWS - NO. 2 OPENABLE WINDOW

EFFECTIVITY
HAP ALL

56-12-00

D633A101-HAP

Page 3
Feb 10/2007

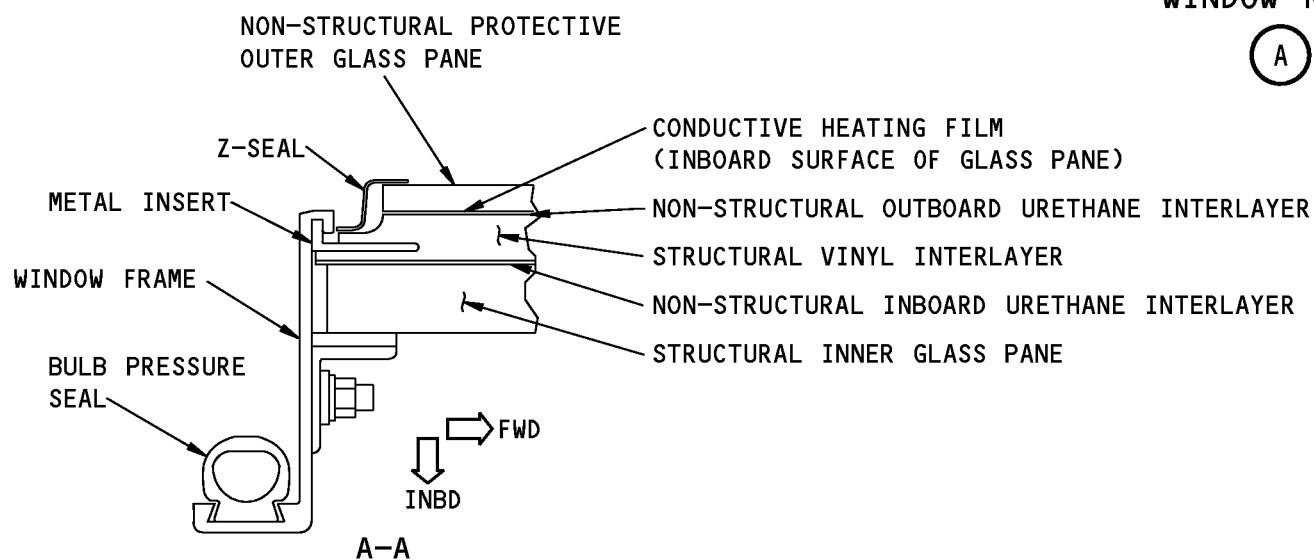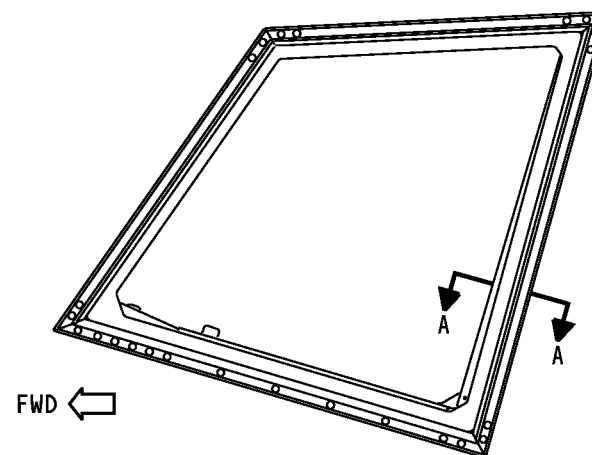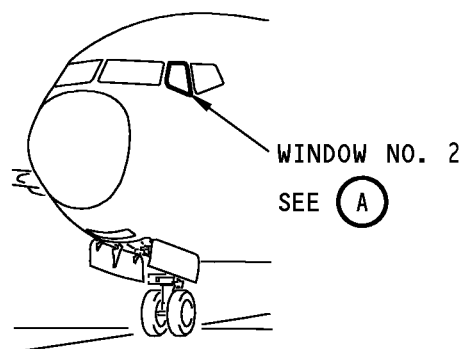

WINDOWS - CONTROL CABIN SLIDING WINDOWS - NO. 2 WINDOW

56-12-00-001

EFFECTIVITY
HAP ALL

56-12-00

D633A101-HAP

Page 4
Jun 15/2009

WINDOWS - PASSENGER CABIN WINDOWS - GENERAL DESCRIPTION

HAP 001-013, 015-026, 028-036 PRE SL 737-56-012

General

The passenger compartment windows have these components:

- Outer pane
- Middle pane
- Inner pane.

The outer and middle panes are structural. The windows are plug type windows.

The outer pane is made of stretched acrylic plastic. It is rectangular with rounded corners and a beveled outer edge to fit with the window frame. The shape of the pane is curved to align with the fuselage contour.

The middle pane gives the structural fail-safe function. It can hold 1.5 times the normal pressure load. The middle pane is made of cast acrylic and has a shape like the outer pane, but with an edge not beveled. The middle pane is contained in the window seal. A small breather hole is near the bottom of the middle pane.

The inner pane is not structural.

HAP 037-054, 101-999; HAP 001-013, 015-026, 028-036 POST SL 737-56-012

General

The passenger compartment windows have these components:

- Outer pane
- Middle pane
- Airflow dampener
- Inner pane.

The outer and middle panes are structural. The windows are plug type windows.

The outer pane is made of stretched acrylic plastic. It is rectangular with rounded corners and a beveled outer edge to fit with the window frame. The shape of the pane is curved to align with the fuselage contour.

The middle pane gives the structural fail-safe function. It can hold 1.5 times the normal pressure load. The middle pane is made of cast acrylic and has a shape like the outer pane, but with an edge not beveled. The middle pane is contained in the window seal. A small breather hole is near the top of the middle pane.

56-21-00-001

EFFECTIVITY
HAP ALL

56-21-00

D633A101-HAP

Page 1
Feb 15/2009

WINDOWS - PASSENGER CABIN WINDOWS - GENERAL DESCRIPTION


**HAP 037-054, 101-999; HAP 001-013, 015-026, 028-036 POST
SL 737-56-012 (Continued)**

The airflow dampener helps to prevent the window from fogging during flight. The airflow dampener is made of injected molded white colored polycarbonate. The airflow dampener is attached above the breather hole on the middle pane.

The inner pane is not structural.

HAP ALL**Location**

The passenger compartment windows are between the fuselage frames in the passenger compartment.

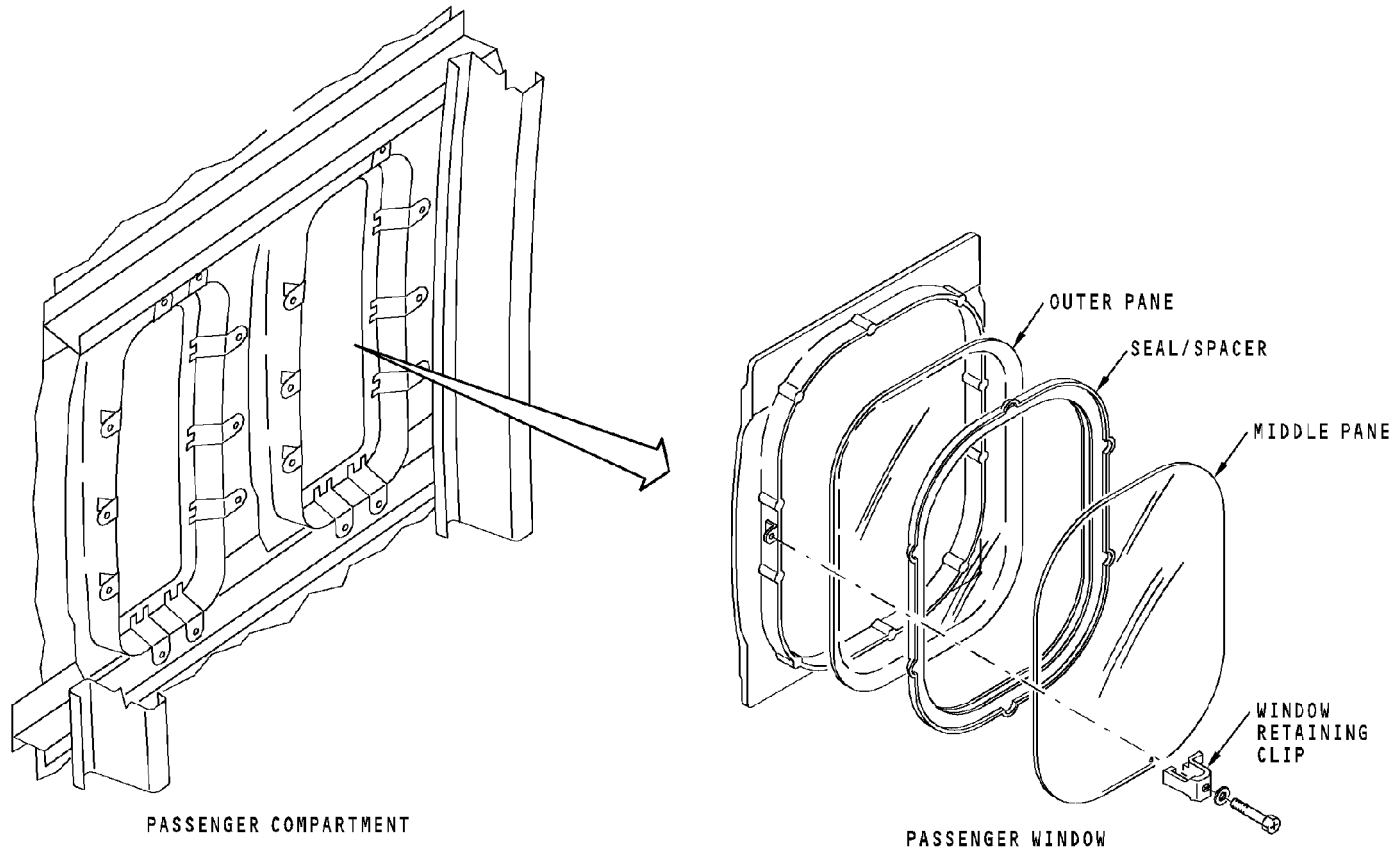

WINDOWS - PASSENGER CABIN WINDOWS - GENERAL DESCRIPTION


EFFECTIVITY

HAP 001-013, 015-026, 028-036 PRE SL 737-56-012

56-21-00

D633A101-HAP

Page 3
Jun 10/2007

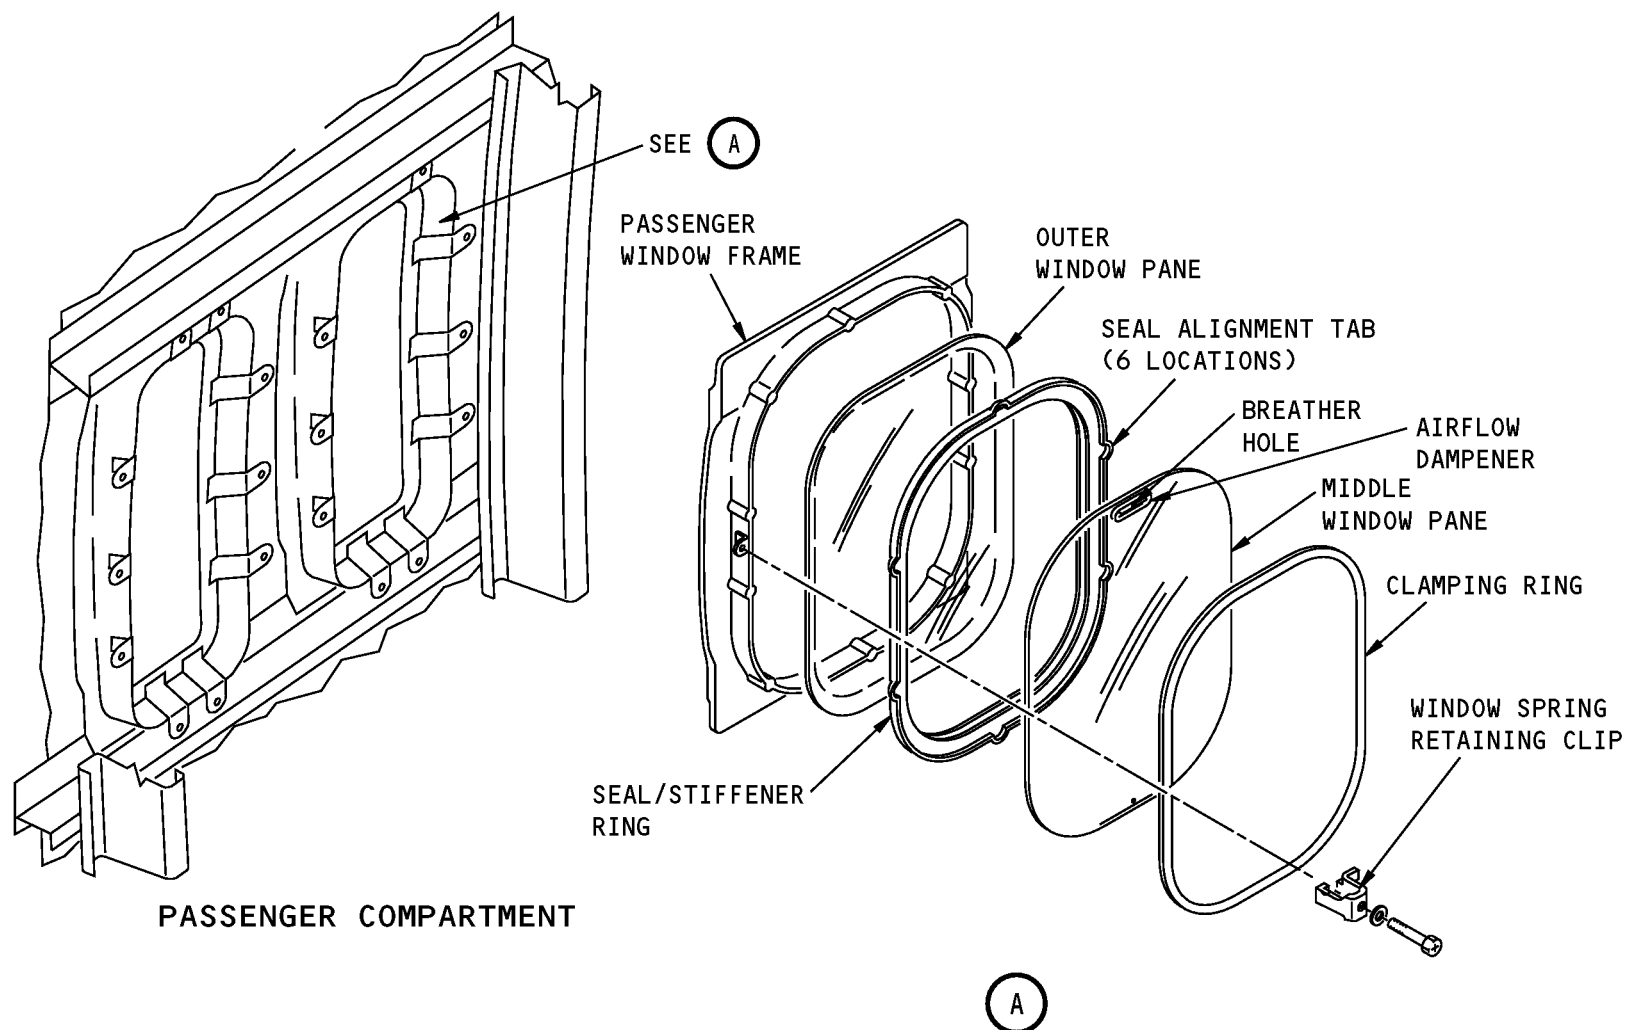

WINDOWS - PASSENGER CABIN WINDOWS - GENERAL DESCRIPTION

EFFECTIVITY

HAP 037-054, 101-999; HAP 001-013, 015-026, 028-036 POST SL 737-56-012

56-21-00

D633A101-HAP

Page 4
Feb 15/2009

WINDOWS - EMERGENCY EXIT WINDOW - GENERAL DESCRIPTION

HAP 001-013, 015-026, 028-036 PRE SL 737-56-012

General

The emergency exit window has these components:

- Outer pane
- Middle pane
- Inner pane.

The outer and middle panes are structural. The windows are plug type windows.

The outer pane is made of stretched acrylic plastic. It is rectangular in shape with rounded corners and a beveled outer edge to fit with the window frame. The shape the pane is curved to align with the fuselage contour.

The middle pane gives the structural fail-safe function. It can hold 1.5 times the normal pressure load. The middle pane is made of cast acrylic and has a shape like the outer pane, but with an edge not beveled. The middle pane is contained in the window seal. A small breather hole is near the bottom of the middle pane.

The inner pane is not structural.

HAP 037-054, 101-999; HAP 001-013, 015-026, 028-036 POST SL 737-56-012

General

The emergency exit window has these components:

- Outer pane
- Middle pane
- Inner pane.

The outer and middle panes are structural. The windows are plug type windows.

The outer pane is made of stretched acrylic plastic. It is rectangular in shape with rounded corners and a beveled outer edge to fit with the window frame. The shape the pane is curved to align with the fuselage contour.

The middle pane gives the structural fail-safe function. It can hold 1.5 times the normal pressure load. The middle pane is made of cast acrylic and has a shape like the outer pane, but with an edge not beveled. The middle pane is contained in the window seal. A small breather hole is near the top of the middle pane.

The inner pane is not structural.

HAP ALL

56-22-00-001

EFFECTIVITY
HAP ALL

56-22-00

D633A101-HAP

Page 1
Feb 15/2009



WINDOWS - EMERGENCY EXIT WINDOW - GENERAL DESCRIPTION

Location

The emergency exit windows are in each emergency exit in the passenger compartment.


56-22-00-001

EFFECTIVITY
HAP ALL

56-22-00

D633A101-HAP

Page 2
Jun 10/2006

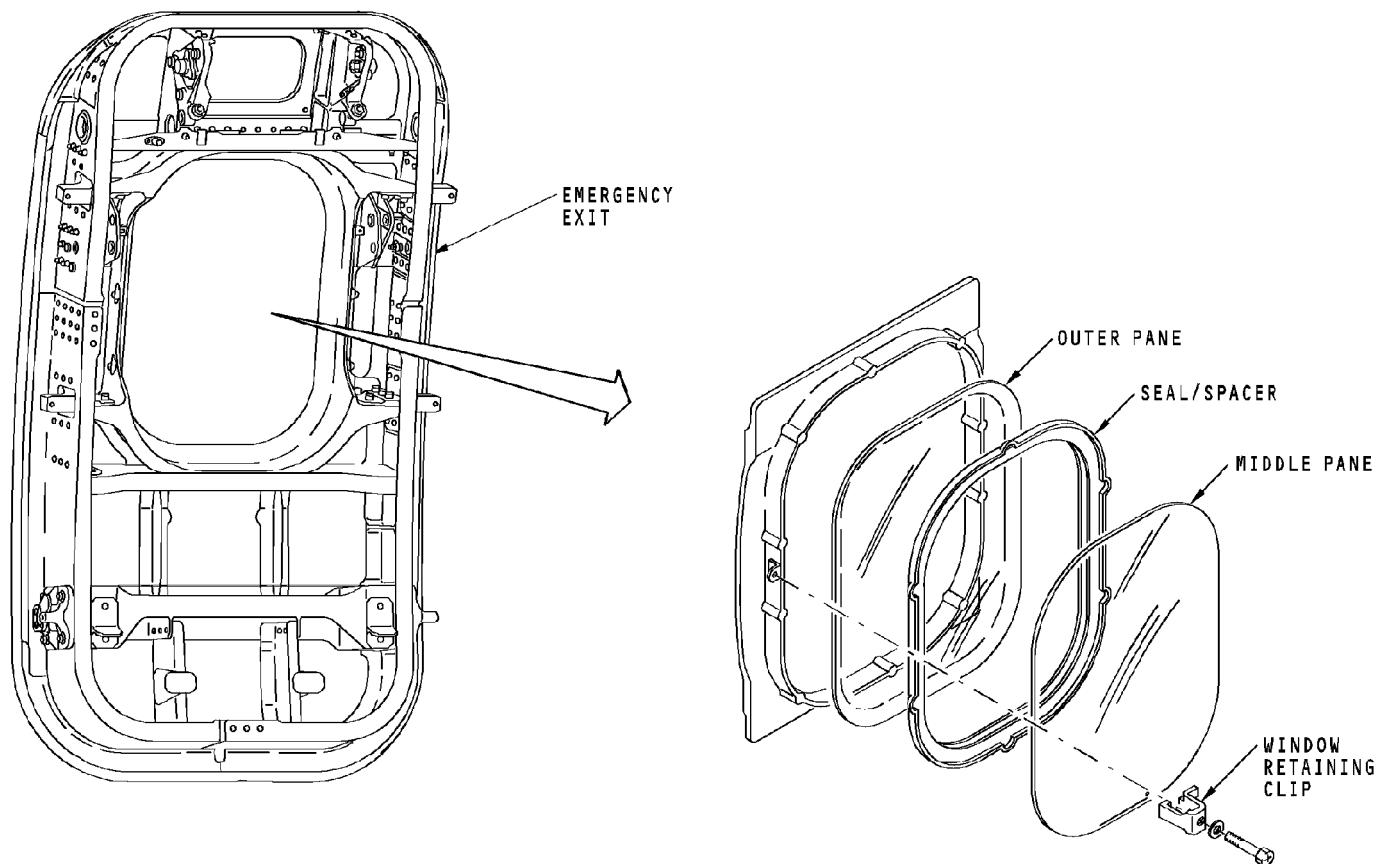

WINDOWS - EMERGENCY EXIT WINDOW - GENERAL DESCRIPTION


EFFECTIVITY

HAP 001-013, 015-026, 028-036 PRE SL 737-56-012

56-22-00

D633A101-HAP

Page 3
Jun 10/2007

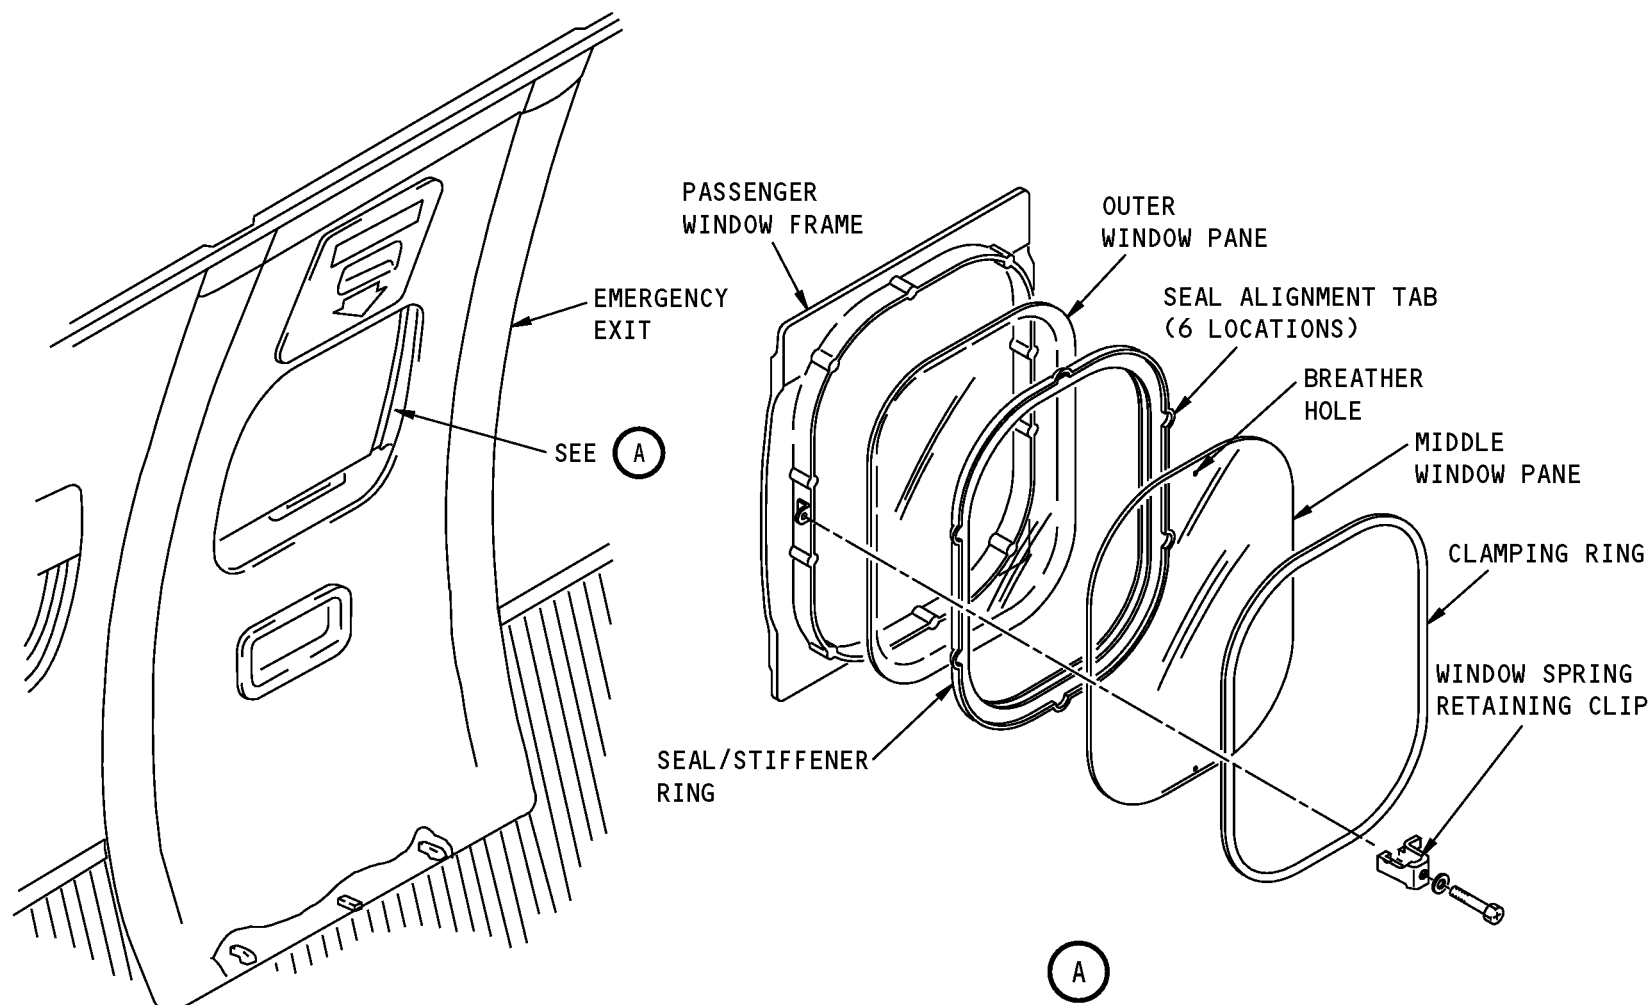

WINDOWS - EMERGENCY EXIT WINDOW - GENERAL DESCRIPTION

EFFECTIVITY

HAP 037-054, 101-999; HAP 001-013, 015-026, 028-036 POST SL 737-56-012

56-22-00

D633A101-HAP

Page 4
Feb 15/2009

THIS PAGE IS INTENTIONALLY LEFT BLANK

56-31-00

D633A101-HAP

Page 1
Oct 10/2002


WINDOWS - DOOR-MOUNTED WINDOWS - GENERAL DESCRIPTION**General**

The door-mounted windows have these components:

- Outer pane
- Middle pane
- Inner pane.

The outer and middle panes are structural. The outer and middle panes are resistant to 1.5 times the normal pressure loads at a temperature of 70F. The outer pane is made of stretched acrylic for more strength. The middle pane is made of a cast acrylic.

The inner pane is not structural. It connects to the cabin sidewall panel. The inner pane is made from polycarbonate.

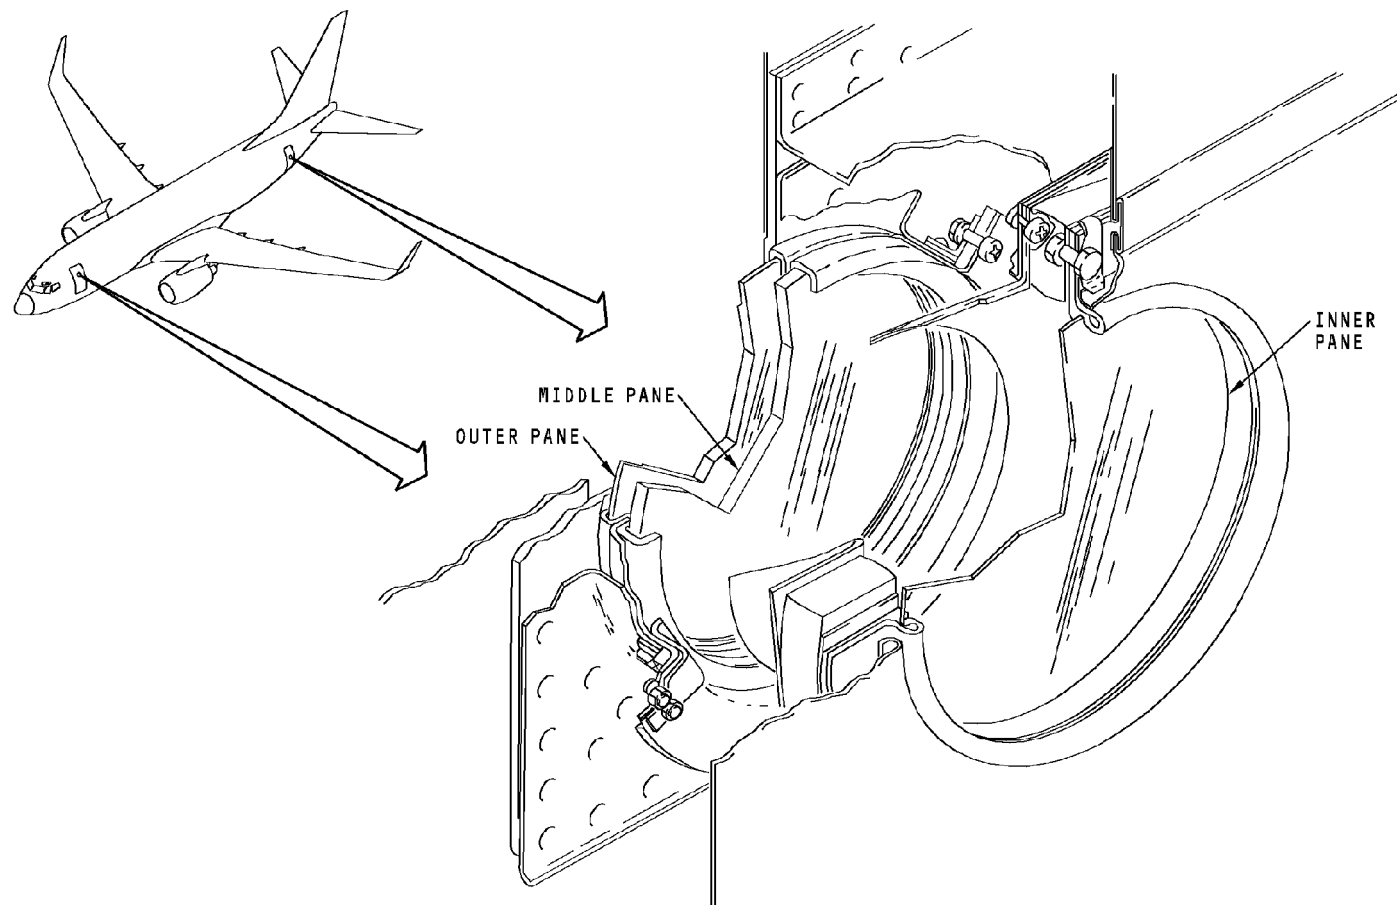

WINDOWS - DOOR-MOUNTED WINDOWS - GENERAL DESCRIPTION

EFFECTIVITY
HAP ALL

56-31-00

D633A101-HAP

Page 3
Oct 10/2004