

AIR CONDITIONING

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 41 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)

FIGURE 1A

21-00-00-01A

HXL
DEC 22/06

21-00-00-01A
PAGE 0

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A			EQUIPMENT INSTL-SECT. 41 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)		
- 2	210T0041-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 41 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	155162	RF
- 3	210T0041-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 41 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	163999	RF
- 11	214T2001-111		.COLLECTOR INSTL-AIR DISTR SYS FOR DETAILS SEE: 21-23-01-05A	155162	1
- 11	214T2001-120		.COLLECTOR INSTL-AIR DISTR SYS FOR DETAILS SEE: 21-23-01-05G	163999	1
- 21	214T0001-2		.PLENUM INSTL- FOR DETAILS SEE: 21-29-00-04	163999	1
- 27	214T0001-5		.DUCT INSTL-CREW REST AIR DISTR SYS POSITION DATA: FWD CAB. FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-90 21-29-02-01 21-66-06-01 21-66-01-01 21-66-03-01	164999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 01A
PAGE 1
DEC 22/08

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A					
- 27	214T0001-4		. DUCT INSTL-CREW REST AIR DISTR SYS POSITION DATA: FWD CAB. FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-90 21-29-02-01 21-66-06-01 21-66-01-01 21-66-03-01	163163	1
- 34	214T2008-1		. DUCT INSTL-CHILLER EXH FOR DETAILS SEE: 21-26-02-02		1
- 36	216T2009-5		. SYSTEM INSTL-CARGO CONDITIONED AIR EXHAUST IN FLIGHT POSITION DATA: FWD FOR DETAILS SEE: 21-26-10-01		1
- 38	214T7010-7		. DUCT INSTL-G2 GALLEY CHILLER SUPPLY AND EXHAUST FOR DETAILS SEE: 25-33-01-04	155162	1
- 39	214T7010-3		. DUCT INSTL-G3 GALLEY CHILLER SUPPLY AND EXHAUST FOR DETAILS SEE: 25-33-01-04		1
- 41	214T7010-6		. DUCT INSTL-G2 GALLEY CHILLER SUPPLY AND EXHAUST FOR DETAILS SEE: 25-33-01-04	163999	1
- 44	215T1001-9		. SENSOR INSTL-TEMP POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-61-02-01		1
- 45	215T3001-9		. SENSOR INSTL-ELEC EQPT COMPT MAIN SUPPLY DUCT POSITION DATA: FWD FOR DETAILS SEE: 21-58-16-01		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 01A
 PAGE 2
 DEC 22/08

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1A					
- 50	215T3001-2		.SENSOR INSTL-ELECTRICAL OR ELECTRONIC COMPT INSTR SUPPLY DUCT POSITION DATA: FWD FOR DETAILS SEE: 21-58-16-01		1
- 55	215T3001-4		.SENSOR INSTL-ELEC EQPT COMPT SKIN TEMP POSITION DATA: FWD FOR DETAILS SEE: 21-58-21-01		1
- 60	215T3001-5		.SENSOR INSTL-DIFF PRESSURE/SMOKE CLEARANCE E/E COOLING FOR DETAILS SEE: 21-58-16-01		1
- 65	217T1012-30		.DUCT INSTL-E/E COMPT AIR EXH POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-58-00-03 21-58-02-05 21-58-06-02 21-58-14-02		1
- 70	217T1012-25		.RESTRICTOR INSTL-E/E COMPT AIR EXH POSITION DATA: FWD FOR DETAILS SEE: 21-58-00-03		1
- 75	217T2014-20		.DUCT INSTL-INSTR COOLING EXH FOR DETAILS SEE: 21-58-09-02		1
- 80	217T2014-7		.RESTRICTOR INSTL- FOR DETAILS SEE: 21-58-09-02		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 01A
PAGE 3
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1A				
- 85	217T1011-12	. DUCT INSTL-ELECTRICAL/ ELECTRONICS AIR SUPPLY POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-58-00-02 21-58-02-01 21-58-06-01 21-58-14-01 21-58-05-01		1
- 90	217T1011-13	. RESTRICTOR INSTL- ELECTRICAL/ELECTRONICS AIR SUPPLY POSITION DATA: RH FOR DETAILS SEE: 21-58-00-02		1
- 96	214T1011-64	. DUCT INSTL-BELOW FLOOR POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-22-52-02		1
- 100	214T1011-50	. DUCT INSTL-ABOVE FLOOR POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-22-52-05		1
- 110	214T1011-10	. RESTRICTOR INSTL- POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-22-52-02		1
- 115	215T1004-1	. SENSOR INSTL-CONDITIONED AIR SUPPLY POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-65-04-01		1
- 117	214T3056-36	. INLET INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-53-16	155162	1
- 117	214T3056-47	. INLET INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-53-19	163999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 01A
PAGE 4
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1A				
- 119	214T3056-45	.INLET INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-53-16	163999	1
- 125	216T1001-1	.SWITCH INSTL-CAB. ALTITUDE WARNING FOR DETAILS SEE: 21-33-51-01		1
- 145	217T1018-7	.INSULATION INSTL-E/E COMPT AIR EXHAUST POSITION DATA: FWD FOR DETAILS SEE: 21-58-09-03		1
- 155	217T2013-73	.RESTRICTOR INSTL-INSTR PNL COOLING SUPPLY FOR DETAILS SEE: 21-58-31-05		1
- 160	214T4052-7	.DUCT INSTL-GASPER AIR SYS FOR DETAILS SEE: 21-24-02-01		1
- 170	214T2007-4	.OUTLET INSTL-PASS. SVCE DOOR POSITION DATA: FWD FOR DETAILS SEE: 21-23-51-02		1
- 175	218T3001-20	.DETECTOR INSTL-ELECTRICAL/ ELECTRONICS COMPT SMOKE POSITION DATA: FWD FOR DETAILS SEE: 26-16-51-01		1
- 180	218T3003-26	.SENSOR INSTL-DUCT LOW PRESSURE INSTR COOLING AIR SUPPLY POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-58-17-05		1
- 185	218T3004-30	.SENSOR INSTL-DUCT LOW PRESSURE E/E COMPT AIR SUPPLY POSITION DATA: FWD FOR DETAILS SEE: 21-58-17-04		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 01A
 PAGE 5
 DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1A				
- 210	214T7021-104	. DUCT INSTL-GALLEY LWR CHILLED AIR SYS POSITION DATA: FWD FOR DETAILS SEE: 25-33-52-03		1
- 220	214T2058-1	. DUCT INSTL-CREW REST COND AIR POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-23-01-04	163999	1
- 225	214T2058-2	. DUCT INSTL-CREW REST COND AIR POSITION DATA: FLIGHT DECK FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-04 21-66-01-03 21-66-06-03	163163	1
- 225	214T2058-9	. DUCT INSTL-CREW REST COND AIR POSITION DATA: FLIGHT DECK FOR DETAILS SEE: 21-23-01-04 21-66-01-03 21-66-06-03	164999	1
- 230	214T3005-11	. DUCT INSTL-LAV AND GALLEY VENT SYSTEM POSITION DATA: SECT. 41 FOR DETAILS SEE: 21-26-54-06	155162	1
- 230	214T3005-16	. DUCT INSTL-LAV AND GALLEY VENT SYSTEM POSITION DATA: SECT. 41 FOR DETAILS SEE: 21-26-54-05	163999	1
- 240	215T1002-172	. SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: FWD STA. 364.90 FOR DETAILS SEE: 21-61-02-30	163999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 01A
 PAGE 6
 DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1 A				
- 240	215T1002-353	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: FWD STA 364.90 FOR DETAILS SEE: 21-61-02-30	155162	1
- 245	215T4001-1	.SENSOR INSTL-CREW REST TEMP FOR DETAILS SEE: 21-66-04-01	163999	1
- 250	215T4002-1	.SENSOR INSTL-CREW REST AREA TEMP POSITION DATA: FWD RH FOR DETAILS SEE: 21-66-04-02	163999	1
- 265	218T3005-2	.DETECTOR INSTL-CREW REST SMOKE FOR DETAILS SEE: 26-14-01-01	163999	1
- 315	232T6003-11	.SYSTEM INSTL-RAIN REPELLENT FUNCTIONAL REFERENCE: ICE & RAIN PROTECTION FOR DETAILS SEE 30-43-01-01		1
- 320	232T6002-9	.SYSTEM INSTL-WINDSHIELD WIPER POSITION DATA: RH FOR DETAILS SEE: 30-42-02-01		1
- 322	232T6002-10	.SYSTEM INSTL-WINDSHIELD WIPER POSITION DATA: RH FOR DETAILS SEE: 30-42-02-01		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-01A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 01A
 PAGE 7
 DEC 22/07

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 43 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)
FIGURE 2A

HXL
DEC 22/06

21-00-00-02A

21-00-00-02A
PAGE 0

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A			EQUIPMENT INSTL-SECT. 43 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)		
- 1	210T0043-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 43 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	155162	RF
- 2	210T0043-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 43 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	163999	RF
- 10	213T4001-26		.MIX BAY INSTL-AIR COND SYS FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-21-52-02 PLACARDS AND MARKINGS FOR DETAILS SEE 11-21-22-01	163999	1
- 10	213T4001-35		.MIX BAY INSTL-AIR COND SYS FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-21-52-02 PLACARDS AND MARKINGS FOR DETAILS SEE 11-21-22-01	155162	1
- 20	213T4003-13		.DUCT INSTL-TRIM AIR SYS POSITION DATA: FWD AND MID ZONE FOR DETAILS SEE: 21-61-01-01		1
- 25	214T1030-2		.RESTRICTOR INSTL-COND AIR POSITION DATA: SECT. 43 FLIGHT DECK FOR DETAILS SEE: 21-22-51-02		1
- 30	214T1030-4		.DUCT INSTL-COND AIR POSITION DATA: SECT. 43 FLIGHT DECK FOR DETAILS SEE: 21-22-51-02	155162	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-02A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 02A
PAGE 1
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A					
- 30	214T1030-8		. DUCT INSTL-COND AIR POSITION DATA: SECT. 43 FLIGHT DECK FOR DETAILS SEE: 21-22-51-02	163999	1
- 45	214T2003-256		. COLLECTOR INSTL-AIR DISTR SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-23-01-10Y	155162	1
- 70	214T2003-99		. DUCT INSTL-AIR DISTR SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-23-01-61	163999	1
- 75	214T2004-9		. DUCT INSTL-AIR DISTR SYS SIDEWALL RISERS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-23-01-02		1
- 85	214T2059-1		. DUCT INSTL-CREW REST POSITION DATA: FLIGHT DECK ABOVE FLOOR FOR DETAILS SEE: 21-29-50-01	163999	1
- 90	214T2059-3		. DUCT INSTL-CREW REST POSITION DATA: FLIGHT DECK BELOW FLOOR FOR DETAILS SEE: 21-29-50-01	163999	1
- 110	214T3006-1		. DUCT INSTL-LAV AND GALLEY VENT SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-26-54-15		1
- 175	214T3055-6		. INLET INSTL-LAV AND GALLEY VENT SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-26-53-13		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-02A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 02A
PAGE 2
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A				
- 180	214T4053-14	. DUCT INSTL- GASPER AIR SYSTEM POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-24-02-23		1
- 180	214T4053-15	. DUCT INSTL- GASPER AIR SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-24-02-23		1
- 180	214T4053-16	. DUCT INSTL- GASPER AIR SYS POSITION DATA: SECT. 43 FOR DETAILS SEE: 21-24-02-23		1
- 190	214T5001-11	. EQUIPMENT INSTL-CAB. AIR RECIRCULATING FOR DETAILS SEE: 21-25-01-02		1
- 200	214T6002-5	. DUCT INSTL-CARGO DOOR POSITION DATA: SECT. 43 FWD FOR DETAILS SEE: 21-43-51-02		1
- 210	214T6012-1	. DUCT INSTL-CARGO AIR CONDITIONING SYS POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-28-00-02 21-43-50-01 21-61-50-01	163999	1
- 210	214T6012-3	. DUCT INSTL-CARGO AIR CONDITIONING SYS POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-28-00-02 21-43-50-01 21-61-50-01	155162	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

HXL

21-00-00-02A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 02A
 PAGE 3
 DEC 22/08

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A				
- 241	215T1002-173	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: FWD STA 622.90 FOR DETAILS SEE: 21-61-02-34	163999	1
- 244	215T1002-462	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: FWD STA 625.90 FOR DETAILS SEE: 21-61-02-34	155162	1
- 255	215T1005-5	.SENSOR INSTL-CONDITIONED AIR DUCT TEMP FOR DETAILS SEE: 21-61-02-05		1
- 255	215T2001-1	.SENSOR INSTL-CARGO COMPT TEMP POSITION DATA: FWD FOR DETAILS SEE: 21-43-05-01		1
- 255	215T2001-2	.SENSOR INSTL-CARGO COMPT TEMP POSITION DATA: FWD FOR DETAILS SEE: 21-43-05-02	163999	1
- 260	216T1002-1	.VALVE INSTL-CAB. PRESSURE RELIEF VARIABLE DRAWING REF: 216T1002-5002 FOR DETAILS SEE: 21-32-01-01		1
- 265	216T2009-4	.SYSTEM INSTL-CARGO CONDITIONED AIR EXHAUST GROUND OPERATION POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-26-12-01 21-26-11-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-21-22-03		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-02A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 02A
 PAGE 4
 DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
2A				
- 270	217T1030-10	.VALVE INSTL-ELECTRICAL ELECTRONIC COMPT AIR EXH POSITION DATA: FWD FOR DETAILS SEE: 21-58-13-02		1
R - 270	217T1030-19	.SINK INSTL-ELECTRICAL ELECTRONIC COMPT HEAT POSITION DATA: FWD FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-58-13-02		1
R - 285	218T3002-16	.TUBE INSTL-LOW FLOW IND EQPT POSITION DATA: MID CTR FOR DETAILS SEE: 21-58-17-06		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-02A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 02A
 PAGE 5
 AUG 22/09

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 46 ENVIRONMENTAL CONTROL SYS (AIR CONDITIONING SYSTEM ONLY)
FIGURE 3A

HXL
DEC 22/06

21-00-00-03A

21-00-00-03A
PAGE 0

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A			EQUIPMENT INSTL-SECT. 46 ENVIRONMENTAL CONTROL SYS (AIR CONDITIONING SYSTEM ONLY)		
- 1	210T0046-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING SYSTEM ONLY) POSITION DATA: SECT. 46 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	155162	RF
- 2	210T0046-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING SYSTEM ONLY) POSITION DATA: SECT. 46 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	163999	RF
- 50	212T3004-19		.DUCT INSTL-APU AIR SUPPLY SYS AFT AND CARGO HEAT 767-300 FOR DETAILS SEE: 36-11-01-66	163163	1
- 50	212T3004-20		.DUCT INSTL-APU AIR SUPPLY SYS AFT AND CARGO HEAT 767-300 FOR DETAILS SEE: 36-11-01-66	155162 164999	1
- 60	212T3004-5		.SHROUD INSTL- FOR DETAILS SEE: 36-11-01-66		1
- 75	212T3006-1		.DUCT INSTL-AIR SUPPLY SYS AIR DRIVEN PUMP INLET VARIABLE DRAWING REF: 212T3006-5002 FOR DETAILS SEE: 36-11-01-60	163163	1
- 75	212T3006-6		.DUCT INSTL-AIR SUPPLY SYS AIR DRIVEN PUMP INLET FOR DETAILS SEE: 36-11-01-60	155162 164999	1
- 100	212T3007-1		.AIR EXIT INSTL-AIR DRIVEN PUMP FOR DETAILS SEE: 29-11-52-01		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-03A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 03A
PAGE 1
AUG 22/09



767

PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A					
- 125	212T3008-23		.INSULATION INSTL-APU DUCT AIR SUPPLY SYS FOR DETAILS SEE: 36-11-02-01		1
- 150	214T0006-1		.DUCT INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-91 21-29-02-02 21-66-06-02 21-66-03-02 21-66-01-02	163163	1
- 150	214T0006-5		.DUCT INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-91 21-29-02-02 21-66-06-02 21-66-03-02 21-66-01-02	164999	1
- 155	214T0006-10		.DUCT INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT RH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-91 21-29-02-02 21-66-06-02 21-66-03-02 21-66-01-02	164999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-03A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 03A
PAGE 2
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A				
- 155	214T0006-9	. DUCT INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT RH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-23-01-91 21-29-02-02 21-66-06-02 21-66-03-02 21-66-01-02	163163	1
- 160	214T0006-7	. PLENUM INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT LH FOR DETAILS SEE: 21-29-00-02	163999	1
- 165	214T0006-8	. PLENUM INSTL-AIR DISTR SYS CABIN CREW REST POSITION DATA: AFT RH FOR DETAILS SEE: 21-29-00-02	163999	1
- 190	214T2006-130	. COLLECTOR INSTL-AIR DISTR. SYSTEM POSITION DATA: SECTION 46 FOR DETAILS SEE: 21-23-01-85	163999	1
- 190	214T2006-134	. COLLECTOR INSTL-AIR DISTR. SYSTEM POSITION DATA: SECT. 46 FOR DETAILS SEE: 21-23-01-85	155162	1
- 200	214T3004-123	. DUCT INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-52-05	163999	1
- 204	214T3004-71	. DUCT INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-52-05	155162	1
- 240	214T3019-17	. FAN INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-01-01		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-03A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 03A
PAGE 3
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A				
- 250	214T3053-62	.INLET INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-53-02	155162	1
- 251	214T3053-78	.INLET INSTL-LAV AND GALLEY VENT SYS FOR DETAILS SEE: 21-26-53-21		1
- 275	214T4055-11	.DUCT INSTL-GASPER AIR SYS POSITION DATA: SECT. 46 FOR DETAILS SEE: 21-24-02-07		1
- 300	214T6003-9	.DUCT INSTL-CARGO HEAT POSITION DATA: SECT. 46 AFT FOR DETAILS SEE: 21-44-01-02		1
- 325	214T6005-3	.FAN AND OUTLET INSTL-BULK CARGO VENT SYS FOR DETAILS SEE: 21-28-02-04		1
- 365	214T7034-101	.COLLECTOR INSTL-GALLEY CHILLED AIR SYS SMOKE AND TOXIC GAS CONTROL POSITION DATA: AFT FOR DETAILS SEE: 25-33-02-09		1
- 400	215T1002-175	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: STA 1026.90 MID FOR DETAILS SEE: 21-61-02-37	163999	1
- 400	215T1002-176	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: STA 1310.90 AFT FOR DETAILS SEE: 21-61-02-20	163999	1
- 402	215T1002-356	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: STA 1026.90 MID FOR DETAILS SEE: 21-61-02-37	155162	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-03A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 03A
 PAGE 4
 DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
3A				
- 403	215T1002-461	.SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: STA 1311.90 MID FOR DETAILS SEE: 21-61-02-20	155162	1
- 450	215T2002-1	.SENSOR INSTL-CARGO COMPT TEMP POSITION DATA: AFT FOR DETAILS SEE: 21-44-05-01		1
- 475	215T2003-7	.SENSOR INSTL-BULK CARGO COMPT TEMP FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-44-05-03 21-65-03-11		1
- 500	215T4002-2	.SENSOR INSTL-CREW REST AREA TEMP POSITION DATA: AFT RH FOR DETAILS SEE: 21-66-04-02	163999	1
- 500	215T4002-3	.SENSOR INSTL-CREW REST AREA TEMP POSITION DATA: AFT RH FOR DETAILS SEE: 21-66-04-02	163999	1
- 525	216T1003-10	.VALVE INSTL-CAB. AIR OUTFLOW FOR DETAILS SEE: 21-31-03-01	155162 164999	1
- 525	216T1003-9	.VALVE INSTL-CAB. AIR OUTFLOW FOR DETAILS SEE: 21-31-03-01	163163	1
- 575	217T1060-2	.DUCT INSTL-ELEC EQPT COMPT AIR EXH POSITION DATA: AFT FOR DETAILS SEE: 21-58-53-01		1
- 600	218T4004-5	.SENSOR INSTL-DUCT LEAK DETECTION FOR DETAILS SEE: 26-18-01-26		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-03A

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 03A
 PAGE 5
 AUG 22/08

 BOEING
767
PARTS CATALOG (MAINTENANCE)

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-ENVIROMENT CONT SYS (AIR CONDITIONING ONLY)
FIGURE 4

21-00-00-04

HXL
DEC 22/06

21-00-00-04
PAGE 0

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
4			EQUIPMENT INSTL- ENVIRONMENT CONT SYS (AIR CONDITIONING ONLY)		
- 11	210T0048-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 48 FOR NHA SEE: 21-00-00-15	155162	RF
- 11	210T0048-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 48 FOR NHA SEE: 21-00-00-15	163999	RF
- 50	212T3005-4		. DUCT INSTL-AIR SUPPLY SYS FOR DETAILS SEE: 36-11-01-80	163163	1
- 50	212T3005-5		. DUCT INSTL-AIR SUPPLY SYS POSITION DATA: SECT. 48 FOR DETAILS SEE: 36-11-01-80	155162 164999	1
- 55	212T3005-2		. SHROUD INSTL-AIR SUPPLY SYS FOR DETAILS SEE: 36-11-01-80		1
- 200	218T4005-3		. SENSOR INSTL-DUCT LEAK DETECTOR SINGLE ELEMENT FOR DETAILS SEE: 26-18-01-05		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-04

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 04
PAGE 1
DEC 22/07

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 45 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)

FIGURE 5

21-00-00-05

HXL
DEC 22/06

21-00-00-05
PAGE 0

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
5			EQUIPMENT INSTL-SECT. 45 ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY)		
- 4	210T0045-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 45 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	163999	RF
- 6	210T0045-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS (AIR CONDITIONING ONLY) POSITION DATA: SECT. 45 FOR NHA/OTHER SYS DET SEE: 21-00-00-15	155162	RF
- 10	212T3003-1		.DUCT INSTL-APU AIR SUPPLY SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 36-11-01-95	163163	1
- 10	212T3003-3		.DUCT INSTL-APU AIR SUPPLY SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 36-11-01-95	155162 164999	1
- 21	214T2005-88		.DUCT INSTL-AIR DISTR SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-23-01-80		1
- 38	214T3007-1		.DUCT INSTL-LAV AND GALLEY VENT SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-26-51-02		1
- 46	214T3052-37		.INLET INSTL-LAV AND GALLEY VENT SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-26-53-05		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-05

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 05
PAGE 1
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
5					
- 50	214T4054-12		. DUCT INSTL-GASPER AIR SYS 767-300 AIRPLANE WITH FIBERGLASS INSULATED DUCTS AND 5 MAIN CABIN TEMP ZONES POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-24-02-14		1
- 50	214T4054-13		. DUCT INSTL-GASPER AIR SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-24-02-14	163999	1
- 50	214T4054-14		. DUCT INSTL-GASPER AIR SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-24-02-14	163999	1
- 51	214T4054-35		. DUCT INSTL-GASPER AIR SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-24-02-14	155162	1
- 51	214T4054-36		. DUCT INSTL-GASPER AIR SYS POSITION DATA: SECT. 45 FOR DETAILS SEE: 21-24-02-14	155162	1
- 59	215T1002-463		. SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: MID STA. 854.90 FOR DETAILS SEE: 21-61-02-33	155162	1
- 61	215T1002-174		. SENSOR INSTL-PASS. ZONE TEMP POSITION DATA: MID STA. 842.9 FOR DETAILS SEE: 21-61-02-33	163999	1
- 65	218T4003-1		. SENSOR INSTL-SINGLE LOOP FOR DETAILS SEE: 26-18-01-20		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-05

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 05
 PAGE 2
 AUG 22/09

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-SECT. 49 ENVIRONMENTAL CONT SYS
FIGURE 6

21-00-00-06

HXL
DEC 22/06

21-00-00-06
PAGE 0



767

PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
6			EQUIPMENT INSTL-SECT. 49 ENVIRONMENTAL CONT SYS		
- 11	210T0049-618		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS POSITION DATA: SECT. 49 FOR NHA SEE: 21-00-00-15	155162	RF
- 11	210T0049-630		EQUIPMENT INSTL- ENVIRONMENTAL CONT SYS POSITION DATA: SECT. 49 FOR NHA SEE: 21-00-00-15	163999	RF
- 50	213T1002-1		.SWITCH INSTL-ALTITUDE FOR DETAILS SEE: 21-51-51-01		1
- 75	212T3002-22		.DUCT INSTL-BODY CROSSOVER AIR SUPPLY SYSTEM FUNCTIONAL REFERENCE: PNEUMATIC FOR DETAILS SEE 36-11-01-10 36-11-03-01 36-11-04-01 36-11-05-01 36-21-01-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-35-91-01		1
- 127	212T9003-3		.SENSING INSTL-WING LEADING EDGE PW4000 ENGINE POSITION DATA: LH POST SERVICE BULLETIN: 36-0029R4 FOR DETAILS SEE: 36-11-50-01 36-21-08-01		1
- 132	212T9003-4		.SENSING INSTL-WING LEADING EDGE PW4000 ENGINE POSITION DATA: RH POST SERVICE BULLETIN: 36-0029R4 FOR DETAILS SEE: 36-11-50-01 36-21-08-01		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-06

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 06
PAGE 1
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
6				
- 150	213T1001-39	.PACK INSTL-COOLING POSITION DATA: LH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-51-01-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-35-90-01		1
- 155	213T1001-40	.PACK INSTL-COOLING POSITION DATA: RH FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-51-01-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-35-90-01		1
- 175	213T1003-23	.TUBING INSTL- ENVIRONMENTAL CONT SYS COOLING PACKS POSITION DATA: LH FOR DETAILS SEE: 21-51-52-01		1
- 180	213T1003-2	.TUBING INSTL- ENVIRONMENTAL CONT SYS COOLING PACKS POSITION DATA: RH FOR DETAILS SEE: 21-51-52-01		1
- 206	213T2001-50	.DUCT INSTL-HOT AIR CONT SYS FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-61-05-02 21-61-07-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-24-20-01	163163	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-06

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
 FIG. 06
 PAGE 2
 DEC 22/07



767

PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
6				
- 207	213T2001-78	. DUCT INSTL-HOT AIR CONT SYS FUNCTIONAL REFERENCE: AIR CONDITIONING FOR DETAILS SEE 21-61-05-02 21-61-07-01 PLACARDS AND MARKINGS FOR DETAILS SEE 11-24-20-01	155162 164999	1
- 225	213T3001-1	. SYSTEM INSTL-RAM AIR FOR DETAILS SEE: 21-53-60-01		1
- 230	213T3001-2	. SYSTEM INSTL-RAM AIR FOR DETAILS SEE: 21-53-60-01		1
- 250	214T6001-2	. DUCT INSTL-CARGO HEAT POSITION DATA: SECT. 49 FWD FOR DETAILS SEE: 21-43-01-01		1
- 275	218T4002-1	. SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 49 LH FOR DETAILS SEE: 26-18-01-10		1
- 280	218T4002-2	. SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 49 RH FOR DETAILS SEE: 26-18-01-10		1
- 285	218T4002-3	. SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 49 LH FOR DETAILS SEE: 26-18-01-10		1
- 290	218T4002-4	. SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 49 RH FOR DETAILS SEE: 26-18-01-10		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

- ITEM NOT ILLUSTRATED

HXL

21-00-00-06

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 06
PAGE 3
DEC 22/07

 BOEING
767
PARTS CATALOG (MAINTENANCE)

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

EQUIPMENT INSTL-ECS TOP COLLECTOR
FIGURE 15

21-00-00-15

HXL
DEC 22/06

21-00-00-15
PAGE 0



767

PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
15			EQUIPMENT INSTL-ECS TOP COLLECTOR		
- 4	210T0900-618		EQUIPMENT INSTL-ECS TOP COLLECTOR SAS	155162	RF
- 4	210T0900-630		EQUIPMENT INSTL-ECS TOP COLLECTOR SAS	163999	RF
- 110	210T0041-618		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 41 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-02 FOR DETAILS SEE: 21-00-00-01A	155162	1
- 111	210T0041-630		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 41 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-02 FOR DETAILS SEE: 21-00-00-01A	163999	1
- 160	210T0043-618		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 43 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-01 FOR DETAILS SEE: 21-00-00-02A	155162	1
- 161	210T0043-630		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 43 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-01 FOR DETAILS SEE: 21-00-00-02A	163999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-15

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 15
PAGE 1
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
15				
- 210	210T0045-618	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 45 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-02A FOR DETAILS SEE: 21-00-00-05	155162	1
- 211	210T0045-630	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 45 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-02A FOR DETAILS SEE: 21-00-00-05	163999	1
- 260	210T0046-618	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 46 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-04 FOR DETAILS SEE: 21-00-00-03A	155162	1
- 261	210T0046-630	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 46 FUNCTIONAL REFERENCE: FIRE PROTECTION FOR DETAILS SEE 26-00-00-04 FOR DETAILS SEE: 21-00-00-03A	163999	1
- 310	210T0048-618	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 48 FOR DETAILS SEE: 21-00-00-04	155162	1
- 311	210T0048-630	.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 48 FOR DETAILS SEE: 21-00-00-04	163999	1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE				

— ITEM NOT ILLUSTRATED

HXL

21-00-00-15

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 15
PAGE 2
DEC 22/07



767

PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
15					
- 360	210T0049-618		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 49 FOR DETAILS SEE: 21-00-00-06	155162	1
- 361	210T0049-630		.EQUIPMENT INSTL-ECS POSITION DATA: SECT. 49 FOR DETAILS SEE: 21-00-00-06	163999	1
- 460	218T4001-47		.SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 14		1
- 460	218T4001-50		.SENSOR INSTL-DUCT LEAK DETECT POSITION DATA: SECT. 14		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

21-00-00-15

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

21-00-00
FIG. 15
PAGE 3
DEC 22/07