

BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
*22	1	AUG 22/09	22-12-01- 1	3	DEC 22/08
*22	2	AUG 22/09	22-12-01- 1	4	AUG 22/07
*22	3	AUG 22/09	22-12-01- 1	5	AUG 22/07
*22	4	AUG 22/09	22-12-01- 1	6	AUG 22/07
22-11-00	1	DEC 22/06	22-12-01- 1	7	DEC 22/07
22-11-01- 2	0	DEC 22/06	22-12-01- 1	8	AUG 22/07
*22-11-01- 2	1	AUG 22/09	22-12-01- 1	9	AUG 22/07
*22-11-01- 2	2	AUG 22/09	22-12-01- 1	10	AUG 22/07
*22-11-01- 2	3	AUG 22/09	22-12-01- 1	11	AUG 22/07
*22-11-01- 2	4	AUG 22/09	22-12-01- 1	12	AUG 22/07
*22-11-01- 2	5	AUG 22/09	22-12-01- 1	13	AUG 22/07
*22-11-01- 2	6	AUG 22/09	22-12-01- 1	14	AUG 22/07
22-11-02- 1	0	DEC 22/06	22-12-01- 1	15	AUG 22/07
22-11-02- 1	0A	DEC 22/06	22-12-01- 1	16	AUG 22/07
*22-11-02- 1	1	AUG 22/09	22-12-01- 1	17	AUG 22/07
*22-11-02- 1	2	AUG 22/09	22-12-01- 1	18	AUG 22/07
*22-11-02- 1	3	AUG 22/09	22-12-01- 1	19	AUG 22/07
*22-11-02- 1	4	AUG 22/09	22-12-01- 1	20	APR 22/08
*22-11-02- 1	5	AUG 22/09	22-12-01- 1	21	AUG 22/08
*22-11-02- 1	6	AUG 22/09	22-12-01- 1	22	AUG 22/07
22-11-02- 1	7	APR 22/09	22-12-01- 1	23	AUG 22/07
22-11-02- 1	8	APR 22/09	22-12-01- 1	24	AUG 22/08
22-11-02- 1	9	APR 22/09	22-12-01- 1	25	AUG 22/08
22-11-02- 1	10	APR 22/09	22-12-01- 1	26	AUG 22/08
22-11-02- 1	11	APR 22/09	22-12-51- 1	0	DEC 22/06
22-11-02- 1	12	APR 22/09	22-12-51- 1	0A	DEC 22/06
22-11-02- 1	13	APR 22/09	22-12-51- 1	0B	DEC 22/06
22-11-02- 1	14	APR 22/09	22-12-51- 1	0C	DEC 22/06
22-11-02- 1	15	APR 22/09	22-12-51- 1	0D	DEC 22/06
22-11-02- 1	16	APR 22/09	22-12-51- 1	0E	DEC 22/06
22-11-02- 1	17	APR 22/09	22-12-51- 1	1	DEC 22/07
22-11-02- 1	18	APR 22/09	22-12-51- 1	2	DEC 22/07
22-11-02- 1	19	APR 22/09	22-12-51- 1	3	DEC 22/07
22-11-02- 1	20	APR 22/09	22-12-51- 1	4	DEC 22/08
22-11-02- 1	21	APR 22/09	22-12-51- 1	5	DEC 22/06
22-11-03- 1	0	DEC 22/06	22-12-51- 1	6	DEC 22/08
22-11-03- 1	1	DEC 22/06	22-12-51- 1	7	DEC 22/07
22-11-03- 1	2	DEC 22/06	22-12-51- 1	8	DEC 22/07
22-12-00	1	DEC 22/06	22-12-51- 1	9	DEC 22/06
22-12-01- 1	0	AUG 22/08	22-12-51- 1	10	DEC 22/06
22-12-01- 1	0A	DEC 22/06	22-12-51- 1	11	DEC 22/06
22-12-01- 1	0B	AUG 22/08	22-12-51- 1	12	DEC 22/06
22-12-01- 1	0C	AUG 22/08	22-12-51- 1	13	DEC 22/06
22-12-01- 1	0D	DEC 22/06	22-13-00	1	DEC 22/06
22-12-01- 1	0E	AUG 22/08	22-13-01- 1	0	DEC 22/08
22-12-01- 1	0F	AUG 22/08	22-13-01- 1	0A	AUG 22/08
22-12-01- 1	0G	AUG 22/08	22-13-01- 1	0B	DEC 22/06
22-12-01- 1	0H	AUG 22/08	22-13-01- 1	0C	AUG 22/08
22-12-01- 1	0I	AUG 22/08	22-13-01- 1	0D	DEC 22/08
22-12-01- 1	1	DEC 22/07	22-13-01- 1	1	DEC 22/07
22-12-01- 1	2	DEC 22/08	22-13-01- 1	2	DEC 22/06

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION

HXL
AUG 22/09

22 - LIST OF EFFECTIVE PAGES
PAGE 1

BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
22-13-01- 1	3	DEC 22/06	22-21-01- 2	7	DEC 22/06
22-13-01- 1	4	DEC 22/06	22-21-01- 2	8	DEC 22/06
22-13-01- 1	5	DEC 22/06	*22-21-02- 1	0	AUG 22/09
22-13-01- 1	6	DEC 22/06	*22-21-02- 1	0A	AUG 22/09
22-13-01- 1	7	DEC 22/06	22-21-02- 1	0B	DEC 22/06
22-13-01- 1	8	DEC 22/06	22-21-02- 1	0C	DEC 22/06
22-13-01- 1	9	DEC 22/06	22-21-02- 1	0D	DEC 22/06
22-13-01- 1	10	DEC 22/07	22-21-02- 1	0E	DEC 22/06
22-13-01- 1	11	DEC 22/06	*22-21-02- 1	1	AUG 22/09
22-13-01- 1	12	DEC 22/06	*22-21-02- 1	2	AUG 22/09
22-13-01- 1	13	DEC 22/06	22-21-02- 1	3	DEC 22/07
22-13-01- 1	14	AUG 22/08	22-21-02- 1	4	DEC 22/07
22-13-01- 1	15	DEC 22/06	22-21-02- 1	5	DEC 22/08
22-13-01- 1	16	DEC 22/06	22-21-02- 1	6	APR 22/09
22-13-01- 1	17	DEC 22/06	22-21-02- 1	7	APR 22/09
22-13-01- 1	18	DEC 22/06	22-21-02- 1	8	DEC 22/08
22-13-01- 1	19	DEC 22/06	22-21-02- 1	9	DEC 22/08
22-13-01- 1	20	DEC 22/07	22-21-02- 1	10	DEC 22/08
22-13-01- 1	21	AUG 22/08	22-21-02- 1	11	DEC 22/08
22-13-01- 1	22	DEC 22/06	22-21-02- 1	12	DEC 22/08
22-13-01- 1	23	APR 22/07	22-21-02- 1	13	AUG 22/08
22-13-01- 1	24	APR 22/07	22-21-02- 1	14	AUG 22/08
22-13-01- 1	25	DEC 22/08	22-21-02- 1	15	AUG 22/08
22-13-01- 1	26	DEC 22/08	22-21-02- 1	16	AUG 22/08
22-13-51- 1	0	DEC 22/06	*22-21-02- 1	17	AUG 22/09
22-13-51- 1	0A	DEC 22/06	*22-21-02- 1	18	AUG 22/09
22-13-51- 1	1	DEC 22/07	*22-21-02- 1	19	AUG 22/09
22-13-51- 1	2	DEC 22/07	22-21-03- 1	0	DEC 22/06
22-13-51- 1	3	DEC 22/06	22-21-03- 1	0A	DEC 22/06
22-13-51- 1	4	DEC 22/06	*22-21-03- 1	1	AUG 22/09
22-13-51- 1	5	DEC 22/06	*22-21-03- 1	2	AUG 22/09
22-13-51- 1	6	DEC 22/06	22-21-03- 1	3	AUG 22/08
22-13-51- 1	7	DEC 22/06	22-21-03- 1	4	AUG 22/08
22-13-51- 1	8	DEC 22/06	*22-21-03- 1	5	AUG 22/09
22-13-51- 1	9	DEC 22/06	*22-21-03- 1	6	AUG 22/09
22-13-51- 1	10	DEC 22/06	22-21-03- 1	7	AUG 22/08
22-13-51- 1	11	DEC 22/06	22-21-03- 1	8	AUG 22/08
22-13-51- 1	12	DEC 22/06	22-21-03- 1	9	AUG 22/08
22-14-00	1	DEC 22/06	22-21-03- 1	10	AUG 22/08
22-14-01- 2	0	AUG 22/08	22-21-03- 1	11	AUG 22/08
22-14-01- 2	1	DEC 22/07	22-21-03- 1	12	AUG 22/08
22-14-01- 2	2	DEC 22/07	22-21-03- 1	13	AUG 22/08
22-14-01- 2	3	DEC 22/07	22-21-03- 1	14	AUG 22/08
22-21-00	1	DEC 22/06	22-21-03- 1	15	AUG 22/08
22-21-01- 2	0	DEC 22/06	22-21-03- 1	16	AUG 22/08
22-21-01- 2	1	DEC 22/08	22-21-03- 1	17	AUG 22/08
22-21-01- 2	2	DEC 22/08	22-21-03- 1	18	AUG 22/08
22-21-01- 2	3	DEC 22/08	22-21-03- 1	19	AUG 22/08
22-21-01- 2	4	DEC 22/07	22-21-03- 1	20	AUG 22/08
22-21-01- 2	5	DEC 22/06	22-21-03- 1	21	AUG 22/08
22-21-01- 2	6	DEC 22/06	22-21-03- 1	22	AUG 22/08

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION

HXL
AUG 22/09

22 - LIST OF EFFECTIVE PAGES
PAGE 2

BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
22-21-04- 2	0	DEC 22/06	22-32-01- 2	2	DEC 22/07
*22-21-04- 2	1	AUG 22/09	22-32-01- 2	3	DEC 22/07
22-21-04- 2	2	DEC 22/07	22-32-01- 2	4	DEC 22/07
22-21-05- 1	0	DEC 22/06	22-32-01- 2	5	APR 22/09
22-21-05- 1	1	APR 22/07	22-32-01- 2	6	DEC 22/07
22-21-51- 1	0	DEC 22/06	22-32-01- 2	7	APR 22/09
22-21-51- 1	0A	DEC 22/06	22-32-01- 2	8	APR 22/09
22-21-51- 1	1	DEC 22/07	22-32-01- 2	9	APR 22/09
22-21-51- 1	2	DEC 22/07	22-32-01- 2	10	APR 22/09
22-21-51- 1	3	DEC 22/06	22-32-01- 2	11	APR 22/09
22-21-51- 1	4	DEC 22/07	22-32-01- 2	12	APR 22/09
22-21-51- 1	5	DEC 22/07	22-32-01-50	0	DEC 22/06
22-21-51- 1	6	DEC 22/07	22-32-01-50	0A	DEC 22/06
22-21-51- 1	7	DEC 22/07	22-32-01-50	0B	DEC 22/06
22-21-51- 1	8	DEC 22/07	22-32-01-50	1	APR 22/08
22-21-52- 1	0	DEC 22/06	22-32-01-50	2	DEC 22/08
22-21-52- 1	1	DEC 22/07	22-32-01-50	3	APR 22/08
22-31-00	1	DEC 22/06	22-32-51- 1	0	DEC 22/06
22-31-01- 2	0	DEC 22/06	22-32-51- 1	1	DEC 22/07
22-31-01- 2	0A	DEC 22/06	22-32-51- 1	2	DEC 22/07
22-31-01- 2	1	DEC 22/07	22-34-00	1	DEC 22/06
22-31-01- 2	2	DEC 22/07	22-34-51- 2	0	DEC 22/06
22-31-01- 2	3	DEC 22/07	22-34-51- 2	1	DEC 22/07
22-31-01- 2	4	DEC 22/07	22-41-00	1	DEC 22/06
22-31-01- 2	5	DEC 22/07	22-41-01- 2	0	DEC 22/06
22-31-01- 2	6	DEC 22/07	22-41-01- 2	1	DEC 22/07
22-31-01- 2	7	DEC 22/07	22-41-01- 2	2	DEC 22/06
22-31-01- 2	8	DEC 22/07	22-41-01- 2	3	DEC 22/06
22-31-01- 2	9	DEC 22/07	22-41-01- 2	4	DEC 22/06
22-31-01- 2	10	DEC 22/07	22-41-55- 1	0	DEC 22/06
22-31-01- 2	11	DEC 22/07	22-41-55- 1	1	DEC 22/07
22-31-01- 2	12	DEC 22/07			
22-31-01- 2	13	DEC 22/07			
22-31-01- 2	14	DEC 22/07			
22-31-01- 2	15	DEC 22/07			
22-31-01- 2	16	DEC 22/07			
22-31-01- 2	17	DEC 22/07			
22-31-01- 2	18	DEC 22/07			
22-31-01- 2	19	DEC 22/07			
22-31-01- 2	20	DEC 22/07			
22-31-02- 2	0	DEC 22/06			
22-31-02- 2	1	DEC 22/07			
22-32-00	1	DEC 22/06			
22-32-01- 2	0	DEC 22/06			
22-32-01- 2	0A	DEC 22/06			
22-32-01- 2	0B	DEC 22/06			
22-32-01- 2	0C	DEC 22/06			
22-32-01- 2	0D	DEC 22/06			
22-32-01- 2	0E	DEC 22/06			
22-32-01- 2	0F	DEC 22/06			
22-32-01- 2	1	DEC 22/08			

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION

HXL
AUG 22/09

22 - LIST OF EFFECTIVE PAGES
PAGE 3

BOEING
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 22 — AUTO FLIGHT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
AUTOPILOT/FLIGHT DIRECTOR POWER	22-11-00		
EQUIPMENT INSTL-ELECT. EQPT CTR E1/E2	22-11-01	02	
RACK (AUTOPILOT/FLIGHT DIRECTOR POWER ONLY)			
PANEL INSTL-PILOTS MAIN	22-11-02	01	
(AUTOPILOT/FLIGHT DIRECTOR POWER ONLY)			
WHEEL ASSY-CONT COLUMN (AUTOFLIGHT ONLY)	22-11-03	01	
AUTOPILOT/FLIGHT DIRECTOR PITCH CHANNEL	22-12-00		
HYDRAULIC INSTL-SECT. 48 BODY AFT	22-12-51	01	
(AUTOFLIGHT ONLY)			
SERVO INSTL-AUTOPILOT ELEV	22-12-01	01	
AUTOPILOT/FLIGHT DIRECTOR ROLL AND YAW CHANNEL	22-13-00		
HYDRAULIC INSTL-SECT. 72 VERT. FIN	22-13-51	01	
(AUTOPILOT ONLY)			
SERVO INSTL-RUD CONT AUTOPILOT	22-13-01	01	
AUTOPILOT/FLIGHT DIRECTOR WARNING AND ANNUNCIATION	22-14-00		
PANEL INSTL-PILOTS MAIN	22-14-01	02	
(AUTOPILOT/FLIGHT DIRECTOR WARNING AND ANNUNCIATION ONLY)			

 BOEING
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 22 — AUTO FLIGHT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
YAW DAMPER SYSTEM	22-21-00		
ACCELEROMETER INSTL-YAW DAMPER (AUTOFLIGHT ONLY)	22-21-05	01	
DAMPER INSTL-RUD CONT YAW (AUTOFLIGHT ONLY)	22-21-02	01	
EQUIPMENT INSTL-ELECTRONIC EQPT CTR E1/E2 RACK (YAW DAMPER SYSTEM ONLY)	22-21-04	02	
HYDRAULIC INSTL-SECT. 72 VERT. FIN (SPEED ATTITUDE ONLY)	22-21-51	01	
PANEL INSTL-(YAW DAMPER SYSTEM ONLY)	22-21-52	01	
PANEL INSTL-OVHD (YAW DAMPER SYSTEM ONLY)	22-21-01	02	
SERVO ASSY-YAW DAMPER	22-21-03	01	

767
PARTS CATALOG (MAINTENANCE)

CHAPTER 22 — AUTO FLIGHT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
THRUST MANAGEMENT POWER	22-31-00		
EQUIPMENT INSTL-ELECT. EQPT CTR E1/E2	22-31-01	02	
RACK (THRUST MANAGEMENT POWER ONLY)			
PANEL INSTL-PILOTS MAIN (THRUST	22-31-02	02	
MANAGEMENT POWER ONLY)			
THRUST MANAGEMENT SYSTEM	22-32-00		
AUTOTHROTTLE INSTL-ENG THRUST	22-32-01	02	
EQUIPMENT ASSY-P33 MISC ELEC PNL FWD	22-32-51	01	
(AUTOFLIGHT ONLY)			
PACK ASSY-MICROSWITCH AUTOTHROTTLE	22-32-01	50	
THRUST MANAGEMENT WARNING AND	22-34-00		
ANNUNCIATION			
PANEL INSTL-PILOTS MAIN (THRUST	22-34-51	02	
MANAGEMENT WARNING AND ANNUNCIATION			
ONLY)			

 BOEING
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 22 — AUTO FLIGHT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
MAINTENANCE MONITOR	22-41-00		
EQUIPMENT ASSY-MAIN PWR DISTR P6 PNL (AUTOFLIGHT ONLY)	22-41-55	01	
EQUIPMENT INSTL-ELECT. EQPT CTR E1/E2 RACK (MAINTENANCE MONITOR ONLY)	22-41-01	02	