


CRASH POSITION INDICATOR SYSTEM

BOEING
767
PARTS CATALOG (MAINTENANCE)

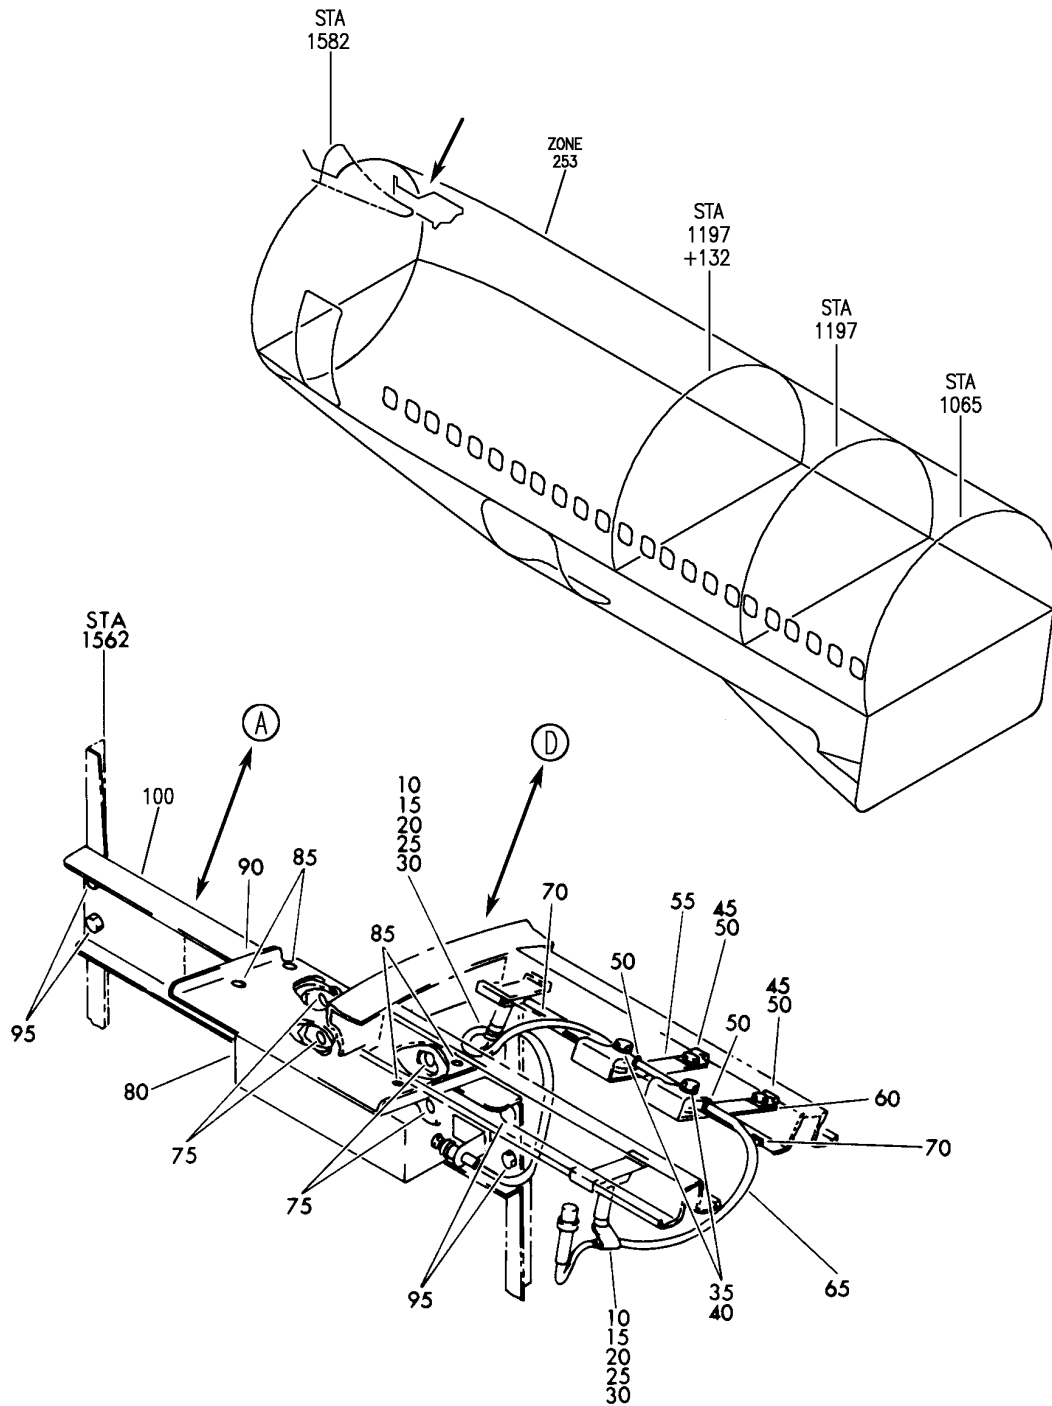

V 23240101 SH1 1 REV 291


TRANSMITTER INSTL-EMERGENCY LOCATOR
FIGURE 1 (SHEET 1)

23-24-01-01

HXL
DEC 22/06

23-24-01-01
PAGE 0

BOEING
767
PARTS CATALOG (MAINTENANCE)

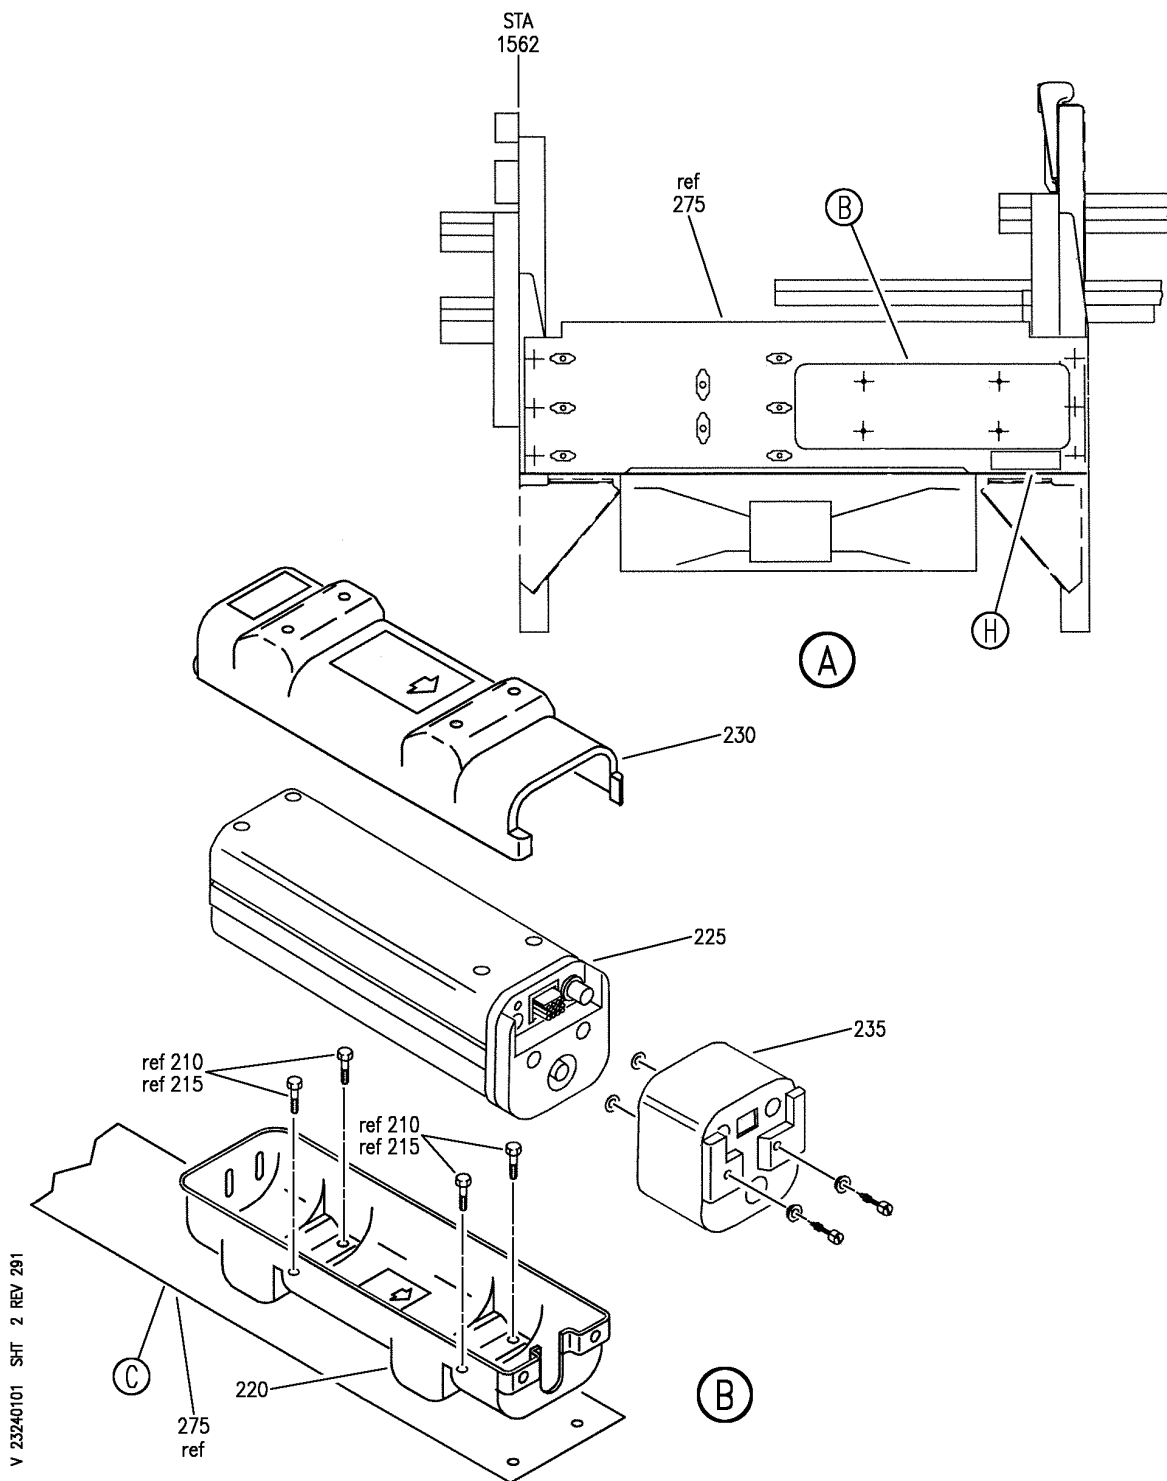

V 23240101 SHT 2 REV 291


TRANSMITTER INSTL-EMERGENCY LOCATOR
FIGURE 1 (SHEET 2)

23-24-01-01

HXL
DEC 22/06

23-24-01-01
PAGE 0A

BOEING
767
PARTS CATALOG (MAINTENANCE)

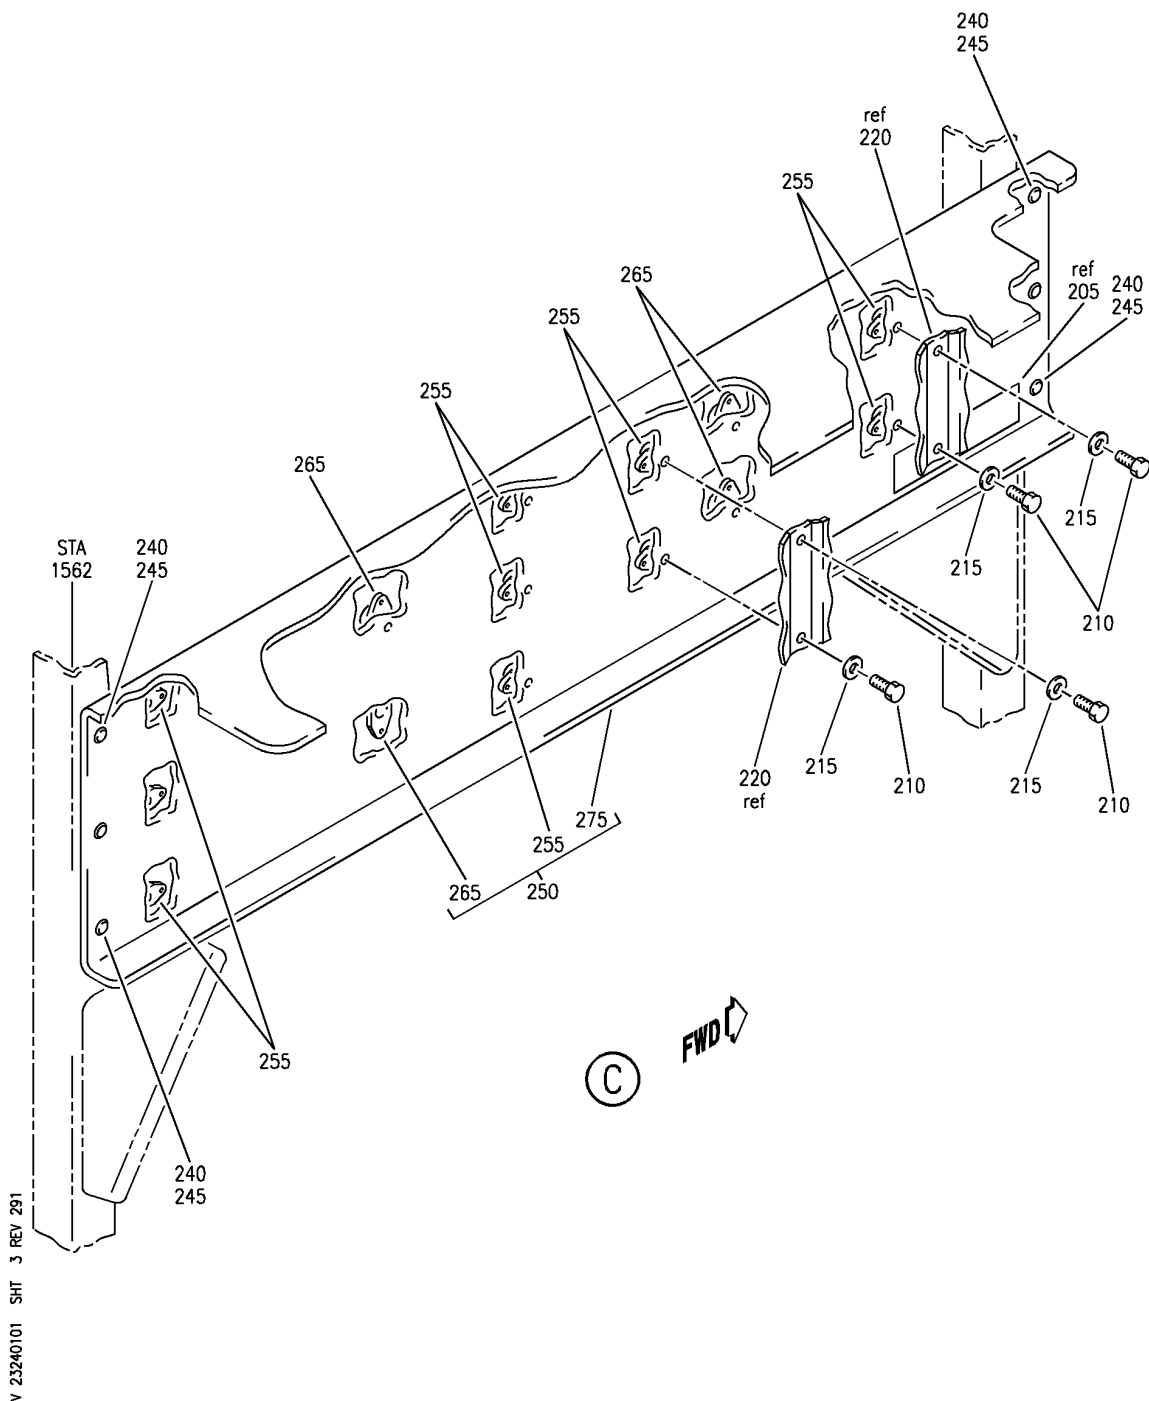


TRANSMITTER INSTL-EMERGENCY LOCATOR
FIGURE 1 (SHEET 3)

23-24-01-01

HXL
DEC 22/06

23-24-01-01
PAGE 08

BOEING
767
PARTS CATALOG (MAINTENANCE)

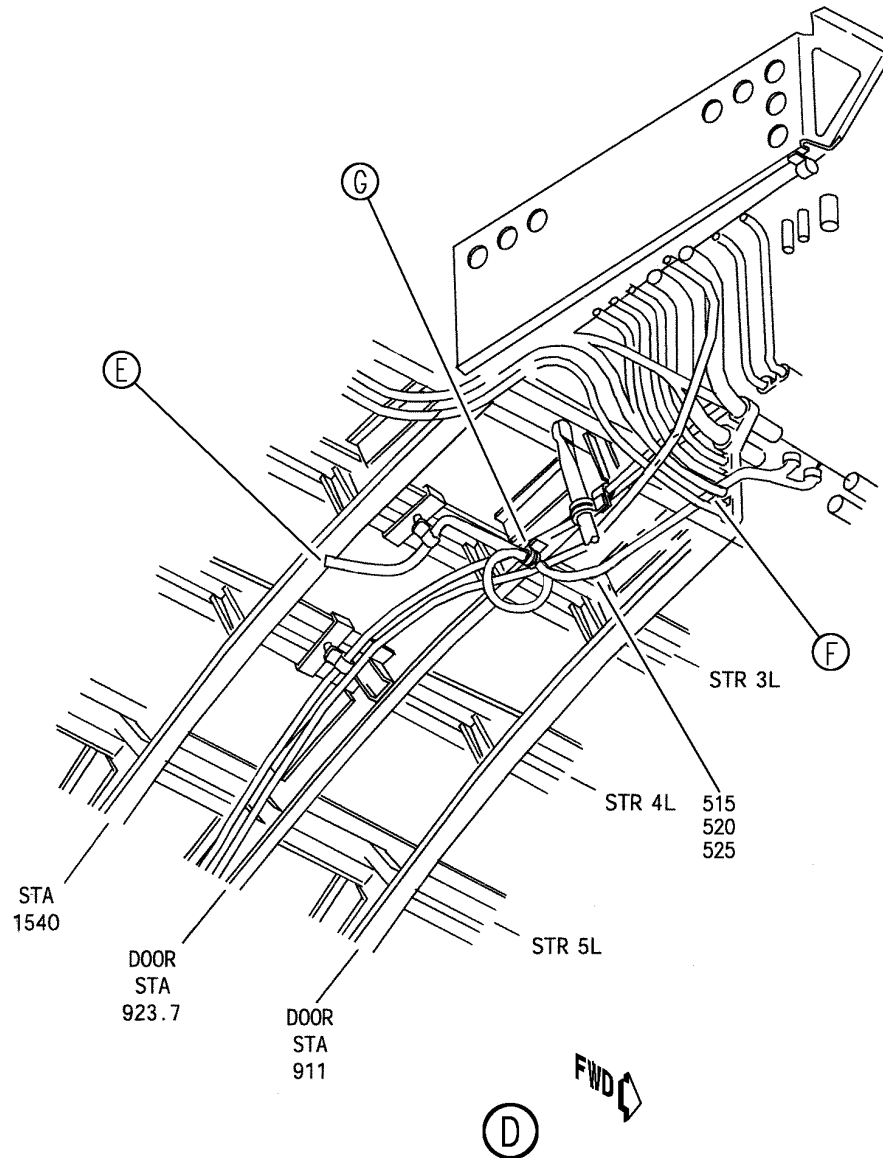

V 23240101 SHIT 4 REV 291





TRANSMITTER INSTL-EMERGENCY LOCATOR
FIGURE 1 (SHEET 4)

23-24-01-01

HXL
DEC 22/06

23-24-01-01
PAGE 0C

BOEING
767
PARTS CATALOG (MAINTENANCE)

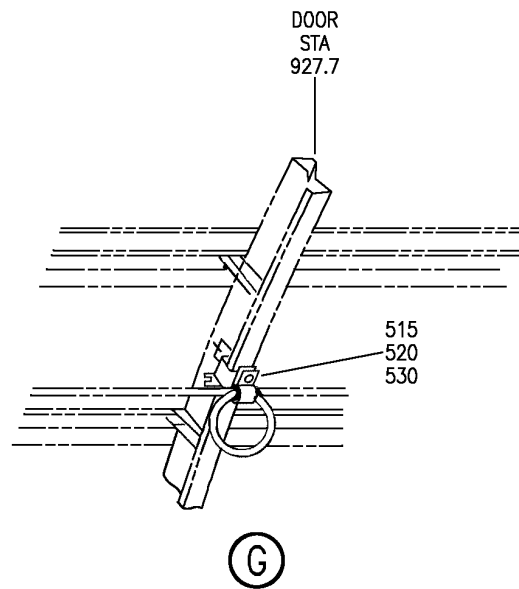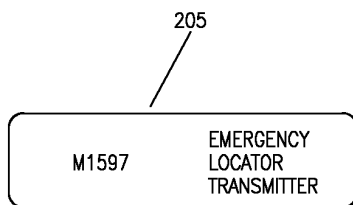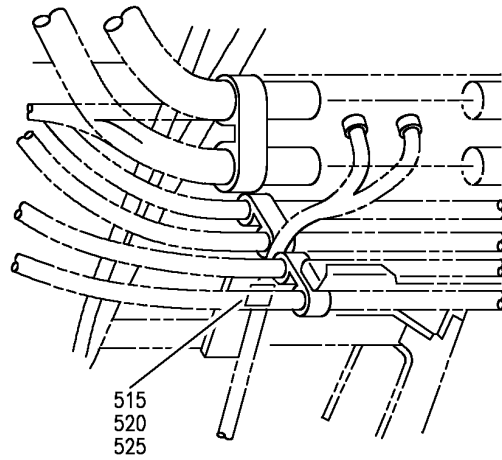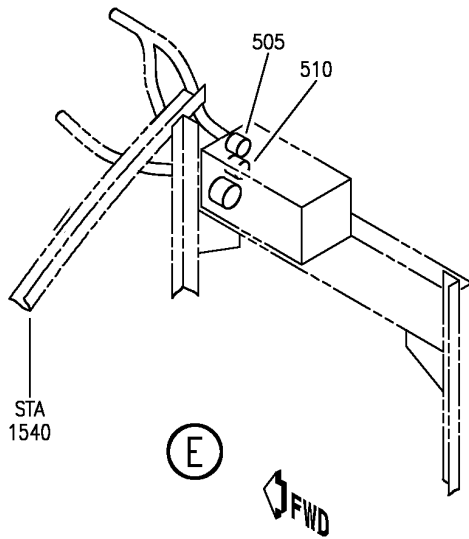

V 23240101 SH 5 REV 291

TRANSMITTER INSTL-EMERGENCY LOCATOR
FIGURE 1 (SHEET 5)

HXL
DEC 22/06

23-24-01-01

23-24-01-01
PAGE 00

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1			TRANSMITTER INSTL- EMERGENCY LOCATOR		
- 1	284T4206-1		TRANSMITTER INSTL- EMERGENCY LOCATOR FOR NHA SEE: 24-00-58-01B		RF
- 5	BAC27TEX4248		.MARKER-ALUMINUM FOIL MISCELLANEOUS DATA: (EMERGENCY LOCATOR TRANSMITTER) ELECTRICAL EQUIP NUMBER: M01597		1
- 6	483980		.PLACARD-ELT LOCATION SUPPLIER CODE: V1009B POST AIRLINE MOD: MT0110489 VSAS FOR DETAILS SEE: 11-35-51-31 11-35-51-31A		1
10	NAS1801-3-24		.SCREW		2
15	NAS42DD6-16		.SPACER		2
20	BACC10DK3		.CLAMP		2
25	S38J2		.STRAP SUPPLIER CODE: V59237 SPECIFICATION NUMBER: BACS38J2 OPTIONAL PART: 30187-3 V26835		2
30	S38J1		.ATTACHMENT SUPPLIER CODE: V59237 SPECIFICATION NUMBER: BACS38J1 OPTIONAL PART: 30187-2 V26835		2
35	NAS1801-3-8		.SCREW		2
40	BACC10DK3		.CLAMP		2
45	NAS1801-3-8		.SCREW		4
50	69-50697-1		.CLIP ASSY		4
55	284T4207-4		.BRACKET		1
60	284T4207-3		.BRACKET		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

23-24-01-01

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

23-24-01
FIG. 01
PAGE 1
DEC 22/07

BOEING
 767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1					
65	DMU60-1		.ANTENNA CABLE-(CUSTOMER FURNISHED) SUPPLIER CODE: V85226		1
70	BACG20ZM0350B		.GROMMET		2
75	NAS601-4P		.SCREW		4
80	03716-0300		.TRANSMITTER-(CUSTOMER FURNISHED) SUPPLIER CODE: V5A968 ELECTRICAL EQUIP NUMBER: M01597		1
85	BACR15FT5AD		.RIVET- SIZE DETERMINED ON INSTL.		4
90	284T4207-7		.DRIP SHIELD		1
95	HST10AG5-2		.BOLT SUPPLIER CODE: VOPTK6 SPECIFICATION NUMBER: BACB30VT5K2 OPTIONAL PART: HST10AG5-2 V06725 HST10AG5-2 V56878 HST10AG5-2 V73197		4
100	284T4207-1		.CHANNEL ASSY		1
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

— ITEM NOT ILLUSTRATED


HXL

23-24-01-01

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

23-24-01
 FIG. 01
 PAGE 2
 DEC 22/07

BOEING
767
PARTS CATALOG (MAINTENANCE)

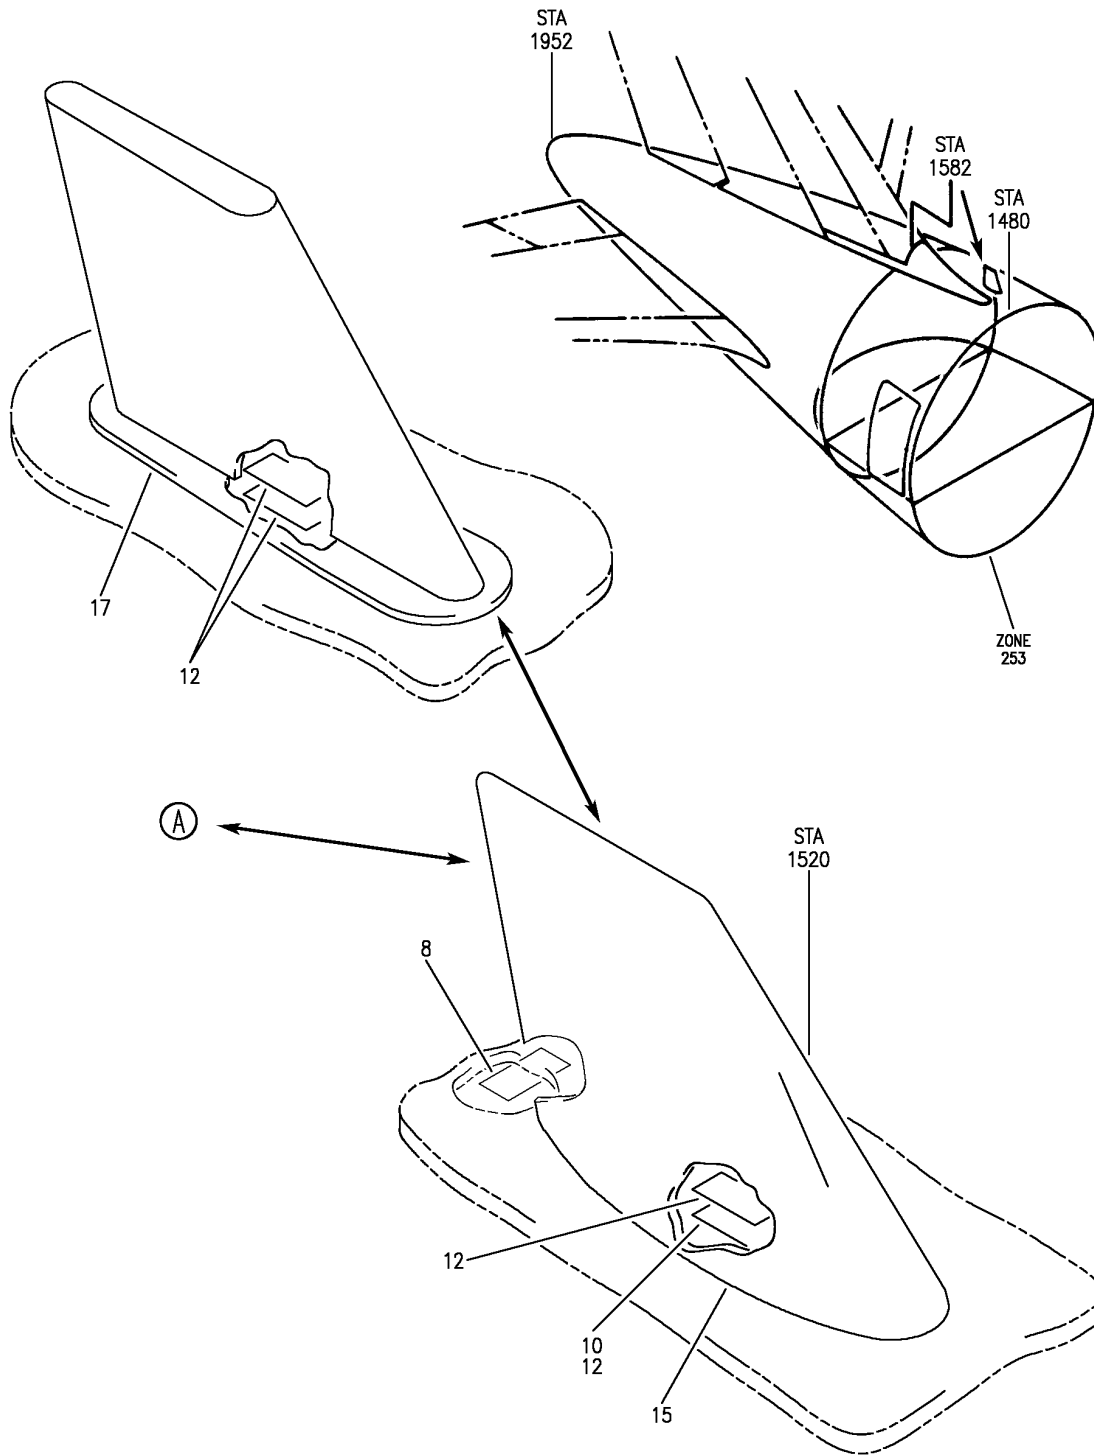

V 23240201 SHT 1 REV 322


ANTENNA INSTL-EMER LOCATOR
FIGURE 1 (SHEET 1)

23-24-02-01

HXL
DEC 22/07

23-24-02-01
PAGE 0

BOEING
767
PARTS CATALOG (MAINTENANCE)

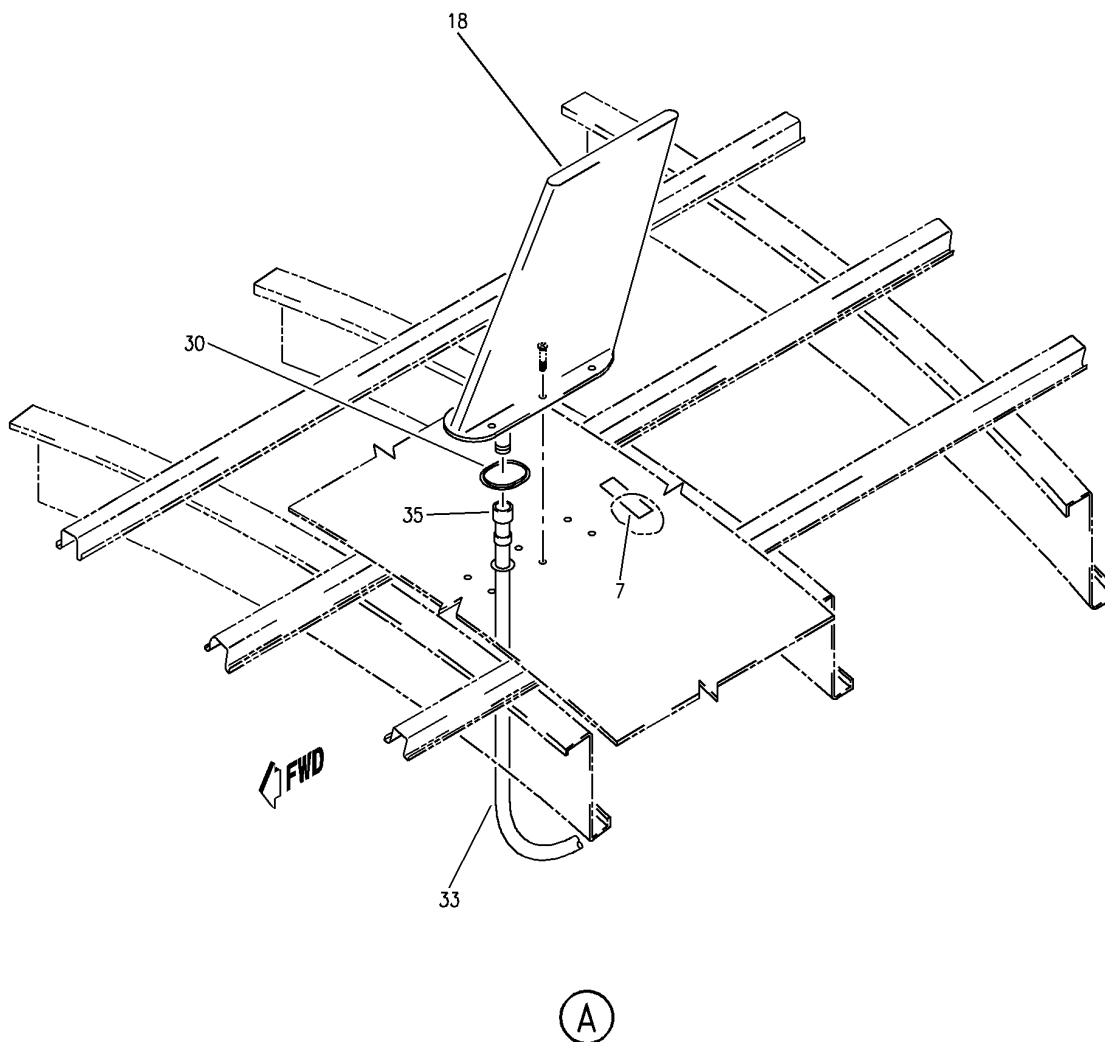

V 23240201 SHT 2 REV 322

ANTENNA INSTL-EMER LOCATOR
FIGURE 1 (SHEET 2)

HXL
DEC 22/07

23-24-02-01

23-24-02-01
PAGE 0A



767
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1			ANTENNA INSTL-EMER LOCATOR		
- 1	284T1240-1		ANTENNA INSTL-EMER LOCATOR		R F
15	DMQ18-2		FOR NHA SEE: 24-00-58-01B		
			.ANTENNA-(CUSTOMER FURNISHED)		1
			SUPPLIER CODE: V00752		
- 20	BACB30NN4C10		ATTACHING PARTS .BOLT		6
			-----*-----		
ILLUSTRATION ITEMS NOT ON PARTS LIST ARE NOT APPLICABLE					

- ITEM NOT ILLUSTRATED

HXL

23-24-02-01

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

23-24-02
FIG. 01
PAGE 1
AUG 22/08