

**MODEL:** Card Reader-C1


**SUBJECT:** Installation of the Card Reader-C1

Details:


The Card Reader-C1 accessory is now available for the iR2200/2800/3300 models. The purpose of this document is to give some information about the installation of this device to these models.

Specification:

Card Type:	Optical (Control Card iii) Magnetic (Canon Control card) (Both can be used)
Maximum Cards:	Optical – 200 Magnetic – 300
Minimum Reading speed	3cm/sec
Temperature	+15 <sup>0</sup> c to +30 <sup>0</sup> c
Humidity	5% to 80%
Power Supply	5vDC from host
Power Consumption	0.5W max
Dimensions	88mm (w) x 100mm (D) x 32mm (H)
Weight	130g

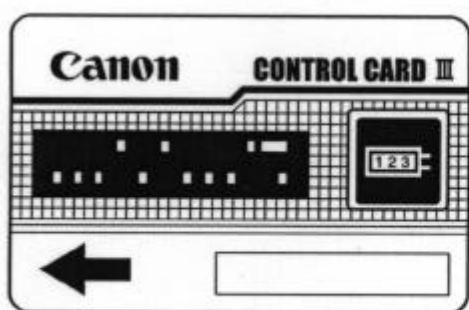

Optical card

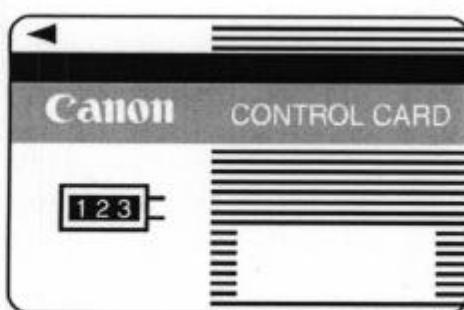

Magnetic card

#### Attachment

Mechanical Connection of the Card Reader to the iR is with a single screw on the right hand side of the copier. (See photo below)

Electrical connection is also via a single connection. The lead required from the host machine is tucked behind the right hand rear cover.





#### Operation

Having physically & electrically connected the device to the copier, a setting must be made in service mode in order to properly activate the Card Reader.

Service mode – function – install – card, set to ‘1’

#### Power OFF/ON

The copier should now boot up straight into Insert control card mode.

Enter a valid card and then customer adjustments can be made.

#### NOTE:

- Any ID names previously stored will be erased as the copier automatically sets up all 300 users.
- Control of printing function via a network will not take place unless ‘*Job Accounting*’ has been ticked in the printer driver. This is activated automatically if ‘*Get Device Status*’ is successful – requires Netspot Suite Services.
- If ‘*Allow Jobs with unknown ID*’ is set to OFF and ‘*Job Accountant*’ is not ticked, print jobs sent to the iR22/28/3300 will be lost.