

# **MultiPASS™ C3500**

# **MultiPASS™ C5500**

## **PARTS**

## **CATALOG**

**REVISION 0**

MultiPASS C3500	H12-1302	120V	USA	]
MultiPASS C5500	H12-1902	120V	USA	

**Canon**

**HY8-39AH-000**

**JULY 1998**

COPYRIGHT © 1998 CANON INC.

CANON MultiPASS C3500 / C5500 JULY 1998 PRINTED IN JAPAN (IMPRIME AU JAPON)

#### Application

This manual has been issued by Canon Inc. for qualified person to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

#### Corrections

This manual could include technical inaccuracies or typographical errors due to improvements or changes in the products. When changes occur in applicable products or in the content of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period. Canon will issue a new editions of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

#### Trademarks

The product names and company names described in this manual are the registered trademarks of the individual companies.

#### Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

Copyright © 1998 by Canon Inc.

Office Imaging Products Technical Support Dept. 2

CANON INC.

5-1 Hakusan 7-Chome, Toride-city, Ibaraki 302-0023, Japan

#### DTP Systems

This manual was produced on Apple® Macintosh® personal computer and Canon SUPER LASER SHOT B406 PS laser beam printer.

Parts layout illustrations were created using Macromedia® FreeHand® 5.5J.

Documents and page layouts were created using Adobe® PageMaker® 6.0J.

Parts lists were created using © ACI 4th Dimension® and converted to PICT format by Solutions, Inc.® Super GLUE II®.

# **I. CONTENTS**

1. ILLUSTRATION INDEX
2. PARTS LAYOUT & PARTS LIST
3. TOOL
4. LUBRICATIONS
5. GUIDE TO REPLACEMENT
6. NUMERICAL INDEX

## II. ABOUT THIS MANUAL

### 1. ILLUSTRATION INDEX

For illustration index, the parts layout illustrations in this parts catalog are listed in abbreviated form in order of illustration number to identify the pages they appear on. To find an illustration of a part, see the ILLUSTRATION INDEX.

### 2. PARTS LAYOUT & PARTS LIST

#### Parts layout illustration

##### a) Parts search

Find a part from the parts layout illustration and find its key number from the parts list to identify the part number and name.

Further, screws, nuts, washers, grip rings, pins and spacers are mentioned in the parts list.

**Note:** If parts have the same or similar shape but different specifications, their key number is assigned to several part numbers and names in the parts list.

##### b) Parts replacement procedure

The parts layout illustrations are arranged according to the disassembly procedure of the product.

When a unit in the illustration can be disassembled further, a reference illustration page of the disassembly will be included.

Parts where grease is to be applied are displayed as "Lubrication". When replacing parts, or if grease has accidentally been wiped off, refer to "4". (Lubrications), and reapply the grease.

The parts require careful work are marked "See page 5-x". So refer to the corresponding page "5". (GUIDE TO REPLACEMENT).

The letters ( **A**, **B** etc.) in the illustration indicate the connection locations of cables and screws.

#### Parts list

##### a) FIGURE & KEY No.

The FIGURE & KEY No. column corresponds to the key numbers assigned to the parts in the parts layout illustration.

It also corresponds to the part locations printed on the PC board.

##### b) PART NUMBER

The PART NUMBER column gives the part numbers corresponding to the key numbers. To order a part, indicate the part number clearly.

##### c) RANK

The service parts with N in the RANK column are order parts.

##### d) QTY

The QTY column gives the number of parts in the corresponding components layout illustration.

##### e) DESCRIPTION

The DESCRIPTION column gives the part names in English. To order a part, indicate the part name, too.

### 3. TOOL

This is a list of tools used for servicing products.

### 4. LUBRICATIONS

Where grease is to be applied in order to allow moving parts to work smoothly, and to increase conductivity, the type and amount of grease to be used will be mentioned.

### 5. GUIDE TO REPLACEMENT

Explains the special cares and cautions for the parts replacement.









### 6. NUMERICAL INDEX

All the parts listed in this parts catalog are arranged in order of part number. You can identify part locations and names from the NUMERICAL INDEX.

### III. REVISION HISTORY

REVISION	CONTENT
0	Original

# 1. ILLUSTRATION INDEX
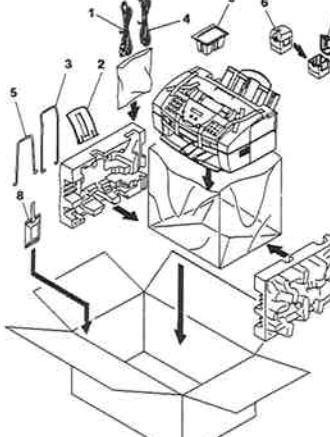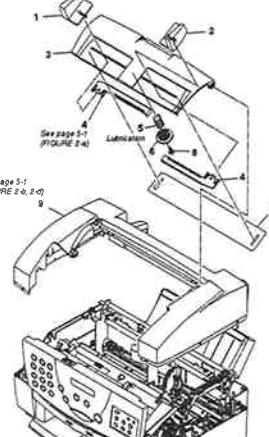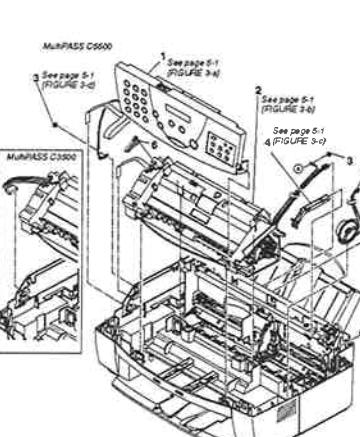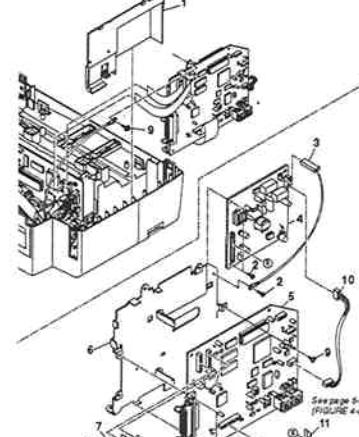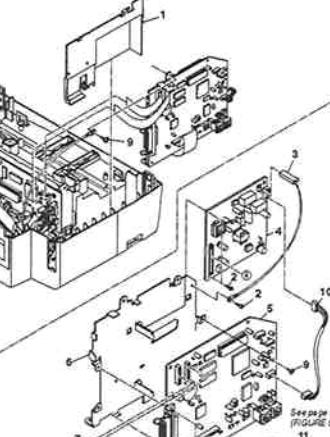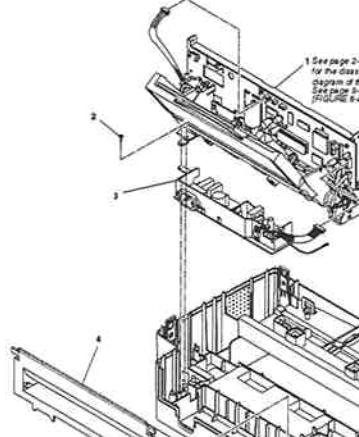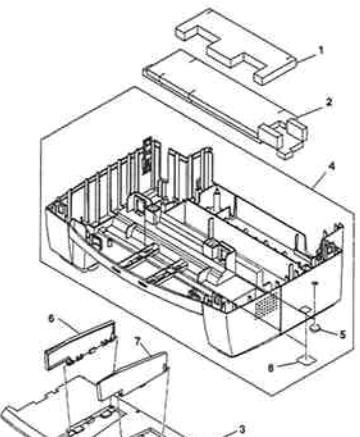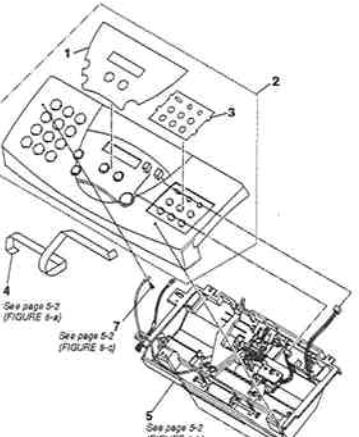
<b>FIGURE 1</b> PACKAGE CONTENTS	See Page 2-1	<b>FIGURE 2</b> UPPER COVERS & PRINTER COVER	See Page 2-2	<b>FIGURE 3</b> SCANNER & OPERATION PANEL	See Page 2-3	<b>FIGURE 4</b> MultiPASS C3500 SCNT BOARD & NCU BOARD	See Page 2-4
 <p><i>Note: Documentation and software that are packaged locally are not mentioned here. As the exact contents of accessories may differ, refer to the User's Guide for details.</i></p>							
<b>FIGURE 5</b> MultiPASS C5500 SCNT BOARD & NCU BOARD	See Page 2-5	<b>FIGURE 6</b> PRINTER & POWER SUPPLY	See Page 2-6	<b>FIGURE 7</b> MAIN FRAME ASSY	See Page 2-7	<b>FIGURE 8</b> MultiPASS C3500 OPRATION PANEL & ADF, UPPER	See Page 2-8
							


<b>FIGURE 9</b> MultiPASS C5500 OPRATION PANEL & ADF, UPPER	See Page 2-9	<b>FIGURE 10</b> MultiPASS C3500 ADF, UPPER	See Page 2-10	<b>FIGURE 11</b> MultiPASS C5500 ADF, UPPER	See Page 2-11	<b>FIGURE 12</b> SEPARATION GUIDE ASS'Y	See Page 2-12
<b>FIGURE 13</b> ADF, LOWER (1)	See Page 2-13	<b>FIGURE 14</b> MultiPASS C3500 ADF, LOWER (2)	See Page 2-14	<b>FIGURE 15</b> MultiPASS C5500 ADF, LOWER (2)	See Page 2-15	<b>FIGURE 16</b> AUTO SHEET FEEDER & PCNT BOARD ASS'Y	See Page 2-16

<b>FIGURE 17 CARRIAGE SECTION (1)</b>	See Page 2-17	<b>FIGURE 18 CARRIAGE SECTION (2)</b>	See Page 2-18	<b>FIGURE 19 MOTORS</b>	See Page 2-19	<b>FIGURE 20 PAPER FEED SECTION (1)</b>	See Page 2-20
<b>FIGURE 21 PAPER FEED SECTION (2) &amp; PURGE UNIT</b>	See Page 2-21	<b>FIGURE 22 PRINTER FRAME</b>	See Page 2-22	<b>FIGURE 23 SPURS</b>	See Page 2-23	<b>FIGURE 24 AUTO SHEET FEEDER (1)</b>	See Page 2-24

FIGURE 25 AUTO SHEET FEEDER (2)	See Page 2-27	FIGURE 26 AUTO SHEET FEEDER (3)	See Page 2-26	FIGURE 27 SCNT BOARD ASS'Y & PCNT BOARD ASS'Y	See Page 2-27	FIGURE 28 TOOL	See Page 3-1

## 2. PARTS LAYOUT & PARTS LIST

FIGURE 1 PACKAGE CONTENTS

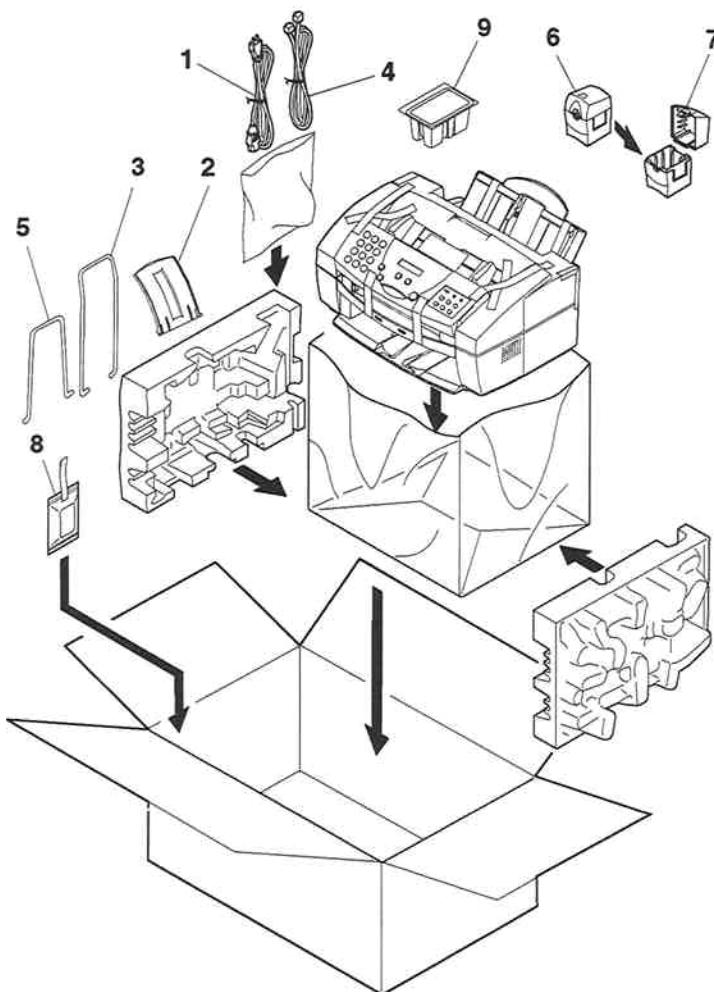

*Note: Documentation and software that are packaged locally are not mentioned here.  
As the exact contents of accessories may differ, refer to the User's Guide for details.*

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
1-1	WT3-5021-000		1	POWER SUPPLY CORD, 120V	
2	HB1-3286-000		1	TRAY, SUPPORT DOCUMENT	
3	HB1-2723-000		1	TRAY, EXIT DOCUMENT	
4	HH2-2824-000		1	MODULAR CORD, 2P	
5	HB1-2717-000		1	TRAY, PAPER EXTENTION	
6	NPN		1	BJ CARTRIDGE CONTAINER	
7	QB1-2213-000	N	1	LID, CONTAINER	
8	NPN		1	BCI-21 BLACK BJ INK CARTRIDGE	
9	NPN		1	BC-21e COLOR BJ CARTRIDGE	

FIGURE 2 UPPER COVER &amp; PRINTER COVER

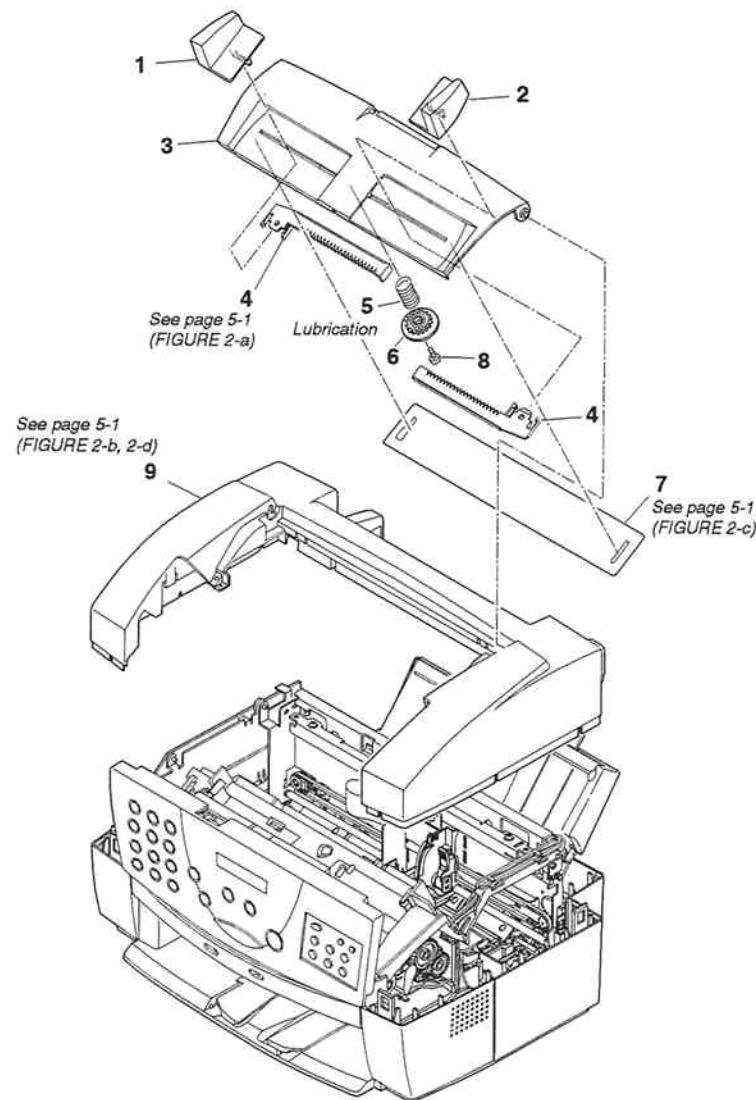
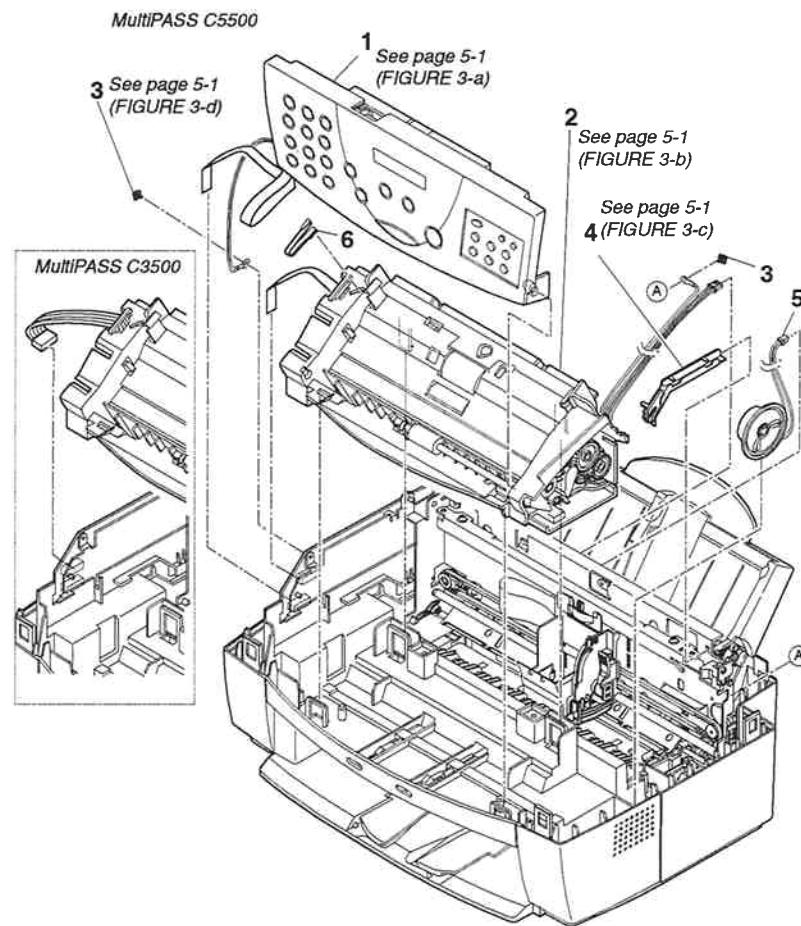


FIGURE & KEY No.	PART No.	R A N K	Q T Y	DESCRIPTION	REMARKS
2 - 1	HB1-2886-000		1	GUIDE, DOCUMENT, LEFT	
2	HB1-2885-000		1	GUIDE, DOCUMENT, RIGHT	
3	HB1-2884-000		1	COVER, PRINTER	
4	HB1-2883-000		2	SLIDER, RACK	
5	HS5-2130-000		1	SPRING, SLIDER	
6	HS5-0238-000		1	GEAR, Z16	
7	HB1-3287-000		1	SCREW, TP M3X8	
8	XA9-0476-000		1	SCREW, TP M3X8	
9	HB1-2701-080		1	COVER, UPPER	

### FIGURE 3 SCANNER & OPERATION PANEL



**FIGURE 4 MultiPASS C3500 SCNT BOARD & NCU BOARD**

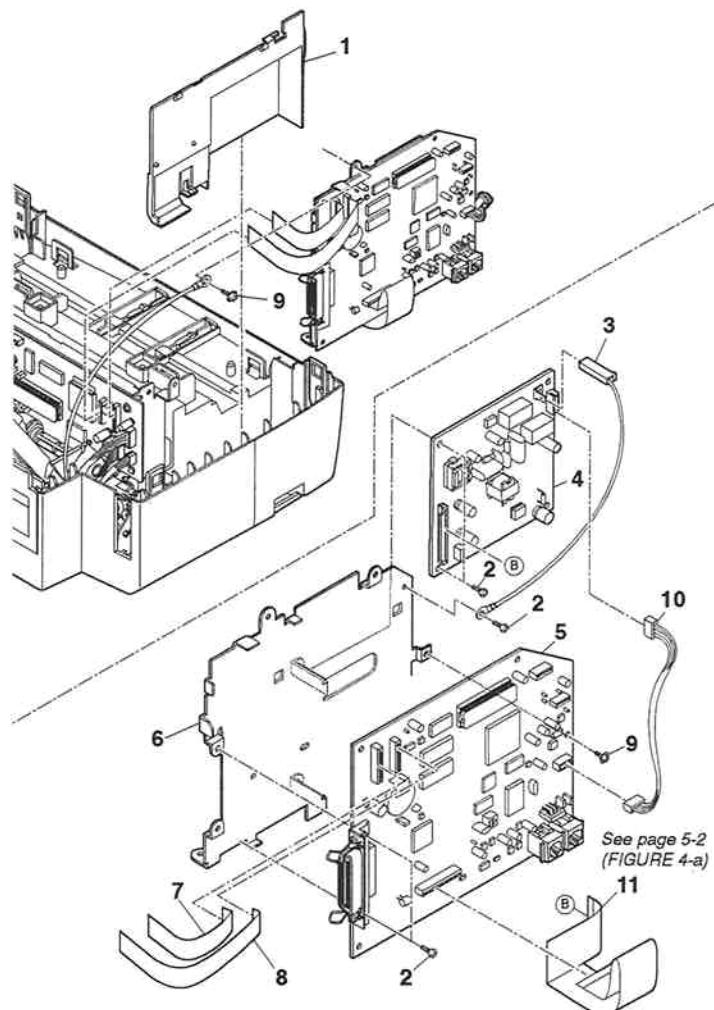


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
4 - 1	HB1-2781-000		1	COVER, NCU	
2	XB1-2300-607		5	SCREW, BH3X6(S)	
3	HH2-2522-000		1	WIRE, GROUNDING	
4	HG1-4268-040		1	NCU BOARD ASS'Y	
5	HG5-1588-000		1	SCNT BOARD ASS'Y	
6	HB1-2721-050		1	PLATE,CIRCUIT BOARD BASE	
7	HH2-2834-000		1	CABLE, FLAT, 21P	
8	HH2-2833-000		1	CABLE, FLAT, 15P	
9	XB6-7300-607		2	SCREW, TP, M3x6	
10	HH2-2730-000		1	CABLE WITH CONNECTOR, 5P	
11	HH2-2728-020		1	CABLE, FLAT	

**FIGURE 5 MultiPASS C5500 SCNT BOARD & NCU BOARD**

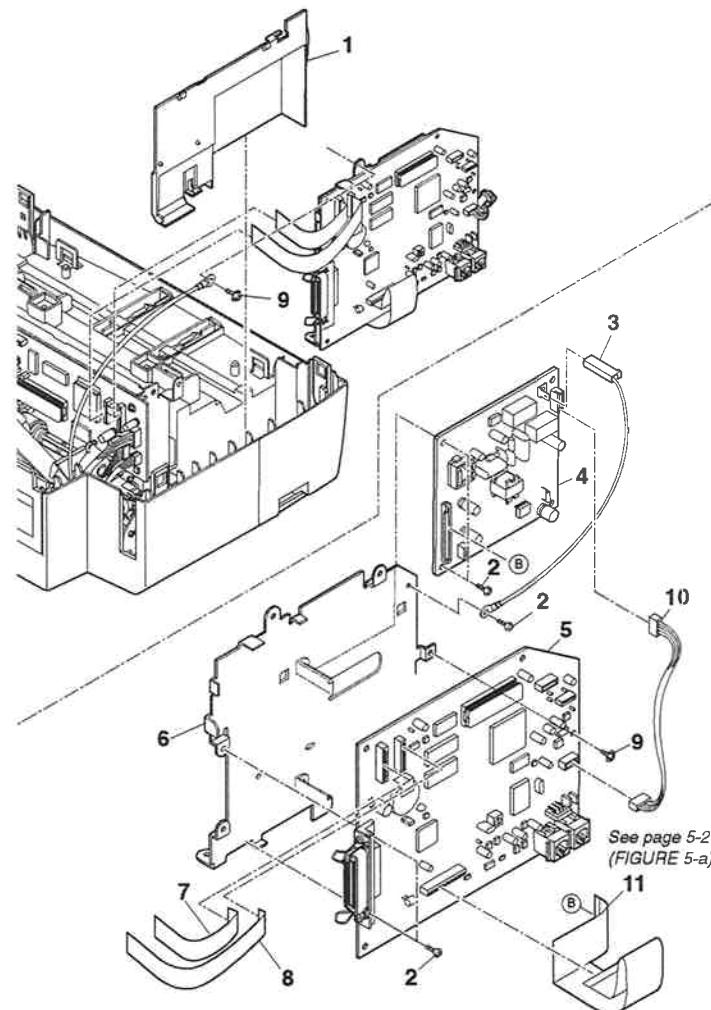
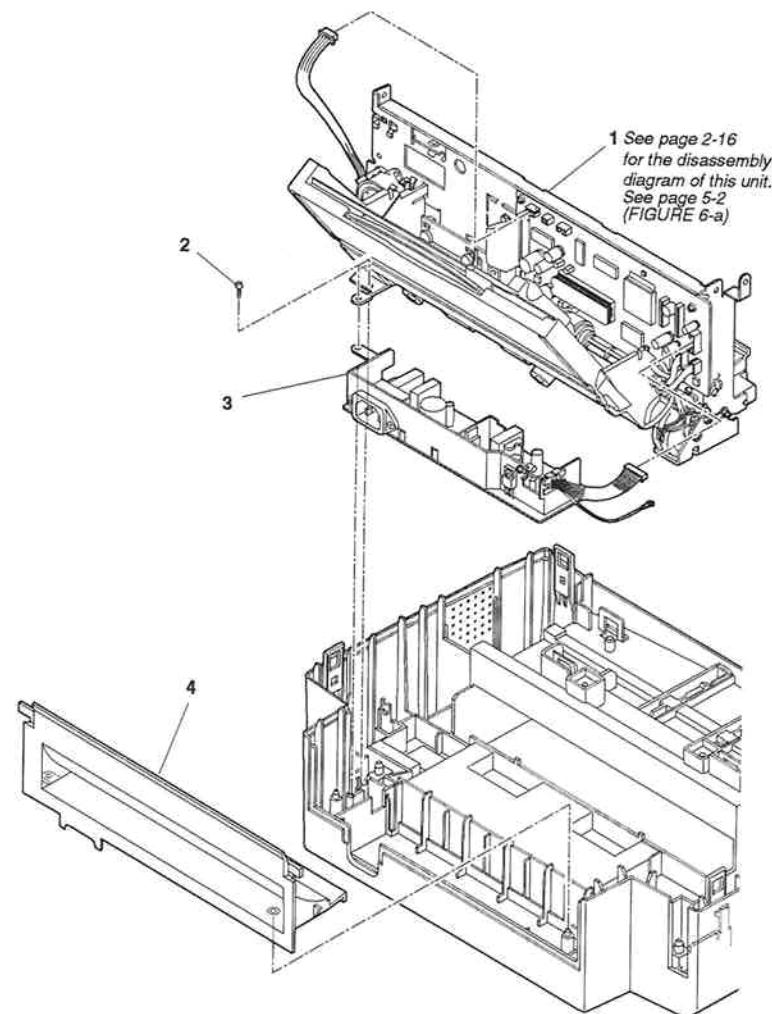


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
5 - 1	HB1-2781-000	1	1	COVER, NCU	
2	XB1-2300-607	5	1	SCREW, BH3X6(S)	
3	HH2-2522-000	1	1	WIRE, GROUNDING	
4	HG1-4268-040	1	1	NCU BOARD ASSY	
5	HG5-1546-000	1	1	SCNT BOARD ASS'Y	
6	HB1-2721-050	1	1	PLATE,CIRCUIT BOARD BASE	
7	HH2-2834-000	1	1	CABLE, FLAT, 21P	
8	HH2-2833-000	1	1	CABLE, FLAT, 15P	
9	XB6-7300-607	2	2	SCREW, TP, M3x6	
10	HH2-2730-000	1	1	CABLE WITH CONNECTOR, 5P	
11	HH2-2728-020	1	1	CABLE, FLAT	

**FIGURE 6 MAIN FRAME ASS'Y**



**FIGURE 7 OPERATION PANEL & ADF, UPPER**

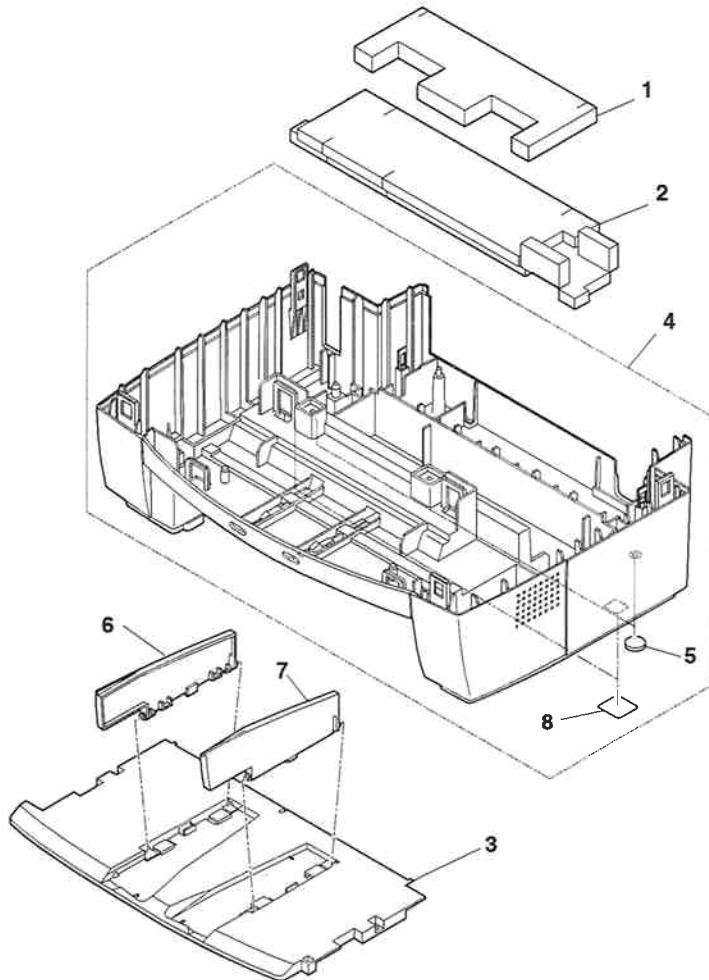


FIGURE & KEY No.	PART No.	R A N K Y	DESCRIPTION	REMARKS
7-1	HB1-2713-000	N	1 ABSORBER, WASTE INK B	
2	HB1-2712-000		1 ABSORBER, WASTE INK A	
3	HB1-2714-000		1 TRAY, RECORDING PAPER	
4	HF5-0279-030		1 MAIN FRAME ASS'Y	
5	QB1-0507-000		1 FOOT, PRINTER	
6	HB1-2715-000		1 PLATE, PAPER SUPPORT (LEFT)	
7	HB1-2716-000		1 PLATE, PAPER SUPPORT (RIGHT)	
8	QB1-3143-000		2 SHEET, SPACER	

**FIGURE 8** MultiPASS C3500

## OPERATION PANEL ASS'Y &amp; ADF UPPER

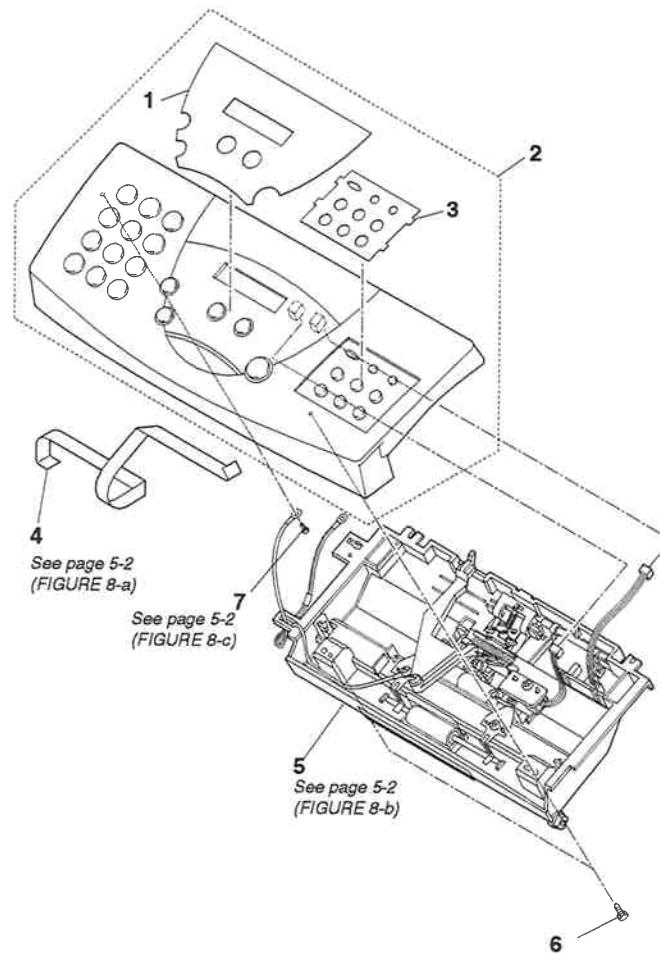


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
8 - 1	HB1-3329-000		1	SHEET, OPERATION PANEL	
2	HG5-1594-000		1	OPERATION PANEL ASS'Y	
3	HB1-2725-000		1	FACE PLATE, ONE-TOUCH DIAL	
4	HH2-2755-000		1	CABLE, FLAT	
5	NPN		1	DOCUMENT GUIDE UPPER	
6	XB4-7300-807		2	SCREW, TAP TIGHT, BINDING HEAD	
7	XB1-2300-607		1	SCREW, BH3X6(S)	

**FIGURE 9** MultiPASS C5500  
OPERATION PANEL ASS'Y & ADF UPPER

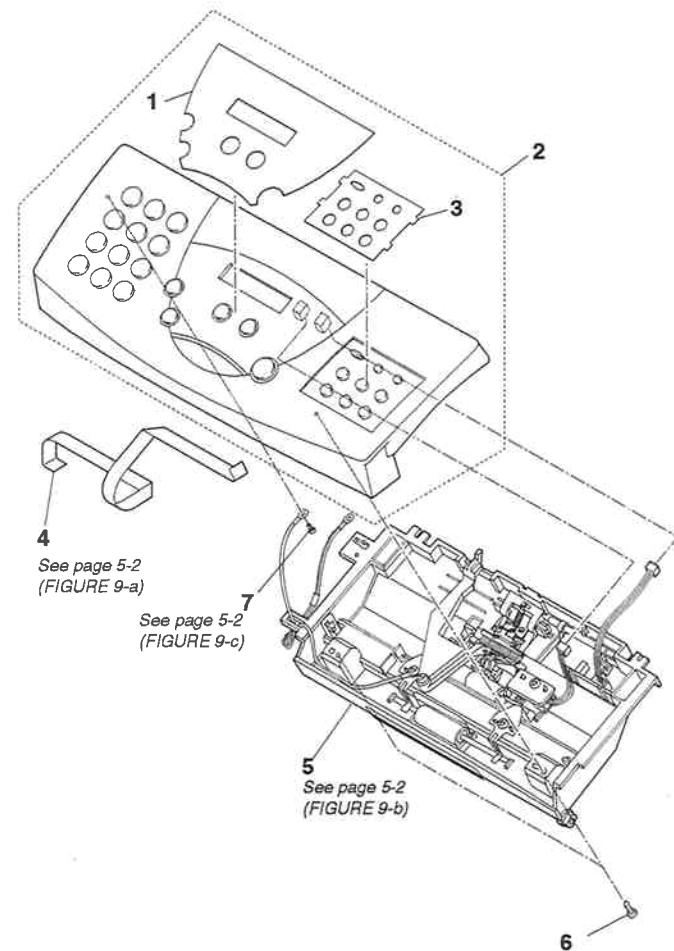


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
9 - 1	HB1-3292-000		1	SHEET, OPERATION PANEL	
2	HG5-1556-000		1	OPERATION PANEL ASS'Y	
3	HB1-2725-000		1	FACE PLATE, ONE-TOUCH DIAL	
4	HH2-2755-000		1	FLAT CABLE (SCNT-OPCNT)	
5	HG5-1238-000		1	DOCUMENT GUIDE UPPER	
6	XB4-7300-807		2	SCREW, TAP TIGHT, BINDING HEAD	
7	XB1-2300-607		1	SCREW, BH3X6(S)	

FIGURE 10 MultiPASS C3500 ADF, UPPER

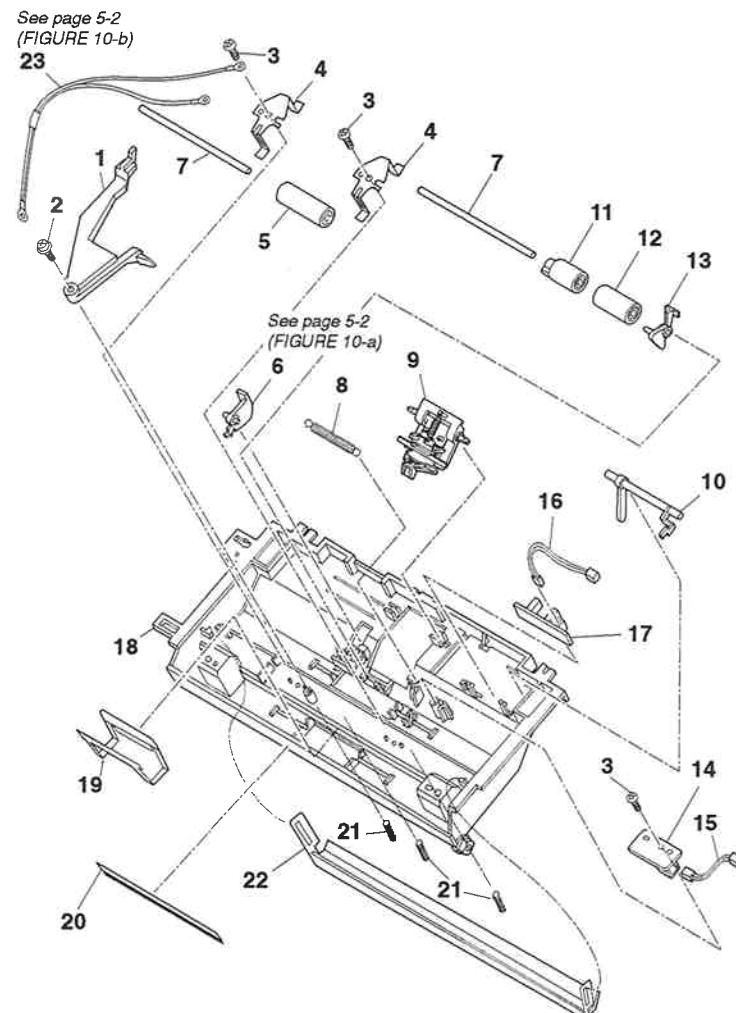


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
10 - 1	HB1-2874-000		1	LEVER, SWITCHING	
2	XA9-0476-000		1	SCREW, TP M3X8	
3	XB4-7300-807		3	SCREW, TAP TIGHT, BINDING HEAD	
4	HB1-2866-000		2	PLATE, PRESSURE	
5	HS5-6042-000		1	ROLLER, DELIVERY, 2	
6	HB1-2863-000		1	STOPPER, DOCUMENT	
7	HB1-2865-000		2	SHAFT, BACK UP ROLLER	
8	HS5-2131-000		1	SPRING	
9	HG5-1239-000		1	SEPARATION GUIDE ASSY	
10	HB1-2862-000		1	ARM, DETECTION (DS)	
11	HB1-2864-000		1	ROLLER, BACK UP	
12	HS5-6023-030		1	ROLLER, BACK UP	
13	HB1-2861-000		1	ARM, DETECTION (DS)	
14	HG5-1245-000		1	DOCUMENT EDGE SENSOR ASS'Y	
15	HH2-2747-000		1	CABLE WITH CONNECTOR, 3P	
16	HH2-2746-000		1	CABLE WITH CONNECTOR, 3P	
17	HG5-1244-000		1	DOCUMENT SENSOR ASSY	
18	HB1-2860-020		1	COVER, ADF, UPPER	
19	HB1-2875-000		1	SHOOT, DOCUMENT STOP	
20	HB1-1784-000		1	BRUSH, STATIC DISCHARGE	
21	HS5-2129-000		3	SPRING, WHITE SHEET	
22	HF5-0399-000		1	WHITE SHEET UNIT	
23	HH2-2810-000		1	WIRE, GROUNDING	

**FIGURE 11 MultiPASS C5500 ADF, UPPER**

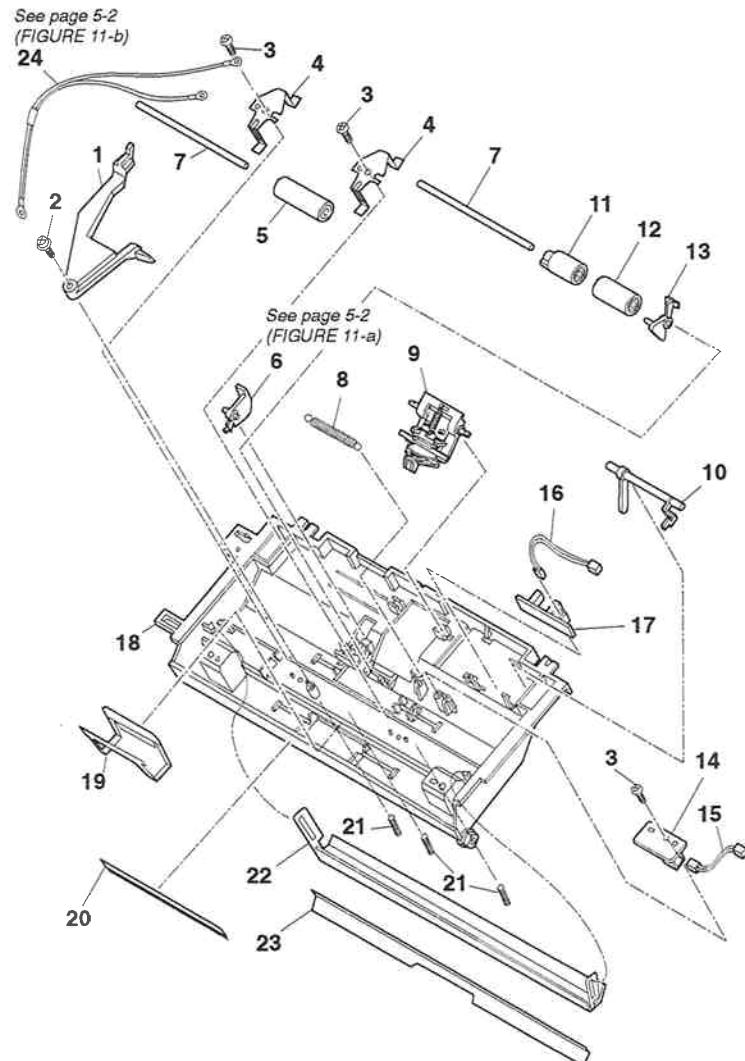


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
11- 1	HB1-2874-000		1	LEVER, SWITCHING	
2	XA9-0476-000		1	SCREW, TP M3X8	
3	XB4-7300-807		3	SCREW, TAP TIGHT, BINDING HEAD	
4	HB1-2866-000		2	PLATE, PRESSURE	
5	HS5-6042-000		1	ROLLER, DELIVERY, 2	
6	HB1-2863-000		1	STOPPER, DOCUMENT	
7	HB1-2865-000		2	SHAFT, BACK UP ROLLER	
8	HS5-2131-000		1	SPRING	
9	HG5-1239-000		1	SEPARATION GUIDE ASS'Y	
10	HB1-2862-000		1	ARM, DETECTION (DS)	
11	HB1-2864-000		1	ROLLER, BACK UP	
12	HS5-6023-030		1	ROLLER, BACK UP	
13	HB1-2861-000		1	ARM, DETECTION (DES)	
14	HG5-1245-000		1	DOCUMENT EDGE SENSOR ASS'Y	
15	HH2-2747-000		1	CABLE WITH CONNECTOR, 3P	
16	HH2-2746-000		1	CABLE WITH CONNECTOR, 3P	
17	HG5-1244-000		1	DOCUMENT SENSOR ASS'Y	
18	HB1-2860-020		1	COVER, ADF, UPPER	
19	HB1-2875-000		1	SHEET, DOCUMENT STOP	
20	HB1-1784-000		1	BRUSH, STATIC DISCHARGE	
21	HS5-2129-000		3	SPRING, WHITE SHEET	
22	HG5-0399-000		1	WHITE SHEET UNIT	
23	HB1-2897-000		1	SHEET, LIGHT SHIELD	
24	HH2-2810-000		1	WIRE, GROUNDING	

FIGURE 12 SEPARATION GUIDE ASS'Y

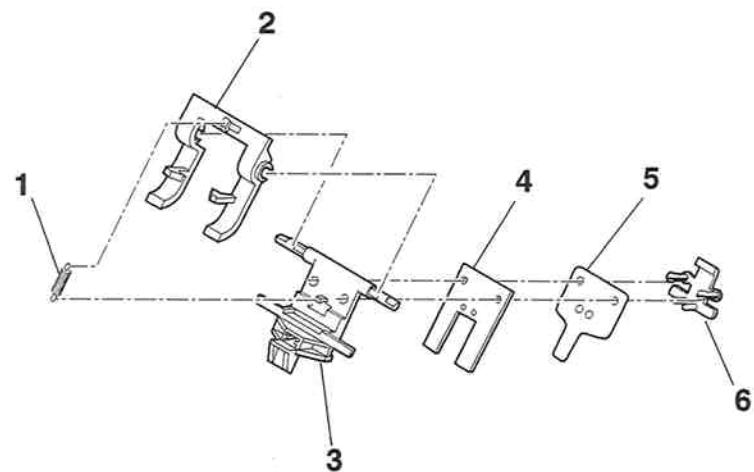


FIGURE & KEY No.	PART No.	R A N K	Q T Y	DESCRIPTION	REMARKS
12 - 1	HS5-2079-000		1	SPRING, SEPARATION GUIDE	
2	HB1-2873-030		1	HOLDER, SEPARATION GUIDE	
3	HB1-2871-030		1	PLATE, PRESSURE	
4	HB1-2872-000		1	PAD, SEPARATION	
5	HB1-2898-000		1	SHET, SEPARATION	
6	HB1-2895-000		1	HOLDER, SEPARATION	

**FIGURE 13 ADF, LOWER (1)**

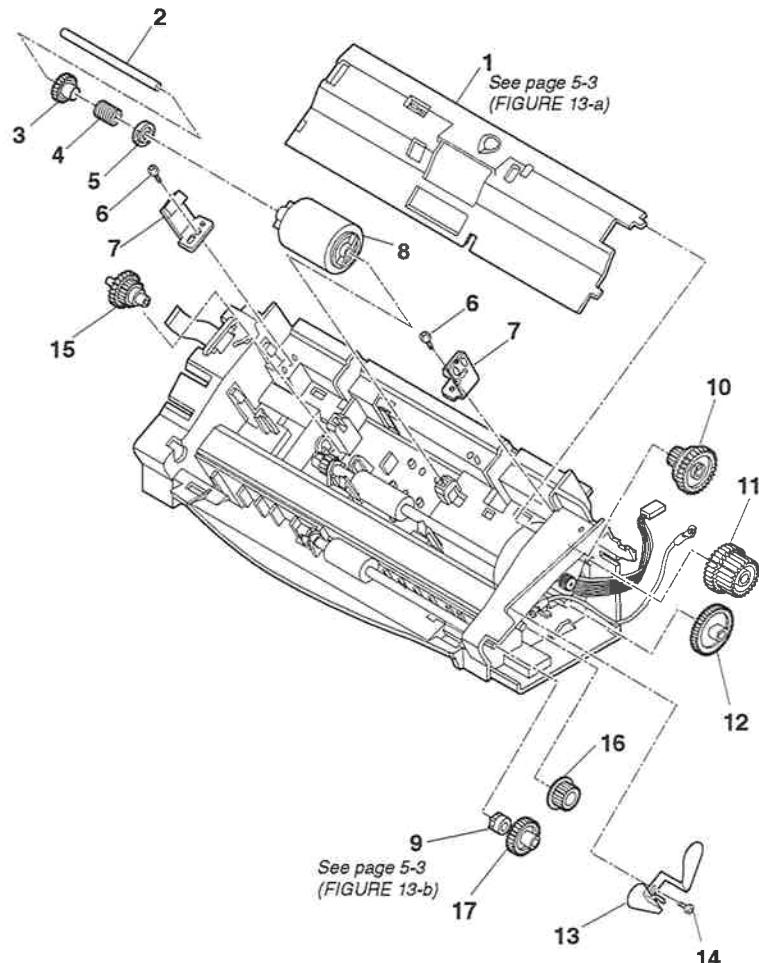


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
13- 1	HB1-2891-020	1	1	COVER, ADF LOWER	
2	HB1-2881-000	1	1	SHAFT, SEPARATION ROLLER	
3	HS5-0237-000	1	1	GEAR, 32T	
4	HS5-2027-000	1	1	SPRING, CLUCH	
5	HB1-1779-000	1	1	SPACER	
6	XB4-7300-807	2	1	SCREW, TAP TIGHT, BINDING HEAD	
7	HF5-0305-000	2	1	PANEL HOLDER UNIT	
8	HB1-3034-000	1	1	ROLLER, SEPARATION	
9	HS1-1063-000	1	1	BUSHING	
10	HS5-0231-000	1	1	GEAR, 55T/19T	
11	HS5-0230-000	1	1	GEAR, 44T/57T	
12	HS5-0232-000	1	1	GEAR, 56T	
13	HB1-2882-000	1	1	PLATE, GROUNDING	
14	XB1-2300-407	1	1	SCREW, BH3X4 (S)	
15	HS5-0236-000	1	1	GEAR, 36T/24T	
16	HS5-0233-000	1	1	GEAR, 34T	
17	HS5-0234-000	1	1	GEAR, 42T	

FIGURE 14 MultiPASS C3500 ADF, LOWER

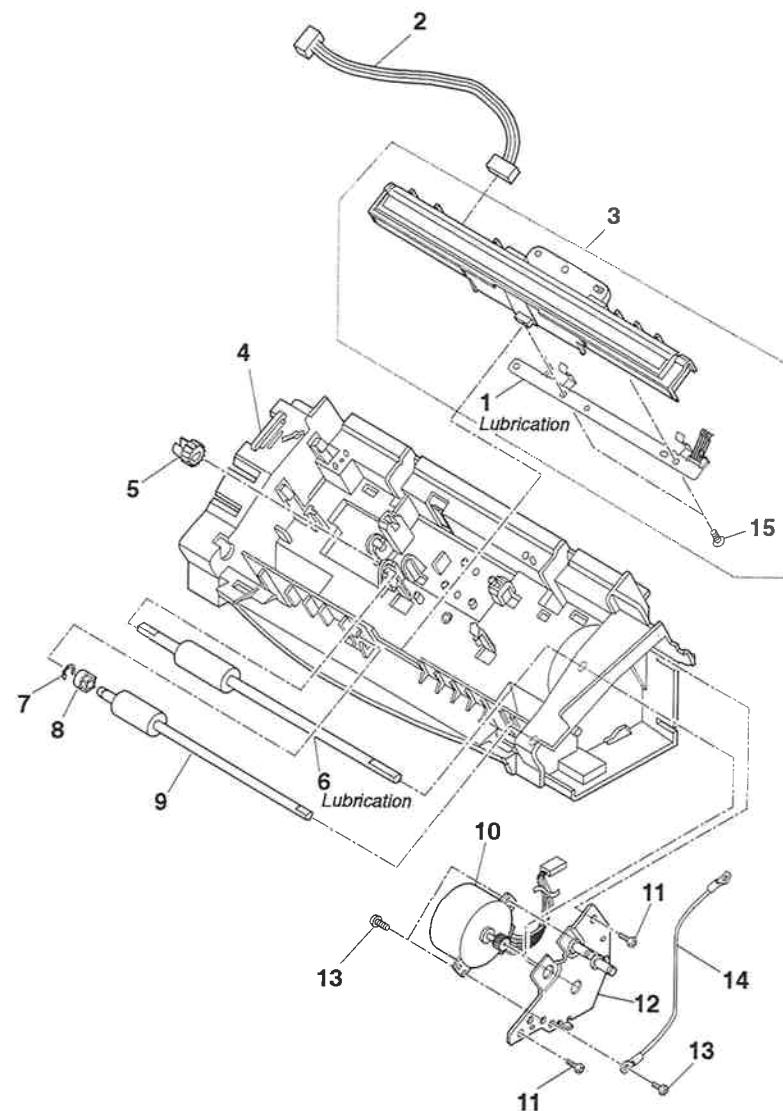


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
14 - 1	HB1-3328-000	N	1	PLATE, GROUNDING	
2	HH2-2831-000		1	CABLE WITH CONNECTOR, 7P	
3	HG5-1592-000		1	CONNECT SENSOR ASSY	
4	HB1-2890-000		1	FRAME, ADF, LOWER	
5	HS5-0235-000		1	GEAR, 19T	
6	HB1-2878-000		1	ROLLER, DOCUMENT FEED	
7	XD2-1100-402		1	RETAINING RING (E-TYPE)	
8	HS1-1063-000		1	BUSHING	
9	HB1-3289-000		1	ROLLER, DOCUMENT EJECT	
10	HH7-2331-000		1	MOTOR, DOCUMENT FEED	
11	XB4-7300-807		2	SCREW, TAP TIGHT, BINDING HEAD	
12	HF5-0304-000		1	PLATE, SCANNER DRIVE	
13	XB1-2300-407		3	SCREW, BH3X4 (S)	
14	HH2-2748-000		1	WIRE, GROUNDING	
15	XB4-7300-607		2	SCREW, TAP TIGHT, BINDING HEAD	

**FIGURE 15 MultiPASS C5500 ADF, LOWER**

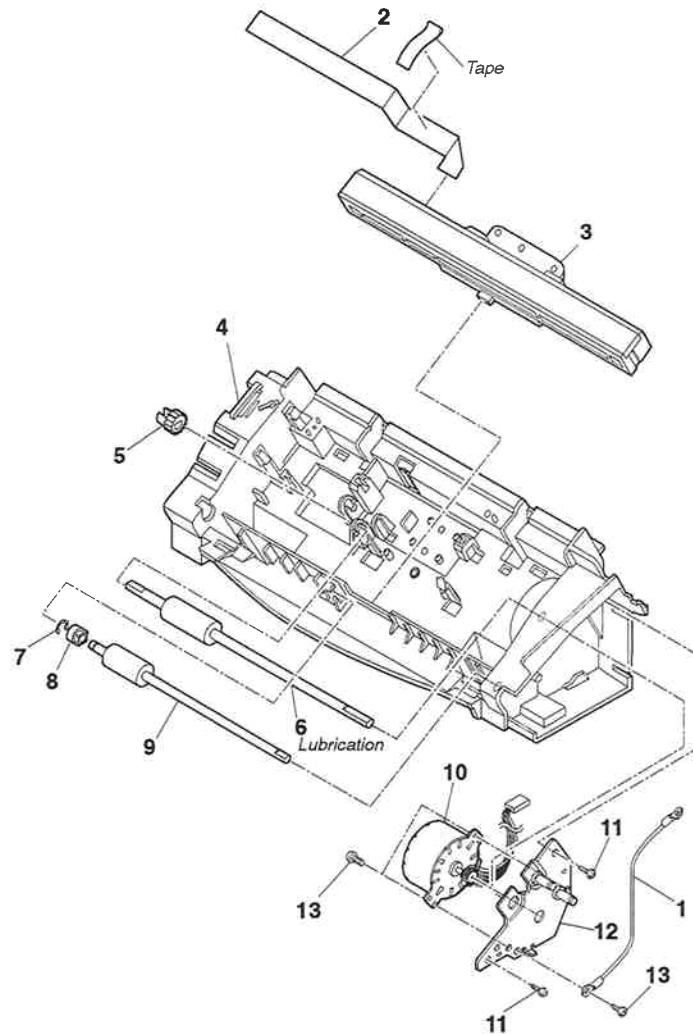


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
15 - 1	HH2-2748-000	N	1	WIRE, GROUNDING	
2	HH2-2745-000		1	CABLE, FLAT	
3	HG5-1554-000		1	CONTACT SENSOR UNIT	
4	HB1-2890-000		1	FRAME, ADF, LOWER	
5	HS5-0235-000		1	GEAR, 19T	
6	HB1-2878-000		1	ROLLER, DOCUMENT FEED	
7	XD2-1100-402		1	RETAINING RING (E-TYPE)	
8	HS1-1063-000		1	BUSHING	
9	HB1-3289-000		1	ROLLER, DOCUMENT EJECT	
10	HH7-2331-000		1	MOTOR, DOCUMENT FEED	
11	XB4-7300-807		2	SCREW, TAP TIGHT, BINDING HEAD	
12	HF5-0304-000		1	PLATE, SCANNER DRIVE	
13	XB1-2300-407		3	SCREW, BH3X4 (S)	

**FIGURE 16 AUTO SHEET FEEDER & PCNT BOARD ASS'Y**

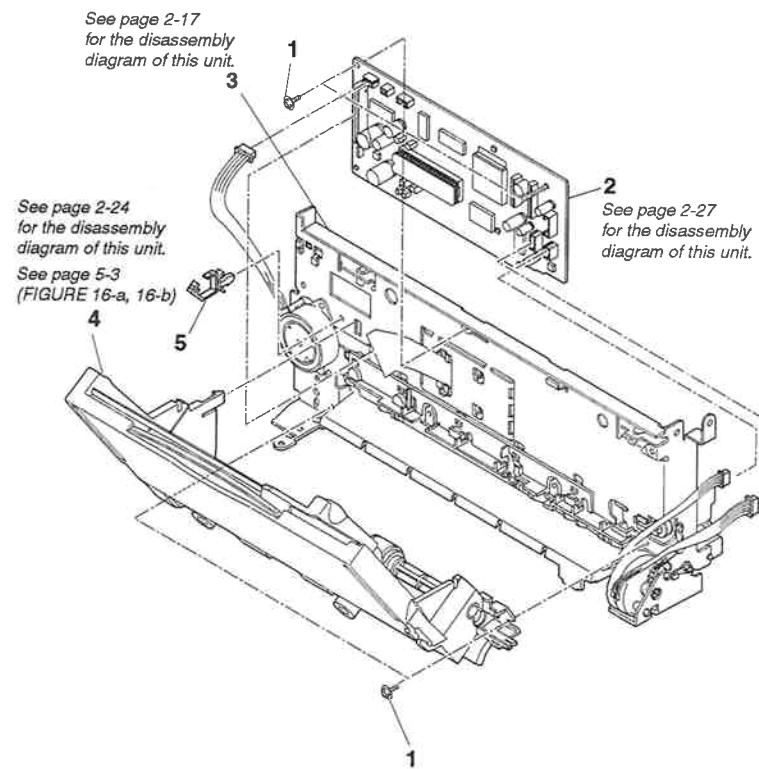


FIGURE & KEY No.	PART No.	R A N K	Q T Y	DESCRIPTION	REMARKS
16-1	XB6-7300-607		4	SCREW, TP, M3x6	
2	HG5-1547-000		1	PCNT BOARD ASSY	
3	HG5-1539-000		1	PRINT ASSY	
4	HG5-1248-000		1	AUTO SHEET FEEDER ASSY	
5	WT2-0317-000		1	CLIP, CABLE	

**FIGURE 17 CARRIAGE SECTION (1)**

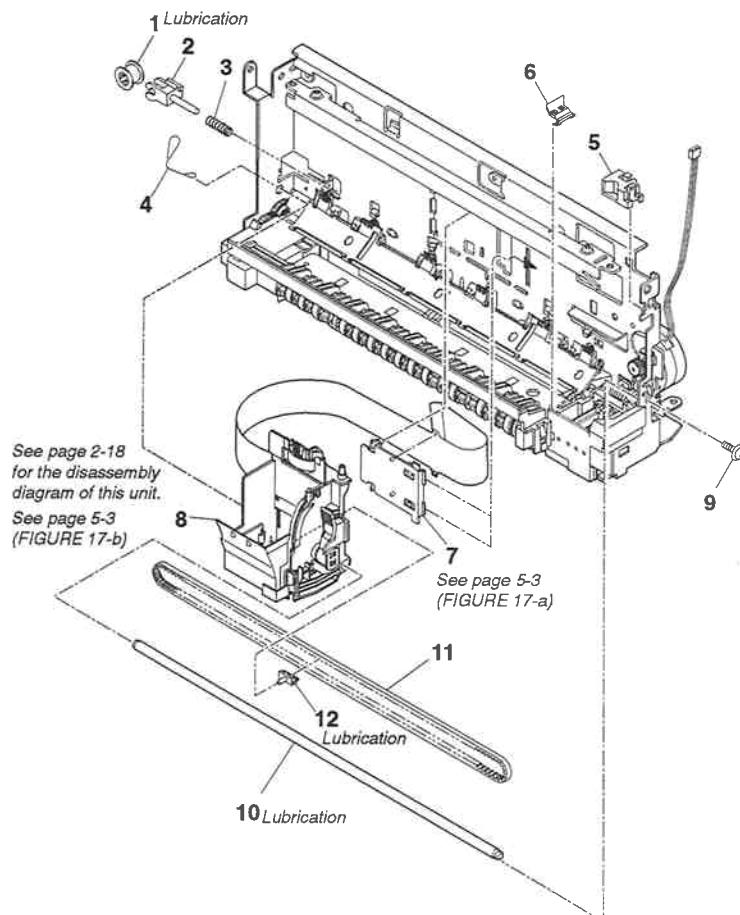


FIGURE & KEY No.	PART No.	RANK	Q T Y	DESCRIPTION	REMARKS
17 - 1	QB1-0501-020		1	ROLLER, IDLER	
2	QB1-0502-000		1	BRACKET, IDLER	
3	QB1-0503-000		1	SPRING, COIL	
4	QB1-1229-000		1	CLIP, SHAFT	
5	QB1-0972-000		1	GUIDE, CORNER	
6	QB1-1045-000		1	PLATE, PAPER GUIDE	
7	QB1-0497-020		1	HOLDER, CARRIAGE RIBBON CABLE	
8	HG5-1544-000		1	CARRIAGE ASS'Y	
9	XB5-6300-605		1	SCREW, TP, PH3X6	
10	QB1-1995-000	N	1	SHAFT, CARRIAGE	
11	QB1-0991-000		1	BELT, CARRIAGE	
12	QB1-2250-020		1	HOLDER, BELT	

FIGURE 18 CARRIAGE SECTION (2)

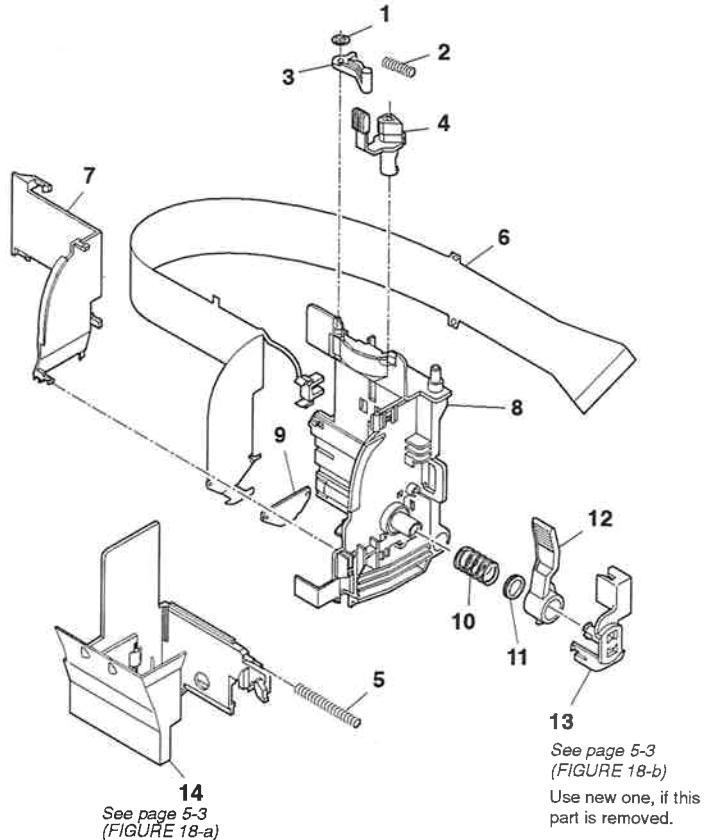


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
18-1	XA9-0613-000		1	NUT, SUS	
2	HS5-2070-020		1	SPRING, HOOK END COIL	
3	HB1-3282-000		1	ARM, CARRIAGE	
4	HB1-3281-000		1	LEVER, FORMS THICKNESS	
5	QB1-1282-000		1	SPRING, COIL	
6	HG5-1138-000		1	CARRIAGE RIBBON CABLE UNIT	
7	QB1-0984-000		1	GUIDE, RIBBON CABLE	
8	HB1-3280-000		1	BASE, CARRIAGE	
9	QB1-0985-000		1	PAD, CONTACT	
10	QB1-0987-020		1	SPRING, COIL	
11	QB1-1283-000		1	STOPPER	
12	HB1-3283-000		1	LEVER, LOCKING	
13	HB1-3284-000		1	COVER, LEVER	
14	HG5-1545-000		1	CARTRIDGE HOLDER UNIT	

## FIGURE 19 MOTORS

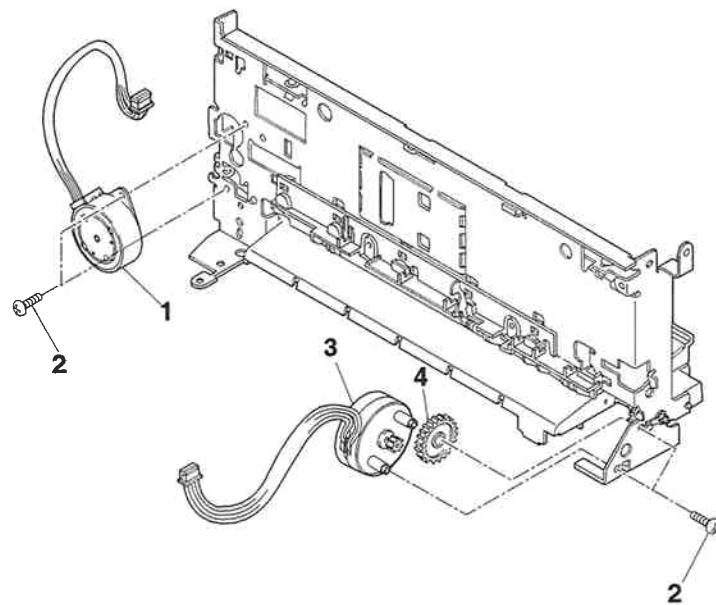


FIGURE 20 PAPER FEED SECTION (1)

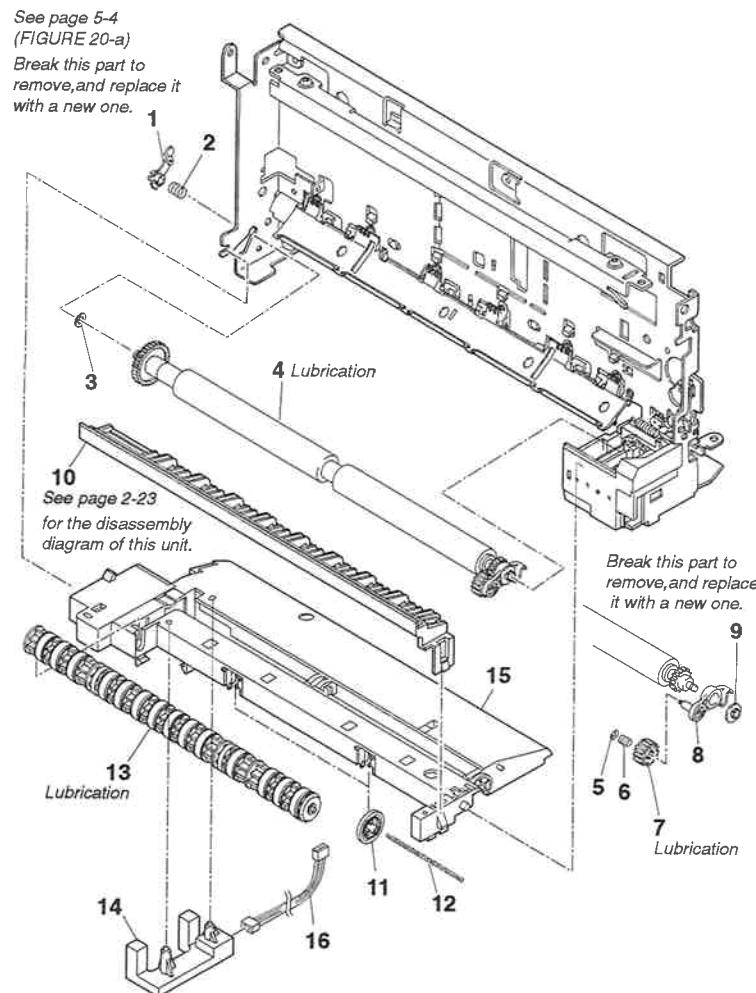


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
20 - 1	QB1-0417-000		1	BUSHING	
2	QB1-0423-000		1	SPRING, COIL	
3	QB1-0622-000		1	WASHER, PLAIN	
4	HG5-1130-000		1	PAPER FEED ROLLER ASS'Y	
5	XA9-0613-000		1	NUT, SUS	
6	QB1-0421-000		1	SPRING, COIL	
7	QB1-0425-000		1	GEAR, TRANSMISSION	
8	QB1-1275-000		1	ARM, TRANSMISSION	
9	QB1-0422-000		1	BUSHING	
10	HG5-1540-000		1	SPUR ASS'Y	
11	QB1-1965-000		2	ROLLER, TRANSMISSION	
12	QB1-1278-000		2	SHAFT, ROLLER	
13	HG5-1542-000		1	PAPER EJECT ROLLER UNIT	
14	HH7-2266-030		1	INK DETECTION UNIT	
15	HB1-2773-000	N	1	FRAME, PLATEN	
16	HH2-2729-020		1	CABLE WITH CONNECTOR, 4P	

**FIGURE 21 PAPER FEED SECTION (2) & PURGE UNIT**

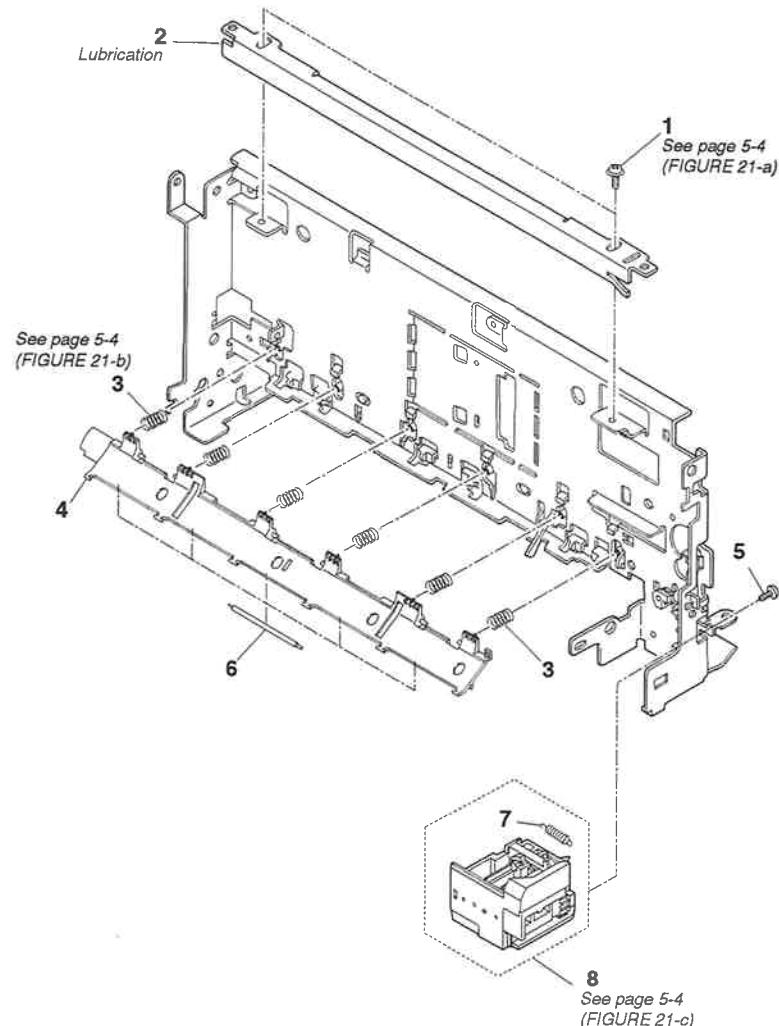


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
21- 1	XA9-0693-000		2	SCREW, BH(RED) M3X4	
2	HB1-3276-000	N	1	FRAME, CARRIAGE GUIDE	
3	QB1-0664-000		6	SPRING, COIL	
4	QB1-0409-000		1	PLATE, PRESSURE	
5	XB4-7300-609		1	SCREW, TAP, BINDING HEAD, M3X6	
6	QB1-0684-000		5	ROLLER, PRESSURE	
7	QB1-0467-000		1	SPRING, HOOK END COIL	
8	QG5-1090-050		1	PURGE UNIT	

FIGURE 22 PRINTER FRAME

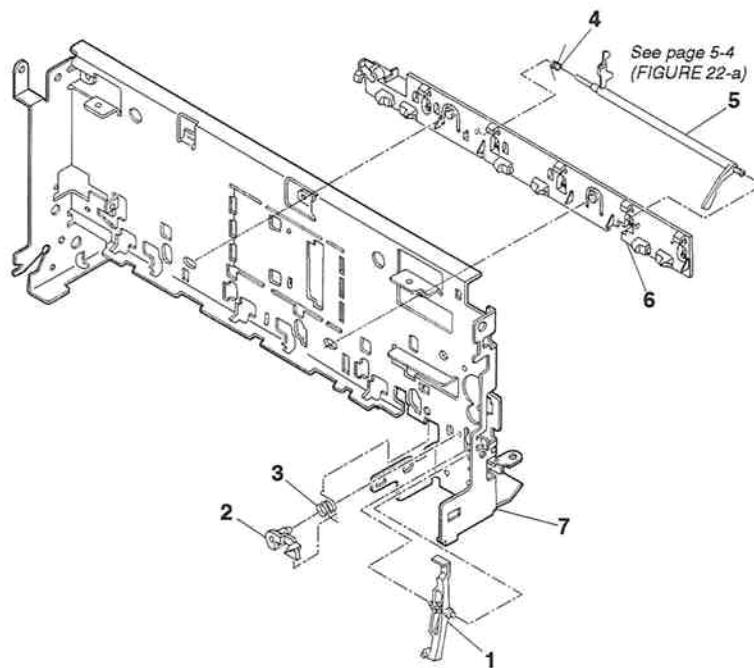


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
22 - 1	QB1-0974-000		1	ARM, SENSOR	
2	QB1-0414-000		1	HOOK, CARRIAGE	
3	QB1-0415-000		1	SPRING, TORSION	
4	QB1-0412-000		1	SPRING, TORSION	
5	QB1-0973-000		1	ARM, PAPER SENSOR	
6	QB1-2240-000		1	GUIDE, PRESSURE PLATE	
7	HB1-2775-040	N	1	FRAME, PRINTER	

**FIGURE 23 SPURS**

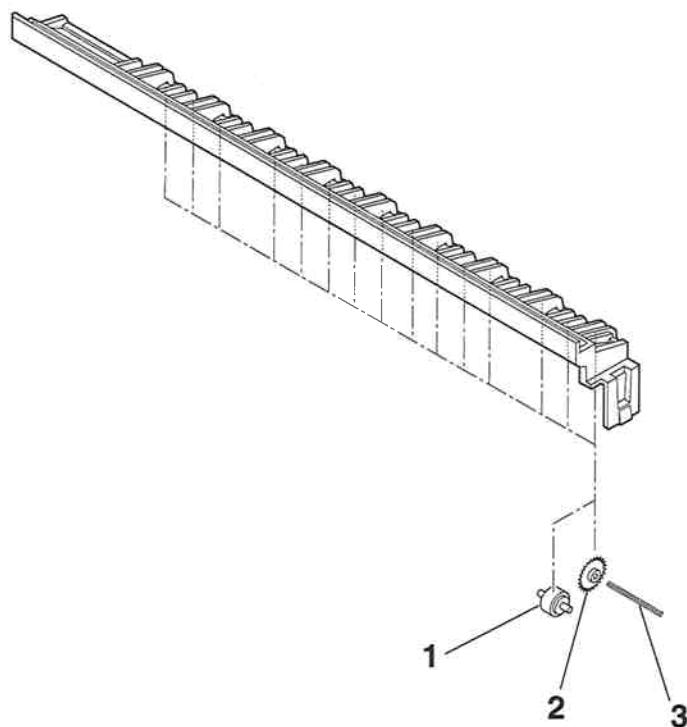


FIGURE 24 AUTO SHEET FEEDER (1)

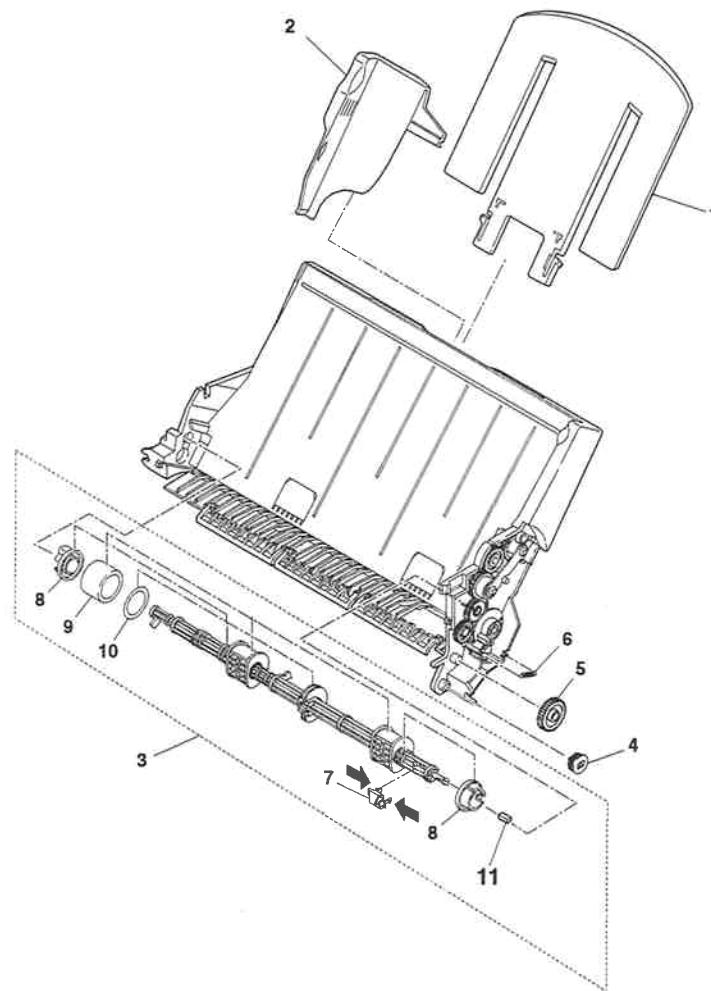


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
24 - 1	QB1-2217-000		1	SUPPORT, PAPER	
2	QB1-2921-000		1	GUIDE, PAPER	
3	QB5-0960-000		1	PICK-UP ROLLER UNIT	
4	QB1-0485-000		1	GEAR, TRANSMISSION	
5	QB1-0480-000		1	GEAR, TRANSMISSION	
6	QB1-2194-000		1	COIL SPRING HOOK END	
7	QB1-0433-000		1	PAPER, GUIDE	
8	QB1-2197-000		2	ROLLER, SLIP	
9	QB1-2198-000		2	RING, RUBBER, PICK-UP	
10	QB1-2924-000		1	RING, RUBBER	
11	HB1-1598-020		1	PLATE, COVER SUPPORT	

**FIGURE 25 AUTO SHEET FEEDER (2)**

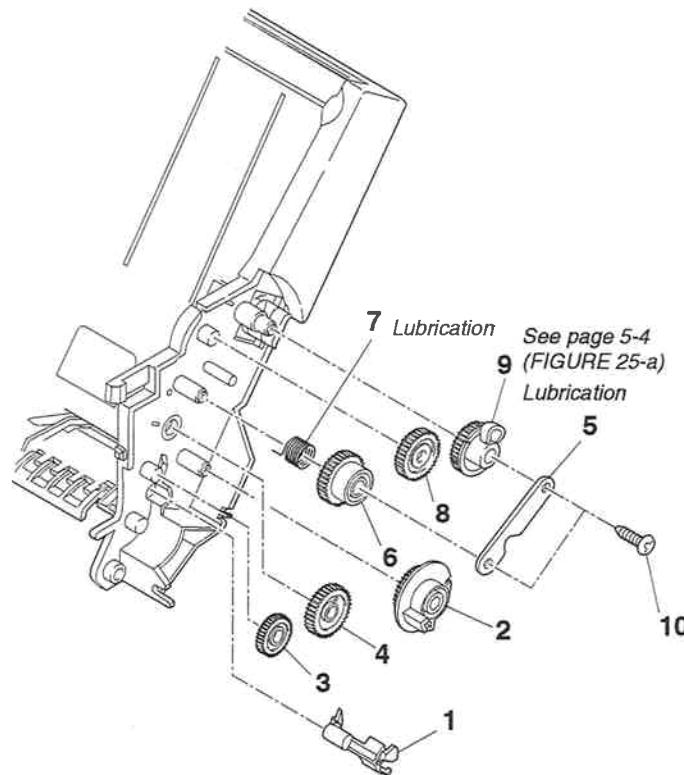


FIGURE & KEY No.	PART No.	R A N K	Q T Y	DESCRIPTION	REMARKS
25 - 1	QB1-2929-000		1	SEPARATOR, PAPER	
2	QB1-2192-000		1	GEAR, CONTROL	
3	QB1-0479-000		1	GEAR, TRANSMISSION	
4	QB1-2212-000		1	GEAR, PICK-UP ROLLER	
5	QB1-2195-000		1	PLATE, LEVER GUIDE	
6	QB1-0483-000		1	GEAR, ONE WAY CLUTCH	
7	QB1-0482-000		1	SPRING, ONE WAY CLUTCH	
8	QB1-0484-000		1	GEAR, TRANSMISSION	
9	QB1-2193-000		1	GEAR, CAM	
10	XB4-7300-609		2	SCREW, TAP, BINDING HEAD, M3X6	

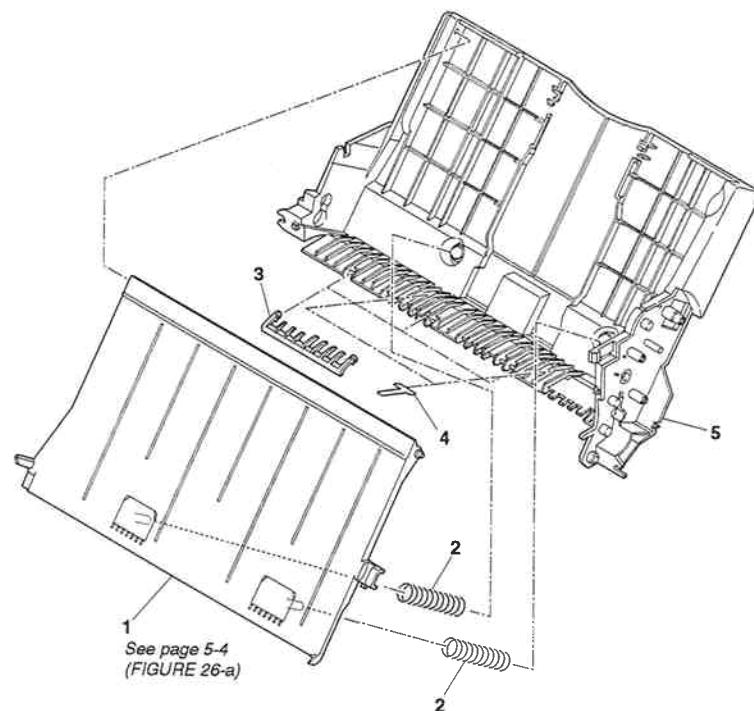
**FIGURE 26 AUTO SHEET FEEDER (3)**

FIGURE & KEY No.	PART No.	R A N K	Q T Y	DESCRIPTION	REMARKS
26 - 1	QF5-0351-000		1	PAPER LIFTING PLATE ASS'Y	
2	QB1-2931-000		2	SPRING, COIL	
3	QB1-2922-000		3	FLAPPER, MEDIA SUPPORT	
4	QB1-1950-000		2	SHEET, MEDIA STOPPER	
5	HB1-2907-000	N	1	FRAME, ASF	

**FIGURE 27 SCNT BOARD ASS'Y & PCNT BOARD ASS'Y**


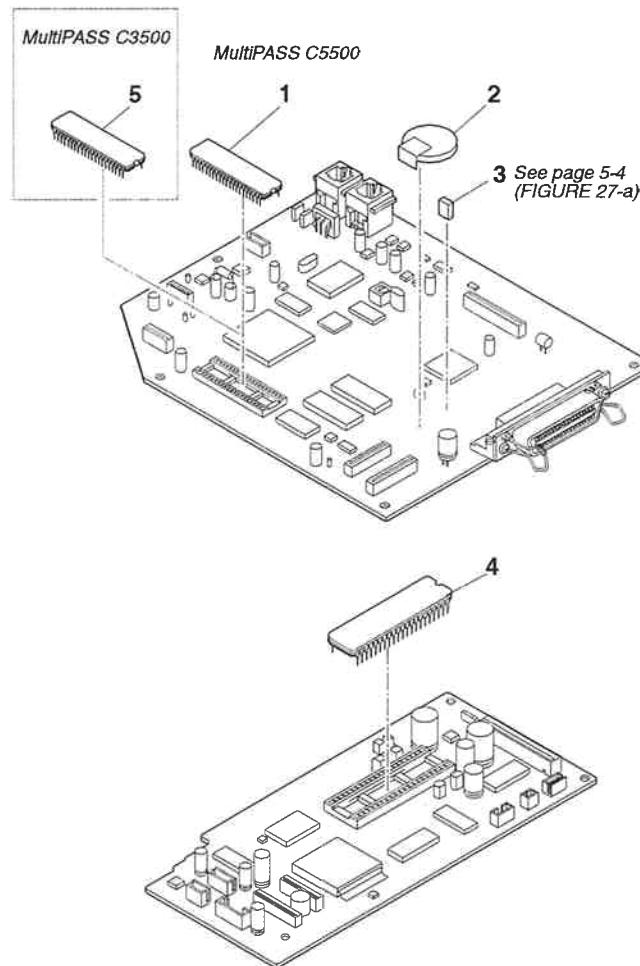


FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
27 - 1	HH4-3150-000		1	IC, TC538000AP-XXX MASK-ROM	for MultiPASS C5500
2	WK1-5047-000		1	LITHIUM BATTERY, CR2450HC22NC	
3	WS1-0172-000		1	PLUG, SHORT	
4	HH4-3153-000		1	IC, UPD23C8000XCZ-XXX MASK-ROM	
5	HH4-3158-000		1	IC, UPD23C8001EJCZ-XXX MASK-ROM	for MultiPASS C3500

### 3. TOOL

## FIGURE 28 TOOLS

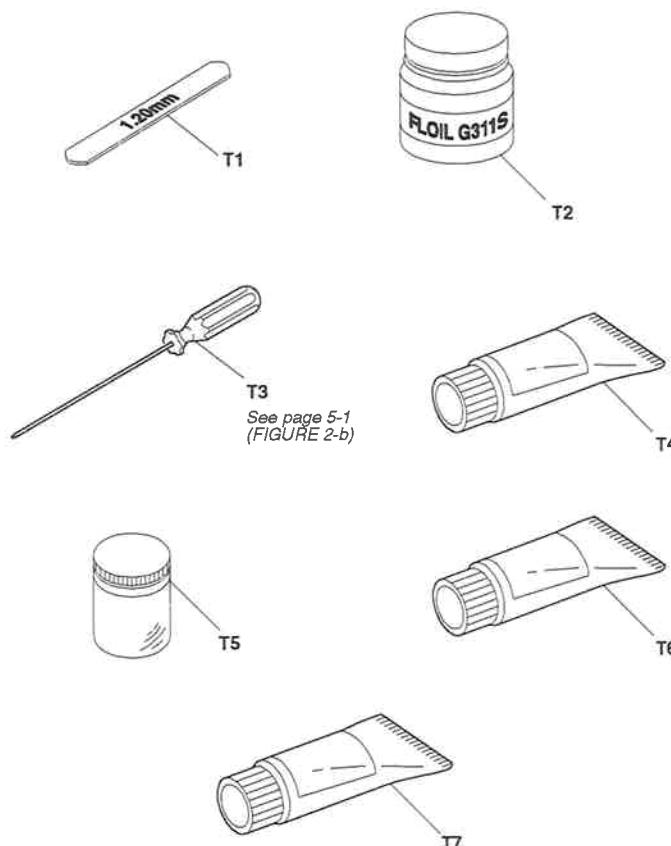


## 4. LUBRICATIONS

### 4.1 Locations

Some parts are lubricated with grease to ensure smooth operation and to increase conductivity. If lubricated parts are replaced or grease is removed, grease must be reapplied.



#### 4.1.1 PRINTER COVER ASS'Y

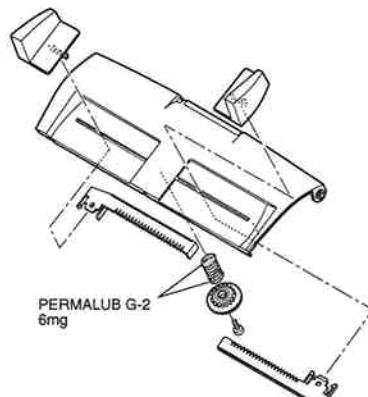

See Fig.2 for the assembly

#### 4.1.2 ADF, LOWER SECTION


##### MultiPASS C5500

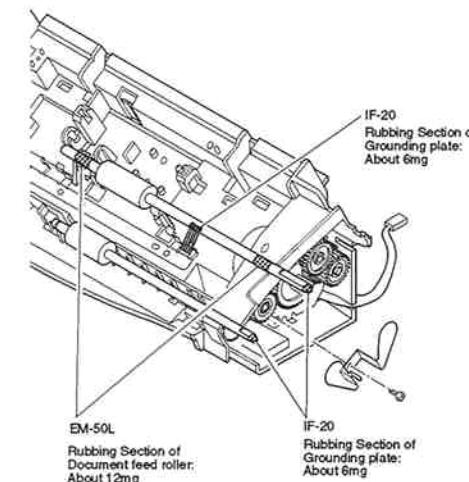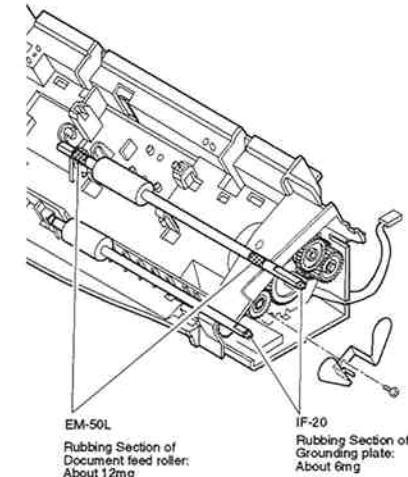

##### MultiPASS C3500


See Fig.14 and Fig 15 for the assembly

## 4.1.3 PRINT ASS'Y (1)

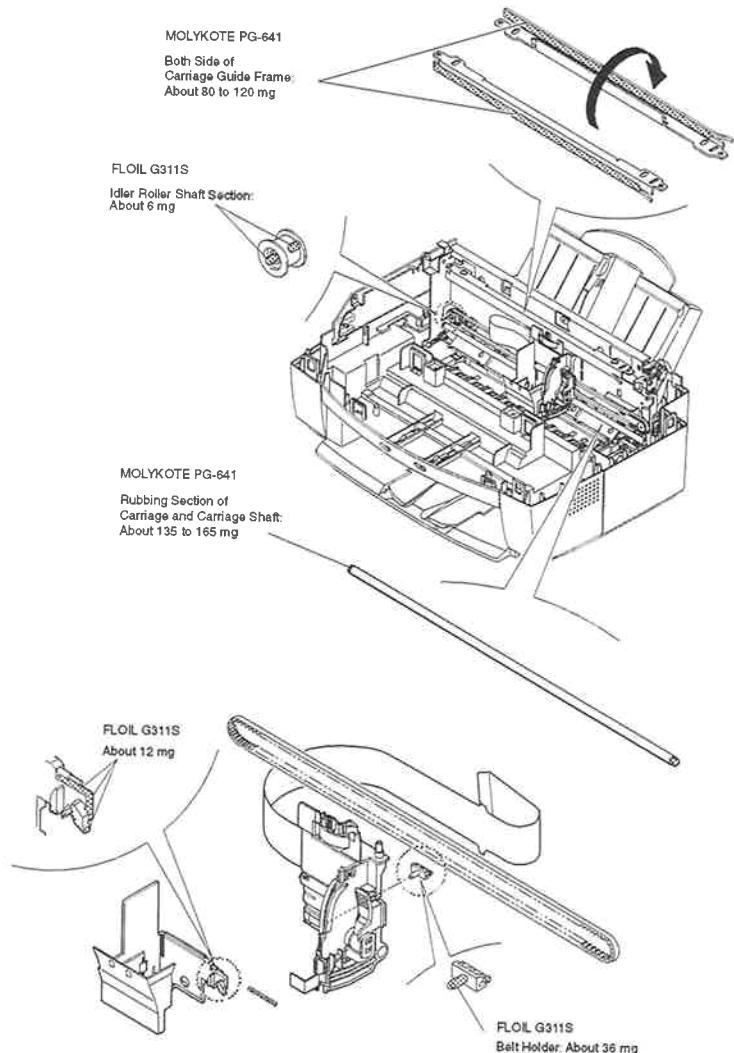

See Fig.17 & Fig.21 for the assembly

## 4.1.4 PRINT ASS'Y (2) &amp; AUTO SHEET FEEDER ASS'Y

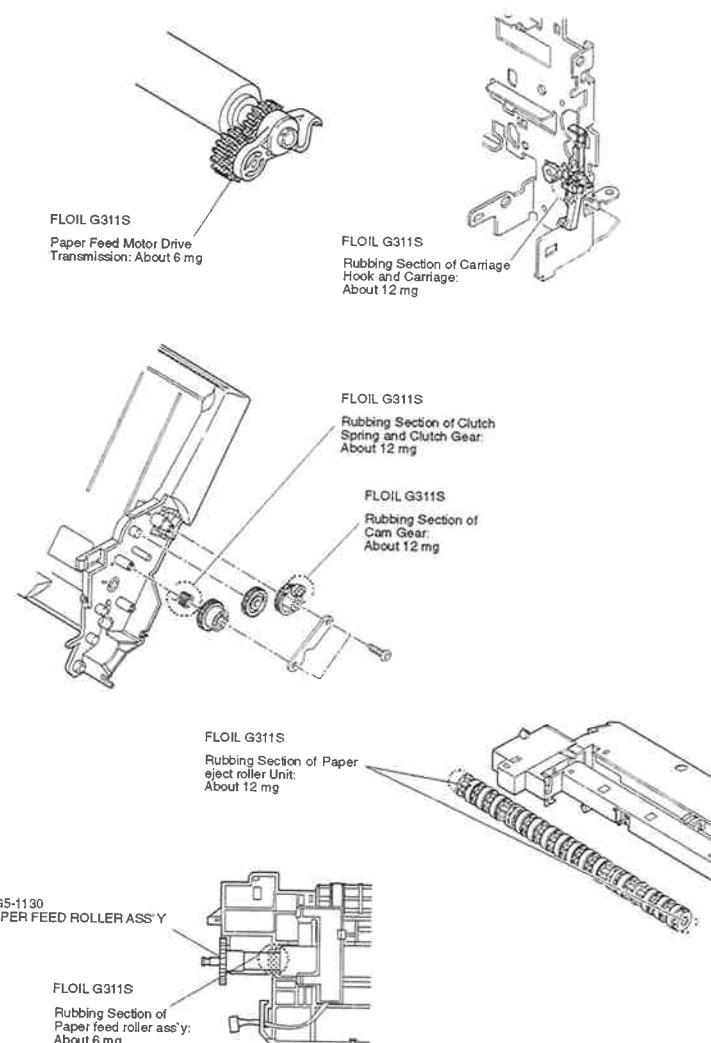

See Fig.20 & Fig.25 for the assembly

## 5. GUIDE TO REPLACEMENT

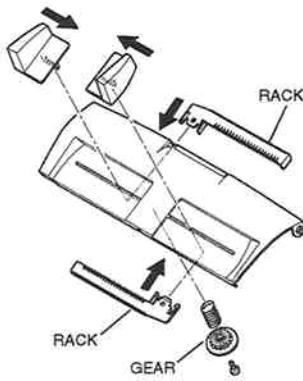
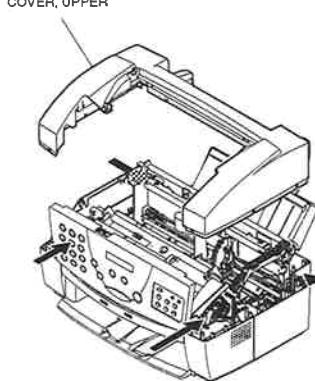
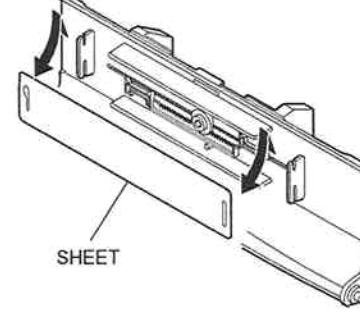
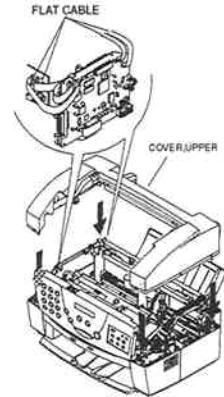
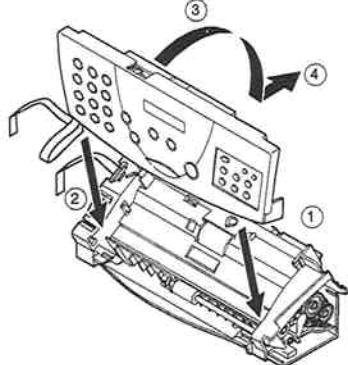
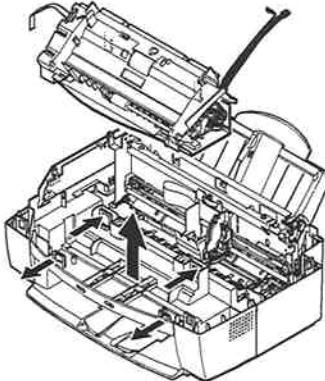
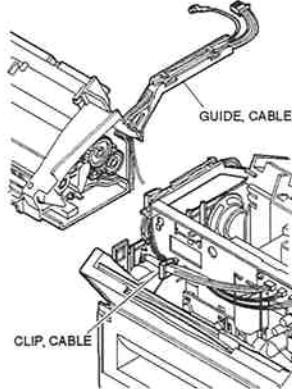
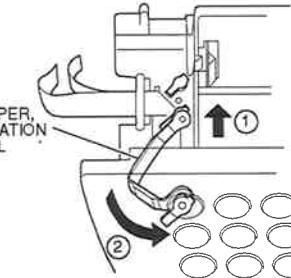
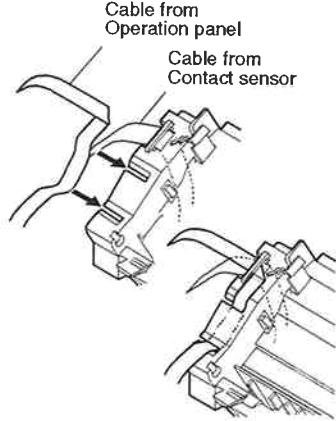
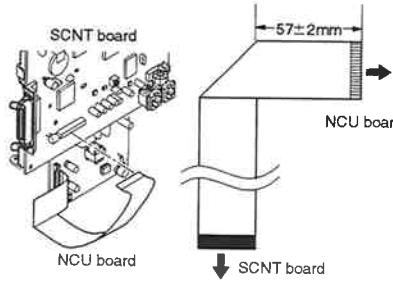
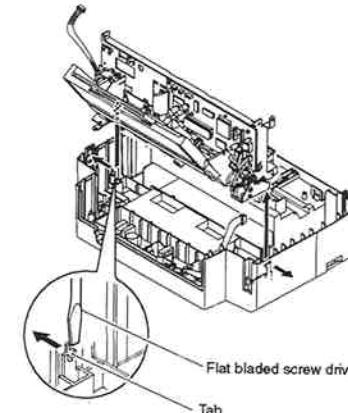
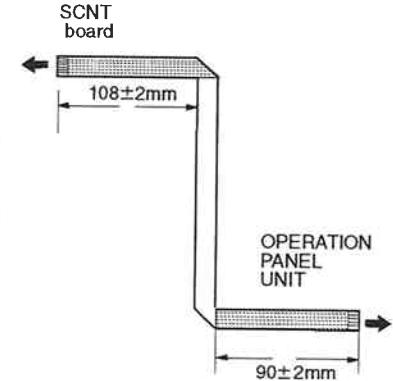
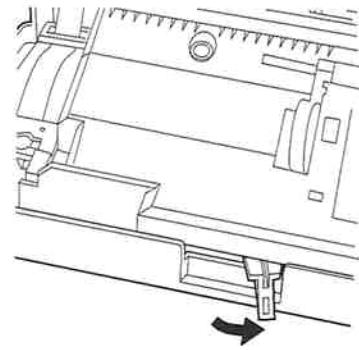
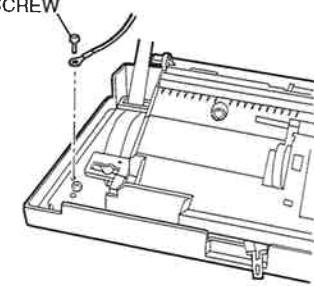
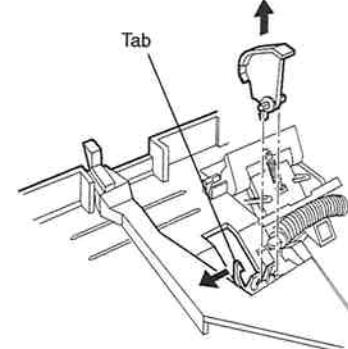
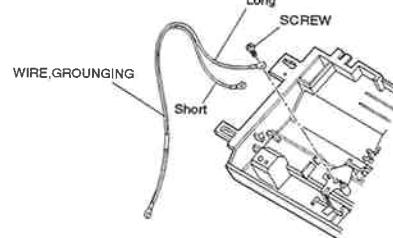
FIGURE 2-a	See Page 2-2	FIGURE 2-b	See Page 2-2	FIGURE 2-c	See Page 2-2	FIGURE 2-d	See Page 2-2
							
When attaching the rack, attach the gears with the sliders at their narrowest width.		When removing the COVER, UPPER, use tool HY9-0021 to prise loose the four tabs mentioned above. Be careful not to damage the surface around the whole.		To remove the sheet, slide it upward and free the upper end first.		When attaching the COVER, UPPER, be sure the cables connecting the PCNT board to the SCNT board and the operation panel to the SCNT board are not pinched in the gap.	
FIGURE 3-a	See Page 2-3	FIGURE 3-b	See Page 2-3	FIGURE 3-c	See Page 2-3	FIGURE 3-d	See Page 2-3
							
When attaching the OPERATION PANEL UNIT, attach as per the illustration below.		When removing the part at Key No.2, prise loose the four tabs in the illustration.		The wiring of this unit is as per the diagram.		Insert the STOPPER, OPERATION PANEL aligning it with the hole's shape, then twist to secure it. To remove the STOPPER, OPERATION PANEL, reverse the procedure.	

FIGURE 3-e	See Page 2-3	FIGURE 4-a, 5-a	See Page 2-4	FIGURE 6-a	See Page 2-5	FIGURE 8-a, 9-a	See Page 2-8
							
The wiring of this unit is as per the diagram.		NCU board and SCNT board connections are as per the diagram.		When removing the PRINTER and ASF assembly, prise loose the right and left tabs in the direction of the arrows.		Bend the FLAT CABLE, as shown in the diagram.	
FIGURE 8-b, 9-b	See Page 2-8	FIGURE 8-c, 9-c	See Page 2-8	FIGURE 10-a, 11-a	See Page 2-10	FIGURE 10-b, 11-b	See Page 2-10
							
When removing the OPERATION PANEL UNIT and UPPER GUIDE, set the LEVER, SWITCHING as shown in the figure.		Use a screw to attach the WIRE, GROUNDING as shown in the figure.		When detaching this part, free the tab before removing. Be careful not to break the tab.		Use a screw to secure the long end of the WIRE, GROUNDING.	

<b>FIGURE 13-a</b>	See Page 2-13	<b>FIGURE 13-b</b>	See Page 2-13	<b>FIGURE 16-a</b>	See Page 2-16	<b>FIGURE 16-b</b>	See Page 2-16
When removing the COVER, ADF, LOWER, free the three tabs shown in the figure, and pull from right to left.		When installing the gears, follow the procedure shown in the figure.		When removing the AUTO SHEET FEEDER ASS'Y release the tabs holding the printer chassis.		Put the cable and twist it once or twice to take up the slack.	
<b>FIGURE 17-a</b>	See Page 2-17	<b>FIGURE 17-b</b>	See Page 2-17	<b>FIGURE 18-a</b>	See Page 2-18	<b>FIGURE 18-b</b>	See Page 2-18
Check whether the carriage ribbon cable is sandwiched between the tabs in the illustration.		When attaching the CARRIAGE ASS'Y, position the ARM, CARRIAGE in front of the FRAME, GUIDE CARRIAGE.		To remove the holder, use a flat bladed screwdriver to raise up the slanted section in the direction of the arrows, and remove it from the carriage.		Remove by pushing in the direction of the arrows.	

FIGURE 20-a	See Page 2-20	FIGURE 21-a	See Page 2-21	FIGURE 21-b	See Page 2-21	FIGURE 21-c	See Page 2-21
Rotate the BUSHING in the direction of the arrow, and break the tab.		If these screws are loosened, head gap adjustment will be required.		When attaching the SPRING COIL, use tweezers to attach, as illustrated above.		In this product, the method for attaching the spur has been changed, so that the PURGE UNIT cannot be removed without dismantling the machine to this level. When replacing, the bushing, QB1-0417 will be broken, so have a new one ready.	
FIGURE 22-a	See Page 2-22	FIGURE 25-a	See Page 2-25	FIGURE 26-a	See Page 2-26	FIGURE 27-a	See Page 2-27
When removing the ARM, PAPER SENSOR, push in the direction of the arrow ①, and move in the direction of the arrow ②.		To put gears in the correct position, the marks must be in alignment.		When removing the PAPER LIFTING PLATE ASS'Y, insert a flat bladed screwdriver into location ①, and free the boss ② from the FRAME, ASF.		The SCNT BOARD ASS'Y does not have a PLUG, SHORT attached.	

## 6. NUMERICAL INDEX

PART NUMBER	FIGURE & KEY NO.	DESCRIPTION	PART NUMBER	FIGURE & KEY NO.	DESCRIPTION	PART NUMBER	FIGURE & KEY NO.	DESCRIPTION	PART NUMBER	FIGURE & KEY NO.	DESCRIPTION
CK-0551-020	28 - T6	LUBE, PERMALUB G NO 2	HB1-2886-000	2 - 1	GUIDE, DOCUMENT,LEFT	HH2-2522-000	5 - 3	WIRE, GROUNDING	HS5-6023-030	10 - 12	ROLLER, BACK UP
CK-0562-000	28 - T7	LUBE, MOLYKOTE P6-641 GREASE	HB1-2888-000	3 - 4	GUIDE, CABLE	HH2-2728-020	4 - 11	CABLE, FLAT	HS5-6042-000	11 - 12	ROLLER, DELIVERY, 2
CK-8006-000	28 - T5	ELECTRICITY GREASE (IF-20)	HB1-2890-000	14 - 4	FRAME, ADF, LOWER	HH2-2729-020	5 - 11		HY9-0007-000	10 - T4	LUBE, MOLYKOTE EM-60L
HB1-1598-020	24 - 11	PLATE, COVER SUPPORT	HB1-2891-020	15 - 4	COVER, ADF LOWER	HH2-2730-000	4 - 10	CABLE WITH CONNECTOR, 4P	HY9-0021-000	28 - T3	SCREWDRIVER, HEX HEAD (1.27MM)
HB1-1779-000	13 - 5	SPACER	HB1-2895-000	12 - 6	HOLDER, SEPARATION	HH2-2745-000	5 - 10	CABLE WITH CONNECTOR, 5P	QB1-0409-000	21 - 4	PLATE, PRESSURE
HB1-1784-000	10 - 20	BRUSH, STATIC DISCHARGE	HB1-2897-000	11 - 23	SHEET, LIGHT SHIELD	HH2-2746-000	10 - 16	CABLE WITH CONNECTOR, 3P	QB1-0412-000	22 - 4	SPRING, TORSION
HB1-2701-080	2 - 9	COVER, UPPER	HB1-2898-000	12 - 5	SHEET, SEPARATION	HH2-2747-000	11 - 16	CABLE WITH CONNECTOR, 3P	QB1-0414-000	22 - 2	HOOK, CARRIAGE
HB1-2712-000	7 - 2	ABSORBER, WASTE INK A	HB1-2907-000	26 - 5	FRAME, ASF	HH2-2748-000	10 - 15	CABLE WITH CONNECTOR, 3P	QB1-0415-000	22 - 3	SPRING, TORSION
HB1-2713-000	7 - 1	ABSORBER, WASTE INK B	HB1-3034-000	13 - 8	ROLLER, SEPARATION	HH2-2749-000	11 - 15		QB1-0417-000	20 - 1	BUSHING
HB1-2714-000	7 - 3	TRAY, RECORDING PAPER	HB1-3276-000	21 - 2	FRAME, CARRIAGE GUIDE	HH2-2755-000	14 - 14	WIRE, GROUNDING	QB1-0421-000	20 - 6	SPRING, COIL
HB1-2715-000	7 - 6	PLATE, PAPER SUPPORT (LEFT)	HB1-3280-000	18 - 8	BASE, CARRIAGE	HH2-2755-000	15 - 1	CABLE, FLAT	QB1-0422-000	20 - 9	BUSHING
HB1-2716-000	7 - 7	PLATE, PAPER SUPPORT (RIGHT)	HB1-3281-000	18 - 4	LEVER, FORMS THICKNESS	HH2-2810-000	9 - 4		QB1-0423-000	20 - 2	SPRING, COIL
HB1-2717-000	1 - 5	TRAY, PAPER EXTENTION	HB1-3282-000	18 - 3	ARM, CARRIAGE	HH2-2810-000	10 - 23	WIRE, GROUNDING	QB1-0425-000	20 - 7	GEAR, TRANSMISSION
HB1-2721-050	4 - 6	PLATE, CIRCUIT BOARD BASE	HB1-3283-000	18 - 12	LEVER, LOCKING	HH2-2824-000	11 - 24		QB1-0433-000	24 - 7	PAPER, GUIDE
	5 - 6		HB1-3284-000	18 - 13	COVER, LEVER	HH2-2824-000	14 - 4	MODULAR CORD, 2P	QB1-0467-000	21 - 7	SPRING, HOOK END COIL
HB1-2722-040	6 - 4	GUIDE, PAPER, MANUAL FEED	HB1-3286-000	1 - 2	TRAY, SUPPORT DOCUMENT	HH2-2824-000	15 - 1		QB1-0479-000	25 - 3	GEAR, TRANSMISSION
HB1-2723-000	1 - 3	TRAY, EXIT DOCUMENT	HB1-3287-000	2 - 7	SHEET, CARTRIDGE	HH2-2824-000	14 - 2	CABLE WITH CONNECTOR, 7P	QB1-0480-000	24 - 5	GEAR, TRANSMISSION
HB1-2725-000	8 - 3	FACE PLATE, ONE-TOUCH DIAL	HB1-3289-000	14 - 9	ROLLER, DOCUMENT EJECT	HH2-2833-000	4 - 8	CABLE, FLAT, 15P	QB1-0482-000	25 - 7	SPRING, ONE WAY CLUTCH
	9 - 3		HB1-3292-000	9 - 1	SHEET, OPERATION PANEL	HH2-2834-000	5 - 8		QB1-0483-000	25 - 6	GEAR, ONE WAY CLUTCH
HB1-2773-000	20 - 15	FRAME, PLATEN	HB1-3328-000	14 - 1	PLATE, GROUNDING	HH2-2834-000	4 - 7	CABLE, FLAT, 21P	QB1-0484-000	25 - 8	GEAR, TRANSMISSION
HB1-2775-040	22 - 7	FRAME, PRINTER	HB1-3329-000	8 - 1	SHEET, OPERATION PANEL	HH2-2834-000	5 - 7		QB1-0485-000	24 - 4	GEAR, TRANSMISSION
HB1-2781-000	4 - 1	COVER, NOU	HF5-0279-030	7 - 4	MAIN FRAME ASS'Y	HH3-5325-000	6 - 3	POWER SUPPLY UNIT	QB1-0497-020	17 - 7	HOLDER, CARRIAGE RIBBON CABLE
	5 - 1		HF5-0304-000	14 - 12	PLATE, SCANNER DRIVE	HH4-3150-000	27 - 1	IC, TC538000AP-XXX MASK-ROM	QB1-0500-000	19 - 4	GEAR, SLOW DOWN
HB1-2860-020	10 - 18	COVER, ADF, UPPER		15 - 12		HH4-3153-000	27 - 4	IC, UP2D3C8000XKCZ-XXX MASK-ROM	QB1-0501-020	17 - 1	ROLLER, IDLER
	11 - 18		HF5-0305-000	13 - 7	PANEL HOLDER UNIT	HH4-3158-000	27 - 5	IC, UP2D23C8001EJCZ-XXX MASK-ROM	QB1-0502-000	17 - 2	BRACKET, IDLER
HB1-2861-000	10 - 13	ARM, DETECTION (DES)	HF5-0399-000	10 - 22	WHITE SHEET UNIT	HH7-2172-000	3 - 5	SPAKER	QB1-0503-000	17 - 3	SPRING, COIL
	11 - 13			11 - 22		HH7-2266-030	20 - 14	INK DETECTION UNIT	QB1-0507-000	7 - 5	FOOT, PRINTER
HB1-2862-000	10 - 10	ARM, DETECTION (DS)	HG1-4268-040	4 - 4	NGU BOARD ASS'Y	HH7-2330-000	19 - 1	MOTOR, PULSE, CARRIAGE	QB1-0622-000	20 - 3	WASHER, PLAIN
	11 - 10			5 - 4		HH7-2331-000	14 - 10	MOTOR, DOCUMENT FEED	QB1-0664-000	21 - 3	SPRING, COIL
HB1-2863-000	10 - 6	STOPPER, DOCUMENT	HG5-1130-000	20 - 4	PAPER FEED ROLLER ASSY		15 - 10		QB1-0684-000	21 - 6	ROLLER, PRESSURE
	11 - 6		HG5-1138-000	18 - 6	CARRIAGE RIBBON CABLE UNIT	HS1-1063-000	13 - 9	BUSHING	QB1-0972-000	17 - 5	GUIDE, CORNER
HB1-2864-000	10 - 11	ROLLER, BACK UP	HG5-1239-000	10 - 9	SEPARATION GUIDE ASSY		14 - 8		QB1-0973-000	22 - 5	ARM, PAPER SENSOR
	11 - 11			11 - 9			15 - 8		QB1-0974-000	22 - 1	ARM, SENSOR
HB1-2865-000	10 - 7	SHAFT, BACK UP ROLLER	HG5-1244-000	10 - 17	DOCUMENT SENSOR ASS'Y	HS5-0230-000	13 - 11	GEAR, 44T/57T	QB1-0984-000	18 - 7	GUIDE, RIBBON CABLE
	11 - 7			11 - 17		HS5-0231-000	13 - 10	GEAR, 55T/19T	QB1-0985-000	18 - 9	PAD, CONTACT
HB1-2866-000	10 - 4	PLATE, PRESSURE	HG5-1245-000	10 - 14	DOCUMENT EDGE SENSOR ASS'Y	HS5-0232-000	13 - 12	GEAR, 55T	QB1-0987-020	18 - 10	SPRING, COIL
	11 - 4			11 - 14		HS5-0233-000	13 - 16	GEAR, 34T	QB1-0991-000	17 - 11	BELT, CARRIAGE
HB1-2867-000	3 - 6	STOPPER, OPERATION PANEL	HG5-1248-000	16 - 4	AUTO SHEET FEEDER ASSY	HS5-0234-000	13 - 17	GEAR, 42T	QB1-1045-000	17 - 6	PLATE, PAPER GUIDE
HB1-2871-030	12 - 3	PLATE, PRESSURE	HG5-1539-000	16 - 3	PRINT ASS'Y	HS5-0235-000	14 - 5	GEAR, 19T	QB1-1229-000	17 - 4	CLIP, SHAFT
HB1-2872-000	12 - 4	PAD, SEPARATION	HG5-1540-000	20 - 10	SPUR ASS'Y		15 - 5		QB1-1275-000	20 - 8	ARM, TRANSMISSION
HB1-2873-030	12 - 2	HOLDER, SEPARATION GUIDE	HG5-1542-000	20 - 13	PAPER EJECT ROLLER UNIT	HS5-0236-000	13 - 15	GEAR, 38T/24T	QB1-1278-000	20 - 12	SHAFT, ROLLER
HB1-2874-000	10 - 1	LEVER, SWITCHING	HG5-1544-000	17 - 8	CARRIAGE ASS'Y	HS5-0237-000	13 - 3	GEAR, 32T	QB1-1282-000	18 - 5	SPRING, COIL
	11 - 1		HG5-1545-000	18 - 14	CARTRIDGE HOLDER UNIT	HS5-0238-000	2 - 6	GEAR, Z16	QB1-1283-000	18 - 11	STOPPER
HB1-2875-000	10 - 19	SHEET, DOCUMENT STOP	HG5-1546-000	5 - 5	SCNT BOARD ASSY	HS5-2027-000	13 - 4	SPRING, CLUCH	QB1-1950-000	26 - 4	SPRINT, MEDIA STOPPER
	11 - 19		HG5-1547-000	16 - 2	PCNT BOARD ASSY	HS5-2070-020	18 - 2	SPRING, HOOK END COIL	QB1-1952-000	23 - 2	SPUR
HB1-2878-000	14 - 6	ROLLER, DOCUMENT FEED	HG5-1554-000	15 - 3	CONTACT SENSOR UNIT	HS5-2079-000	12 - 1	SPRING, SEPARATION GUIDE	QB1-1965-000	20 - 11	ROLLER, TRANSMISSION
	15 - 6		HG5-1556-000	9 - 2	OPERATION PANEL ASS'Y	HS5-2129-000	10 - 21	SPRING, WHITE SHEET	QB1-1995-000	17 - 10	SHAFT, CARRIAGE
HB1-2881-000	13 - 2	SHAFT, SEPARATION ROLLER	HG5-1588-000	4 - 5	SCNT BOARD ASSY		11 - 21		QB1-2192-000	25 - 2	GEAR, CONTROL
HB1-2882-000	13 - 13	PLATE, GROUNDING	HG5-1592-000	14 - 3	CONNECT SENSOR ASS'Y	HS5-2130-000	2 - 5	SPRING, SLIDER	QB1-2193-000	25 - 9	GEAR, CAM
HB1-2883-000	2 - 4	SLIDER, RACK	HG5-1594-000	8 - 2	OPERATION PANEL ASS'Y	HS5-2131-000	10 - 8	SPRING	QB1-2194-000	24 - 6	COIL SPRING HOOK END
HB1-2884-000	2 - 3	COVER, PRINTER	HH2-2522-000	4 - 3	WIRE, GROUNDING		11 - 8		QB1-2195-000	25 - 5	PLATE, LEVER GUIDE

PART NUMBER	FIGURE & KEY NO.	DESCRIPTION	PART NUMBER	FIGURE & KEY NO.	DESCRIPTION
QB1-2197-000	24 - 8	ROLLER, SLIP		5 - 9	
QB1-2198-000	24 - 9	RING, RUBBER, PICK-UP		16 - 1	
QB1-2212-000	25 - 4	GEAR, PICK-UP ROLLER		14 - 7	
QB1-2213-000	1 - 7	LID, CONTAINER		15 - 7	
QB1-2217-000	24 - 1	SUPPORT, PAPER			
QB1-2240-000	22 - 6	GUIDE, PRESSURE PLATE			
QB1-2250-020	17 - 12	HOLDER, BELT			
QB1-2921-000	24 - 2	GUIDE, PAPER			
QB1-2922-000	26 - 3	FLAPPER, MEDIA SUPPORT			
QB1-2924-000	24 - 10	RING, RUBBER			
QB1-2929-000	25 - 1	SEPARATOR, PAPER			
QB1-2931-000	26 - 2	SPRING, COIL			
QB1-3044-000	23 - 3	SPUR SHAFT			
QB1-3143-000	7 - 8	SCHEET, SPACER			
QF5-0351-000	26 - 1	PAPER LIFTING PLATE ASSY			
QG5-0368-000	23 - 1	CLEANER ROLLER UNIT			
QG5-0960-000	24 - 3	PICK-UP ROLLER UNIT			
QG5-1090-050	21 - 8	PURGE UNIT			
QH4-4222-000	19 - 3	MOTOR, PAPER FEED			
QY9-0016-000	28 - T1	GAUGE, GAP (1.2MM)			
TKC-0953-000	28 - T2	GREASE, FLOIL G3115 (20GS)			
WK1-5047-000	27 - 2	LITHIUM BATTERY, CR2450HC22NC			
WS1-0172-000	27 - 3	PLUG, SHORT			
WT2-0317-000	16 - 5	CLIP, CABLE			
WT3-5021-000	1 - 1	POWER SUPPLY CORD, 120V			
XA9-0476-000	2 - 8	SCREW, TP M3X8			
	10 - 2				
	11 - 2				
XA9-0613-000	18 - 1	NUT, SUS			
	20 - 5				
XA9-0693-000	21 - 1	SCREW, BH(RED) M3X4			
XB1-2300-407	13 - 14	SCREW, BH3X4 (S)			
	14 - 13				
	15 - 13				
	19 - 2				
XB1-2300-607	4 - 2	SCREW, BH3X6(S)			
	5 - 2				
	8 - 7				
	9 - 7				
XB2-7300-607	3 - 3	SCREW, M3X6			
XB4-7300-607	14 - 15	SCREW, TAP TIGHT, BINDING HEAD			
XB4-7300-609	21 - 5	SCREW, TAP, BINDING HEAD, M3X6			
	25 - 10				
XB4-7300-807	6 - 2	SCREW, TAP TIGHT, BINDING HEAD			
	8 - 6				
	9 - 6				
	10 - 3				
	11 - 3				
	13 - 6				
	14 - 11				
	15 - 11				
XB5-6300-605	17 - 9	SCREW, TP, PH3X6			
XB6-7300-607	4 - 9	SCREW, TP, M3x6			

0798 SE 1.00-0



Printed on paper that  
contains 60% reused paper.

# Canon



**HY8-39AH-000**

Multipass C3500 / C5500 PARTS CATALOG



\*00001\*

Q'TY 1

PRINTED IN JAPAN (IMPRIME AU JAPON)

0798 SE 1.00-0

CANON INC.