

SERVICE INFORMATION

2000

DANAMETERS

2100

RACAL-DANA Instruments Inc.

—

PROPRIETARY NOTICE

SERVICE INFORMATION

2000
DANAMETERS
2100

RACAL-DANA INSTRUMENTS INC.
18912 Von Karman, P.O. Box C-19541
Irvine, California 92713, U.S.A.
Telephone: (714) 833-1234
Twx: 910-595-1136, Telex: 67-8341

RACAL

RACAL-DANA INSTRUMENTS LTD.
Duke Street
Windsor, Berkshire SL4 1SB, England
Telephone: Windsor (07535) 69811
Telex: 847013

RACAL-DANA INSTRUMENTS S.A.
91 Route de Gardes
92 Meudon-Bellevue, France
Telephone: 027-7575
Telex: 842 200207

PUBLICATION DATE: JANUARY 1979

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Racal-Dana Instruments, Inc., and shall not, without express written permission of Racal-Dana Instruments, Inc., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal-Dana Instruments, Inc. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal-Dana Instruments, Inc.

FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the WARNING and CAUTION notices contained therein.

The equipment described in this manual contains voltages hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC Mains through an autotransformer (such as a Variac or equivalent) ensure that the instrument common connector is connected to the ground (earth) connection of the power mains.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adapter.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.

Before operating this instrument.

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation section.
2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.
3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

TABLE OF CONTENTS

Section	Title	Page
1	DANAMETER DESIGN CONCEPTS	1-1
1.1	The Meter	1-1
1.2	The LCD Display	1-1
1.3	The Digital Chip (IC)	1-1
1.4	The Analog Chip (IC)	1-1
1.5	The Switch (Function/Range)	1-1
2	THEORY OF OPERATION	2-1
2.1	The Analog Chip Circuits	2-1
2.2	Ohm Conversion Technique	2-1
2.3	AC Conversion Technique	2-1
2.4	DC Current Conversion Technique	2-1
2.5	The Reference Circuits	2-1
3	DESCRIPTION & CONFIGURATION	3-1
3.1	Introduction	3-1
3.2	Circuit Board Identification, Model 2000 (A)	3-1
3.3	Circuit Board Identification, Model 2100 (A)	3-1
3.4	Production Characteristics	3-1
3.5	Liquid Crystal Display	3-3
3.6	Display Mounting	3-3
3.7	Danameter Switch Profile (2000)	3-5
3.8	Danameter Switch Profile (2100)	3-6
3.9	Danameter Notes And Precautions	3-7
4	BASIC OPERATION CONCEPTS	4-1
4.1	Power And Current Consumption	4-1
4.2	Clock Circuit	4-1
4.3	Negative Power Supply	4-3
5	TIMING & CONTROL SIGNALS	5-1
5.1	General Description	5-1
5.2	Signal Integrate (3K)	5-1
5.3	Reference Integrate (IR)	5-1
5.4	Reference Integration Capacitor (CI)	5-1
5.5	Zero Crossing (ND)	5-1
5.6	Waveforms For Timing And Control	5-1
5.7	Test Instrument Measurement Considerations	5-1
6	TROUBLESHOOTING	6-1
6.1	Description	6-1
6.2	Calibration Check Definition	6-1
6.3	Switch Closure Chart Definitions	6-1
6.4	DC Voltage And Waveform Chart	6-1
6.5	Functional Schematic Diagram	6-1
6.6	Assembly Drawings	6-1

TABLE OF CONTENTS continued

Section	Title	Page
7	CONFIGURATION HISTORY & PARTS LIST	7-1
8	APPENDIX	8-1
8.1	Field Service Bulletin No. 20-1112	8-3
8.2	Field Service Bulletin No. 20-1113	8-7
8.3	Procedures To Replace Danameter Bent/Broken Contacts	8-9
8.4	Rework Instructions	8-11
8.5	Field Service Bulletin No. 20-11141	8-15

LIST OF ILLUSTRATIONS

Figure	Title	Page
2.1	Analog Chip Block Diagram	2-2
2.2	(Isolator) Signal Conditioner/Voltage-to-Current Converter Functional Block Diagram	2-3
2.3	Ohms Converter Functional Block Diagram	2-3
2.4	AC Converter Functional Block Diagram	2-4
2.5	DC Current Functional Block Diagram	2-5
3.1	2000 (A) and 2100 (A) Danameter Revision History Chart	3-2
3.2	Revision B&C LCD Connector Detail Drawing	3-3
3.3	LCD Retainer Connector Detail Drawing	3-4
3.4	Revision E LCD Connector Detail Drawing	3-4
3.5	2000 Revision B&C Switch Profile Drawing	3-5
3.6	2000 (A) Revision E Switch Profile Drawing	3-6
3.7	2100 (A) Switch Profile Drawing	3-6
4.1	Danameter Battery Interconnection Diagram	4-1
4.2	Danameter Current Test Set-up Diagram	4-1
4.3	Digital Clock Circuit	4-2
4.4	Clock Waveforms	4-3
4.5	Voltage Diameter Circuit	4-3
4.6	Negative Power Supply Waveforms	4-4
5.1	Danameter Control Signals	5-1
5.2	3K, Signal Integrate	5-2
5.3	IR, Reference Integrate	5-2
5.4	CI, Reference Integrate Capacitor	5-3
5.5	ND, Null Detect	5-3
5.6	True Time Relationship	5-4
6.1	Danameter Functional Schematic 2000 Danameter Rev. B & C	6-7
6.2	2000 Danameter (Rev. B & C) Assembly Drawing (Component Side)	6-8
6.3	2000 Danameter (Rev. B & C) Assembly Drawing (Circuit Side)	6-9
6.4	2000 Danameter (Rev. B & C) Switch Outline	6-10
6.5	Danameter Functional Schematic 2000 (A) Danameter Rev. E to T	6-19
6.6	2000 (A) Danameter (Rev. E to L) Assembly Drawing (Component Side)	6-20
6.7	2000 (A) Danameter (Rev. E to L) Assembly Drawing (Circuit Side)	6-21
6.8	2000 (A) Danameter (Rev. E to L) Switch Outline	6-22
6.9	Danameter Functional Schematic 2100 (A) Danameter Rev. A to H	6-29
6.10	2100 (A) Danameter (All Rev's) Assembly Drawing (Component Side)	6-30
6.11	2100 (A) Danameter (All Rev's) Assembly Drawing (Circuit Side)	6-31
6.12	2100 (A) Danameter (All Rev's) Switch Outline	6-32

LIST OF TABLES

Table	Title	Page
4.1	Battery Voltage Vs. LCD Readout	4-2
6.1	2000 Calibration Check (Rev. B&C)	6-2
6.2	Switch Closure Chart - Danameter Model 2000 (Rev. B & C)	6-3
6.3	Danameter 2000 (Rev. B & C) Reference Cell	6-4
6.4	2000 (A) Calibration Check (Rev. E to L)	6-11
6.5	Danameter Model 2000 (Rev. E to L)	6-12
6.6	Danameter 2000 (Rev. E to L) Reference Cell	6-13
6.7	Danameter 2000 (Rev. E to L) Reference Zener	6-14
6.8	2100 (A) Calibration Check (All Rev's)	6-23
6.9	Danameter Model 2100	6-24
6.10	Danameter 2100 (Rev. A to H)	6-25
7.1	2000 Parts List (Rev. to E)	7-2
7.2	2000 Parts List (Rev. to L)	7-5
7.3	2100 Parts List (Rev. to H)	7-8

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
84

SECTION 1

DANAMETER DESIGN CONCEPTS

1.1 THE METER.

1.1.1 The introduction of the Danameter (Model 2000) in January 1974 was one of the electronic test equipment industries first multimeters to offer a low-cost, low-power, portable, rugged 3 1/2 digit meter. The use of LSI (large scale integration) analog and digital IC's, a digital LCD (liquid crystal display), a single Function (Range) switch, and a minimal number of discrete components/hardware produced a multimeter with accuracy specifications that weren't available in meters using the conventional meter movements. Because of the low-power requirement, a simple 9 volt transistor battery is capable of providing operating power for 1 year; which can also be considered the calibration interval, under normal operating conditions.

1.2 THE LCD DISPLAY.

1.2.1 One of the most important factors in the Danameter design is the display. The field effect LCD, after being developed to produce long-term operating reliability was utilized because of its low-power consumption; when the year-long battery life goal was considered.

1.3 THE DIGITAL CHIP (IC).

1.3.1 Utilizing high-density C-MOS circuitry, the up-counting decade dividers are driven without interruption by the internal 8 to 10 KHz clock to ensure that timing signals for the dual-slope, analog-to-digital integrator on the analog chip are available continuously from the previous decade divider.

1.3.2 Since the dividers never stop counting, an array of latches was incorporated to extract the BCD decade count "on-the-fly" when the null detect strobe signal is received from the analog chip's control circuitry. The data, stored in the latches, is sent to an array of Seven segment decoders and to AC drivers for the LCD display.

1.4 THE ANALOG CHIP (IC).

1.4.1 With the 1 year, 9V battery consideration the total current drain was limited to 100 μ A to maintain the following parameters:

1.4.2 High resolution and sensitivity: Resolution to better than 1 part in 2000 (3 1/2 digits). Sensitivity must be 100 μ V per digit to meet the 200 mV (maximum voltage drop on the current ranges) specification.

1.4.3 Auto Polarity: The IC must accept inputs of either polarity, determine the polarity, and generate an appropriate signal for the LCD display.

1.4.4 High input impedance and low bias current: A basic input impedance $> 1000M\Omega$ and a bias current error of < 100 pA were specified to eliminate loading errors on the $10M\Omega$ input divider.

1.4.5 Noise and overload immunity: The IC incorporates an active filter to reduce input noise without significantly affecting reading speed. The IC includes protective clamp circuitry to prevent damage from overloads and at the same time, detect and display overloads.

1.4.6 The analog chip design was based on the integration of low current NPN/PNP transistors, SCHOTTKY diodes, and thin-film resistors to keep the chip size small enough to produce high yields at low cost.

1.5 THE SWITCH (FUNCTION/RANGE).

1.5.1 The switch utilizes the etched traces on the printed circuit board as contact surfaces for spring contacts mounted and secured with a rivet/solder termination. The traces interconnect inputs, IC's, peripheral discrete components, and the LCD for the indicated Function and range selections. The switch detenting mechanism is fixed into the front portion of the meter case. The switch configures the meter for all ranges per function by opening and closing the PCB mounted spring contacts, actuated by the contact surfaces on the switch cam lobes.

SECTION 2

THEORY OF OPERATION

2.1 THE ANALOG CHIP CIRCUITS.

2.1.1 The block diagram in Figure 2.1 depicts the basic elements contained in the Analog LSI chip. The circuit shown in Figure 2.2 represents the 2-pole active filter/bootstrap and the voltage-to-current converter blocks of Figure 2.1. The configuration of U1 (signal or Hi isolator amp), U2 (Lo isolator amp), U3 (bootstrap amp) and the R-C discrete values (R1, C1, R2, C2) form a 2-pole low pass active filter to provide 50 dB of normal mode noise rejection @ 60 Hz, increasing 12 dB/octave. The output of U1 and U2 drive the voltage-to-current converter for the integration process.

2.1.2 For positive input voltages, Q1 and D2 conduct, due to the negative feedback around U1 (via Q1 or D1) causing a current nearly equal to E_{in}/R_g to flow in the collector of Q1, forcing the voltage e_a to follow E_{in} . Feedback around U2 (via Q2 or D2) causes the voltage at e_b to remain at a zero DC potential. No current flows through D1 or Q2 because they are reversed biased. Negative voltage inputs cause Q1 and D2 to turn off when collector current of E_{in}/R_g flows through Q2 and D1.

2.1.3 Because the voltage-to-current transfer is controlled only by R_g , the need for positive and negative input gain adjustments is eliminated. Voltage offsets of both op amps may be compensated with a single adjustment.

2.2 OHM CONVERSION TECHNIQUE.

2.2.1 The ratiometric ohms converter in Figure 2.3 performs by passing a constant current through, and measuring the resultant voltage drop, across the unknown resistance. The measuring current is generated by maintaining a constant voltage across a current-source resistor associated with each range. A precise $1\text{ }\mu\text{A}$ constant current source on the chip is established by the 1 volt drop across R6; which, when buffered by the ohms op amp, develops a constant 1 volt drop for each of the current source resistors, R2 to R5. The circuit accuracy is limited only by the current scaling resistors and is independent of the reference voltage. The measuring current is constant over each of the resistance ranges but is not the same for each range, as current and resistance are inversely proportional (see Table 2.1). The gain resistor for the 200 and 20K Ω ranges is decreased from 50K Ω to 5K Ω to increase the current demand from the integrator by the (isolator) voltage-to-current converter for a full scale display.

2.2.2 The filter component of C1 uses a .03 μf and .001 μf in parallel for all ohms ranges; except the 200M Ω

Range	Current Resistor	Measurement Current	Rx Voltage Drop (FS)	Isolator Gain
200 Ω	1K Ω	1mA	0.2V	X10
20K Ω	100K Ω	10 μA	0.2V	X10
2M Ω	1M Ω	1 μA	2.0V	X1
200M Ω	100M Ω	10 μA	2.0V	X1

range, which uses only the .001 μf to maintain an acceptable response speed for the meter reading.

2.3 AC CONVERSION TECHNIQUE.

2.3.1 When the AC FUNCTION is selected, a switch closure enables a bias circuit on the analog chip to provide operating power to the active rectifier amplifier circuit. As shown in Figure 2.4 the input signal is applied to the input coupling capacitor to the switchable decade divider to provide an input to the active rectifier amplifier input of approximately 2 volts (p-p) for a full scale input signal. The non-signal input of the active rectifier (U4) is biased at a near zero potential by an external clamp diode circuit to protect the amplifier against damage in an over-voltaged input condition. The input divider produces X1, X.1, X.01, and X.001 attenuation factors for input signals from 2 VAC to 1000 VAC, respectively. The output is a plus rectified waveform at the cathode of D3 that is filtered by R10 and C3 to produce the average DC value of the waveform at the output of the rectifier amplifier. The DC value is then applied to the (isolator) voltage-to-current converter input with the gain resistor reduced in value to approximately 20K Ω to increase the current draw (by 2 1/2 times) from the integrator for full scale input signals.

2.4 DC CURRENT CONVERSION TECHNIQUE.

2.4.1 The input terminals connect the current path through one of the resistances of the current shunt, which produces a DC voltage to the input of the (isolator) voltage-to-current converter, whose gain resistor is 5K for a current increase of X10. An input diode clamp on all ranges (except 20 μA) and the fused "—" input lead provide the input protection for surge conditions.

2.5 THE REFERENCE CIRCUITS.

2.5.1 When the meter is set to any "on" position, the +9 volt battery is connected to provide operating power to the analog/digital chips and the +1.35 volt reference cell is

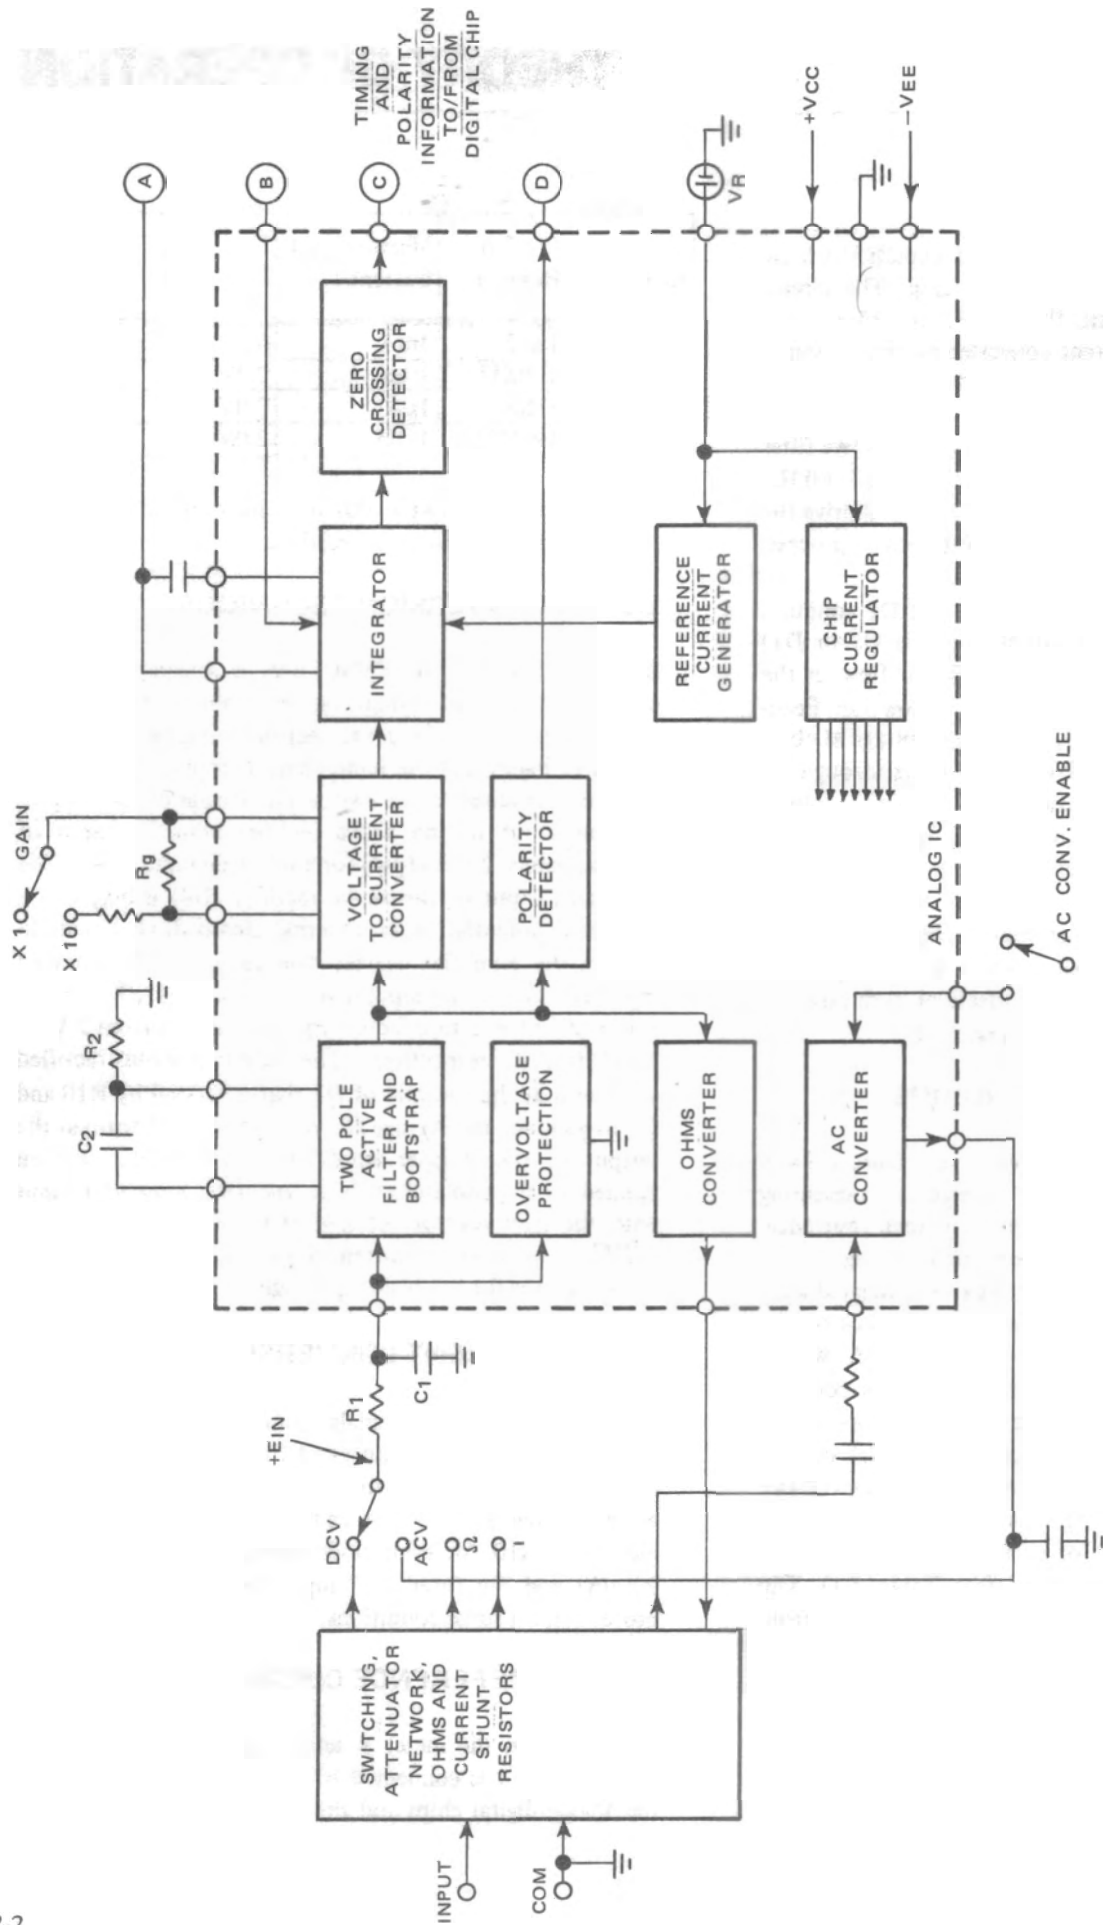


Figure 2.1 - Analog Chip Block Diagram

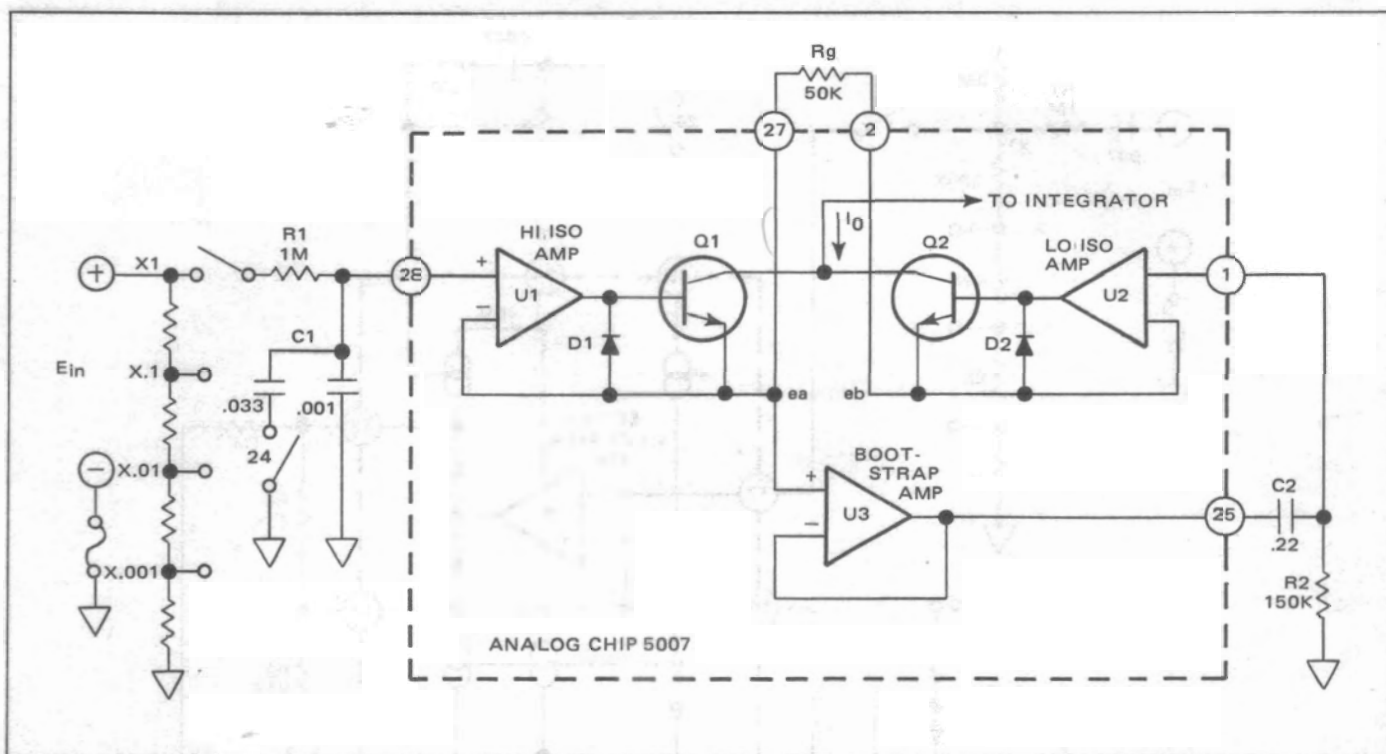


Figure 2.2 - (Isolator) Signal Conditioner/Voltage-to-Current Converter Functional Block Diagram

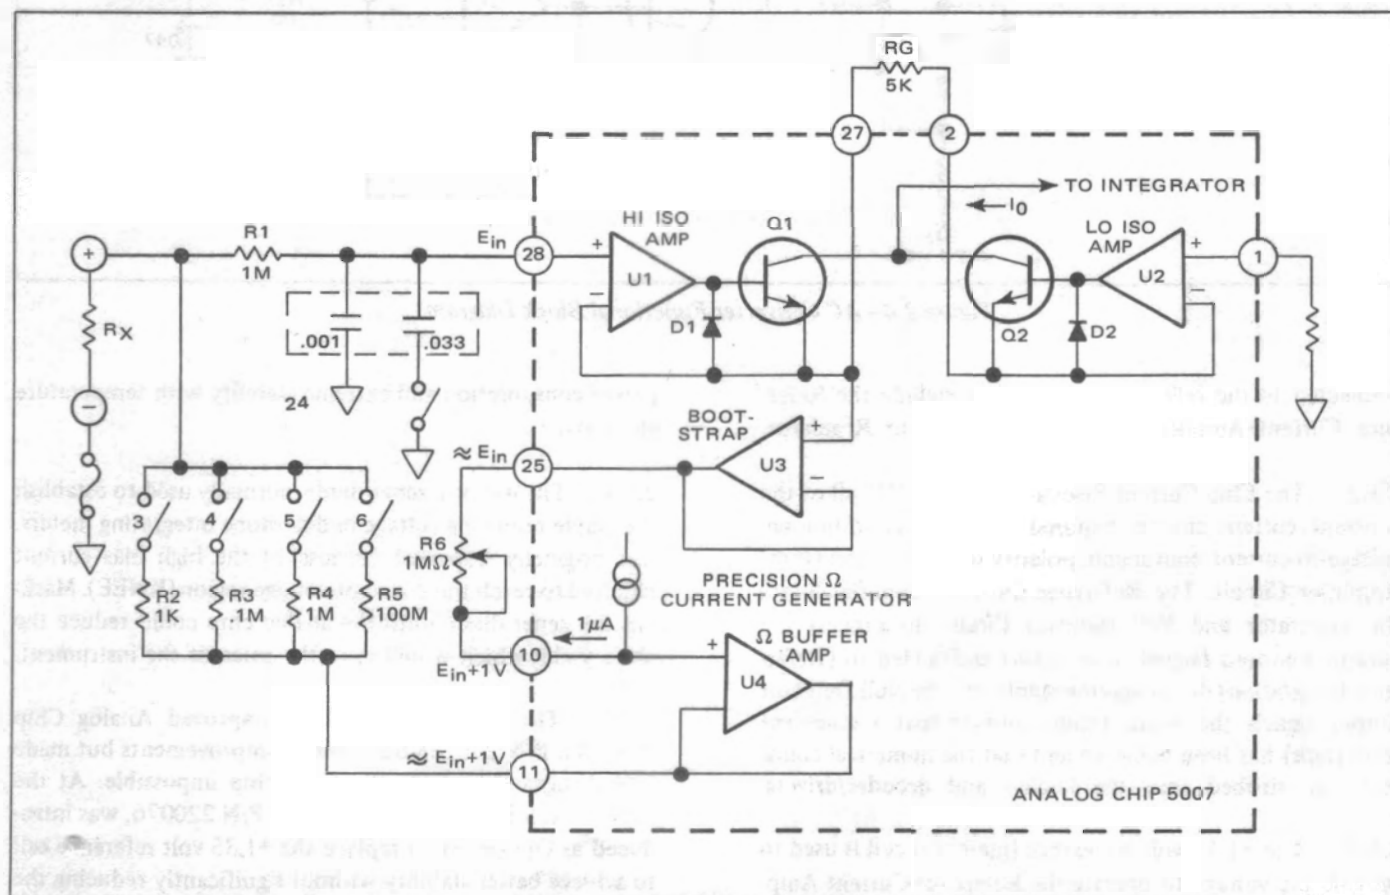


Figure 2.3 - Ohms Converter Functional Block Diagram

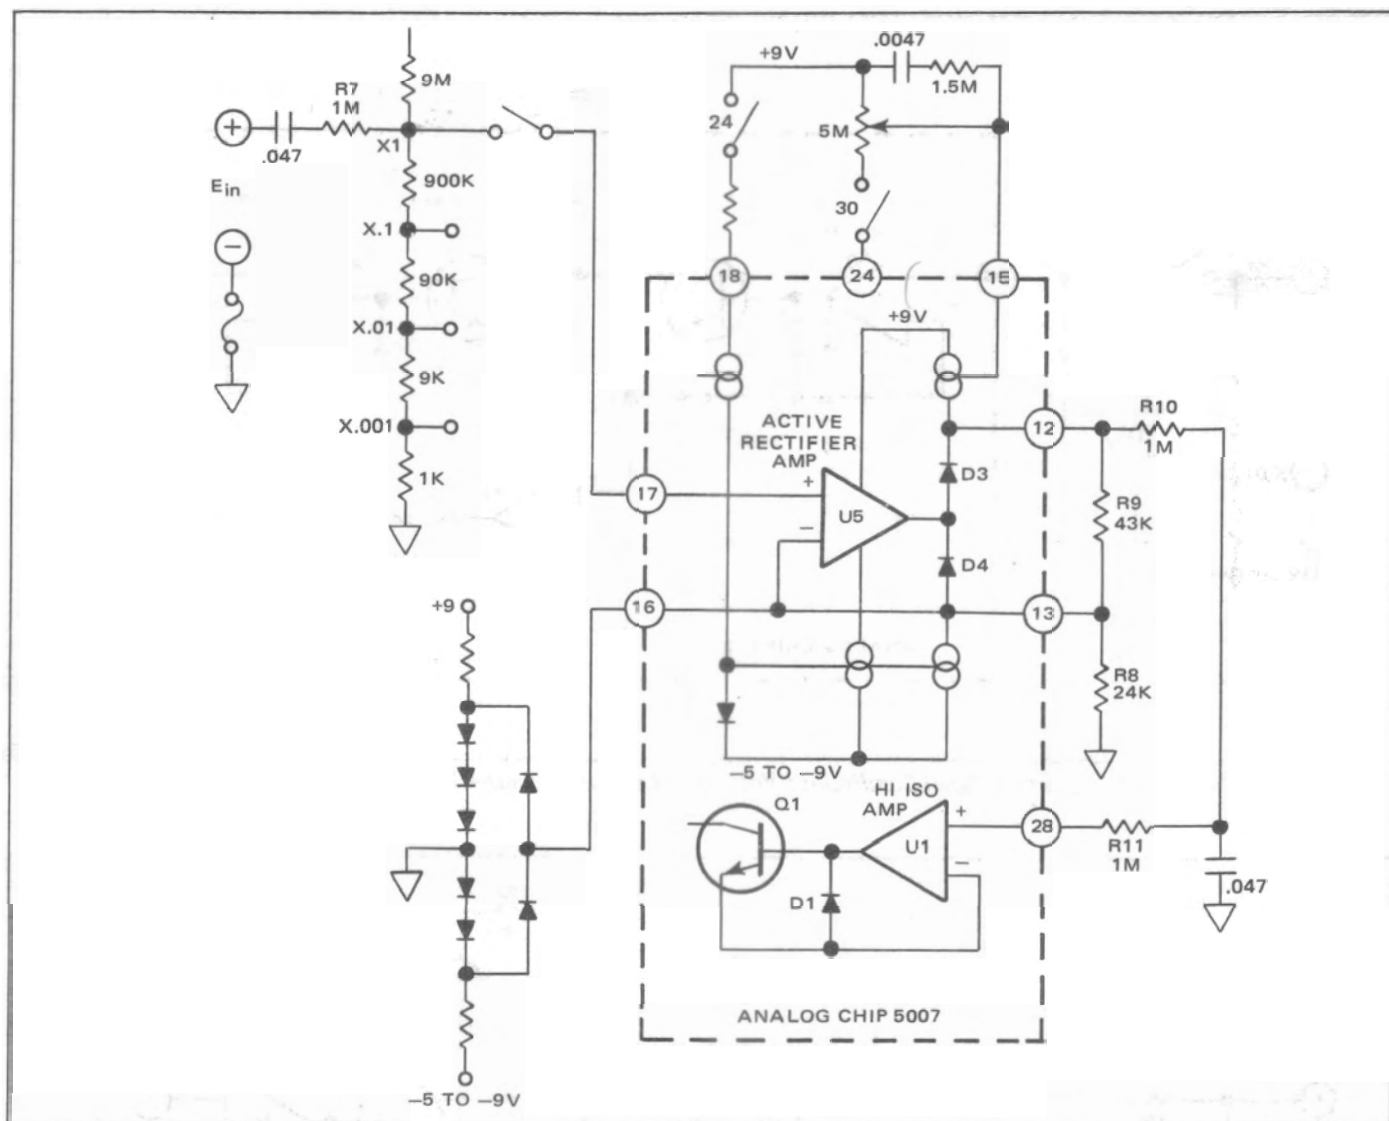


Figure 2.4 - AC Converter Functional Block Diagram

connected to the reference circuits that include the Reference Current Amplifier and the Chip Current Regulator.

2.5.2 The Chip Current Regulator biases "ON" all of the constant current circuits required for signal conditioning, voltage-to-current conversion, polarity detection, and Ohms Amplifier Circuit. The Reference Current Amplifier biases the integrator and Null Detector Circuit to process the current removed (signal integration) and added to (Reference Integration) the integrator amplifier. The Null Detector output signals the digital (chip) counter that a quiescent state (null) has been achieved and that the numerical count must be strobed into the latches and decoder/drivers.

2.5.3 The +1.35 volt Reference (mercury) cell is used to provide the voltage to operate the Reference Current Amplifier and the Chip Current Regulator because of its low

power consumption and extreme stability with temperature and time.

2.5.4 The use of a zener diode, normally used to establish the stable reference voltage in dual-slope integrating meters, was originally bypassed because of the high bias current required to reach the constant voltage region (KNEE). Masking the zener diode onto the analog chip could reduce the chips yield; which would raise the price of the instrument.

2.5.5 The introduction of the improved Analog Chip (5007R), P/N 230188 made minor improvements but made interchangeability with the 5007 chip impossible. At the same time, a Reference zener diode, P/N 220076, was introduced as Option 03 to replace the +1.35 volt reference cell to achieve better stability without significantly reducing the 9 volt battery life due to the increased current demand.

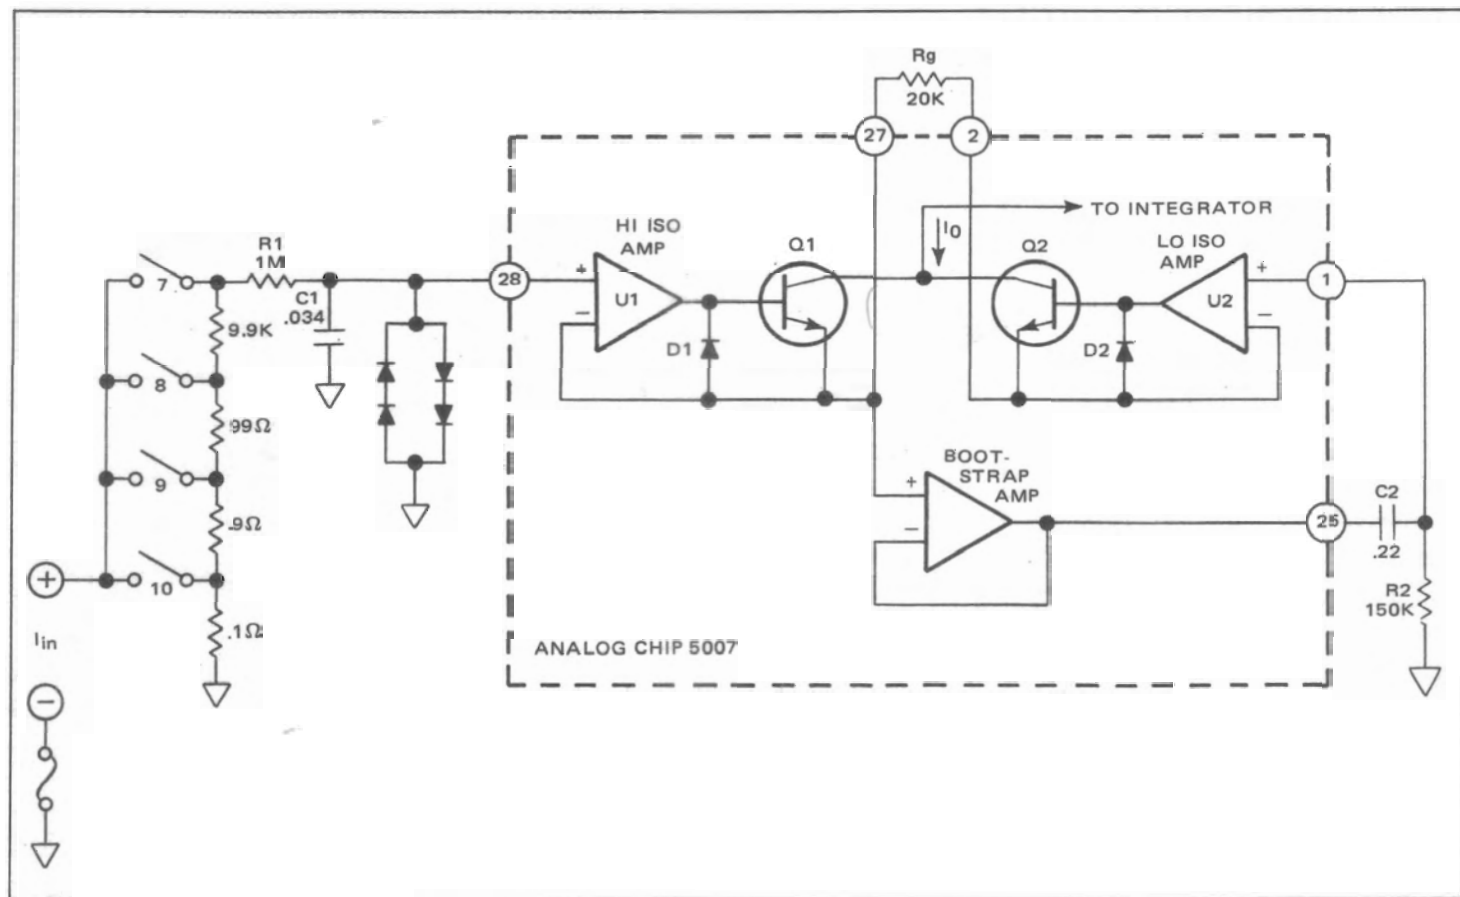


Figure 2.5 - DC Current Functional Block Diagram

2.5.6 The introduction of the latest LCD (readout) standardized the high stability reference zener in the 2000A and 2100A.

2.5.7 A rework procedure for the early 2000 Danameters, Revision B and C, to replace the Mercury Cell by adding the Reference Zener is included in the Appendix of this publication.

SECTION 3

DESCRIPTION & CONFIGURATION

3.1 INTRODUCTION.

3.1.1 From the beginning, the Danameter changed very little, except to improve the circuit performance and reliability by updating circuits, changing the value of components, and using improved hardware items. See Figure 3.1.

3.2 CIRCUIT BOARD IDENTIFICATION, MODEL 2000 (A).

3.2.1 The 2000 (A) Danameter printed circuit board (PCB) assembly number is 403767, but as this number does not appear on the assembly/references to 2000 (A) Danameter revisions will be made by the etched (artwork part number) "410679 Rev " that appears on the circuit side of the assembly.

3.3 CIRCUIT BOARD IDENTIFICATION, MODEL 2100 (A).

3.3.1 The 2100 (A) Danameter printed circuit board (PCB) assembly number is 403849, which does not appear on the assembly; but references to 2100 (A) Danameter revisions will be made by the etched (artwork part number) "410703 Rev " that appears on the circuit side of the assembly.

3.4 PRODUCTION CHARACTERISTICS.

3.4.1 The 2000 Danameters manufactured during 1974 will be Rev. B and C which are mainly characterized by:

A dull green liquid crystal display that;

- Indicated overrange with a flashing 000 display,
- Produced a numerical nine as  instead of ,
- Display window mounted on PCB assembly,
- A paper-phenolic composition circuit board covered with a green solder mask, giving it a light green color,
- An analog chip, 5007, P/N 230178,
- 1.35V reference cell.

3.4.2 An improved analog chip was designed to be for the 2100 Danameter, which was also used in the 2000 meters at Rev. E. This was a major change for the 2000 because:

- The analog chip is now a 5007R, P/N 230188 (not interchangeable),
- Component reference designators changed (see parts list information in this document),
- Liquid crystal display (LCD) changed (same part no. 920663),
- LCD connector profile changed (see LCD conn section),
- The function/range switch profile changed (see SW section),
- Serial number was given a "EOO" prefix.

3.4.3 Except for minor revisions, the 2000 Danameter has changed very little to the present date, revision L. With the addition of a newer LCD in Jan '76, the model was designated 2000A.

3.4.4 The 2100 Danameter has maintained its same configuration from Rev. A to present date, Rev. H with the addition of a newer LCD in Jan '76, the model was designated 2100A.

CAUTION

Danameter models 2000 (to Rev. E and From Rev. E to date) equipped with the Reference Cell (1.35V battery) should be aware of the following precaution. When the multimeter is disassembled, for repair or recalibration, the Function (Range) switch should never be moved from the "OFF" position even while the 9V battery is disconnected. This can cause damage to the analog chip's internal reference amplifier circuits and may excessively "load" the reference cell, usually characterized by extremely unstable readings, a meter that will not operate/calibrate to specification, or enormous changes in the "test" readings.

	73		74		75																					
	DEC		JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
	B	C	D	E			F	H		J			K	L		P		R	S							
2000	403767	B	C	D	E			F	H		J			K	L		P		R	S						
	410679	B											D			E	F	H				J				
2100	403849													A	B		C		D	E			F			
	410703													A		B		C				D				

		76												77												78																	
		JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC	JAN																	
2000A	403767	S				T															U												V										
	410679	J					K												L																								
2100A	403849	F																										H												J			
	410703	D					E															F												H									

	78		79												80												
	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC	JAN	FEB		
2000A	403767	V																									
	410679	L																									
2100A	403849	J																									
	410703	H																									

Figure 3.1 - 2000 (A) And 2100 (A) Danameter Revision History Chart

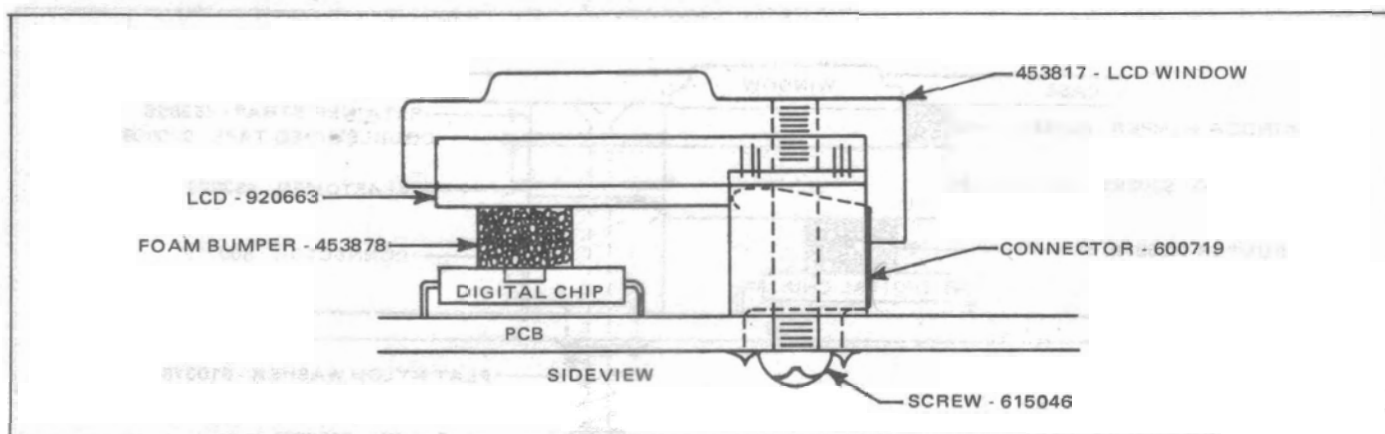


Figure 3.2 - Revision B&C LCD Connector Detail Drawing

3.5 LIQUID CRYSTAL DISPLAY.

3.5.1 There are three levels of the liquid crystal display used in the Model 2000(A) (two for the 2100(A)) that all retain the same part number, 920663; which will be identified by color and characteristics.

LCD 1 - Darker green color, readout portion covered with a polarized mylar tape to increase contrast. Segment change is relatively slow. Used on all revision B and some early C meters.

LCD 2 - Lighter green color, readout portion covered with a polarized mylar tape to increase contrast, but a parallax problem (angle view from perpendicular) was noticeable. Segment change much faster. Used on 2000, revision C to mid E meters and some early 2100's.

LCD 3 - Gray-green color, no discernable polarizing tape, but face of element is covered with a thin plastic lamination, subject to discoloration from extreme heat. Excellent contrast, not effected by parallax viewing and sharp, fast segment changes. Used on all current 2000(A) and 2100(A) Danameters.

CAUTION

If a meter is subject to extreme temperatures such as heat build-up in the trunk or dash-board of a car on a hot-sunny day, the readout may take on a mottled, or textured appearance. This is caused by the adhesive "field" (contrast for segments) partially de-laminating and it serves no useful purpose to remove it or the front lamination with a knife/razor blade. The LCD should be replaced for sharp, clear displays.

3.5.2 If the display, in the "OFF" position, seems to retain certain digit segments (very faintly) like they were "burned-in", as on the face of an old CRT; the LCD and digital chip should be replaced. This is prevalent in meters with marginal digital chip, usually caused by an over-voltaged condition in some function/range.

3.5.3 The LCD display can exhibit multiple decimal points if meteorological conditions cause the relative humidity, in hemispheric regions, to increase to the point where leakage develops in the decimal switches, decreasing the turn-off margin for the digital chip drive. See the field service bulletin for corrective action in the appendix of this publication.

3.6 DISPLAY MOUNTING.

3.6.1 From Jan '74 to June '74, 2000 Danameters, Rev. B and C, had the LCD captured in a Plastic Window, secured with self-tapping screws through the bottom of the PCB, and supported by a bumper on the digital chip to insure the LCD and window would protrude through the readout opening in the case.

3.6.2 This was a very rigid mounting arrangement that caused many problems with cracked/broken LCD elements due to excessive screw-tension and the inability of the meter to absorb impact, which was one of the features promoted. See Figure 3.2.

3.6.3 In June '74, the LCD window was replaced with a plastic retaining strap to capture the LCD. A conductive rubber strip (elastomer) was inserted between the LCD connector and LCD contact area to insure electrical contact, equalize the capture pressure of the new retaining strap, and increase the LCD ability to absorb more impact. The LCD window became part of the meter case. See Figure 3.3.

3.6.4 Some meters were still experiencing breakage and cracking from impact against the window in the meter case

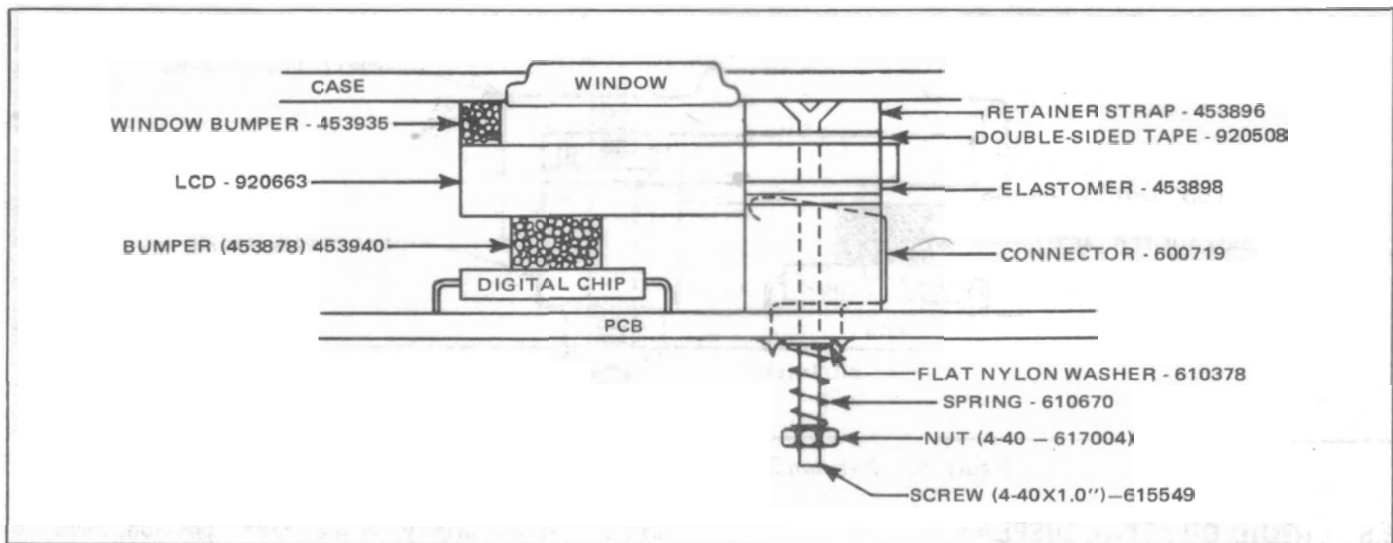


Figure 3.3 - LCD Retainer Connector Detail Drawing

but more meters were losing display segments caused by the LCD element shifting or coming free of the connector.

3.6.5 To solve this problem, the LCD contact area of the retainer strap was fitted with a strip of double-sided foam adhesive to prevent movement of the LCD. The Bumper on the digital chip was changed to P/N 453940 and a P/N 453935 bumper was added to the inside meter case above the window. This information was covered in Field Service Bulletin 20-1113, included in the appendix of this publication. Rev. E PCB changed the connector profile as shown in Figure 3.4.

3.6.6 The connector is positioned on the PCB by aligning the built-up shoulder in the holes for the mounting screws. The early connectors were white and had a very small

shoulder dimension, which was later increased when the connector changed to black.

3.6.7 There is no solder connection between the PCB and the LCD. This connection is made by use of an elastomer contact (conductive rubber strip).

3.6.8 A small piece of foam tape was placed in the capture part of the connector to prevent LCD slippage.

3.6.9 The foam cushion bumper on the digital chip change part number (453686), changing the material density and dimension.

3.6.10 This connector profile is used on present 2000(A) and all 2100(A) Danameters.

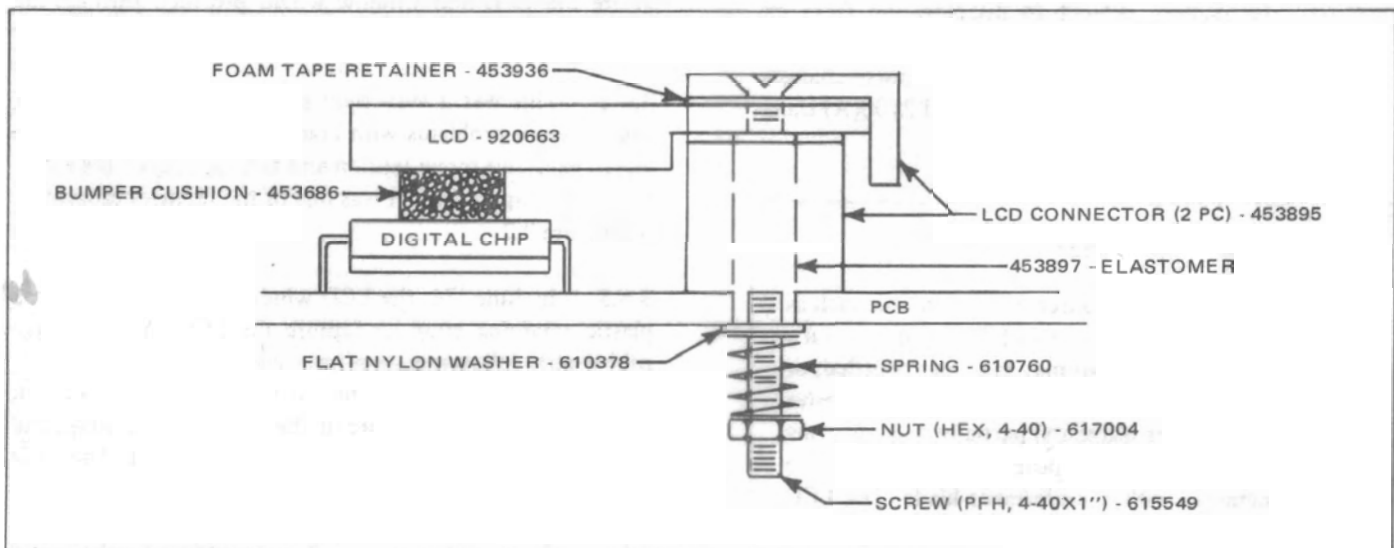


Figure 3.4 - Revision E LCD Connector Detail Drawing

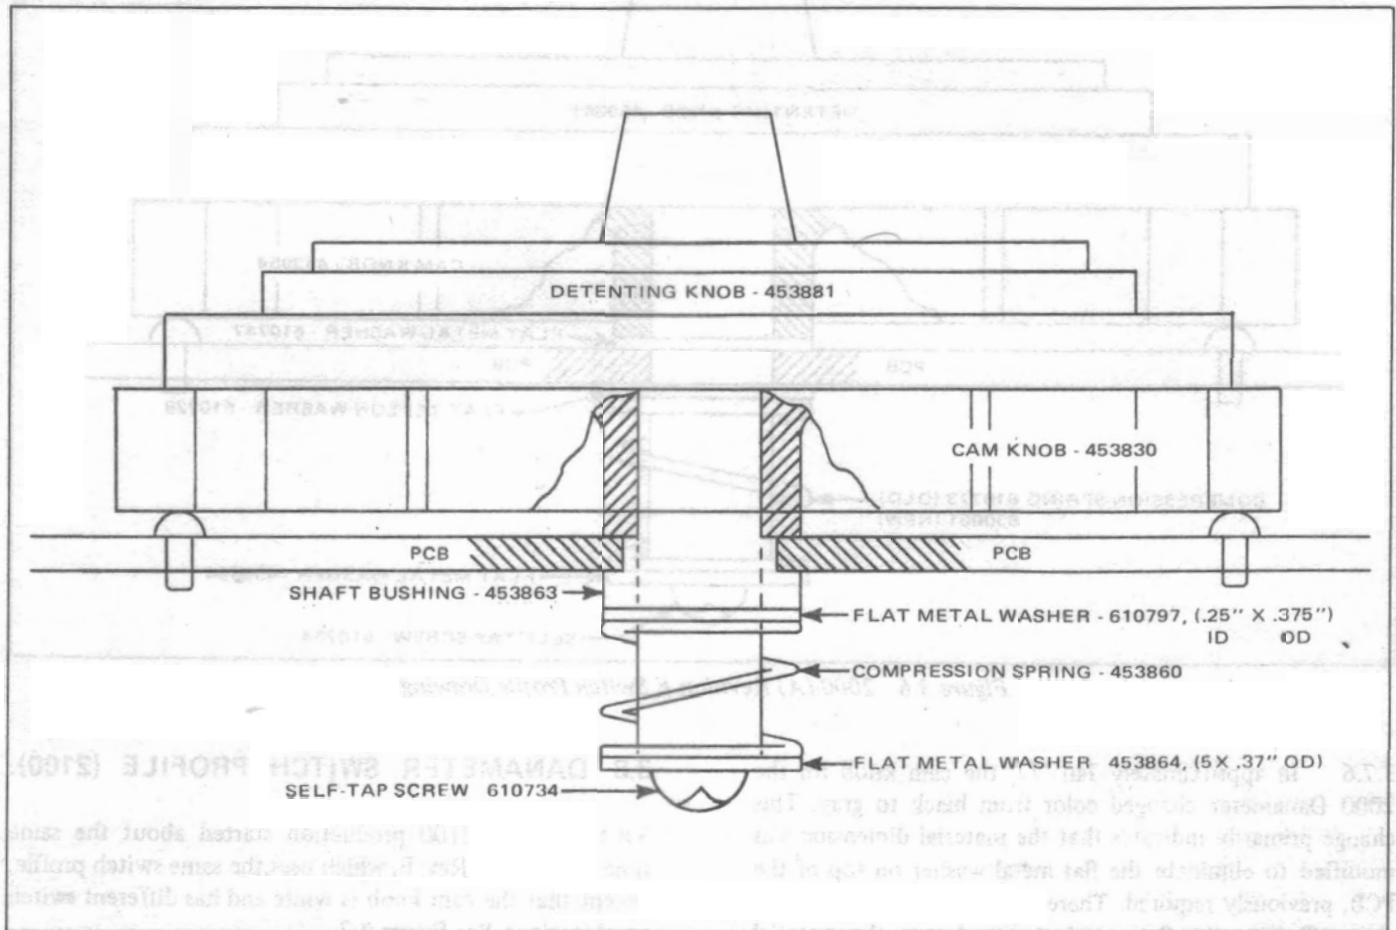


Figure 3.5 - 2000 Revision B&C Switch Profile Drawing

3.7 DANAMETER SWITCH PROFILE (2000).

3.7.1 Model 2000 B and C revision PCBs used a bushing, washer, spring, washer and screw to secure the detenting/cam knob for proper switch operation. See Figure 3.5.

3.7.2 The disadvantage of this arrangement was that the shaft bushing could "catch" on the printed circuit board instead of properly "seating" in the PCB hole, which caused the switch to be "offset", preventing the switch cams from being properly aligned with the switch contacts. As a result of improper re-assembly, the first turn of the Function (Range) switch usually bent or broke several switch contacts, damaging the meter. If an input voltage happened to be present at the input terminals, usually more damage resulted.

3.7.3 Some Rev. C boards have a smaller diameter hole which cannot accept the shaft bushing. This was during the

production period when the "E" revision PCBs were being designed for the revised analog chip. NOTE: The Revision "D" PCB never made the production cycle because of the switch problem and the transition to the new analog chip.

3.7.4 At Rev. E the shaft bushing was removed, the washer closest to the circuit board was changed to teflon, and a new compression spring was added to take up the "slack", now that the bushing had been removed.

3.7.5 In the very early Rev. E boards, the cam knob exerted too much pressure on the switch spring contacts, causing some problems with the circuit components actually being energized when the Function (range) switch was set to the "OFF" position. To relieve the pressure on the switch spring contacts, a flat metal washer was added to the detenting knob shaft before the switch knob assembly was secured to the PCB. See Figure 3.6.

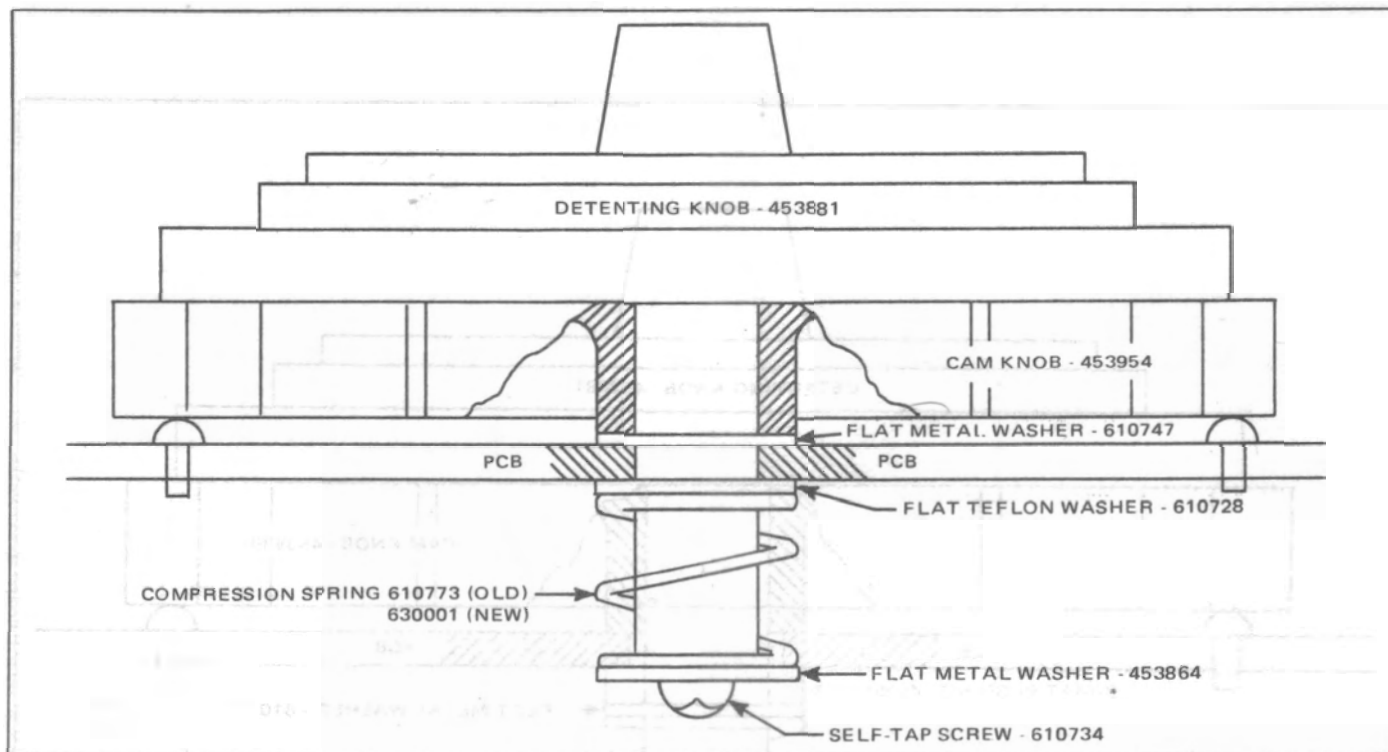


Figure 3.6 - 2000 (A) Revision E Switch Profile Drawing

3.7.6 In approximately Jan '77, the cam knob for the 2000 Danameter changed color from black to gray. This change primarily indicates that the material dimension was modified to eliminate the flat metal washer on top of the PCB, previously required. There are certain gray cam knobs that still have the flat metal washer due to the material composition.

3.8 DANAMETER SWITCH PROFILE (2100).

3.8.1 Model 2100 production started about the same time as the 2000 Rev. E, which uses the same switch profile, except that the cam knob is white and has different switch combinations. See Figure 3.7.

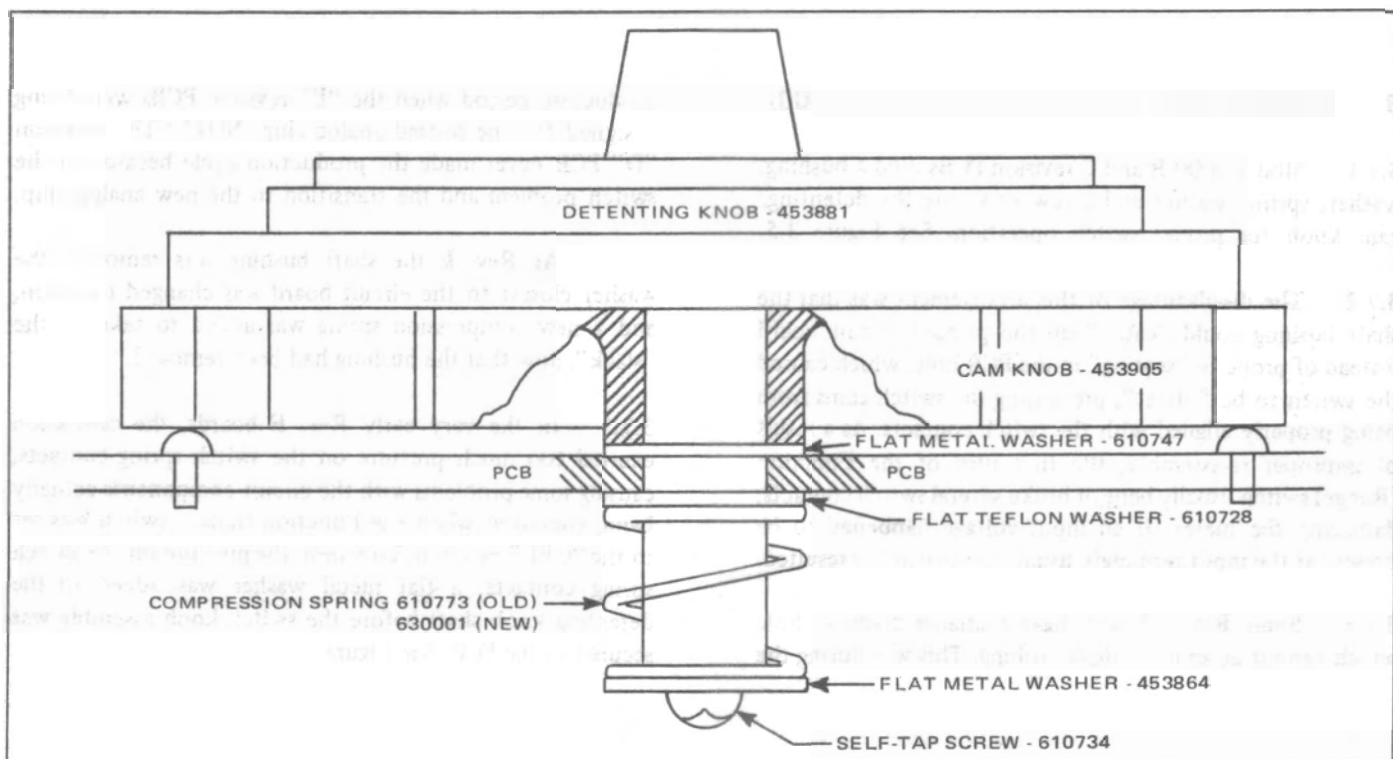


Figure 3.7 - 2100 (A) Switch Profile Drawing

3.9 DANAMETER NOTES AND PRECAUTIONS.

3.9.1 The purpose of this information is to insure that the switch will be re-assembled with the proper parts orientation when disassembly must be performed. Customer repair/cal facilities that have large inventories of Model 2000 (A) and/or 2100 (A)'s from different production periods must be conscious of the different switch profiles and that interchangeability cannot be accomplished.

3.9.2 Table 6.2 is a checkerboard of the switch combinations for the various ranges per function for the Model 2000, Revision B and C, meters.

3.9.3 Table 6.5 is a checkerboard of the switch combinations for the various ranges per function for the Model 2000 (A), Revision E to L (present). If this generation of meter has Option 03, reference zener, in place of the standard reference cell; Switch S35 is disabled by the addition of jumper, W1.

3.9.4 Table 6.9 is a checker board of the switch combinations for the various ranges per function for the Model 2100 (A), all revisions, A to H.

3.9.5 When a visual inspection of the switch is required, the reference cell should carefully be removed while the switch is in the "off" position to prevent damage to the analog chip and to prevent accidental shorting of the reference cell when removing it from its connector/holder.

3.9.6 When the reference cell is removed, a visual check should be made to determine if the contact surfaces of the reference cell have a thin, but visible, film of Red CramolinTM paste which is an anti-corrosive, lubricant applied to prevent mechanical contact resistance errors. The reference cell should be stored in a relatively safe place, free of dust, humidity, elevated temperatures, and corrosive solvents, until it is to be re-installed in the meter.

3.9.7 When a visual inspection of Function (Range) switch reveals a bent, broken, or arced spring contact, a check should be made to see if the spring contact "(etched)

pad" surface is arced or pitted. This usually occurs on a signal control switch when the meter is misused but sometimes occurs if a spring switch fails due to metal fatigue. The spring switch contacts can be replaced in the field by following the recommended procedure and exercising detailed soldering skills. Badly arced or pitted "pads" have been replaced, at the factory, with some degree of success, but require all the skills of a heart surgeon and is not recommended. The recommended procedure is to return the unit to the factory for repair.

3.9.8 Visual inspection of the spring switch contact pad surfaces should again reveal a thin, but visible, film of red Cramolin paste, which should not be removed. This is (re) applied at the factory or service centers with a camel hair (fine grade) brush which will not leave foreign matter to contaminate switch connections, which could happen if the paste were applied with a cotton swab, etc.

3.9.9 The digital chip, 7104 (A) P/N 230179, is extremely vulnerable to static charges, which can destroy internal functions. When a replacement chip is sent from the factory, it will be mounted in a conductive foam, effectively shorting the chip pins together. The same purpose can be accomplished by covering a styrofoam block with aluminum foil and mounting the digital chip accordingly. This procedure is recommended for shipping, carrying, or storing the digital chip, especially where high static charges can occur, such as carpeted areas, low humidity conditions associated with cold winter weather, etc. The digital chip is soldered to the PCB assembly, P/N 403767 (2000) or 403849 (2100), where static charges have no damaging effects. Should the digital chip be suspect as to the meter malfunction, great care should be exercised in removing it, just in case the chip is still operable.

3.9.10 A low wattage soldering iron should be used to desolder the digital chip to avoid destruction due to extreme heat. The digital chip should never be de-soldered with the meter "in operation" even with a soldering iron that has the "common" removed (sometimes used to (de) solder with circuits under power). A soldering "GUN" should never be used.

SECTION 4

BASIC OPERATION CONCEPTS

4.1 POWER AND CURRENT CONSUMPTION.

4.1.1 The first consideration in analyzing a Danameter malfunction of any production generation is that the voltage from the battery is present on pin 19 of the analog chip, (pin 25, digital chip) referenced to pin 4, analog chip, (pin 27, digital chip). See Figure 4.1.

4.1.2 The 9V battery used to provide operating voltages for the Danameters have very little current drain under normal operating conditions, as shown in Figure 4.2.

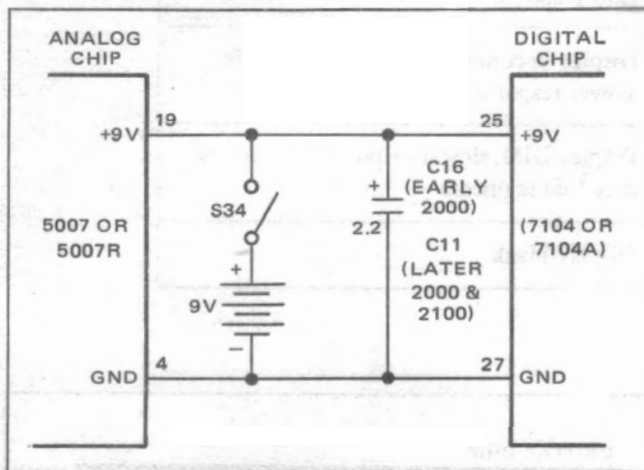


Figure 4.1 - Danameter Battery Interconnection Diagram

4.1.3 The battery is capable of providing some measure of operating potential even when the voltage has dropped to 5 volts, but as this would cause a "Test" reading below 600, a fresh battery should be installed, as recommended in the Danameter manuals.

4.1.4 Table 4.1 shows the resultant effects of the 9 volt battery as it relates to the $- (9V)$ supply voltage and the liquid crystal display readout.

4.1.5 If a new 9 volt battery derates to 6-7 volts after a short period of operation it indicates a loading condition caused by a leaky/shorted capacitor (C16 or C11), analog chip, or digital chip.

4.2 CLOCK CIRCUIT.

4.2.1 The second consideration is that the clock circuit on the digital chip is operating within its design parameters. See Figure 4.3.

4.2.2 The R/C values of R16 (750K Ω) and C6 (62 pf) produce an 8 to 10 KHz clock pulse, at pin 28, approximately 5V p-p riding on a 4.5V d-c level, as shown in Waveform A. Pin 31 of the digital chip produces a differentiated waveform of 4V p-p as shown in Waveform B. Pin 30 produces a 5V p-p waveform on a 4.5V dc level as shown in

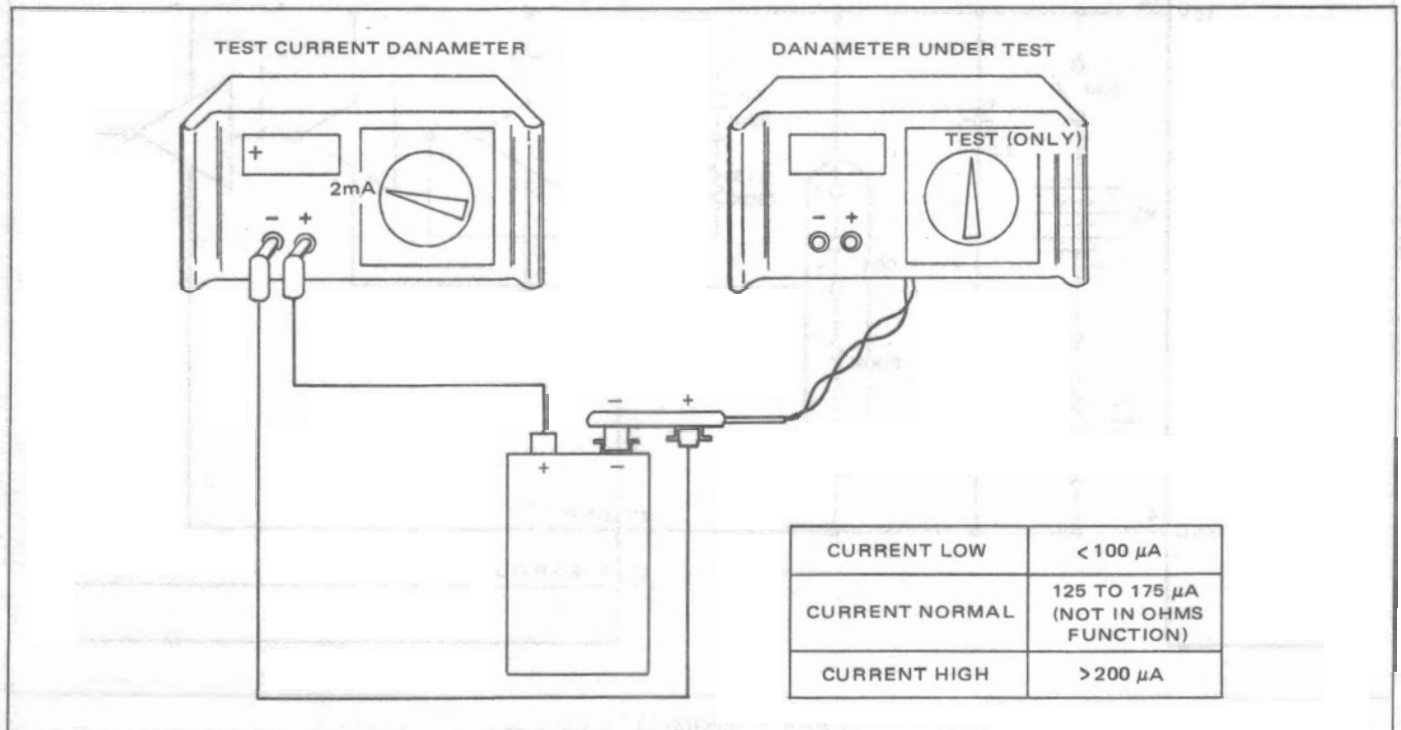


Figure 4.2 - Danameter Current Test Set-up Diagram

Table 4.1 - Battery Voltage Vs. LCD Readout

9V Battery	-(9V) Supply Voltage	LCD Readout
+9.5 VDC	-8.2 VDC	Display sharp, fast response
+9.0 VDC	-7.7 VDC	Display sharp, fast response
+8.0 VDC	-6.6 VDC	Display sharp, normal response
+7.0 VDC	-5.6 VDC	Display clear, medium response
+6.0 VDC	-4.6 VDC	Display becoming faint, but readable; slow response
+5.0 VDC	-3.6 VDC	Display becoming fainter, but readable; slower response
+4.0 VDC	-2.6 VDC	Display DIM, slower response; characters may lose segments
+3.0 VDC	-1.3 VDC	Display blank

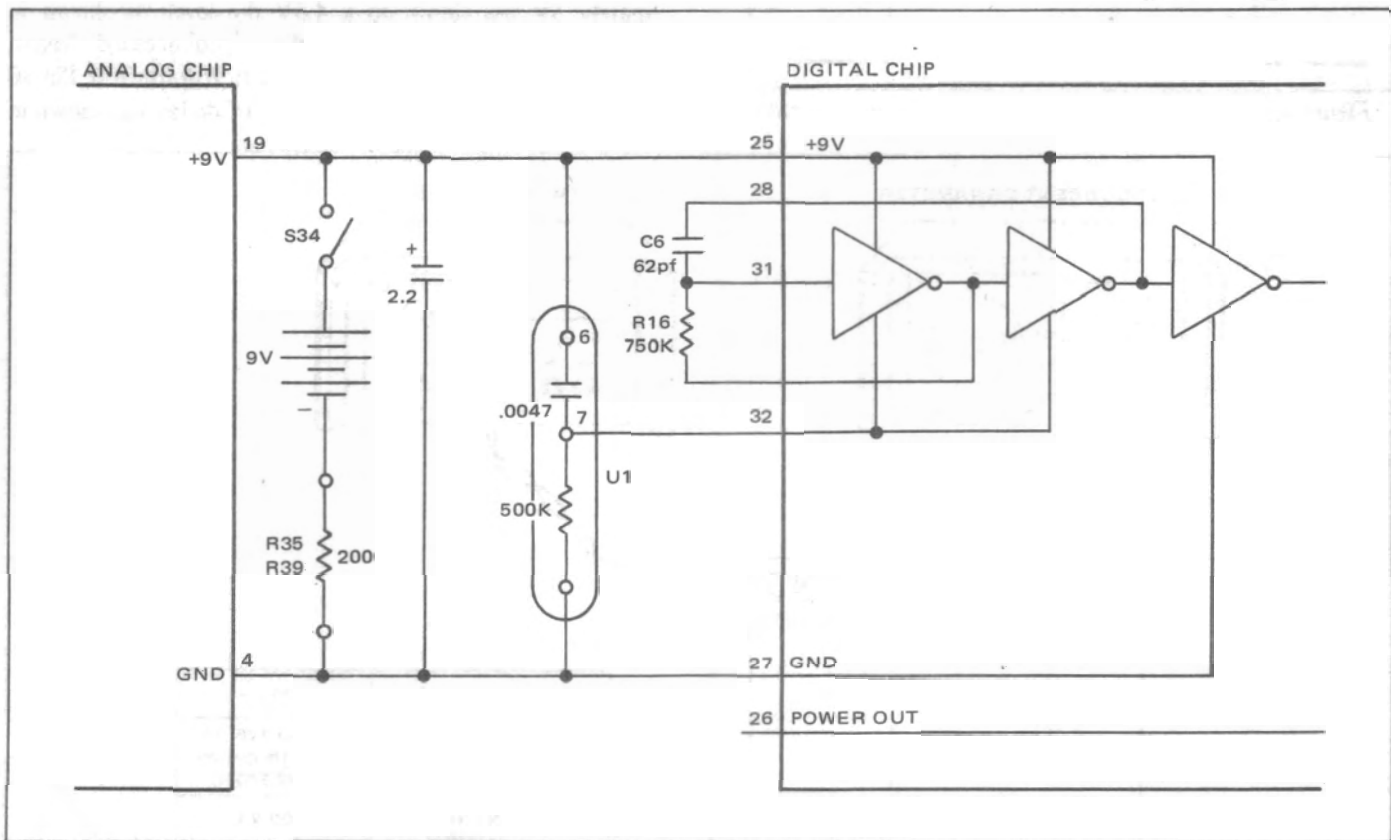


Figure 4.3 - Digital Clock Circuit

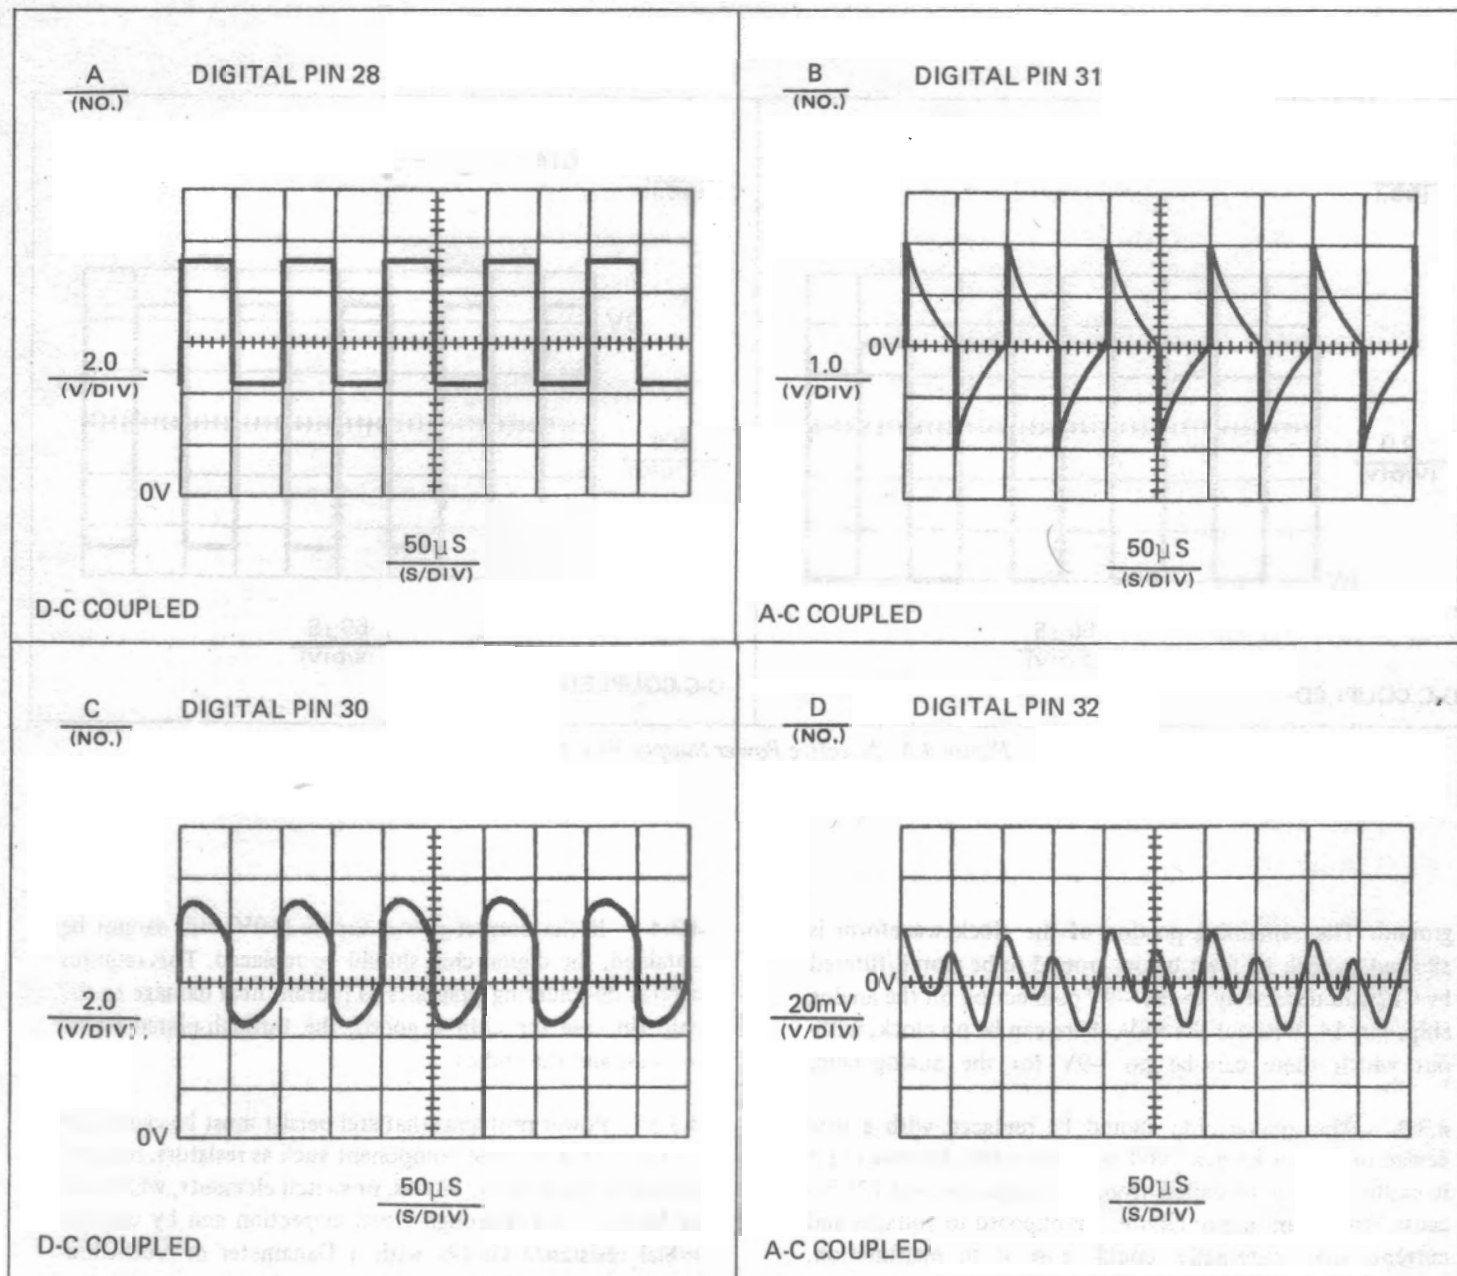


Figure 4.4 - Clock Waveforms

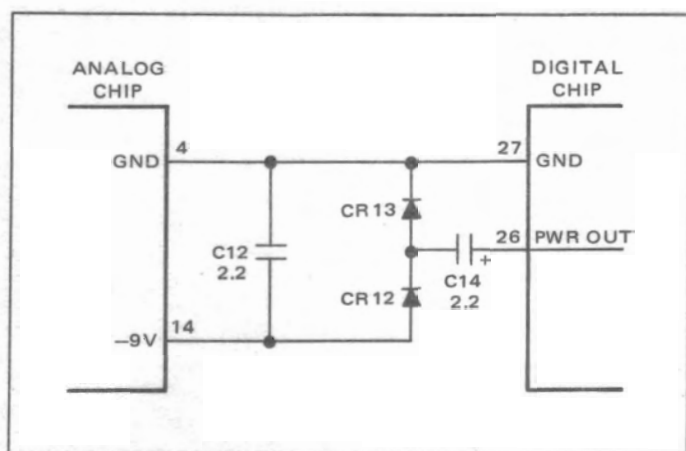


Figure 4.5 - Voltage Divider Circuit

Waveform C. Pin 32 produces a 40 mV p-p waveform on a 4.25V dc level as shown in Waveform D. See Figure 4.4.

4.3 NEGATIVE POWER SUPPLY.

4.3.1 Pin 26 of the digital chip produces a square wave output, at 8 to 10 KHz, of 9V p-p, referenced to ground, labeled "power out" as shown in Waveform A. See Figure 4.5 and 4.6.

4.3.2 This circuit is a voltage inverter to provide the -9V (approx) necessary to power the analog chip current regulators. The capacitor, C14, couples the "power out" signal to CR12 and 13 as shown in Waveform B. The peaks of the power out signal are clamped by a diode drop, CR13, above

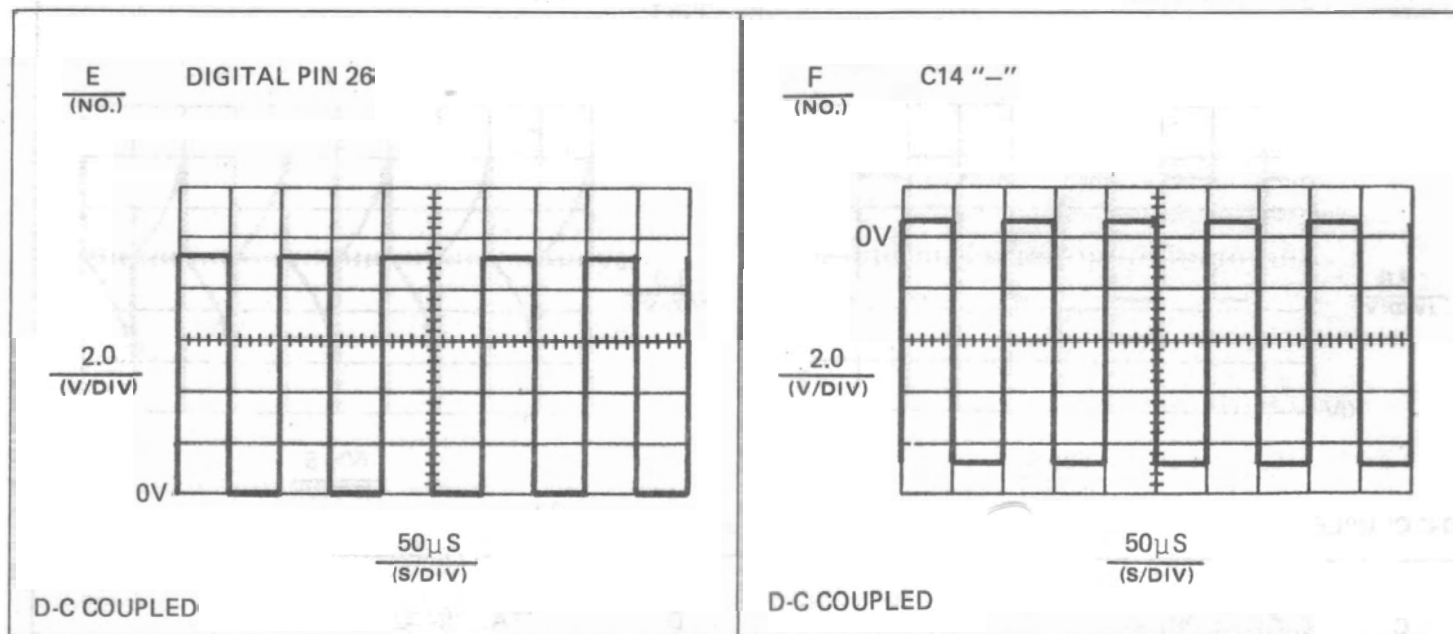


Figure 4.6 - Negative Power Supply Waveforms

ground. The remaining portion of the clock waveform is allowed to seek its level below ground to be stored/filtered by C12 and ultimately to the -9V connection on the analog chip, pin 14. Without the +9V, there can be no clock, without which there can be no -9V for the analog chip.

4.3.3 The analog chip should be replaced with a new device or one in known good condition first, because (1) it is easily removed/installed from its connector and (2) because through misuse or failure, it is exposed to voltages and currents that, externally, could cause it to malfunction.

4.3.4 If the correct power supply (+9V) still cannot be obtained, the digital chip should be replaced. This requires careful de-soldering practices to prevent heat damage to the chip (in case the chip is good), the through-plated terminations, and the etches.

4.3.5 Power problems that still persist must be caused by a failure of a discrete component such as resistors, resistor-networks, capacitors, diodes, or switch elements, which can be located by a thorough visual inspection and by conventional resistance checks with a Danameter or Volt-Ohmmeter.

SECTION 5

TIMING & CONTROL SIGNALS

5.1 GENERAL DESCRIPTION.

5.1.1 The Danameters have control signals, which, if observed with an oscilloscope, do not reveal the direct timing relationship of the digitizing sequence between the analog and digital chip. There are four distinct time periods, controlled by the 8 to 10 KHz clock signal from the digital chip, which will be 100 to 125 mSec in duration, due to the clock frequency. See Figure 5.1.

5.2 SIGNAL INTEGRATE (3K).

5.2.1 The analog chip pin 7 (digital pin 33) counts from 3000 to 3999. This is the signal integrate time period when the input signal has been scaled, filtered or converted by the isolator into a current to be applied to the integration capacitor (between pin 7 and 8 of the analog chip), called 3K. The following waveforms depict a 3K (signal integrate) for 0 input, half scale (1000 counts) and full scale (1999 counts). See Figure 5.2.

5.3 REFERENCE INTEGRATE (IR).

5.3.1 The analog chip pin 6 (digital pin 24), called IR, is the reference integration period that counts from 0 to 1999 (FS). When the counter is reset to 0 in the digital chip, the first 32 counts are detected and the counter is again reset. This is used to mask switching transients that could cause a false zero detect, with an input signal at or near zero. 32 counts x clock frequency (100 μ sec) will produce a 3.2 millisecond signal (0 input). The following waveforms will be for 0 input, half scale, and full scale. See Figure 5.3.

5.4 REFERENCE INTEGRATION CAPACITOR (CI).

5.4.1 The analog chip pin 8, called CI, is the integration amplifier input from the integration capacitor (between pin 7 and 8). This is the waveform of the integration from 0 to 1999 counts. Zero detect must occur during this period for the meter to obtain a valid reading. Reaching zero detect after 1999 counts are accumulated is detected as overload.

The IR signal will be low for the length of the slope for this signal as shown in the following 3 waveforms for O_{in}, HS, and FS. See Figure 5.4.

5.5 ZERO CROSSING (ND).

5.5.1 The analog chip pin 9 (digital pin 23) is called ND (null detect) which occurs when zero crossing is detected. This line signals the counter in the digital chip to transfer the decade quantity into the latches, decoders and drivers for the LCD readout. The signal goes low at the beginning of signal integrate and goes high at zero crossing. The following waveforms depict the O_{in}, HS, and FS signals. See Figure 5.5.

5.6 WAVEFORMS FOR TIMING AND CONTROL.

5.6.1 The true time relationship can be observed if the oscilloscope can be externally triggered ("—") using the 3K (signal integrate) signal. This line could be excessively loaded and could result in non-linearity meter operation and waveforms. See Figure 5.6.

NOTE

The waveforms for Figure 5.6 are for a full scale signal ($\approx$ 1900 digits).

5.7 TEST INSTRUMENT MEASUREMENT CONSIDERATIONS.

5.7.1 Applying test equipment directly to the analog chip pins can have less than desirable effects when looking for specific values of D-C voltages or oscilloscope waveforms due to low input impedance and capacitive coupling of the test leads.

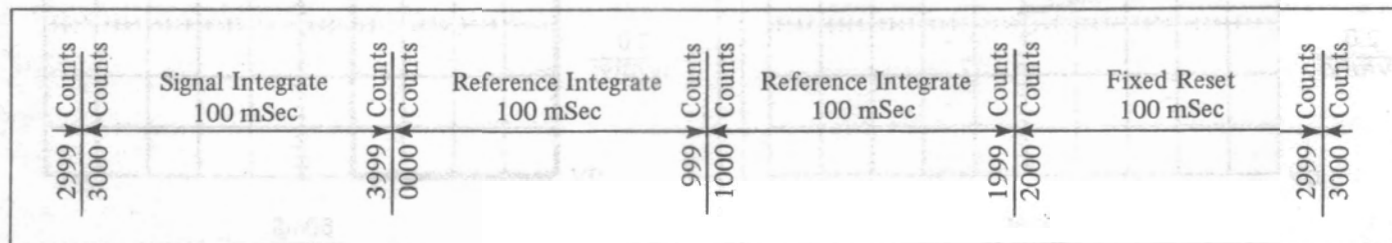


Figure 5.1 - Danameter Control Signals

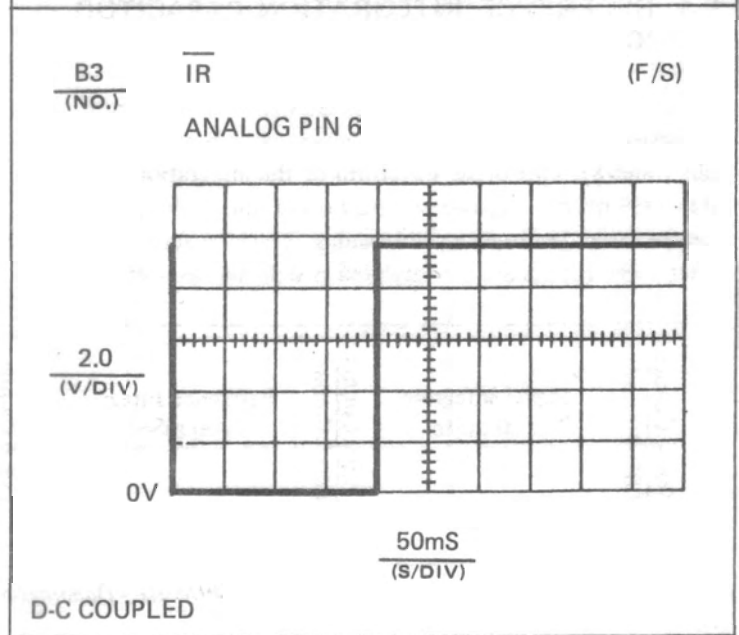
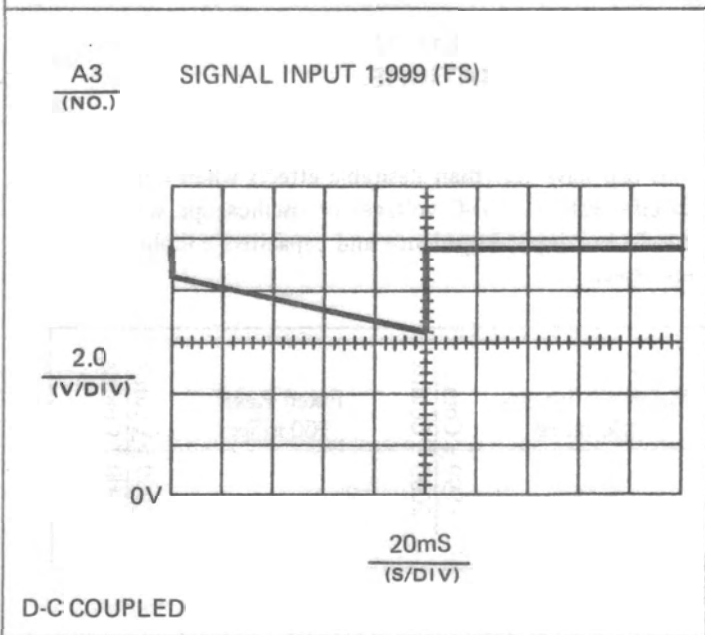
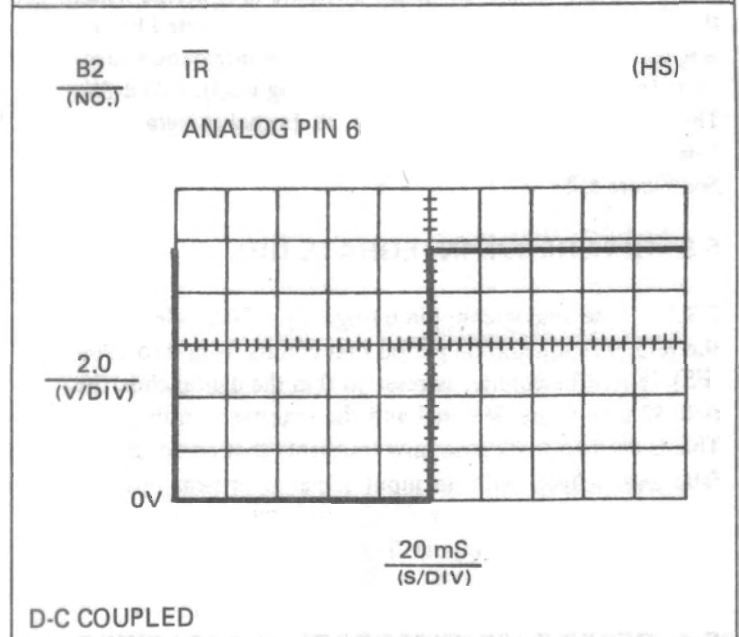
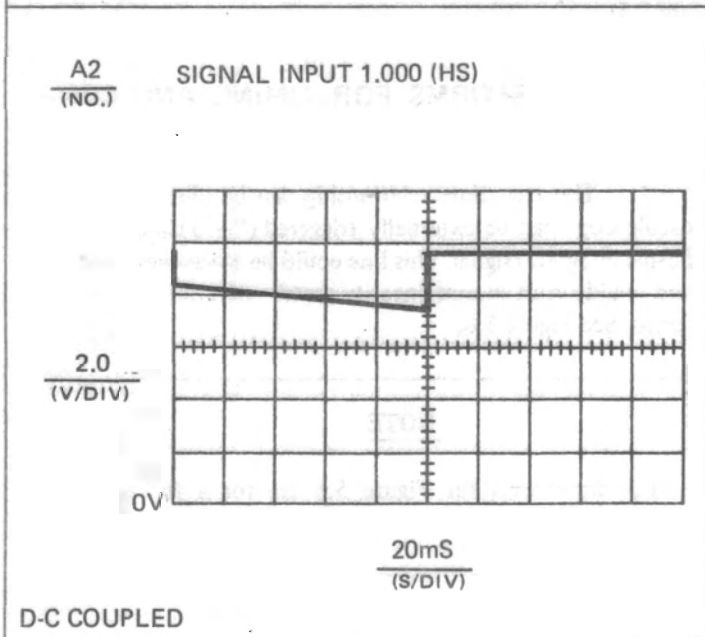
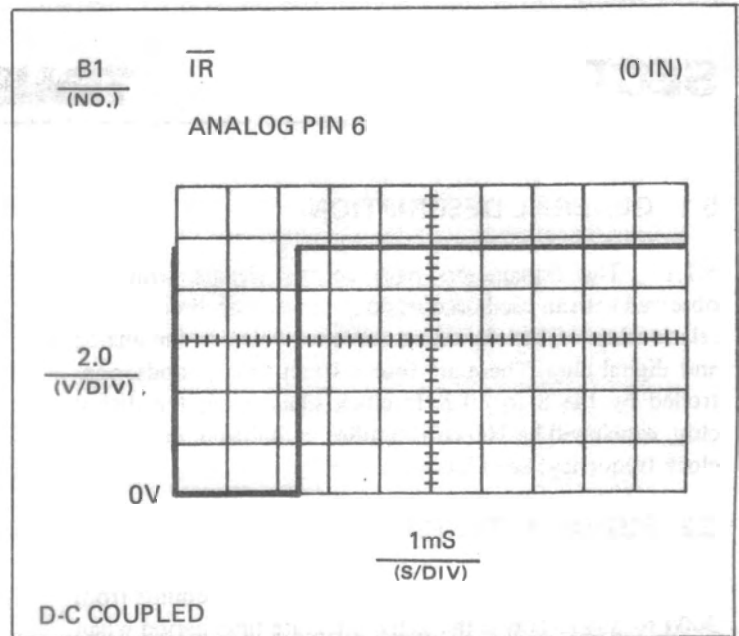
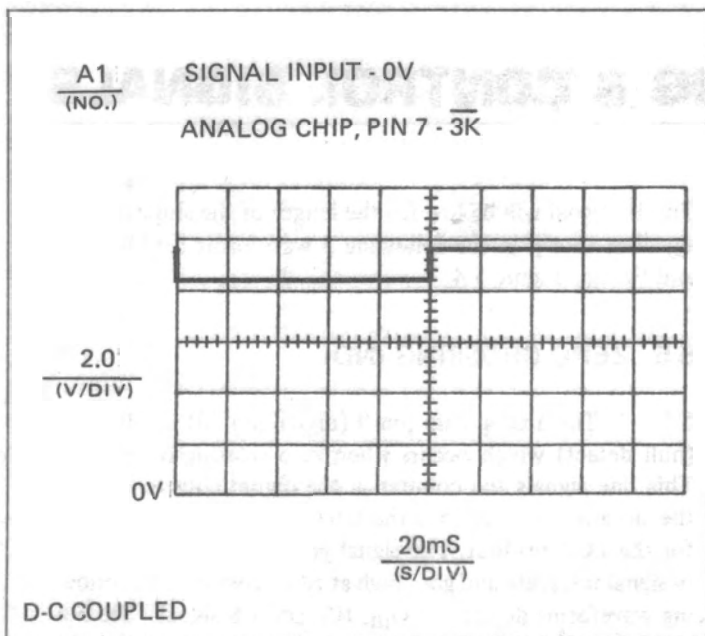


Figure 5.2 - 3K, Signal Integrate

Figure 5.3 - IR, Reference Integrate

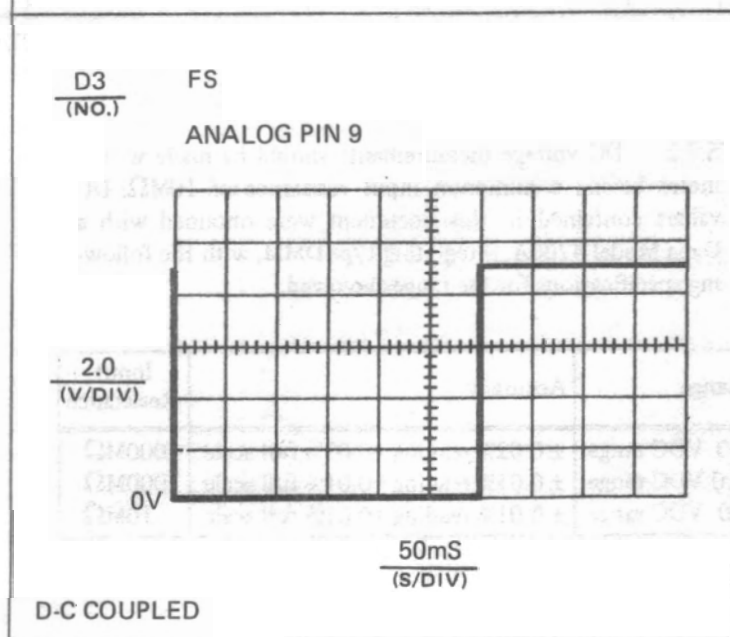
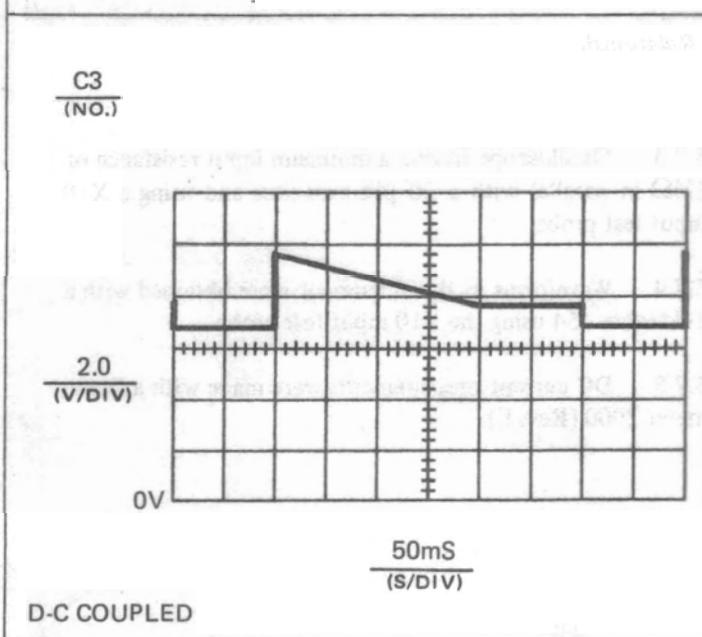
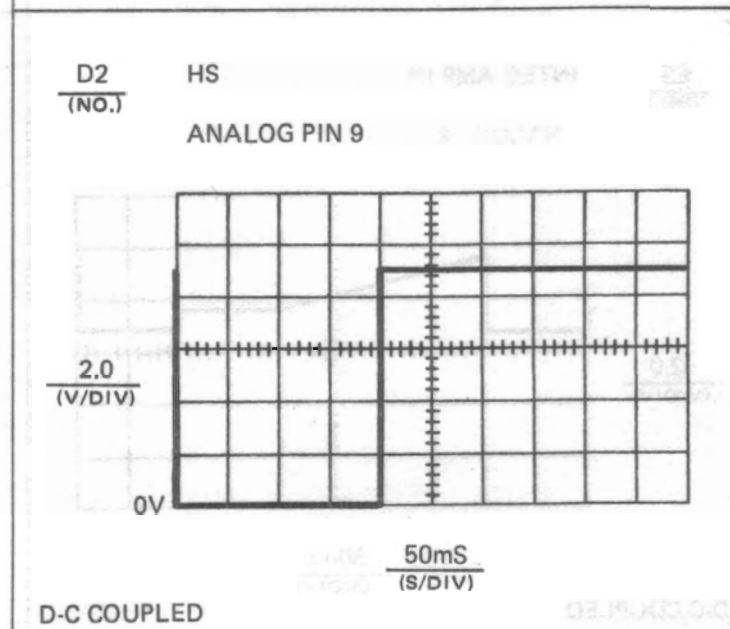
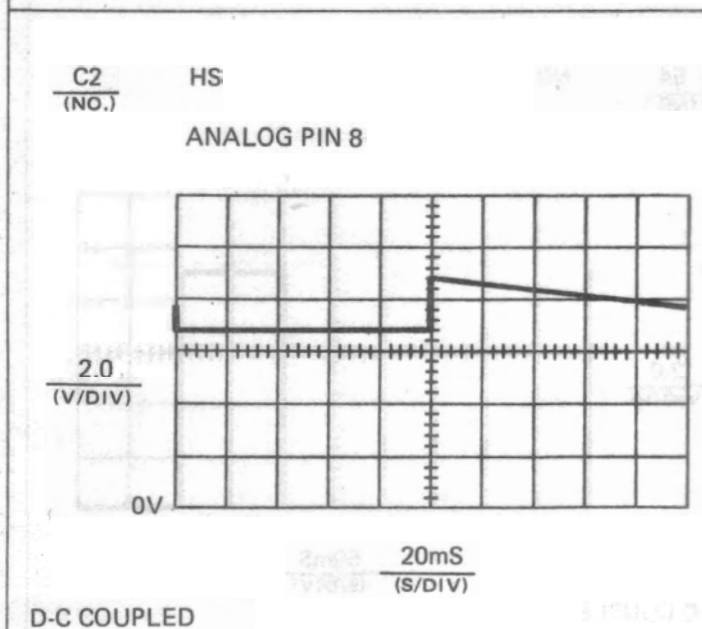
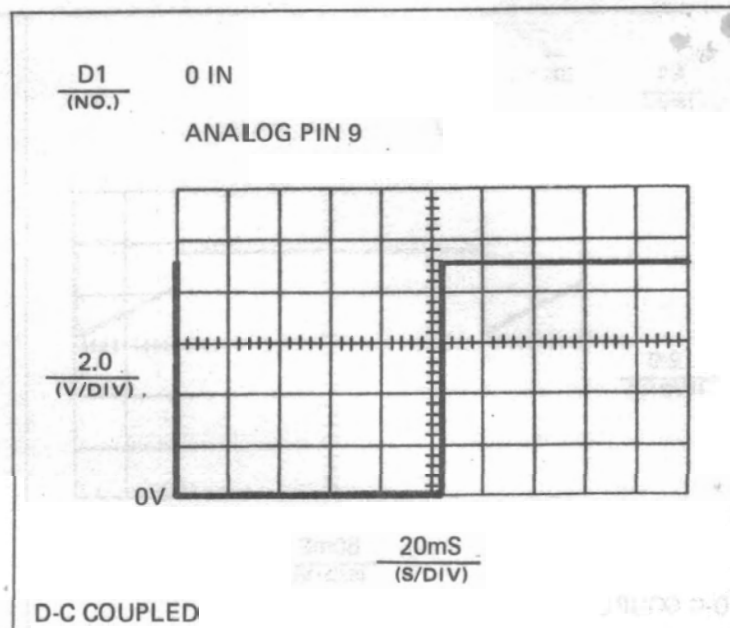
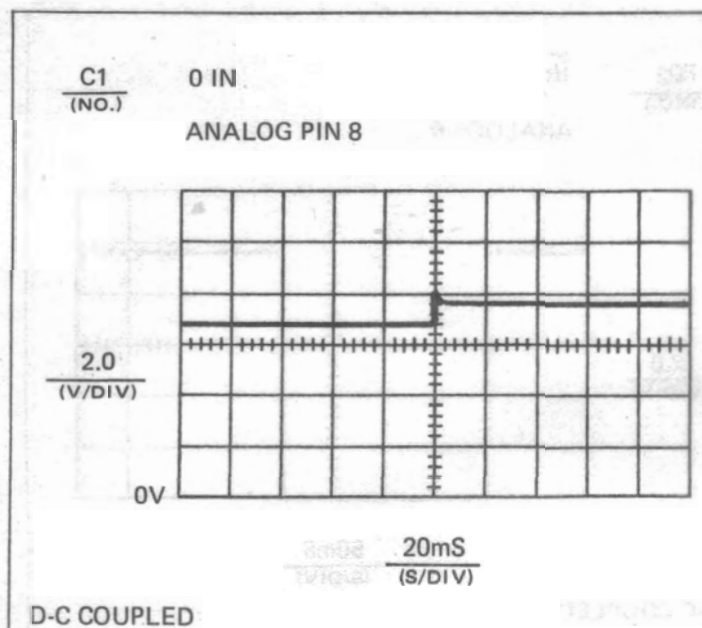


Figure 5.4 - CI Reference Integrate Capacitor

Figure 5.5 - ND, Null Detect

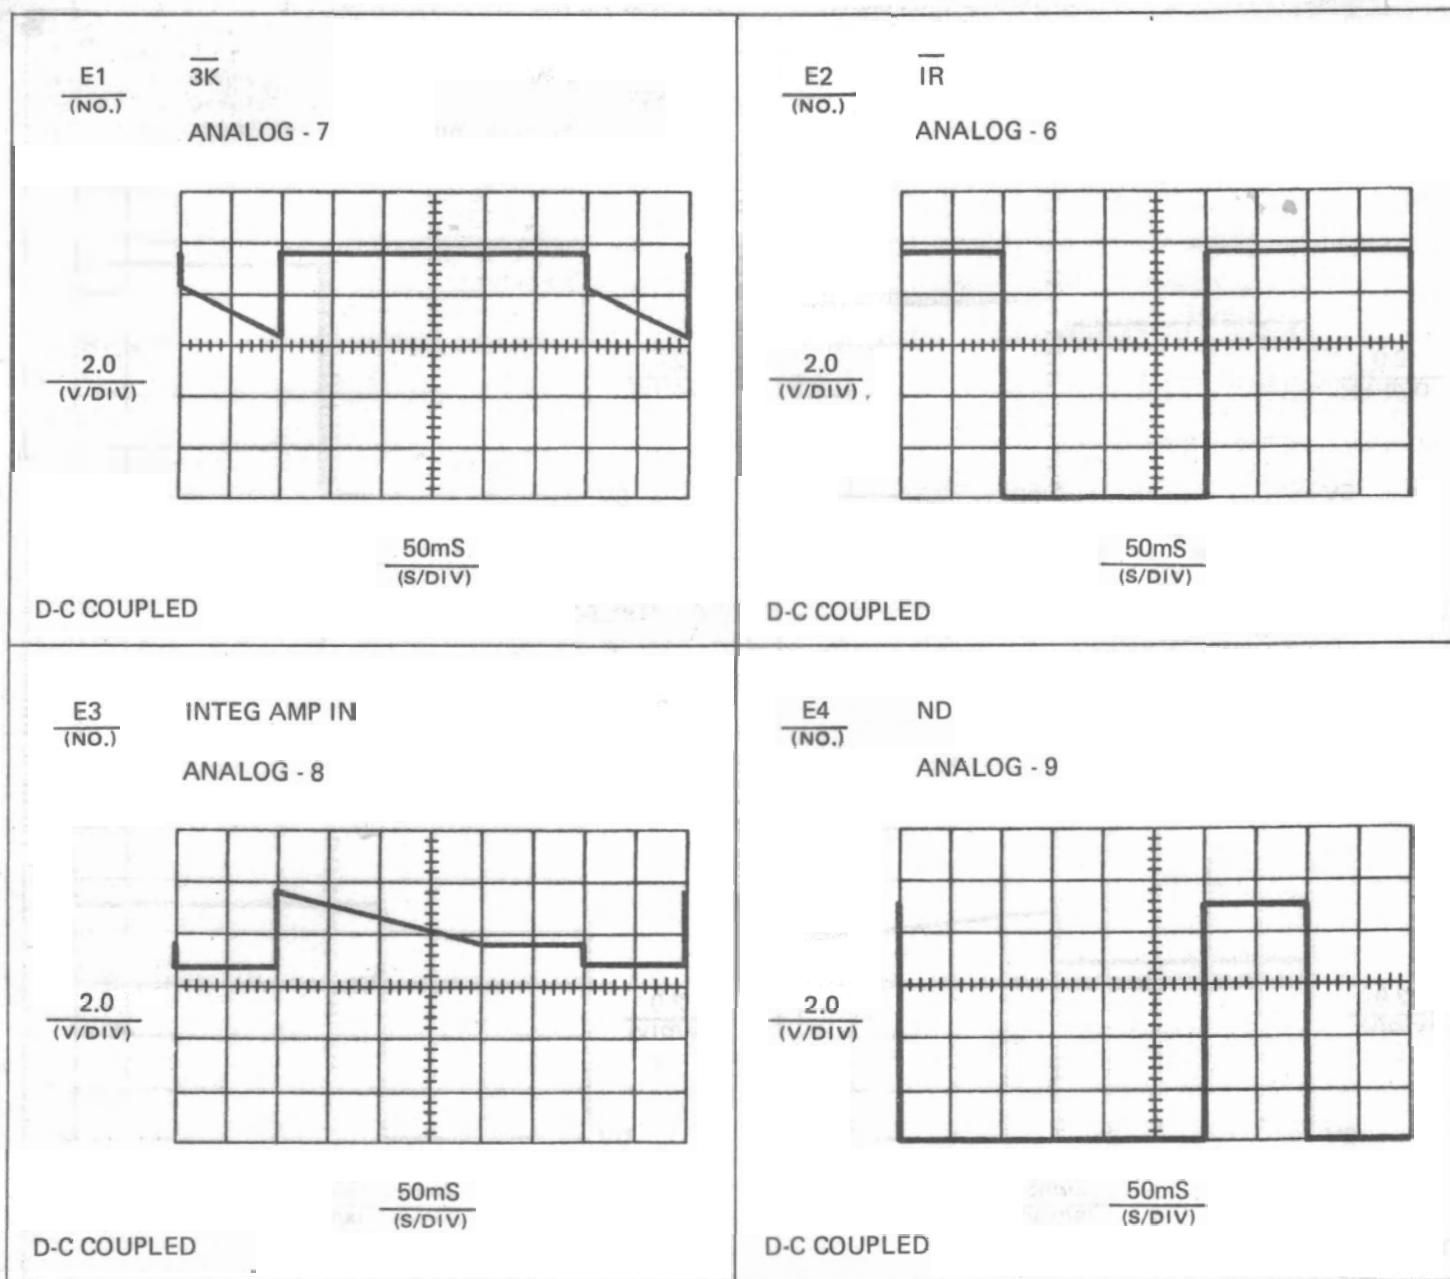


Figure 5.6 - True Time Relationship

5.7.2 DC voltage measurements should be made with a meter having a minimum input resistance of $10M\Omega$. DC values contained in this document were obtained with a Dana Model 4700A, integrating type DMM, with the following specifications for the ranges involved.

Range	Accuracy	Input Resistance
0.1 VDC range	$\pm 0.02\%$ reading $+0.03\%$ full scale	$1000M\Omega$
1.0 VDC range	$\pm 0.01\%$ reading $+0.01\%$ full scale	$1000M\Omega$
10 VDC range	$\pm 0.01\%$ reading $+0.01\%$ full scale	$10M\Omega$

5.7.3 Oscilloscope having a minimum input resistance of $1M\Omega$ in parallel with a 20 pfd capacitor and using a X10 input test probe.

5.7.4 Waveforms in this document were obtained with a Tektronix 454 using the X10 input test probe.

5.7.5 DC current measurements were made with a Dana-meter 2000 (Rev. E).

6.1 DESCRIPTION.

6.1.1 This section contains information and test data for the following production configurations of Danameters:

1. 2000 Danameter (Revision B&C) 5007 Analog Chip and Reference Cell
- 2a. 2000 (A) Danameter (Revision E to L) 5007R Analog Chip and Reference Cell
- 2b. 2000 (A) Danameter (Revision E to L) 5007R Analog Chip and Reference Zener
3. 2100 (A) Danameter (Revision A to H) 4007R Analog Chip and Reference Zener.

6.2 CALIBRATION CHECK DEFINITION.

6.2.1 The first part of each section contains a calibration check table to determine if the displayed results are within the published specification tolerances for all functions and ranges. This is to be used to determine if re-calibration is required or if a malfunction is present for a given function per range.

6.3 SWITCH CLOSURE CHART DEFINITIONS.

6.3.1 The second part is a Switch Closure chart to indicate which switches are energized for a specific function and range. This can also serve to identify malfunctions related to switch contact failures when, for example, a certain switch is common to function and/or range problems.

6.4 DC VOLTAGE AND WAVEFORM CHART.

6.4.1 The third part is a DC Voltage Chart of the Analog IC for various functions and ranges. This is a random test of each function to determine if the voltage at an analog pin is

present or within a acceptable tolerance (typically $\pm 5\%$) of the recorded DC voltages. No test involves input voltages greater than the 20 range (DCV and ACV) to provide a safe environment while troubleshooting is being performed. The 200 and 1000 (DCV and ACV) ranges are scale attenuation functions of peripheral components and switches.

NOTE

In some instances, DC voltages can be measured; but, because of the loading effects on the meter circuitry, the display indicates "OL" (overload). These are noted on the chart, in some cases. A numbered diamond  indicates that DC voltage measurements will serve no useful purpose. These are oscilloscope measurements (waveforms) of the timing and control signals of the instrument. The fourth part is the waveforms of the analog IC timing and control signals for given functions and ranges, indicated by the numbered diamond.

6.5 FUNCTIONAL SCHEMATIC DIAGRAM.

6.5.1 The fourth part is a functional schematic of the complete instrument. The analog and digital chips contain functional block diagrams to assist repair/calibration personnel for troubleshooting and gain a better understanding of the analog and digital operation and circuitry.

6.6 ASSEMBLY DRAWINGS.

6.6.1 The fifth part contains the assembly drawings of the main circuit PCB (top and bottom) and an outline of the switch contacts. The switches are numbered to correspond to those on the switch closure chart. Switches that are not numbered are not used for any function or range.

Table 6.1 - 2000 Calibration Check (Rev. B&C)

Danameter Switch	Standard		Danameter Readout	Acceptable Range
	Type	Output		
2 VDC	DC	0	.000	(Must Read Zero)
		+1	+1.00	+0.099 to +1.101
		-.1	-.100	-.099 to -.101
		+1	+1.000	+0.994 to +1.006
		-1	-1.000	-.994 to -1.006
		+1.9	+1.900	+1.890 to +1.910
		-1.9	-1.900	-1.890 to -1.910
20 VDC			+10V	+10.00
200 VDC		+100V	+100.0	+99.2 to +100.8
1 K VDC		+1000V	+1000	+992 to +1008
Reduce Standard Output and Remove from Meter Input				
2 VAC	AC	0	.000	.000 to .002
		.1V @ 1 KHz	.100	.097 to .103
		1V @ 1 KHz	1.000	.973 to 1.027
		1.9V @ 1 KHz	1.900	1.850 to 1.950
20 VAC		19V @ 1 KHz	19.00	18.50 to 19.50
200 VAC		190V @ 1 KHz	190.0	185.0 to 195.0
1 K VAC		700V @ 1 KHz	700	681 to 719
Reduce Standard Output and Remove from Meter Input				
200Ω	Resistance	0	00.0	00.0 to 00.2
		100Ω	100.0	96.3 to 103.7
20KΩ		10KΩ	10.00	9.84 to 10.16
2MΩ		1MΩ	1.000	.964 to 1.036
200MΩ		100MΩ	100.0	919 to 108.1
Remove Standard from Meter Input				
20μA	Current	+19μA	+19.00	+18.60 to +19.40
2mA		+1.9mA	+1.900	+1.860 to +1.940
200mA		+190mA	+190.0	+186.0 to 194.0
2A		+1.9A	+1.900	+1.860 to +1.940
Reduce Standard Output and Remove from Meter Input				

Table 6.2 - Switch Closure Chart - Danameter Model 2000 (Rev. B & C)

SWITCH NOMENCLATURE	OFF	TEST	DCV 2	DCV 20	DCV 200	DCV 1000	ACV 2	ACV 20	ACV 200	ACV 1000	OHMS 200	OHMS 20K	OHMS 2M	OHMS 200M	CURRENT (DC) 20 μ A	CURRENT (DC) 2mA	CURRENT (DC) 200mA	CURRENT (DC) 2A	FUNCTION (RANGE) SWITCHES
DC INPUT TO RANGE ATTENUATOR																			1
AC INPUT																			2
1 mA CURRENT SOURCE																			3
10 μ A CURRENT SOURCE																			4
1 μ A CURRENT SOURCE																			5
10 mA CURRENT SOURCE																			6
10K Ω CURRENT SHUNT																			7
100 Ω CURRENT SHUNT																			8
1 Ω CURRENT SHUNT																			9
.1 Ω CURRENT SHUNT																			10
9M/1M VOLTAGE DIVIDER (≈ 1 Vdc)																			11
DIRECT DCV INPUT																			12
$\div 10$ DCV INPUT																			13
$\div 100$ DCV INPUT																			14
$\div 1000$ DCV INPUT																			15
DIRECT ACV INPUT																			16
$\div 10$ ACV INPUT																			17
$\div 100$ ACV INPUT																			18
$\div 1000$ ACV INPUT																			19
OHMS CURRENT TO ISOLATOR																			20
DC CURRENT TO ISOLATOR																			21
AC CONVERTER OUTPUT TO ISOLATOR																			22
PROTECTION CLAMP CKT																			23
ISOLATOR INPUT FILTER																			24
AC CONVERTER ENABLE																			25
ISOLATOR GAIN (AC)																			26
ISOLATOR GAIN (CURRENT & K Ω)																			27
POLARITY ENABLE (DCV)																			28
POLARITY ENABLE (DC CURRENT)																			29
ACV COMPENSATION + Vos																			30
2 RNG DECIMAL POSITION																			31
20 RNG DECIMAL POSITION																			32
200 RNG DECIMAL POSITION																			33
9V BATTERY ENABLE																			34
1.35V REF. CELL ENABLE																			35
DC (I, V, Ω) SIG. INPUT																			36
OHMS AMP OUTPUT TO I RESISTORS																			37

 SWITCH CLOSURE

Table 6.3 - Danameter 2000 (Rev. B & C) Reference Cell

	TEST	DCV	ACV	OHMS	DC CURRENT	FUNCTION
	—	2	20 @ 1 KHz	20K Ω	2mA	RANGE
U4 PIN	955	-1.850	19.09	17.74	+1.806	READING
1	-.00013	-.00015	-.00015	-.00016	.0000	LO IN (ISO LO + IN)
2	-.00027	-.00017	-.00031	-.00028	+0.00045	Gm 1 (ISO LO - IN)
3	+9.230 O/L	+9.20 O/L	+9.21 O/L	+9.13 O/L	+9.2 O/L	COMP 2 (ISO LO AMP)
4	-.0000	-.0000	-.0000	-.0000	-.0000	GND POWER SUPPLY
5	+9.488	+0.017	+9.437	+9.463	+9.459	POL LOGIC LEVEL
6	1	5				IR REF. INTEGRATE
7	2	6				3K SIG. INTEGRATE
8	3	7				C1 INTEGRATOR AMP IN
9	4	8				ND NULL DET OUT
10	+1.753	+1.780	+1.795	+1.032	+1.768	OHMS REF (AMP INPUT)
11	+1.987	+1.805	+1.795	+1.195	+1.810	OHMS OUT
12	-.600	-.000	+775 10	-.000	-.000	AC OUT(+ OUT)
13	-.000	-.000	-.000 11	-.000	-.000	Gm 2 (AC - OUT)
14	-8.670	-8.610	-8.425	-8.558	-8.550	-9V POWER SUPPLY
15	+9.338	+9.310	+9.287	+9.275	+9.303	COMP + VOS (AC CONV)
16	-.000	-.000	+0.000 12	-.000	-.000	AC CLAMP BIAS (AC "-" IN)
17	-.000	-.000	-.000 9	+0.000	-.000	AC IN (+ IN)
18	-.000	-.000	+9.77	+0.000	-.000	AC ENABLE
19	+9.856	+9.830	+9.824	+9.824	+9.820	+9V POWER SUPPLY
20	+9.816	+9.800	+9.785	+9.784	+9.781	CLAMP (ISO HI INPUT)
21	+1.316	+1.318	+1.320	+1.319	+1.319	CO (INTEGRATOR CAP COMP.)
22	+1.312	+1.315	+1.316	+1.317	+1.314	BR (REF CELL/ZENER INPUT)
23	+1.314	+1.314	+1.314	+1.315	+1.311	RR (REFERENCE COMPENSATION)
24	+8.757	+8.725	+8.727	+8.721	+8.717	EVOS
25	+9.79	-1.896	+782	+184	+187	BSV (BOOTSTRAP AMP OUTPUT)
26	+9.23 O/L	+9.23 O/L	+9.20 O/L	+9.11 O/L	+9.2 O/L	COMP 1 (ISO HI AMP)
27	+9.78	-1.897	+765	+182	+185	Gm 0 (ISO HI - IN)
28	+9.78	-1.897	+755	+182	+168	HI IN (ISO HI + IN)


U1-14,+702

U1-13,-.936

U1-3,+1.894

1
(NO.)


$\overline{IR}$
U1-6

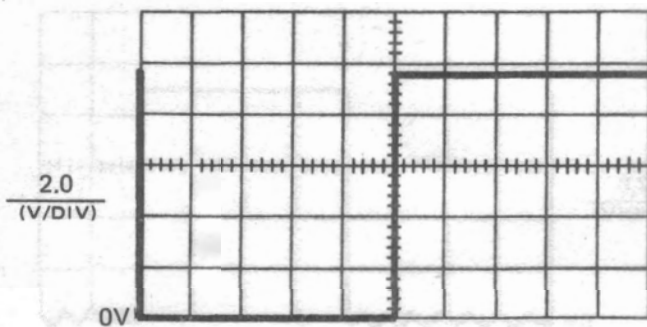

D-C

2
(NO.)


$\overline{3K}$
U1-7

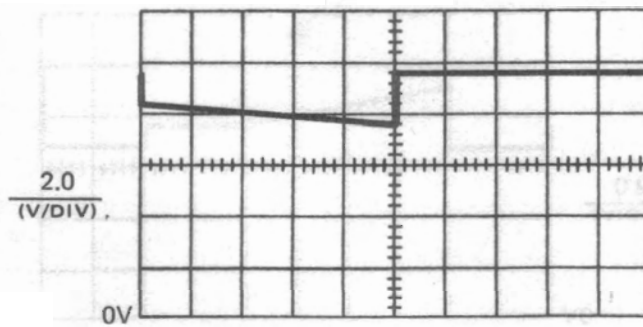

D-C

3
(NO.)


INTEG AMP IN
U1-8

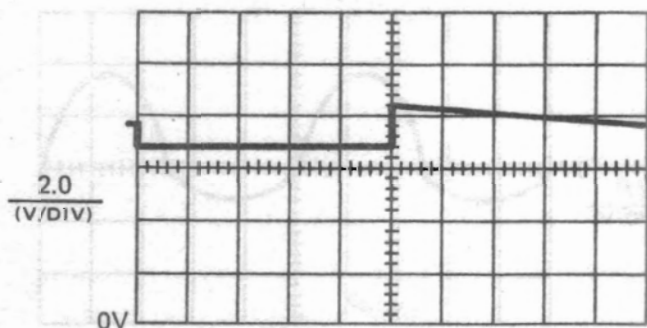

D-C

4
(NO.)


ND
U1-9

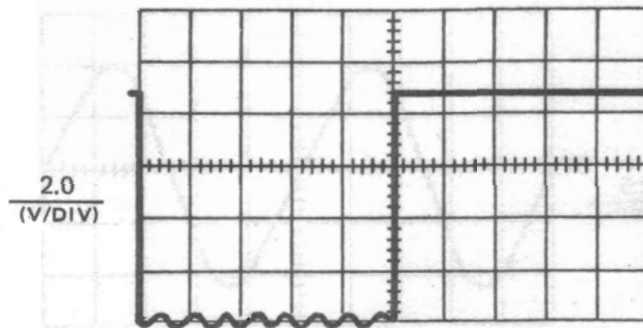

D-C

5
(NO.)


$\overline{IR}$
U1-6

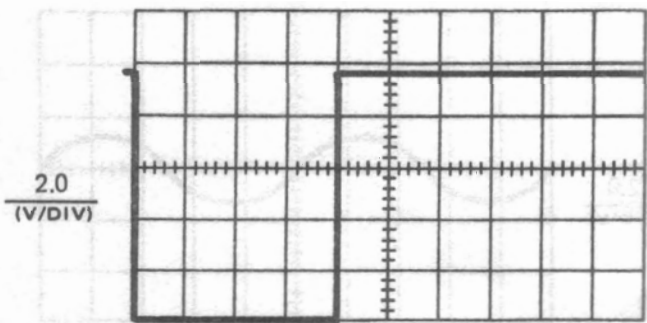

D-C


6
(NO.)

$\overline{3K}$
U1-7

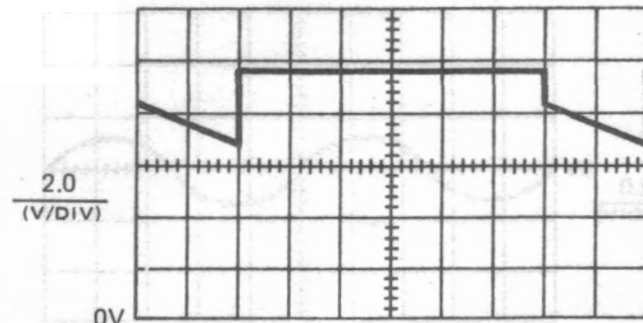


D-C


7
(NO.)
INTEG AMP IN
U1-8

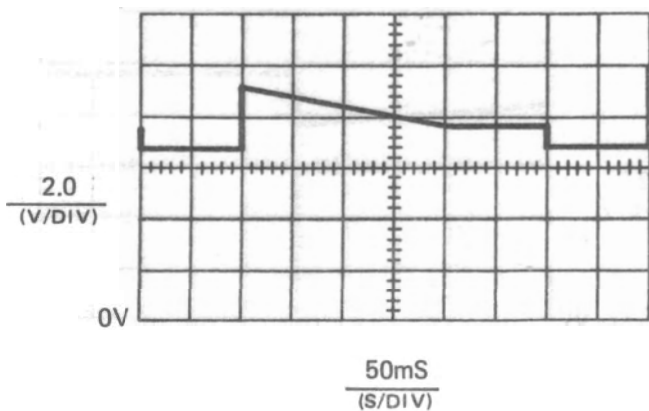


8
(NO.)
ND
U1-9

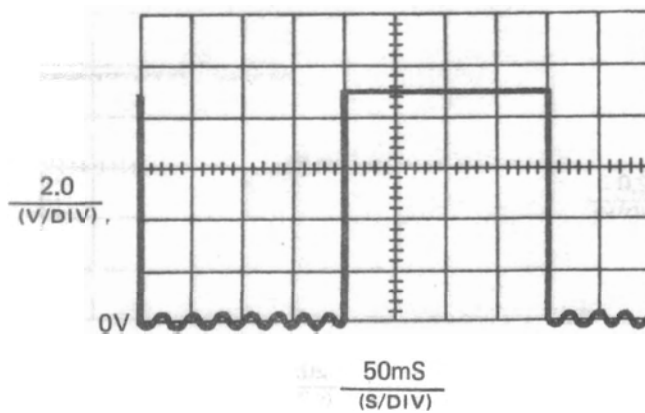


9
(NO.)
AC IN
U1-17

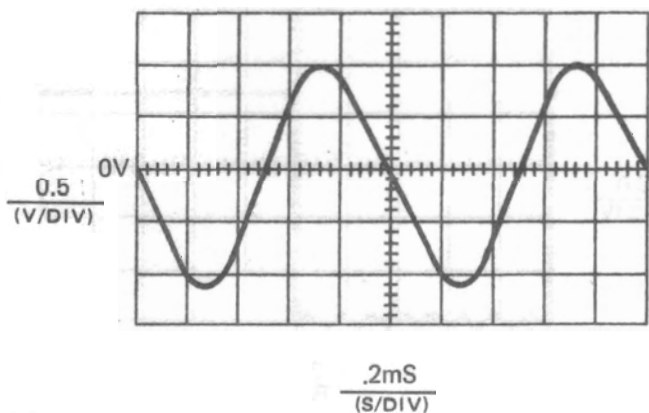


10
(NO.)
AC OUT (+)
U1-12

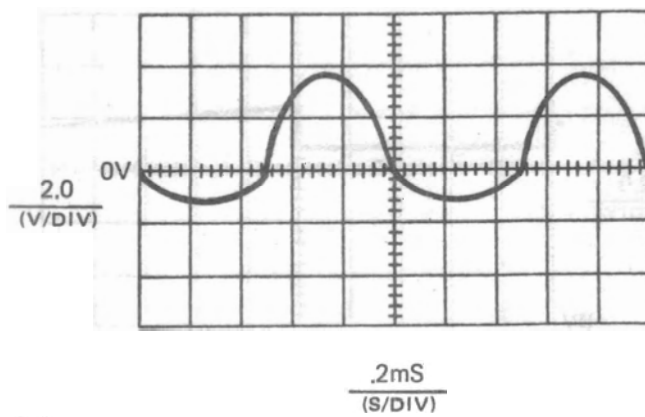


11
(NO.)
AC OUT (-)
U1-13

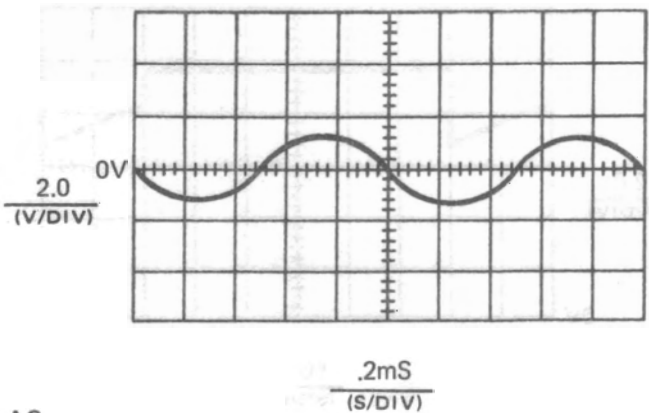

12
(NO.)
AC CLAMP BIAS
U1-16

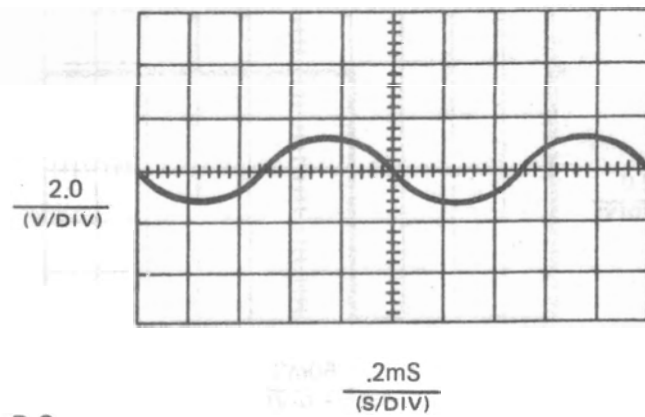

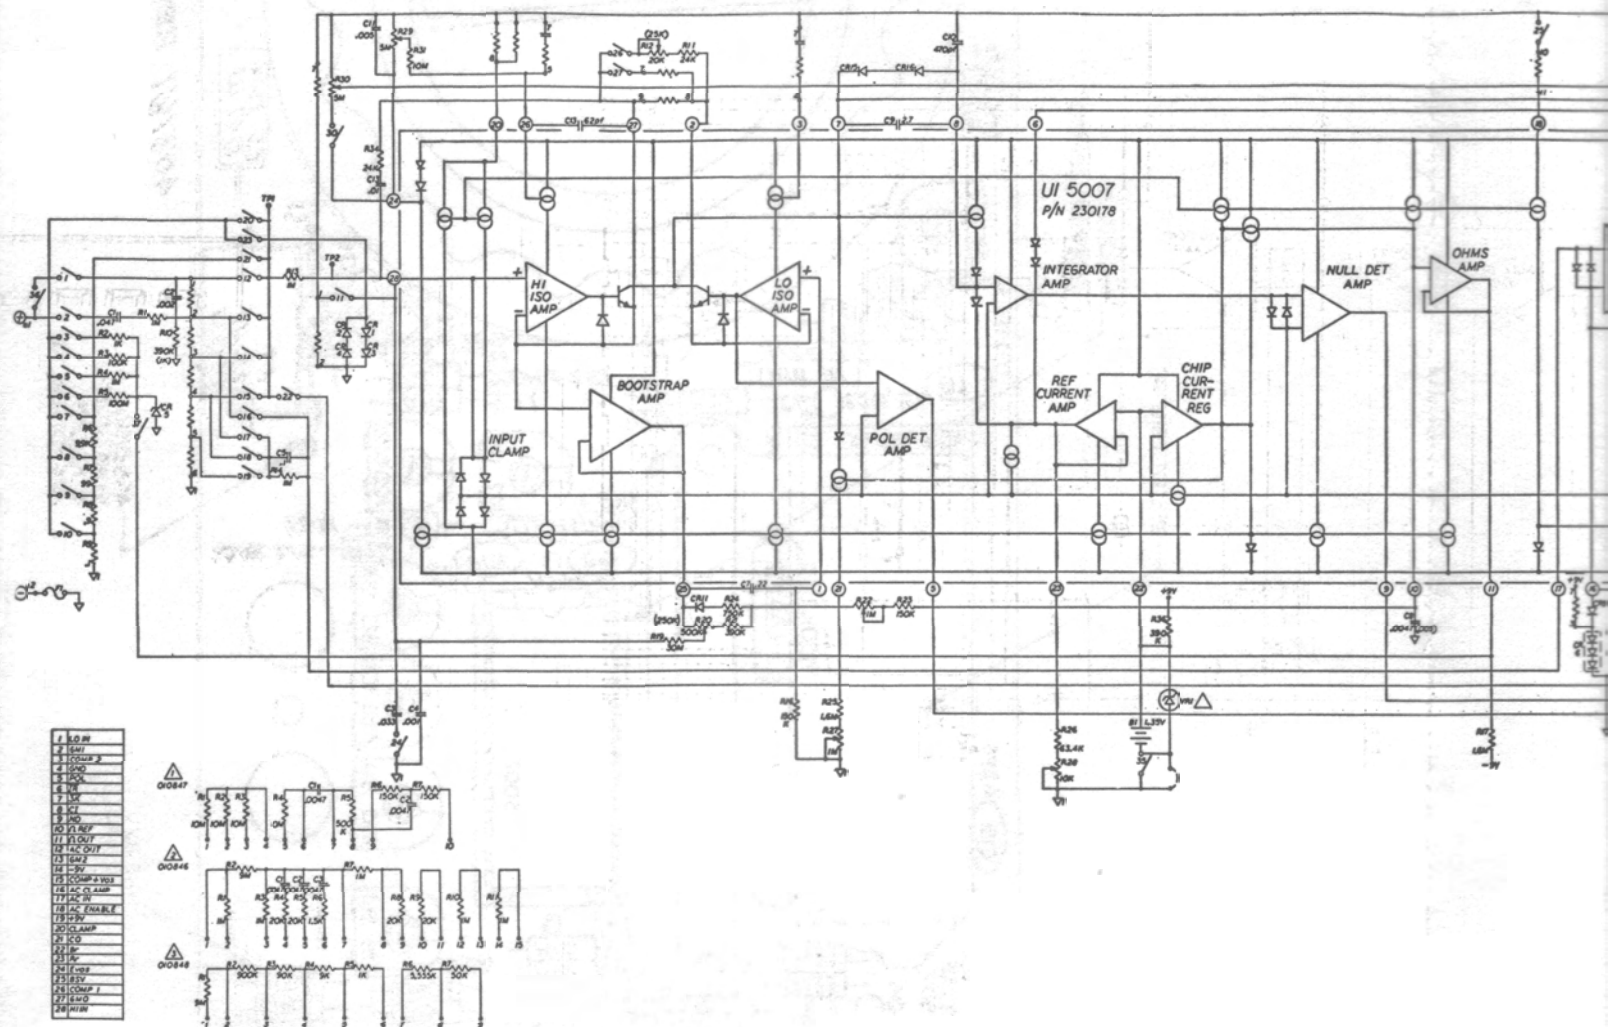

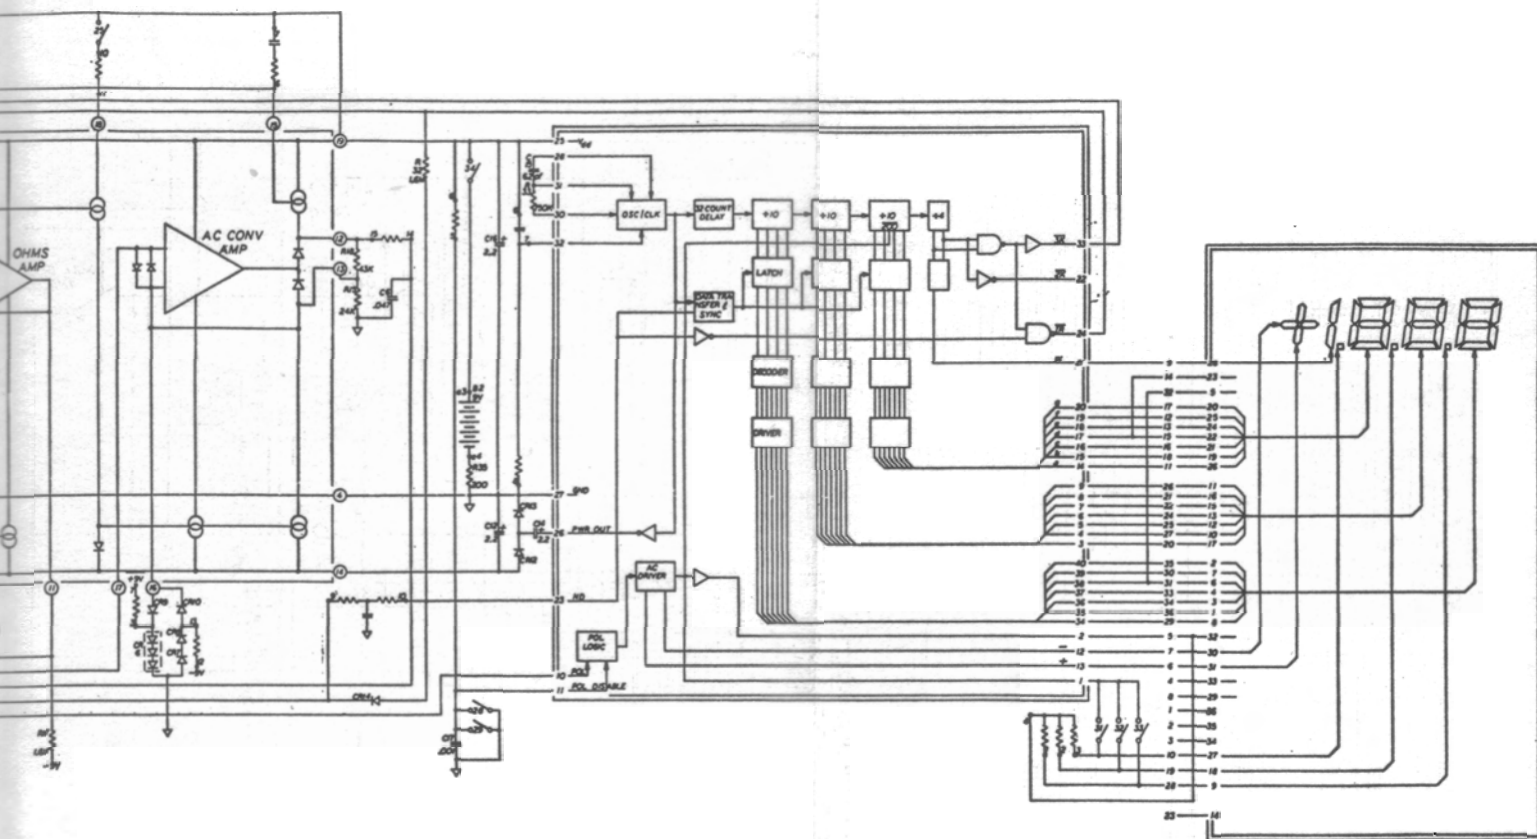
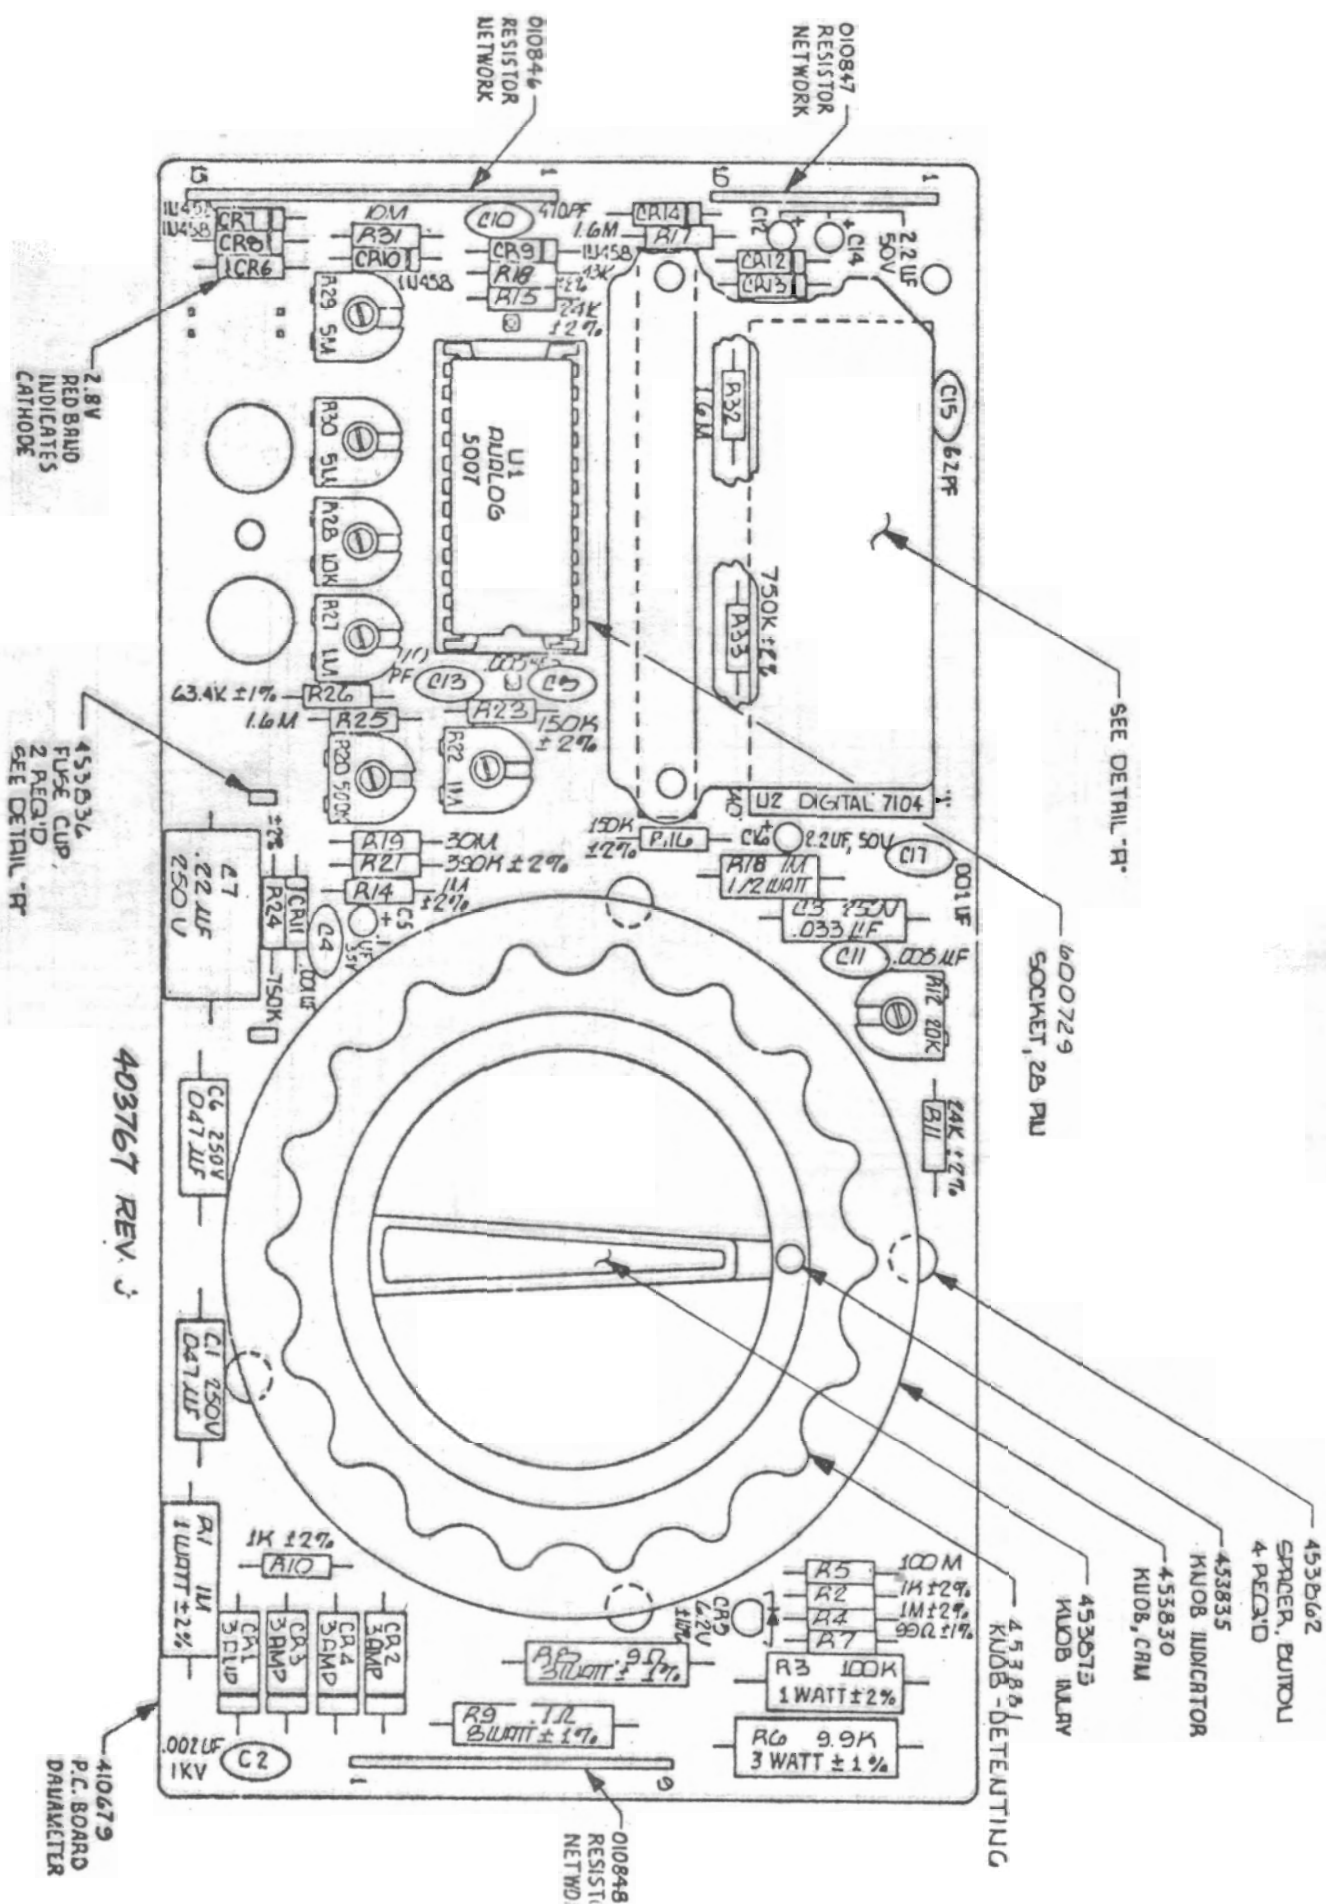


Figure 6.1 - Danameter Functional Schematic 2000 Danameter Rev. B & C



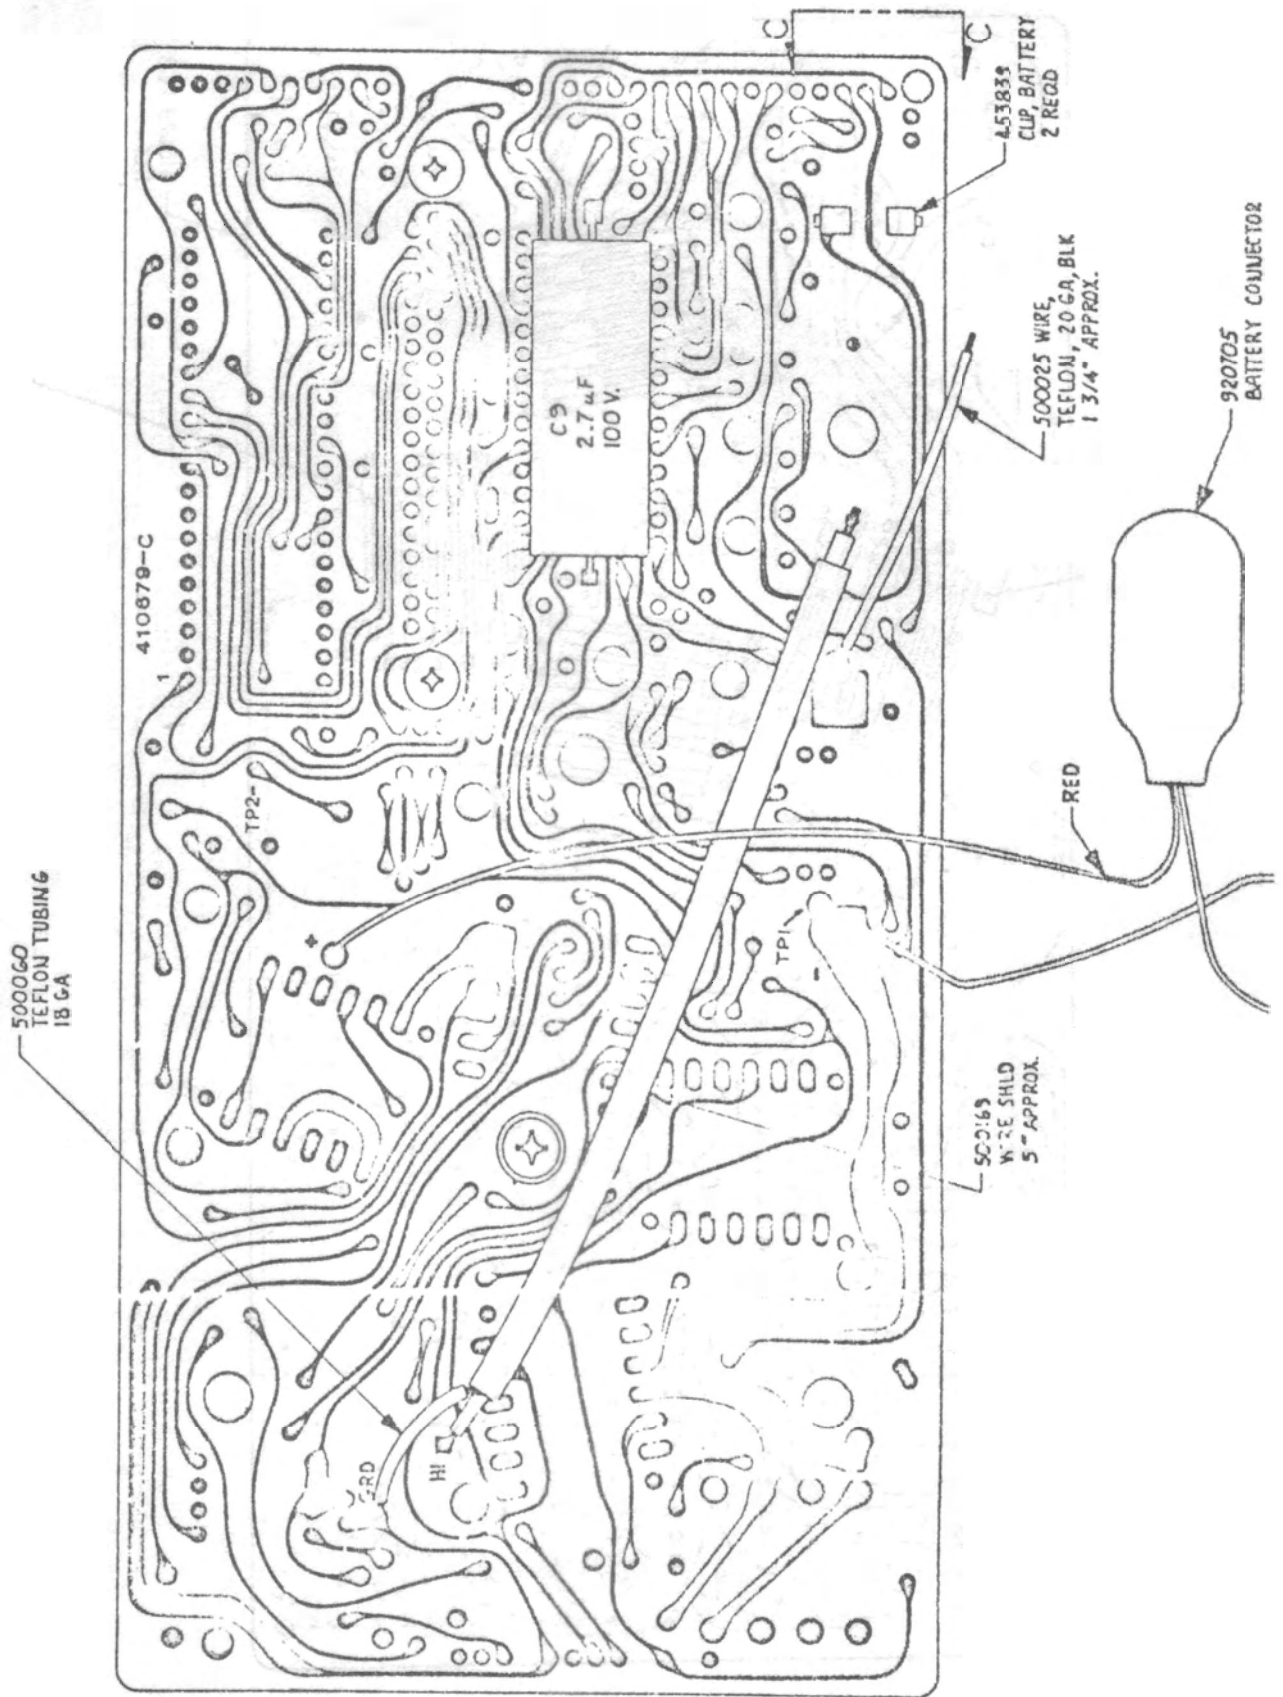


Figure 6.3 - 2000 Danameter (Rev. B & C) Assembly Drawing (Circuit Side)

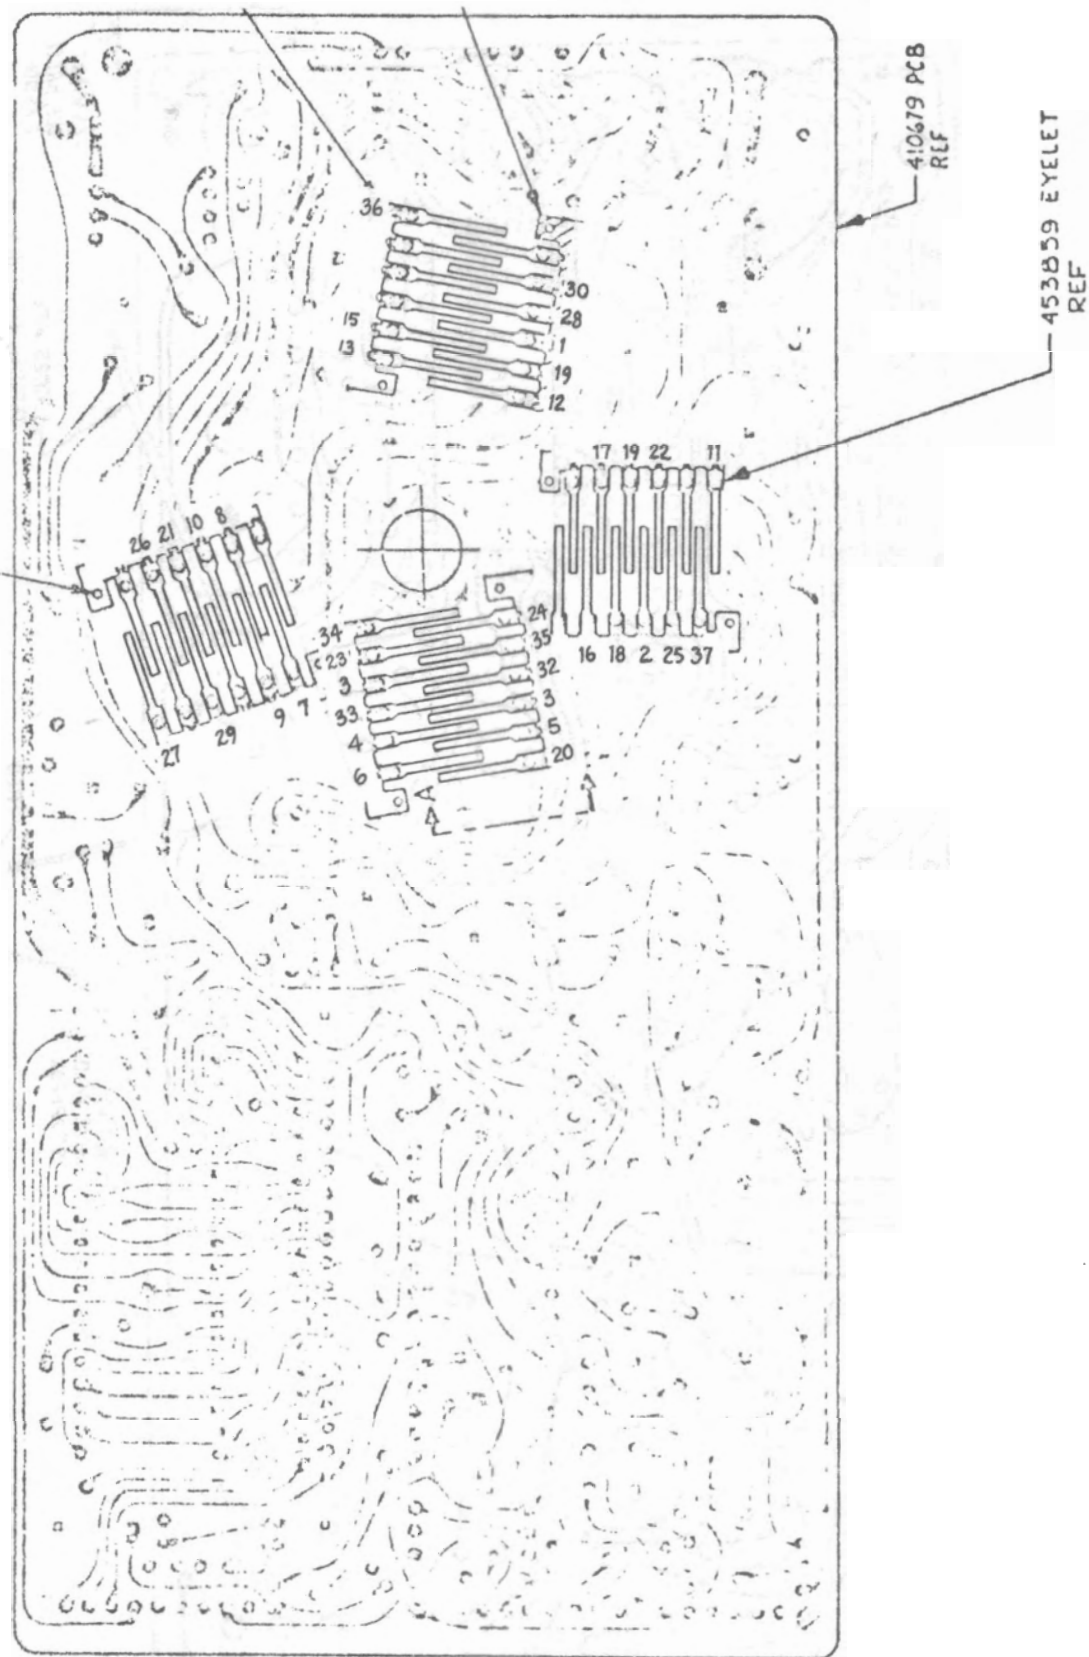


Figure 6.4 - 2000 Danameter (Rev. B & C) Switch Outline

Table 6.4 - 2000 (A) Calibration Check (Rev. E to L)

Danameter Switch	Standard		Danameter Readout	Acceptable Range
	Type	Output		
2 VDC	DC	0	.000	(Must Read Zero)
		+1	+100	+0.99 to +1.01
		-.1	-.100	-.099 to -.101
		+1	+1.000	+0.994 to +1.006
		-1	-1.000	-.994 to -1.006
		+1.9	+1.900	+1.890 to +1.910
		-1.9	-1.900	-1.890 to -1.910
20 VDC		+10V	+10.00	+9.92 to +10.08
200 VDC		+100V	+100.0	+99.2 to +100.8
1 K VDC		+1000V	+1000	+992 to 1008
Reduce Standard Output and Remove from Meter Input				
2 VAC	AC	0	.000	.000 to .002
		.1V @ 1 KHz	.100	.097 to .103
		1V @ 1 KHz	1.000	.973 to 1.027
		1.9V @ 1 KHz	1.900	.950 to 1.050
20 VAC		19V @ 1 KHz	19.00	18.50 to 19.50
200 VAC		190V @ 1 KHz	190.0	185.0 to 195.0
1 K VAC		700V @ 1 KHz	700	681 to 719
Reduce Standard Output and Remove from Meter Input				
200Ω	Resistance	0	00.0	00.0 to 00.2
		100	100.0	96.3 to 103.7
20KΩ		10KΩ	10.00	9.84 to 10.16
2MΩ		1MΩ	1.000	.964 to 1.036
200MΩ		100MΩ	100.0	91.9 to 108.1
Remove Standard from Meter Input				
20μA	Current	+19μA	+19.00	+18.60 to +19.40
2mA		+1.9mA	+1.900	+1.860 to +1.940
200mA		+190mA	+190.0	+186.0 to +194.0
2A		+1.9A	+1.900	+1.860 to 1.940
Reduce Standard Output and Remove from Meter Input				

Table 6.5 - Danameter Model 2000 (Rev. E to L)

SWITCH NOMENCLATURE	OFF	TEST	DCV 2	DCV 20	DCV 200	DCV 1000	ACV 2	ACV 20	ACV 200	ACV 1000	OHMS 200	OHMS 20K	OHMS 2M	OHMS 200M	CURRENT (DC) 20 μ A	CURRENT (DC) 2mA	CURRENT (DC) 200mA	CURRENT (DC) 2A	FUNCTION (RANGE) SWITCHES
DC INPUT TO RANGE ATTENUATOR																			1
AC INPUT																			2
1 μ A CURRENT SOURCE																			3
10 μ A CURRENT SOURCE																			4
1 μ A CURRENT SOURCE																			5
10nA CURRENT SOURCE																			6
10K Ω CURRENT SHUNT																			7
100 Ω CURRENT SHUNT																			8
1 Ω CURRENT SHUNT																			9
.1 Ω CURRENT SHUNT																			10
9M Ω /1M Ω VOLTAGE DIVIDER ($\approx$ 1 Vdc)																			11
DIRECT DCV INPUT																			12
$\div$ 10 DCV INPUT																			13
$\div$ 100 DCV INPUT																			14
$\div$ 1000 DCV INPUT																			15
DIRECT ACV INPUT																			16
$\div$ 10 ACV INPUT																			17
$\div$ 100 ACV INPUT																			18
$\div$ 1000 ACV INPUT																			19
OHMS CURRENT TO ISOLATOR																			20
DC CURRENT TO ISOLATOR																			21
AC CONVERTER OUTPUT TO ISOLATOR																			22
PROTECTION CLAMP CKT																			23
ISOLATOR INPUT FILTER																			24
AC CONVERTER ENABLE																			25
AC FILTER - AC CONV - OUT																			26
ISOLATOR GAIN (2K Ω)																			27
DCV POLARITY LOGIC																			28
DC CURRENT POLARITY LOGIC																			29
NOT USED																			30
2 RNG DECIMAL POSITION																			31
20 RNG DECIMAL POSITION																			32
200 RNG DECIMAL POSITION																			33
9V BATTERY ENABLE																			34
NOT USED																			35
DC (I, V, R) SIG. INPUT																			36
OHMS AMP OUTPUT TO I RESISTORS																			37

 SWITCH CLOSURE

Table 6.6 - Danameter 2000 (Rev. E to L) Reference Cell

	TEST	DCV	ACV	OHMS	DC CURRENT	FUNCTION
	—	2	20 @ 1 KHz	20K Ω	200mA	RANGE
U4 PIN	10.03	-1.916	19.06	19.00	-190.4	READING
1	+0.00032	-.00040	-.0045	-.00042	-.017	LO IN (ISO LO + IN)
2	-.0185	-.001	-.0120	-.001	-.019	Gm 2 (ISO LO - IN)
3	+9.354	+9.318	+9.296	+9.327	+9.292	COMP 2 (ISO LO AMP)
4	-.00003	-0.00004	-.00003	-0.00003	-.017	GND POWER SUPPLY
5	+9.545	-.2446	+9.486	+9.511	-.261	POL LOGIC LEVEL
6	$\diamond 13$	$\diamond 17$				$\overline{IR}$ REF. INTEGRATE
7	$\diamond 14$	$\diamond 18$				$\overline{3K}$ SIG. INTEGRATE
8	$\diamond 15$	$\diamond 19$				C1 INTEGRATOR AMP IN
9	$\diamond 16$	$\diamond 20$				ND NULL DET OUT
10	+1.836	-.822	+2.655	+1.188	+730	OHMS REF (AMP INPUT)
11	+1.992	-.893	+2.878	+1.187	+792	OHMS OUT
12	+1.100	+0.096	+1.883 $\diamond 21$	+0.095	+0.078	AC OUT (+ OUT)
13	+0.017	+0.018	-.008 $\diamond 22$	+0.017	-.000	Gm 3 (- OUT)
14	-8.664	-8.515	-8.282	-8.545	-8.560	-9V POWER SUPPLY
15	+9.330	+9.292	+9.231	+9.300	+9.284	COMP 3 (AC CONV)
16	-7.777	-6.882	-6.660	-6.900	-6.904	AR ISO BIAS
17	+0.0156	+0.0153	-.000 $\diamond 23$	-.085	-.000	AC IN (+ IN)
18	+0.0160	+0.0158	+9.315	+0.0771	-.000	AC ENABLE
19	+9.850	+9.817	+9.786	+9.812	+9.796	+9V POWER SUPPLY
20	-8.000	-7.875	-7.658	-7.890	-7.903	BP (CHIP CURRENT REG FILTER)
21	+1.381	+1.380	+1.381	+1.381	+1.363	CO (INTEGRATOR CAP COMP)
22	+1.367	+1.367	+1.367	+1.367	+1.350	BR (REF CELL/ZENER INPUT)
23	+1.366	+1.366	+1.366	+1.366	+1.349	RR (REFERENCE COMPENSATION)
24	+1.368	+1.368	+1.368	+1.368 O/L	+1.351	RS (CHIP CURRENT REG LOAD)
25	+9.993	-1.984	+1.878	+1.187	-.207	BSV (BOOTSTRAP AMP OUTPUT)
26	+9.350	+9.324	+9.285	+9.250	+9.250	COMP 1 (ISO HI AMP)
27	+9.921	-1.898	+1.877	+1.186	-.208	Gm 1 (ISO HI - IN)
28	+9.915	-1.719	+1.552	+1.167	-.187	HI IN (ISO HI + IN)

U2-14

+1.694

Table 6.7 - Danameter 2000 (Rev. E to L) Reference Zener


	TEST	DCV	ACV	OHMS	DC CURRENT	FUNCTION
	—	20	20 @ 1 KHz	2M Ω	200mA	RANGE
U4 PIN	1004	+18.92	19.26	1.909	+188.9	READING
1	-.0003	-.00036	-.0040	-.0003	+0.19	LO IN (ISO LO + IN)
2	-.0056	-.003	-.0021	-.0016	+0.18	Gm 2 (ISO LO - IN)
3	+9.327	+9.314	+9.287	+9.307	+9.330	COMP 2 (ISO LO AMP)
4	-.0000	-.0000	-.0000	-.0000	+0.19	GND POWER SUPPLY
5	+9.451	+9.438	+9.412	+9.432	+9.446	POL LOGIC LEVEL
6	$\diamond 24$		$\diamond 28$			$\overline{IR}$ REF. INTEGRATE
7	$\diamond 25$		$\diamond 29$			$\overline{3K}$ SIG. INTEGRATE
8	$\diamond 26$		$\diamond 30$			C1 INTEGRATOR AMP IN
9	$\diamond 27$		$\diamond 31$			ND NULL DET OUT
10	+1.832	+2.640	+2.674	+2.272	+1.108	OHMS REF (AMP INPUT)
11	+2.010	+2.897	+2.936	+2.914	+1.215	OHMS OUT
12	+4.400	+3.70	+1.931 $\diamond 32$	+3.68	+3.92	AC OUT(+ OUT)
13	+0.73	+0.67	-.005 $\diamond 33$	+0.67	+0.87	Gm 3 (- OUT)
14	-8.657	-8.568	-8.353	-8.561	-8.537	-9V POWER SUPPLY
15	+9.300	+9.290	+9.220	+9.283	-9.298	COMP 3 (AC CONV)
16	-7.750	-6.890	-6.652	-6.871	-6.867	AR ISO BIAS
17	-.001	-.002	-.000 $\diamond 34$	-.002	-.001	AC IN (+ IN)
18	-.001	-.001	+9.312	-.000	-.000	AC ENABLE
19	+9.810	+9.797	+9.770	+9.791	+9.805	+9V POWER SUPPLY
20	-8.004	-7.924	-7.724	-7.919	-7.892	BP (CHIP CURRENT REG FILTER)
21	+1.210	+1.210	+1.210	+1.210	+1.229	CO (INTEGRATOR CAP COMP)
22	+1.200	+1.200	+1.200	+1.200	+1.219	BR (REF CELL/ZENER INPUT)
23	+1.200	+1.200	+1.200	+1.200	+1.219	RR (REFERENCE COMPENSATION)
24	+1.200	+1.200	+1.200	+1.200 O/L	+1.219	RS (CHIP CURRENT REG LOAD)
25	+1.004	+1.889	+1.920	+1.906	+2.205	BSV (BOOTSTRAP AMP OUTPUT)
26	+9.324	+9.308	+9.278	+9.302	+9.257	COMP 1 (ISO HI AMP)
27	+1.006	+1.890	+1.920	+1.907	+2.205	Gm 1 (ISO HI - IN)
28	+1.005	+1.891	+1.921	+1.909	+2.206	HI IN (ISO HI + IN)

U2-14

+1.913

13
(NO.)


$\overline{IR}$
U4-6

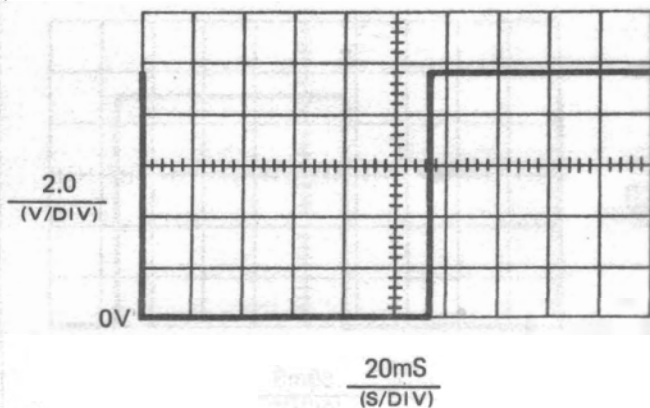

D-C

14
(NO.)


$\overline{3K}$
U4-7

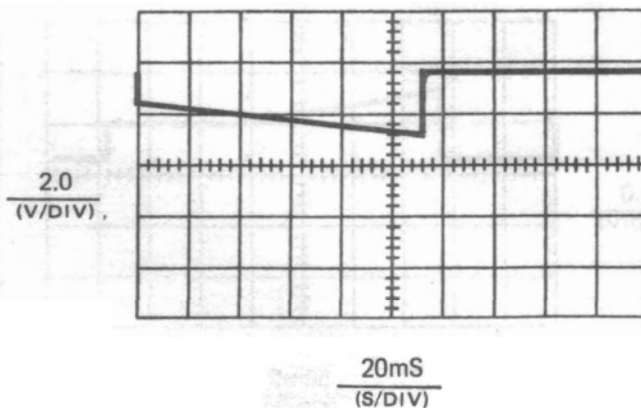

DC

15
(NO.)


INTEG AMP IN
U4-8

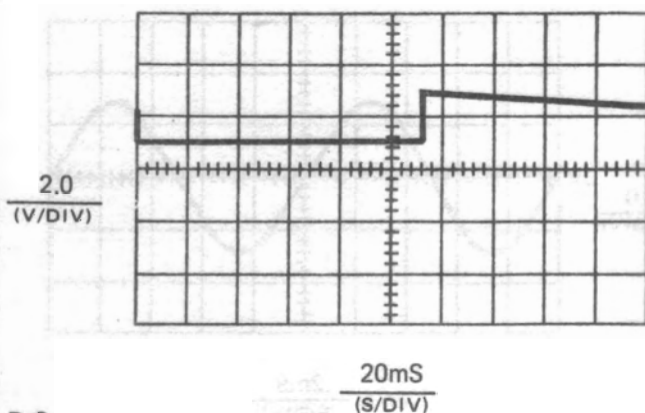

D-C


16
(NO.)

ND
U4-9

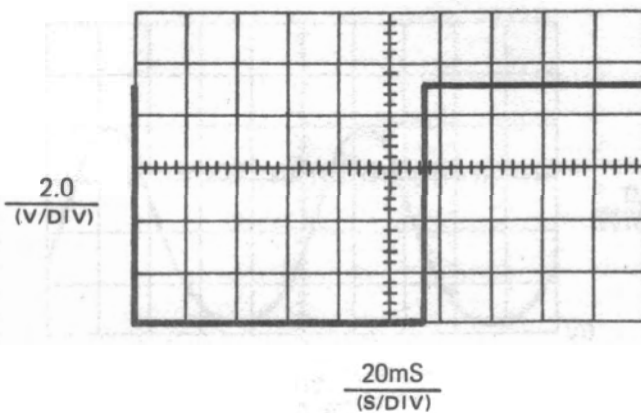


17
(NO.)

$\overline{IR}$
U4-6

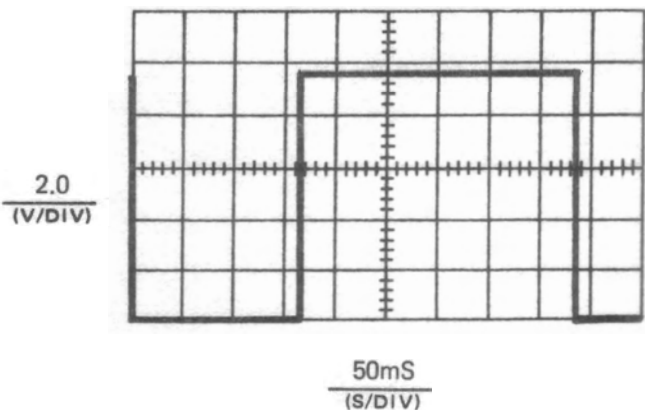

18
(NO.)

$\overline{3K}$
U4-7

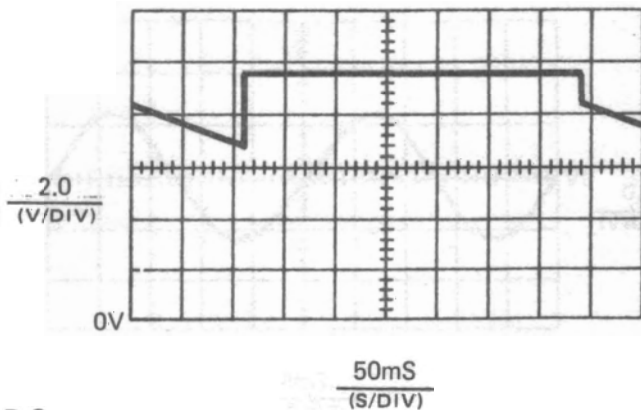


D-C

19
(NO.)

INTEG AMP IN

U4-8

2.0
(V/DIV)

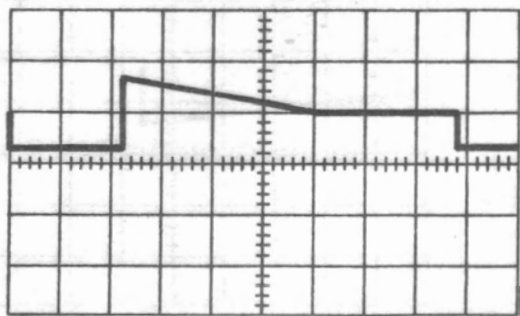

50mS
(S/DIV)


D-C

20
(NO.)

ND

U4-9

2.0
(V/DIV)

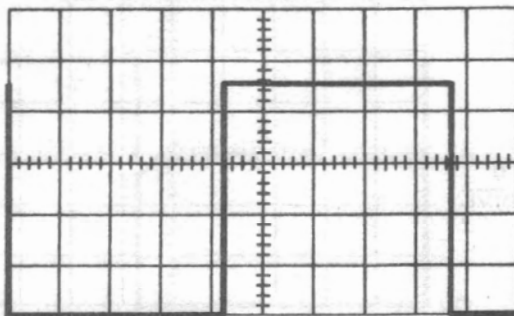

50mS
(S/DIV)


DC

21
(NO.)

AC OUT (+)

U4-12

1.0
(V/DIV)

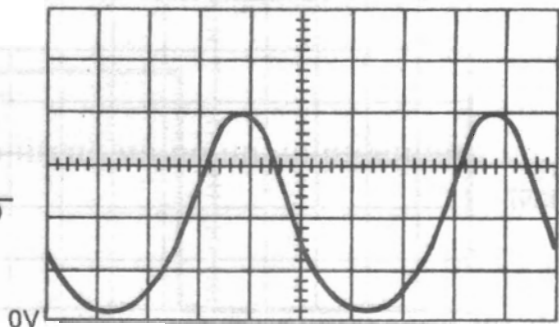

.2mS
(S/DIV)


D-C

22
(NO.)

AC OUT (-)

U4-13

1.0
(V/DIV)

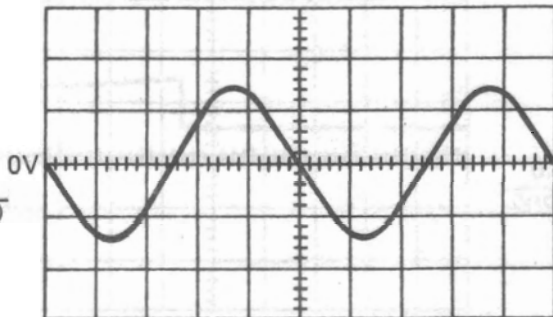

.2mS
(S/DIV)


AC COUPLED

23
(NO.)

AC IN

U4-17

1.0
(V/DIV)

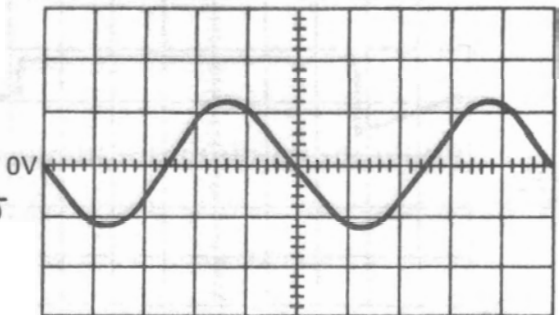


.2mS
(S/DIV)

AC COUPLED

24
(NO.)

IR


U4-6

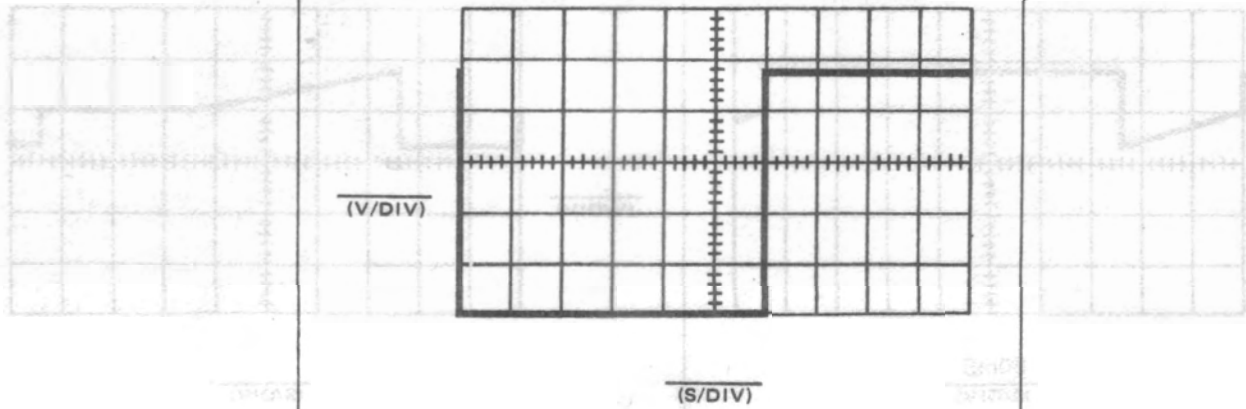

25
(NO.)

3K

U4-7

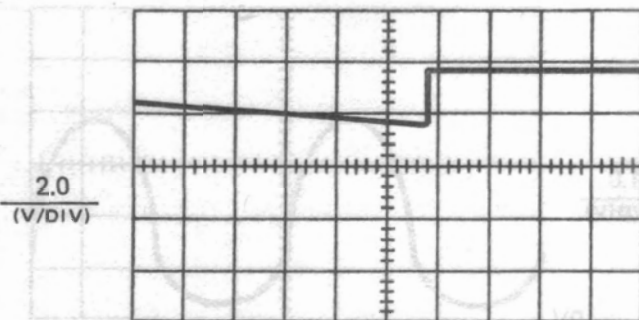


DC

26
(NO.)

INTEG AMP IN

U4-8

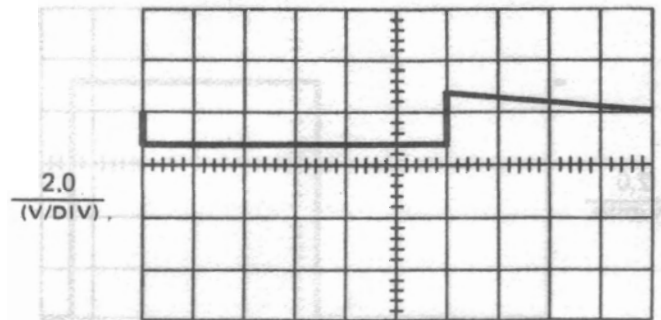


D-C

27
(NO.)

ND

U4-9

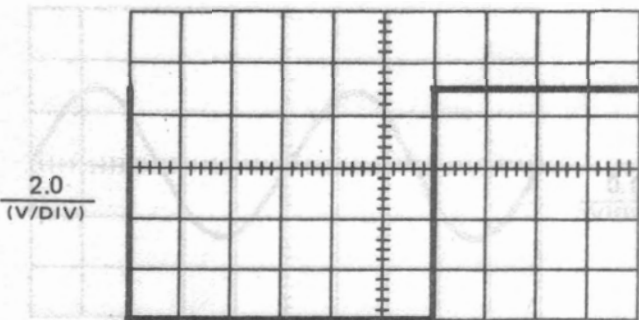


D-C

28
(NO.)

IR

U4-6

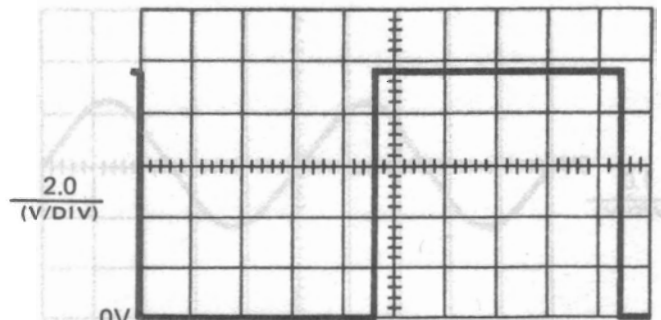


D-C

29
(NO.)

3K
U4-7

2.0
(V/DIV)

0V

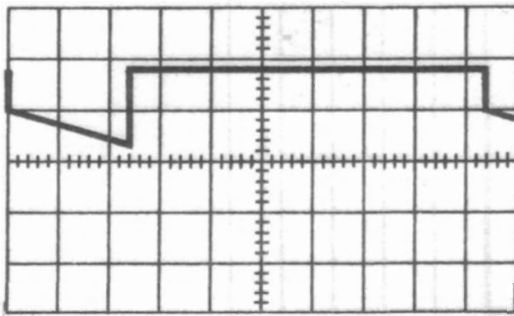


50mS
(S/DIV)

D-C

30
(NO.)

INTEG AMP IN
U4-8

(V/DIV)

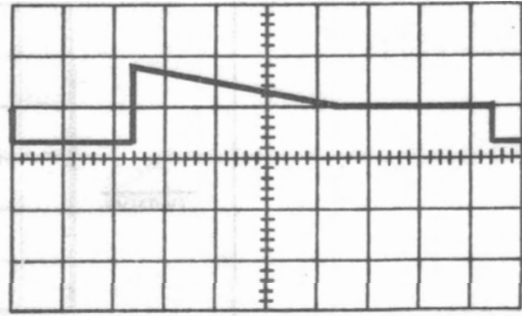


(S/DIV)

31
(NO.)

ND
U4-9

2.0
(V/DIV)

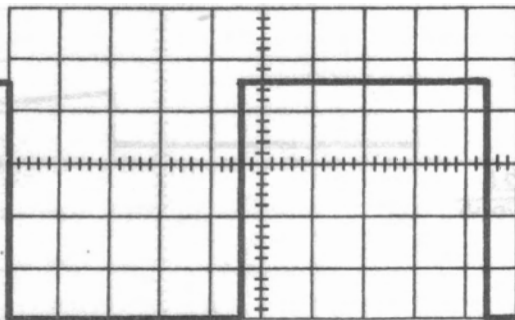

50mS
(S/DIV)


D-C

32
(NO.)

AC OUT (+)
U4-12

1.0
(V/DIV)

0V

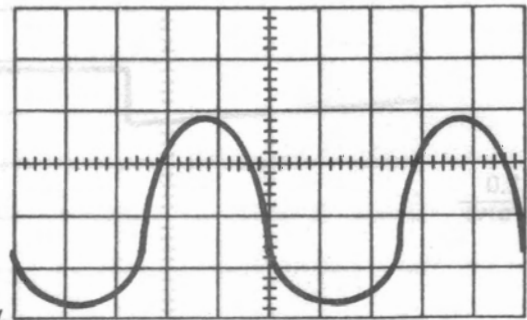


0.2mS
(S/DIV)

33
(NO.)

AC OUT (-)
U4-13

1.0
(V/DIV)

0V

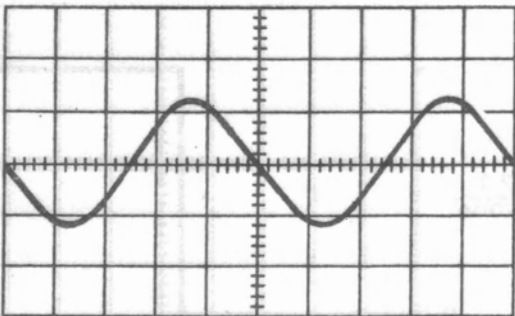


0.2mS
(S/DIV)

34
(NO.)


AC IN
U4-17

1.0
(V/DIV)

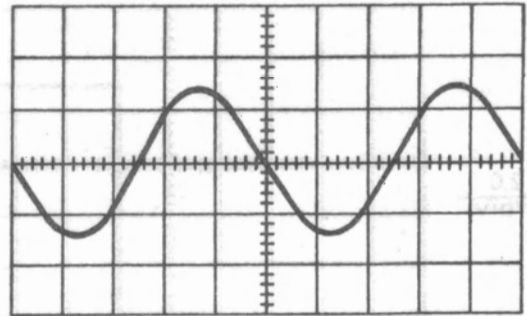


0.2mS
(S/DIV)

AC COUPLED

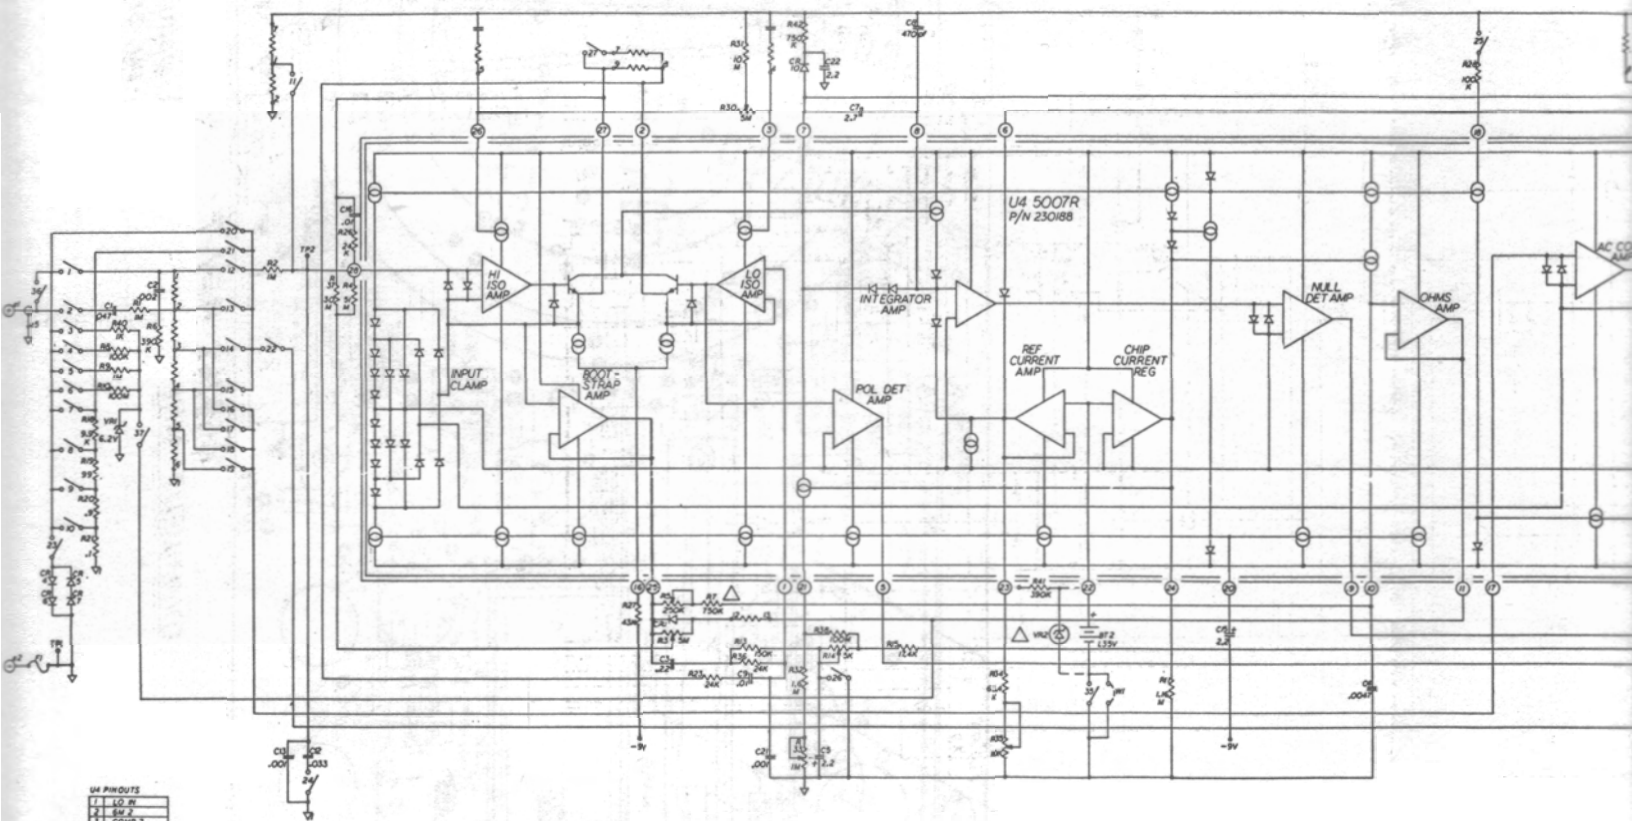

U4 PINS

1	IO RE
2	SW 2
3	COMP 2
4	SW 1
5	IO
6	REF
7	IO
8	IO
9	IO
10	IO
11	IO
12	IO
13	IO
14	IO
15	IO
16	IO
17	IO
18	IO
19	IO
20	IO
21	IO
22	IO
23	IO
24	IO
25	IO
26	IO
27	IO
28	IO
29	IO
30	IO
31	IO
32	IO
33	IO
34	IO
35	IO
36	IO
37	IO
38	IO
39	IO
40	IO

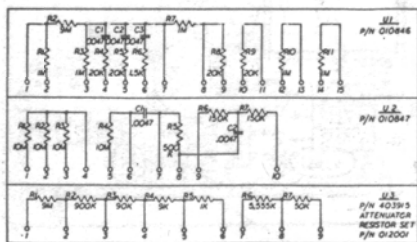



6-20


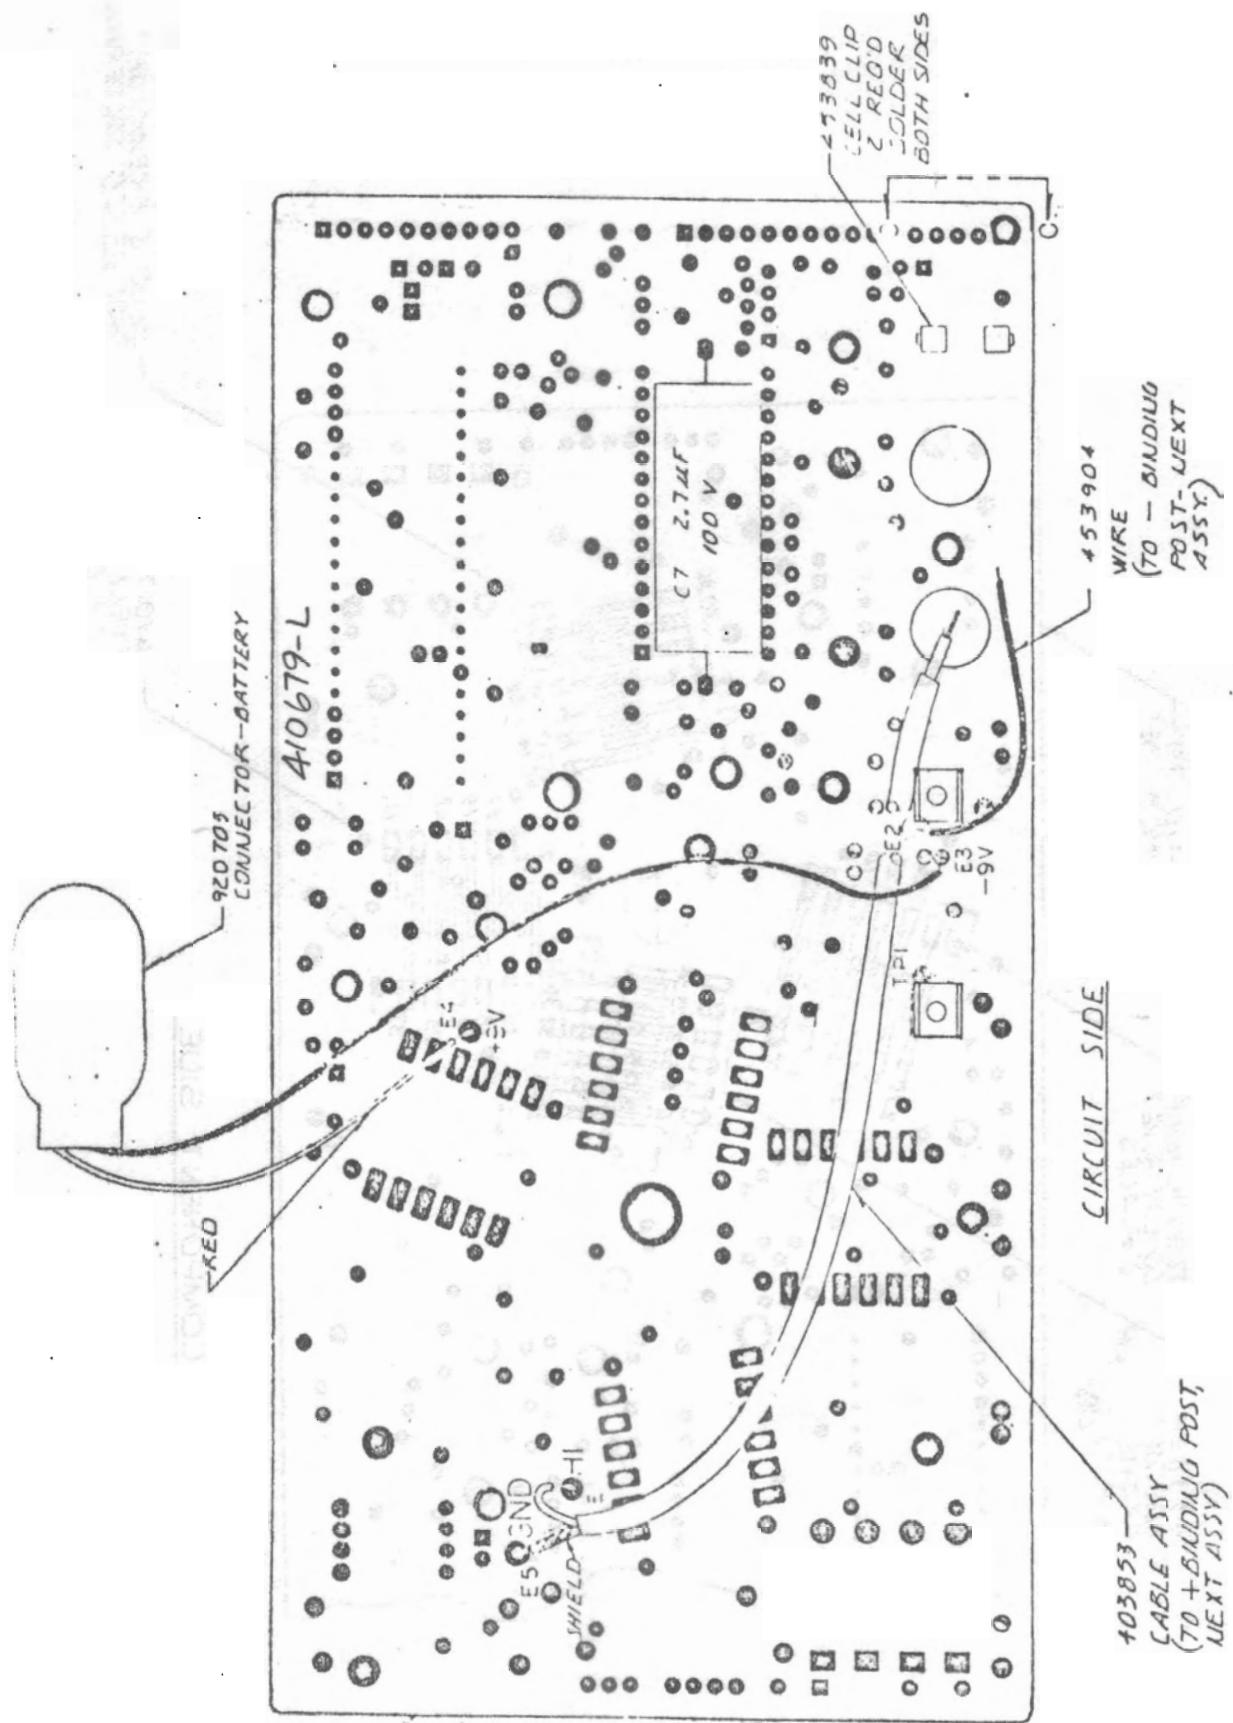


Figure 6.7 - 2000 (A) Danameter (Rev. E to L) Assembly Drawing (Circuit Side)

 

6-22

Table 6.8 - 2100 (A) Calibration Check (All Rev's)

Danameter Switch	Standard		Danameter Readout	Acceptable Range
	Type	Output		
2 VDC	DC	0	.000	(Must read zero)
		+1	+1.00	+0.99 to +1.01
		-.1	-.100	-.099 to -.101
		+1	+1.000	+0.996 to +1.004
		-1	-1.000	-.996 to -1.004
		+1.9	+1.900	+1.894 to +1.906
		-1.9	-1.900	-1.894 to -1.906
20 VDC			+10V	+10.00
200 VDC		+100V	+100.0	+99.5 to +100.5
1K VDC		+1000V	+1000	+995 to +1005
Reduce standard output and remove from meter input				
2 VAC	AC	0	.000	.000 to .002
		.1V @ 1 KHz	.100	.097 to .103
		1V @ 1 KHz	1.000	.988 to 1.012
		1.9V @ 1 KHz	1.900	1.879 to 1.921
20 VAC			19V @ 1 KHz	19.00
200 VAC		190V @ 1 KHz	190.0	187.9 to 192.1
1K VAC		700V @ 1 KHz	700	691 to 709
Reduce standard output and remove from meter input				
2K Ω	Resistance	0	.000	.000 to .002
		1K Ω	1.000	.993 to 1.007
20K Ω		10K Ω	10.00	9.94 to 10.06
200K Ω		100K Ω	100.0	99.4 to 100.6
20M Ω		10M Ω	10.00	9.91 to 10.09
Remove standard from meter input				
20 μ A	Current	+19 μ A	+19.00	+18.88 to +19.12
2mA		+1.9mA	+1.900	+1.888 to +1.912
200mA		+190mA	+190.0	+188.8 to +191.2
2A		+1.9A	+1.900	+1.888 to +1.912
Reduce standard output and remove from meter input				

Table 6.9 - Danameter Model 2100

SWITCH NOMENCLATURE	OFF	TEST	DCV 2	DCV 20	DCV 200	DCV 1000	ACV 2	ACV 20	ACV 200	ACV 1000	OHMS 2K	OHMS 20K	OHMS 200K	OHMS 20M	CURRENT (DC) 20 μ A	CURRENT (DC) 2mA	CURRENT (DC) 200mA	CURRENT (DC) 2A	FUNCTION (RANGE) SWITCHES
DC INPUT TO ATTENUATOR																			1
AC INPUT																			2
1 μ A CURRENT SOURCE																			3
10 μ A CURRENT SOURCE																			4
1 μ A CURRENT SOURCE																			5
10nA CURRENT SOURCE																			6
10K Ω CURRENT SHUNT																			7
100 Ω CURRENT SHUNT																			8
1 Ω CURRENT SHUNT																			9
.1 Ω CURRENT SHUNT																			10
9M Ω /1M Ω VOLTAGE DIVIDER ($\approx$ 1 Vdc)																			11
DIRECT DCV INPUT																			12
$\div$ 10 DCV INPUT																			13
$\div$ 100 DCV INPUT																			14
$\div$ 1000 DCV INPUT																			15
DIRECT ACV INPUT																			16
$\div$ 10 ACV INPUT																			17
$\div$ 100 ACV INPUT																			18
$\div$ 1000 ACV INPUT																			19
OHMS CURRENT TO ISOLATOR																			20
DC CURRENT TO ISOLATOR																			21
AC CONVERTER OUTPUT TO ISOLATOR																			22
PROTECTION CLAMP CKT																			23
ISOLATOR INPUT FILTER																			24
AC CONVERTER ENABLE																			25
AC FILTER - AC CONV - OUT																			26
ISOLATOR GAIN (2K Ω)																			27
DCV POLARITY LOGIC																			28
DC CURRENT POLARITY LOGIC																			29
NOT USED ENSATION + V _{os}																			30
2 RNG DECIMAL POSITION																			31
20 RNG DECIMAL POSITION																			32
200 RNG DECIMAL POSITION																			33
9V BATTERY ENABLE																			34
NOT USED																			35
DC (I, V, R) SIG. INPUT																			36
OHMS AMP OUTPUT TO I RESISTORS																			37



 SWITCH CLOSURE

Table 6.10 - Danameter 2100 (Rev. A to H)

	TEST	DCV	ACV	OHMS	DC CURRENT	FUNCTION
	—	200	20 @ 1 KHz	200K Ω	200	RANGE
U4 PIN	985	-189.9	19.02	189.9	-190.0	READING
1	-.000	-.0002	-.0042	-.0002	-.017	LO IN (ISO LO + IN)
2	-.005	-.001	-.0124	-.009	-.017	Gm 2 (ISO LO - IN)
3	+9.305	+9.290	+9.263	+9.286	+9.244	COMP 2 (ISO LO AMP)
4	-.0000	-.0000	-.0000	-.0000	-.0000	GND POWER SUPPLY
5	+9.467	-.212	+9.426	+9.448	-.229	POL LOGIC LEVEL
6	$\diamond 35$				$\diamond 42$	IR REF. INTEGRATE
7	$\diamond 36$				$\diamond 43$	3K SIG. INTEGRATE
8	$\diamond 37$				$\diamond 44$	C1 INTEGRATOR AMP IN
9	$\diamond 38$				$\diamond 45$	ND NULL DET OUT
10	+2.497	+0.85	+3.266	+2.821	+1.500	OHMS REF (AMP INPUT)
11	+2.985	+1.00	+3.903	+3.896	+1.792	OHMS OUT
12	+0.88	+0.86	+1.910 $\diamond 39$	+0.86	+0.068	AC OUT(+ OUT)
13	+0.015	+0.015	-.006 $\diamond 40$	+0.015	+0.001	Gm 3 (- OUT)
14	-8.665	-8.571	-8.346	-8.563	-8.584	-9V POWER SUPPLY
15	+9.282	+9.270	+9.195	+9.264	+9.250	COMP 3 (AC CONV)
16	-7.772	-6.887	-6.664	-6.880	-6.900	AR ISO BIAS
17	-.001	-.001	-.001 $\diamond 41$	-.001	-.001	AC IN (+ IN)
18	-.000	-.000	+9.294	-.000	-.000	AC ENABLE
19	+9.797	+9.785	+9.755	+9.779	+9.776	+9V POWER SUPPLY
20	-8.008	-7.923	-7.710	-7.914	-7.934	BP (CHIP CURRENT REG FILTER)
21	+1.200	+1.200	+1.200	+1.200	+1.184	CO (INTEGRATOR CAP COMP)
22	+1.190	+1.190	+1.190	+1.190	+1.173	BR (REF CELL/ZENER INPUT)
23	+1.190	+1.190	+1.190	+1.190	+1.173	RR (REFERENCE COMPENSATION)
24	+1.191	+1.191	+1.191	+1.191 O/L	+1.174	RS (CHIP CURRENT REG. LOAD)
25	+9.85	-1.899	+1.891	+1.897	-.205	BSV (BOOTSTRAP AMP OUTPUT)
26	+9.300	+9.294	+9.257	+9.283	+9.227	COMP 1 (ISO HI AMP)
27	+9.84	-1.907	+1.890	+1.896	-.207	Gm 1 (ISO HI - IN)
28	+9.85	-1.899	+1.893	+1.898	-.205	HI IN (ISO HI + IN)

U1-14


+1.702

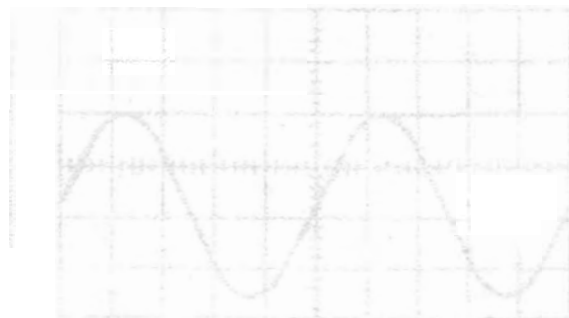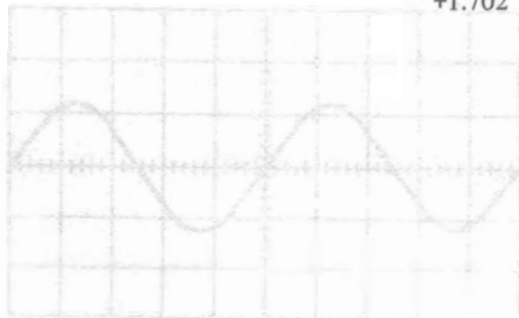

35
(NO.)

IR
U4-6

2.0
(V/DIV)

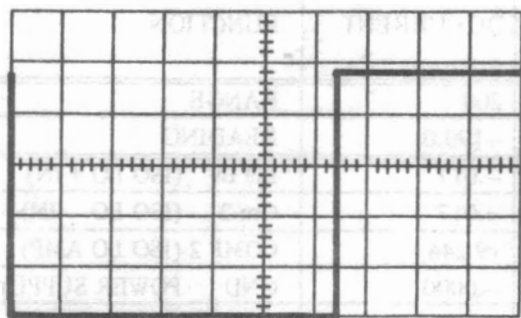


20mS
(S/DIV)

36
(NO.)

3K
U4-7

2.0
(V/DIV)

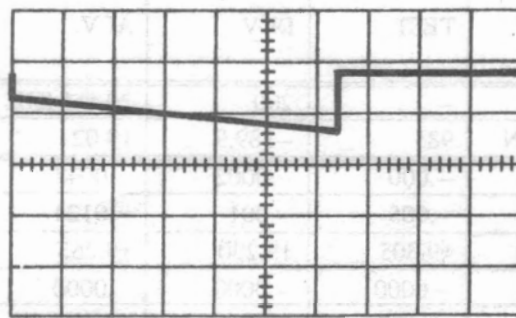


20mS
(S/DIV)

D-C

37
(NO.)

INTEG AMP IN
U4-8

2.0
(V/DIV)

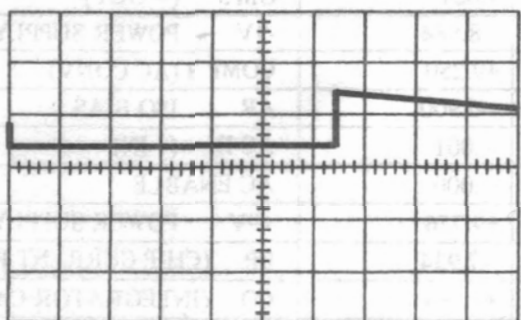


20mS
(S/DIV)

D-C

38
(NO.)

ND
U4-9

2.0
(V/DIV)

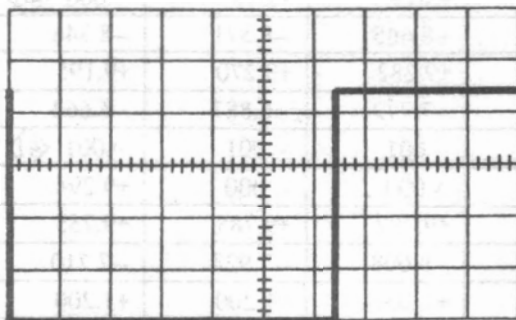


20mS
(S/DIV)

D-C

39
(NO.)

AC OUT (+)
U4-12

1.0
(V/DIV)

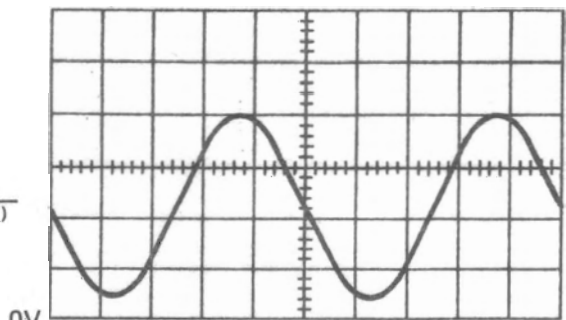


0.2mS
(S/DIV)

D-C COUPLED

40
(NO.)

AC OUT (-)
U4-13

1.0
(V/DIV)

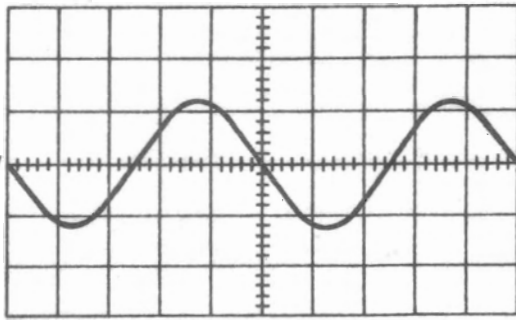


0.2mS
(S/DIV)

A-C COUPLED

41
(NO.)

AC IN
U4-17

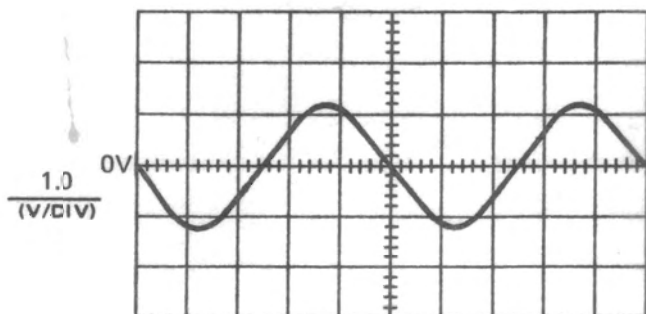


AC COUPLED

(S/DIV)

42
(NO.)

$\overline{IR}$
U4-6

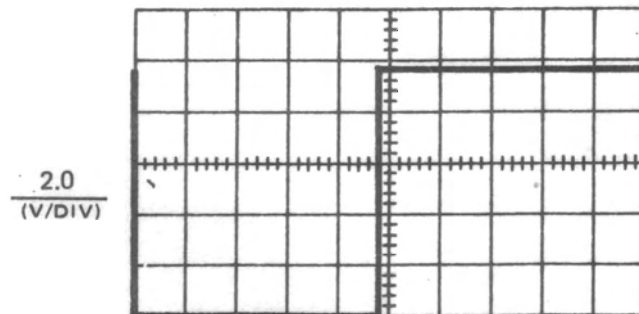


D-C

50mS
(S/DIV)

43
(NO.)

$\overline{3K}$
U4-7

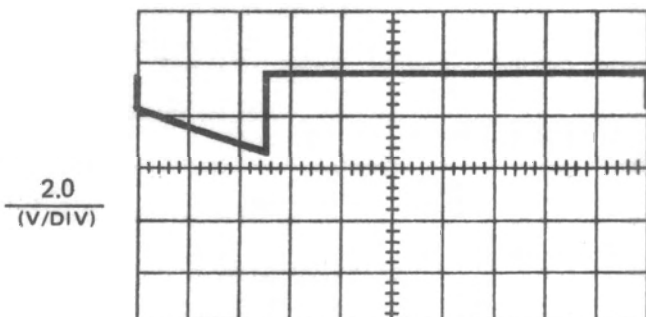


D-C

50mS
(S/DIV)

44
(NO.)

INTEG AMP IN
U4-8

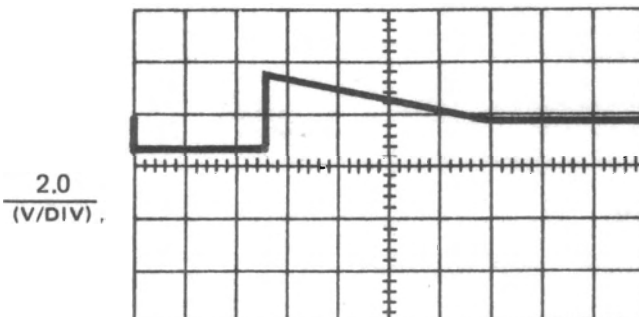


D-C

50mS
(S/DIV)

45
(NO.)

ND
U4-9

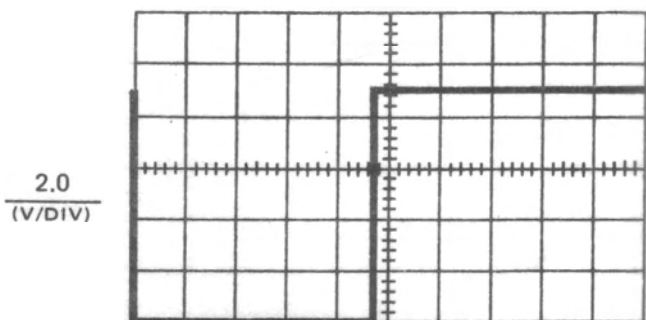

D-C

50mS
(S/DIV)



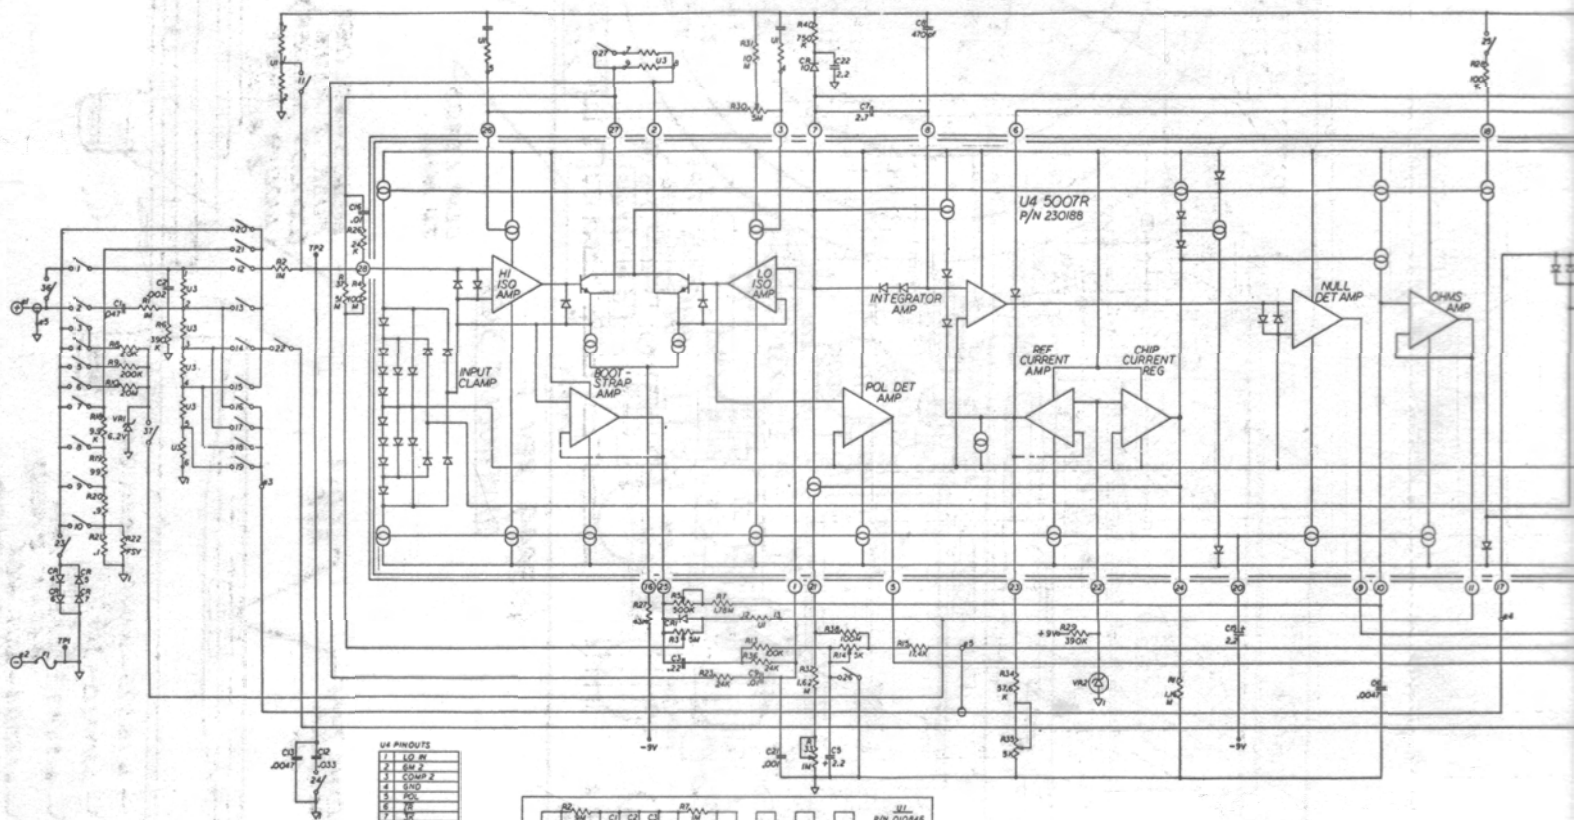


Figure 6.10 - 2100 (A) Danameter (All Rev's) Assembly Drawing (Component Side)

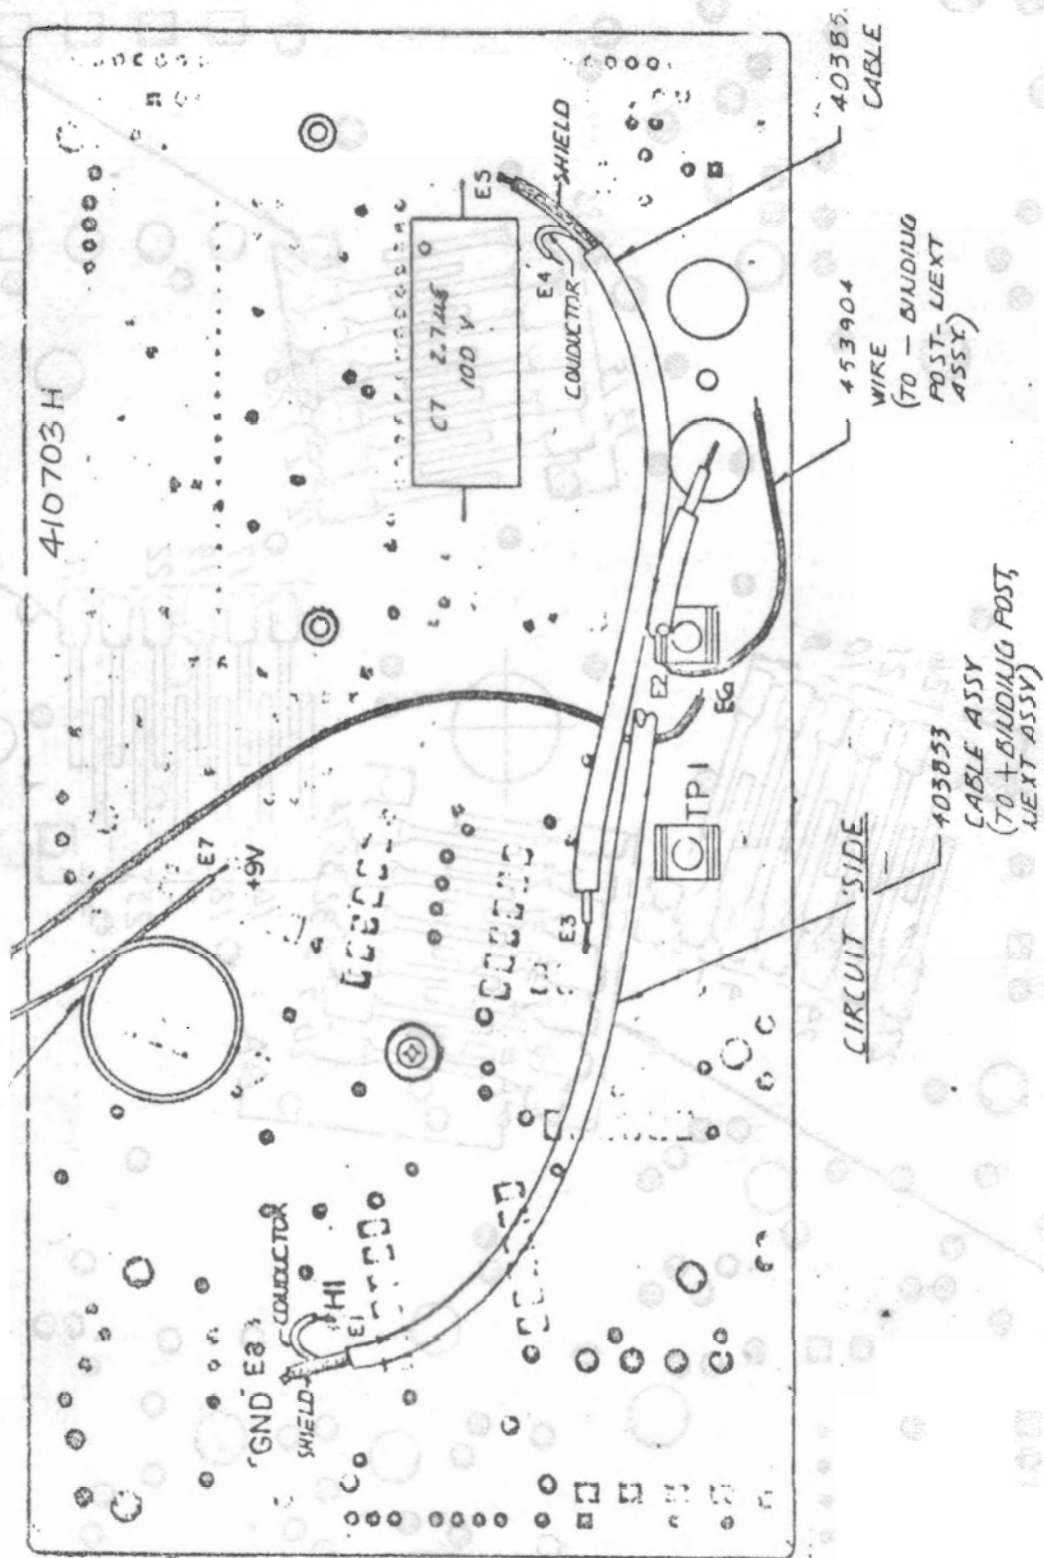


Figure 6.11 - 2100 (A) Danameter (All Rev's) Assembly Drawing (Circuit Side)

SECTION 7 CONFIGURATION HISTORY & PARTS LIST

2000 (Rev. to "E") Configuration History

R12	Originally 040284 Pot 25K Ω Carbon	Changed to 040289 Jan '74
R20	Originally 040281 Pot 250K Ω Carbon	Changed to 040290 Jan '74
R22	Originally 040282 Pot 1M Ω Carbon	Changed to 040291 Jan '74
R27	Originally 040282 Pot 1M Ω Carbon	Changed to 040291 Jan '74
R28	Originally 040283 Pot 10K Ω Carbon	Changed to 040288 Jan '74
R29	Originally 040278 Pot 5M Ω Carbon	Changed to 040292 Jan '74
R30	Originally 040278 Pot 5M Ω Carbon	Changed to 040292 Jan '74
C13	Originally 100105 cap disc 62pf 100V changed to 100075 cap disc 10pf 1KV on Oct '74; changed to 120332 cap mylr .01 μ f 100V on Jan '75.	
C4	Originally 100108 cap disc .001 μ f 500V changed to 120330 cap mylr .001 μ f 100V on Jan '75.	

CR15 & CR16 Added on Jan '75 to "D" Rev.

VR1 (Option Ref Zener) added on Jan '75 to "D" Rev.

Res Ntwk - Atten changed to P/N 403915 on Oct '75.

2000 (Rev. to "L") Configuration History

R42, C22, & CR10	Added on Apr '75 to "H" Rev.
R10	Originally 001819, RES CC 100M Ω changed to 001886 on May '76.
U3	Res Ntwk atten changed to P/N 403915 on Oct '75.

2100 (Rev. to "H") Configuration History

R40, C22, & CR10 Added on Apr '75 to "B" Rev.

U3 Originally 010848 res ntwk attenuator changed to P/N 403915 on Oct '75
to "D" Rev.

Table 7.1 - 2000 Parts List (Rev. to E)

REF DESIGN	P/N	COMP	TYPE	VALUE	TOL (%)	WATTAGE
R1	010855	RES	CF	1M Ω	2	1.0
R2	010834	RES	CF	1K Ω	2	.25
R3	010338	RES	CF	100K Ω	2	1.0
R4	010843	RES	CF	1M Ω	2	.25
R5	001819	RES	CC	100M Ω	5	.25
R6	020665	RES	WW	9.9K Ω	1	1.0
R7	010832	RES	MF	99 Ω	1	-
R8	020666	RES	WW	.9 Ω	1	3.0
R9	020664	RES	WW	.1 Ω	1	3.0
R10	010852	RES	CF	390K Ω	2	.25
R11	010835	RES	CF	24K Ω	2	.25
R12*	040289	POT	CRMT	20K Ω	20	-
R13	010844	RES	CF	1M Ω	5	.5
R14	010843	RES	CF	1M Ω	2	.25
R15	010835	RES	CF	24K Ω	2	.25
R16	010839	RES	CF	150K Ω	2	.25
R17	001871	RES	CC	1.6M Ω	5	.25
R18	010851	RES	CF	43K Ω	2	.25
R19	001820	RES	CC	30M Ω	5	.25
R20*	040290	POT	CRMT	500K	20	-
R21	010852	RES	CF	390K Ω	2	.25
R22*	040291	POT	CRMT	1M Ω	20	-
R23	010839	RES	CF	150K Ω	2	.25
R24	010853	RES	CF	750K Ω	2	.25
R25	001871	RES	CC	1.6M Ω	5	.25
R26	010854	RES	MF	63.4K Ω	1	-
R27*	040291	POT	CRMT	1M Ω	20	-
R28*	040288	POT	CRMT	10K Ω	20	-
R29*	040292	POT	CRMT	5M Ω	30	-
R30*	040292	POT	CRMT	5M Ω	30	-
R31	001817	RES	CC	10M Ω	5	.25
R32	001871	RES	CC	1.6M Ω	5	.25
R33	010853	RES	CF	750K Ω	2	.25
R34	010835	RES	CF	24K Ω	2	.25
R35	010915	RES	CF	200 Ω	2	.25
R36	010852	RES	CF	390K	2	.25

Table 7.1 - 2000 Parts List (Rev. to E) continued

REF DESGN	P/N	COMP	TYPE	VALUE	VOLTS	TOL
C1	120321	CAP	MYLR	.047 μ f	250	+50 -20
C2	100109	CAP	DISC	.002 μ f	1K	
C3	120320	CAP	MYLR	.033 μ f	250	
C4*	120330	CAP	MYLR	.001 μ f	100	
C5	110168	CAP	TANT	.1 μ f	35	
C6	120321	CAP	MYLR	.047 μ f	250	30
C7	120322	CAP	MYLR	.22 μ f	250	
C8	100110	CAP	DISC	.0047 μ f	50	
C9	120323	CAP	MYLR	2.7 μ f	100	
C10	100117	CAP	DISC	470pf	50	10
C11	100110	CAP	DISC	.0047 μ f	50	30
C12	110166	CAP	TANT	2.2 μ f	20	20
C13*	120332	CAP	MYLR	.01 μ f	100	20
C14	110166	CAP	TANT	2.2 μ f	20	
C15	100105	CAP	DISC	62pf	50	10
C16	110166	CAP	TANT	2.2 μ f	20	20
C17	100108	CAP	DISC	.001 μ f	50	10
C18	100117	CAP	DISC	470pf	50	10

REF DESGN	P/N	COMP	TYPE		
CR1	210054	DIODE	RECT	3A	50V
CR2	210054	DIODE	RECT	3A	50V
CR3	210054	DIODE	RECT	3A	50V
CR4	210054	DIODE	RECT	3A	50V
CR5	220071	DIODE	ZENER	10%	6.2V
CR6	210059	DIODE	STAB'STR		2.8V
CR7	210058	DIODE	1N458		
CR8	210058	DIODE	1N458		
CR9	210058	DIODE	1N458		
CR10	210058	DIODE	1N458		
CR11	210056	DIODE	018	MOD'FD	
CR12	210056	DIODE	018	MOD'FD	
CR13	210056	DIODE	018	MOD'FD	
CR14	210056	DIODE	018	MOD'FD	
CR15*	210058	DIODE	1N458		
CR16*	210058	DIODE	1N458		

Table 7.1 - 2000 Parts List (Rev. to E) continued

REF DESIGN	P/N	COMP	TYPE		
VR1*	220076	DIODE	ZENER	REF	(OPTION ONLY)
U1	230178	IC	5007	ANALOG	LSI
U2	230179	IC	7104	DIGITAL	CMOS
-	010846	RES NTKW	ANALOG		
-	010847	RES NTKW	DIGITAL		
- *	010848	RES NTKW	ATTEN.		
-	920663	LCD			
BT1	920669	BATT	9V		
BT2	403814	BATT	1.35V	REF. CELL	
F1	920698	FUSE	250V	2.5A	

*See Parts List Configuration History

Table 7.2 - 2000 Parts List (Rev. to L)

REF DESIGN	P/N	COMP	TYPE	VALUE	TOL (%)	WATTAGE
R1	010855	RES	CF	1M Ω	2	1
R2	010844	RES	CF	1M Ω	5	.5
R3	040292	POT	CRMT	5M Ω	30	-
R4	001876	RES	CC	51M Ω	5	.25
R5	040295	POT	CRMT	250K Ω	20	-
R6	010852	RES	CF	390K Ω	2	.25
R7	010853	RES	CF	750K Ω	2	.25
R8	010838	RES	CF	100K Ω	2	.25
R9	010843	RES	CF	1M Ω	2	.25
R10*	001886	RES	CC	100M Ω	5	.25
R11	010887	RES	MF	1.18M Ω	1	.125
R12	001871	RES	CC	1.6M Ω	5	.25
R13	010839	RES	CF	150K Ω	2	.25
R14	040293	POT	CRMT	5K Ω	20	-
R15	010883	RES	MF	17.4K Ω	1	.1
R16	010853	RES	CF	750K Ω	2	.25
R17	-	-	-	-	-	-
R18	020665	RES	WW	9.9K Ω	1	3.
R19	010832	RES	MF	99 Ω	1	.1
R20	020666	RES	WW	.9 Ω	1	3.
R21	020664	RES	WW	.1 Ω	1	3.
R22	-	-	-	-	-	-
R23	010835	RES	CF	24K Ω	2	.25
R24	010885	RES	MF	88.7K Ω	1	.1
R25	010835	RES	CF	24K Ω	2	.25
R26	010835	RES	CF	24K Ω	2	.25
R27	010851	RES	CF	43K Ω	2	.25
R28	010893	RES	CC	100K Ω	2	.25
R29	-	-	-	-	-	-
R30	040292	POT	CRMT	5M Ω	30	-
R31	001817	RES	CC	10M Ω	5	.25
R32	001871	RES	CC	1.6M Ω	5	.25
R33	040291	POT	CRMT	1M Ω	20	-
R34	010854	RES	MF	63.4K Ω	1	.1
R35	040288	POT	CRMT	10K Ω	20	-
R36	010835	RES	CF	24K Ω	2	.25
R37	001820	RES	CC	30M Ω	5	.25
R38	001819	RES	CC	100M Ω	5	.25
R39	010915	RES	CF	200 Ω	2	.25
R40	010834	RES	CF	1K Ω	2	.25
R41	010852	RES	CF	390K Ω	2	.25
R42*	010853	RES	CF	750K Ω	2	.25

Table 7.2 - 2000 Parts List (Rev. to L) continued

REF DESIGN	P/N	COMP	TYPE	VALUE	VOLTS
C1	120321	CAP	MYLR	.047 μ f	250
C2	100109	CAP	DISC	.002 μ f	1K
C3	120322	CAP	MYLR	.22 μ f	250
C4	100110	CAP	DISC	4700pf	50
C5	110166	CAP	TANT	2.2 μ f	20
C6	100105	CAP	DISC	62pf	50
C7	120323	CAP	MYLR	2.7 μ f	100
C8	100117	CAP	DISC	470pf	50
C9	120332	CAP	PLYFLM	.01 μ f	100
C10	110168	CAP	TANT	.1 μ f	35
C11	110166	CAP	TANT	2.2 μ f	20
C12	120320	CAP	MYLR	.033 μ f	250
C13	120330	CAP	PLYFLM	.001 μ f	100
C14	120321	CAP	MYLR	.047 μ f	250
C15	110166	CAP	TANT	2.2 μ f	20
C16	120332	CAP	PLYFLM	.01 μ f	100
C17	110166	CAP	TANT	2.2 μ f	20
C18	110116	CAP	TANT	2.2 μ f	20
C19	100108	CAP	DISC	.001 μ f	50
C20	100117	CAP	DISC	470pf	50
C21	100108	CAP	DISC	.001 μ f	50
C22*	110116	CAP	TANT	2.2 μ f	20

REF DESIGN	P/N	COMP	TYPE	VALUE	VOLTS
CR1	210058	DIODE	RECT	1N458	
CR2	210056	DIODE	GD	018	
CR3	-	-	-	-	
CR4	210054	DIODE	RECT	3A	50V
CR5	210054	DIODE	RECT	3A	50V
CR6	210054	DIODE	RECT	3A	50V
CR7	210054	DIODE	RECT	3A	50V
CR8	210056	DIODE	GP	018	
CR9	210056	DIODE	GP	018	
CR10*	210058	DIODE	RECT	1N458	

Table 7.2 - 2000 Parts List (Rev. to L) continued

REF DESIGN	P/N	COMP	TYPE		
VR1	220071	DIODE	ZENER	1N5850	
U1	010846	RES NTWK	ANALOG		
U2	010847	RES NTWK	DIGITAL		
U3 *	010848	RES NTWK	ATTEN.		
U4	230188	IC	5007R	ANALOG	LSI
U5	230179	IC	7104A	DIGITAL	CMOS
LCD1	920663	LCD			

*See Parts Configuration History

Table 7.3 - 2100 Parts List (Rev. to H)

REF DESIGN	P/N	COMP	TYPE	VALUE	TOL (%)	WATTAGE
R1	010890	RES	MF	1M Ω	5	.5
R2	010844	RES	CF	1M Ω	5	.5
R3	040292	POT	CRMT	5M Ω	30	-
R4	001819	RES	CC	100M Ω	5	.25
R5	040290	POT	CRMT	500K Ω	20	-
R6	010852	RES	CF	390K Ω	2	.25
R7	010889	RES	MF	1.78M Ω	1	.125
R8	020673	RES	WW	20K Ω	.25	3.
R9	010886	RES	MF	200K Ω	.1	.125
R10	010891	RES	MF	20M Ω	.5	.125
R11	010887	RES	MF	1.18M Ω	1	.125
R12	001871	RES	CC	1.6M Ω	5	.25
R13	010893	RES	CF	100K Ω	2	.25
R14	040293	POT	CRMT	5K Ω	20	-
R15	010883	RES	MF	17.4K Ω	1	.1
R16	010853	RES	CF	750K	2	.25
R17	-	-	-	-	-	-
R18	020672	RES	WW	9.9K Ω	.25	3.
R19	010882	RES	MF	99 Ω	.25	.1
R20	020671	RES	WW	.9 Ω	.25	3.
R21	020664	RES	WW	.1 Ω	1.	3.
R22		FACTORY SELECTED VALUE				
R23	010835	RES	CF	24K Ω	2	.25
R24	010885	RES	MF	88.7K Ω	1	.1
R25	010835	RES	CF	24K Ω	2	.25
R26	010835	RES	CF	24K Ω	2	.25
R27	010851	RES	CF	43K Ω	2	.25
R28	010893	RES	CF	100K Ω	2	.25
R29	010852	RES	CF	390K Ω	2	.25
R30	040292	POT	CRMT	5M Ω	30	-
R31	001817	RES	CC	10M Ω	5	.25
R32	010888	RES	MF	1.62M Ω	1	.125
R33	040291	POT	CRMT	1M Ω	20	-
R34	010939	RES	MF	57.6K Ω	.5	.1
R35	040293	POT	CRMT	5K Ω	20	-
R36	010835	RES	CF	24K Ω	2	.25
R37	001876	RES	CC	51M Ω	5	.25
R38	001819	RES	CC	100M Ω	5	.25
R39	010915	RES	CF	200 Ω	2	.25
R40*	010853	RES	CF	750K Ω	2	.25

Table 7.3 - 2100 Parts List (Rev. to H) continued

REF DESIGN	P/N	COMP	TYPE	VALUE	VOLTS
C1	120321	CAP	MYLR	.047 μ f	250V
C2	100109	CAP	DISC	.002 μ f	1KV
C3	120322	CAP	MYLR	.22 μ f	250V
C4	100110	CAP	DISC	4700pf	50V
C5	110166	CAP	TANT	2.2 μ f	20V
C6	100105	CAP	DISC	62pf	50V
C7	120323	CAP	MYLR	2.7 μ f	100V
C8	100117	CAP	DISC	470pf	50V
C9	120332	CAP	PLYFLM	.01 μ f	100V
C10	110168	CAP	TANT	.1 μ f	35V
C11	110166	CAP	TANT	2.2 μ f	20V
C12	120320	CAP	MYLR	.033 μ f	250V
C13	120331	CAP	PLYFLM	4700pf	100V
C14	120320	CAP	MYLR	.033 μ f	250V
C15	110166	CAP	TANT	2.2 μ f	20V
C16	120332	CAP	PLYFLM	.01 μ f	100V
C17	110166	CAP	TANT	2.2 μ f	20V
C18	110166	CAP	TANT	2.2 μ f	20V
C19	100108	CAP	DISC	.001 μ f	50V
C20	100117	CAP	DISC	470pf	50V
C21	100108	CAP	DISC	.001 μ f	50V
C22*	110166	CAP	TANT	2.2 μ f	20V

REF DESIGN	P/N	COMP	TYPE		
CR1	210058	DIODE	1N458		
CR2	210056	DIODE	018		
CR3					
CR4	210054	DIODE	RECT	3A	50V
CR5	210054	DIODE	RECT	3A	50V
CR6	210054	DIODE	RECT	3A	50V
CR7	210054	DIODE	RECT	3A	50V
CR8	210056	DIODE	018		
CR9	210056	DIODE	018		
CR10*	210058	DIODE	1N458		

Table 7.3 - 2100 Parts List (Rev. to H) continued

REF DESIGN	P/N	COMP	TYPE
VR1	220071	DIODE	ZENER 1N5850
VR2	220076	DIODE	ZENER REFERENCE
U1	010846	RES NTWK	ANALOG
U2	010847	RES NTWK	DIGITAL
U3*	403915	RES NTWK	ATTEN.
U4	IC	5007R	ANALOG LSI
U5	IC	7104A	DIGITAL CMOS
LCD1	920663	LCD	
BT1	920669	BATT	9V
F1	920698	FUSE	250V 2.5A

*See Parts Configuration History

Section	Title	Page
8.1	Field Service Bulletin # 20-1112 (measurement stability)	8-3
8.2	Field Service Bulletin # 20-1113 (improve LCD readout)	8-7
8.3	Replacement Procedures for Bent or Broken Switch Spring Contacts	8-9
8.4	Rework Instructions to Add Opt. 03 to Rev. B & C 2000 Danameter	8-11
8.5	Field Service Bulletin # 20-11141 (decimal point annunciation)	8-15

8.1 FIELD SERVICE BULLETIN NO. 20-1112.

SUBJECT:

Model 2000 Series Danameters

PURPOSE:

To enhance the reliability and performance of P/N 403767, Main PCB Assy. for the Danameter.

Specific Indications of Service are:

1. Intermittent or inconsistent instrument readings in any range.
2. Readings greater than 0.2 in 200 range with the input terminals shorted.
3. Loss of calibration and/or failure to read with signal applied.

This will be accomplished by:

1. Providing a procedure to lubricate the contact/contact surfaces for the function switch with "Cramolin" paste, a lubricant and anti-corrosive, contact cleaner.
2. Inspection of the calibration potentiometers to determine if replacement is necessary.

ACTION:

Danameters returned to service depots for warranty/non-warranty service must be disassembled by the following procedure:

1. Set the control switch to the OFF position.
2. Loosen the captive screw on the battery cover.
3. Swing the bail up and slide back the battery cover and remove.
4. Remove battery, fuse and center mounted rear panel screw.
5. Remove rear panel and guide battery cable/connector through the hole.
6. Remove the reference cell, unless the unit is equipped with the 03 option (reference zener), and set in a clean area until reassembly.

7. Unsolder the white shielded (+) and black (—) wires from the input terminals.

8. Remove the four PCB mounting screws and remove the PCB from the case (do not remove the switch retaining screw). (See Figure 1.)

9. Remove the switch assembly retaining screw, spacer (compression spring), and washers. (Note the order for re-assembly.)

10. Carefully apply a thin, but visible coat of Cramolin (TM), red paste, contact lubricant with a fine artists brush or equivalent instrument (NOT COTTON SWABS) to the switch contacts/pads (refer to areas outlined in Figure 2). Cramolin can be obtained from Dana Labs by ordering P/N 920774. Note: Care must be exercised to prevent bending or otherwise deforming the switch contacts during the application of the paste lubricant. (Incidental application to surfaces surrounding the switch pad is not detrimental to the instruments performance.)

11. Apply a thin film of lubricant to the surfaces of the switch cam lobes.

12. Re-install the switch assembly in the OFF position, observing the proper orientation of the bushing (if applicable), switch body, washers, spacer (compression spring), and screw. Tighten the switch retaining screw until it is snug to avoid stripping out the hole. (See Figure 3.)

13. Inspect the seven calibration potentiometers on the main PCB for solder fillets on the rivets for the mounting pins. If the fillets are missing or incomplete, the potentiometers must be replaced. (See Figure 4 for proper identification of the rivet fillets.)

R-12 - P/N 040289 Pot Carbon 20K	Ohm
R-20 - P/N 040290 Pot Carbon 500K	Ohm
R-22 - P/N 040291 Pot Carbon 1M	Ohm
R-27 - P/N 040291 Pot Carbon 1M	Ohm
R-28 - P/N 040288 Pot Carbon 10K	Ohm
R-29 - P/N 040292 Pot Carbon 5M	Ohm
R-30 - P/N 040292 Pot Carbon 5M	Ohm

14. Re-assemble the main PCB in the meter case, placing the control switch in the 1KVDC/10 μ A position to align the switch detents with the leaf spring mounted

to the meter case above the control switch (see Figure 5). Note: The PCB is mounted properly when the switch protrudes fully through the meter case and the switch detents normally.

15. Replace the four PCB mounting screws and check for proper detent action setting the control switch in the OFF position.
16. Re-solder the input terminals.
17. Re-install the reference cell after coating the contact surfaces of the cell and the retaining clips with a thin, visible coating of Cramolin. The large end (+) of the cell must be aligned with plus side of the retaining clip (Note "+" symbol on the PCB).

Note: The following conditions can cause "loading" to the reference cell:

- a. The 9V battery disconnected AND
- b. The control switch NOT in the OFF position

If the cell is temporarily loaded, it will indicate an increased value of the test reading. The test reading

gradually decreases as the cell stabilizes. The time to stabilize depends on how severely the cell was loaded.

18. Re-calibrate as required. (Temporarily connect the fuse and battery if re-calibration is required.)
19. Replace the meter rear case, feeding the battery cable/connector through the hole, and replace the mounting screw.
20. Replace the fuse and CAREFULLY connect the 9V battery, observing the connector polarity alignment. (Control switch must be in the OFF position.)
21. Replace the battery cover, captive screw and test for proper operation.

EFFECTIVITY:

All Danameter main PCB assy., P/N 403767, through Revision C, shipped before 1 June 1975.

AUTHORITY:

Engineering Department

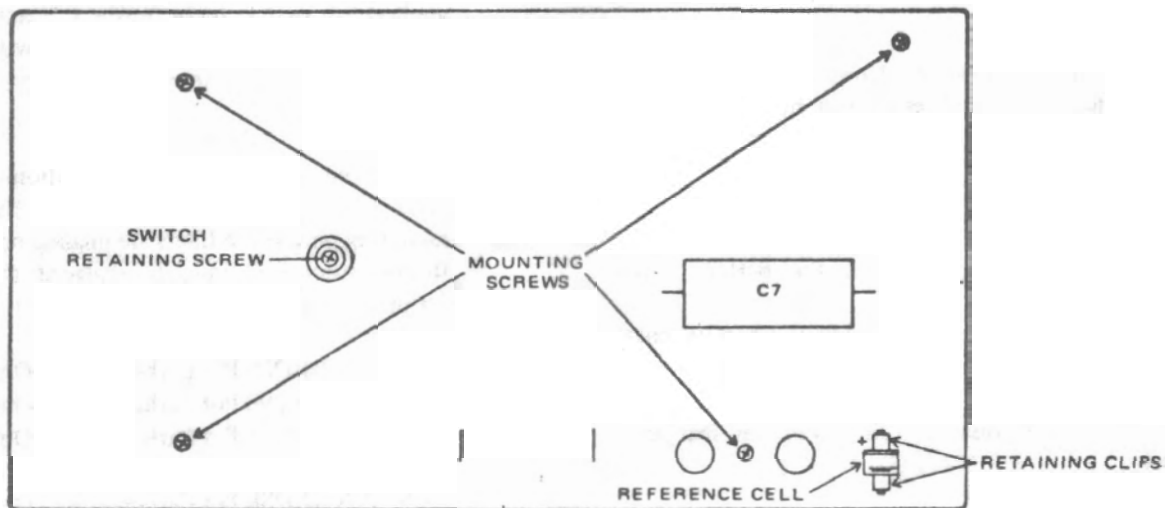


FIGURE 1
REAR PCB

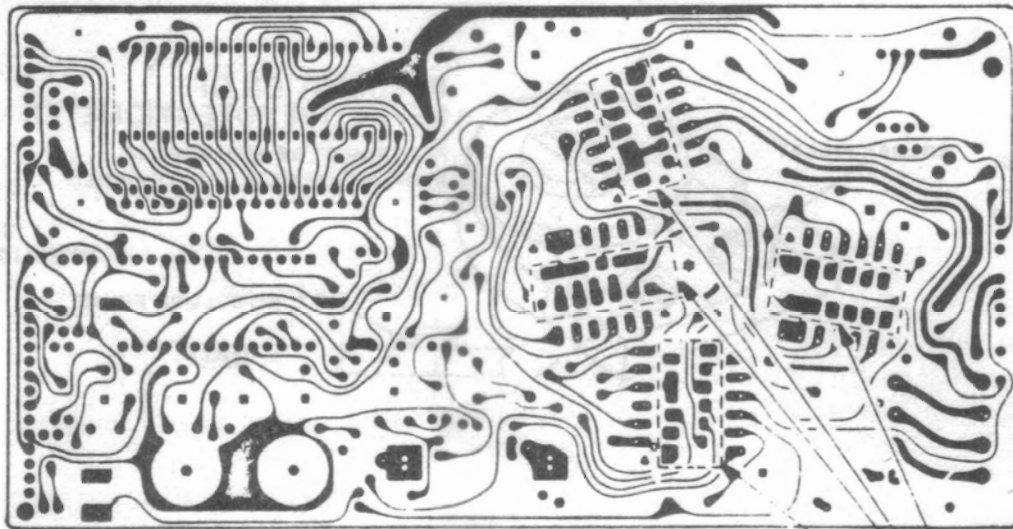


FIGURE 2
TOP PCB

CRAMOLIN TO BE APPLIED TO
PAD AREAS OUTLINED ON PCB




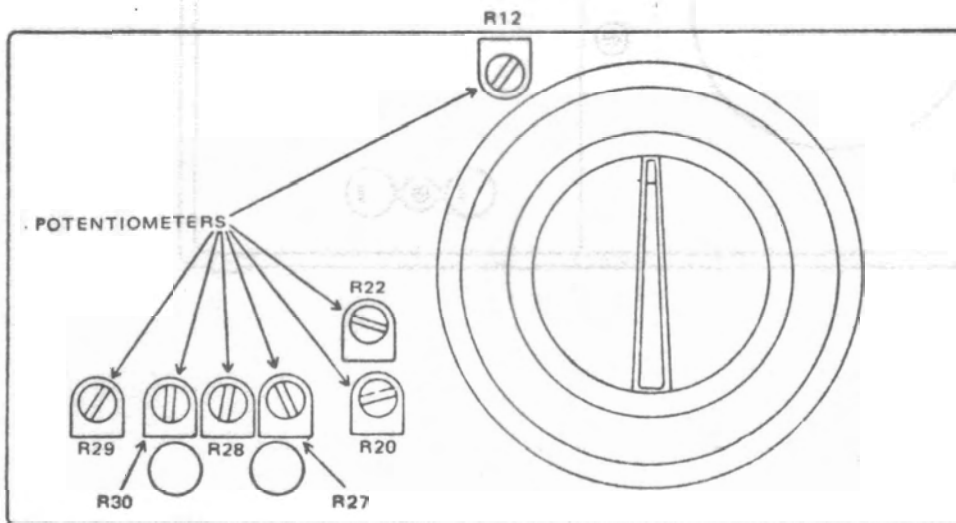


FIGURE 3
TOP/SIDE VIEW OF PCB
(SWITCH 8 POTS)

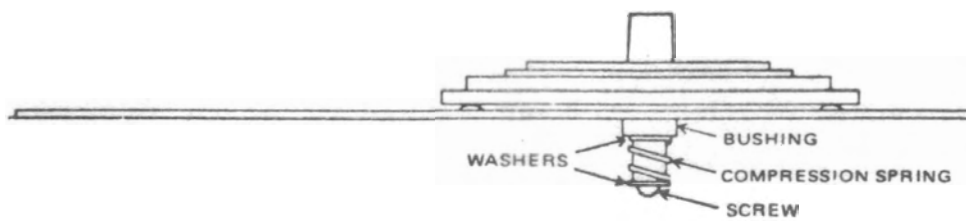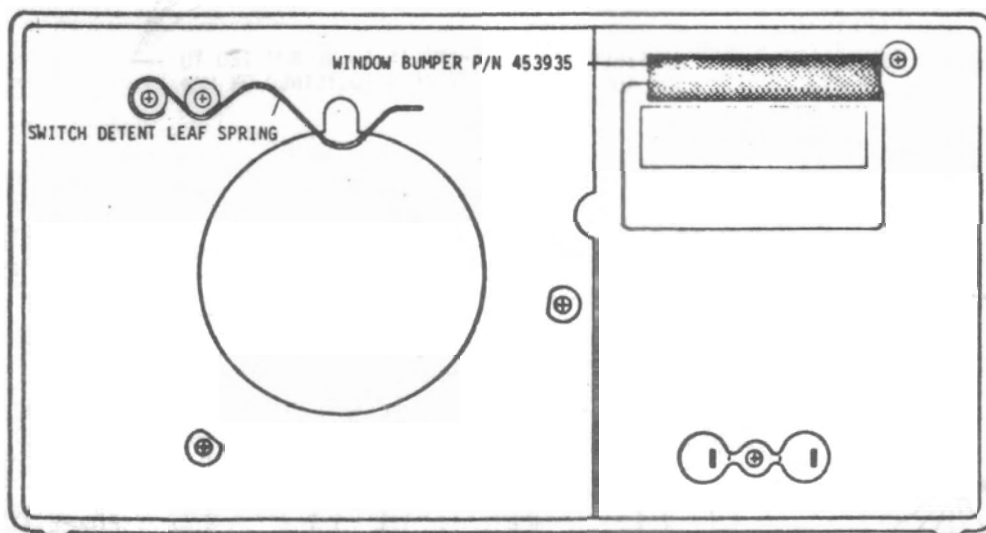

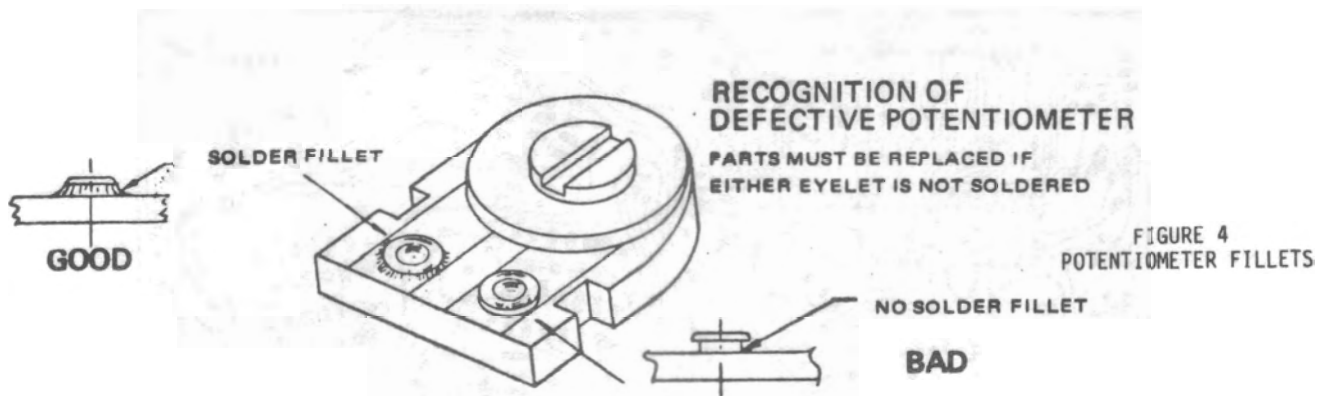

8.2 FIELD SERVICE BULLETIN NO. 20-1113.

SUBJECT:

Model 2000 Series Danameters

PURPOSE:

To install a kit, P/N 437092, to eliminate misaligned, cracked or broken liquid crystal displays caused by mechanical impact.

ACTION:

1. PLACE THE CONTROL SWITCH IN THE OFF POSITION.
2. Loosen the captive screw on the battery cover.
3. Swing out the bail, slide the cover and remove.
4. Remove the center mounting screw at the center of the rear cover.
5. Remove the battery and fuse. Lift off the rear cover and guide the battery cable/connector through the hole.
6. Remove the reference cell, unless the meter is equipped with the "03" option (reference zener); and set aside for re-assembly.
7. De-solder the white shielded (+) and black (-) wires from the input terminals.
8. Remove four mounting screws for the PCB and remove from the case. (Do not remove the switch retaining screw.) (See Figure 1.)
9. Remove the LCD retaining strap, P/N 453896.
10. Remove the LCD, if cracked or broken; replace with P/N 920663.
11. Insert a conductive rubber strip (elastomer), P/N 453-897 from the kit, to the contact portion of the LCD that mates with the PCB connector. This insures electrical contact and equalizes the capture pressure of the mating surface (see Figure 2).
12. Insert a double sided adhesive strip, P/N 920508 from the kit, to the LCD retainer to prevent the LCD from shifting due to mechanical impact (see Figure 2).
13. Insert a foam rubber bumper, P/N 453940 from the kit, to the top of the digit chip (under the LCD). (See Figure 2.)
14. Insert a foam rubber bumper, P/N 453935 from the kit, to overlap the display window on the inside of the

case without being visible from the front of the meter (see Figure 3).

Note: The window and digital chip bumpers restrict the travel of the LCD during mechanical impact.

15. Re-assemble the LCD with screws, springs, and nuts. The nuts should have about three to four threads showing from the end of the screws.
16. Field Service Bulletin 20-1112 should be incorporated, at this stage of assembly; unless it has been previously performed.
17. Re-assemble the PCB in the meter case, placing the control switch in the 1KVDC/10 μ A position to align the switch detents with the leaf spring mounted to the meter case above the control switch (see Figure 1). (The PCB is mounted properly when the switch protrudes fully through the meter case and the switch detents normally.) (See Figure 3.)
18. Replace the four PCB mounting screws and check for proper detent action and place the switch IN THE OFF POSITION.
19. Re-solder the input terminals.
20. Re-install the reference cell, if necessary.

Note: The following conditions can cause "loading" to the reference cell:

- a. The 9V battery disconnected AND
- b. The control switch NOT in the OFF position

If the cell is temporarily loaded, it will indicate an increased value of the test reading. The test reading gradually decreases as the cell stabilizes. The time to stabilize depends on how severely the cell was loaded.

21. Replace the meter rear case feeding the battery cable/connector through the hole.
22. Replace the fuse and CAREFULLY connect the 9V battery, observing the connector polarity alignment.

EFFECTIVITY:

All Revision C main PCB assemblies, P/N 403767, shipped prior to 1 January 1975.

AUTHORITY:

E.O. 8613, 8879, and 8881/ Customer Service

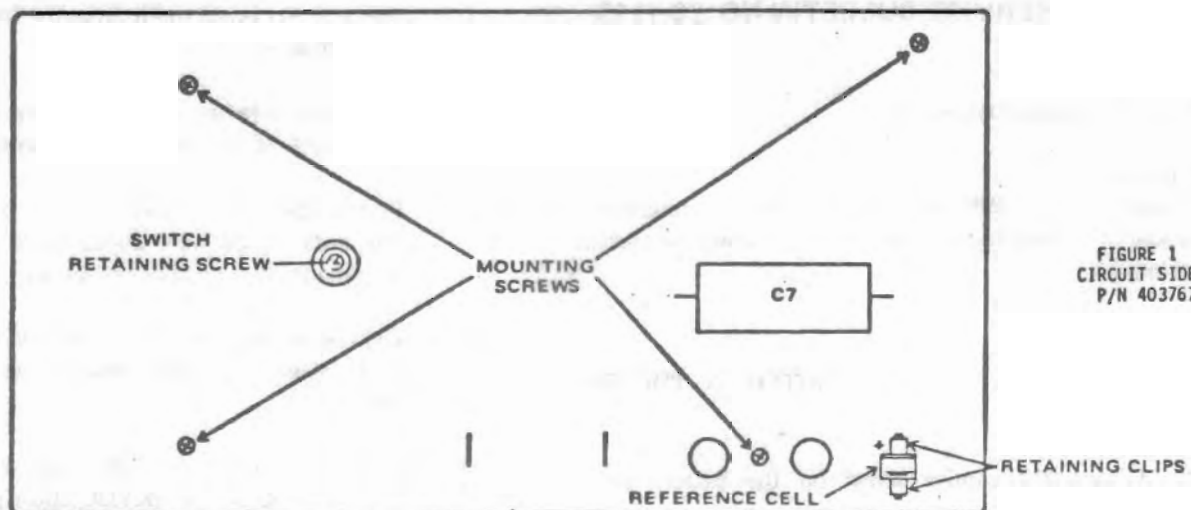


FIGURE 1
CIRCUIT SIDE
P/N 403767

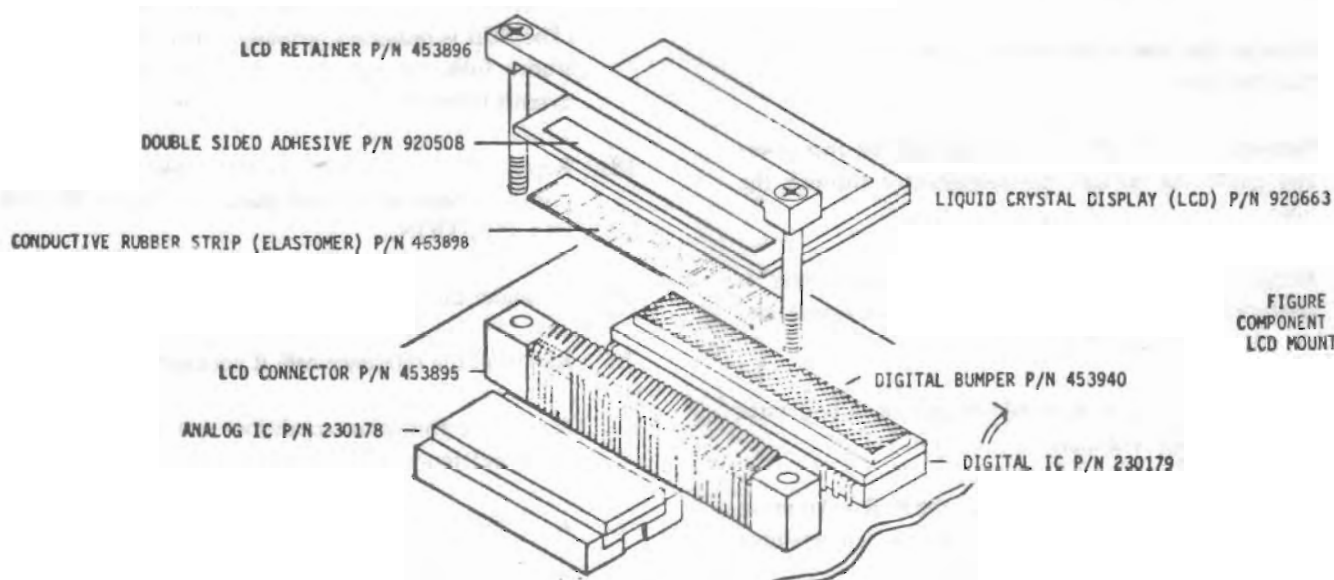


FIGURE 2
COMPONENT SIDE
LCD MOUNTING



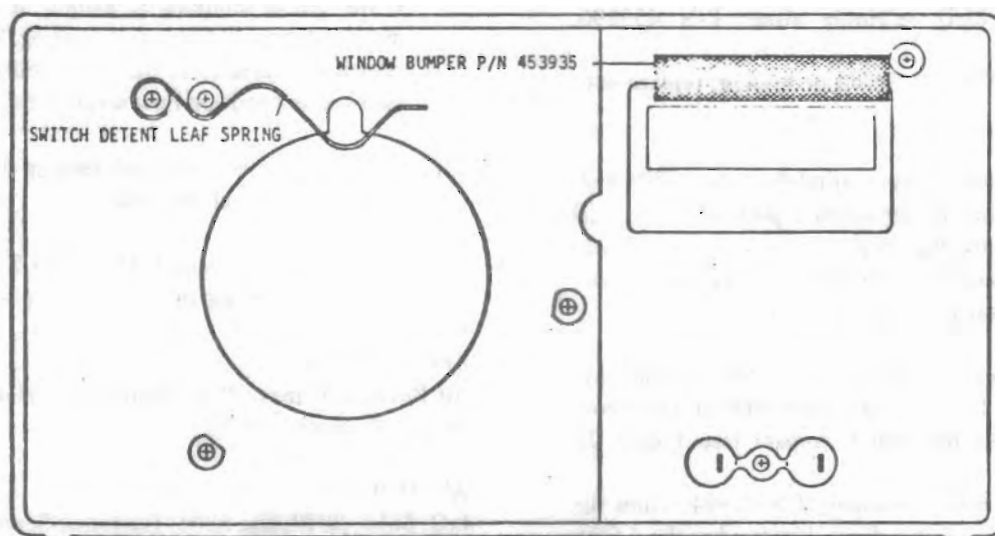


FIGURE 3
DANAMETER CASE
INSIDE

CONTACT FOR NO. 27 PAD MUST BE POSITIONED
TOWARD THE INNER EDGE OF THE PAD ON
DANAMETERS REV. E TO AVOID INTERMITTANT
OPERATION. (REV. E ONLY)

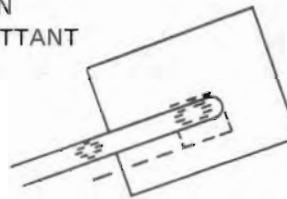

TOOLING HOLE IN
DO NOT RIVET
8 PLACES

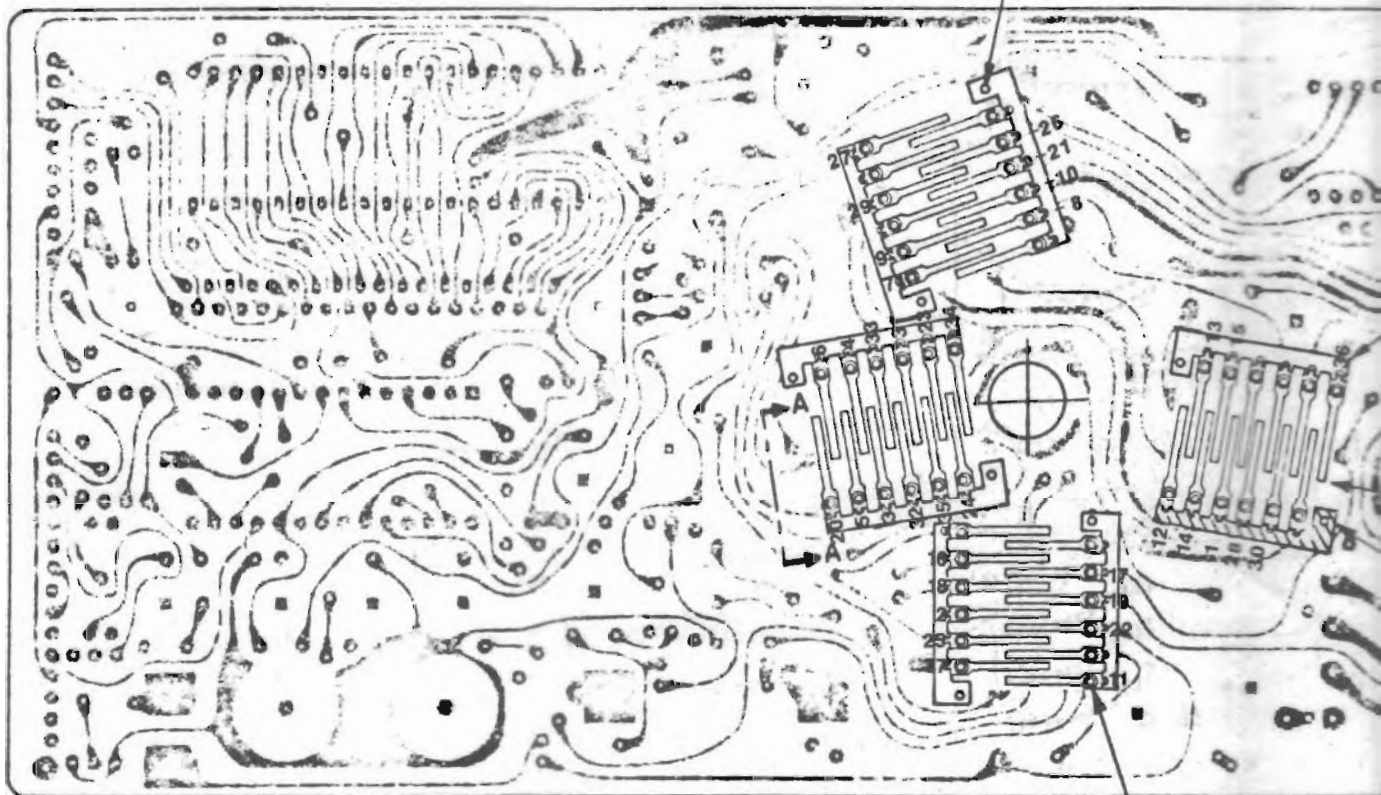


SWITCH USED (IF NUMBERED)

8.3 PROCEDURES TO REPLACE DANAMETER BENT/BROKEN CONTACTS.

1. Remove existing solder from the eyelet/contact pad with a solder "sucker".
2. Drill out the eyelet/contact with a .046875 in. bit (3/64" or 1.2 MM).
3. Remove the contact and eyelet pieces by applying a solder iron. CAUTION: Too much heat will lift the etch.
4. Clean contact termination pad surface of excess solder.
5. Install the new contact and eyelet with a blunt punch to swage the eyelet. Care must be taken not to misalign the contact when the swage is made.
6. See drawing for information regarding alignment for Danameter revisions before the final process of applying solder fillets to the new contact/eyelet termination.
7. Re-apply a thin coating of Cramolin paste to the contact and contact pad surface.
8. Check continuity of rework and re-calibrate.

Materials:

P/N 453834 - Contact switch frame
P/N 453859 - Eyelet 3/64" Dia X 3/32"

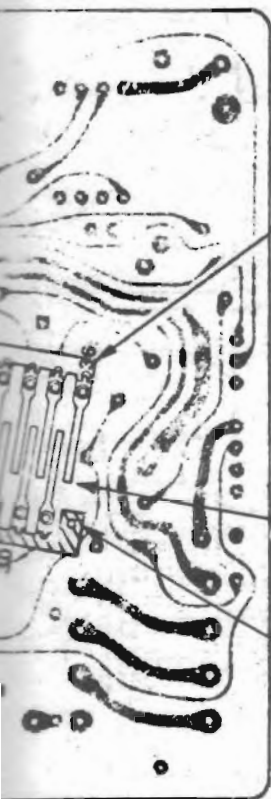

453834 SWITCH
CONTACT FRAME


BEND TABS OFF
AFTER SOLDERING
TYP 8 PLACES

410679 PCB
REF

3859 EYELET REF

CONTACT HEIGHT .130 $\pm .015$ "

CONTACT SURFACE .050 $\pm .010$ "

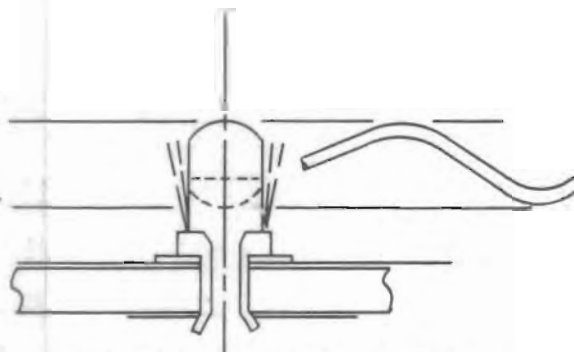

BEFORE FINAL SOLDER FILLETS,
BE SURE VERTICAL ALIGNMENT IS
NEAR PERPENDICULAR AS POSSIBLE
TO INSURE PROPER TRACKING WITH
SWITCH CAM LOBES.


CONTACT FOR NO. 36 PAD

MUST BE POSITIONED FOR ALIGNMENT TOWARD
OUTER EDGE OF THE PAD ON DANAMETERS REV. C
TO AVOID HIGH OHMS READINGS AND INTERMITTANT
OPERATION. (REV. C ONLY)



453859 EYELET
3/64 DIA X 3/12 LG

P.C. BOARD REF

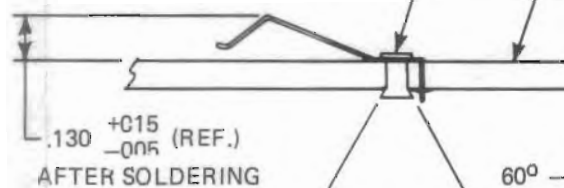

.130 $\pm .015$ (REF.)
AFTER SOLDERING

60° - 90° FUNNEL SET
SPLITTING OPTIONAL

VIEW A

SCALE NONE

8.4 REWORK INSTRUCTIONS.

To add the Option 03, reference zener, to the 2000 Danameter (Revisions B & C).

Replacing the 1.35V battery reference cell with the reference zener diode produces a more stable reference over a wide temperature gradient and eliminates the necessity to replace reference cells due to cell "loading" and oxide degradation of mechanical contacts.

1. Set Danameter switch to the "OFF" position (detent).
2. Loosen the captive screw on the battery cover.
3. Swing the bail handle away from the back cover of the DMM and slide the cover up.
4. Disconnect and remove the 9V battery and the fuse. Lift off the back panel and guide the battery cable/connector through the hole in the back cover.
5. De-solder the cable (+) and black wire (-) to the input jack terminals.
6. Remove the PCB mounting screws (4 # 1 phillips). See Figure 1.
7. Remove the PCB assembly from the case. When the assembly is free from the case, the Function/Range Switch is NOT held in the "OFF" position because removal releases the switch cam from the detenting mechanism in the case. See Figure 2.
8. Remove the 1.35V Reference Cell from the clip contacts.
9. De-solder the reference cell clip contacts on both sides of the PCB and remove. Do not use a soldering GUN or an iron with a rating greater than 40 Watts.
10. Drill an 0.047 (3/64) inch hole in the approximate location shown on Figure 3, free from any adjacent etch lines on the component and circuit side of the PCB.
11. Install a 55.6K Ohm, 5%, 1/4 Watt, carbon resistor P/N 010884 at the location for R26 and solder into place.
12. Install a 390K Ohm, 5%, 1/4 Watt, carbon resistor, R36, from a hole, previously occupied by the reference cell clip connector; to the drilled hole outlined in Figure 3. The drilled hole lead must be sleeved on the circuit side with teflon tubing and terminated or jumpered to a pad for the mounting post for potentiometer, R30. Solder all terminations. See Figure 4.
13. Install the Reference Zener diode, VR1, to the remaining, unused pads previously occupied by the clip connectors for the reference cell. The tab on the can of the zener should point towards the center of the PCB (see Figure 3) before soldering into place on both sides of the assembly.
14. Install a jumper from switch contact pad # 29 (common) to switch contact pad # 35, which permanently connects the anode of VR1 to common, disabling switch # 35. See Figure 4.
15. Remove all solder flux from the reworked areas with an approved solvent. If the assembly is immersed in an ultra-sonic cleaner or a de-greasing tank, the Function/Range Switch must be disassembled to replace the Cramolin TM (cleaner-lubricant) paste on the switch contact pad surfaces and cam lobes. See Figure 5 and 5a. Note the mechanical sequence of the shaft bushing, flat metal washer, compression spring, flat metal washer, and self-tapping screw for disassembly and re-assembly, if required, to prevent bent and/or broken switch contacts due to improper alignment of the Function/Range switch contacts with the cam lobes. See Figure 6.
16. When the assembly is to be installed in the meter case, a bent paper-clip, soldering-aid tool, or equivalent must be used to compress the switch detent leafspring to mate with the Function/Range switch knob detents. See Figure 2.
17. Set the Function/Range switch to the "OFF" position and re-assembly in the reverse order, Steps 6 thru 2.
18. Check all functions per range and re-calibrate, if necessary.

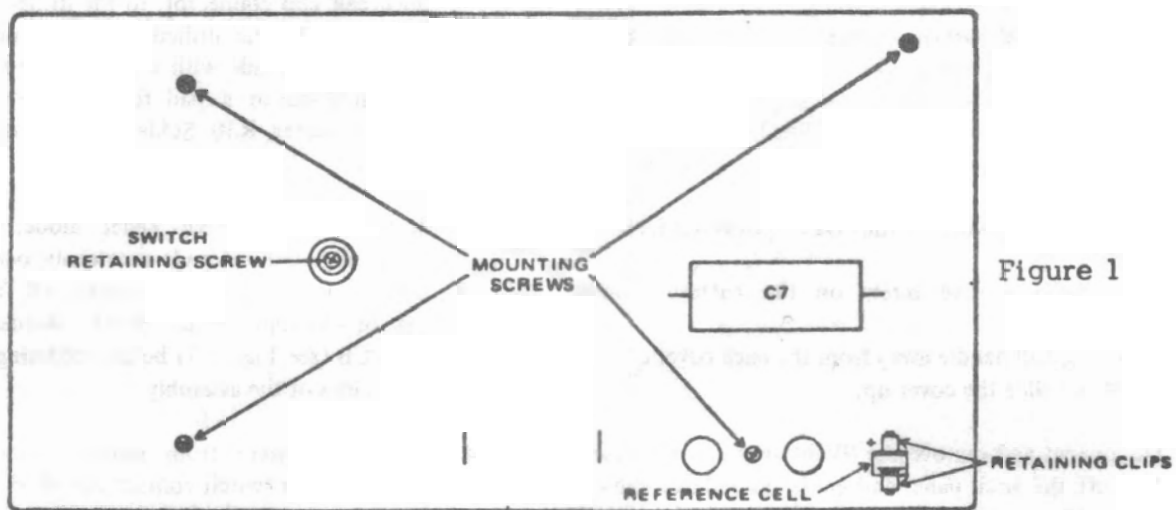


Figure 1

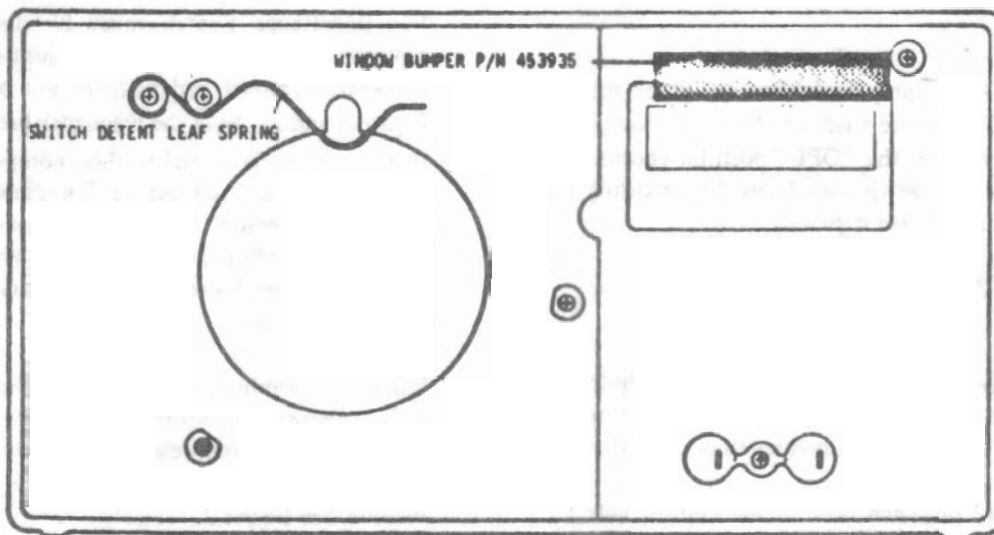


Figure 2

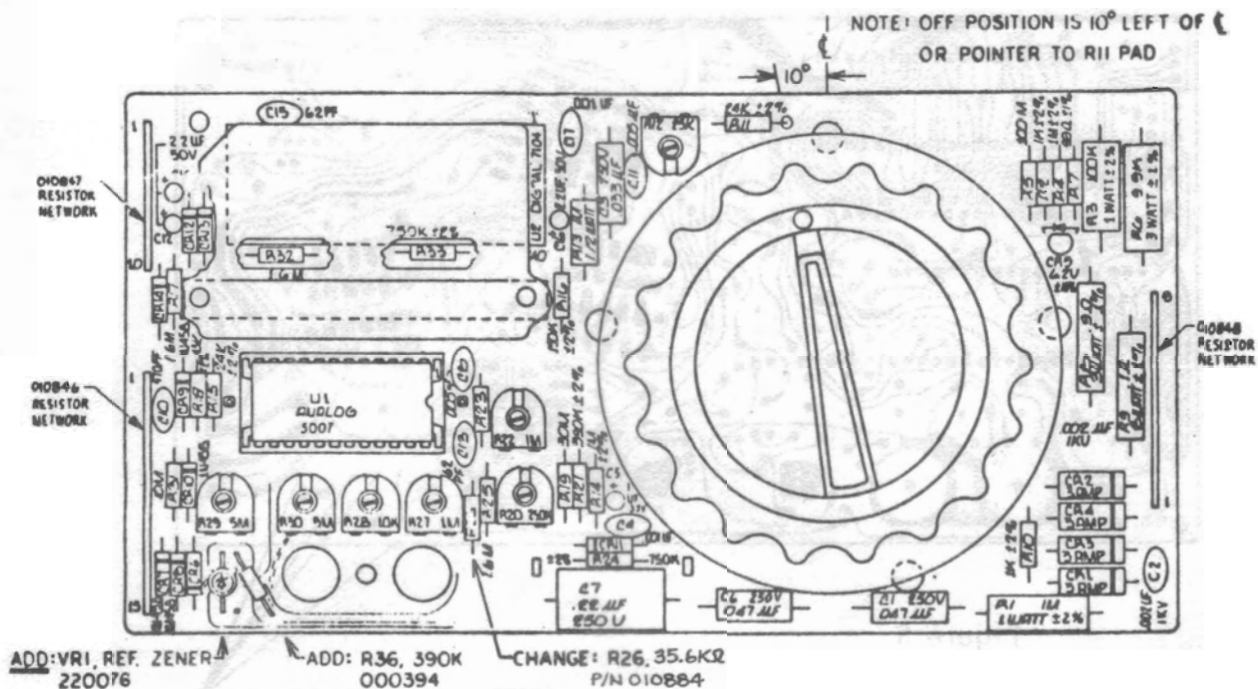


Figure 3

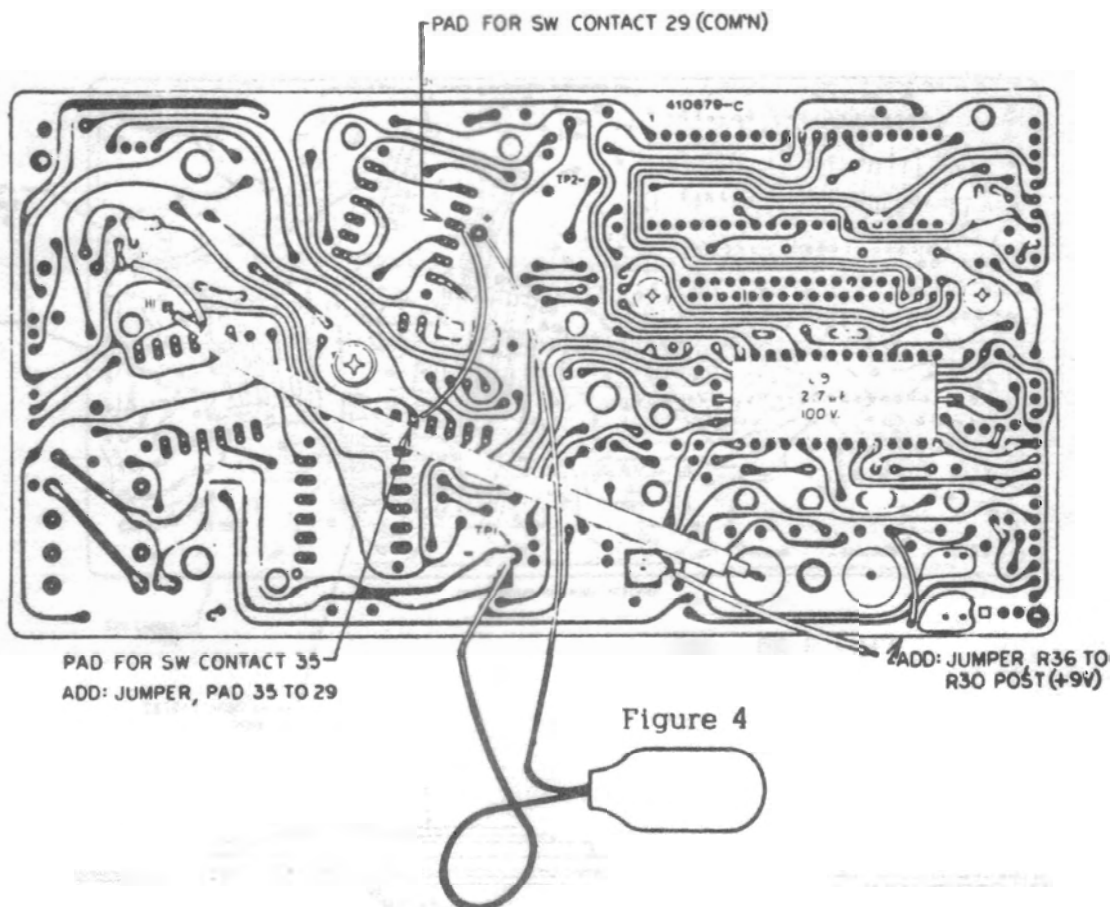


Figure 4

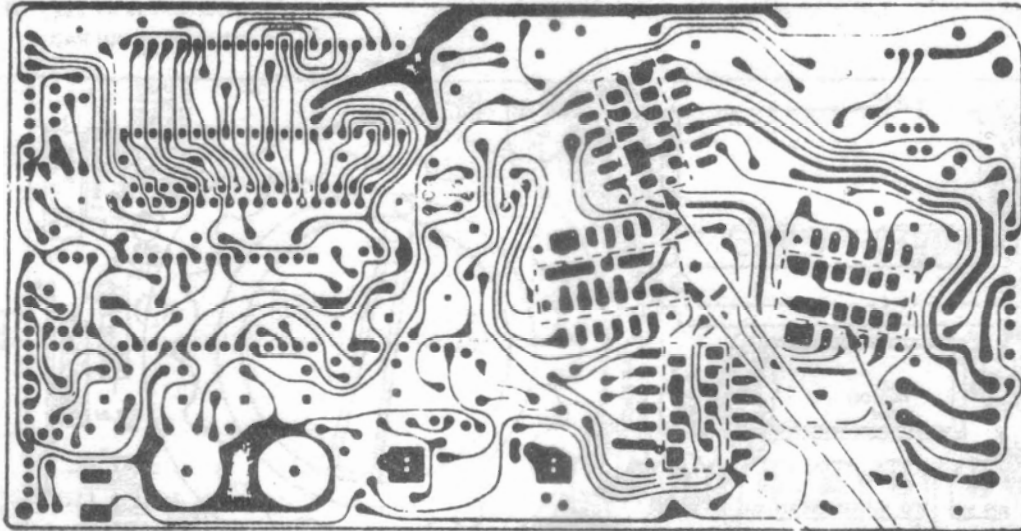


Figure 5

CRAMOLIN TO BE APPLIED TO
PAD AREAS OUTLINED ON PCB

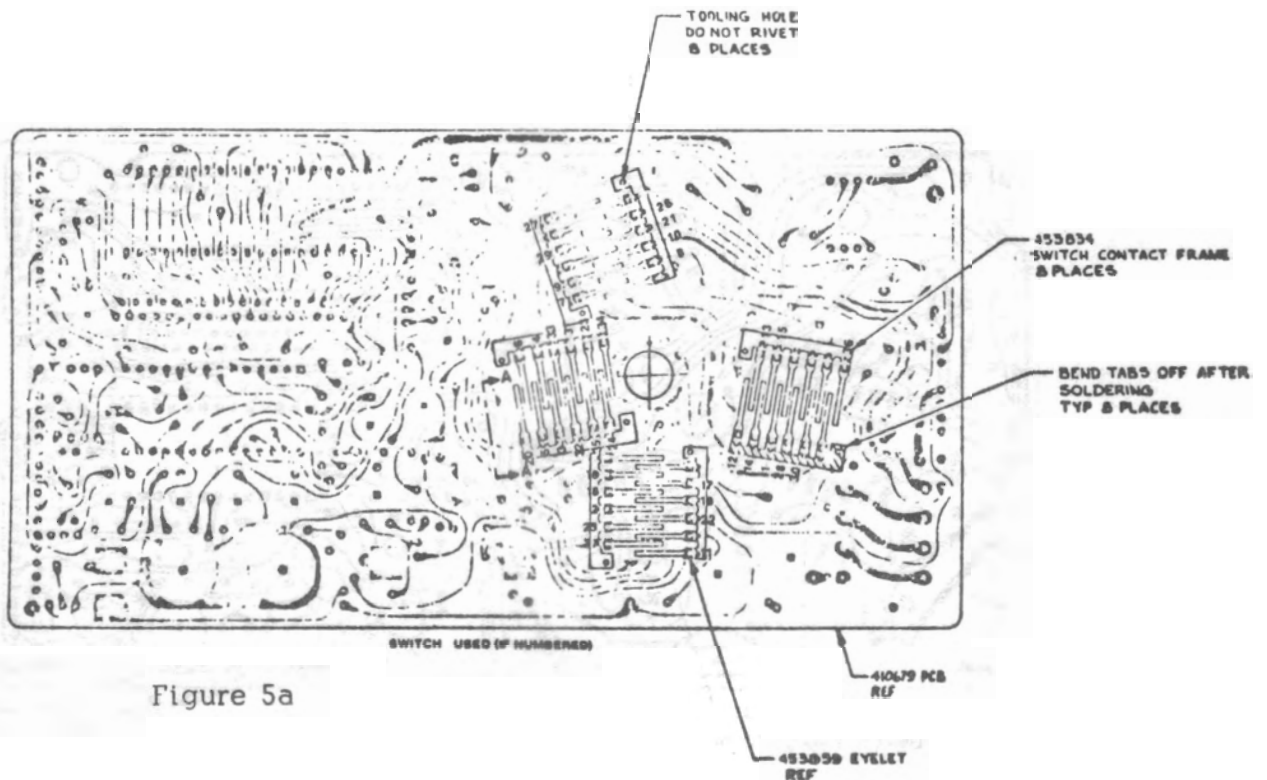


Figure 5a

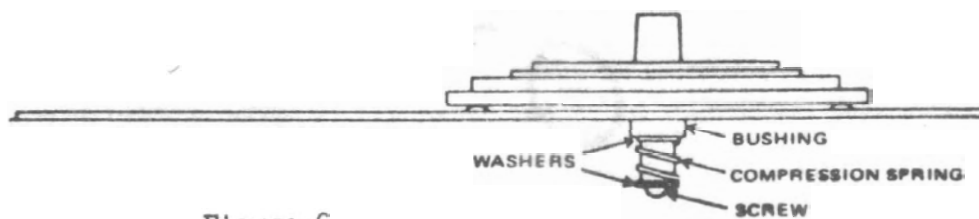


Figure 6

8.5 FIELD SERVICE BULLETIN NO. 20-11141.

SUBJECT:

Dana Model 2000/2100 (Danameters) Decimal Point Annunciation.

PURPOSE:

To eliminate multiple decimal points on the Danameter Liquid Crystal Display (LCD) by increasing the "turn-off" margin for the digital chip drive. This phenomenon occurs in hemispheric regions where meteorological conditions increase the relative humidity (RH) to a point where leakage develops in the decimal switches.

ACTION:


On the main circuit board, P/N 410679 (2000) and P/N 410703 (2100), add three 1M Ohm, 5%, 1/4 Watt, Carbon Composition resistors to the resistor network, P/N 010847, at Pins 1, 2, and 3 and terminate the resistors to Pin 4. This parallels the internal 10M Ohm resistors with individual 1M Ohm resistors for all Danameter revisions. (See illustrations.)

EFFECTIVITY:


All Danameters (2000/2100) experiencing multiple decimal points.

AUTHORITY:

E.O. 11175

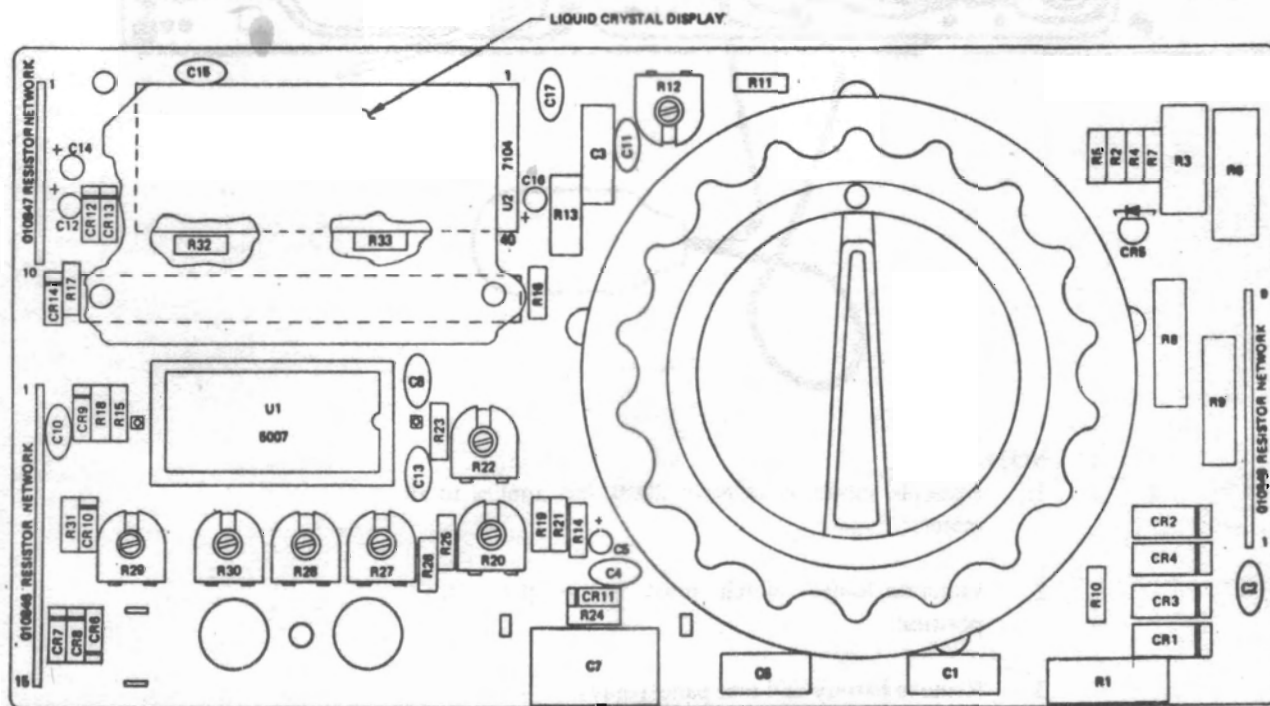


See rework on reverse side.

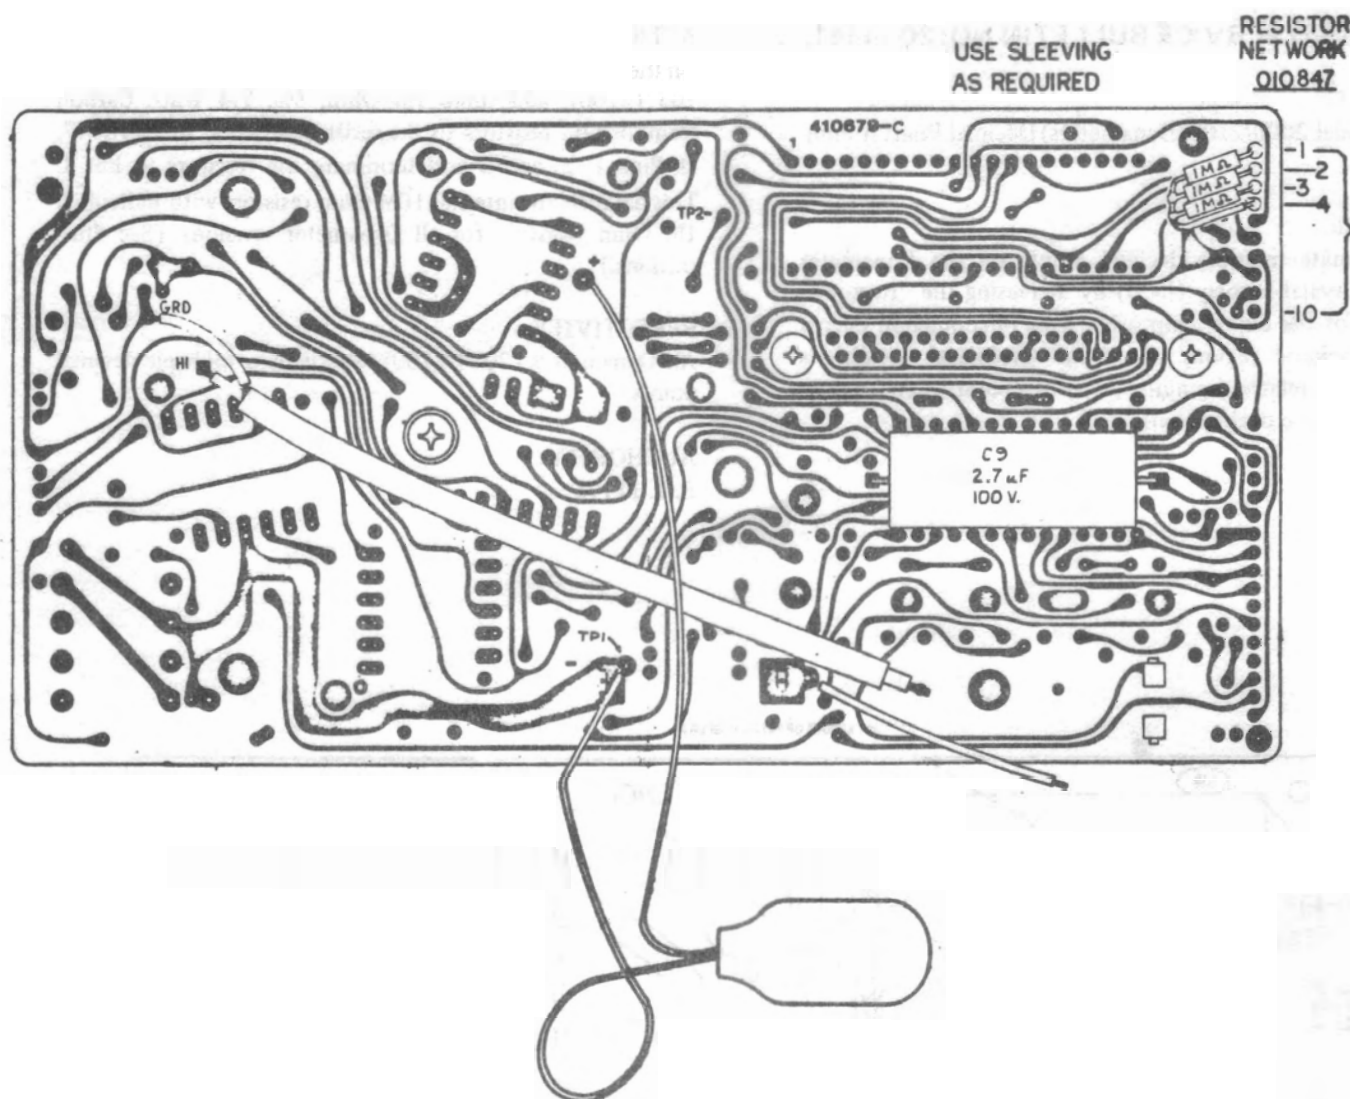

NOTES:

1. Example shown is an early 2000, but applies to all meters.
2. Function/Range switch must be in the "OFF" position.
3. Remove battery and rear panel (only).
4. Use a low wattage soldering iron (NOT GUN).
5. Clean any excess solder flux with alcohol or an approved solvent.
6. Re-assemble (no re-calibration is required).

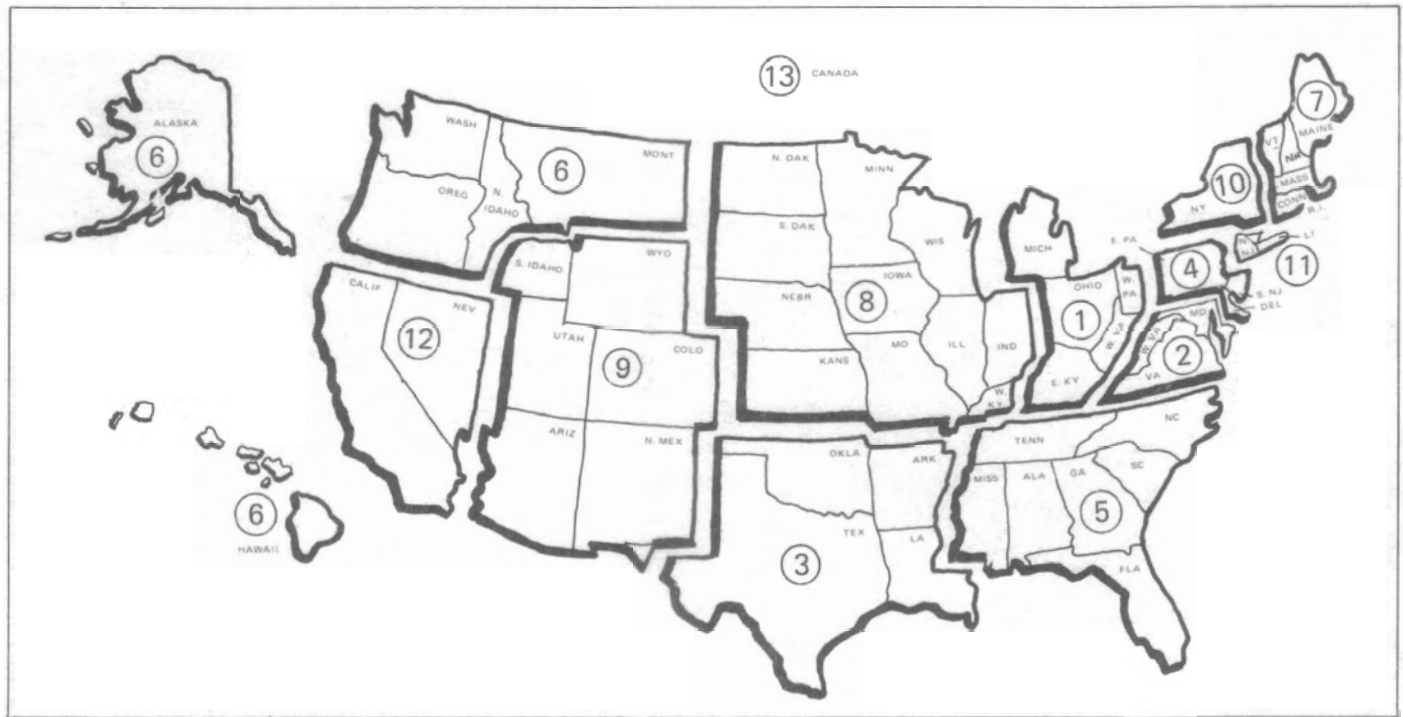

1 CARTER, McCORMIC & PEIRCE, INC.

23995 Freeway Park Drive
Farmington, Michigan 48024
Telephone: (313) 477-7700
TWX: 810-242-2986

22650 Lorain Road
Fairview Park, Ohio 44126
Telephone: (216) 779-5100
TWX: 810-427-9253

4977 Northcutt Place
Behnen Building, Suite 316
Dayton, Ohio 45414
Telephone: (513) 222-7700
TWX: 810-459-1613

409 Beatty Road
Monroeville, Pennsylvania 15146
Telephone: (412) 372-4415
TWX: 710-797-3671

2 CREATIVE MARKETING ASSOC.

6845 Elm, Suite 107
McLean, Virginia 22101
Telephone: (703) 893-6612
TWX: 710-833-0310

3 DATA MARKETING ASSOC.

3330 Bering Drive
Houston, Texas 77057
Telephone: (713) 780-2511
TWX: 910-881-2569

14235 Proton Road
Dallas, Texas 75240
Telephone: (214) 661-0300
TWX: 910-860-5483

8622 Crownhill, Suite 105
San Antonio, Texas 78209
Telephone: (512) 828-0937
TWX: 910-871-1033

2401 N.W. 39 Expressway
Suite 103
Oklahoma City, Oklahoma 73112
Telephone: (405) 528-6071
TWX: None

300 Huntland Avenue, Suite 233
Austin, Texas 78752
Telephone: (512) 451-5174
TWX: None

4 EASTERN INSTRUMENTATION OF PHILADELPHIA

Neshaminy Plaza Bldg. 2, Suite 114
Street Road & Bristol Pike
Bensalem
Pennsylvania 19020
Telephone: (215) 245-6660
TWX: 510-667-1581

5 GENTRY ASSOCIATES, INC.

550 N. Bumby Avenue
Orlando, Florida 32803
Telephone: (305) 894-4401
TWX: 810-850-0136

2109 W. Clinton Avenue, Rm 130
Huntsville, Alabama 35805
Telephone: (205) 534-9771
TWX: 810-726-2220

428 Alamance Road
Burlington, North Carolina 27215
Telephone: (919) 227-3639
TWX: 510-921-5751

16 Perimeter Park Dr., Suite 106B
Atlanta, Georgia 30341
Telephone: (404) 455-1206
TWX: None

9250 N.W. 19th Place
Sunrise, Florida 33322
Telephone: (805) 742-2115
TWX: None

Green Gate Park
Suite 302
Greenville, South Carolina
Telephone: (803) 271-8543
TWX: None

6 PACIFIC NORTHWEST ELECTRONICS

14264 S.E. Eastgate Way
Bellevue, Washington 98007
Telephone: (206) 641-6444
TWX: None

2035 S.W. 58th Street
Portland, Oregon 97221
Telephone: (503) 292-3505
TWX: None

7 PAT JENKS ASSOCIATES

2315 Whitney Avenue
Hamden, Connecticut 06518
Telephone: (203) 281-0810
TWX: 710-465-2096

607 North Avenue, Door 16
Wakefield, Massachusetts 01880
Telephone: (617) 246-1590
TWX: 710-348-6559

8 PIVAN ENGINEERING CO.

3535 Peterson Avenue
Chicago, Illinois 60659
Telephone: (312) 539-4838
TWX: 910-221-0177

5920 Nall, Suite 102
Shawnee Mission, Kansas 66202
Telephone: (913) 722-1030
TWX: 910-743-4172

10270 Page Blvd., Suite 113
St. Louis, Missouri 63132
Telephone: (314) 428-5508
TWX: None

1259 West 86th Street
Indianapolis, Indiana 46260
Telephone: (317) 253-1681
TWX: 810-341-3308

5100 Edina Industrial Blvd.
Minneapolis, Minnesota 55435
Telephone: (612) 835-3060
TWX: 910-576-2982

3055 North Brookfield Road
Brookfield, Wisconsin 53005
Telephone: (414) 786-1940
TWX: None

204 Collins Rd., N.E.
Cedar Rapids, Iowa 52402
Telephone: (319) 377-9434
TWX: 910-525-1308

9 PLS ASSOCIATES, INC.

7755 E. Quincy Avenue, T-9
Denver, Colorado 80237
Telephone: (303) 773-1218
TWX: None

4300 H Silver Avenue, S.E.
Albuquerque, New Mexico 87108
Telephone: (505) 255-2330
TWX: None

PLS ASSOCIATES continued

4001 N. 31st Ave., Ste. 61
Phoenix, Arizona 85017
Telephone: (602) 279-1531
TWX: None

2520 South State, Suite 102
Salt Lake City, Utah 84115
Telephone: (801) 466-8729
TWX: None

10 SDM REPRESENTATIVES, INC.

673 Panorama Trail West
Rochester, New York 14625
Telephone: (716) 381-9962
TWX: None

15 Fairview Terrace
Paramus, New Jersey 07652
Telephone: (201) 368-0123
TWX: 710-990-5168

11 SET MARKETING, INC.

287 Northern Blvd.
Great Neck, New York 11021
Telephone: (516) 466-0550
TWX: 510-223-0833
(Metropolitan New York)

12 RACAL-DANA INSTRUMENTS INC.

Northwest Regional Office
1400 Coleman Ave., Suite G-27
Santa Clara, California 95050
Telephone: (408) 727-2342

Western Regional Office
18912 Von Karman Avenue
Irvine, California 92713
Telephone: (714) 833-2780
(213) 628-8825
TWX: 910-595-1136

13 WEBSTER INSTRUMENTS LTD.

1200 Aerowood Drive
Unit 28
Mississauga, Ontario
Canada L4W 2S7
Telephone: (416) 625-0600
TWX: 610-492-4560



AUTHORIZED SERVICE CENTERS

1 BALL AEROSPACE SYSTEMS DIVISION
P.O. Box 1062 — P.O. Box Zip 80306
Boulder Industrial Park
Boulder, Colorado 80302
Telephone: (303) 441-4786

2 AMERICAN ELECTRONIC LABORATORIES
2901 Telestar Court
Falls Church, Virginia 22042
Telephone: (703) 573-8240

3 P.O. Box 552
Lansdale, Pennsylvania 19446
Telephone: (215) 822-2929
SHIP TO: 306 Richardson
Montgomeryville, Pennsylvania 18936

4 AMPOWER ELECTRONIC INSTRUMENT CO., INC.
26 Just Road
Fairfield, New Jersey 07006
Telephone: (201) 227-7720
TWX: 710-734-4387

5 129 Shaber Road
Patchogue, New York 11772
Telephone: (516) 289-1635

6 3123 Atlantic
Penfield, New York 14526
Telephone: (716) 377-1020

7 COMTEL/PIVAN ENGINEERING
3535 W. Peterson Avenue
Chicago, Illinois 60659
Telephone: (312) 539-4838
TWX: 910-221-0177

8 BROWNELL-ELECTRO
3020 Commerce Way
Atlanta, Georgia 30354
Telephone: (404) 762-5181

9 307 27th Street
Orlando, Florida 32806
Telephone: (305) 843-6775

10 5141 Belhaven Blvd.
Charlotte, North Carolina 28216
Telephone: (704) 394-4341

11 3053 Tranquility Drive
Memphis, Tennessee 38116
Telephone: (901) 332-9258

12 1050 Acorn Drive
Nashville, Tennessee 37210
Telephone: (615) 889-8230

13 3450 Armour Drive
Mobile, Alabama 36607
Telephone: (205) 479-8581

14 P.O. Box 2215
Miami, Florida
Telephone: (305) 592-2636

15 XTEK
14824 N. E. 31st Circle
Redmond, Washington 98052
Telephone: (206) 885-6969

16 RHODES-GROOS LABORATORIES
3409 Andree Blvd.
Austin, Texas 78724
Telephone: (512) 928-0813

17 COMTEL STANDARDS LABORATORY
21186 Bridge Street
P.O. Box 5034
Southfield, Michigan 48037
Telephone: (313) 358-2500

18 J.D. ASSOCIATES
1012 Morse, Suite No. 6
Sunnyvale, California 94086
Telephone: (408) 734-5529



RACAL-DANA INSTRUMENTS INC. FACTORY SERVICE LOCATIONS

18912 Von Karman Avenue
Irvine, California 92715
Telephone: (714) 833-1234



PAT JENKS ASSOCIATES

607 North Ave., Door 16
Wakefield, Massachusetts 01880
Telephone: (617) 246-1590