

Supplement

Manual Title: OptiFiber Users

Part Number: Print Date:

Revision/Date: 2, 9/03

Supplement Issue: 1779484 Issue Date: 8/04 September 2002 Page Count:

This supplement contains information necessary to ensure the accuracy of the above manual.

OptiFiber Users Manual Supplement

Change #1

On page 8, change the 3rd bullet and add a new bullet as follows:

From: Use a FiberInspector video probe to periodically inspect the tester's optical connector for scratches and other damage.

To: Use a FiberInspector video probe to periodically inspect the tester's OUTPUT connector for scratches and other damage.

• Do not use a video microscope to inspect the fiber module's INPUT connector. This connector has different dimensions than the OUTPUT connector, and may be damaged by a fiber inspection probe.

Change #2

On page 46, replace Using Madrels for Testing Multimode Fiber, with the following:

Using Multimode Fiber Mandrels

Fluke Networks strongly recommends the use of standardized mandrels when using an LED source and an optical power meter to measure optical power loss in multimode fiber optic cabling. The mandrels act as mode filters. They remove unwanted high-order modes from the optical signal when testing with an LED source that overfills the fiber. The resulting launch condition is more uniform, which generally improves instrument-to-instrument measurement consistency and loss measurement repeatability.

Fluke Networks offers TIA/EIA-568-B compliant multimode mandrels for 3 mm test jumpers. Figure 1 shows one of these mandrels. The Fluke Networks *NF-MANDREL Instruction Sheet*, part number 1997813, provides additional information on these mandrels. You may download the instruction sheet from the manuals page for your fiber product on the Fluke Networks web site at **www.flukenetworks.com**.

8/04

OptiFiber Users Manual Supplement

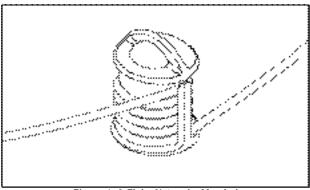


Figure 1. A Fluke Networks Mandrel

Industry standards specify mandrel diameters and number of wraps. Refer to your local standards for details. Table 1 lists recommended mandrel diameters for several of the key standards.

You install the mandrel on the test jumper connected to the LED optical source. Make a reference power measurement with the mandrel in place. Leave the mandrel in place while measuring insertion loss.

2 8/04

OptiFiber Users Manual Supplement

Table 1. Recommended Mandrel Diameters

Fiber Core Size	Standard	Wraps	Mandrel Diameter for 250 µm Buffered Fiber	Mandrel Diameter for 3 mm (0.12 in) Jacketed Fiber
50 μm	TIA/EIA-568-B.1 7.1	5	25 mm (1.0 in)	22 mm (0.9 in)
	ISO/IEC TR 14763-3 6.22	5	15 mm (0.6 in)	12 mm (0.5 in)
	ISO/IEC 61300-3-34	5	18 mm (0.7 in)	15 mm (0.6 in)
62.5 μm	TIA/EIA-568-B.1 7.1	5	20 mm (0.8 in)	17 mm (0.7 in)
	ISO/IEC TR 14763-3 6.22	5	20 mm (0.8 in)	17 mm (0.7 in)
	ISO/IEC 61300-3-34	5	20 mm (0.8 in)	17 mm (0.7 in)

8/04 3