

or between 7:00 am - 3:00 pm PST on Saturday.
between the hours of 5:00 am - 7:00 pm PST Monday through Friday

Please call (800) 626-4686, option 2 for assistance

Techincal Support Contact Information:

- Always ensure that the busy indicator light is off before turning the system power off.
- Never force a disk into the drive or insert a disk upside down as this may damage the drive.
- Do not use your DynaMO in areas where a disk upside down, dirt, extreme temperatures or moisture is present.
- Do not insert foreign objects into the DynaMO.
- Never insert a floppy disk into the DynaMO.
- Remove the MO disk before transporting your DynaMO.
- Make sure the system power is off before disconnecting any cables.
- Never disassemble your DynaMO under any circumstances.

Do's and Don'ts:

1. Insert disk, label side up. If disk will not go in, do not force. Check to see that the spring-load bezel door is open before installing the disk.
2. LED should blink during access. Refer to Troubleshooting section if you encounter problems.
- EMERGENCY EJECT: If disk will not eject using the proper methods, insert the straightened end of a paper clip into to hole just below the shutter door and push gently but firmly until the MO disk is ejected.

How to Use the DynaMO Optical Disk Drive:

You cannot record data on the MO disk.
Is the MO disk write protected?
Are the cables properly attached?
Is the MO disk formatted?
Is the device driver installed?
Is the busy indicator lit (disk in use)?
Is software preventing the disk from being ejected?
Is the busy indicator lit (disk in use)?
Has another MO disk already been inserted?
Is the disk being inserted in the correct direction?
Is the MO disk inserted correctly?
Is the MO disk formatted correctly?
Is the MO disk inserted correctly?
Is the IDE or SCSI cable connected properly?
Is the SCSI ID selected correctly for IDE drive?
Is the jumper setting selected correctly for SCSI drive?
Is the device driver installed?
Is the MO disk inserted correctly?
Is the MO disk already inserted?
You cannot insert the MO disk.
The computer does not recognize the DynaMO drive.
Troubleshooting:

THE POSSIBILITIES ARE INFINITE

FUJITSU

DynaMO Quick Install Card

1 Unpacking Your DynaMO kits:



- 1 MCM3xxxAP/SS or 1 MCJ3xxxAP/SS Drive
- 1 frame kit with brackets, bezel and retaining clip
(PLEASE USE ONLY THE 8 METRIC SIZED SCREWS, THIN TREAD, INCLUDED)
- 1 Magneto-Optical Media; capacity depends on drive model.
- 1 IDE cable or 1 SCSI cable
- 1 Power cable
- 1 DynaMO CD-ROM with installation software and drivers
- 1 each Limited Warranty Guide, Summary Card and Registration Card
- 2 "Get MO For Less" Labels

2 Getting Started:


1. Turn off computer.
IMPORTANT: Be sure to unplug your computer from the power source before removing the cover. Failure to do so could result in an electrical shock hazard to you.
2. Remove the system cover or casing.
3. Discharge static electricity. Touch one of the connectors on the back of your computer and ground yourself on a metal object to discharge any static electricity from your body.
IMPORTANT: If you do not discharge static electricity from your body before touching the disk drive, damage to the drive could result.

3 Configure Jumper Settings For IDE Drives (MCM3xxxAP and MCJ3xxxAP):


1. Jumper settings at factory shipping

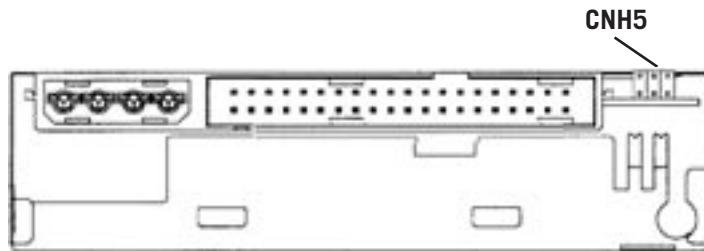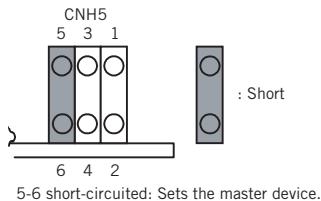

2. Setting master device mode

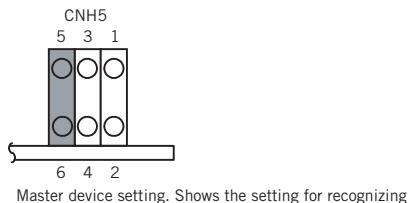


3. Setting slave device mode

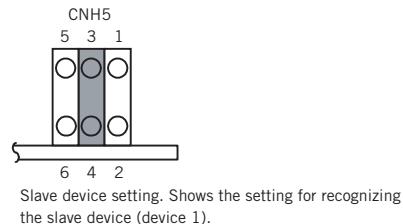

4 Configure Switch Settings For SCSI Drives (MCM3xxxSS and MCJ3xxxSS):

CNH2 sets the SCSI ID and two drive functions

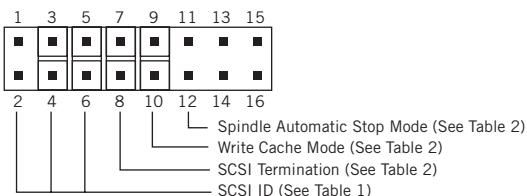

SCSI ID Setting (CNH2)

Table 1

SCSI ID	Pin 5-6	Pin 3-4	Pin 1-2
0	Open	Open	Open
1	Open	Open	Short
2	Open	Short	Open
3	Open	Short	Short
4	Short	Open	Open
5	Short	Open	Short
6*	Short	Short	Open
7	Short	Short	Short

*Factory setting

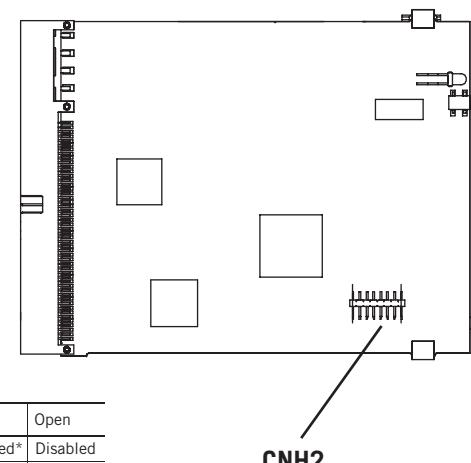


Table 2

PIN #	Functions	Short	Open
7-8	SCSI Termination	Enabled*	Disabled
9-10	Write Cache Mode	Enabled*	Disabled
11-12	Spindle Automatic Stop Mode	Enabled	Disabled*

5 Device Driver Installation:

1. Turn on computer and close all applications.
2. Insert the DynaMO CD into your CD-ROM drive, and click on the CD-ROM icon.
3. Select the appropriate operating system folders for your operating system and click on "README.txt" for installation instructions.
4. Follow the instructions to install your software.
5. Remove the CD and reboot the computer.