 




Panel Mount Version
METRATESTER® 5-E/5-F-E

3-349-057-15
5/12.08



1 Safety Features and Precautions

METRATESTER®5 and 5-F instruments are available as portable testers, as well as in a panel mount version for installation to test panels and switchgear cabinets.

In order to assure proper functioning and flawless technical safety condition of the panel mount version, it is absolutely essential that you thoroughly and carefully read and adhere to all of the instructions included in the chapter concerning mechanical installation and electrical connections, as well as the operating instructions included with the instrument before it is placed into service.

Please observe the following safety precautions:

- The instrument may only be connected to 230 V mains power and must be protected with a fuse with a minimum rating of 16 A.
- Make sure that the connector cables for the test socket and the mains outlet have not been reversed or damaged.

2 Standard Equipment

- Test instrument
- Operating instructions in German and English
- Cables for connecting the METRATESTER®5-E/5-F-E to the mains outlet

Not included:

- Four M3 mounting screws
- Test socket and mains outlet
- Cables for connection to test socket
- Cables for mains power supply

3 Mechanical Installation

The following describes mechanical installation for the METRATESTER®5-E/5-F-E.

The unconnected test socket and mains outlet can be cut away (sawed off) as shown if they get in the way during installation.

Panel Cutout Dimensions
and Wiring Diagram M700H and M700T



INSTRUMENT DESIGNED FOR PANEL MOUNT ONLY!



Attention!

9 mm clearances and creepage distances must be observed to voltage conducting parts of the instrument!

Maximum control panel wall thickness: 3 mm.
Cut off included plastic wedge as indicated and
insert between the control panel and the
instrument!

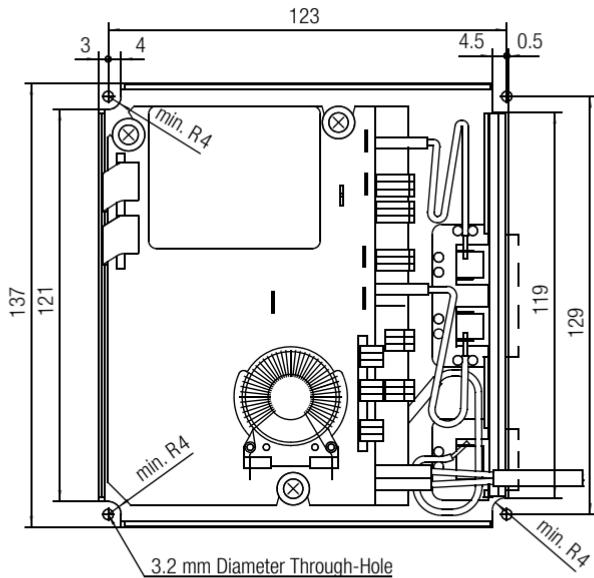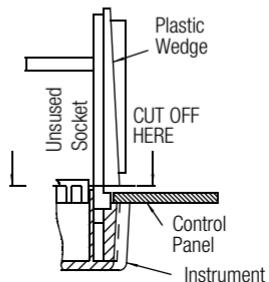

4 Electrical Connection

The following describes electrical connection of the METRATESTER® 5-E/5-F-E to the test socket and the mains outlet.

⇒ METRATESTER® 5-E/5-F-E:

The twisted-pair wires for the mains outlet must be fed through the differential current transformer as shown. Measurement of differential current is otherwise not possible.

⇒ METRATESTER® 5-E/5-F-E:

Connect one end of the mains power cables to the tab connectors with the designations br, bl and gnge, and the other end to the L1, N and PE terminals at the mains (br = L1, bl = N, gnge = PE).

Wiring Diagram
M700H

