
Index

A

Accuracy Calibration 5-14
Air Pressurization System
 Installation 8-66
 Parts List 7-22
 Removal 8-65

B

Back Cover
 Removal 8-23
Banding 1-12, 6-8, 6-20
Belt
 Installation 8-52
 Removal 8-46
Belt Swelling 9-10
Blurred Lines 6-18
Booster Fan
 Parts List 7-16
 Removal 8-103

C

Calibration Error Codes
 Service
 000X 5-27
 002X 5-28
 0100 5-29
 31XX 5-34
 3200 5-35
 400X 5-35
 5001 5-37
 5002 5-37
 5003 5-38
 5004 5-38

5005 5-38
5006 5-38
5007 5-38
5010 5-39
5011 5-39
5012 5-39
5013 5-39
5014 5-39
5015 5-40
6001 5-40
6003 5-40
6004 5-40
6005 5-41
6006 5-41
6007 5-41
6008 5-41
6009 5-41
6010 5-42
6011 5-42
6012 5-42
6013 5-42
6014 5-42
6015 5-42
6016 5-43
6017 5-43
6018 5-43
6019 5-43
7006 5-43

User

100X 5-29
1060 5-32
1061 5-32
1062 5-32
2002 5-32
2003 5-32
2004 5-33
2005 5-33

- 2006 5-33
- 2007 5-33
- 2008 5-33
- 2101 (through to 2607) 5-34
- Calibrations
 - Service 5-3
- Carriage Assembly and Belt
 - Installation 8-52
 - Parts List 7-36
 - Removal 8-46
- Carriage Height Calibration 5-18
- Carriage Interconnect Wiper 9-6
- Carriage Usage Cycles 9-3
- Center Guide Assembly
 - Parts List 7-44
 - Removal 8-107
- Center Platen Assembly
 - Installation 8-113
 - Parts List 7-40
 - Removal 8-112
- Cleaning
 - General 9-10
- Cockle 1-15
- Color
 - Accuracy Configuration 6-18
 - Consistency problems 6-17
- Color differences 1-11
- Cooling Fans
 - Removal 8-90
- Cutter Assembly
 - Parts List 7-36
 - Problems 1-19
 - Removal 8-58

D

- Deflectors
 - Parts List 7-44
 - Removal 8-114
- Diagnostic Print 6-4
 - No Printing Defects 6-16
- Diagnostic Print Utility 4-34
- Diagnostics
 - Boot Failed-1f500XX 4-4

- BootROM checksum failed 4-3
- BOOTROM ERROR 4-4
- COMPONENT MISMATCH 4-4
- Error Memory Config-X 4-3
- Error Memory Test 4-3
- Power Supply Error #1 4-3
- Diagnostics - Self Test 4-2
- DIMM's
 - Removal 8-75
- DRAM Memory
 - Parts List 7-26
- Drive Roller Gear
 - Removal 8-109
- Drop Detector Assembly
 - Removal 8-70
- Drying Time 1-16

E

- EEROM Backup 4-31
- EEROM Setup 4-24
- Electronics Module 8-46
 - Cover Removal 8-77
 - Removal 8-92
- EMC Covers
 - Parts List 7-48
 - Removal 8-32
- Encoder Strip
 - Installation 8-35
 - Parts List 7-38
 - Removal 8-34
- Entry Roller
 - Parts List 7-44
 - Removal 8-106
- Extension Cover
 - Removal 8-17

F

- Firmware Upgrade
 - Problems 1-23
- Firmware Upgrade CD 7-52
- Firmware Upgrades 9-11

Firmware Version 1-2
Front Panel Assembly
 Parts List 7-6
 Removal 8-14
Front Panel Display 3-6
Front Platen Assembly
 Parts List 7-40
 Removal 8-110
Functional Overview
 Air Pressurization System 10-8
 Electrical System 10-2
 Ink Supply Station 10-6
 Leak Detect System 10-8
 Print Head Cleaner 10-9
 Service Station 10-9
 Tubes System 10-6

H

Hard Disk Drive
 Installation 8-73
 Parts List 7-30
 Removal 8-72

I

Img. Quality Warning 4-33
Initialization Sequences 4-2
Ink Cartridges 3-2
 Error Messages 3-16
 Replace 3-17
 Reseat 3-17
 Unknown 3-17
 obtaining information 3-7
 Status Messages 3-11
 Empty 3-11
 Insert 3-11
 Low 3-11
 OK 3-11
 Setup 3-11
 Very Low 3-11
Ink Delivery System 10-5
Ink Leak Detector

 Removal 8-88
Ink Smearing 1-39
Ink Supplies 3-2
 Cartridges 3-2
 General Information 3-3
 Precautions 3-4
 Replacing 3-5
Ink Supply Station
 Installation 8-64
 Parts List 7-22
 Removal 8-62
Ink Supply Station (ISS) PCA
 Removal 8-86
Ink Tubes System
 Installation 8-30
 Parts List 7-24
 Removal 8-25
Installation
 Air Pressurization System 8-66
 Carriage Assembly and Belt 8-52
 Center Platen Assembly 8-113
 Encoder Strip 8-35
 Hard Disk Drive 8-73
 Ink Supply Station 8-64
 Ink Tubes System 8-30
 Left Hand Cover 8-9
 Lever Assembly 8-19
 Media Sensor 8-105
 Memory DIMM 8-76
 Overdrive Gear 8-109
 Paper-Motor Axis 8-102
 Pinch-Wheel Cam 8-97
 Right Hand Cover 8-13
 Right Hand Trim 8-21
 Scan-Axis Motor 8-58
 Tensioner Assembly 8-45
 Trailing Cable 8-39
 Vacuum Fan 8-99
Interface
 Specifications 10-13
ISS
 see Ink Supply Station
ISS PCA
 see Ink Supply Station PCA

J

Japanese Fonts
 See EEROM Setup 4-27

L

LAN Card
 Removal 8-74
Language Selection
 Problems 1-23
Left Hand Cover
 Installation 8-9
 Parts List 7-8
 Removal 8-6
Left Hand Trim
 Parts List 7-8
 Removal 8-22
Left Rear Cover
 Removal 8-15
Lens Maintenance 9-5
Level of Printer Usage 9-2
Lever Assembly
 Installation 8-19
 Parts List 7-42
 Removal 8-18
Life Counters, Reset 4-29

M

Main PCA
 Removal 8-79
Maintenance
 Carriage Interconnect Wiper 9-6
 Carriage Usage Cycles 9-3
 Firmware 9-11
 Lens 9-5
 Paper Axis 9-7
 Printhead Usage Cycles 9-2
 Roller Lubrification 9-7
 Routine User 9-5
 Service Preventive 9-2
 Stop Trigger 9-4

 Tubes Usage Cycles 9-3
 Warnings 9-3

Margins
 Specifications 10-10

Media
 Image Quality Problems 6-21
 Warped 6-21

Media Axis Test 4-12

Media Jams 1-6

Media Sensor
 Installation 8-105
 Parts List 7-16
 Removal 8-104

Media skew 1-16

Media Types 7-53

Memory
 Specifications 10-10

Memory DIMM
 Installation 8-76
 Parts List 7-26

Model Number
 See EEROM Setup 4-25

Moisture 9-10

N

Noisy Carriage Bushing 9-10
Nozzle Defects 6-15
Nozzle Print Test 6-14

O

Overdrive Gear
 Removal 8-109

P

Paper Axis Maintenance 9-7
Paper-Axis Motor Assembly
 Installation 8-102
 Parts List 7-18
 Removal 8-100

Parts List

- APS Assembly 7-22
- Back Cover 7-10
- Booster Fan 7-16
- Carriage Assembly 7-36
- Center Guide 7-44
- Cutter Assembly 7-36
- Deflectors 7-44
- DRAM Memory 7-26
- EMC Covers 7-48
- Encoder Strip 7-38
- Entry Roller 7-44
- Firmware Upgrade CD 7-52
- Front Panel Assembly 7-6
- HDD and Cover 7-30
- Ink Tubes System 7-24
- ISS 7-22
- ISS PCA 7-32
- Left Hand Cover and Door 7-8
- Left Hand Trim 7-8
- Lever 7-42
- Main PCA 7-32
- Media Sensor 7-16
- Media Types 7-53
- Memory DIMM 7-26
- Paper-Axis Motor 7-18
- Pinch-Wheels 7-42
- Platen Assemblies 7-40
- Power Supply Unit 7-34
- Printer Support 7-2
- Repackaging Kit 7-52
- Right Hand Cover 7-6
- Right Hand Trim 7-6
- Scan-Axis Motor 7-20
- Service Preventive Maintenance Kit 7-52
- Service Station 7-12
- Tensioner Assembly 7-38
- Top Cover 7-10
- Tubes Guide 7-46
- User Maintenance Kit 7-52
- Vacuum Fan 7-14

PCA

- ISS
 - Parts List 7-32

Removal 8-86**Main**

- Parts List 7-32
- Removal 8-79

Pinch-Wheel Cam

- Installation 8-97
- Removal 8-95

Pinch-Wheels Assembly

- Parts List 7-42
- Removal 8-93

Power Supply Unit

- Parts List 7-34
- Removal 8-83

Priming the Ink System 3-5**Print Modes 6-3****Print Quality**

- Troubleshooting Checklist 6-2

Printable Area 10-13**Printer Specifications 10-10****Printer Support 7-2****Printhead****Error Messages**

- Reseat 3-14

- Usage Cycles 9-2

Printhead Cleaners 3-2

- Error Messages 3-18
- Replace 3-18

Printhead Crashes 1-6, 1-11, 1-39**Printhead Smears 1-11****Printheads 3-2**

- Error Messages 3-13

- Recover 3-14

- Replace 3-14

- Obtaining Information 3-8

Prints too short 6-18**Problems**

- Banding 6-8, 6-20

- Banding and Media Advance 6-9

- Blurred Lines 6-18

- Carriage and Scan-Axis 1-20

- Color Accuracy 6-17

- Color Alignment 6-11

- Color Consistency 6-17

- Color not as expected 6-19

- Color to Color Alignment 6-19

Cutter Assembly 1-19
Electronics 1-21
Firmware Upgrade 1-23
Language Selection 1-23
Long Term Color Bleeding 6-22
Media 6-21
Media-Axis 1-20
Media-handling 1-25
Prints too short 6-18
Vacuum 1-10
Vacuum suction 1-10
Vertical Banding 6-20
Vertical Line Straightness 6-13
Warped Lines on Media 6-21

R

Removal

Air Pressurization System 8-65
Back Cover 8-23
Booster Fan 8-103
Carriage Assembly and Belt 8-46
Center Guide Assembly 8-107
Center Platen Assembly 8-112
Cooling Fans 8-90
Cutter Assembly 8-58
Deflectors 8-114
DIMM's 8-75
Drive Roller Gear 8-109
Drop Detector Assembly 8-70
Electronics Module 8-92
Electronics Module Cover 8-77
EMC Covers 8-32
Encoder Strip 8-34
Entry Roller 8-106
Extension Cover 8-17
Front Panel Assembly 8-14
Front Platen Assembly 8-110
Hard Disk Drive 8-72
Ink Leak Detector 8-88
Ink Supply Station 8-62
Ink Supply Station (ISS) PCA 8-86
Ink Tubes System 8-25
LAN Card 8-74

Left Hand Cover 8-6
Left Hand Trim 8-22
Left Rear Cover 8-15
Lever Assembly 8-18
Media Sensor 8-104
Paper-Axis Motor 8-100
PCA
 ISS 8-86
 Main 8-79
Pinch-Wheel Cam 8-95
Pinch-Wheels 8-93
Power Supply Unit 8-83
Right Hand Cover 8-10
Right Hand Trim 8-20
Right Rear Cover 8-16
Scan-Axis Motor 8-55
Service Station 8-67
Tensioner Assembly 8-42
Top Cover 8-5
Trailing Cable 8-36
Vacuum Fan 8-98

Repackaging Kit 7-52

Right Hand Cover
 Installation 8-13
 Parts List 7-6
 Removal 8-10
Right Hand Trim
 Installation 8-21
 Parts List 7-6
 Removal 8-20

Right Rear Cover
 Removal 8-16

Roller Lubrification 9-7

S

Scan Axis Test 4-10
Scan-Axis Calibration 5-7
Scan-Axis Motor
 Installation 8-58
 Parts List 7-20
 Removal 8-55
Scheduled Maintenance 9-2
Scratches 1-15

-
- Scratches on Media 6-22
 - Self Test
 - See Diagnostics 4-2
 - Service Calibrations
 - Accuracy 5-14
 - Carriage Height 5-18
 - Entering 5-4
 - Scan-Axis 5-7
 - Service Station 5-11
 - Service Configuration Print 1-37
 - Service Preventive Maintenance 9-2
 - Service Preventive Maintenance Kit 7-52
 - Service Station 10-9
 - Calibration 5-11
 - Parts List 7-12
 - Removal 8-67
 - Service Tests
 - Accessing 4-7
 - Media Axis 4-12
 - Scan Axis Test 4-10
 - Service Utilities
 - Accessing 4-15
 - Altitude Setup 4-23
 - Backup EEROM 4-31
 - Diagnostic Print 4-34
 - EEROM Setup 4-24
 - Image Quality Warning 4-33
 - Reset Life Counters 4-29
 - Tubes, Priming 4-19
 - Turn DRIVE ROLLER 4-18
 - Slider Rod Lubrification 9-8
 - Smears 6-22
 - Specifications
 - Acoustic 10-11
 - Ecological 10-11
 - EMC 10-12
 - Environmental 10-11
 - Functional 10-10
 - Interface 10-13
 - Margins 10-10
 - Media Sizes 10-10
 - Memory 10-10
 - Operational 10-11
 - Parallel Interface 10-13
 - Physical 10-10
 - Power 10-11
 - Printable Area 10-13
 - Printer Accuracy 10-10
 - Printer Power 10-11
 - Programming Lang. Supported 10-10
 - Resolution 10-10
 - Safety 10-12
 - Status Messages
 - Ink Supply Errors 3-12
 - see Ink Cartridges 3-11
 - System Error Codes 2-3
 - 010023 2-8
 - 01002D 2-7
 - 010030 034c095e 2-8
 - 010040 2-8
 - 010041 2-9
 - 010042 2-9
 - 010090 2-10
 - 010091 2-10
 - 010092 2-10
 - 011000 2-10
 - 050000 2-11
 - 050001 2-11
 - 06030C 2-11
 - 0A0000 2-12
 - 0A0010 2-12
 - 0A0020 2-12
 - 0A0030 2-13
 - 0A0040 2-13
 - 0A0050 2-14
 - 0A0060 2-14
 - 0A0070 2-14
 - 0B0000 2-14
 - 0B0001 2-15
 - 0B0002 2-15
 - 0B0003 2-15
 - 0B0004 2-16
 - 0B0005 2-16
 - 0B0006 2-16
 - 0B0007 2-17
 - 0B0008 2-17
 - 0B0009 2-17
 - 0B000A 2-18
 - 0B000B 2-18
 - 0B000C 2-18

0B000D 2-19
0B000E 2-19
0C0030 2-19
0C0032 2-20
0C0040 2-20
0C00FF 2-21
0C1000 2-21
0C1001 2-21
0D0000 2-22
0D0000 033f019C 2-22
0D0002 2-22
0F0200 00b007bc 2-23
0F0200 01E603d2 2-23
1f500XX 2-23
Continuable 2-4
e50000 2-24
ffff ffff 01dcxxxx 2-6
ffff ffff 02b301b0 2-5
ffff ffff 030d0170 2-6
ffff ffff 030d0171 2-6
ffff ffff 031609xx 2-6
ffff ffff 03450097 2-7
ffff ffff 036000bd 2-7
ffff ffff 036e0136 2-7
ffff ffff xxxxxxxx 2-5
General Firmware Error 2-5
Non-Continuable 2-4
OFXXXX 2-22
System Maintenance 9-11

T

Take-Up-Reel
 Problems 1-40
Tensioner Assembly
 Installation 8-45
 Parts List 7-38
 Removal 8-42
Throughput 1-39
Tools 8-3
Top Cover
 Parts List 7-10
 Removal 8-5
Trailing Cable

Installation 8-39
 Parts List 7-36
 Removal 8-36
Troubleshooting
 Power 1-5
 Shutdowns 1-7
 Take-Up-Reel 1-40
Tubes Guide Assemblies
 Parts List 7-46
Tubes Usage Cycles 9-3

U

User Maintenance Kit 7-52
User Messages
 Incorrect type of tubes system 1-17
 Media loaded incorrectly 1-16
 Power Supply Error #1 1-17

V

Vacuum
 Altitude Setup 4-23
 Problems 1-10
Vacuum Fan
 Installation 8-99
 Parts List 7-14
 Removal 8-98
Vertical Banding 6-20

W

Worm marks 1-15
Wrinkles 1-15