

**User's Guide
Dsn/Sonet
Operation**

**HP 37717C
Communications
Performance Analyzer**

© Copyright Hewlett-Packard Ltd. 1998

All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

HP Part No.
37717-90403

First edition, 03/98

Printed in U.K.

Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose.

 
Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

WARNING

Warning Symbols
Used on the Product



The product is marked with this symbol when the user should refer to the instruction manual in order to protect the apparatus against damage.



The product is marked with this symbol to indicate that hazardous voltages are present



EN 60825 1991

The product is marked with this symbol to indicate that a laser is fitted. The user should refer to the laser safety information in the Calibration Manual.

HP 37717C Communications Performance Analyzer

About This Book

This book tells you how to select the features that you want to use for your test.

The selections available are presented in the following groups:

- Transmit and receive interfaces
- Test features, for example, the addition of errors and alarms to the test signal
- Measurements including test timing
- Storing, logging and printing results with general printer information
- Using instrument and disk storage
- Using the “Other” features.

The selections available will depend on the options fitted to your instrument. The examples given in this book cover all options and therefore may include selections which are not available on your instrument.

NOTE

If you intend using the instrument for SDH operation please refer to User’s Guide (part number 37717-90402). The contents are similar to this manual but with SDH terminology used in place of SONET terminology.

Contents

1 Setting the Interfaces

- Setting PDH Transmit Interface 2
- Setting PDH Transmit Binary Interface 4
- Setting SONET Transmit Interface 6
- Setting Jitter Transmit Interface 9
- Setting Wander Transmit Interface 10
- Selecting the Physical Transmit Interface for ATM Payloads 12
- Setting SONET THRU Mode 14
- Using Autoseup 16
- Setting PDH Receive Interface 18
- Setting PDH Receive Binary Interface 20
- Setting SONET Receive Interface 21
- Setting Jitter Receive Interface 23
- Selecting the Physical Receive Interface for ATM payloads 25

2 Selecting Test Features

- Using Transmit Overhead Setup 28
- Using Receive Overhead Monitor 30
- Setting Overhead Trace Messages 32
- Generating Overhead Sequences 33
- Using Receive Overhead Capture 35
- Adding Frequency Offset to SONET Signal 37
- Adding Frequency Offset to the PDH Signal 39
- Setting up Signaling Bits 40
- Setting Transmit Structured Payload/Test Signal (Options UKJ or 110) 43
- Setting Receive Structured Payload/Test Signal 45
- Connecting A Telephone Handset 47

Setting Transmit N X 64 kb/s
(N X 56 kb/s) Structured Payload/Test Signal 48

Setting Receive N X 64 kb/s (N X 56 kb/s) Structured Payload/Test
Signal 50

Inserting an External PDH Payload/Test Signal 52

Dropping an External Payload/Test Signal 54

Selecting ATM Cell Stream Payload 56

Selecting ATM Cell Stream Timing Distribution 57

Selecting ATM Cell Stream Headers and Interface 58

Adding Errors & Alarms at the SONET Interface 59

Adding Errors & Alarms to the PDH Interface/PDH Payload 60

Using FEAC Codes in the HP 37717C 62

Adding ATM Errors and Alarms 65

Setting PDH Spare Bits 66

Adding Pointer Adjustments 67

T1.105/GR-253 Pointer Sequences Explained 69

Using Pointer Graph Test Function 75

Stressing Optical Clock Recovery Circuits 77

Generating Automatic Protection Switch Messages 78

Inserting & Dropping Data Communications Channel 79

3 Making Measurements

Using Overhead BER Test Function 82

Test Timing 83

Making SONET Analysis Measurements 84

Making PDH Analysis Measurements 85

Measuring Jitter 87

Measuring Wander 89

Measuring Frequency 91

Measuring Optical Power 92
Measuring Round Trip Delay 93
Monitoring Signaling Bits 95
Measuring Service Disruption Time 97
Performing an SONET Tributary Scan 99
Performing a SONET Alarm Scan 101
Performing a PDH Alarm Scan 103
Selecting the ATM Measurement Parameters 104
Making ATM Measurements 106
Measuring Cell Transfer Delay and Cell Delay Variation 107
Measuring ATM Non-Conforming cells and one-point Cell Delay
Variation. 109
Monitoring ATM Alarms 110

4 Storing, Logging and Printing

Saving Graphics Results to Instrument Store 112
Recalling Stored Graph Results 113
Viewing the Bar Graph Display 115
Viewing the Graphics Error and Alarm Summaries 117
Logging Graph Displays 119
Logging Results 120
Logging Results to Parallel (Centronics) Printer 123
Logging Results to HP-IB Printer 124
Logging Results to Internal Printer 125
Logging Results to RS-232-C Printer 126
Printing Results from Disk 127
Connecting an HP DeskJet Printer to a Parallel Port 128
Changing Internal Printer Paper 129
Cleaning Internal Printer Print Head 132

5 Using Instrument and Disk Storage

- Storing Configurations in Instrument Store 134
- Storing Current Configurations on Disk 135
- Setting up a Title for Configurations in Instrument Store 136
- Recalling Configurations from Instrument Store 137
- Formatting a Disk 138
- Labeling a Disk 139
- Managing Files and Directories on Disk 140
- Adding Descriptors to Disk Files 144
- Saving Graphics Results to Disk 145
- Saving Data Logging to Disk 147
- Recalling Configuration from Disk 148
- Recalling Graphics Results from Disk 149
- Copying Configuration from Instrument Store to Disk 150
- Copying Configuration from Disk to Instrument Store 151
- Copying Graphics Results from Instrument Store to Disk 152
- Deleting a File on Disk 154
- Deleting a Directory on Disk 155
- Renaming a File on Disk 156
- Creating a Directory on Disk 157

6 Selecting and Using "Other" Features

- Coupling Transmit and Receive Settings 160
- Suspending Test on Signal Loss 161
- Setting Time & Date 162
- Enabling Keyboard Lock 163
- Enabling Beep on Received Error 164
- Enabling Analysis Control 165

Setting Error Threshold Indication 166
Dumping Display to Disk 167
Setting Screen Brightness and Color 169
Running Self Test 170

7 STS-1 SPE Background Patterns

8 ETSI/ANSI Terminology

ETSI/ANSI Conversion and Equivalent Terms 178

Index

Setting the Interfaces

This chapter tells you how to set the instrument interfaces to match the network being tested.

Setting the Interfaces

Setting PDH Transmit Interface

Description

PDH transmit interface settings should match network equipment settings of Rate, Termination and Line Code and determine the Payload to be tested.

TIP:

To set the Transmitter and Receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**.

Option Differences

If Option 110 is fitted the following SIGNAL rates and TERMINATION choices apply:

2 Mb/s - Termination 75 Ω UNBAL or 120 Ω BAL

34 Mb/s - fixed 75 Ω UNBAL

DS1 - 100 Ω BAL; select LINE CODE from AMI or B8ZS, and OUTPUT LEVEL from DSX-1 or DS1-LO.

DS3 - 75 Ω UNBAL; LINE CODE fixed B3ZS; select OUTPUT LEVEL from DS3-HI, DSX-3 or DS3-900'.

TRANSMITTER OUTPUT		PDH/DSn
MAIN	STRUCT'D	TEST
SETTINGS	SETTINGS	FUNCTION
SIGNAL		2 Mb/s
CLOCK SYNC	INTERNAL	
TERMINATION		75 Ω UNBAL
LINE CODE		HDB3
FREQUENCY OFFSET		OFF
PAYLOAD TYPE	UNFRAMED	UNSTRUCTURED
PATTERN		2 ⁿ -1 PRBS
PRBS POLARITY		ITU

STATUS:

MULTIPLE WINDOW

Setting the Interfaces
Setting PDH Transmit Interface

HOW TO:

- 1 Choose the required PDH SIGNAL rate.
If Option 110 is fitted, rates of 34Mb/s, 2Mb/s, DS1 and DS3 are available. If Option UKJ is fitted rates of 2, 8, 34 and 140 Mb/s are available.
- 2 If Option UH3, Binary Interfaces is fitted, choose the INTERFACE required. See "Setting PDH Transmit Binary Interface " page 4.
- 3 Choose the required clock synchronization source (CLOCK SYNC).
If Option UH3, Binary Interfaces is fitted, the clock can be derived from an external binary input.
If Option A3K, Jitter and Wander Generator, is fitted and 2 Mb/s Signal rate is chosen the clock can be derived from an external 2 Mb/s signal connected to the 2M REF IN port of the Jitter Generator module.
- 4 If you have chosen 2 Mb/s as the PDH signal rate, choose the required impedance (TERMINATION). At all other rates the impedance is fixed. See Option Differences on previous page.
- 5 If you have chosen 2 Mb/s, DS1 or 8 Mb/s as the PDH signal rate, choose the required coding (Line Code). At 34 Mb/s and 140 Mb/s coding is fixed.
See Option Differences.
- 6 If required choose the FREQUENCY OFFSET value.
See "Adding Frequency Offset to SONET Signal" page 37
- 7 Choose the required Payload Type.
If Structured is chosen the PDH test signal must be set up. See "Setting Transmit Structured Payload/Test Signal (Options UKJ or 110)" page 43.
If you have chosen 2 Mb/s as the PDH signal rate, the Framed choice is expanded to provide a menu of 2 Mb/s framing types.
- 8 Choose the PATTERN type and PRBS POLARITY.

Setting PDH Transmit Binary Interface


Description

Option UH3, Binary Interfaces, provides binary NRZ interface for PDH measurements. The interfaces can operate at any of the standard rates ± 100 ppm.

PDH transmit binary interface settings should match the network equipment thresholds and polarity requirements for the binary interfaces

Variable Rate Binary Interface

If your instrument also includes Option UKK, variable rate binary interface is available. This allows you to select fixed rates that are different from standard telecom rates, and also to vary frequency over a wide range. Applications include component test, testing satellite and cable networks and testing PDH digital radios. A Product Note is available (part number 5965-4885E) which explains the use of a variable rate binary interface in the testing of PDH digital radios.

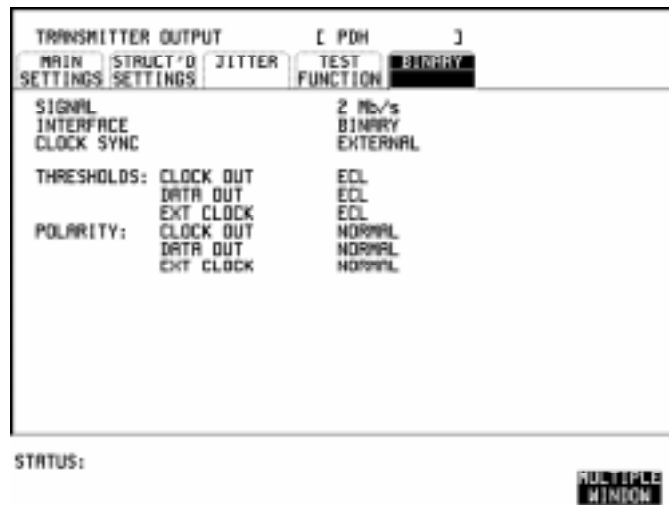

Setting the Interfaces

Setting PDH Transmit Binary Interface

HOW TO:

- 1 Set up the PDH transmit Interface as required. See "Setting PDH Transmit Interface " page 2.
If INTERFACE [BINARY] is chosen on the **PDH MAIN SETTINGS** display, threshold and polarity choices are available for Data and Clock.
If INTERFACE [CODED] is chosen on the **PDH MAIN SETTINGS** display, threshold and polarity choices are available for Clock only.
- 2 Choose the required thresholds.
EXT CLOCK polarity and threshold choices are only available if CLOCK SYNC [EXT BIN] is chosen on the **PDH MAIN SETTINGS** display.


Setting SONET Transmit Interface

Description

SONET transmit interface settings should match the network equipment settings of Rate, Wavelength and Mapping, determine the payload to be tested and set background conditions to prevent alarms while testing.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**.

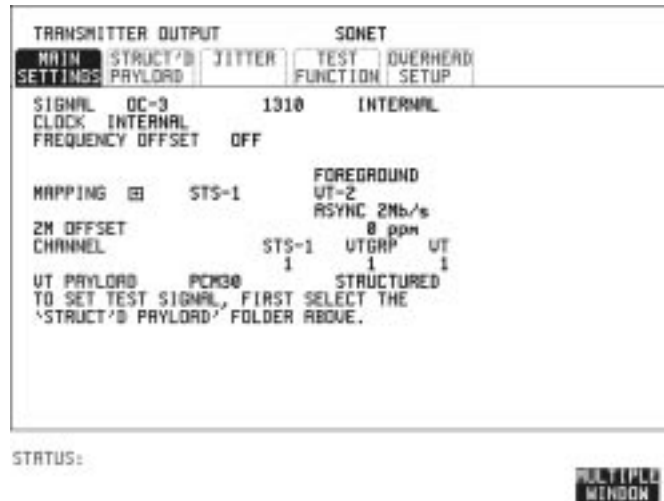

HOW TO:


- 1 Make your choice of SIGNAL rate.
If an optical rate is chosen, choose the required wavelength [1550] or [1310].
If a BINARY rate is chosen, choose the required clock and data polarity.
If STS-1 is chosen, choose the required interface level.
Choose INTERNAL unless THRU MODE is required.
- 2 Make your choice of CLOCK synchronization source. The RECEIVE clock sync choice depends on the SONET Receive Interface choice.
- 3 If required choose the CLOCK (FREQUENCY) OFFSET value.
- 4 Choose FOREGROUND **F/G MAPPING**, BACKGROUND

Setting the Interfaces

Setting SONET Transmit Interface

B/G MAPPING MAPPING and type of payload. DS1 and DS3 are valid payload type choices if Option UKJ, Structured PDH or Option 110 DSn SPDH, is fitted.

Mapping may be selected from a pictorial display by moving the cursor to MAPPING and pressing **[SET]**.

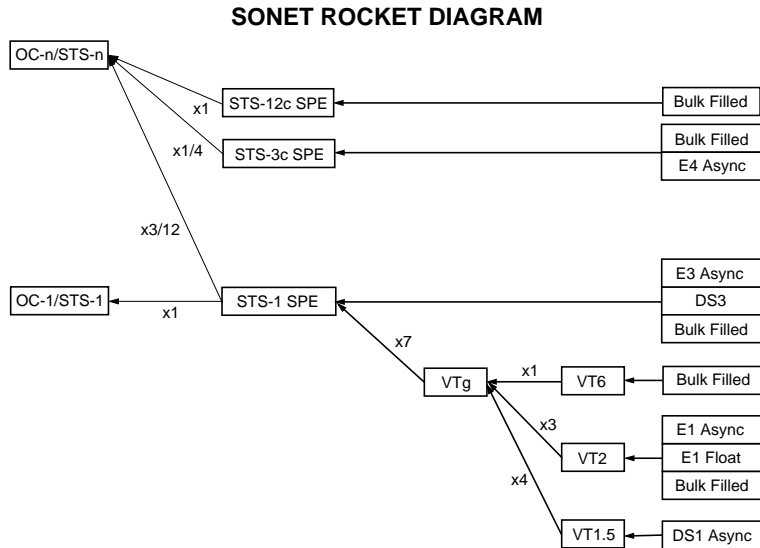

Use **[→]** and **[←]** to move between STS Layer Selection, VT Layer Selection and Payload Layer Selection. Use **[↑]** and **[↓]** to set the mapping and **[SET]** to set your selection.

- 5 If VT-6 mapping is chosen, VT CONCATENATION selection is enabled, choose OFF or the tributary at which the concatenation begins, VT6-2C through VT6-6C. The BACKGROUND, PATTERN IN OTHER VT2's is fixed at NUMBERED, that is, each VT-6 contains a unique number to allow identification in case of routing problems.
- 6 If VT-2, or VT1.5 mapping is chosen, choose the test tributary CHANNEL. Including the STS-3 for an STS-12 signal.
- 7 Choose the payload framing under PAYLOAD TYPE or VT PAYLOAD.

STRUCTURED and INSERT are available if Option UKJ, Structured PDH or Option 110 DSn SPDH is fitted.

Setting the Interfaces

Setting SONET Transmit Interface

If STRUCTURED is chosen, the Payload test signal must be set-up. See "Setting Transmit Structured Payload/Test Signal (Options UKJ or 110)" page 43.

If INSERT is chosen, see "Inserting an External PDH Payload/Test Signal" page 52.

- 8 Choose the PATTERN type and PRBS polarity.

NOTE


If interfacing at STS-1 with a user word pattern chosen then a false frame synchronization may occur. This is due to the effect of the standard ITU-T G.707 scrambling used at STS-1 when applied to a fixed payload. The scrambler may produce a false (F628) frame synchronization from the fixed payload. At STS-1 only a single F628 pattern is available for frame synchronization. If the false pattern is detected by the receiver this will result in frame synchronization being indicated but multiple alarms will occur. If this condition is suspected, change the PATTERN choice to PRBS and check that the multiple alarms are cleared when proper frame synchronization is achieved.

- 9 If required, choose 2M/DS3/34M/140M OFFSET value.
- 10 If 2 Mb/s framing PCM30 or PCM30CRC is chosen, set the CAS ABCD bit value.
- 11 Choose the mapping required in the background (non-test) SPE's. Refer to Appendix A "STS-1 SPE Background Patterns " page 176 for a table of background patterns for STS-1 SPE.
- 12 If VT-2 mapping is chosen for the test SPE, choose the PATTERN IN OTHER VT-2s.

Setting Jitter Transmit Interface

Description:

You can add jitter to the transmitted PDH or SONET signal at all ANSI rates. You can source the jitter modulation internally or from an external source.

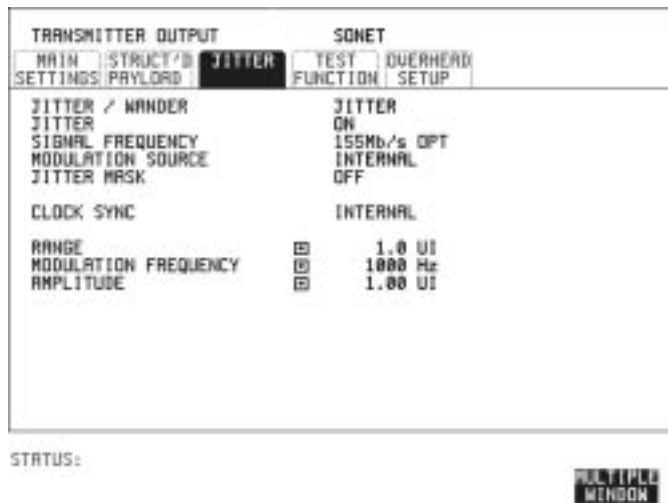

HOW TO:

- 1 If you are adding jitter to the PDH signal, set up the PDH transmit interface. See "Setting PDH Transmit Interface " page 2.


If you are adding jitter to the SONET signal, set up the SONET transmit interface. See "Setting SONET Transmit Interface " page 6.

- 2 Choose JITTER/WANDER [JITTER].
If you wish to add wander to the PDH or SONET signal, see "Setting Wander Transmit Interface " page 10.
- 3 Choose JITTER [ON].
- 4 Choose the modulation source.
If EXTERNAL is chosen, connect the external source to the MOD IN port of the JITTER TX module. Up to 10 UI of external jitter modulation can be added at the MOD IN port.
- 5 Choose the jitter range, jitter modulating frequency and jitter amplitude.

Setting Wander Transmit Interface

Description:

You can add Wander to the 2 Mb/s PDH signal and the STS-3 and STS-12 SONET signal. An external 2 Mb/s clock must be connected to the 2M REF IN port of the Jitter TX module.

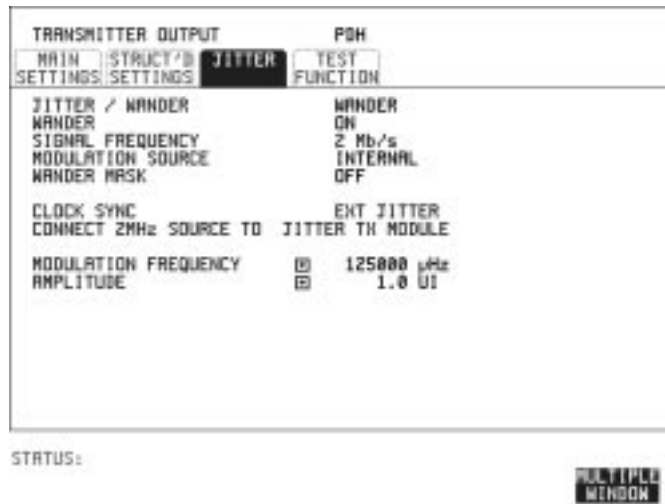

HOW TO:

- 1 Connect an external 2 Mb/s clock to the 2M REF port of the Jitter TX module.
- 2 If you are adding jitter to the 2 Mb/s PDH signal set up the PDH transmit interface and choose CLOCK SOURCE [EXT JITTER]. See "Setting PDH Transmit Interface " page 2.
If you are adding jitter to the STS-3 or STS-12 SONET signal set up the SONET transmit interface and choose an external CLOCK SOURCE. See "Setting SONET Transmit Interface " page 6.
- 3 Choose JITTER/WANDER [WANDER].
If you wish to add jitter to the PDH or SONET signal, see "Setting Jitter Transmit Interface " page 9.
- 4 Choose WANDER [ON].

Setting the Interfaces

Setting Wander Transmit Interface

- 5 Choose the modulation source.
If EXTERNAL is chosen, connect the external source to the MOD IN port of the JITTER TX module.
Up to 10 UI of external wander modulation can be added at the MOD IN port.
- 6 Choose the wander range, modulating frequency and amplitude.

Selecting the Physical Transmit Interface for ATM Payloads


Description

ATM transmit physical layer settings should match the network equipment settings in the same way as the SDH and PDH transmit interfaces. The Interface selections available are determined by the PDH/DSn and SDH modules fitted to your instrument.

Your selections are automatically transferred to the other TRANSMIT displays. Selection of STM-4 OPTICAL signal at the ATM PHYSICAL LAYER will cause the transmitter output SDH to change to STM-4 OPTICAL.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**.

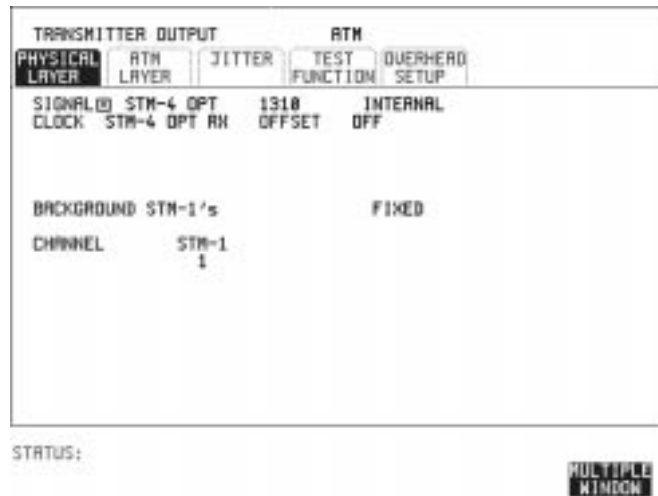

HOW TO:

- 1 Make your choice of SIGNAL rate.
If an optical rate is chosen, choose the required wavelength.
Choose INTERNAL unless THRU MODE is required. Jitter may be introduced into an STM-1, 140Mb/s, 32Mb/s or 2Mb/s signal with ATM payload if THRU MODE is chosen.
- 2 Make your choice of CLOCK synchronization source. At SDH rates, the RECEIVE clock sync choice is dependent upon the SDH Receive

Setting the Interfaces

Selecting the Physical Transmit Interface for ATM Payloads

Interface choice.

- 3 If the 2Mb/s rate is selected, select CRC-4 MULTIFRAME **ON** or **OFF**.
- 4 If the 140Mb/s or 34Mb/s rate is selected, select the TRAIL TRACE message type:

For the standard trail trace message "HP37717C" set TRAIL TRACE to **TEST**.

For a unique 15 character message, set TRAIL TRACE to **USER**

TIP:

If **USER** is selected, use **SET** for a pop-up menu to select the message characters.

Setting the Interfaces
Setting SONET THRU Mode

Setting SONET THRU Mode

Description

THRU mode is used to non-intrusively monitor SONET lines where no protected monitor points are available.

STS-1, STS-3

You can substitute a new payload, Transport Overhead (TOH) and Path Overhead (POH) in the received STS-1/3 signal for testing.

TRANSMITTER OUTPUT		[SONET]		
MAIN	STRUCT'D	JITTER	TEST	OVERHEAD
SETTINGS	PAYLOAD		FUNCTION	SETUP
SIGNAL	[OC-3][1310	[THRU MODE]	
CLOCK	OC-3 OPT RX			
STS-3C	PAYLOAD OVERWRITE		[OFF]	
	TOH+POH CHANNEL OVERWRITE		[OFF]	
RX SIGNAL RE-TRANSMITTED UNCHANGED.				
STATUS:				
				MULTIPLE WINDOW

Setting the Interfaces

Setting SONET THRU Mode

STS-12

With Option 130 or 131, the overhead and payload may be overwritten for STS-3C. TOH overwrite is available for STS-12C.

The Transmitter and receiver settings are automatically coupled in THRU MODE. To select STS-3C or STS-12C select **RECEIVE** and setup the receiver mapping as required.

TRANSMITTER OUTPUT		[SONET]		
MAIN	STRUCT'D	JITTER	TEST	OVERHEAD
SETTINGS	PAYLOAD		FUNCTION	SETUP
SIGNAL	[OC-12]	[1310]	[THRU MODE]	
CLOCK	OC-12 OPT RX			
STS-3C	PAYLOAD+POH	OVERWRITE	[OFF]	
	TOH CHANNEL	OVERWRITE	[OFF]	
RX SIGNAL RE-TRANSMITTED UNCHANGED.				
STATUS: EM				
MULTIPLE WINDOW				

HOW TO:

- 1 Make the PAYLOAD OVERWRITE choice required.
If STS-1, VT-6, VT-2 or VT1.5 is chosen, the B1, B2 and B3 BIPs are recalculated before transmission and the Mapping, Selected VT, VT Payload, Pattern, Tributary Offset and Pattern in other VT's settings are displayed. To choose the settings in these, see "Setting SONET Transmit Interface " page 6, steps 4 through 10.
- 2 Make the TOH+POH OVERWRITE choice required.
You can only modify those overhead bytes available under **TRANSMIT** **SONET** **TEST FUNCTION** **SONET** Errors & Alarms, Sequences, Overhead BER, APS Messages, DCC Insert and Stress Test.
The B1, B2 and B3 BIPs are recalculated before transmission.

Using Autosetup

Description

The Autosetup function allows you to speed up the configuration of the instrument when making PDH, SDH or SONET measurements.

Autosetup will **search the interface chosen** on the **RECEIVE** display and attempt to configure the instrument to match the received signal. Autosetup will detect ATM or any of the PRBS patterns the transmitter can generate. ATM is considered to be a payload of PDH or SDH.

Both MONITOR and TERMINATE modes are tried in the search for a received signal.



HOW TO:

- 1 Connect the HP 37717C to the network and select the required **RECEIVE** interface on the HP 37717C.
- 2 Press **AUTO SETUP**.
The **OTHER** display will show an Autosetup HELP page.

PDH Input

In PDH there are three framing possibilities for 140 Mb/s, 34 Mb/s, 8 Mb/s and 2 Mb/s, (34Mb/s, DS3, 2M and DS1 for Option 110) namely Unframed Framed and Structured.

Using Autsetup

NOTE

Structured is **not** covered by Autsetup because searching through a PDH framing structure would take an unacceptable amount of time.

All line rates are searched for a signal. If a signal is found, a search for framing pattern is made. All possible framing structures are searched except for Structured.

If a framing pattern is found, a search for PRBS pattern is made.

SONET Input

If an STS-12 interface is chosen, the search will start on the STS-3 selected for test. All SONET line rates are searched for an electrical, optical or binary signal.

If a signal is found, a search of payloads will start.

The payload search starts with STS-12c SPE in STS-12 and continues with ATM, STS-1 SPE, VT-6, STS-3C, VT-2 and VT1.5.

For each payload a search is made to find a framing pattern. If a framing pattern is found, a search for PRBS patterns is made.

TIP:

If it is known that the signal of interest is in a particular STS-3 e.g. number 3, then the Autsetup search can be speeded up by setting the **RECEIVE** display MAPPING [FOREGROUND] to STS-3 [3]. The search for a signal will then start in STS-3 number 3.

Setting PDH Receive Interface

Description

PDH Receive interface settings should match the network equipment settings of Rate, Termination and Line Code and determine the Payload to be tested.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**.

RECEIVER INPUT		PDH/DSn	
MAIN SETTINGS	STRUCT'D SETTINGS	JITTER	TEST FUNCTION
SIGNAL		2 Mb/s	
TERMINATION		75Ω UNBAL	
LINE CODE		HDB3	
LEVEL		MONITOR	
EQUALIZER	ON	GRIN	20 dB
PAYLOAD TYPE		UNFRAMED	UNSTRUCTURED
PATTERN		2 ¹⁵ -1 PRBS	
PRBS POLARITY		INU ITU	

STATUS: MULTIPLE WINDOW

HOW TO:

- 1 Choose the required SIGNAL source.
- 2 If Binary Interfaces, Option UH3, is fitted, choose the INTERFACE required. See "Setting PDH Receive Binary Interface " page 20.
- 3 If you have chosen 2 Mb/s as the PDH signal rate, choose the required impedance (TERMINATION). At all other rates the impedance is fixed.
- 4 If you have chosen 2 Mb/s, 8 Mb/s or DS1 (Option 110) as the PDH signal rate, choose the required LINE CODE. At 140 Mb/s, 34 Mb/s and DS3 coding is fixed.
- 5 If you are measuring at the network equipment monitor point set the LEVEL field to MONITOR.

Setting the Interfaces

Setting PDH Receive Interface

- 6** The received signal will be 20 to 26 dB below the normal level. To return the received signal to normal, choose the required GAIN level. The received signal may also require EQUALIZATION to compensate for cable losses.
- 7** Choose the required Payload Type.
If Structured is chosen, the PDH test signal must be set up. See “Setting Transmit Structured Payload/Test Signal (Options UKJ or 110)” page 43.
If you choose 2 Mb/s as the PDH signal rate, the Framed choice is expanded to provide a menu of 2 Mb/s framing types.
- 8** Choose the required PATTERN.
- 9** Choose the required PRBS POLARITY.
If your PRBS Polarity choice matches ITU-T Recommendation O.150, ITU is displayed alongside your choice.

Setting PDH Receive Binary Interface

Description

PDH Receive binary interface settings should match the network equipment threshold and polarity requirements for the binary interfaces.

RECEIVER INPUT		PDH
MAIN	STRUCT'D	BINARY
SETTINGS	SETTINGS	
SIGNAL INTERFACE		140 Mb/s BINARY
THRESHOLDS: CLOCK IN		ECL
DATA IN		ECL
POLARITY: CLOCK IN		NORMAL
DATA IN		NORMAL

STATUS:

MULTIPLE WINDOW

HOW TO:

- 1 Set up the PDH receive interface required. See "Setting PDH Receive Interface " page 18.
If INTERFACE [CODED] is chosen, binary interfaces are not available.
- 2 If INTERFACE [BINARY] is chosen, then choose the required THRESHOLDS and POLARITY for Clock and Data.

Setting SONET Receive Interface

Description

SONET Receive interface settings should match the network equipment settings of Rate and Mapping, and determine the payload to be tested.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same interface settings, choose **OTHER** **SETTINGS CONTROL** **COUPLED**.



HOW TO:

- 1 Choose the required SIGNAL source.
If a BINARY rate is chosen, choose the required clock and data polarity.
Choose mapping and type of payload.
Note: If Option UKJ is fitted then DS1 and DS3 payloads are unstructured. Option 110 offers fully structured DS1 and DS3 payloads.
- 2 If VT-6 mapping is chosen, and CONCATENATION is enabled, choose the tributary at which the concatenation begins, VT6-2C through VT6-6C.
If VT-6, VT-2 or VT-1.5 mapping is chosen, choose the test tributary under CHANNEL.
- 3 Choose the payload framing under PAYLOAD TYPE or VT PAYLOAD.
STRUCTURED and DROP are only available if Option UKJ,

Setting the Interfaces

Setting SONET Receive Interface

Structured PDH or Option 110 DS_n SPDH is fitted.

If STRUCTURED is chosen the Payload test signal must be set up. See “Setting Receive Structured Payload/Test Signal” page 45.

If DROP is chosen, see “Dropping an External Payload/Test Signal” page 54.

- 4 Choose the PATTERN type and PRBS polarity.

NOTE

If interfacing at STS-1 with a user word pattern chosen, then a false frame synchronization may occur. This is due to the effect of the standard ITU-T G.707 scrambling used at STS-1 when applied to a fixed payload. The scrambler may produce a false (F628) frame synchronization from the fixed payload. At STS-1 only a single F628 pattern is available for frame synchronization.

If the false pattern is detected by the receiver this will result in frame synchronization being indicated but multiple alarms will occur. If this condition is suspected, change the PATTERN choice to PRBS and check that the multiple alarms are cleared when proper frame synchronization is achieved.

Setting Jitter Receive Interface

Description:

PDH Jitter and PDH error measurements are made simultaneously when a PDH jitter measurement Option is fitted. The measurements are made on the normal input to the PDH receiver and the interface selections are the normal PDH Receiver selections. The jitter receive interface is selected with **RECEIVE PDH JITTER**.

SDH/SONET Jitter and SDH/SONET error measurements are isolated individual measurements. The SDH/SONET jitter measurement is made on an SDH/SONET input to the Jitter module and there is a specific receive interface displayed with **RECEIVE SDH /SONET JIT**.

The choices made on the jitter receive interface determine the jitter measurement range, the threshold level for determining a jitter hit and which filters are used in the jitter measurement.



HOW TO:

- 1 Choose the RECEIVER RANGE - the jitter measurement range.
- 2 Choose the HIT THRESHOLD level - if the received jitter exceeds the value chosen a jitter hit is recorded.
- 3 Choose the FILTER you wish to include in the peak to peak and RMS jitter measurement.

Setting the Interfaces

Setting Jitter Receive Interface

- 4 If Option A3L, A3V or A3N, Jitter Receiver, is fitted, an ADDITIONAL RMS FILTER choice is provided. You may possibly require different filters to be connected for peak to peak and RMS measurements. The additional RMS filter choice allows you the choice of a 12 kHz (high pass) HP filter for RMS measurement only. If 12 kHz HP is chosen under FILTER, the additional RMS filter choice is not available.

Selecting the Physical Receive Interface for ATM payloads

Description

ATM receive physical layer settings should match the network equipment settings in the same way as the SDH and PDH receive interfaces. The Interface selections available are determined by the PDH/DSn and SDH modules fitted to your instrument.

Your selections are automatically transferred to the other RECEIVE displays. For example selection of STM-4 OPTICAL signal at the ATM PHYSICAL LAYER will cause the receiver output SDH to change to STM-4 OPTICAL.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same interface settings choose **OTHER** **SETTINGS CONTROL** **COUPLED**.

RECEIVER INPUT		ATM
PHYSICAL LAYER	ATM LAYER	JITTER
SIGNAL		<input checked="" type="checkbox"/> 2 Mb/s
TERMINATION		75Ω UNBAL
LINE CODE		HDB3
LEVEL		TERMINATE
CRC-4 MULTIFRAME		OFF

STATUS:

MULTIFRAME

HOW TO:

- 1 Choose the required SIGNAL source.
- 2 For a 2Mb/s rate, select the TERMINATION and LINE CODE.
- 3 For a 2, 34 or 140Mb/s rate, select the TERMINATION.
- 4 For a 2Mb/s rate, select the CRC-4 MULTIFRAME.
- 5 For an STM-4 rate select the STM-1 UNDER TEST.

Setting the Interfaces

Selecting the Physical Receive Interface for ATM payloads


Selecting Test Features

Selecting Test Features

Using Transmit Overhead Setup

Description

You can set an overhead byte to a known static state to aid in troubleshooting, for example, to quickly check for "stuck bits" in path overhead bytes. Transport Overhead, Path Overhead and Trace Messages can be set using this feature.

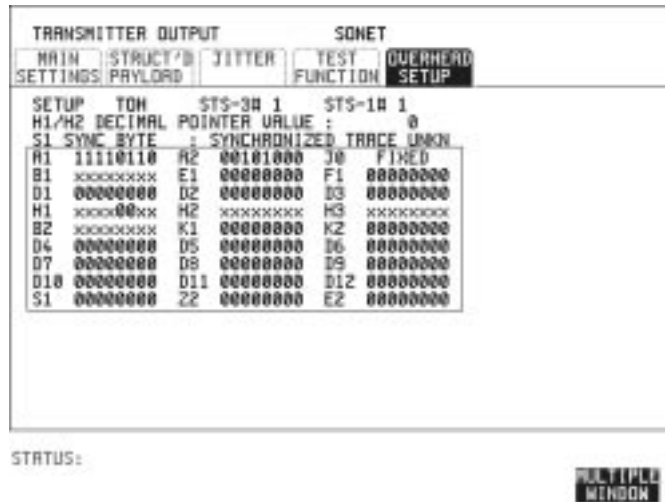



HOW TO:

- 1 Set up the SONET transmit interface and payload required.
- 2 Choose the type of overhead to SETUP.
If STS-12 is chosen as the SONET interface, choose the STS-3#, STS-1# TOH you wish to set up. If STS-3 is chosen as the interface select the STS-1# TOH.
If TRACE MESSAGES is chosen, see "Setting Overhead Trace Messages " page 32.
DEFAULT - Use to set all overhead bytes to the standard values defined by ITU-T. If a test function is active then the overhead byte value is determined by the choices made in the Test Function. For example if APS Messages is chosen, the K1K2 value is determined by

Selecting Test Features

Using Transmit Overhead Setup

the APS Messages setup.

- 3 If TOH (Transport Overhead) is chosen, choose the format to be displayed from the STS-1# field.
If STS-1#1,2,3 is chosen, the hexadecimal value of all 81 bytes of the STS-1 transport overhead selected are displayed
The values of the bytes can be set using **DECREASE DIGIT** **INCREASE DIGIT**  .
If BYTE NAMES is chosen, the labels for the STS-1#1,2,3 overhead bytes are displayed.
- 4 If POH (Path Overhead) is chosen, choose the TYPE of overhead within the STS-1 under test to be setup.
J1 and J2 bytes can be set under Path Overhead or Trace Messages.
H4 byte has a choice of sequences for VT-6, VT-2 and VT-1.5 (OptionOption 110) mapping:
Full Sequence - 48 byte binary sequence.
Reduced Sequence - Binary count sequence of 0 to 3 i.e. 111111(00 to 11).
COC1 Sequence - Binary count sequence of 0 to 3 i.e. 110000(00 to 11).
H4 byte is transmitted as all zeros for 34Mb/s and DS3 (Option 110).

NOTE

Any bit of an overhead byte which is displayed as x or s cannot be set at any time. All other bits can be set to 0 or 1.

TIP:


You can set all overhead bytes to the default state by selecting **SETUP DEFAULT**.

You can set all overhead bytes and test functions to the default state by recalling Stored Settings [0] on the **OTHER** display.

Using Receive Overhead Monitor

Description

When first connecting to a SONET network, a start up confidence check can be made by viewing the behavior of all the overhead bytes. If the SONET network shows alarm indications, some diagnosis of the problem may be gained from viewing all the overhead bytes. The OVERHEAD MONITOR display is updated once per second (once per 8000 frames) approximately.

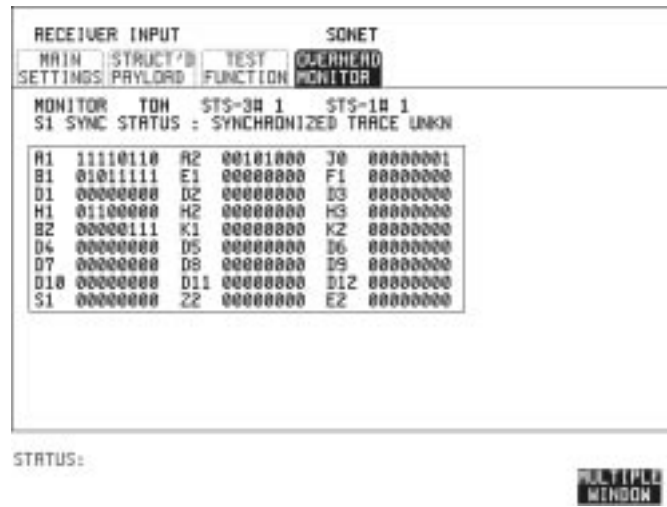

HOW TO:

- 1 Set up the receive SONET interface and payload as required.
- 2 Choose the type of overhead to MONITOR.
If TRACE MESSAGES is chosen, you can monitor a data message to verify portions of the network.
If the 16 byte CRC7 message structure is detected, the 15 characters within the message are displayed.
If the CRC7 structure is not detected in J1, the 64 byte message format is assumed and displayed. If the CRC7 structure is not detected for J0 or J2, all 16 bytes are displayed.
- 3 If TOH (Transport Overhead) is chosen, choose the format to be displayed from the STS-1# field.
Bytes shown unlabeled have not yet been defined.

Selecting Test Features

Using Receive Overhead Monitor

If STS-1#1,2,3 is chosen, the hexadecimal value of all 81 bytes of transport overhead is displayed and can be set using

DECREASE DIGIT **INCREASE DIGIT**  .

If BYTE NAMES is chosen, the labels for the STS-1#1,2,3 overhead bytes is displayed.

- 4 If POH (Path Overhead) is chosen, choose the source of the overhead SPE or VTSPE.
J1 and J2 bytes can be monitored under Path Overhead or Trace Messages
- 5 If APS MESSAGES is chosen, choose the TOPOLOGY, **LINEAR** (G.253) or **RING** (G.1230). The K1 and K2 bits are monitored.
- 6 If LABELS is chosen, the S1 sync status and STS path label (C2) are monitored.

TIP:

If any abnormal behavior is observed on a particular path or section overhead byte, or an associated group of bytes (3xA1,3xA2; D1 - D3), the **RECEIVE** **TEST FUNCTION** display of **OVERHEAD CAPTURE** can be used to "Zoom" in on the suspect byte or bytes on a frame by frame basis. See "Using Receive Overhead Capture " page 35.

Setting Overhead Trace Messages

Description

You can insert a data message to verify portions of the network:

J0 verifies the section overhead.

J1 verifies the STS-1 SPE or STS-3c SPE path connection.

J2 verifies the VT- SPE path connection.

TRANSMITTER OUTPUT		SONET	
MAIN SETTINGS	STRUCT'D PAYLOAD	JITTER	TEST FUNCTION OVERHEAD SETUP
SETUP	TRACE	STS-1 #1	
J0	FIXED	→	00000001
J1	TEST 64 (SPE)	→	"HP37717C COMMUNICATIONS PERFORMANCE ANALYZER, 000000987 5)"
J2	TEST (VT-SPE)	→	"HP:- 000000987"


STATUS:

MULTIPLE WINDOW

Generating Overhead Sequences

Description

You may insert a pattern into a functional group of overhead bytes for testing or troubleshooting purposes.

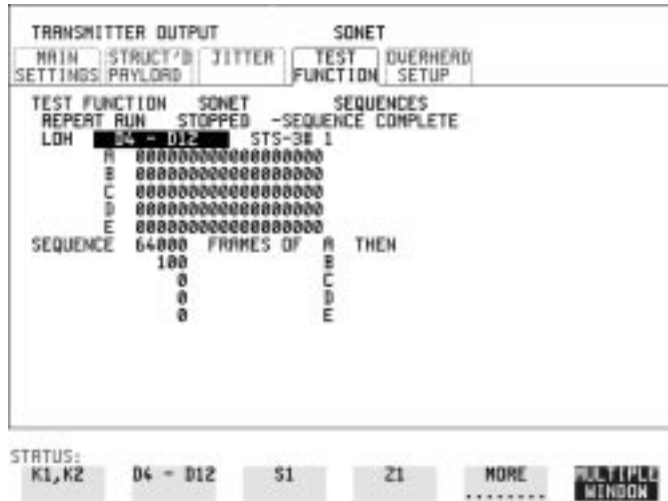

HOW TO:

- 1 Set up the SONYET transmit interface and payload required.
- 2 Choose the type of sequence required.
SINGLE RUN - runs the sequence once and then stops.
REPEAT RUN - runs the sequence repeatedly until STOPPED is chosen.
- 3 Choose the overhead type as required.
SOH- Section Overhead
LOH- Line Overhead
POH - Path Overhead
- 4 Choose the byte or bytes of overhead required.
- 5 Set up the required number of data patterns and the number of frames in which each data pattern should appear.
Your sequence is derived from up to 5 blocks of hexadecimal data. Each block can be transmitted in up to 64,000 frames.

The data and the number of frames are set using **DECREASE DIGIT**

Selecting Test Features
Generating Overhead Sequences


INCREASE DIGIT  .

6 Start the sequence by choosing [STARTED].

Using Receive Overhead Capture

Description

Section, Line and Path overhead provide network support functions, responding dynamically to network conditions and needs. It is therefore useful to capture overhead activity on a frame by frame basis.

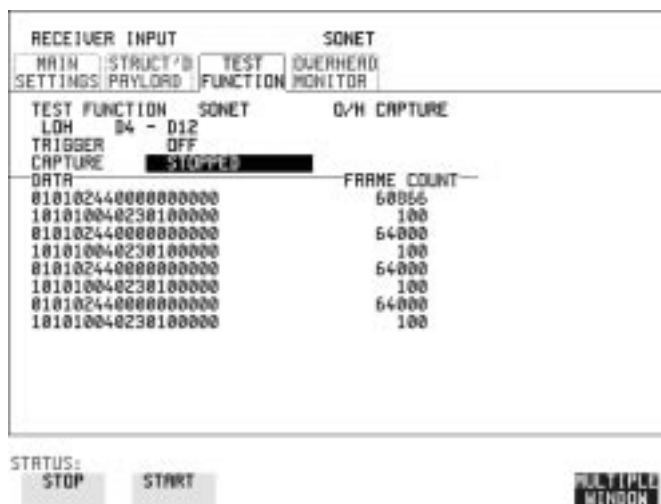

HOW TO:

- 1 Set up the receive SONY interface and payload as required.
- 2 Choose the overhead type as required.
SOH- Section Overhead
LOH- Line Overhead
POH- Path Overhead
- 3 Choose the Byte or bytes of overhead to be captured.

Choose the TRIGGER to determine the start point of the capture. **OFF** - starts immediately the capture is initiated. Can be used to provide a frame by frame monitor of the chosen byte or bytes.

ON - captures activity after your specified overhead state has occurred. Can be used for transient detection from a specified expected state.

ON NOT - captures activity after the first occurrence of a deviation from your specified overhead state. Can be used for transient detection from a specified expected state.

- 4 Up to 16 records of overhead state are provided. Each record will represent between 1 and 64,000 frames. A capture is started by

Selecting Test Features


Using Receive Overhead Capture

pressing CAPTURE **STARTED** and terminates when up to 16 records have been captured. The capture can be terminated earlier by pressing CAPTURE **STOPPED**.

Adding Frequency Offset to SONET Signal

Description

Frequency offset can be added to the SONET interface rate signal and to the payload signal.

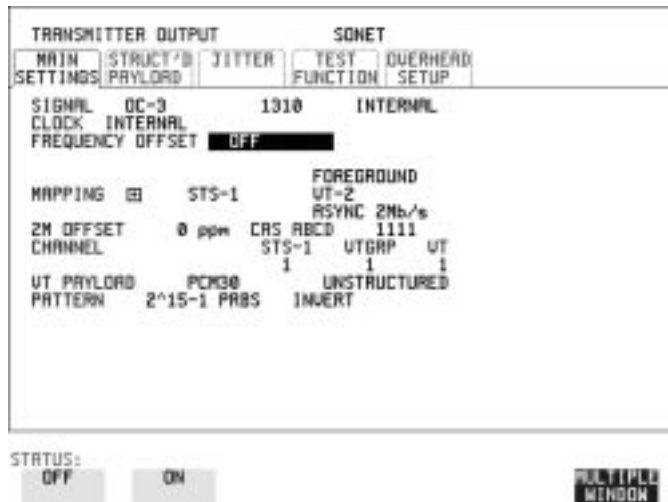

HOW TO:

SONET Line Rate Offset

Choose the amount of frequency offset required.


You can set the Frequency Offset in the range -999 ppm to +999 ppm in 1 ppm steps using **DECREASE DIGIT** **INCREASE DIGIT**  and .

The amount of applied Frequency Offset can be varied while measurements are taking place.

If the value of the SONET line rate offset chosen is sufficient to cause the maximum stuff rate to be exceeded, the asynchronous payload is offset to prevent bit errors occurring and the maximum stuff rate is maintained. When Floating Byte 2 Mb/s is chosen, in conjunction with SONET line rate offset, the chosen tributary will be offset as the line rate is offset. (No pointer movements).

Tributary Offset ± 100 ppm

Choose the amount of tributary offset required.

You can set the Offset in the range -100 ppm to +100 ppm in 1 ppm steps using **DECREASE DIGIT** **INCREASE DIGIT**  and .

The amount of applied Frequency Offset can be varied while measurements are taking place.

Tributary offset affects the stuff rate but does not cause pointer movements and can be used to test mapping jitter. If the combined value of SONET line rate offset and tributary offset chosen is sufficient to cause the maximum stuff rate to be exceeded the payload is offset to prevent bit errors occurring and the maximum stuff rate is maintained.

Adding Frequency Offset to the PDH Signal


Description

You can add Frequency Offset to the interface PDH signal at all rates. Frequency Offset can be added at preset ITU values or as User defined values in the range ± 100 ppm.

The preset value changes according to the PDH signal rate chosen.:

- 2 Mb/s - ± 50 ppm
- 8 Mb/s - ± 30 ppm
- 34 Mb/s - ± 20 ppm
- 140 Mb/s - ± 15 ppm

For Option 110 instruments 34 Mb/s, 2Mb/s and DS1 32 ppm and DS3 20 ppm are available.

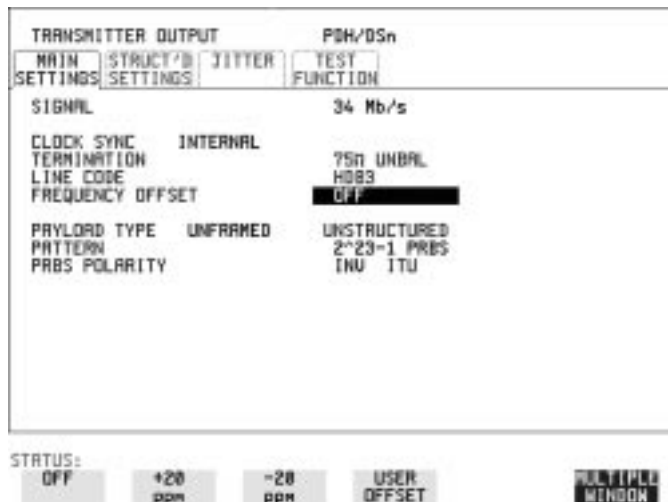

HOW TO:

Choose the amount of frequency offset required.

If USER OFFSET is chosen you can set the Frequency Offset in the range -100 ppm to +100 ppm in 1 ppm steps using **DECREASE DIGIT** **INCREASE DIGIT** **←** and **→**.

The amount of applied Frequency Offset can be varied while measurements are taking place.

Setting up Signaling Bits

Description

The HP 37717C receiver can be used to monitor the state of signaling bits in received 2 Mb/s signals with timeslot-16 CAS (PCM30 or PCM30CRC) multiframing, structured or unstructured, and also in DS1 framed and structured signals (Option 110 instruments).

The HP 37717C transmitter can be configured to generate these signals and the state of the signaling bits defined by the user, as follows:

2.048 Mb/s Signal When transmitting 2.048 Mb/s signals with timeslot-16 CAS (PCM30 or PCM30CRC) multiframing the state of A,B,C,D signaling bits can be set. The signaling bits of all timeslots are set to the user-defined 4 bit value.

DS1 Signal (Option 110)

When transmitting a DS1 framed, structured signal the values of the A,B signaling bits for D4 and SLC-96 payloads, and A,B,C,D signaling bits for ESF payloads can be defined. signaling is not offered for a 64 kb/s or Nx64 kb/s Test Signal.

HOW TO

Transmit a 2 Mb/s signal with user-defined signaling bits

PDH Operation

When transmitting a 2.048 Mb/s signal, (or a 2.048 Mb/s signal as part of a higher rate structured signal, i.e. 140 Mb/s, 34 Mb/s or 8 Mb/s) the A,B,C,D signaling bits can be set.

- 1 On the HP 37717C press **TRANSMIT** and select a PDH interface.
- 2 On the MAIN SETTINGS page select a 2 Mb/s SIGNAL and set the PAYLOAD TYPE to PCM30 or PCM30CRC (structured or unstructured).
- 3 Set the 2M CAS ABCD bits as required. If you select an unstructured payload the signaling bits are set up on the MAIN SETTINGS page; if structured is selected they are set up on the STRUCT'D SETTINGS page.
- 4 Press **RECEIVE** and set up the HP 37717C receiver interface to match the signal being output from the HP 37717C transmitter.

Selecting Test Features
Setting up Signaling Bits

SONET Operation

- 1 On the HP 37717C press **TRANSMIT** and select an SONET interface.
- 2 On the MAIN SETTINGS page set MAPPING to ASYNC 2 Mb/s or FL BYTE 2 Mb/s and set the VT PAYLOAD to PCM30 or PCM30CRC (structured or unstructured).
- 3 Set the CAS ABCD bits as required. If you select an unstructured payload the signaling bits are set up on the MAIN SETTINGS page; if structured is selected they are set up on the STRUCT'D PAYLOAD page.
- 4 Press **RECEIVE** and setup the HP 37717C receiver interface to match the signal being output from the HP 37717C transmitter.

HOW TO

Transmit a DS1 signal with user-defined signaling bits (Option 110 instruments)

PDH Operation

When transmitting a DS1 framed, structured signal or a DS3 signal structured down to DS1, the values of A,B signaling bits for D4 and SLC-96 payloads, and the A,B,C,D signaling bits for ESF payloads can be set.

- 1 On the HP 37717C press **TRANSMIT** and select a PDH interface.
- 2 On the MAIN SETTINGS page select a DS1 SIGNAL and set the PAYLOAD TYPE to D4, ESF or SLC-96 and STRUCTURED.
- 3 On the STRUCT'D SETTINGS page set the TEST SIGNAL to 56 kb/s or Nx56 kb/s
- 4 Set the A,B bits (for D4 and SLC-96) and A,B,C,D bits (for ESF) as required. Press **RECEIVE** and set up the HP 37717C receiver interface to match the signal being output from the HP 37717C transmitter.

SONET Operation

- 1 On the HP 37717C press **TRANSMIT** and select an SONET interface.
- 2 On the MAIN SETTINGS page set MAPPING to ASYNC DS1 and set the VT PAYLOAD to D4, ESF or SLC-96 and STRUCTURED.

Selecting Test Features

Setting up Signaling Bits

- 3 On the STRUCT'D PAYLOAD page set the TEST SIGNAL to 56 kb/s or Nx56 kb/s
- 4 Set the A,B bits (for D4 and SLC-96) and A,B,C,D bits (for ESF) as required. Press **RECEIVE** and set up the HP 37717C receiver interface to match the signal being output from the HP 37717C transmitter.


Setting Transmit Structured Payload/ Test Signal (Options UKJ or 110)

Description

Structured PDH Payload/Test Signal settings determine the SONET payload or the PDH test signal to be tested and set any background (non test) conditions to prevent alarms while testing. Fully structured DS1 or DS3 payloads are only available if Option 110 is fitted.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same Payload settings, choose **OTHER** **SETTINGS CONTROL** **COUPLED** .

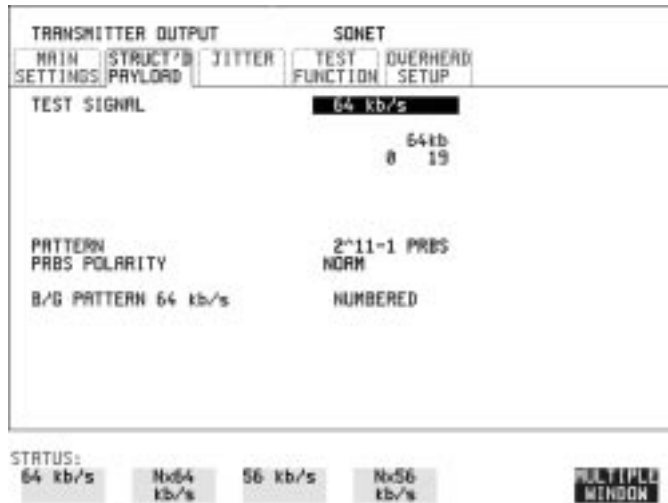

HOW TO:

- 1 Choose the required Test Signal rate. If N X 64 kb/s (or N x 56 kb/s Option 110) is chosen, see "Setting Transmit N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal " page 48.
- 2 Choose the Framing pattern of the PAYLOAD.
If 2 Mb/s (or DS1 Option 110 instruments) TEST SIGNAL is chosen, INSERT 2 Mb/s (or INSERT DS1) is added to the menu. See "Inserting an External PDH Payload/Test Signal " page 52
- 3 Choose the test tributary within the structured payload under 34Mb, 8Mb, 2Mb, 64 kb (DS2, DS1, 56kb/s for Option 110 instruments).

Selecting Test Features

Setting Transmit Structured Payload/Test Signal (Options UKJ or 110)

- 4 If 64 kb/s TEST SIGNAL is chosen, HANDSET is available (this is only available for Option UKJ, and is not present in Option 110 instruments). See "Connecting A Telephone Handset " page 47.
- 5 Choose the PATTERN type and PRBS polarity.
If your choice matches ITU-T Recommendation O.150, ITU is displayed alongside your choice.
- 6 Choose the mapping required in the background (non-test) tributaries.
If 64 kb/s or N X 64 kb/s (or 56 kb/s or Nx 56 kb/s for Option 110 instruments) TEST SIGNAL is chosen, the B/G PATTERN in the non test timeslots is fixed as NUMBERED, that is, each timeslot contains a unique number to allow identification in case of routing problems.

Signaling

- 7 If a 2 Mb/s PAYLOAD is transmitted with timeslot-16 CAS multiframeing (PCM30 or PCM30CRC selected), set the CAS ABCD bit value. If a DS1 PAYLOAD is transmitted, signaling is only offered with 56 kb/s or nx56 kb/s Test Signals.
Select the values of AB signaling for SF and SLC-96 formats and ABCD signaling for ESF. In SLC-96 mode choices are 0,1 or alternating. In D4 mode AB choices are 0,1. See "Setting up Signaling Bits " page 40.

Setting Receive Structured Payload/ Test Signal

Description

Structured PDH Payload/Test Signal settings determine the SONET payload or the PDH test signal to be tested. Structured payloads are only available if Option UKJ structured PDH or Option 110, DS1, DS3, E1, E3 structured PDH is fitted.

TIP:

If you wish to set the HP 37717C transmitter and receiver to the same Payload settings, choose **OTHER** **STORED SETTINGS** **COUPLED**.

RECEIVER INPUT		PDH/DSn	
MAIN SETTINGS	STRUCTURED SETTINGS	JITTER	TEST FUNCTION
TEST SIGNAL		64 kb/s	
2M PAYLOAD		PCM30CRC	
		8Mb	2Mb 64kb
		1	1 1
PATTERN		2 ¹¹ -1 PRBS	
PRBS POLARITY		NORM ITU	

STATUS: MULTIPLE WINDOW

Option Differences

If Option 110 is fitted a 2M or DS1 PAYLOAD is available depending on the SIGNAL selection on the Receiver MAIN SETTINGS page.

- 1 Choose the required Test Signal rate. If N X 64 kb/s (or Nx56 kb/s Option 110) is chosen, see "Setting Receive N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal " page 50.
- 2 Choose the Framing pattern of the PAYLOAD.
If 2 Mb/s TEST SIGNAL is chosen, DROP 2 Mb/s is added to the menu.
If DS1 TEST SIGNAL (Option 110) is chosen, DROP DS1 is added to the menu.
See "Dropping an External Payload/Test Signal " page 54.
- 3 Choose the test tributary within the structured payload under 34Mb, 8Mb, 2Mb, 64 kb/s (DS2, DS1, 56 kb/s for Option 110 instruments).

Selecting Test Features


Setting Receive Structured Payload/Test Signal

- 4 If 64 kb/s TEST SIGNAL is chosen, the HANDSET facility is available (Option UKJ only). See "Connecting A Telephone Handset " page 47.
- 5 Choose the PATTERN type and PRBS polarity.
If your choice matches ITU-T Recommendation O.150, ITU is displayed beside your choice.

Connecting A Telephone Handset

Description:

You can connect a telephone handset to a 64 kb/s voice channel for communication (TALK & LISTEN) or testing (LISTEN ONLY) purposes. You can only connect a telephone handset if Option UKJ, Structured PDH, is fitted.

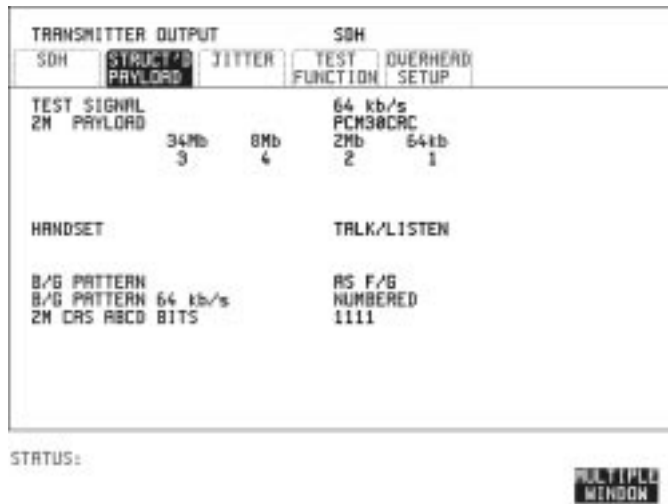

HOW TO:

- 1 Connect the telephone handset to the HANDSET port of the Structured PDH module, Option UKJ.
- 2 Choose the voice channel (timeslot) under 34Mb, 8Mb, 2Mb, 64kb or 8Mb, 2Mb, 64kb or 2M, 64kb.
- 3 Choose the HANDSET mode required.
TALK & LISTEN allows you to communicate with a handset at the other end of the network.
LISTEN ONLY allows you to listen to the traffic on the voice channel.
- 4 For B/G PATTERN and CAS ABCD BITS, see "Setting Transmit Structured Payload/Test Signal (Options UKJ or 110) " page 43.

Setting Transmit N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal


Setting Transmit N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal

Description

Wideband services such as high speed data links and LAN interconnection require a bandwidth greater than 64 kb/s but less than 2 Mb/s for example 128 kb/s or 384 kb/s. These wideband signals are sent in a 2 Mb/s frame by sharing the signal between multiple timeslots. N X 64kb/s structured payload allows a test pattern to be inserted across a number of Timeslots even if the chosen Timeslots are non-contiguous. Structured payloads are only available if Option UKJ, Structured PDH, or Option 110, DS1, DS3, E1, E3 structured PDH is fitted.

Option Differences

Option 110 provides a choice of Nx64 kb/s or Nx56 kb/s Test Signals with a DS1 payload. The Nx56 kb/s selection is similar to Nx64 kb/s except that the last bit in each timeslot is set to 1.

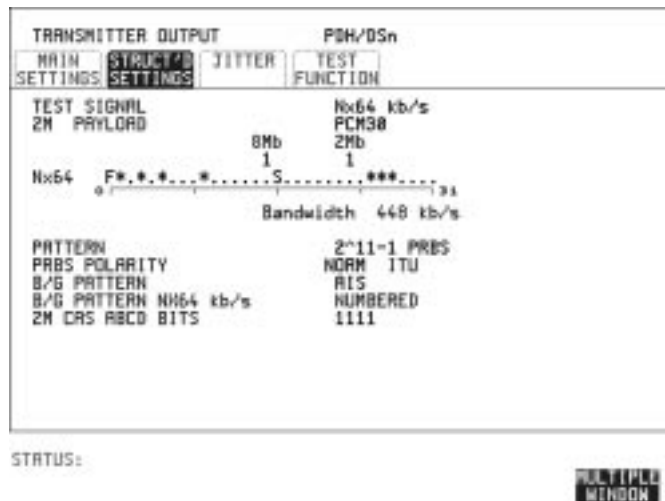

HOW TO:

- 1 Choose the required Test Signal rate.
- 2 Choose the Framing pattern of the 2M or DS1 (Option 110) PAYLOAD.
- 3 Choose the test timeslots within the structured payload using **DESELECT ALL** **DESELECT** **SELECT** **←** and **→** softkeys. As each timeslot is chosen a * marks the chosen timeslot. In the example

Selecting Test Features

Setting Transmit N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal

shown Timeslots 3, 5, 9, 25, 26, 27 are chosen for test.

- 4 Choose the PATTERN type and PRBS polarity.
If your choice matches ITU-T Recommendation O.150, ITU is displayed alongside your choice.
- 5 The B/G PATTERN in the non-test timeslots is fixed as NUMBERED, that is, each timeslot contains a unique number to allow identification in case of routing problems.
- 6 If 2 Mb/s framing PCM30 or PCM30CRC is chosen, set the CAS ABCD bit value.

Signaling with a DS1 Payload Selected

- 7 If a DS1 PAYLOAD is transmitted signaling is only offered when a 56kb/s or Nx56kb/s TEST SIGNAL is selected.
Select the values of DS1 D4 or DS1 SLC-96 AB BITS or DS1 ESF ABCD BITS as required. See "Setting up Signaling Bits " page 40.

Setting Receive N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal

Setting Receive N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal

Description

Wideband services such as high speed data links and LAN interconnection require a bandwidth greater than 64 kb/s but less than 2 Mb/s e.g. 128 kb/s or 384 kb/s. These wideband signals are sent in a 2 Mb/s frame by sharing the signal between multiple timeslots. N X 64kb/s structured payload/test signal allows the test Timeslots to be chosen for error measurement even when the Timeslots are non contiguous.

Structured payloads are only available if Option UKJ, Structured PDH, or Option 110 DS1, DS3, E1, E3 structured PDH is fitted.



Option Differences



Option 110 provides a choice of N x 64 kb/s or N x 56 kb/s Test Signals with a DS1 payload. The N x 56 kb/s selection is similar to N x 64 kb/s except that the last bit in each timeslot is set to 1.

HOW TO:

- 1 Choose the required Test Signal rate.
- 2 Choose the Framing pattern of the 2M PAYLOAD or (DS1 PAYLOAD Option 110).

Selecting Test Features

Setting Receive N X 64 kb/s (N X 56 kb/s) Structured Payload/Test Signal

- 3 Choose the test timeslots within the structured payload using **DESELECT ALL** **DESELECT** **SELECT**  and  softkeys. As each timeslot is chosen a * marks the chosen timeslot. In the example shown Timeslots 3, 5, 9, 25, 26, 27 are chosen for test.
- 4 Choose the PATTERN type and PRBS polarity. If your choice matches ITU-T Rec. O.150, ITU is displayed alongside your choice.

Inserting an External PDH Payload/ Test Signal

Description

You can insert a PDH signal from external equipment into the SDH/SONET signal as the test payload or insert 2 Mb/s or DS1 (Option110) into the structured PDH signal.

You can only insert an external payload if Option UKJ, Structured PDH, or Option 110 DS_n SPDH is fitted.

140 Mb/s or 34 Mb/s (for Option UKJ) and DS3 or 34 Mb/s (for Option 110) can only be inserted if SDH/SONET is chosen as the interface level and the payload is not structured.

2 Mb/s or DS1 can be inserted into a non-structured or structured SDH/SONET payload and into a structured PDH signal

Option Differences

Option UKJ you can insert 140 Mb/s, 34 Mb/s and 2 Mb/s payloads.

Options 110 you can insert 34 Mb/s DS3, 2 Mb/s and DS1 payloads



How To:

Insert 34 Mb/s, DS3 & 140 Mb/s (SDH/SONET Only)

- 1 Connect the external payload to the 75Ω IN port of the PDH module.
- 2 Set up the required transmit SONET interface, and choose INSERT

Selecting Test Features

Inserting an External PDH Payload/Test Signal

34 Mb/s, 140 Mb/s or DS3 as required on the **SONET** **MAIN SETTINGS** display.

Insert 2 Mb/s/DS1 (Unstructured SDH/SONET Payload)

- 1 Connect the external payload to the MUX port of the PDH Tx module.
- 2 Set up the required transmit SONET interface, and choose INSERT 2Mb/s or INSERT DS1 (Option 110) on the **SONET MAIN SETTINGS** display. On Option 110 instruments also select a LINE CODE .

TRANSMITTER OUTPUT		[SONET]	
MAIN SETTINGS	STRUCT'D PAYLOAD	JITTER	TEST FUNCTION OVERHEAD SETUP
TEST SIGNAL			[2 Mb/s]
2M PAYLOAD			[INSERT 2Mb/s]
LINE CODE			[AMI]
	8Mb		2Mb
	[1]		[1]
B/G PATTERN			[AIS]

STATUS:
PCM31CRC INSERT 2Mb/s MORE MULTIPLE WINDOW

Insert 2 Mb/s /DS1 (Structured SDH/SONET Payload or Structured PDH)

- 1 Connect the external payload to the MUX port of the PDH Tx module.
- 2 If you chose a structured SONET Payload, set up the required transmit SONET interface, and structured payload and then choose INSERT 2 Mb/s or INSERT DS1 (Option 110) on the **SONET STRUCT'D PAYLOAD** display.

On Option 110 instruments select the LINE CODE.

If you chose a Structured PDH set up, select the required transmit PDH interface, set up the required PDH Test Signal interface and choose INSERT 2 Mb/s or INSERT DS1 (Option 110) on the **PDH STRUCTURED SETTINGS** display.

Dropping an External Payload/Test Signal

Description

You can Drop a PDH signal from the received payload or drop 2 Mb/s or DS1 (Option 110) from the structured PDH signal to external equipment for testing purposes.

You can only Drop an external payload if Option UKJ, Structured PDH, or Option 110 DS_n SPDH is fitted.

140 Mb/s and 34 Mb/s (for Option UKJ) and DS3 or 34 Mb/s (for Option 110) can only be dropped if SDH/SONET is chosen as the receive interface and the payload is not structured.

2 Mb/s or DS1 can be dropped from a structured or non-structured SDH/SONET payload and from a structured PDH signal.



HOW TO:

Drop 34 Mb/s, DS3 & 140 Mb/s

- 1 Connect the 75Ω OUT port of the Tx PDH module to the external equipment.
- 2 Set up the receive SONYET interface, and choose DROP 34 Mb/s, DS3 or 140 Mb/s as required on the **SONET MAIN SETTINGS** display. If you select DROP DS3, also select the output level from DS3-HI, DSX-3 or DS3-900'.

Dropping an External Payload/Test Signal

Drop 2 Mb/s /DS1 (Unstructured SDH/SONET Payload)

- 1 Connect the DEMUX port of the PDH module to the external equipment.
- 2 Set up the required transmit SONET interface, and choose DROP 2Mb/s or DS1 (Options 110/120) on the **SONET MAIN SETTINGS** display.

Drop 2 Mb/s/DS1 (Structured SDH/SONET Payload or Structured PDH)

- 1 Connect the DEMUX port of the PDH module to the external equipment.
- 2 If you chose a structured SONET payload, set up the required receive SONET interface, and structured payload and choose DROP 2 Mb/s or DROP DS1 (Option 110) on the **SONET STRUCT'D PAYLOAD** display.

If you chose a structured PDH, set up the required receive PDH interface, set up the required receive Structured Payload/Test Signal and choose DROP 2 Mb/s or DROP DS1 (Option 110) on the **PDH STRUCTURED SETTINGS** display.

Selecting ATM Cell Stream Payload

Description

The test stream comprises: 1 Foreground (F/G) Channel, 3 Background (B/G) Channels and the remaining cell opportunities which are filled with unassigned or idle cells.

The screenshot shows a configuration window titled "TRANSMITTER OUTPUT" with a sub-tab "ATM". The window is divided into several sections:

- PHYSICAL LAYER**: Includes "CELL STREAM INTERFACE" and "CONVENTS UNI".
- F/G HEADER**: Fields for DFC (0), UPI (0), UCI (32), PTI (000), and CLP (0).
- F/G PAYLOAD**: Set to "TEST CELL".
- B/G STREAM**: Includes "B/G HEADER" with DFC (0), UPI (1), UCI (32), PTI (000), and CLP (0).
- B/G PAYLOAD**: Set to "00000001".
- FILL CELLS**: Set to "IDLE".

At the bottom of the window, there are three buttons: "STATUS DISTRIBUTION", "CONTENTS", and "MULTIPLE WINDOW".

HOW TO:

- 1 Select the payload which will be the subject of the test, the foreground payload, in F/G PAYLOAD

For Delay measurements and Cell Misinsertion and Loss measurements you need to select **TEST CELL**

The **CROSS CELL** PRBS runs continuously from cell to cell. With the cross cell PRBS, cell misinsertion or cell loss will cause pattern sync loss. With **SINGLE CELL** PRBS, the PRBS is restarted in every cell. Cell loss will **NOT** cause pattern sync loss but, of course, payload errors will be counted.

The **USER BYTE** selection allows you to select your own fixed byte in the foreground.

- 2 Select a background stream B/G STREAM 1,2 or 3
- 3 Select the byte to be used as a payload in the selected background (B/G PAYLOAD).
- 4 Repeat the procedure for the other B/G STREAMS.
- 5 Select the remaining content of the cell stream FILL CELLS **IDLE** or **UNASSIGNED**.

Selecting ATM Cell Stream Timing Distribution

Description

The foreground and background bandwidths and timing distribution are selected to represent the service that you want to simulate.

The screenshot shows a configuration window titled "TRANSMITTER OUTPUT" with several tabs: "PHYSICAL LAYER", "ATM LAYER", "JITTER", and "ATM TEST FUNCTION". The "ATM LAYER" tab is selected, and within it, the "CELL STREAM" sub-tab is active. The "DISTRIBUTION" option is highlighted. Below this, a table displays bandwidth settings for foreground (F/G) and background (B/G) traffic. The F/G bandwidth is set to 100% (4528 cell/s, 1919072 bit/s). Three B/G bandwidths (B/G #1, #2, #3) are all set to 0. The "F/G DISTRIBUTION" is set to "BURST" with a "BURST SIZE" of 1 cell. At the bottom, there are buttons for "STATUS: DISTRIB-UTION", "CONTENTS", and "MULTIPLE WINDOW".

CELL STREAM		DISTRIBUTION	
BANDWIDTH (%) (cell/s) (bit/s)			
F/G	100	4528	1919072
B/G #1	0	0	0
B/G #2	0	0	0
B/G #3	0	0	0
IDLE	0	0	0

F/G DISTRIBUTION: BURST
BURST SIZE: 1 cells

HOW TO:

- 1 Select the foreground F/G bandwidth.
- 2 Select the background B/G #1, #2 and #3 bandwidths.
- 3 Select the foreground F/G DISTRIBUTION. This will depend on the type of service to be simulated. For simulation of a Constant Bit Rate service, choose **PERIODIC**, for simulation of data transfer type services choose **BURST**.
- 4 If F/G DISTRIBUTION **PERIODIC** is selected, an additional burst of up to 2047 cells may be added by setting the ADD SINGLE BURST OF to the number of cells required and toggling **OFF** to **ADD BURST**.

The selection for the remaining bandwidth, IDLE or UNASSIGNED, made on the CELL STREAM **CONTENTS** display is shown here.

Selecting ATM Cell Stream Headers and Interface

Description

The components of the ATM cell stream headers and the interface UNI or NNI are selectable. User Network Interface (UNI) is used between a LAN and a switch in the public network, Network Node Interface (NNI) is used between switches in the public network.

TRANSMITTER OUTPUT		ATM	
PHYSICAL LAYER	ATM LAYER	JITTER	TEST FUNCTION
CELL STREAM INTERFACE		UNASSIGNED	
F/G HEADER	GFC UPI UCI	PTI CLP	
	0 0 32	000 0	
F/G PAYLOAD	TEST CELL		
B/G STREAM		1	
B/G HEADER	GFC UPI UCI	PTI CLP	
	0 1 32	000 0	
B/G PAYLOAD	00000001		
FILL CELLS	IDLE		

STATUS: DISTRIBUTION CONTENTS MULTIPLE WINDOW

HOW TO:

- 1 Select the INTERFACE, UNI or NNI.
- 2 Set up the header for the cell which is the subject of the test F/G HEADER:
Generic Flow Control (GFC) - Applies to (UNI) only.
Virtual Path Indicator(VPI),
Virtual Channel Indicator(VCI),
Payload Type Indicator (PTI) -
Congestion not experienced= 000, Congestion experienced= 010
Cell Loss Priority (CLP) - 0=High Priority - 1=Low Priority
- 3 Select a background stream B/G STREAM 1,2 or3.
- 4 Select the header for the selected background (B/G HEADER).
- 5 Repeat the procedure for the other B/G STREAMS.
- 6 Select the content of the fill cells which will make up the remainder of the cell stream. by selecting FILL CELLS - **IDLE** or **UNASSIGNED**.

Adding Errors & Alarms at the SONET Interface

Description

Errors and alarms can be added to the SONET interface signal during testing.

The screenshot displays a terminal window with the following content:

```
TRANSMITTER OUTPUT          SONET
MAIN STRUCT'D JITTER TEST OVERHEAD
SETTINGS PAYLOAD FUNCTION SETUP
-----
TEST FUNCTION SONET ERR & ALARM
ERROR ADD TYPE CV-L (B2)
RATE           1E-5
ALARM TYPE     RD1-L
```

At the bottom of the window, there is a STATUS line with several buttons: RES-L, RD1-L, LOP-P, RIS-P, MORE, and MULTIPLE WINDOW.


HOW TO:

- 1 Set up the SONET transmit interface and payload required.
- 2 Choose the ERROR ADD TYPE and RATE required. If CV-L B2 errors are added the RATE field offers ERROR ALL, selectable rates and MSP THRESHOLD. When MSP THRESHOLD is selected the number of errors and time period are selectable.
- 3 Choose the ALARM TYPE.
Errors and Alarms can be added at the same time.

Adding Errors & Alarms to the PDH Interface/PDH Payload

Description

Errors and alarms can be added to the PDH payload signal during testing.

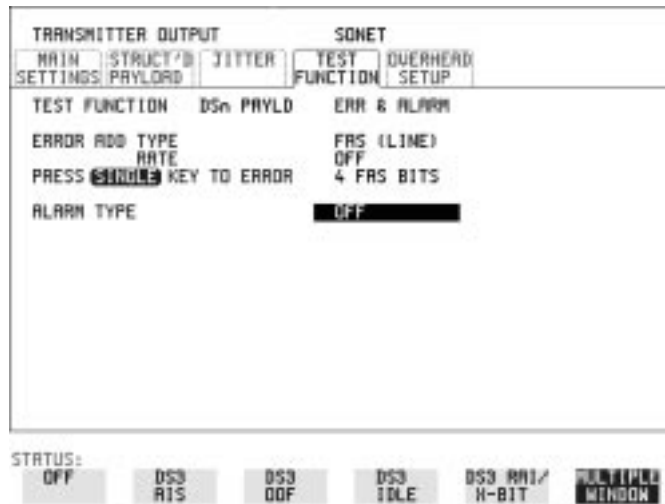

HOW TO:

- 1 If SONEt interface is chosen, set up the SONEt transmit interface and payload required. See “Description” page 6.
If PDH interface is chosen, set up the PDH interface and payload required. See “Setting PDH Transmit Interface” page 2.
- 2 Choose the ERROR ADD TYPE and RATE required. The RATE can be selected from a fixed value or is user programmable. If you select USER PROGRAM you can select the error rate before enabling the errors. This feature is useful when doing error threshold testing.
- 3 Choose the ALARM TYPE.
Errors and Alarms can be added at the same time.

DS1 & DS3 Alarm Generation (Option 110 instruments)

The following alarms are generated when a PDH Payload is selected on the Transmitter TEST FUNCTION page for DS1 and DS3 signals.

Selecting Test Features

Adding Errors & Alarms to the PDH Interface/PDH Payload

DS1 Signal

LOS: The output signal is turned off (not available when mapped into SONET/SDH).

DS1 OOF:- The selected framing is turned off

DS1 AIS: - Unfamed all ones is transmitted

DS1 RAI/YELLOW:

ESF: The 4 kHz data link carries a repetitive 8-zeros/8 ones pattern as defined in Bellcore TA 194.

D4(SF), SLC-96: Bit 2 of every timeslot is set to '0'.

DS3

LOS: - The output signal is turned off (not available when mapped into SONET/SDH)

DS3 OOF: - The F framing bits are set to 0

DS3 AIS: - Generates a 1010....sequence.

DS3 IDLE: - 1100 repeating pattern.

DS3 RAI/X-BIT:- The X1, X2 bits are set to 00. Also known as a Remote Defect Indicator (RDI)

FEAC Codes: - With **CBIT** Payload Type selected on the Transmitter MAIN SETTINGS page the HP 37717C can transmit DS3 **FEAC** codes. Refer to the following page for an explanation of FEAC codes and how to use them with the HP 37717C.

Using FEAC Codes in the HP 37717C


Description

The third C-Bit in subframe 1 is used as a FEAC channel, where alarm or status information from the far-end terminal can be sent back to the near-end terminal. The channel is also used to initiate DS3 and DS1 line loopbacks at the far-end terminal from the near-end terminal.

The codes are six digits long and are embedded in a 16 bit code word; the format is 0XXXXXX01111111

To transmit an FEAC code (Option 110 instruments)

- 1 Select a DS3 Signal and C-BIT framing on the Transmitter MAIN SETTINGS page.
- 2 Select the TEST FUNCTION page and set the ALARM TYPE to DS3 FEAC. The following Figure gives an example of the HP 37717C display configured to generate a FEAC message.

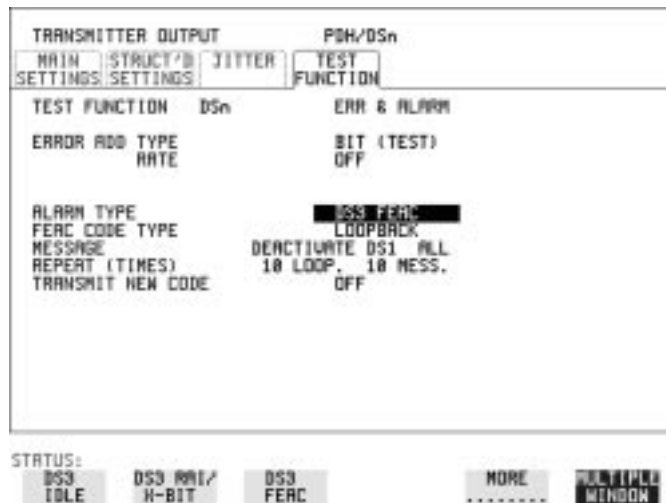

When an FEAC code is not being transmitted the all ones pattern is transmitted.

- 3 Choose the FEAC CODE TYPE (LOOPBACK or ALARM STATUS). If you chose LOOPBACK proceed to step 4; if not proceed to step 7.

Selecting Test Features


Using FEAC Codes in the HP 37717C

- 4 Choose the MESSAGE from the choices displayed. If you chose a DS1 message an additional field to the right of the DS1 MESSAGE is displayed. Position the cursor on this field and select ALL or SINGLE CHANNEL. If you choose SINGLE CHANNEL use the EDIT keys to select a channel from 1 to 28. Press **END EDIT** when finished.
- 5 Set the REPEAT (TIMES) fields LOOP and MESS, as required, both can be set in the range 1 to 15.
- 6 Select TRANSMIT NEW CODE and press the **BURST** key to transmit the selected FEAC message.
- 7 Continue here if you selected ALM/STATUS, FEAC CODE TYPE. Select a MESSAGE from the choices displayed; use the **MORE** key to access more selections. Select **USER CODE** if you wish to define an FEAC message. The FEAC message comprises a repeating 16 bit codeword consisting of 0xxxxxx01111111 (where x is user-definable, 0 or 1). Use the EDIT keys to define the FEAC codeword.
- 8 Set the BURST LENGTH (TIMES) to CONTINUOUS or BURST. If you select BURST use the EDIT keys to select the BURST LENGTH (selectable from 1 to 15). Press the END EDIT key when finished.
- 9 Position the cursor on TRANSMIT NEW CODE and select ON or BURST (choice depends upon selection in BURST LENGTH field).

Selecting Test Features
Using FEAC Codes in the HP 37717C

To View FEAC Messages Transmitted


The FEAC message you transmit can be viewed on the PDH RESULTS display if the Receiver settings match those of the Transmitter (i.e. select DS3 and CBIT Payload on Receiver). The following figure gives an example of a FEAC Message on the Results page.

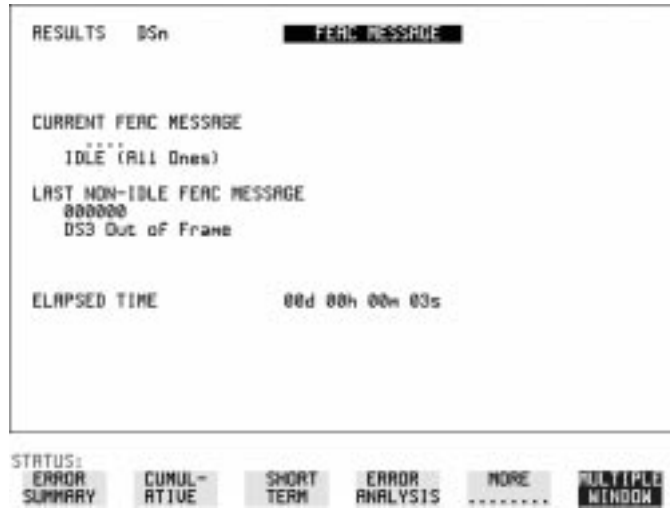

Adding ATM Errors and Alarms

Description

ATM errors and alarms may be introduced into the cell stream.

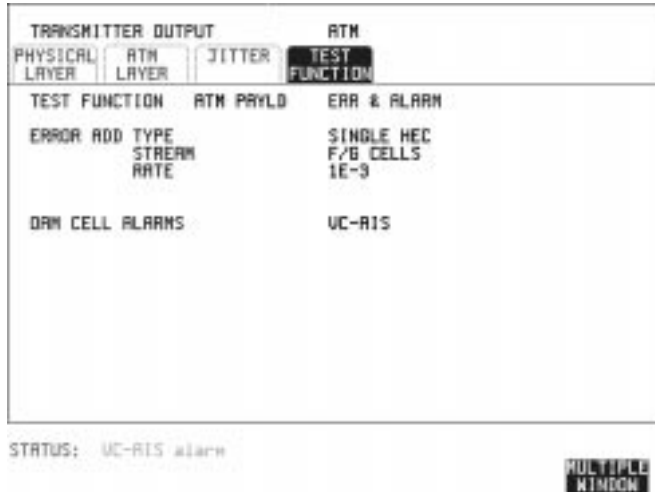

HOW TO:

1 Select TEST FUNCTION **ATM PAYLOAD**

2 Select the ERROR ADD TYPE.

To check header error correction capability, choose **SINGLE HEC** to introduce single Header Error Control errors

To check the detection and discard operation of devices, choose **DOUBLE HEC** to introduce double Header Error Control errors.

To introduces bit errors into the atm payload, choose **BIT**.

3 For **SINGLE HEC** and **DOUBLE HEC** errors, select the STREAM, foreground **F/G CELLS** or foreground and background **ALL CELLS**. When **ALL CELLS** is selected, a burst may be added and used to check the header alignment algorithm.

4 Select the error add RATE.

5 Select OAM ALARM TYPE.

Setting PDH Spare Bits

Description


Certain Spare Bits will cause the occurrence of a minor alarm when received as a logical "0".:

140 Mb/s - FAS Bit 14

34 Mb/s - FAS Bit 12

8 Mb/s - FAS Bit 12

2 Mb/s - NFAS Timeslot (timeslot 0 of NFAS frame) Bit 0

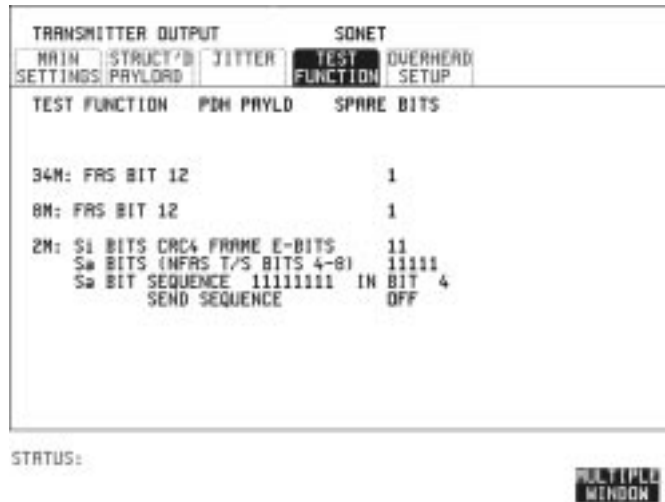


HOW TO:

- 1 If SONYET interface is chosen, set up the SONYET transmit interface and payload required. See "Description" page 6.
If PDH interface is chosen, set up the PDH transmit interface and payload required. See "Setting PDH Transmit Interface" page 2.
- 2 Set the value of the spare bits required for testing.
If a BIT SEQUENCE is required, choose SEND SEQUENCE [ON] to transmit the sequence.

Adding Pointer Adjustments

Description

The transmitted SPE or VT pointer value can be adjusted for testing purposes.

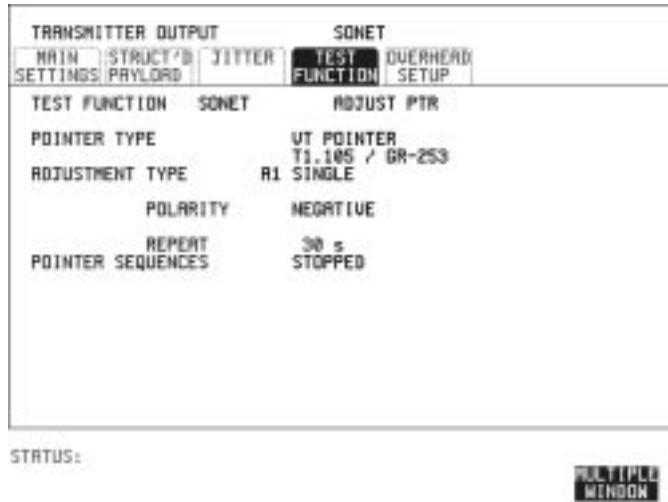

HOW TO:

- 1 Set up the SONET transmit interface and payload required. See “Description” page 6.
- 2 Choose the POINTER TYPE.
- 3 Choose the ADJUSTMENT TYPE required.
BURST - You determine the size of the burst by the number of PLACES chosen. If, for example, you choose 5 PLACES the pointer value will be stepped 5 times in unit steps e.g. 0 (start value), 1, 2, 3, 4, 5 (final value). The interval between steps is as follows:
The SPE pointer minimum spacing between adjustments is 500 us.
For VT pointers the minimum spacing between adjustments is 2 ms.
Choose ADJUST POINTER [ON] to add the chosen burst.

NEW POINTER - You can choose a pointer value in the range 0 to 782 with or without a New Data Flag.
The current pointer value is displayed for information purposes.
Choose ADJUST POINTER [ON] to transmit the new pointer value.

Selecting Test Features

Adding Pointer Adjustments

OFFSET - You can frequency offset the line rate or the SPE/VT rate, relative to each other, thus producing pointer movements. If you offset the SPE pointer, an 87:3 sequence of pointer movements is generated. The available configurations are listed in the following table. If you are currently adding Frequency Offset to the SONET interface or payload, pointer OFFSET is not available.

Pointer Type	Line Rate	SPE Rate	VT Rate
SPE	Constant	Offset	Tracks SPE Payload
SPE	Offset	Constant	Constant
VT	Constant	Constant	Offset
VT	Offset	Tracks Line Rate	Constant

T1.105/GR-253 - Provides pointer movements according to T1.105 and GR-253:


If you are familiar with T1.105/GR-253 pointer sequences proceed to steps 4 and 5; if not refer to the text given in the following pages for explanations of the pointer sequences offered, and the mapping selections required to enable particular pointer sequences.

- 4 Select the T1.105/GR-253 ADJUSTMENT TYPE from the choices given, then select the POLARITY, INTERVAL and PATTERN (where applicable) for the selected sequence.
- 5 Choose POINTER SEQUENCES [START INIT] to generate the selected T1.105/GR-253 sequence and [STOP INIT] to stop the pointer sequence.

T1.105/GR-253 Pointer Sequences Explained

In addition to the BURST, NEW POINTER and OFFSET pointer movements described, the HP 37717C can also generate pointer sequences (pointer movements) according to T1.105.03 and GR-253.

Before running a pointer sequence you can elect to run an initialization sequence, followed by a cool down period, and then run the chosen sequence. This is selected using the START INIT softkey shown in the display on the previous page. Initialized pointer sequences are made up of three periods: the *Initialization Period*, the *Cool Down Period*, and the *Sequence (Measurement) Period*, an example is given in the following figure:

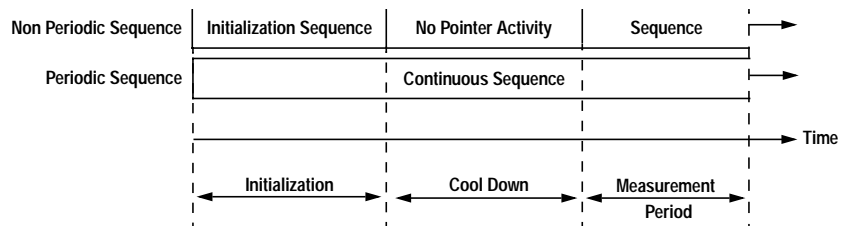

Note: SINGLE (A1), BURST (A2) and PHASE TRANSIENT(A3) are Non Periodic Sequences.

Initialization Period

For SINGLE A1, BURST A2 and PHASE TRANSIENT A3 sequences the initialization sequence consists of 60 seconds of pointer adjustments applied at a rate of 2 adjustments per second and in the same direction as the specified pointer sequence.

Cool Down Period

A period following the initialization period which for SINGLE e), BURST f) and PHASE TRANSIENT sequences is 30 seconds long when no pointer activity is present.

T1.105/GR-253 Pointer Sequences Explained

Sequence (Measurement) Period

The period following the Cool Down period where the specified pointer sequence runs continuously.

Periodic Test Sequences

For periodic test sequences (for example "PERIODIC ADD ") both the 60 second initialization and 30 second cool down periods consist of the same sequence as used for the subsequent measurement sequence. If the product of the period T and the selected Optional background pattern (87+3 or 26+1) exceeds 60 seconds then the longer period is used for the initialization. For example, if T is set for 10 seconds then the initialization period may be extended to 900 seconds.


The HP 37717C displays a message indicating which phase (initialization, cool down or measurement) the transmitter is currently generating.

NOTE

The following conditions apply for pointer sequence generation:
The sequences can only be applied to the SPE pointer when the SPE does not contain a VT structure, otherwise it is applied to the VT pointer.
Pointer sequence generation is not available when a frequency offset is being applied to the Line Rate.

The following figure gives an example of a T1.105/GR-253, 87-3 Pointer Sequence.

T1.105 A4 and A5, 87-3 Pattern

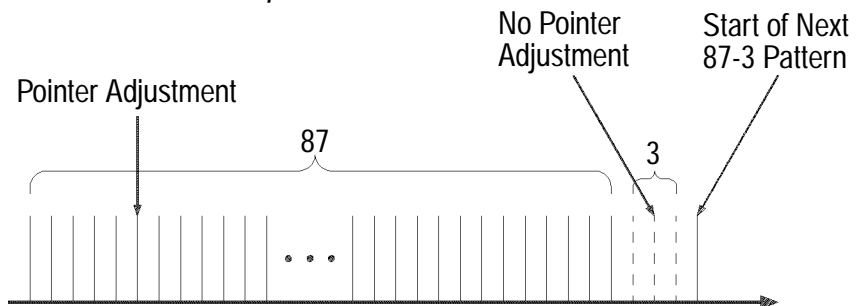

An Example of a Pointer Sequence

Selecting Test Features

T1.105/GR-253 Pointer Sequences Explained

Pointer Sequence	Description
T1.105 A1 SINGLE GR-253 5-29	Periodic Single adjustments, all of the same polarity which is selectable. Separation between pointer adjustments is fixed at approximately 30 seconds.
T1.105 A2 BURST OF 3 GR-253 5-30	Periodic bursts of 3 adjustments, all of the same polarity which is selectable. The interval between bursts is fixed at approximately 30 seconds. The interval between adjustments within a burst is set to the minimum (see Note 2 page 73).
T1.105 A3 PHASE TRANSIENT GR-253 5031	Phase transient pointer adjustment burst test sequence. All adjustments are of the same polarity, which is selectable. The interval between bursts is fixed at 30 seconds. Each burst consists of 7 pointer movement. The first 3 in each burst are 0.25 s apart, and the interval between the 3 and 4 movement, and each remaining movement 0.5 seconds.
T1.105 A4 PERIODIC NORMAL (87-3 Pattern) GR-253 5-33(b)	An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements. Pointer polarity is selectable and the time interval between pointer adjustments settable (see Note 1 page 73).
T1.105 A4 PERIODIC NORMAL (Continuous Pattern) GR-253 5-34(b)	Provides a continuous sequence of pointer adjustments. The polarity of the adjustments is selectable, and the time interval between adjustments can be set (see Note 1).
GR-253 5-32(b) PERIODIC NORMAL (26-1 Pattern)	This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10 seconds.
T1.105 A5 PERIODIC ADD (87-3 Pattern) GR-253 5-33(c)	An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements with an added pointer movement after the 43rd pointer. The spacing between the added adjustment and the previous adjustment is set to the minimum, (see Note 2 page 73). Pointer polarity is selectable. The time interval between pointer adjustments can be set (see Note 1). Added adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.

Selecting Test Features

T1.105/GR-253 Pointer Sequences Explained

Pointer Sequence	Description
<p>T1.105 A5 PERIODIC ADD (Continuous Pattern) GR-253 5-34(c)</p>	<p>Periodic Single adjustments, with selectable polarity and added adjustment (1 extra). The spacing between the added adjustment and the previous adjustment is set to the minimum, (see Note 2). The time interval between pointer adjustments can be set (see Note 1). Added adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.</p>
<p>GR-253 5-32(c) PERIODIC ADD (26-1 Pattern)</p>	<p>This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. The added adjustment occurs 2 ms after the 13th pointer adjustment. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10 s. Added adjustments occur every 30 seconds or every repeat of the 26-1 pattern, whichever is longer.</p>
<p>T1.105 A5 PERIODIC CANCEL (87-3 pattern) GR-253 5-33(d)</p>	<p>An 87-3 pattern is selected. The sequence pattern is 87 pointer movements followed by 3 missing pointer movements with a cancelled pointer movement at the 87th pointer. Pointer polarity is selectable, and the time interval between pointer adjustments can be set (see Note 1). Cancelled adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.</p>
<p>T1.105 A5 PERIODIC CANCEL (Continuous Pattern) GR-253 5-34(d)</p>	<p>Periodic Single adjustments, with selectable polarity and cancelled adjustment (1 less). The time interval between pointer adjustments can be set (see Note 1). Cancelled adjustments occur every 30 seconds or every repeat of the 87-3 pattern, whichever is longer.</p>
<p>GR-253 5-32(d) PERIODIC CANCEL (26-1 pattern)</p>	<p>This selection is only available if you have selected VT1.5 mapping. The sequence pattern is 26 pointer movements followed by 1 missing pointer movement. The cancelled adjustment is the 26th pointer adjustment, that is the one before the regular gap of 1. Pointer polarity is selectable and the time interval between pointer adjustments programmable to 200 ms, 500 ms, 1 s, 2 s, 5 s or 10s. Cancelled adjustments occur every 30 seconds or every repeat of the 26-1 pattern, whichever is longer.</p>

Selecting Test Features

T1.105/GR-253 Pointer Sequences Explained

Pointer Sequence Notes

Note 1: For SPE pointers the sequence interval is selectable from:

7.5 ms, 10, 20, 30, 34 ms

40 to 100 ms in 10 ms steps, 100 to 1000 ms in 100 ms steps

1, 2, 5, 10 seconds.

For VT pointers the sequence interval is selectable from:

200 ms, 500 ms, 1, 2, 5 and 10 seconds.

Note 2: For SPE pointers the minimum spacing between adjustments is 500 us.

For VT pointers the minimum spacing between adjustments is 2 ms.

Selecting Test Features


T1.105/GR-253 Pointer Sequences Explained

Table 1 **Pointer Sequences Available with Selected Mapping**

POINTER SEQUENCE	MAPPING		
	SPE	VT6, VT2	VT1.5
A1 SINGLE	✓	✓	✓
A2 BURST OF 3	✓	✓	✓
A3 PHASE TRANSIENT	✓	✓	✓
A4 PERIODIC NORMAL(87-3)	✓		
A4 PERIODIC NORMAL (Continuous)	✓	✓	✓
PERIODIC NORMAL (26-1)			✓
A5 PERIODIC ADD (87-3)	✓		
A5 PERIODIC ADD (Continuous)	✓	✓	✓
PERIODIC ADD (26-1)			✓
A5 PERIODIC CANCEL (g) 87-3	✓		
A5 PERIODIC CANCEL (Continuous)	✓	✓	✓
PERIODIC CANCEL 26-1			✓

Using Pointer Graph Test Function

Pointer Graph shows the relative offset during the measurement period. This allows the time relationship of SPE or VT pointer movements to be observed. Up to 4 days of storage allows long term effects such as Wander to be observed. If an alarm occurs during the measurement period, a new graph starts at the centre of the display (offset zero) after recovery from the alarm.

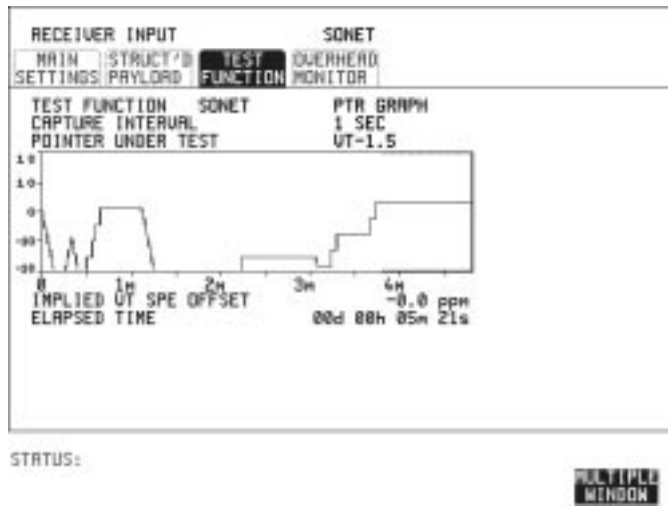

TIP:

The graph can also be viewed on the **RESULTS** **SONET RESULTS** display.

HOW TO:

- 1 Set up the receive SDH interface and payload as required. See “Setting SONET Receive Interface” page 21.
- 2 Choose the CAPTURE INTERVAL required.
The capture interval determines the time between captures. Low values of capture interval should be chosen when a high degree of pointer movements is expected.
High values of capture interval should be chosen when a low degree of pointer movements is expected, for example Wander over 1 day, use 5 MINS and Wander over 4 days, use 20 MINS.

If, during a long term measurement (4 days), an event occurs at a particular time each day, a short term measurement can be made at

Selecting Test Features
Using Pointer Graph Test Function

the identified time to gain more detail of the event.

HOW TO:

- 3 Choose the POINTER UNDER TEST type SPE or VT.
- 4 Press **RUN/STOP** to start the measurement.

TIP:

If the event occurs outside normal working hours, a Timed Start measurement can be made.

1 SEC - display window of approximately 5 minutes.

5 SECS - display window of approximately 25 minutes.

20 SECS - display window of approximately 1 hour 40 minutes.

1 MIN - display window of approximately 5 hours.

5 MIN - display window of approximately 1 day.


20 MIN - display window of approximately 4 days.

Stressing Optical Clock Recovery Circuits

Description

Ideally clock recovery circuits in the network equipment optical interfaces should recover the clock even in the presence of long strings of 0s. You can check the performance of your optical clock recovery circuits using the STRESS TEST test function.

The stress test is available at STS-12 and OC-12 if Option 130 or 131 is fitted. If Options 110/120 are also fitted then the stress test is also available at STS-12BIN and OC-12.

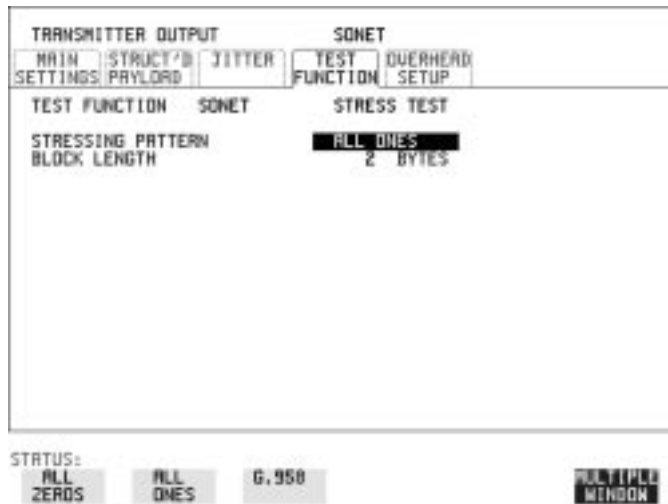

HOW TO:

- 1 Set up the SONET transmit interface and payload required. Choose the required STRESSING PATTERN.

The G.958 test pattern consists of 4 consecutive blocks of data as follows:

ALL ONES, a PRBS, ALL ZEROS and the first row of section overhead bytes.

- 2 If you choose ALL ONES or ALL ZEROS as the stressing pattern, choose the number of bytes in the BLOCK LENGTH.

Generating Automatic Protection Switch Messages

Description

You can program the K1 and K2 bytes to exercise the APS functions for Both LINEAR (GR-253) and RING (GR-1230) topologies.



HOW TO:

- 1 Set up the SNET transmit interface and payload required. See "Description" page 6.
- 2 Choose the TOPOLOGY required.
- 3 Choose the message to be transmitted.
If LINEAR topology is chosen, choose the CHANNEL, the BRIDGED CHANNEL NO., the ARCHITECTURE and the RESERVED bits you require.
If RING topology is chosen, choose the DESTINATION NODE ID, the SOURCE NODE ID, the type of PATH and the status code (K2 Bits 6->8)
The current TX and RX, K1 and K2, values are displayed for reference only.
- 4 Choose DOWNLOAD to transmit the new K1/K2 values.


Inserting & Dropping Data Communications Channel

Description

The Data Communications Channel (DCC) of the section and line overhead can be verified by protocol testing. The Insert and Drop capability provides access to the DCC via the RS-449 connector on the front panel of the SDH/SONET module.

DCC INSERT is available on the **TRANSMIT**, **SONET**, **TEST FUNCTION** display.

DCC DROP is available on the **RECEIVE**, **SONET**, **TEST FUNCTION** display.

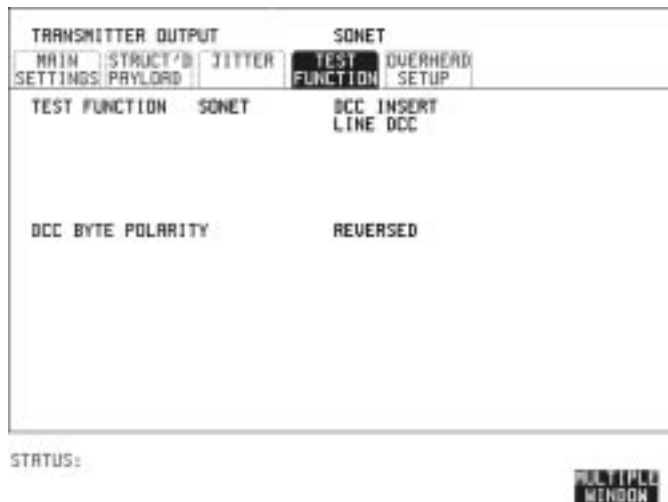

HOW TO:

- 1 Connect the Protocol Analyzer to the RS449 port on the SDH/SONET Transmit module.
- 2 Choose the required DCC.
If you choose DCC BYTE POLARITY [NORMAL], the first bit received in each byte is the first bit dropped (i.e. the most significant). Choice of NORMAL or REVERSED on the DCC INSERT or DCC DROP display will take effect on both.

Selecting Test Features

Inserting & Dropping Data Communications Channel


Making Measurements

Using Overhead BER Test Function

Description

You can perform a Bit Error Rate test on chosen bytes of the section, line and path overhead bytes.

You can access the transmit Overhead BER on the **TRANSMIT** **SONET** **TEST FUNCTION** display.



The screenshot shows a terminal window titled 'RECEIVER INPUT SONET'. The menu options are 'MAIN STRUCT'D TEST OVERHEAD', 'SETTINGS PAYLOAD FUNCTION MONITOR'. The selected option is 'TEST FUNCTION MONITOR'. The display shows the following data:

TEST FUNCTION	SONET	OVERHEAD BER
MEASURE PRBS FROM O/H BYTE	LOH	K1
WITHIN STS-3B 1		
ERROR COUNT		12
ERROR RATIO		2.717E-06
ERROR FREE SECONDS		61
%ERROR FREE SECONDS		88.405
PATTERN LOSS SECONDS		0
ELAPSED TIME		00d 00h 01m 09s

STATUS:

MULTIPLE WINDOW

HOW TO:

- 1 Set up the SONET transmit interface and payload required.
- 2 Set up the SONET receive interface and payload required.
- 3 Choose the overhead byte to be tested on the **RECEIVE** **SONET** **TEST FUNCTION** display.
- 4 Choose the overhead byte to be tested on the **TRANSMIT** **SONET** **TEST FUNCTION** display.
- 5 Press **RUN/STOP** to start the test.
- 6 The PRBS pattern can be errored by pressing **SINGLE**.

Test Timing

Description

There are two aspects to test timing:

Error results may be displayed as short term or cumulative over the measurement period. If short term error measurements are required, the short term period may be selected.

The period of the test may be defined or controlled manually.



HOW TO:

- 1 Select the **[RESULTS]** **TIMING CONTROL** display.
- 2 Set the SHORT TERM PERIOD to the timing required for short term results.
- 3 Select the type of TEST TIMING required:
 For manual control with **[RUN/STOP]** select **[MANUAL]**.
 For a single timed measurement period started with **[RUN/STOP]**, select **[SINGLE]** and select the test duration.
 For a timed period starting at a specified time, select **TIMED**, select the test duration and the test **START** date and time.

Making SONET Analysis Measurements

Description

G.826 analysis results are provided for all relevant SDH/SONET error sources.

In addition the following results are provided:

Cumulative error count and error ratio

Short Term error count and error ratio

Alarm Seconds

Pointer Values

Frequency

RESULTS	SONET	ANALYSIS
CU-S (B1)	CU-L (B2)	CU-LFE
		CU-P (B3)
		MORE

CU-L (B2) ANALYSIS (G.826)	
EB	232423
SES	5
PURS	24
ESR	1.000E+00
BBER	7.690E-02
ES	36
URS	24
BBE	19070
SESR	1.309E-01

ELAPSED TIME 00d 00h 01m 00s

STATUS: MULTIPLE WINDOW

HOW TO:

- 1 Set up the SONET transmit interface and payload required.
- 2 Set up the SONET receive interface and payload as required.
- 3 Press **RUN/STOP** to start the measurement.
- 4 You can view the analysis results on the **RESULTS** **SONET** **ANALYSIS** display.

TIP:

The measurement will not be affected if you switch between the different results provided.

Making PDH Analysis Measurements

Description

G.821, G.826, M.2100, M.2110 and M.2120 analysis results are provided for all relevant PDH and PDH Payload error sources.

In addition the following results are provided:

Cumulative error count and error ratio

Short Term error count and error ratio

Alarm Seconds

SIG/BIT Monitor refer to "Monitoring Signaling Bits " page 95

NOTE

G.826, M.2100, M.2110 and M.2120 are only available if Option UKJ, Structured PDH is fitted.

RESULTS	PDH	ERROR ANALYSIS		
G.821	G.826	M.2100	M.2110	M.2120
FRS 140 Mb/s				
EC		0		
ES		9	4.68750%	
EFS	183		95.31250%	
SES		9	4.68750%	
UNAU		0	0.00000%	
DEB MIN		0	0.00000%	
CODE ES		N/A		
ELAPSED TIME		00d 00h 03m 12s		

STATUS:

MULTIPLE
WINDOW

HOW TO:

- 1 If SDH or SONET (option 120) is chosen as the interface, set up the Transmit Interface and Payload, and also the Receive Interface and Payload required.
- 2 If PDH is chosen as the interface, set up the PDH transmit interface, and the PDH receive interface required.
- 3 Press **RUN/STOP** to start the measurement.

Making Measurements

Making PDH Analysis Measurements

- 4 If SDH is chosen as the interface, you can view the analysis results on the **RESULTS** **PDH PAYLOAD** **ERROR ANALYSIS** display.

If PDH is chosen as the interface, you can view the analysis results on the **RESULTS** **PDH** **ERROR ANALYSIS** display.

TIP:

The measurement will not be affected if you switch between the different results provided.

Measuring Jitter


Description:

PDH Jitter and PDH error measurements are made simultaneously when a PDH jitter measurement option is fitted. The measurements are made on the normal input to the PDH receiver and the interface selections are the normal PDH Receiver selections.

SDH/SONET Jitter and SDH/SONET error measurements are isolated individual measurements. The jitter measurement is made on an SDH/SONET input to the Jitter module.

Cumulative and Short Term results of Jitter Amplitude and Jitter Hits are provided on the **RESULTS** **JITTER** display.

Graph and Text results for Jitter Transfer and Jitter Tolerance are also provided.

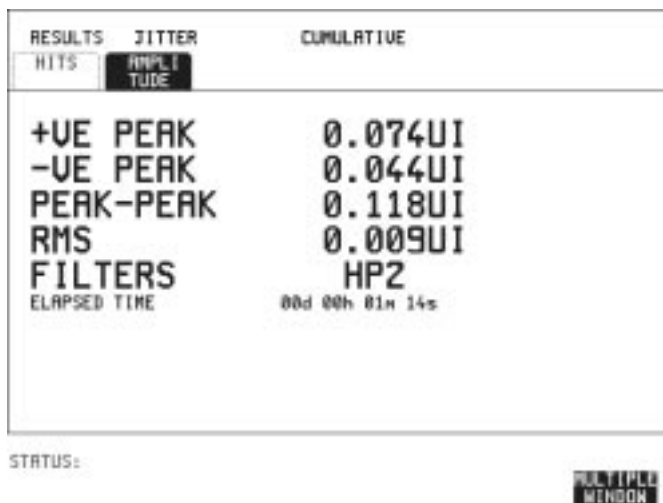

HOW TO:

- 1 If measuring Jitter on a PDH signal, set up the receive PDH interface for the error measurements. See “Setting PDH Receive Interface” page 18 and the receive Jitter interface for jitter range threshold and filters, see “Setting Jitter Receive Interface” page 23.
- 2 If measuring Jitter on an SDH/SONET signal, set up the receive Jitter interface. See “Setting Jitter Receive Interface” page 23.

Making Measurements

Measuring Jitter

NOTE


For Jitter measurements on an SDH/SONET signal you need to set the Receive interface to SDH/SONET Jitter.

- 3 Press **RUN/STOP** to start the measurement.
- 4 You can view the Jitter hits and Amplitude results on the **RESULTS** **JITTER** display.

Measuring Wander

Description:

Wander measurements are possible when the received PDH interface signal is 2 Mb/s. The Wander results are displayed in bits and microseconds. Estimated Bit and Frame slips are also calculated. In addition a Bar Graph shows the cumulative Wander over the measurement period.

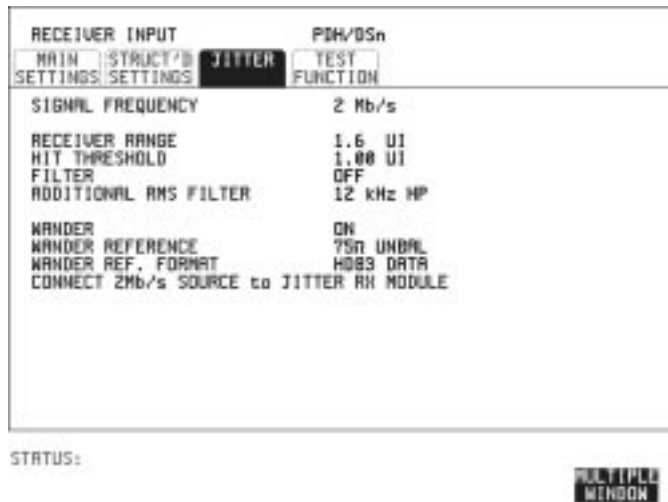

HOW TO:

Make the Measurement

- 1 Connect a 2 Mb/s REFERENCE (CLOCK or DATA) to the 2M REF IN port of the Jitter Receiver module.
- 2 Set up a 2 Mb/s PDH receive interface. See “Setting PDH Receive Interface” page 18.
- 3 Choose WANDER [ON].
- 4 Choose the WANDER REFERENCE impedance.
If the 2 Mb/s Reference is connected to the 2M REF IN 75Ω port, choose 75Ω UNBAL. If connected to the 120Ω port, choose 120Ω BAL.
- 5 Choose the WANDER REF FORMAT.
If the 2Mb/s Reference connected to the 2M REF IN port is a data signal, choose HDB3 DATA.


Making Measurements

Measuring Wander

6 Press **RUN/STOP** to start the measurement.

HOW TO:

View the Results

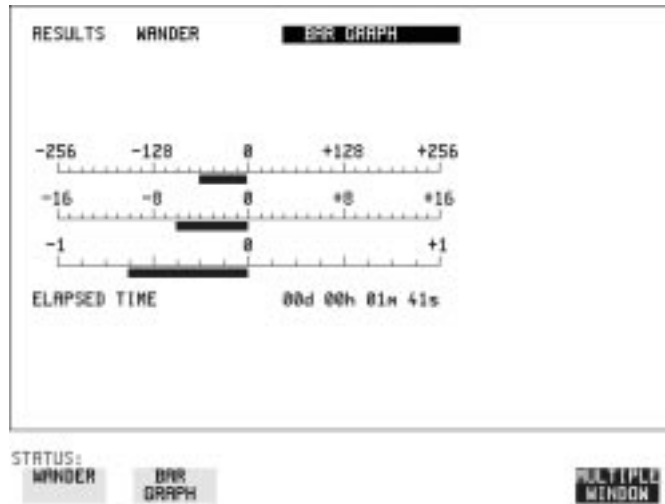

- 1 Choose the results type, WANDER or BAR GRAPH.
If Bar Graph is chosen the cumulative wander results are displayed in graphical form. The Bar Graphs are additive and in the example shown above the Wander is -70.625 BITS.
- 2 If WANDER is chosen, choose the units in which the results are displayed.
TIME displays the wander results in microseconds.
BITS displays the wander results in bits.

NOTE

Estimated Bit Slips signify the slippage from the start of the measurement.


One Estimated Frame Slip corresponds to 256 Bit Slips.

Implied Frequency Offset is calculated from the Wander results.

Measuring Frequency

Description

The signal frequency and the amount of offset from the standard rate can be measured to give an indication of probability of errors.

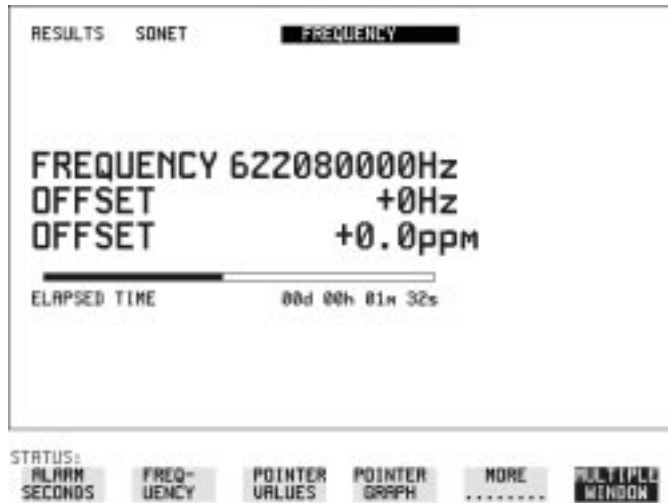

HOW TO:

- 1 Connect the signal to be measured to the IN port of the PDH module (PDH) or the IN port of the SDH/SONET module (SONET electrical) or the IN port of the Optical module.

NOTE

The frequency measurement is always available even if the test timing is off.

Measuring Optical Power

Description

Optical power measurement can be performed on the SONET signal connected to the Optical module IN port.



HOW TO:

- 1 Connect the SONET optical signal to the IN port of the Optical module.
- 2 Choose the received input signal rate on the **RECEIVE** **SONET** display.
- 3 Choose the received wavelength on the **RESULTS** **SONET** display.

NOTE

The optical power measurement is always available even if the test timing is off.

Measuring Round Trip Delay

Description:

The time taken for voice traffic to pass through the network is very important. Excessive delay can make speech difficult to understand. The Round Trip Delay feature of the HP 37717C measures the delay in a 64 kb/s timeslot.

A test pattern is transmitted in the 64 kb/s timeslot and a timer is set running. A loopback is applied to the network equipment to return the test signal. The received pattern stops the timer and the Round Trip Delay is calculated.



NOTE

You can only measure Round Trip Delay on a 64 kb/s test signal.

HOW TO:

- 1 If measuring on an SONET interface, set up the SONET transmit and receive interfaces and payload required. See “Description” page 6 and “Setting SONET Receive Interface” page 21.
- 2 If measuring on a PDH interface, set up the PDH transmit and receive interfaces and payload required. See “Setting PDH Transmit Interface” page 2 and “Setting PDH Receive Interface” page 18.
- 3 Connect a loopback to the network equipment.

Making Measurements

Measuring Round Trip Delay

- 4 Choose ACTION [ON] to start the measurement.
If measuring on an SDH/SONET interface, the results are available on the **RESULTS** **PDH PAYLOAD** display.
If measuring on a PDH interface, the results are available on the **RESULTS** **PDH** display.

The Round Trip delay measurement range is up to 2 seconds. The resolution varies with the received interface signal rate:

2 Mb/s	1 microsecond
8, 34, 140 Mb/s	10 microseconds
STM-1	0.5 milliseconds

Monitoring Signaling Bits

Description

The HP 37717C receiver can be used to monitor the state of signaling bits in received 2 Mb/s signals with timeslot-16 CAS (PCM30 or PCM30CRC) multiframing, structured or unstructured, and also in DS1 structured signals (Option 110 instruments).

The HP 37717C transmitter can be configured to generate these signals and the state of the signaling bits defined by the user, as follows:

2.048 Mb/s Signal When transmitting a 2.048 Mb/s signal, (or a 2.048 Mb/s signal as part of a higher rate structured signal) with timeslot-16 CAS (PCM30 or PCM30CRC) multiframing the state of A,B,C,D signaling bits can be set. The signaling bits of all timeslots are set to the user-defined 4 bit value.

DS1 Signal (Option 110)

When transmitting a DS1 framed, structured signal or a DS3 signal structured down to DS1, the values of the A,B signaling bits for D4 and SLC-96 payloads, and A,B,C,D signaling bits for ESF payloads can be defined. In the Transmitter signaling is only offered for a 56 kb/s or Nx56 kb/s Test Signal.

RESULTS DSn PAYLOAD SIG/BIT MONITOR

DS1 ESF ABCD BITS

TS	ABCD	TS	ABCD	TS	ABCD	TS	ABCD
1	1100	7	1111	13	1111	19	1111
2	1111	8	1111	14	1111	20	1111
3	1111	9	1111	15	1111	21	1111
4	1111	10	1111	16	1111	22	1111
5	1111	11	1111	17	1111	23	1111
6	1111	12	1111	18	1111	24	1111

STATUS:
ERROR SUMMARY CUMUL-ATIVE SHORT TERM ERROR ANALYSIS MORE MULTIPLE WINDOW

Results Displayed

The state of the received signaling information is displayed on the **RESULTS**, **PDH PAYLOAD**, **SIG/BIT MONITOR** page.

Note: To display 2 Mb/s signaling information PCM30 or PCM30CRC framing must be selected.

Note: To display DS1 signaling information the receiver Test Signal must be set to 64 kb/s, Nx64 kb/s, 56 kb/s or Nx56 kb/s.

2.048 Mb/s Results

For 2 Mb/s signals with timeslot-16 CAS multiframeing a table showing the values of A,B,C,D signaling bits in all 30 channels is given.

DS1 Results (option110)

D4 and SLC-96 payloads

A table simultaneously showing the state of the A and B signaling bits in the 6th and 12th frames of a superframe is given. Each frame contains 24 timeslots. In SLC-96 mode A and B choices are 0, 1 or alternating. If you set bit A or B to alternate, the displayed bit changes to an A, to indicate that the bit is alternating from 1 to 0. The same signaling is transmitted in all channels.

ESF Payloads

A table simultaneously showing the state of the A, B, C and D signaling bits in the 6th, 12th, 18th and 24th frames of a superframe is given. Each frame contains 24 timeslots.

Measuring Service Disruption Time

Description:

Protection switching ensures that data integrity is maintained and revenue protected when equipment failure occurs. The speed of operation of the protection switch can be measured.

This measurement is available in instruments with option UKJ, Structured PDH fitted or at STM-4c if option 130 or 131 is fitted, or if option 110 DS_n SPDH is fitted.

The sequence of events involved in measuring the switching time is:

- Pattern Synchronization (no errors) is achieved.
- The protection switch is invoked - Pattern Synchronization is lost.
- The standby line is in place - Pattern Synchronization is regained.

The time interval between pattern sync loss and pattern sync gain is a measure of the disruption of service due to protection switching.



Measuring Service Disruption Time

Option Differences

Option UKJ: Service Disruption is selected on the **RESULTS** page.

Option 110: Service Disruption is selected on the **RESULTS** page except for the following configurations:

- If you select a PDH or SDH/SONET interface and an ANSI (DS1, DS3) framed, unstructured payload you must select Service Disruption on the Transmitter and Receiver TEST FUNCTION page (option 110 only). Ensure if you are using more than one instrument, that the Transmitter you set up is the one outputting the test signal to the equipment under test. The results can be viewed on the **RESULTS** display.

DS1 and DS3 Operation (Option 110 instruments)

The service disruption results are only available for Unframed, Framed and Structured configurations (but not for DS1 structured within DS3) and for all rates (including 64 kb/s and Nx 64 kb/s).

The DS-1 and DS-3 Test Pattern is set to 2E9-1 PRBS during Service Disruption measurements.

Error Burst Definition

Error bursts start and finish with an error. Bursts of less than 10 us are ignored.

Bursts are assumed to have completed when >2000 ms elapses without any errors being received.

The longest burst detected is 2 seconds.

Accuracy

300 us for DS1 or 2Mb/s/34Mb/s signals.

60 us for DS3 signals.

HOW TO:

Measure service disruption time

- 1 Set up the SONET transmit interface and payload required.
- 2 Set up the SONET receive interface and payload as required.
- 3 Press **RUN/STOP** to start the measurement.
- 4 Invoke the protection switch.
- 5 View the results on the **RESULTS** **SRVC DISRUPT** display.

Results Displayed

LONGEST - Longest burst of errors during measurement.

SHORTEST - Shortest burst of errors during measurement.

LAST - Length of last burst of errors detected during measurement.

Performing an SONET Tributary Scan

Description

Tributary Scan tests each tributary for error free operation and no occurrence of Pattern Loss. A failure is indicated by highlighting the tributary in which the failure occurred. The **TRANSMIT** **SONET** **MAIN SETTINGS** mapping setup determines the tributary structure. The HP 37717C will configure the Transmitter to the Receiver and the PATTERN is forced to the payload it will fill.



Option Differences

HOW TO:

If your instrument has option 120 fitted you can perform a tributary scan of Sonet tributaries. Use the procedure given here for SONET operation.

- 1 Set up the transmit and receive SONET interfaces and payload as required.
- 2 Choose the required BIT ERROR THRESHOLD.
This determines the error rate above which a failure is declared.
- 3 Choose the required TEST TIMING.
The value you choose is the test time for each individual tributary and not the total test time.
For example, 28 VT1.5 tributaries in an STS-1 SPE - the time taken to complete the Tributary Scan will be 28 X TEST TIMING choice.


Making Measurements

Performing an SONET Tributary Scan

- 4 The Tributary Scan results can be viewed on the **RESULTS** **SONET TRIBSCAN** display. The Scan can be started on the **TRANSMIT** **SONET** **TEST FUNCTION** display or the **RESULTS** display by choosing START.
- 5 If the Scan is started on the **TRANSMIT** **SONET** **TEST FUNCTION** display, the HP 37717C changes to the **RESULTS** display. If a single path, for example, SIGNAL STS-3c SPE is chosen, then Tributary Scan is disabled.

NOTE

The keyboard is locked during tributary scan.

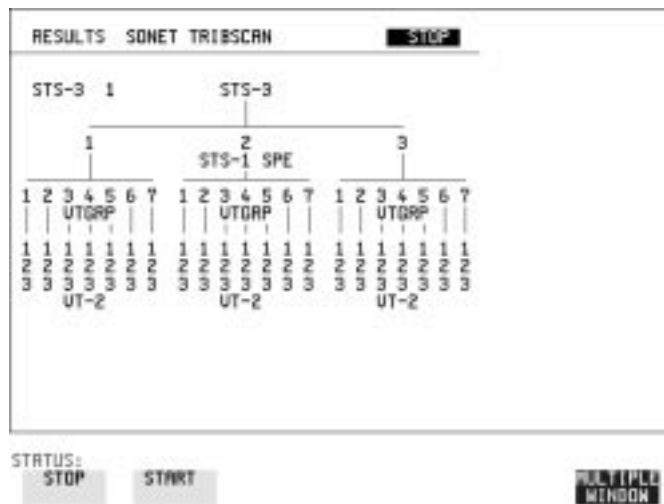

Performing a SONET Alarm Scan


Description

SONET Alarm Scan tests each channel for alarm free operation and identifies and indicates any Unequipped channels. You can configure the Scan to check for the occurrence of any Path layer CV errors above a chosen threshold.

The channel in which an alarm occurred is highlighted if any of the following alarms occur:

STS-SPE:LOP-P, AIS-P, RDI-P.

VT-1.5: LOP-P, AIS-P, RDI-P, H4 LOM, LOP-V, AIS-V, RDI-V.

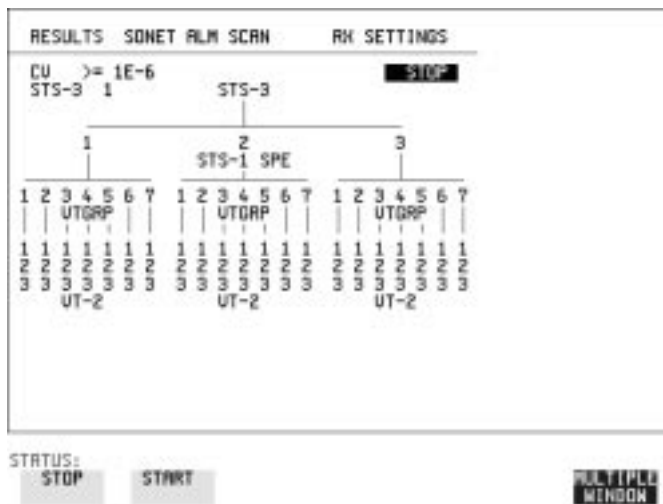

HOW TO:

- 1 Set up the SONET receive interface and payload as required.
- 2 Press the **RESULTS** key and select **SONET ALM SCAN** . Set the field at the top right of the display to AUTO or RX SETTINGS.

RX SETTINGS: The scan checks the structure set on the **RECEIVE SONET** display.

AUTO: The scan checks the structure being received. This can be particularly useful when receiving mixed payloads.

Making Measurements

Performing a SONET Alarm Scan


- 3** Choose the CV error threshold.
- 4** Choose START to start the Alarm Scan.

Performing a PDH Alarm Scan

Description

PDH Alarm Scan tests each channel for the following alarms:
Frame Loss
RAI
AIS

The channel in which an alarm occurs is highlighted.

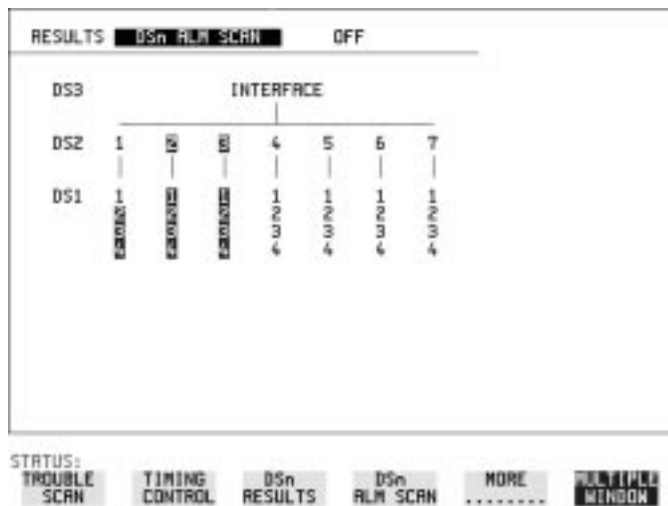

HOW TO:

- 1 Set up the receive PDH interface as required. See “Setting PDH Receive Interface” page 18.
- 2 Choose ON to start the Alarm Scan.


Selecting the ATM Measurement Parameters

Description

You need to make a number of selections which define the type of test you want to make and the cell which you want to be subject of the test.

TIP:

If you wish to set the HP 37717C transmitter and Receiver to the same interface settings, choose **OTHER** **SETTINGS CONTROL** **COUPLED**. This will couple common selections, for example, interface and cell payload but will **NOT** couple the cell header.

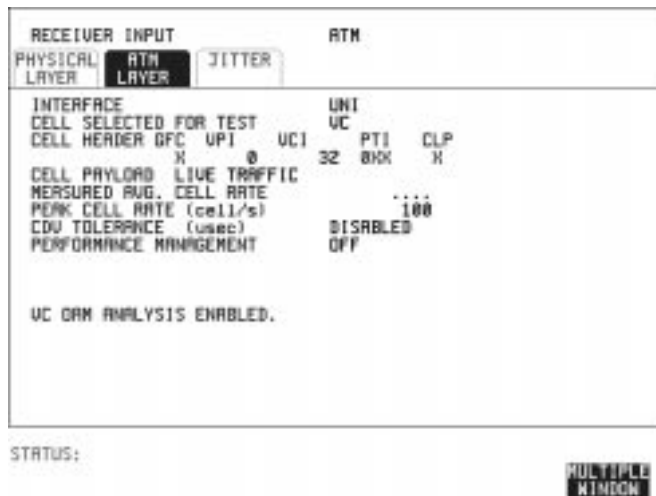

HOW TO:

- 1 Select the signaling INTERFACE: User Network Interface **UNI** Typically used between a user and a switch in the public network, or Network Node Interface **NNI** typically used between switches in the public network.
- 2 Select how the cell stream to be tested is defined by setting CELL SELECTED FOR TEST.
To specify by header VPI, select **VP**.
To specify by header VPI and VCI, select **VC**.
To specify by all of the header, select **EXPERT MODE**.
In addition to these choices you can select **ALL USER CELLS**, **UNASSIGNED CELLS** or **IDLE CELLS**.
For OAM analysis, select **VP** for the VP OAM or **VC** for the VC OAM.
Selection of **SEGMENT** or **END TO END** PERFORMANCE

Selecting the ATM Measurement Parameters

MANAGEMENT is available for MEASUREMENT MODE **IN SERVICE** measurements when **VP** or **VC** is chosen.

- 3 Specify the CELL HEADER parameters for the test. The selections available will depend on type of CELL SELECTED FOR TEST.
- 4 Specify the CELL PAYLOAD. If the receiver and transmitter settings are coupled, see “Coupling Transmit and Receive Settings” page 160, the receiver setting will automatically be set to the transmitted setting. **LIVE TRAFFIC** allows In-Service testing at the ATM layer.
- 5 If the CELL SELECTED FOR TEST is set to **VP**, **VC**, **EXPERT MODE** or **ALL USER CELLS**, select the PEAK CELL RATE and CDV TOLERANCE for the test.
- 6 If OAM analysis is required, set PERFORMANCE MANAGEMENT to **SEGMENT** or **END-TO-END** for Cell Loss, Cell Misinsertion and BEDC BIP-16 measurements on the performance management OAM.
- 7 If PERFORMANCE MANAGEMENT is set to **SEGMENT** or **END-TO-END**, enter the OAM block size. If this is unknown, select 1024 (maximum available). Selecting a block size smaller than that in use may cause PM OAM LOSS. If the OAM cells selected are not present, a status message “PM OAM LOSS alarm” will appear on the display.

Making ATM Measurements

Description

Received cells, non conforming cells, HEC errors and 1pt Cell Delay Variation are measured in-service and out-of -service. Lost cells, missinserted cells, payload errors and 2pt Cell Delay Variation are measured out-of -service. If you are measuring 2-point CDV the foreground payload must be the test cell.



- 1 Set up the **RECEIVE** **ATM** PHYSICAL LAYER interface, see.
- 2 Select **RECEIVE** **ATM** ATM LAYER, see page 104.
- 3 If SHORT TERM results are required, use **RESULTS** **TIMING CONTROL** to select the short term period.
- 4 You can view the ATM results on the **RESULTS** **ATM** **CUMULATIVE** or **SHORT TERM** display.

NOTE


The measurement will not be affected if you switch between the different results provided.

Measuring Cell Transfer Delay and Cell Delay Variation

Description

Cell transfer delay may occur because of physical layer switching and propagation delay over long transmission paths. At the ATM layer, queueing and cell multiplexing may cause additional and varying delay (CDV). CDV is accentuated when a virtual circuit is multiplexed with a highly variable traffic load or when congestion is approached in ATM switches. Delay may also be caused by traffic shaping.

Cell transfer delay and CDV should not affect data transfer applications but will affect audio and video services. For telephony and video conferencing, the round trip delay may make communication difficult. Constant Bit Rate services require the CDV to be controlled to minimize the depth of reconstruction buffers and to minimize jitter in the service clock recovery at the receive end

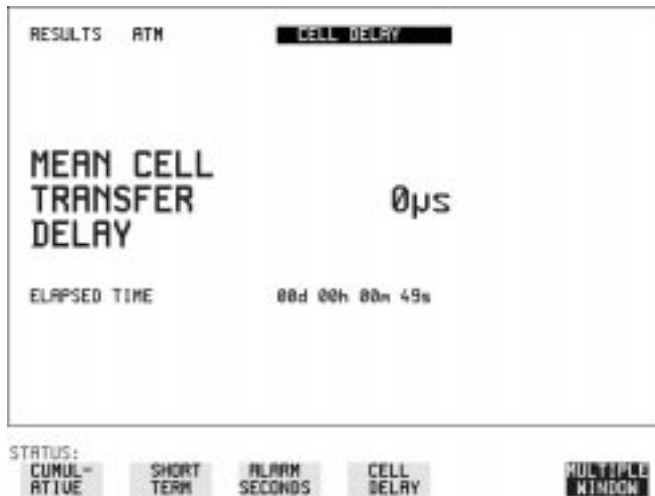

HOW TO:

- 1 Set up the **RECEIVE** **ATM** PHYSICAL LAYER interface, see “Selecting the Physical Receive Interface for ATM payloads” page 25.
- 2 Set up the **RECEIVE** **ATM** ATM LAYER see page 104. The CELL PAYLOAD must be the test cell.
- 3 Press **RUN/STOP** to start a test.

Making Measurements

Measuring Cell Transfer Delay and Cell Delay Variation

- 4 You can view the CDV results on the **RESULTS** **ATM** **CELL DELAY** display.

Measuring ATM Non-Conforming cells and one-point Cell Delay Variation.

Description

ATM policing is performed using the Generic Cell Rate Algorithm (GCRA). The HP 37717C can perform a single GCRA policing test using the Peak Cell Rate and CDV tolerance parameters. Any cell received that does not conform to the GCRA test is measured as a non-conforming cell. If no non-conforming cells are measured, the Maximum 1-point Cell delay Variation (CDV) measurement tells you what margin of error there is. When the 1-point CDV equals the CDV tolerance, a non-conforming cell is measured. If you select CDV Tolerance DISABLED, no non-conforming cells are recorded and the maximum 1-point CDV result is the minimum value of CDV Tolerance required to ensure cell conformance.

HOW TO:

- 1 Configure the receiver for ATM measurements. See "Selecting the ATM Measurement Parameters " page 104.
- 2 Select the PEAK CELL RATE and CDV TOLERANCE for the test.

TIP:


If you are unsure of the PEAK CELL RATE to choose, run a short test first. The MEASURED AVG. CELL RATE shows the average cell rate during the test. This is the minimum suitable value for the PEAK CELL RATE. If you select AVERAGE as the PEAK CELL RATE, the measured average value is automatically entered. The test must be stopped before the AVERAGE can be entered.

- 3 Press **RUN/STOP** to start a test.
- 4 You can view the NON-CONFORMING CELL COUNT and MAX 1-PT CDV results on the **RESULTS** **ATM** **CUMULATIVE** or **SHORT TERM** display. MAX 1-PT CDV is only available as a CUMULATIVE result.

Monitoring ATM Alarms

Description

There are two indications of ATM alarm conditions, The duration of alarms during a test is shown on the alarm seconds results display and any existing alarms are shown by the front panel LED alarm indicators.

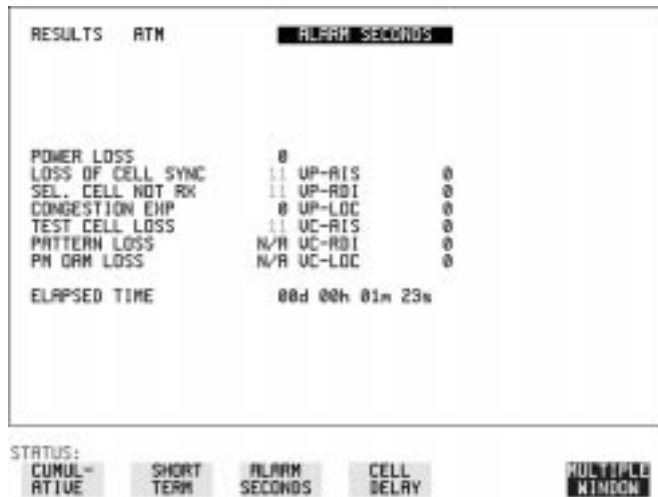

- | | | |
|---|---|-----|
| <input type="checkbox"/> LOS | <input type="checkbox"/> LOF/OOF | SDH |
| <input type="checkbox"/> PATTERN LOSS | <input type="checkbox"/> AU-LOP/TU-LOP | |
| <input type="checkbox"/> ERRORS | <input type="checkbox"/> MS-AIS | |
| <input type="checkbox"/> AIS | <input type="checkbox"/> AU-AIS | PDH |
| <input type="checkbox"/> LOF | <input type="checkbox"/> CLOCK LOSS | |
| <input type="checkbox"/> M/F LOSS | <input type="checkbox"/> MS-RDI | |
| <input type="checkbox"/> REMOTE ALARM | <input type="checkbox"/> HP-RDI | |
| <input type="checkbox"/> REMOTE M/F ALARM | <input type="checkbox"/> TU-AIS | |
| <input type="checkbox"/> VP ALARM | <input type="checkbox"/> LP-RDI | ATM |
| <input type="checkbox"/> VC ALARM | <input type="checkbox"/> POINTER ADJUST | |
| <input type="checkbox"/> LOSS OF CELL SYNC | | |
| <input type="checkbox"/> SELECTED CELL NOT RX | | |
| <input type="checkbox"/> JITTER UNLOCK | | |
| <input type="checkbox"/> JITTER HITS | | |

Storing, Logging and Printing

Saving Graphics Results to Instrument Store

Description

Graphical representation of measurement results is very useful particularly during a long measurement period. It provides an overview of the results and can be printed for record keeping.

Graphics results can be stored in instrument graph storage or on floppy disk.



HOW TO:

- 1 Before starting your measurement, choose the GRAPH STORAGE resolution and location.
The resolution chosen affects the ZOOM capability when viewing the bar graphs. If 1 MIN is selected, 1 MIN/BAR, 15 MINS/BAR and 60 MINS/BAR are available. If 15 MINS is selected, 15 MINS/BAR and 60 MINS/BAR are available. If 1 HOUR is selected, 60 MINS/BAR is available.
The graphics results can be stored in the instrument - INTERNAL or stored on DISK. Storage to disk will use a default file name unless a file name is specified on the **OTHER** **FLOPPY DISK** display. See "Saving Graphics Results to Disk " page 145.
- 2 Press **RUN/STOP** to start the measurement. Graphical results will be stored in the chosen location.

Recalling Stored Graph Results

Description

Results stored from a previous measurement can be recalled to the graphics displays for viewing and printing.

STORE	START DATE	START TIME	TEST DURATION	STORE USE
DISK				
-9				
-8				
-7				
-6				
-5				
-4				
-3				
-2	10-JUL-1997	15:28	16h 28m 34s	22
-1	11-JUL-1997	07:50	00h 01m 04s	<12
LAST	12-JUL-1997	07:51	00h 01m 19s	Nil
STORAGE 1 SEC			TOTAL	USED
RESOL'N COMPRESSED			RAM	FREE
FREE STORE 19626 EVENTS				22
				982

STATUS:
GRAPH RESULTS TEXT RESULTS DELETE STORE DELETE ALL MULTIPLE WINDOW

HOW TO:



- 1 If currently viewing the bar graph display, select **TEXT RESULTS** then **STORE STATUS**. If currently viewing the error or alarm summary, select **STORE STATUS**.
- 2 Using **↑** and **↓**, move the highlighted cursor to the store location which contains the required results.
If the required results are stored on Disk, move the highlighted cursor to DISK and choose RECALL GRAPHICS on the FLOPPY DISK display. See "Recalling Graphics Results from Disk" page 149.
- 3 Choose **GRAPH RESULTS** if you wish to view the bar graphs. The display will change to the bar graph display of the highlighted results.
- 4 Choose **TEXT RESULTS** if you wish to view the error and alarm Summaries. The display will change to the text results display of the highlighted results.
DELETE STORE deletes the results in the highlighted store.

Storing, Logging and Printing

Recalling Stored Graph Results

If **DELETE ALL** is chosen, a **CONFIRM DELETE** ; **ABORT DELETE** choice is provided to prevent accidental deletion of all the stored results.


The top row of the display comprises five fields:

Store	Memory location in which the displayed bar graph data is stored. Move the highlighted cursor, to the STORE location desired, using  and  .
Start Date	The start date of the test, which produced the stored results.
Start Time	The start time of the test, which produced the stored results.
Test Duration	The duration of the test, which produced the stored results.
Store Use	The percentage (%) of the overall storage capacity occupied by each set of stored results. The TOTAL percentage used and the percentage still FREE is provided at the bottom of the STORE USE column.

Viewing the Bar Graph Display

Description

All the graphic results obtained during the measurement are available for viewing. Identify a period of interest and zoom in for more detailed examination.

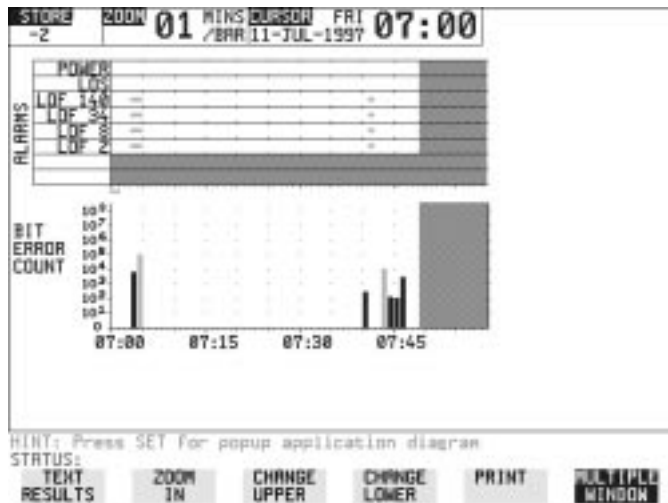



HOW TO:

- 1 To view the current bar graphs, press **GRAPH** and use **CHANGE UPPER** and **CHANGE LOWER** to obtain the bar graphs required.
- 2 To view previously stored graphs, see "Recalling Stored Graph Results " page 113.
- 3 For more detailed inspection of the bar graph, position the cursor centrally within the area of interest using **→**, **←** and select **ZOOM IN** to reduce the time axis to 15 MINS/BAR. This is only possible if the graphics results were stored with a STORAGE resolution of 1 SEC,1 MINS or 15 MINS. For further reduction of the time axis to 01 MINS/BAR or 01 SECS/ BAR, position the cursor centrally within the area of interest and select **ZOOM IN** until the required time axis is obtained.

Storing, Logging and Printing
Viewing the Bar Graph Display

The top row of the display comprises three fields:

- Store** Memory location in which the displayed bar graph data is stored. Store can only be changed when the status of stored results is displayed. See "Recalling Stored Graph Results " page 113.
- Zoom** The width, in minutes, of each "bar" in the bar graph, controlled by **ZOOM IN** / **ZOOM OUT**.
- Cursor** The cursor position in terms of time and date, controlled by  and . The cursor position changes in steps of 1 second, 1 minute, 15 minutes or 60 minutes dependent upon the ZOOM setting. The cursor is physically located between the two graphs.

Viewing the Graphics Error and Alarm Summaries

Description

The error and alarm summaries of the measurement chosen are displayed on the **TEXT RESULTS** display. The error summary or alarm summary can be viewed at any time.

	COUNT	RATIO
BIT	546	1.499E-04
CODE	123652	6.381E-05
FAS 140M	N/A	N/A
FAS 34M	1103	8.664E-05
FAS 8M	0	0
FAS 2M	0	0
CRC	N/A	N/A
REBE	N/A	N/A

STATUS: STORE STATUS GRAPH RESULTS PRINT NEXT SUMMARY ALARM SUMMARY MULTIPLE WINDOW

HOW TO:

- 1 To view the error or alarm summary associated with the current bar graphs, press **GRAPH** then **TEXT RESULTS**
- 2 To view the error or alarm summary associated with previously stored bar graphs, see "Recalling Stored Graph Results " page 113.
- 3 To view the Alarms which have occurred during the measurement, select **ALARM SUMMARY**. Use **NEXT SUMMARY** to view the PDH; JITTER; ATM and SONET Alarm Summaries in turn if applicable.
- 4 To view the Errors which have occurred during the measurement select **ERROR SUMMARY**. Use **NEXT SUMMARY** to view the PDH; JITTER; ATM and SONET Error Summaries in turn if applicable.
The top row of the display comprises three fields:

Store Memory location in which the bar graphs, error summary and alarm summary are stored.

Viewing the Graphics Error and Alarm Summaries

Store can only be changed when the status of stored results is displayed. See "Recalling Stored Graph Results " page 113.


Start The start time and date of the test, that produced the displayed results.

Stop The stop time and date of the test, that produced the displayed results.

Logging Graph Displays

Description

If Option A3B or Option A3D, Remote Control, is fitted, the bar graphs and error and alarm summary can be logged to an external HP DeskJet printer at the end of the test period. If a printer is not immediately available, the graphics results remain in memory and can be logged at a later time when a printer becomes available.

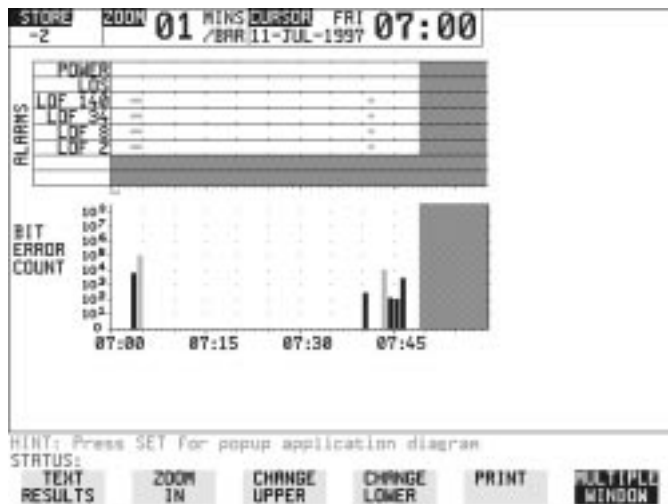

HOW TO:

- 1 Connect an external RS-232-C HP DeskJet printer to the HP 37717C RS232 port. See "Logging Results to RS-232-C Printer" page 126 or connect an external HP-IB HP DeskJet printer to the HP 37717C HP-IB port. See "Logging Results to HP-IB Printer" page 124 or connect a Parallel DeskJet printer to the HP 37717C Parallel port. See "Logging Results to Parallel (Centronics) Printer" page 123.
- 2 Make the required selections on the **OTHER** **LOGGING** display: LOGGING PORT [HPIB] or [RS232] or [PARALLEL] and LOGGING [ON].
- 3 To log the Error and Alarm summaries, the displayed Bar graphs and the Alarm graph to the printer, choose **PRINT** on the bar graph display. To log the selected Error and Alarm summaries to the printer, choose **PRINT** on the Text Results display.

Logging Results

Description

Test Period Logging

If degradations in system performance can be observed at an early stage, then the appropriate remedial action can be taken to maximize circuit availability and avoid system crashes. Test period logging allows you to monitor the error performance of your circuit. At the end of the test period the selected results are logged. Results can be logged at regular intervals during the test period by selecting a LOGGING PERIOD of shorter duration than the test period. An instant summary of the results can be demanded by pressing **PRINT NOW** without affecting the test in progress.

Error Event Logging

Manual tracing of intermittent faults is time consuming. Error event logging allows you to carry out unattended long term monitoring of the circuit. Each occurrence of the selected error event is logged.

The results obtained during the test are retained in memory until they are overwritten by the next set of results. The results can be logged at any time during the test period and at the end of the test period. The results required are selected using **OTHER LOGGING LOGGING SETUP CONTROL**.

Any Alarm occurrence results in a timed and dated message being logged.

BER and Analysis results can be selected by the user.

Cumulative and Period versions of the results are calculated and can be selected by the user.

Period The results obtained over a set period of time during the test. The Period is defined by the LOGGING PERIOD selection.

Cumulative The results obtained over the time elapsed since the start of the test.

Logging Results

The results can be logged to the following devices, selectable using **OTHER** **LOGGING** LOGGING SETUP **DEVICE**:

- Optional Internal printer fitted into the instrument front cover (Option UKX)
- External HP-IB printer (options A3B & A3D)
- External RS-232-C printer (options A3B & A3D)
- External Parallel Port printer (options A3B & A3D)
- Disk Drive



HOW TO:

- 1 Choose LOGGING [ON] - enables the logging of results and alarms.
- 2 Choose LOGGING PERIOD - determines how regularly the results and alarms are logged.
USER PROGRAM provides a choice of 1 second to 99 days.
- 3 Choose RESULT LOGGED - allows you to log ALL results to or choose only those results you require.
- 4 Choose WHEN - allows you to choose to only log when the error count for the logging period is greater than 0. If the error count is 0 then the message NO BIT ERRORS is displayed.

Storing, Logging and Printing

Logging Results

- 5 Choose CONTENT - allows you a choice of error results to be logged. Error Results, Analysis or Error and Analysis (ER & ANAL) and Period, Cumulative or Period and Cumulative (PER & CUMUL). If LOG ERROR SECONDS [ON] is chosen a timed and dated message is logged.
- 6 Choose LOG ON DEMAND allows you a choice of RESULTS SNAPSHOT, OVERHEAD SNAPSHOT, OVERHEAD CAPTURE, POINTER GRAPH or SDH TRIBUTARY SCAN to be logged when **PRINT NOW** is pressed. If Option UKX, Internal Printer, is fitted, **SCREEN DUMP** is added to the menu. This allows you to log any selected display when **PRINT NOW** is pressed.
- 7 Choose the logging DEVICE.
If RS232 is chosen, see "Logging Results to RS-232-C Printer " page 126.
If HPIB is chosen, see "Logging Results to HP-IB Printer " page 124.
If PARALLEL is chosen, see "Logging Results to Parallel (Centronics) Printer " page 123.
If DISK is chosen, see "Saving Data Logging to Disk" page 147.
If Option UKX, Internal Printer, is fitted and INTERNAL is chosen, see "Logging Results to Internal Printer " page 125.

Logging Results to Parallel (Centronics) Printer

Description

If Option A3B or A3D, Remote Control Interface, is fitted, you can log the results and alarms to an external Parallel printer connected to the PARALLEL port. The Parallel port provides a standard IEEE 1284-A compatible interface.



CAUTION

Damage to the instrument may result if a serial connection is made to this port.

HOW TO:

- 1 Connect the Parallel printer to the PARALLEL port. See "Connecting an HP DeskJet Printer to a Parallel Port " page 128.
- 2 If a non HP printer is connected choose ALT PRINTER. Choose 80 character column width (NORMAL) or 40 character column width (COMPRESS) according to the capabilities of your printer.
- 3 Choose the LOGGING SETUP [CONTROL] settings. See "Logging Results " page 120.

Logging Results to HP-IB Printer

Description

If Option A3B or A3D, Remote Control Interface, is fitted, you can log the results and alarms to an external HP-IB printer connected to the HP-IB port.



HOW TO:

- 1 Connect an HP-IB printer to the HPIB port.

NOTE

Choosing HP-IB external printer for logging prevents the use of HP-IB remote control.

- 2 Choose the LOGGING SETUP [CONTROL] settings. See "Logging Results " page 120.

Logging Results to Internal Printer

Description

If Option UKX, Internal Printer is fitted, you can log the results and alarms to the in-lid printer.

FUNCTION	[LOGGING]				
LOGGING SETUP	[DEVICE]				
LOGGING PORT	[INTERNAL]				
REMOTE CONTROL PORT	HPIB				
STATUS:					
INTERNAL	RS232	HPIB	DISK	PARALLEL	MULTIPLE WINDOW

HOW TO:

- 1 Choose the LOGGING SETUP [CONTROL] settings. See "Logging Results " page 120.

Logging Results to RS-232-C Printer

Description

If Option A3B or A3D, Remote Control Interface, is fitted, you can log the results and alarms to an external RS-232-C printer connected to the RS232 port.

FUNCTION	LOGGING
LOGGING SETUP	DEVICE
LOGGING PORT	RS232
REMOTE CONTROL PORT	LAN
PRINTER TYPE	ALT. PRINTER
MODE	NORMAL
SPEED	9600 BAUD
PROTOCOL	ON/OFF

STATUS: RS232 HP1B DISK PARALLEL MULTIPLE WINDOW

HOW TO:

- 1 Connect an RS-232-C printer to the RS232 port.

NOTE

Choosing RS232 external printer for logging prevents the use of RS-232-C remote control.

- 2 If a non HP printer is connected choose ALT PRINTER.
Choose 80 character column width (NORMAL) or 40 character column width (COMPRESS) according to the capabilities of your printer.
- 3 Choose the LOGGING SETUP [CONTROL] settings. See "Logging Results " page 120.

Printing Results from Disk

Description

The results and alarms you logged to Disk can be printed by removing the Disk from the HP 37717C and inserting it into a personal computer (PC).

HOW TO:

Print from DOS Prompt

copy/b a:\<filename> <printer name>

HOW TO:

Print from Windows

- 1 Choose the required file from Filemanager.
- 2 Choose FILE - COPY FILE TO
<printer name>

Connecting an HP DeskJet Printer to a Parallel Port

Description

If Remote Control Option, A3B or A3D, is fitted, the HP 37717C has the capability of interfacing with an HP DeskJet printer or, an alternative suppliers printer, via the PARALLEL port.

CAUTION

Do not connect a serial printer e.g. RS-232-C or HPIB to the HP 37717C Parallel port as this will damage the interface.

HOW TO:

Connect the HP 37717C Parallel port to the HPDeskJet Parallel port using printer cable HP part number 24542D.

Changing Internal Printer Paper

Description

The printer accepts rolls of thermal paper with the following dimensions:

Width: 216 mm (8.5 in) or 210 mm (8.27 in) (A4)
tolerance +2.0 mm - 1.0 mm

Maximum Outside Diameter: 40 mm

Inside Core Diameter: Between 12.5 mm and 13.2 mm


Suitable rolls of paper are available from Hewlett Packard, Part Number 9270-1360.

WARNING

The paper tear-off edge is SHARP. This edge is exposed when the printer cover is raised. Note the  CAUTION SHARP EDGE label on the cover.

HOW TO:

- 1 Raise the two locking tabs on the sides of the printer cover and then raise the cover.
- 2 Raise the printer mechanism front cover. This releases the paper drive. Remove any remaining paper from the front (in the normal direction of operation).

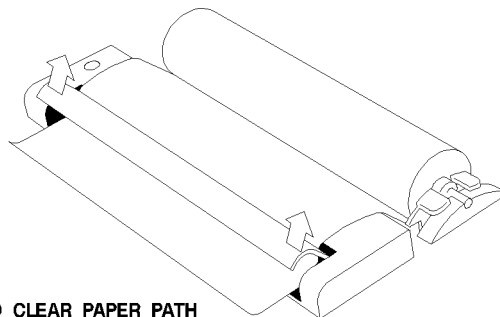


- 3 Lift out the spindle. Adjust the paper width adaptor to the width of the paper being used.

Storing, Logging and Printing
Changing Internal Printer Paper


- Put the paper roll on the spindle such that the sensitive side will be on the underside of the print mechanism. Ensure that the relocation of the spindle locks the blue width adaptor in position.

NOTE

The paper must be installed such that when it is in the print mechanism, the sensitive side (slightly shiny) is the underside. The illustrations here show the correct fitting for HP 9270-1360 paper which has the sensitive side on the outside of the roll.

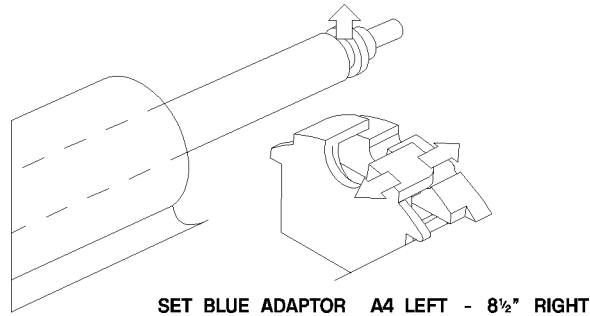

- Feed the paper into the upper entry of the print mechanism. When the front cover of the print mechanism is closed, the printer should automatically feed the paper through until there is approximately 2.5 cm (1 in) clear at the front of the print mechanism.

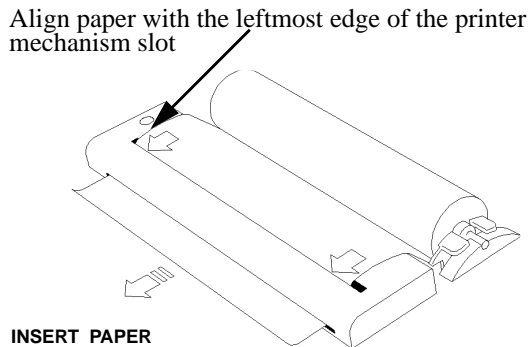


CAUTION

Do not close the outer cover until the automatic paper feed is complete.

Storing, Logging and Printing
Changing Internal Printer Paper

- 6 If the printer paper is incorrectly aligned, raise the printer mechanism front cover to releases the paper drive and realign the paper.

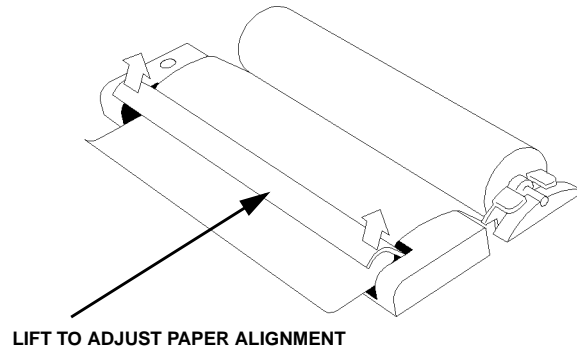

Cleaning Internal Printer Print Head

Description

The print head should be cleaned when broken or light characters occur in a vertical line on the page. To maintain a high quality print, clean the print head after 200 to 300 prints.

The print head is cleaned with a special cleaning paper which is supplied with the instrument.

WARNING

The paper tear-off edge is SHARP. This edge is exposed when the printer cover is raised. Note the  CAUTION SHARP EDGE label on the cover.

HOW TO:

- 1 Open the printer as for changing the paper. See "Changing Internal Printer Paper " page 129.
If printer paper is fitted, remove it from the printer.
- 2 Feed the cleaning paper into the top entry of the print mechanism with the rough black side, which contains the cleaning material, towards the rear of the printer.
- 3 When the automatic feed is complete and the paper stops moving use the instrument front panel key **PAPER FEED** to move the cleaning paper through the print mechanism.
- 4 Remove the cleaning paper and replace the normal printer paper. See "Changing Internal Printer Paper " page 129.

NOTE

Retain the cleaning paper. It is designed to last for the life of the printer.


Using Instrument and Disk Storage

Storing Configurations in Instrument Store

Description

You can store measurement settings which are used regularly and recall them with a single operation.

One preset store is provided which cannot be overwritten, STORED SETTING NUMBER [0]. This store is used to set the instrument to a known state, the FACTORY DEFAULT SETTINGS.

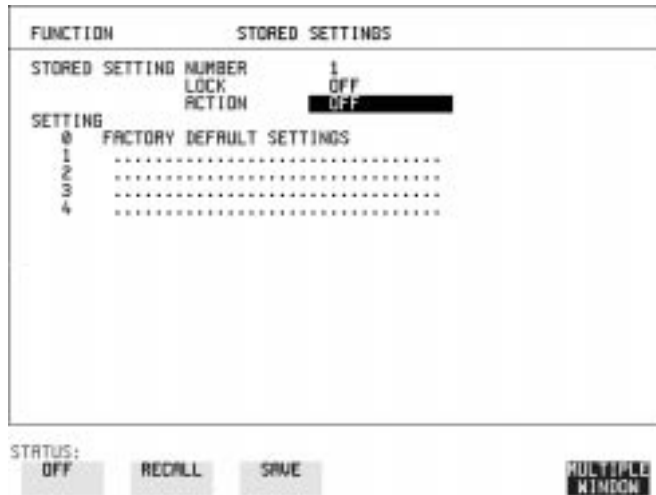

HOW TO:

- 1 Set the instrument to the configuration you wish to store. (**TRANSMIT**, **RECEIVE**, **OTHER**, **RESULTS** displays)
- 2 Choose the STORED SETTING NUMBER to receive the configuration.
- 3 Choose LOCK [OFF].
- 4 To add a descriptive title see "Setting up a Title for Configurations in Instrument Store " page 136.
- 5 Choose SAVE to store the configuration in the chosen store.

Storing Current Configurations on Disk

Description

You can store a large number of measurement settings which are used regularly and recall them when required.

Configurations can be stored to a file on the floppy disk. The floppy disk can be used in other instruments.

FUNCTION	FLOPPY DISK
DISK OPERATION	SAVE
FILE TYPE NAME	CONFIGURATION SDMMNL.CNF
Select OK to perform operation	OFF
A:\ LABEL: no label FREE: 1148928 Bytes	

STATUS: CONFIGURATION GRAPHICS DATA LOGGING SCREEN BUMP MULTIPLE WINDOW


HOW TO:

- 1 Set the HP 37717C to the configuration you wish to store. (**TRANSMIT**), (**RECEIVE**), (**OTHER**), (**RESULTS**) displays)
- 2 Choose DISK OPERATION [SAVE], FILE TYPE [CONFIGURATION] and enter the filename. See "Managing Files and Directories on Disk " page 140.
The filename extension is fixed as .CNF.
The filename can contain up to 8 alphanumeric characters.
- 3 Choose **OK** to save the current configuration to disk.
If you have entered a filename which already exists, a warning "File exists - are you sure you wish to continue" is displayed.
If YES is selected, the configuration will be saved.
To cancel, change OK to OFF and enter new filename. See "Managing Files and Directories on Disk " page 140.

Setting up a Title for Configurations in Instrument Store

Description

When storing configurations, you can give them an easily remembered title for identification at a later date.

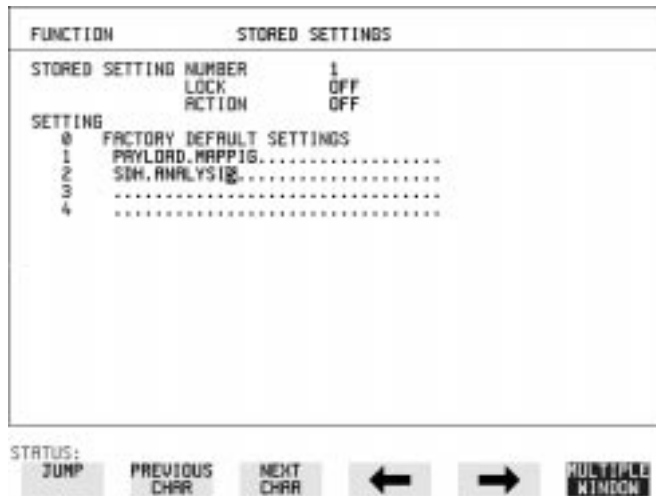

HOW TO:

- 1 Choose the STORED SETTING NUMBER which contains the stored configuration.
- 2 Choose LOCK [OFF].
- 3 The easiest method of titling is to use the pop-up menu available with **SET**.
Alternatively use **JUMP**; **NEXT CHAR**; **PREVIOUS CHAR**; **→** and **←** to title the settings.

Recalling Configurations from Instrument Store

Description

Having stored a configuration for future use, you must be able to recall that configuration in the future.



HOW TO:

- 1 Choose the STORED SETTING NUMBER which contains the stored configuration.
- 2 Choose ACTION **RECALL** to recall the stored configuration. The recall operation can be verified by checking the relevant display settings.

NOTE

LOCK can be set to [ON] or [OFF].

Formatting a Disk

Formatting a Disk

Description

Only 1.44M, MS-DOS compatible disks can be used in the HP 37717C. Any other format or capacity will result in a disk access error being displayed.



NOTE

Disks can be formatted in an IBM compatible PC (1.44M, MS-DOS only) but it is recommended that the disk is formatted in the HP 37717C as this will ensure full compatibility with the Floppy Disk power fail recovery included in the HP 37717C.

HOW TO:

- 1 Choose DISK OPERATION [DISK] [FORMAT].
- 2 Insert the Disk into the Disk drive.
- 3 Choose **OK** to Format the disk.
A warning that this operation will erase all data is displayed and asks "do you wish to continue".
If YES is selected, all the data on the Disk will be erased and the disk will be formatted.
If NO is selected, the operation is aborted. This allows you to view the data on the Disk and verify that it is no longer needed.

Labeling a Disk

Labeling a Disk

Description

You can label your disks for ease of identification.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[DISK]
	[LABEL]
LABEL	[MY DISK]
Select OK to perform operation	<input type="checkbox"/>	OFF
A:\	LABEL: MY DISK	FREE: Bytes

STATUS:

 OFF OKMULTIPLE
WINDOW**HOW TO:**

- 1 Choose DISK OPERATION [DISK] [LABEL].
- 2 Enter the label. The easiest method of labeling is to use the pop-up menu available with **SET**. See "Managing Files and Directories on Disk " page 140.
Alternatively use **JUMP**; **NEXT CHAR**; **PREVIOUS CHAR**; **→** and **←** to label the Disk.
- 3 Choose **OK** to confirm the label is correct.
The label is displayed at the bottom of the display to confirm the operation has taken place.

Managing Files and Directories on Disk

Description

File and Directory structures can be important in speeding up the transfer of data between the instrument and the disk drive.

It is recommended that you create different directories for the different applications, for example:

A:\GRAPHICS

A:\LOGGING

A:\CONFIG

NOTE

As the number of files in a directory increases, filename access via the pop-up menu becomes progressively slower.

File and Directory names, File descriptors, Instrument Store Descriptors and Disk labels, can be entered in two ways:

- Pop-Up File List and File Name Menus
- By Softkey Entry

Using Instrument and Disk Storage
Managing Files and Directories on Disk



HOW TO:

Enter Using Pop-Up File List and File Name Menus

To view a directory:


- 1 Set DISK OPERATION to **SAVE** or **RECALL**.
- 2 Set FILE TYPE to the type of directory, **CONFIGURATION**, **GRAPHICS**, **DATA LOGGING** or **SCREEN DUMP**.
- 3 move the cursor to the NAME field and press **SET**.

```
Stored Measurement Graphics Files - A:  
GRAPHICS *.SMG  
NEW.. (Press SET to enter new file name)  
.\          \      0 JUL-04-1996 09:51:58  
..          \      0 JUL-04-1996 09:51:58  
PDH1.SMG    13564 JUL-04-1996 10:00:56  
PDH3.SMG    13564 JUL-04-1996 10:15:24  
MEAS001.SMG 13466 JUL-19-1996 08:07:54  
MEAS002.SMG 13466 JUL-19-1996 08:08:40  
SDH1.SMG    13466 JUL-19-1996 08:12:50  
SDH2.SMG    13466 JUL-19-1996 08:13:36  
SDH3.SMG    13466 JUL-19-1996 08:14:00  
MEAS003.SMG 13466 JUL-19-1996 08:14:54  
MEAS004.SMG 13466 JUL-19-1996 08:15:20  
SDH4.SMG    13466 JUL-19-1996 08:15:44  
NEXT PAGE ->
```

Move the highlighted cursor up and down the display using  and .

- **Title Bar** - File types displayed and current directory. (cannot be highlighted).
- . \ - Current Directory.
- .. \ - Parent directory. Move highlighted cursor to this line and press **SET** to move to parent directory.
- **PDH1.SMG** - File (with named extension) in current directory. Move highlighted cursor to this line and press **SET** to select the file. The display will return to the FLOPPY DISK display and the selected file name will appear in the FILE NAME field.
- **NEXT** - Move highlighted cursor to this line and press **SET** to access the next page of file names.
- **PREV** - Move highlighted cursor to this line and press **SET** to access the previous page of file names.
- **NEW..** - Allows entry of new file name using pop-up keypad. Press **SET** to obtain the pop-up keypad display.

Using Instrument and Disk Storage
Managing Files and Directories on Disk

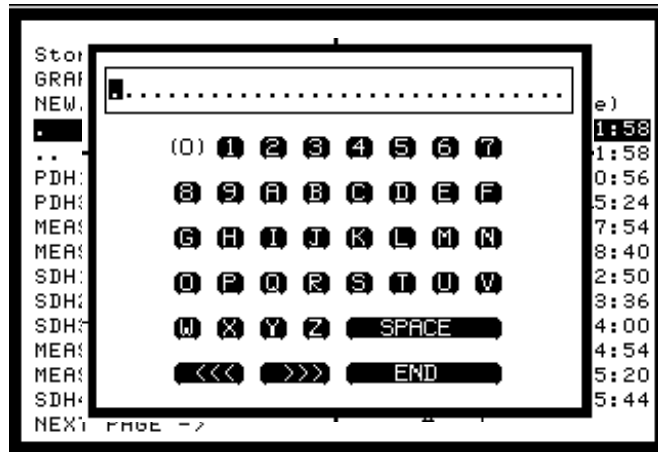

- 4 Use to move across the rows and to move up and down the columns.
- 5 Choose the character required and press . Repeat until the filename is entered.
- 6 Choose END and press to return to the file manager display.
- 7 Press to return to the SAVE display.
 The filename entered via the keypad appears on the SAVE display.
 The file extension .SMG has been added automatically.
 The Directory name and the disk Label appear at the bottom of the display.

The Pop-Up keypad display can also be used to enter file and directory names, File descriptors, Instrument Store Descriptors and Disk labels.

Using Instrument and Disk Storage

Managing Files and Directories on Disk

Move the highlighted cursor to the enter field and press **SET** to obtain the pop-up keypad display

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[SAVE]
FILE TYPE NAME	[GRAPHICS] [FILENAME.SMG]
A:\ GRAPHICS LABEL: MY DISK	FREE: Bytes

STATUS:
SAVE **RECALL** **FILE** **DISK** **MULTIPLE WINDOW**

HOW TO:

Enter Using Softkey

- Use the **PREVIOUS CHAR** **NEXT CHAR** **→** **←** softkeys. This method is limited to entering Disk labels, file descriptors, file names, or a directory name when creating a directory. It cannot be used to navigate through the directory structure. This provides a quick method if the new filename is similar to the filename currently displayed, for example: Filename displayed PDH1 and new filename required is PDH2 - use **→** to move the cursor to the 1 and press **NEXT CHAR**

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[SAVE]
FILE TYPE NAME	[CONFIGURATION] [FILENAME.CNF]
Select OK to perform operation	[OFF]
A:\ LABEL:	FREE: Bytes

STATUS:
CONFIGURATION **GRAPHICS** **DATA LOGGING** **MULTIPLE WINDOW**

Adding Descriptors to Disk Files

Description

When storing configurations or graphics on disk, you can give them an easily remembered descriptor for identification at a later date.

Descriptors can be added to .CNF and .SMG files.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
DISPLAY OPTION	[FILE DESCRIPTOR]
FILE NAME	FILENAME.CNF
DESCRIPTOR
Press SET to select Filename popup	
Select OK to perform operation	[OFF]
A:\	
LABEL:	FREE: Bytes

STATUS:

TIME
& DATE

FILE
DESC

MULTIPLE
WINDOW

HOW TO:

- 1 Choose DISK OPERATION [FILE] [PROPERTIES] and DISPLAY OPTION [FILE DESCRIPTOR].
- 2 Move the highlighted cursor to the FILE NAME DESCRIPTOR field. Enter the file descriptor using the Pop-Up or Softkey methods. See "Managing Files and Directories on Disk " page 140. The "File List" pop-up will show the descriptor instead of the TIME and DATE information as long as FILE DESCRIPTOR is selected.

NOTE


This slows down the updating of the display.

Saving Graphics Results to Disk

Description

Graphics results can be saved to a file on disk. Two methods of naming the file, which is created when the measurement is started, are available:

- Automatic** A filename in the form meas001 is created automatically without any action from you.
- Your Choice** You can input a filename of your choice which will override the automatically generated filename. This must be entered before the measurement is started. If the filename you enter already exists, graphics results will be saved to the automatically generated filename. This prevents existing files from being overwritten each time the measurement is started.

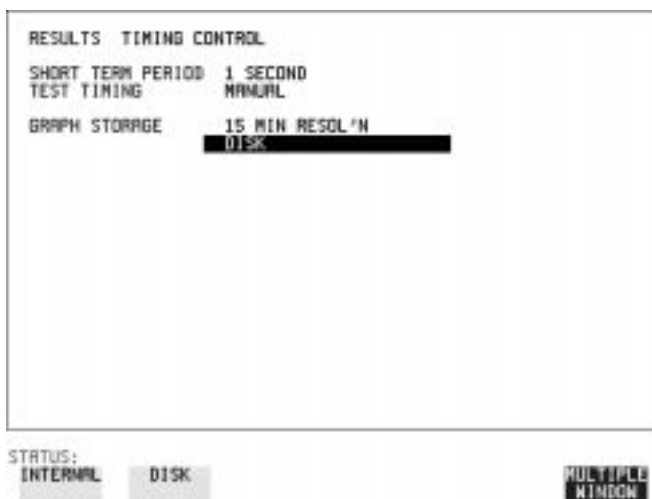

HOW TO:

- 1 Choose GRAPH STORAGE [DISK] and the Graph Storage resolution required on the **RESULTS** display. See "Saving Graphics Results to Instrument Store" page 112.
If you wish to use the automatically generated filename no further action is required and the graphics results will be saved on Disk when the measurement is started.

Using Instrument and Disk Storage

Saving Graphics Results to Disk

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[SAVE]
FILE TYPE	[GRAPHICS]
NAME	[FILENAME.SMG]
A:\ LABEL:	FREE: Bytes

STATUS:

CONFIG-
URATION

GRAPHICS

DATA
LOGGING

MULTIPLE
WINDOW

- 2 If you wish to enter your own choice of filename, choose DISK OPERATION [SAVE], FILE TYPE [GRAPHICS] on the **OTHER FLOPPY DISK** display.
- 3 Move the highlighted cursor to NAME and enter the filename (up to 8 alphanumeric characters) using the Pop-Up or softkey methods. The filename extension is fixed as .SMG. See "Managing Files and Directories on Disk " page 140.
The graphics results will be saved on Disk while the measurement is in progress.

Saving Data Logging to Disk

Description

Data Logging can be saved to a file on disk. The disk can be transferred to a personal computer (PC) and the logging investigated at a later date.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[SAVE]
FILE TYPE	[DATA LOGGING]
NAME	[FILENAME.PRN]
	[APPEND TO FILE]
A:\	
LABEL:	FREE: Bytes

STATUS:

OVER-
WRITEAPPEND
TO FILEMULTIPLE
WINDOW

HOW TO:

- 1 Choose **OTHER** **FLOPPY DISK** DISK OPERATION [SAVE] FILE TYPE [DATA LOGGING] and enter your choice of filename. See "Managing Files and Directories on Disk " page 140.
The filename can contain up to 8 alphanumeric characters.
The filename extension is fixed as .PRN.
- 2 If you wish to add the data logging to a file which already exists, choose APPEND TO FILE. The data logging is added to the named file on Disk in the available free space.
If you wish to overwrite the contents of the named file with the data logging, choose OVERWRITE.
- 3 Set up the **OTHER** **LOGGING** display. See "Logging Results" page 120.

When the named file is opened, data logging is saved on the disk:

- As each logging output occurs during the measurement or
- **PRINT NOW** is pressed.

Recalling Configuration from Disk

Description

If a configuration has been stored on disk, you will need to recall it at some time in the future to configure the instrument.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[RECALL]
FILE TYPE	[CONFIGURATION]
NAME	[FILENAME.CNF]
Select OK to perform operation	[OFF]
A:\ LABEL:	FREE: Bytes
STATUS: CONFIG- URATION	GRAPHICS
	MULTIPLE WINDOW

HOW TO:

- 1 Choose **OTHER** **FLOPPY DISK** DISK OPERATION [RECALL] FILE TYPE [CONFIGURATION] and enter your choice of filename. See "Managing Files and Directories on Disk " page 140.
The filename can contain up to 8 alphanumeric characters.
The filename extension is fixed as .CNF.
- 2 To recall the configuration from disk to instrument, choose **OK**.
The recall operation can be verified by checking the relevant display settings.

Recalling Graphics Results from Disk

Description

If graphic results have been stored on disk, you will need to recall them in able to view the results on the **[GRAPH]** display.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[RECALL]
FILE TYPE NAME	[GRAPHICS] [FILENAME.SMG]
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE
WINDOW

HOW TO:

- 1 Choose **[OTHER]** **FLOPPY DISK** DISK OPERATION [RECALL] FILE TYPE [GRAPHICS] and enter your choice of filename. See "Managing Files and Directories on Disk " page 140.
The filename can contain up to 8 alphanumeric characters.
The filename extension is fixed as .SMG.
- 2 To recall the graphics results from disk to instrument, choose **OK**
- 3 To view the graphics results, see "Recalling Stored Graph Results" page 113.

Copying Configuration from Instrument Store to Disk

Description

If you have a configuration stored in the instrument store that you wish to use on another instrument, you can copy it to disk. The configuration can then be downloaded from the disk in to another HP 37717C **with the same options as the original instrument.**

FUNCTION	[FLOPPY DISK]	
DISK OPERATION	[FILE]	
	[COPY]	
[FROM:]	[CONFIGURATION]	
	[1][ATM2?.....]		
TO:	NAME	[FILENAME.CNF]
Select OK to perform operation			<input type="checkbox"/> OFF
A:\			
LABEL:	FREE:	Bytes	

STATUS:

OFF

OK

MULTIPLE
WINDOW

HOW TO:

- 1 Choose **OTHER** **FLOPPY DISK** DISK OPERATION [FILE] [COPY] [CONFIGURATION] and enter the Instrument Store number. The description which was displayed on the **OTHER** **STORED SETTINGS** display appears alongside the store number. If required the description can be modified using **JUMP** **NEXT CHAR** **PREVIOUS CHAR** **←** **→** softkeys.
- 2 Enter the filename the configuration is to be copied to. See "Managing Files and Directories on Disk " page 140. The file name can contain up to 8 alphanumeric characters. The filename extension is fixed as.CNF.
- 3 To copy the configuration from instrument to Disk choose **OK**. If you have entered a filename which already exists, a warning "File exists - are you sure" you wish to continue is displayed. If YES is selected, the data on the Disk will be overwritten. If NO is selected, the operation is aborted.

Copying Configuration from Disk to Instrument Store

Description

If you have a configuration stored in the instrument store that you wish to use on another instrument, you can copy it to Disk. The configuration can then be downloaded from the disk in another HP 37717C **with the same options as the original instrument.**

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
	[COPY]
	[CONFIGURATION]
[TO:]	[]
	[4][ATMTEST.....]
FROM:	[]
NAME	[FILENAME.CNF]
Select OK to perform operation	<input type="checkbox"/> OFF
A:\	
LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

HOW TO:

- 1 Choose OTHER FLOPPY DISK DISK OPERATION [FILE] [COPY] [CONFIGURATION] and enter the Instrument Store number. If you wish you can enter a description of the configuration. See "Managing Files and Directories on Disk " page 140. The description can contain up to 24 alphanumeric characters.
- 2 Enter the filename the configuration is to be copied from. See "Managing Files and Directories on Disk " page 140. The file name can contain up to 8 alphanumeric characters. The filename extension is fixed as .CNF.
- 3 To copy the configuration from Disk to instrument, choose OK . If you have entered a instrument store number which already contains a configuration, a warning "Are you sure you wish to continue" is displayed. If YES is selected, the data in the instrument store will be overwritten. If NO is selected, the operation is aborted.

Copying Graphics Results from Instrument Store to Disk

Description

You can copy Graphics Results from the instrument store to the Disk. This is useful under the following conditions:

- If you have graphics results stored in the instrument that you wish to prevent from being overwritten by a future measurement (only 10 store locations in the instrument)
- If you wish to retrieve the graphics results for viewing via a spreadsheet.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
	[COPY]
FROM:	[GRAPHICS]
STORE	[-9]
TO:	
NAME	[FILENAME.SMG]
FORMAT	[NORMAL]
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

HOW TO:

- 1 Choose **OTHER** **FLOPPY DISK** DISK OPERATION [FILE] [COPY] [GRAPHICS] and enter the Instrument Store number.
- 2 Enter the filename the graphic results are to be copied from. See "Managing Files and Directories on Disk " page 140. The file name can contain up to 8 alphanumeric characters. The filename extension is fixed as .SMG.
- 3 If you wish to view the graphic results at a later date via a spreadsheet, choose FORMAT [CSV]. CSV is Comma Separated Variable.

Copying Graphics Results from Instrument Store to Disk

- 4 If you wish to view the graphic results at a later date on an HP 3771C, choose FORMAT [NORMAL] .
- 5 To copy the configuration from instrument to Disk, choose **OK** .
If you have entered a filename which already exists, a warning "File exists - are you sure you wish to continue" is displayed.
If YES is selected, the data on the Disk will be overwritten.
If NO is selected, the operation is aborted.
This allows you the opportunity to view the data on the Disk and verify that it is no longer needed.

Deleting a File on Disk

Description

Obsolete files can be deleted as an aid to efficient file management.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
	[DELETE]
	[DELETE FILE]
NAME	[FILENAME.EXT]
Select OK to perform operation	<input type="checkbox"/>	OFF
A:\	FREE:	Bytes
LABEL:		

STATUS:

OFF

OK

MULTIPLE WINDOW

HOW TO:

- 1 Choose OTHER FLOPPY DISK DISK OPERATION [FILE] [DELETE] [DELETE FILE] and enter the filename to be deleted. See "Managing Files and Directories on Disk " page 140.
The file name can contain up to 12 alphanumeric characters, including the filename extension.
- 2 To delete the file choose OK .
A warning "Are you sure you wish to continue" is displayed.
If YES is selected, the file is deleted.
If NO is selected, the operation is aborted.
This prevents accidental deletion of a wanted file.

Deleting a Directory on Disk

Description

Obsolete Directories can be deleted as an aid to efficient file management.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
	[DELETE]
	[DELETE DIRECTORY]
Select OK to perform operation	<input type="checkbox"/>	OFF
A:\	FREE:	Bytes
LABEL:		

STATUS:

OFF

OK

MULTIPLE WINDOW

NOTE

A directory cannot be deleted until all the files within the directory have been deleted.

HOW TO:

- 1 Choose OTHER FLOPPY DISK DISK OPERATION [FILE] [DELETE] [DELETE DIRECTORY] .
- 2 If files need to be deleted to prepare the directory for deletion, see "Deleting a File on Disk " page 154.
- 3 Choose the directory you wish to delete (it will appear on the display). See "Managing Files and Directories on Disk " page 140.
- 4 To delete the directory choose OK .
A warning "Are you sure you wish to continue" is displayed.
If YES is selected, the directory is deleted.
If NO is selected, the operation is aborted.
This prevents accidental deletion of a wanted directory.

Renaming a File on Disk

Description

Files can be renamed as an aid to efficient file management.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE]
	[RENAME]
FROM:NAME	[FILENAME.CNF]
TO: DIRECTORY	A:\	
NAME	[FILENAME.CNF]
Select OK to perform operation	<input type="checkbox"/>	OFF
A:\		
LABEL:	FREE:	Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

HOW TO:

- 1 Choose OTHER FLOPPY DISK DISK OPERATION [FILE] [RENAME] and enter the FROM filename. See "Managing Files and Directories on Disk " page 140.
The filename, with extension, can contain up to 12 alphanumeric characters.
- 2 Choose the directory in which to locate the renamed file (it will appear on the display). See "Managing Files and Directories on Disk " page 140.
- 3 Enter the TO filename. See "Managing Files and Directories on Disk " page 140.
The filename can contain up to 8 alphanumeric characters.
The file extension is fixed to the FROM filename extension.
- 4 To rename the file choose OK .
If you have entered a filename which already exists, a warning "File exists - are you sure" you wish to continue is displayed.
If YES is selected, the data in the file will be overwritten. If NO is selected, the operation is aborted.
This allows you the opportunity to verify before renaming.

Creating a Directory on Disk

Description

Directories can be created as an aid to efficient file management.

FUNCTION	[FLOPPY DISK]
DISK OPERATION	[FILE] [CREATE DIRECTORY]
NAME	[ATM]
Select OK to perform operation	<input type="checkbox"/> OFF
A:\ CONFIG LABEL:	FREE: Bytes

STATUS:

OFF

OK

MULTIPLE WINDOW

HOW TO:

- 1 Choose OTHER FLOPPY DISK DISK OPERATION [FILE] [CREATE DIRECTORY] and enter the directory name. See "Managing Files and Directories on Disk " page 140.
The directory name can contain up to 8 alphanumeric characters.
- 2 To create the directory choose OK .
This will create a sub directory of the directory displayed at the bottom of the display. In this example A:\CONFIG\ATM will be created.

Using Instrument and Disk Storage
Creating a Directory on Disk


Selecting and Using "Other" Features

Coupling Transmit and Receive Settings

Description


When generating and measuring at the same interface level, you can have the transmit and receive settings coupled together. Any settings change made on the transmit display will automatically occur on the receive display. Any settings change made on the receive display will automatically occur on the transmit display.

This function is available on the **OTHER SETTINGS CONTROL** display.

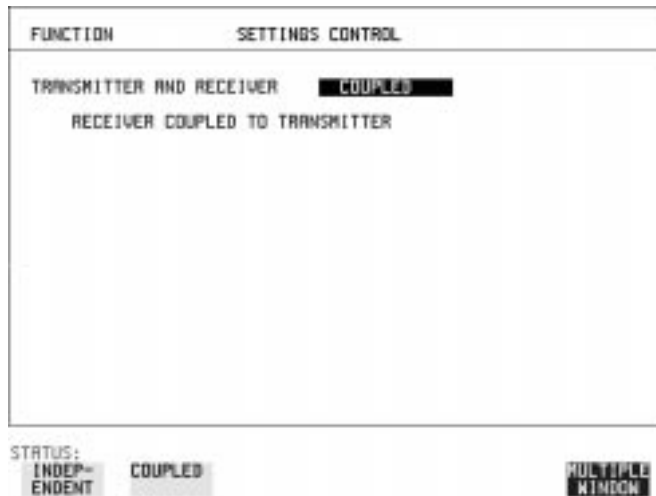

Suspending Test on Signal Loss

When running a test, you can choose to suspend the test during periods of signal loss.

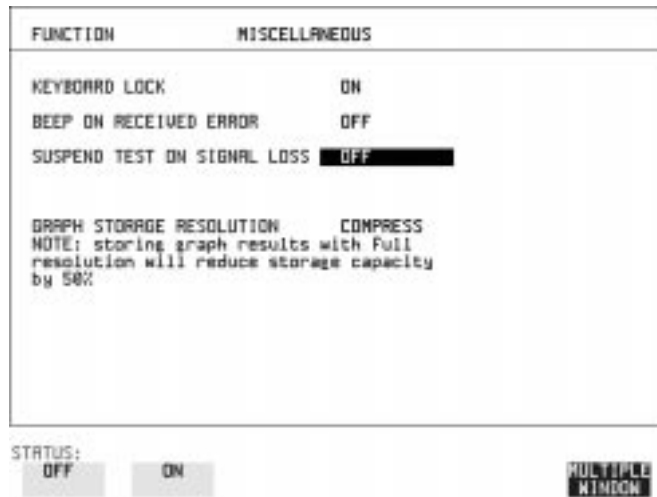

- 1 Select SUSPEND TEST ON SIGNAL LOSS [ON].


Setting Time & Date

Setting Time & Date

Description

When making Bit error measurements and recording results you can have certain events timed chronologically, for example, Alarms; Error Seconds.

The capability to set the Time and Date is provided on the **OTHER** display under the TIME & DATE function.

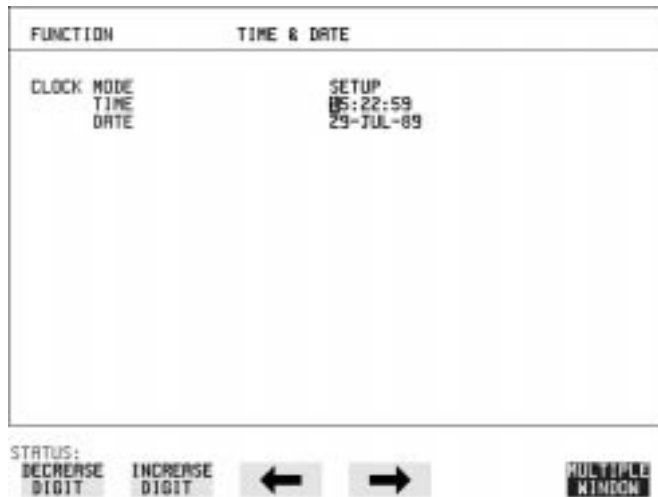

HOW TO:

- 1 Choose CLOCK MODE [SETUP] and set the Time and Date using the pop-up menu displayed with **SET** or the softkey method using **↑**; **↓**; **←**; **→**; **INCREASE DIGIT** and **DECREASE DIGIT**
- 2 Choose CLOCK MODE [RUN] to complete the setting of Time and Date.

Enabling Keyboard Lock

Description


You can protect the measurement settings from interference during a test. This facility is provided in the HP 37717C on the **OTHER** **MISCELLANEOUS** display.

The following keys are not affected by Keyboard Lock:

- Display keys **TRANSMIT**; **RECEIVE**; **RESULTS**; **GRAPH**; **OTHER**
- cursor keys **←** **↑** **↓** and **→**
- **SHOW HISTORY**
- **PAPER FEED**

The following display functions are not affected by Keyboard Lock:


- RESULTS type on the **RESULTS** display
- KEYBOARD LOCK on the **OTHER** display

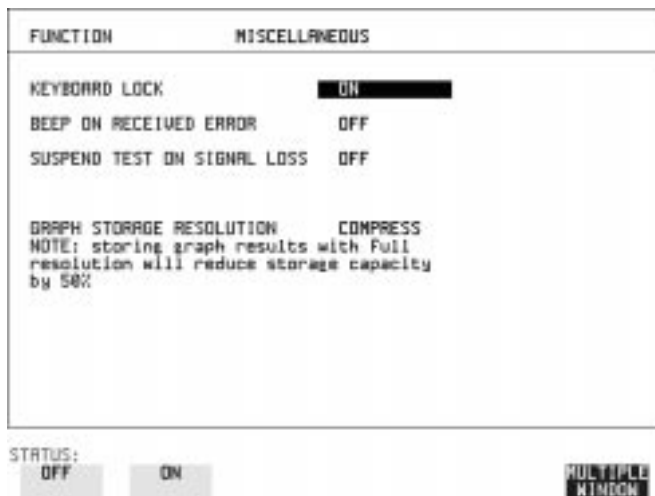

Enabling Beep on Received Error

Description

You can have an audible indication of an error which is particularly useful when the display on the test set is hidden from view. This function is provided in the HP 37717C on the **OTHER** **MISCELLANEOUS** display.

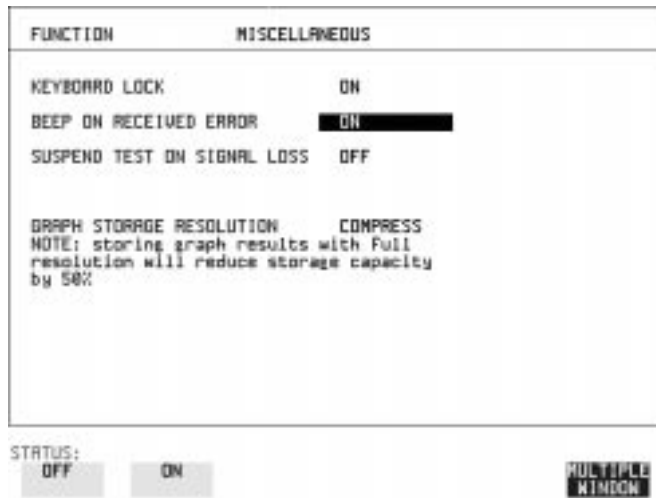

Enabling Analysis Control

Enabling Analysis Control

Description

When Option UKK, Unstructured PDH, is fitted, the HP 37717C allows a choice of Analysis results when testing and this choice is selected under ANALYSIS DISPLAY MODE.

This function is provided on the **OTHER MISCELLANEOUS** display.

FUNCTION	[MISCELLANEOUS]
KEYBOARD LOCK	[OFF]
BEEP ON RECEIVED ERROR	[OFF]
SUSPEND TEST ON SIGNAL LOSS	[OFF]
UPDH ANALYSIS DISPLAY MODE	[G.821]
GRAPH STORAGE RESOLUTION	[COMPRESS]
NOTE: storing graph results with full resolution will reduce storage capacity by 50%	


STATUS:
G.821 M.2100 MULTIPLE WINDOW

Setting Error Threshold Indication

Description

When making error measurements, you can have an indication of when an error count or error ratio threshold has been exceeded. You can set the HP 37717C to indicate this by a color change of the bar on the **GRAPH** display and the result on the **RESULTS** display.

You can choose the thresholds at which the color change (from yellow to red) occurs on the **OTHER COLOUR CONTROL** display. The Count and Ratio selections are independent.

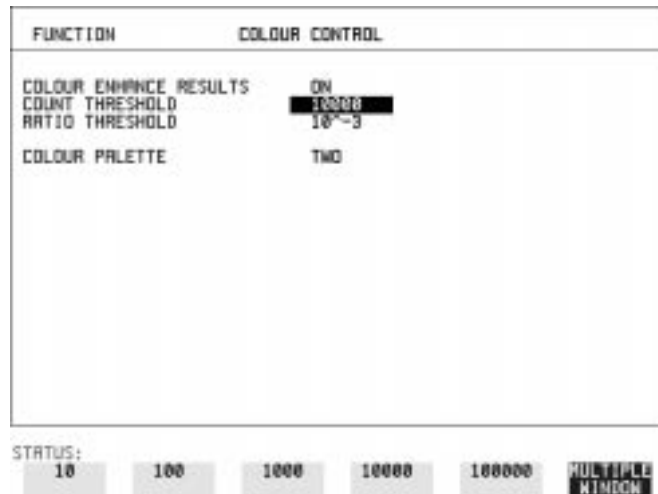

HOW TO:

- 1 Choose COLOR ENHANCE RESULTS [ON].
- 2 Choose the COUNT THRESHOLD and RATIO THRESHOLD.

Dumping Display to Disk

Description

The display may be “dumped” to a disk file using the “SCREEN DUMP” feature. When the logging control and floppy disk are set up for screen dump, the current display is dumped to disk with **PRINT NOW**.



- 1 Select **OTHER** , **LOGGING** and set LOGGING SETUP to [CONTROL].
- 2 Set LOG ON DEMAND to [SCREEN DUMP].
- 3 If compression is required to save disk space, select BITMAP COMPRESSION (RLE) [ON] .



Selecting and Using "Other" Features

Dumping Display to Disk

- 4 Select **OTHER**, **FLOPPY DISK** and set DISK OPERATION to [SAVE].
- 5 Set FILE TYPE to [SCREEN DUMP].
- 6 Enter the file name of your choice in NAME.

NOTE

Note that a screen dump file name can have a maximum of 8 characters with a fixed.BMP suffix, indicating a bitmap format.

The file name must satisfy DOS requirements, that is, there must be no spaces or other illegal characters. If you do not provide a file name for the screen dump, it will result in a filename being auto generated. The auto generated file name format is:

‘SDUMPxxx.BMP’

where ‘xxx’ is a numeric value in the range ‘001’ to ‘999’.

- 7 Select the display you want to dump to disk.
- 8 To start the screen dump press the **PRINT NOW** key.

Setting Screen Brightness and Color

Description

The HP 37717C screen can be set to single or two color using the COLOR PALETTE selection on the **OTHER**, **COLOR CONTROL** display.

The screen brightness can be set to full or half brightness. This allows the half brightness setting to be used either to prolong the life of the screen or when the room brightness is such that half brightness is more desirable.

If the brightness is set to FULL and there have been no key presses in the last hour, then the screen automatically dims to the half brightness level and the status message "Display set to half brightness" is shown. Any key press will return the screen to full brightness.


FUNCTION	COLOR CONTROL
COLOR ENHANCE RESULTS	ON
COUNT THRESHOLD	10000
RATIO THRESHOLD	10 ⁻³
COLOR PALETTE	TWO

STATUS: **ONE** **TWO** **MULTIPLE WINDOW**

Running Self Test

Description

Before using the HP 37717C to make measurements, you can run Self Test ALL TESTS to ascertain the integrity of the HP 37717C. These tests take between 15 minutes and 1 hour to complete depending on the options fitted.

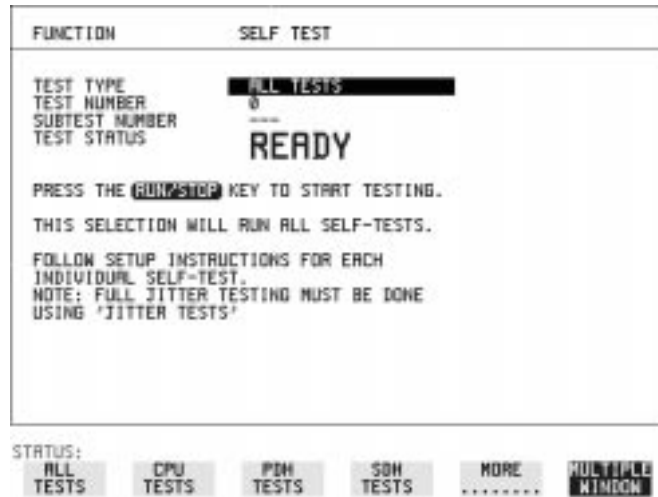

HOW TO:

- 1 Set up the [OTHER] display as shown above using [OTHER], [MORE] and [SELF TEST]
- 2 Insert a formatted disk into the instrument disk drive.
- 3 Make the required loopback connections.
The loopback connections required depend on the TEST TYPE selection.
The following loopback connections are for the ALL TESTS selection.

PDH Loopbacks:

Connect 75 Ω Signal In to 75 Ω Signal Out.

Connect 120 Ω Signal In to 120 Ω Signal Out.

If Option UKJ or 110 is fitted, connect MUX port to DEMUX port.

Selecting and Using "Other" Features

Running Self Test

If Option UH3 is fitted, connect Clock Out to Clock In and Data Out to Data In.

SDH Loopbacks:

Connect the STM-1 IN port to the STM-1 OUT port.

Optical Interface Loopbacks:

Connect the IN port to the OUT Port.

CAUTION

If Option URU, STM-1/STM-4 Optical Interface, is fitted, connect an Optical attenuator, set to 10 dB, between the IN and OUT Ports. **Failure to attenuate the optical signal from option URU could result in damage to the optical receiver.**

NOTE

If Option USN, UKT or 130, Dual Wavelength Optical Interface, is fitted, connect the **1310 nm** OUT port to the IN port. Do not connect the **1550 nm** OUT port to the IN port.

NOTE

If any or all of these connections are not made the HP 37717C will FAIL Self Test.

- 4 Press **RUN/STOP** to activate the Self Test. TEST STATUS [RUNNING] will be displayed. The information pertaining to TEST TYPE, TEST NUMBER and SUBTEST NUMBER will change as the Self Test progresses.

If the HP 37717C is functioning correctly, after a time of between 15 minutes and 1 hour, TEST STATUS [PASSED] is displayed. If TEST STATUS [FAIL nnn] is displayed, the HP 37717C should be returned to a service office for repair. FAIL Error Numbers are listed and defined in the Self Test Error Codes manual (part number 37717-90412).

Running Self Test

Additional Tests


Some options require additional tests to be carried out to completely verify the option integrity. These require different connections and the tests run individually.

RS-232-C Tests:

If Option A3B or A3D is fitted, the RS-232-C interface is not fully tested.

To fully test RS-232-C:

- 1 Choose CPU TESTS.
- 2 Fit a special RS-232 connector with looping links as shown:

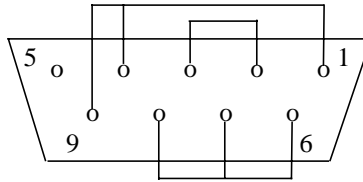

- 3 Run the CPU TESTS.

Line Jitter Tests:

If Option A3L, A3V, A3N, A1M, A1N or A1P, SDH Line Jitter, is fitted, the full set of jitter tests are not included under ALL TESTS.

To fully test SDH Line Jitter:

- 1 Choose JITTER TESTS.
- 2 Connect STM-1 OUT from the SDH module to STM-1E IN on the RX Jitter module.
- 3 For Options A1N and A1P only connect STM-1/STM-4 OUT on the Optical Module to STM-1/STM-4 IN on the RX Jitter module.
- 4 Run the JITTER TESTS.

1550 nm Dual Wavelength Tests:

If Option USN, Dual Wavelength Optical Interface, is fitted, the 1550 nm tests are not included under ALL TESTS.

To complete the 1550 nm tests:

- 1 Choose STM-1/STM-4 OPTICS TESTS.

Selecting and Using "Other" Features

Running Self Test

- 2 Connect STM-1/STM-4 1550 nm OUT to STM-1/STM-4 1550 nm IN via an Optical Attenuator set to 10 dB.
- 3 Run the STM-1/STM-4 OPTICS TESTS.

Datacomm Tests:

If Option A1T[A1U] or A3R [A3S], SDH Module, is fitted, the Datacomm RS449 port is not tested under ALL TESTS

To test the Datacomm port:

- 1 Choose SDH TESTS.
- 2 Make the following connections on the Datacomm port.



- 3 Run the SDH TESTS.

Selecting and Using "Other" Features
Running Self Test

Appendix A

STS-1 SPE Background Patterns

The following tables list the background patterns available when selecting specific foregrounds.

STS-1 SPE Background Patterns

Table 2 STS-1 SPE Background Patterns

Foreground	Background choice in Foreground TUG-3	Background choice in other AU-3
STS-1 SPE	-----	VT-1.5, VT-2 Mapping or SPE Word (8 bit user programmable word).
VT-6	Pattern in other VT-6s is numbered. They contain the word 11NNNNNx, where NNNNN is the binary number of the TU.	VT-1.5, VT-2 Mapping or SPE Word (8 bit user programmable word).
VT-2 (2 Mb/s) Unframed	VT-2 structure, unframed with 2E15-1, 2E9-1 PRBS or 1100 word pattern in all information bits.	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).
VT-2 (2 Mb/s) Framed	VT-2 structure, framed with 2E15-1, 2E9-1 PRBS, NUMBERED or 1100 word pattern. In Numbered mode, each timeslot contains the pattern 0NNNNNNX where NNNNNN is the binary number of the TU. The least significant digit (X) is alternated between 0 and 1 in successive frames.	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).
VT-1.5 (DS1) Unframed	VT-1.5 structure, D4 framed with 2E15-1, 2E9-1 PRBS or 1100 Word pattern in other TU-11s.	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).
VT-1.5 (DS1) Framed	VT-1.5 structure, DS1, D4 framed with 2E15-1, 2E9-1 PRBS, NUMBERED or 1100 word pattern in other TU-11s. In Numbered mode, each timeslot contains the pattern 1NNNNNN1 where NNNNNN is the binary number of the TU. Framing type will be the same as the foreground except when SLC96 is selected. In this case, D4 framing is inserted in the background	VT-2, VT-1.5 Mapping or SPE Word (8 bit user programmable word).

Appendix B

ETSI/ANSI Terminology

A table of ETSI terms with their ANSI equivalents.

ETSI/ANSI Conversion and Equivalent Terms

Introduction

The terminology used on the instrument display can be ETSI (SDH) or ANSI (SONET) terminology. Refer to the table given in this appendix for an explanation of equivalent SDH/SONET terms.

ETSI: European Telecommunications Standards Institute.

ANSI: American National Standards Institute.

Table 3 ETSI / ANSI Terminology

ETSI Term	ANSI Term
AU-3	STS-1 SPE + H1, H2, H3
AU-4	STS-3c SPE + H1, H2, H3
BIP (Bit Interleaved parity)	CV (Code Violation)
High Order Path (HP / HO)	STS Path
I-n Intra Office, (n=STM-n level)	Intermediate Reach (IR)
L-n.1 or L-n.2 long haul	LR long reach
Low Order Path (LP / LO)	VT Path
LP-REI	REI-V
M.S.P	A.P.S
Multiplexer Section (MS)	Line
Multiplexer Section Protection	Automatic Protection Switching
MS-AIS	Line AIS / AIS-L
MS-BIP	Line CV / CV-L
MS-DCC	Line DCC / DCC-L

ETSI/ANSI Terminology
ETSI/ANSI Conversion and Equivalent Terms

Table 3 **ETSI / ANSI Terminology , continued**

ETSI Term	ANSI Term
MS-REI	Line FEBE / REI-L
MS-RDI	Line FERF / RDI-L
Multiplexer Section Overhead	Line Overhead
Network Node Interface	Line Interface
OOF	SEF (severely errored frame defect)
Path AIS / AU-AIS	AIS-P
Path REI / HP REI	REI-P
Path FERF / HP RDI	RDI-P
Path IEC / AU-IEC	IEC-P
Path Overhead	Path Overhead
Regenerator	Repeater
Regenerator Section (RS)	Section
Regenerator Section Overhead	Section Overhead
Remote Alarm Indicator	RAI
RS-DCC	Section DCC (DCC-S)
Section Overhead (SOH)	Transport Overhead (TOH)
S-n.1 or S-n.2 short haul	Short Reach (SR)
SOH	TOH
STM-m	OC-n / STS-n (where $m = n + 3$ for $m \geq 1$)
STM-0	STS-1
STM-1	OC3c / STS-3c
STM-4	OC-12 / STS-12
STM-16	OC-48 / STS-48

Table 3 **ETSI / ANSI Terminology , continued**

ETSI Term	ANSI Term
Tributary Unit (TU)	Virtual Tributary (VT)
TU	VT
TU-11	VT 1.5
TU-12	VT 2
TU-2	VT 6
TU-3	NONE
TU BIP	VT BIP (CV-V)
TU RDI / LP-RDI	RDI-V
TUG	VT Group
TUG2	VT Group (12 columns)
TUG3	VT Group (86 columns)
TU multiframe	VT superframe
TU PATH AIS	VT AIS (AIS-V)
VC	SPE
VC4	STS3C SPE
Virtual Container (VC)	Synchronous Payload Envelope (SPE)

NOTE: VC is an ETSI abbreviation for Virtual Container and an ETSI / ANSI abbreviation for (ATM) Virtual Channel. The context of VC must therefore be taken into account when converting between standards.

Index

A

Alarm monitoring, ATM, 110
Alarm scan
 PDH, 103
 SDH, 101
Alarms & errors
 ATM add, 65
 PDH add, 60
 PDH payload add, 60
 SDH add, 59
Analysis
 control, 165
 display mode, 165
 measurement PDH, 85
 measurement PDH payload, 85
 measurement SDH, 84
Analysis UPDH type selection, 165
APS messages, 78
 generation, 78
 monitoring, 31
 test function, 78
ATM alarm monitoring, 110
ATM Cell Delay Variation, 109
ATM measurements, making, 106
ATM Non-Conforming cells, 109
ATM payloads
 physical receive interface selection, 25
 physical transmit interface selection, 12
 receive selection, 105
 transmit selection, 56
AU-3 Background Patterns, 176
Automatic protection switch
 message generation, 78
Autosetup, 16

B

B/G mapping selection SDH, 6
B/G payload selection ATM transmit, 56
Background mapping selection SDH, 6
Background Patterns, 176
Background payload selection
 ATM transmit, 56
Beep on received error, 164
Binary interface
 receive PDH, 20
 receive SDH, 21
 transmit PDH, 4
 transmit SDH, 6

C

Capture overhead, 35
Cell delay variation measurement, ATM,
 107
Cell misinsertion and loss
 payload selection, 56
Cell transfer delay measurement, ATM,
 107
Centronics printer, 123
Colour control for error threshold indica-
 tion, 166
Configuration
 copy from disk to instrument, 151
 copy from instrument to disk, 150
 recall from disk, 148
 recall from instrument, 137
 store in instrument, 134
 store on disk, 135
 title in instrument, 136
Copy configuration
 from disk to instrument, 151
 from instrument to disk, 150
Coupling, 160
Create directory, 157
Cross cell
 ATM Transmit, selection and use, 56

D

Date & time, 162
DCC
 drop, 79
 insert, 79
DCC Insert test function, 79
Delay measurement
 payload selection, 56
Delete
 directory, 155
 file, 154
Directory
 create, 157
 delete, 155
 management, 140
Disk
 adding descriptors to files, 144
 copy configuration from instrument, 150
 copy configuration to instrument, 151
 copy graphics results from instrument,
 152

 create directory, 157
 data entry using pop-up file list, 141
 data entry using softkeys, 143
 delete directory, 155
 delete file, 154
 format a disk, 138
 label a disk, 139
 managing directories, 140
 managing files, 140
 recall configuration, 148
 recall graphics results, 149
 rename a file, 156
 save data logging, 147
 save graphics results, 145
Drop
 DCC, 79
 external payload/test signal, 54
Dumping Display to Disk, 167

E

Error Burst Definition
 Service Disruption, 98
Error Indication
 Audio setting, 164
Error threshold indication
 setting, 166
Errors & alarms
 ATM add, 65
 PDH add, 60
 PDH payload add, 60
 SDH add, 59
Errors and alarms ATM test function, 65
Errors and alarms PDH test function, 60
Errors and alarms SDH test function, 59
ETSI/ANSI Conversion, 178
Expert mode ATM header selection, 104
External
 payload/test signal drop, 54
 payload/test signal insert, 52
External printer
 connecting to parallel port, 128

F

F/G mapping selection SDH, 6
F/G payload selection ATM, 56
File
 delete, 154
 descriptors, 144

Index

- management, 140
- rename, 156
- Foreground mapping selection SDH, 6
- Foreground selection
 - ATM, 56
- Format a disk, 138
- Frequency measurement, 91
- Frequency offset
 - PDH, 39
 - SDH, 37
 - SDH line rate, 37
 - SDH tributary, 38
- G**
 - G.821 analysis measurement, 85
 - G.821/M.2100 analysis selection, 165
 - G.826 analysis measurement, 85
- Graphics
 - copy results from instrument to disk, 152
 - logging displays, 119
 - recall results from disk, 149
 - recall stored results, 113
 - saving results to disk, 145
 - saving to instrument, 112
 - storage resolution, 112
 - viewing error & alarm summaries, 117
 - viewing the bar graphs, 115
- H**
 - HP path label monitoring, 31
 - HP-IB printer, 124
- I**
 - Insert
 - DCC, 79
 - external payload/test signal, 52
 - Interface selection UNI/NNi, 104
 - Internal printer
 - change paper, 129
 - logging, 125
 - print head cleaning, 132
- J**
 - J1, J2 and H4 overhead byte setting, 29
 - Jitter
 - measurement, 87
 - receive interface, 23
 - transmit interface, 9
- K**
 - Keyboard lock, 163
- L**
 - Labeling a disk, 139
 - Labels, overhead monitoring, 31
 - Lock keyboard, 163
- Logging
 - content, 122
 - control, 121
 - device, 122
 - error event, 120
 - graph displays, 119
 - log on demand, 122
 - result logged, 121
 - results, 120
 - test period, 120
 - to Centronics printer, 123
 - to disk, 147
 - to HP-IB printer, 124
 - to internal printer, 125
 - to RS-232-C printer, 126
 - when, 121
- M**
 - M.2100/G.821 analysis selection, 165
 - M2100 analysis measurement, 85
 - M2110 analysis measurement, 85
 - M2120 analysis measurement, 85
- Managing
 - disk directories, 140
 - disk files, 140
- Measuring
 - frequency, 91
 - jitter, 87
 - optical power, 92
 - overhead BER, 82
 - PDH analysis, 85
 - round trip delay, 93
 - SDH analysis, 84
 - service disruption, 97
 - wander, 89
- Monitor
 - equalizer, 19
 - indicator, 19
 - receive overhead, 30
- MSOH
 - capture and display, 35
- insertion, 33
- MSP messages, 78
 - test function, 78
- Multiplexer section overhead
 - capture and display, 35
 - insertion, 33
- N**
 - NNI interface selection, 104
- O**
 - Optical
 - clock stress, 77
 - power measurement, 92
 - Overhead
 - all data, 29
 - all labels, 29
 - APS messages monitoring, 31
 - BER test, 82
 - capture, 35
 - default transmit, 28
 - H4 byte sequences, 29
 - Labels monitoring, 31
 - monitor receive, 30
 - path monitor, 31
 - path transmit, 29
 - sequence generation, 33
 - SOH monitor, 30
 - SOH transmit, 29
 - trace messages, 32
 - transmit, 28
 - Overhead capture
 - trigger, 35
 - Overhead capture test function, 35
 - Overhead sequence
 - repeat run, 33
 - single run, 33
- P**
 - Paper change
 - internal printer, 129
 - Parallel port
 - connecting Centronics printer, 128
 - Path overhead
 - capture and display, 35
 - insertion, 33
 - Payload
 - analysis measurement, 85

Index

- ATM receive, 105
 - ATM transmit, 56
 - errors & alarms, 60
 - framing SDH transmit, 7
 - framing, SDH receive, 21
 - insert external, 52
 - N X 64 kb/s receive, 50
 - N X 64 kb/s transmit, 48
 - PDH receive, 19
 - PDH transmit, 3
 - SDH receive, 21, 45
 - SDH transmit, 7, 43
 - spare bits, 66
 - PDH**
 - alarm scan, 103
 - analysis measurement, 85
 - autosetup, 16
 - binary interface receive, 20
 - binary interface transmit, 4
 - errors & alarms, 60
 - external test signal drop, 54
 - external test signal insert, 52
 - frequency measurement, 91
 - frequency offset, 39
 - N X 64 kb/s test signal receive, 50
 - N X 64 kb/s test signal transmit, 48
 - payload, receive, 19
 - payload, transmit, 3
 - receive interface, 18
 - spare bits, 66
 - structured test signal receive, 45
 - structured test signal transmit, 43
 - telephone handset, 47
 - transmit interface, 2
 - POH**
 - capture and display, 35
 - insertion, 33
 - monitor, 31
 - setting, 29
 - Pointer adjustments
 - burst, 67
 - G.783, 68
 - new pointer, 67
 - offset, 68
 - Pointer adjustments test function, 67
 - Pointer graph, 75
 - Print head cleaning, 132
 - Printer
 - Centronics, 123
 - Centronics, connecting to parallel port, 128
 - Centronics, logging to, 123
 - HP-IB, 124
 - HP-IB, logging to, 124
 - internal, changing paper, 129
 - internal, cleaning print head, 132
 - internal, logging to, 125
 - RS-232-C, logging to, 126
 - Printing results from disk, 127
 - R**
 - Recall
 - configuration from disk, 148
 - configuration from instrument, 137
 - graphics results from disk, 149
 - stored graph results, 113
 - Receive interface
 - binary PDH, 20
 - binary SDH, 21
 - jitter, 23
 - PDH, 18
 - physical for ATM payloads, 25
 - SDH, 21
 - Receive settings
 - Coupled to transmit, 160
 - Regenerator section overhead
 - capture and display, 35
 - insertion, 33
 - Rename a file, 156
 - Round trip delay, 93
 - RS-232-C
 - logging to printer, 126
 - RSOH**
 - capture and display, 35
 - insertion, 33
 - S**
 - S1 sync status monitoring, 31
 - Save
 - data logging to disk, 147
 - graphics results to disk, 145
 - graphics results to instrument, 112
 - Screen dump to disk, 167
 - SDH
 - alarm scan, 101
 - analysis measurement, 84
 - APS messages, 78
 - binary interface receive, 21
 - binary interface transmit, 6
 - DCC insert, 79
 - errors & alarms add, 59
 - external payload drop, 54
 - external payload insert, 52
 - frequency measurement, 91
 - frequency offset, 37
 - line rate offset, 37
 - Mapping selection, 6
 - MSP messages, 78
 - N X 64 kb/s payload receive, 50
 - N X 64 kb/s payload transmit, 48
 - optical clock stress, 77
 - optical power measurement, 92
 - overhead BER test, 82
 - overhead capture, 35
 - overhead monitor, 30
 - overhead sequences, 33
 - overhead trace messages, 32
 - overhead transmit, 28
 - payload, receive, 21
 - payload, transmit, 7
 - pointer adjustments, 67
 - pointer graph, 75
 - receive interface, 21
 - service disruption measurement, 97
 - structured payload receive, 45
 - structured payload transmit, 43
 - thru mode, 14
 - transmit interface, 6
 - tributary rate offset, 38
 - tributary scan, 99
 - Self test, 170
 - Sequences
 - Overhead generation, 33
 - service disruption
 - DS1 and DS3, 98
 - Service disruption measurement, 97
 - Setting up Signaling Bits, 40
 - Short term period selection, 83
 - Signal Loss
 - suspending test on, 161
 - Signaling Bits
 - D4 and SLC-96 payloads, 96
 - Monitoring, 95
 - Signalling Bits
-

Index

ESF Payload, 96
Single cell
 ATM transmit, selection and use, 56
Single cell PRBS, 56
SOH
 Monitoring, 30
 Setting, 29
Spare bits, 66
Spare bits test function, 66
Store
 configuration in instrument, 134
 configuration on disk, 135
Stress test test function, 77
Suspending Test on Signal Loss, 161
Suspending test on signal loss, 161

T
Telephone handset, 47
Test cell
 ATM transmit, selection and use, 56
Test function
 APS messages, 78
 DCC insert, 79
 errors & alarms ATM, 65
 errors & alarms PDH, 60
 errors & alarms SDH, 59
 MSP messages, 78
 overhead BER test, 82
 overhead capture, 35
 pointer adjustments, 67
 pointer graphPointer graph test function,
 75
 sequence generationSequence genera-
 tion test function, 33
 spare bits, 66
 stress test, 77
 tributary scan, 99
Test period selection, 83
Test signal
 drop external, 54
 insert external, 52
 N X 64kb/s receive, 50
 N X 64kb/s transmit, 48
Test Timing, 83
Threshold indication setting, 166
Thru mode SDH, 14
Time & date, 162
Title for configuration, 136

Trace messages, 32
Transmit interface
 binary PDH, 4
 binary SDH, 6
 jitter, 9
 PDH, 2
 physical for ATM payloads, 12
 SDH, 6
 wander, 10
Transmit settings
 Coupled to Receive, 160
Tributary scan, 99

U
UNI interface selection, 104

V
Viewing
 bar graphs, 115
 graphics error & alarm summaries, 117
Voice channel
 round trip delay, 93
 telephone handset, 47

W
Wander
 bar graph, 90
 measurement, 89
 transmit interface, 10

Hewlett-Packard Sales and Service Offices

If you need technical assistance with a Hewlett-Packard test and measurement product or application please contact the Hewlett-Packard office or distributor in your country.

Asia Pacific:

Hong Kong:

Tel: (852) 2599 7889

India:

Tel: (91-11) 682-6000

Japan:

Hewlett-Packard Japan Ltd.
Measurement Assistance Center
9-1, Takakura-Cho, Hachioji-Shi,
Tokyo 192-8510, Japan

Tel: (81) 426-56-7832

Fax: (81) 426-56-7840

Korea:

Tel: (82-2) 769 0800

Malaysia:

Tel: (60-3) 291 0213

Philippines:

Tel: (63-2) 894 1451

People's Republic of China:

Tel: (86-10) 6505 0149

Singapore:

Tel: (1800) 292 8100

Taiwan:

Tel: (886-3) 492 9666

Thailand:

Tel: (66-2) 661 3900

For countries in Asia Pacific not listed, contact:

Hewlett-Packard Asia Pacific Ltd
17-21/F Shell Tower, Times Square,
1 Matheson Street
Causeway Bay
Hong Kong
Tel: (852) 2599 7777
Fax: (852) 2506 9285

Australia/New Zealand:

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
Australia
Tel: 1 800 629 485

Canada:

Hewlett-Packard Canada Ltd.
5150 Spectrum Way
Mississauga, Ontario
L4W 5G1
Tel: (905) 206 4725

Europe, Africa and Middle East:

Austria:

Tel: (0)1 25000-0

Belgium and Luxembourg:

Tel: (02) 778 3417

Baltic Countries:

Tel: (358) 08872 2100

Czech Republic:

Tel: 420-2-4743111

Denmark:

Tel: 45 99 10 00

Hewlett-Packard Sales and Service Offices (cont'd)

Finland:

Tel: (90) 88 721

France:

Tel: (0)1 69.82.60.60

Germany:

Tel: (0180) 532 62-33

Greece:

Tel: 30-1-7264045

Hungary:

Tel: 36-1-4618219

Ireland:

Tel: (01) 284 4633

Israel:

Tel: 972-3-5380333

Italy:

Tel: 02 - 92 122 241

Netherlands:

Tel: (020) 547 6669

Norway:

Tel: (22) 73 57 50

Poland:

Tel: 48-22-6087700

Portugal:

Tel: (11) 482 85 00

Russia:

Tel: (7/095) 928 6885

Fax: (7/095) 916 9844

South Africa:

Tel: 27-22-8061000

Spain:

Tel: (34) 1 631 1323

Sweden:

Tel: (08) 444 22 77

Switzerland:

Tel: (01) 735 7111

Turkey:

Tel: 90-212-2245925

United Kingdom:

Tel: (01344) 366 666

***For countries in Europe/Middle East
and Africa not listed, contact:***

Hewlett-Packard
International Sales Europe
Geneva, Switzerland
Tel: +41-22-780-4111
Fax: +41-22-780-4770

Latin America:

Hewlett-Packard
Latin American Region Headquarters
5200 Blue Lagoon Drive
9th Floor
Miami, Florida 33126
U.S.A.
Tel: (305) 267-4245
Tel: (305) 267-4220
Fax: (305) 267-4288

United States:

Hewlett-Packard Company
Test and Measurement Organization
5301 Stevens Creek Blvd.
Bldg. 51L-SC
Santa Clara, CA 95052-8059
Tel: 1 800 452 4844

About This Edition

This is the 1st edition of the 37717-90403 manual. It documents the product as of March 1998. Edition dates are as follows:

1st Edition, March 1998

© Copyright Hewlett-Packard Ltd. 1998. All rights reserved. Reproduction, adaption, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

In This Book

This book tells you how to select and use the various instrument functions available.

