
Contents

About This Document.....	1
1 Safety Precautions.....	1-1
2 Preparations for Site Maintenance.....	2-1
3 BTS3012 Hardware Maintenance.....	3-1
4 Powering On and Powering Off a BTS3012 Cabinet.....	4-1
4.1 Powering On the BTS3012 Cabinet.....	4-2
4.2 Powering Off a BTS3012 Cabinet.....	4-2
5 Installing the BTS3012 Boards and Modules (Capacity Expansion).....	5-1
5.1 Installing the BTS3012/BTS3012AE DDPU (Capacity Expansion).....	5-3
5.2 Installing the BTS3012/BTS3012AE DCOM (Capacity Expansion).....	5-5
5.3 Installing the BTS3012/BTS3012AE DTRU (Capacity Expansion).....	5-8
5.4 Installing the BTS3012/BTS3012AE DFCU (Capacity Expansion).....	5-10
5.5 Installing the BTS3012/BTS3012AE DFCB (Capacity Expansion).....	5-13
5.6 Installing the BTS3012 DELC (Capacity Expansion).....	5-17
6 Installing the Combined BTS3012 Cabinets and BTS3012 Cabinet Groups (Capacity Expansion).....	6-1
7 Replacing the BTS3012 Boards and Modules.....	7-1
7.1 Replacing the BTS3012/BTS3012AE Boards and Modules (Common Operations).....	7-3
7.1.1 Preparing for Replacing BTS3012/BTS3012AE Boards and Modules.....	7-3
7.1.2 Removing a Faulty BTS3012/BTS3012AE Board.....	7-5
7.1.3 Installing a BTS3012/BTS3012AE Board.....	7-7
7.1.4 Checking the Installed BTS3012/BTS3012AE Board.....	7-9
7.1.5 Handling the Replaced BTS3012/BTS3012AE Board and Module.....	7-10
7.2 Replacing a BTS3012/BTS3012AE DTMU.....	7-10
7.3 Replacing a BTS3012/BTS3012AE DCCU.....	7-12
7.4 Replacing a BTS3012/BTS3012AE DCSU.....	7-14
7.5 Replacing a BTS3012/BTS3012AE DATU.....	7-15
7.6 Replacing a BTS3012/BTS3012AE DTRU.....	7-16
7.7 Replacing a BTS3012/BTS3012AE DDPU.....	7-18
7.8 Replacing a BTS3012/BTS3012AE DCOM.....	7-20
7.9 Replacing a BTS3012/BTS3012AE DFCU.....	7-21

7.10 Replacing a BTS3012/BTS3012AE DFCB.....	7-23
7.11 Replacing a BTS3012/BTS3012AE DEMU.....	7-25
7.12 Replacing a BTS3012 DELC.....	7-26
7.13 Replacing a BTS3012 DMLC.....	7-28
7.14 Replacing a BTS3012 DSAC.....	7-29
8 Cleaning the Parts of a BTS3012 Cabinet.....	8-1
8.1 Cleaning the Fan Box.....	8-2
8.2 Cleaning the air filter of a BTS3012 cabinet.....	8-3
9 Replacing the Parts of a BTS3012 Cabinet.....	9-1
9.1 Replacing the Fan Box of a BTS3012/BTS3012AE Cabinet.....	9-2
9.2 Replacing the Air Filter of a BTS3012 Cabinet.....	9-3
9.3 Replacing the Busbar Power Switch of a BTS3012 Cabinet.....	9-4
10 Replacing the Parts of the Antenna System.....	10-1
10.1 Replacing the BTS Antenna.....	10-2
10.2 Replacing the TMA.....	10-3
10.3 Replacing the Feeder.....	10-5
11 Replacing the BTS3012 Cables.....	11-1
11.1 Replacing the BTS3012 E1 Cables.....	11-2
11.2 Replacing the BTS3012 Optical Cables.....	11-3
11.3 Replacing the BTS3012 Power Cables.....	11-4
11.4 Replacing the BTS3012 Signal Cables.....	11-6
11.5 Replacing the BTS3012 Indoor 1/2-Inch Jumpers.....	11-8

Figures

Figure 1-1 Wearing an ESD wrist strap.....	1-6
Figure 1-2 Fully unfolded A-shaped ladder.....	1-8
Figure 1-3 Ladder slant.....	1-9
Figure 1-4 Using the long ladder in a safe way.....	1-9
Figure 1-5 Ladder with its top end one meter above the eave.....	1-10
Figure 1-6 Hoisting a heavy object.....	1-10
Figure 1-7 Laying down and placing upright the cabinet.....	1-11
Figure 5-1 Data configuration of the DDPU.....	5-5
Figure 5-2 Data Configuration of the DCOM.....	5-7
Figure 5-3 Data Configuration of the DTRU.....	5-10
Figure 5-4 Data Configuration of the DFCU.....	5-13
Figure 5-5 Data configuration of the DFCB.....	5-16
Figure 6-1 Connecting combined cabinet on the top.....	6-3
Figure 6-2 Configuring the Attributes of BIE Boards.....	6-4
Figure 6-3 Configuring cabinets.....	6-5
Figure 6-4 Configuring the transmit/receive mode of TRXs.....	6-6
Figure 6-5 Configuring antenna attributes (uplink tributary 0).....	6-6
Figure 6-6 Configuring antenna attributes (uplink tributary 1).....	6-7
Figure 6-7 Configuring antenna attributes (downlink tributary).....	6-7
Figure 7-1 Wearing an ESD wrist strap.....	7-5
Figure 7-2 Removing the board.....	7-6
Figure 7-3 Inserting the board.....	7-8
Figure 7-4 Handling the clasping subrack.....	7-8
Figure 8-1 Position of the air filter.....	8-4

Tables

Table 3-1 Maintenance of the BTS3012 equipment room environment.....3-1

Table 3-2 Maintenance of the BTS3012 cabinet.....3-2

Table 3-3 Maintenance of the BTS3012 power supply and grounding system.....3-3

Table 3-4 Maintenance of the BTS3012 antenna system.....3-4

Table 11-1 Types and connections of BTS3012 signal cables.....11-6