



4.4 TUNER SCHEMATIC DIAGRAM

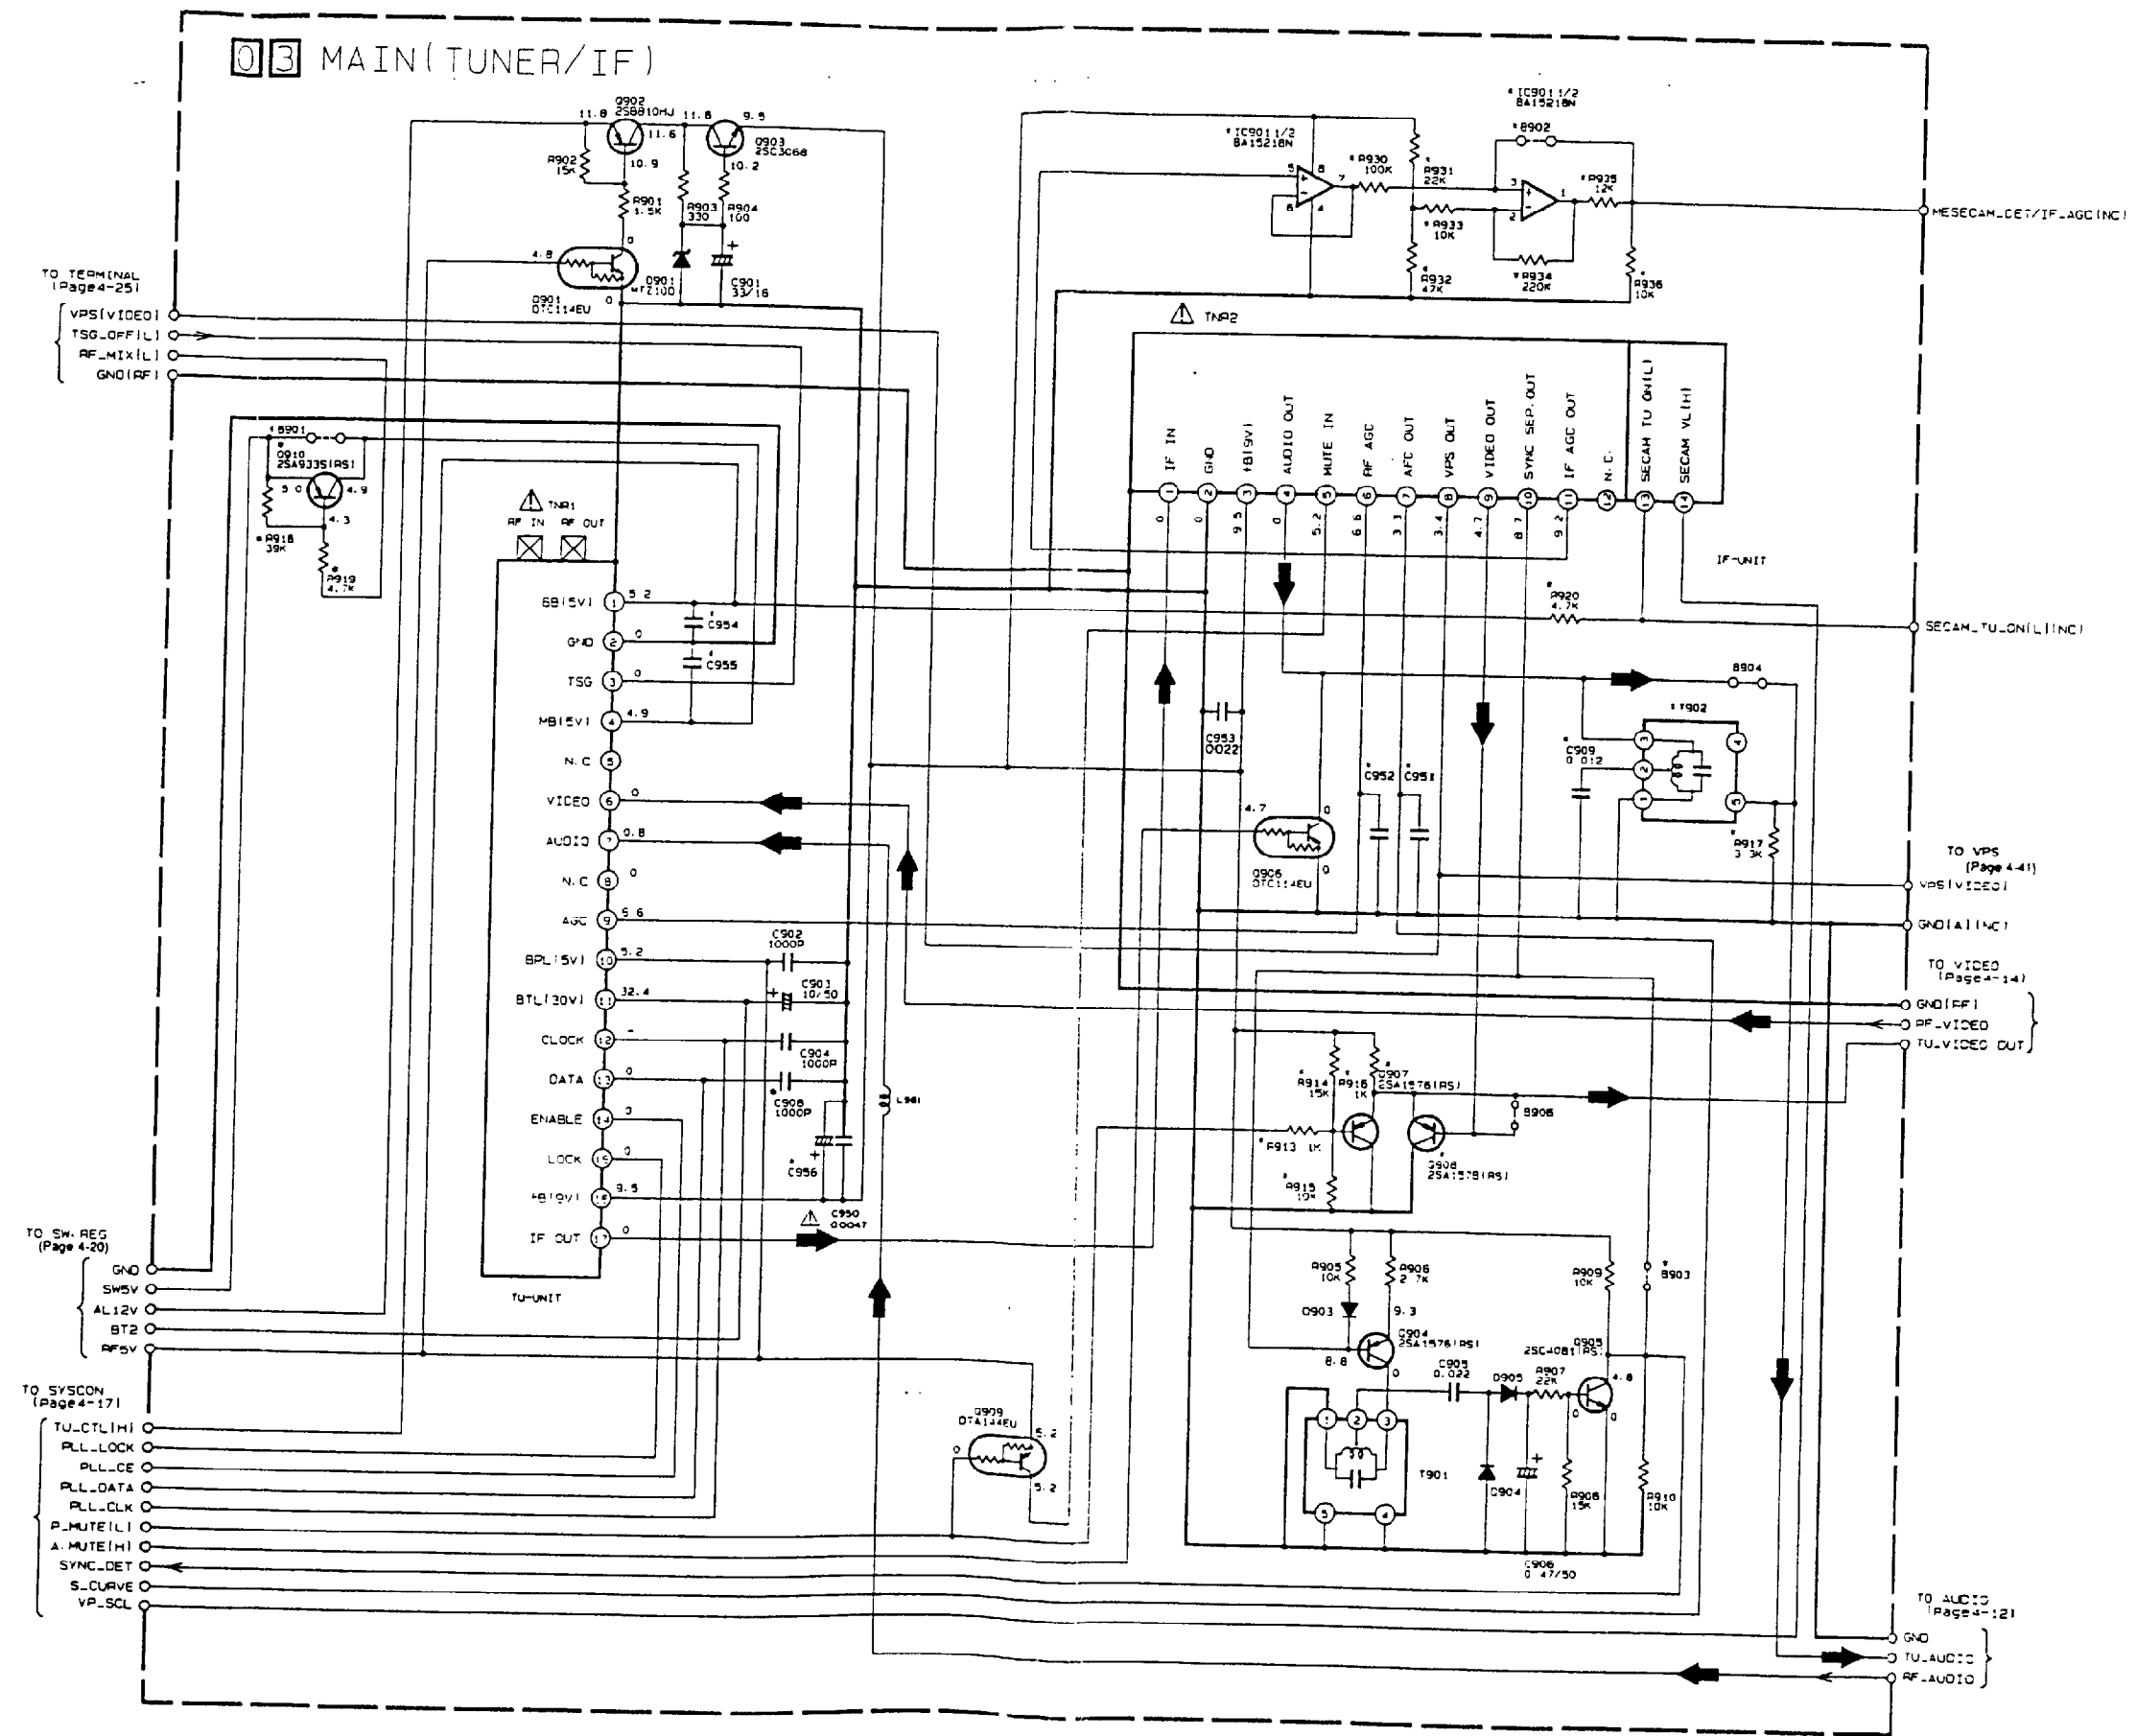


4.19 VPS SCHEMATIC DIAGRAM

— for HR-J425EG only —

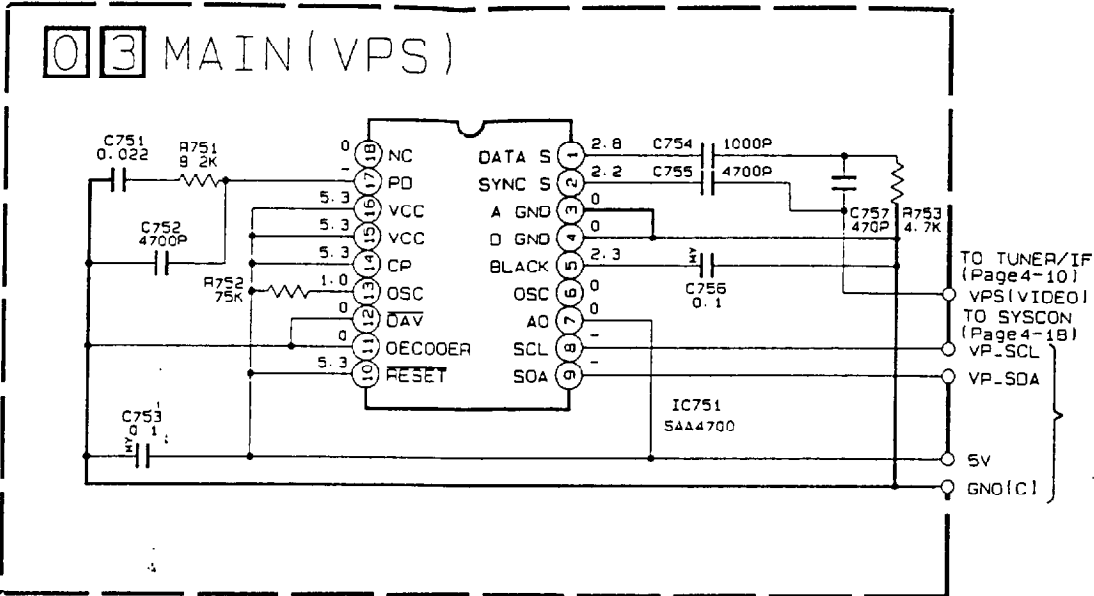


4.20 REMOTE CONTROL SCHEMATIC DIAGRAM


- NOTE:
1. All parts shown in this schematic are critical for
 2. This schematic is only for reference.
Avoid replacing individual parts.
Replace the entire unit only.

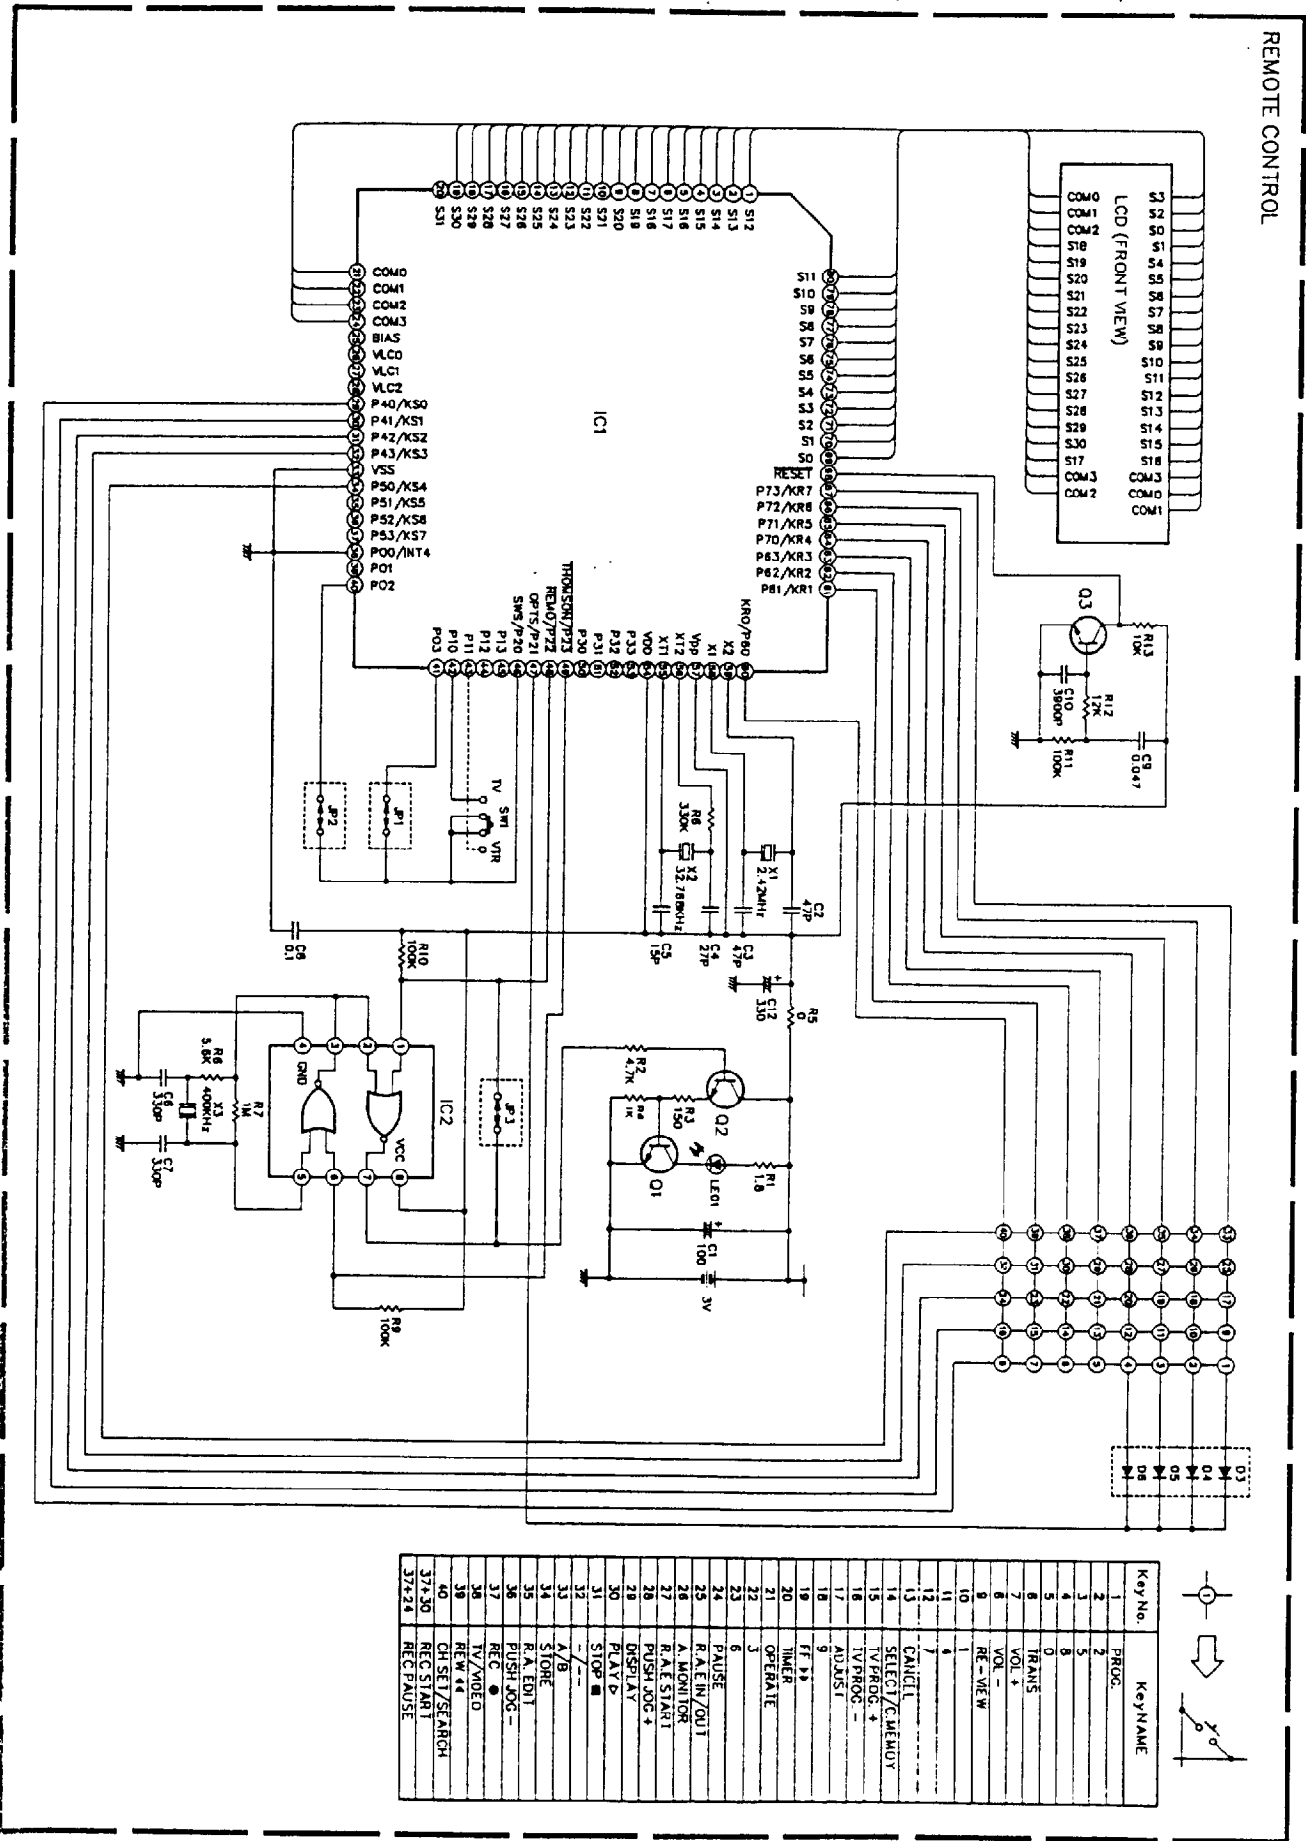


4.6 VIDEO SCHEMATIC DIAGRAM

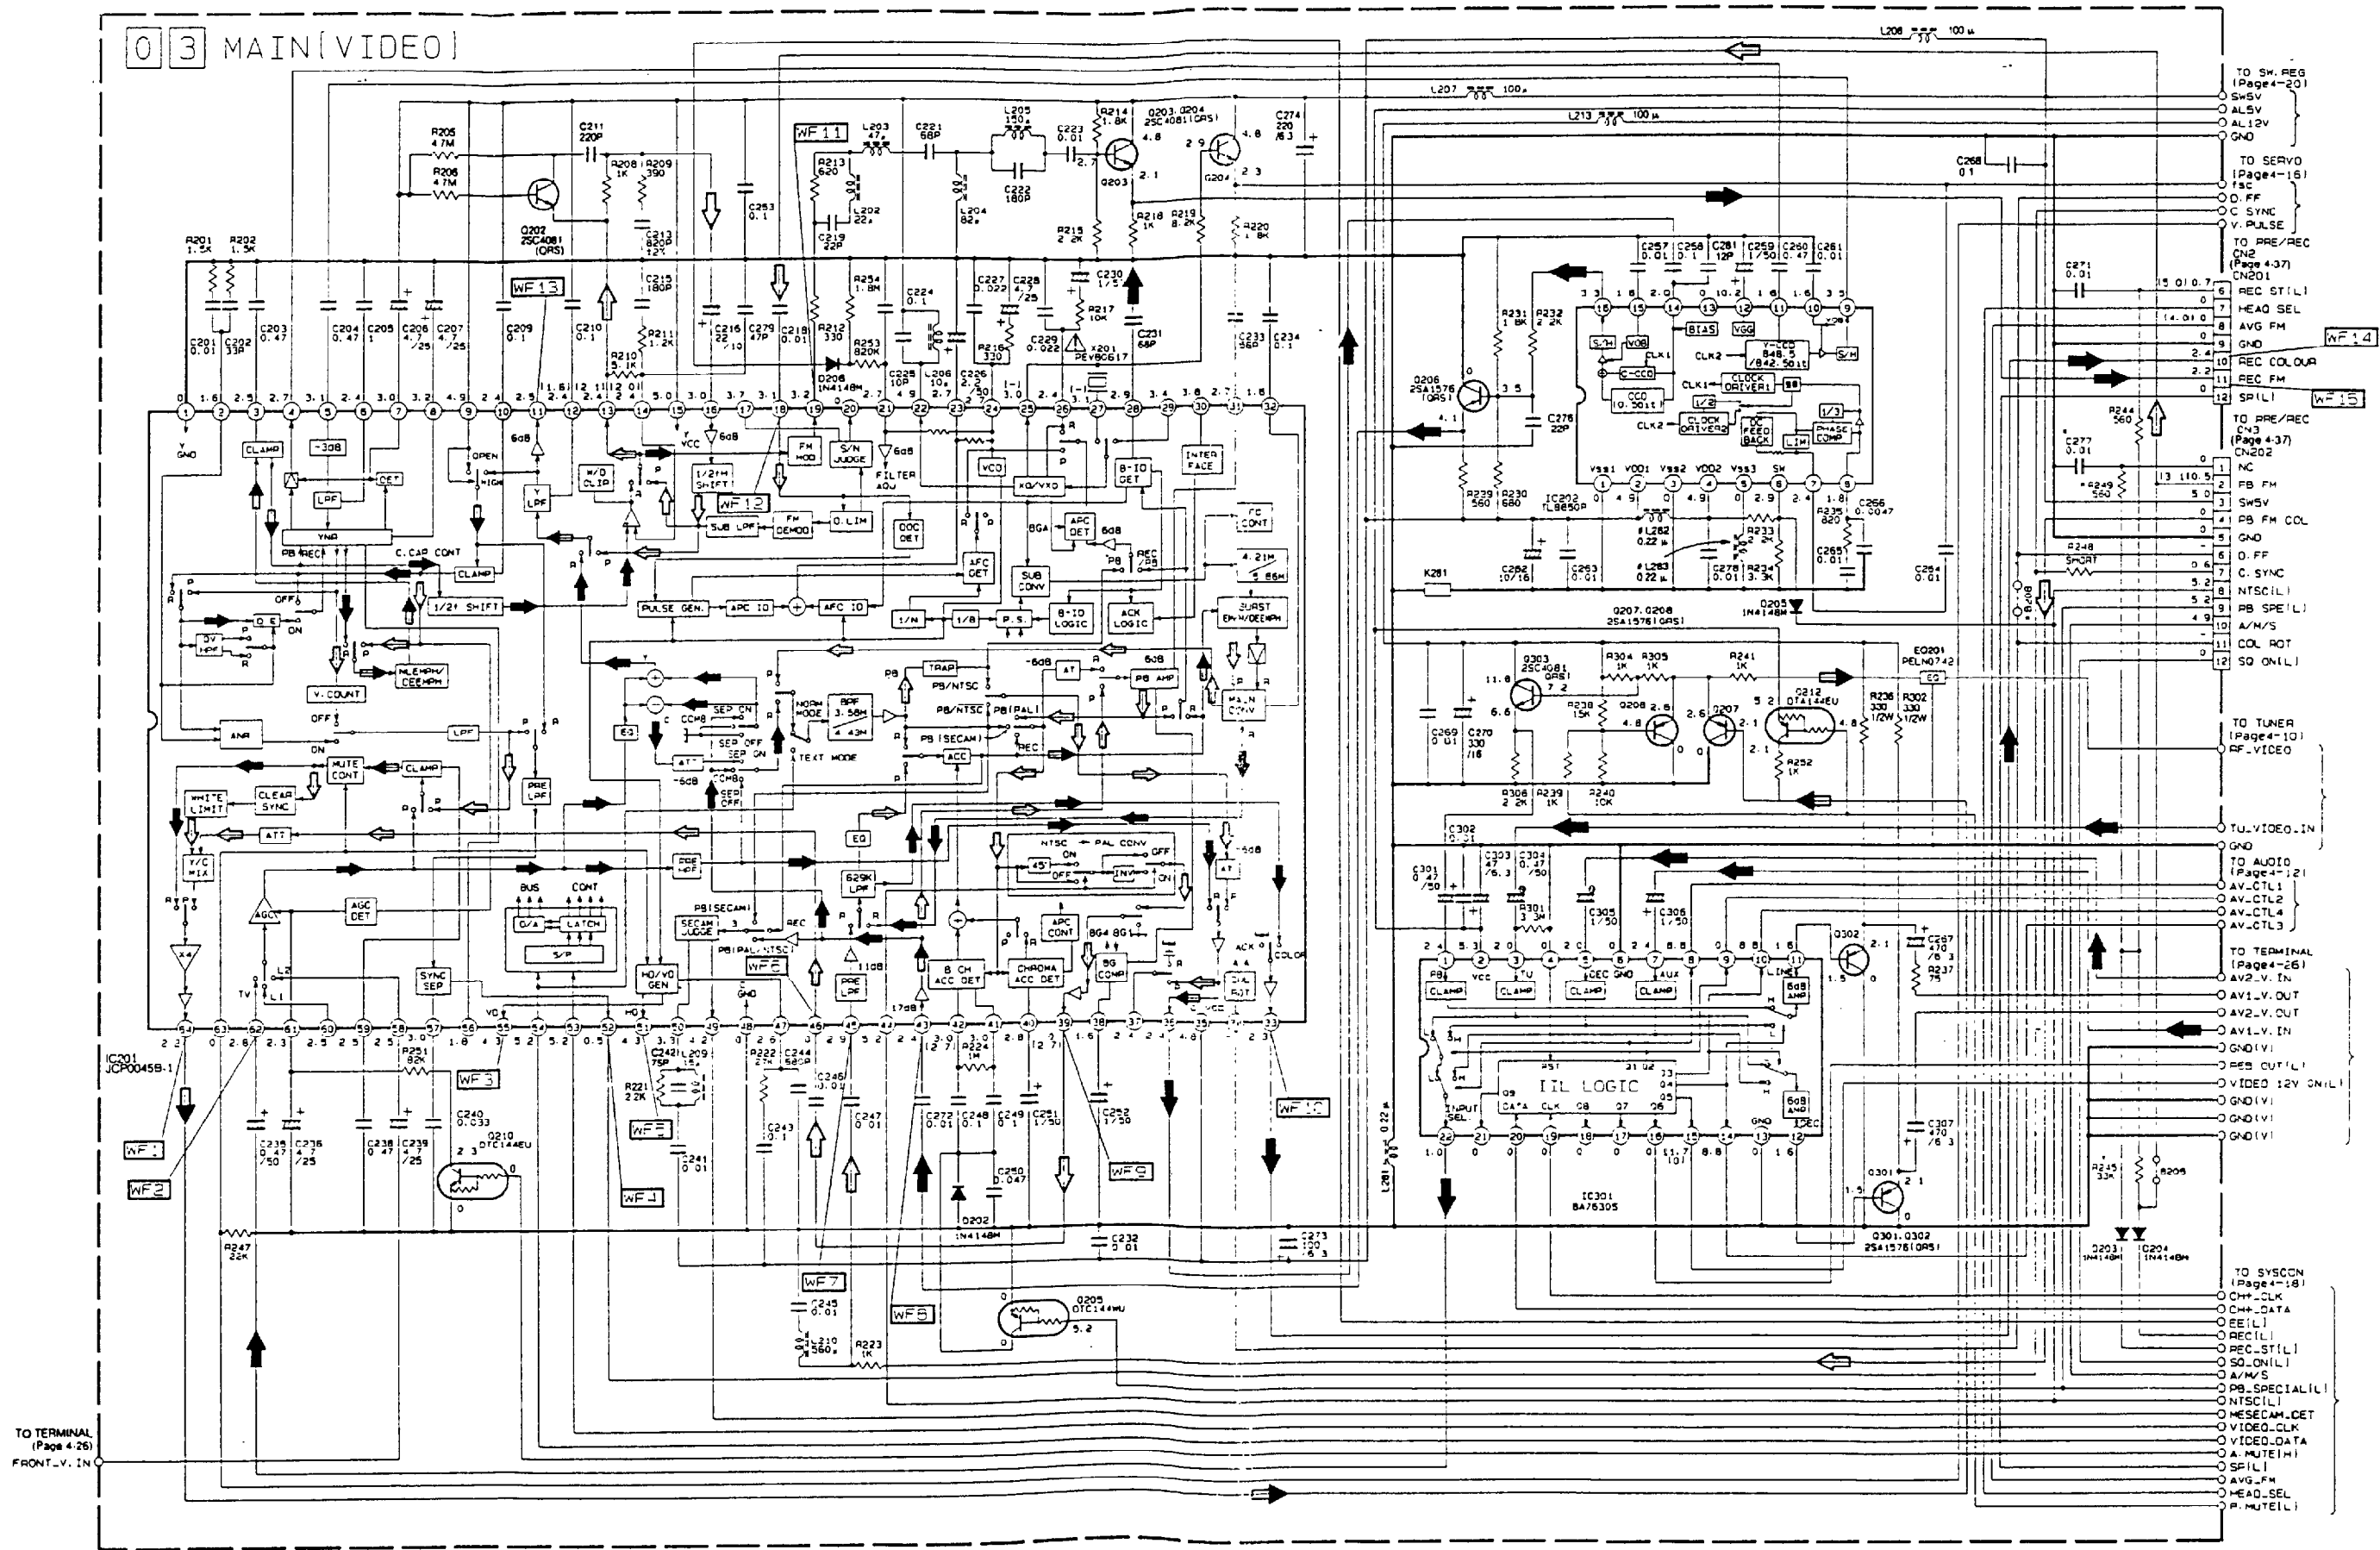


4.7 SERVO SCHEMATIC DIAGRAM

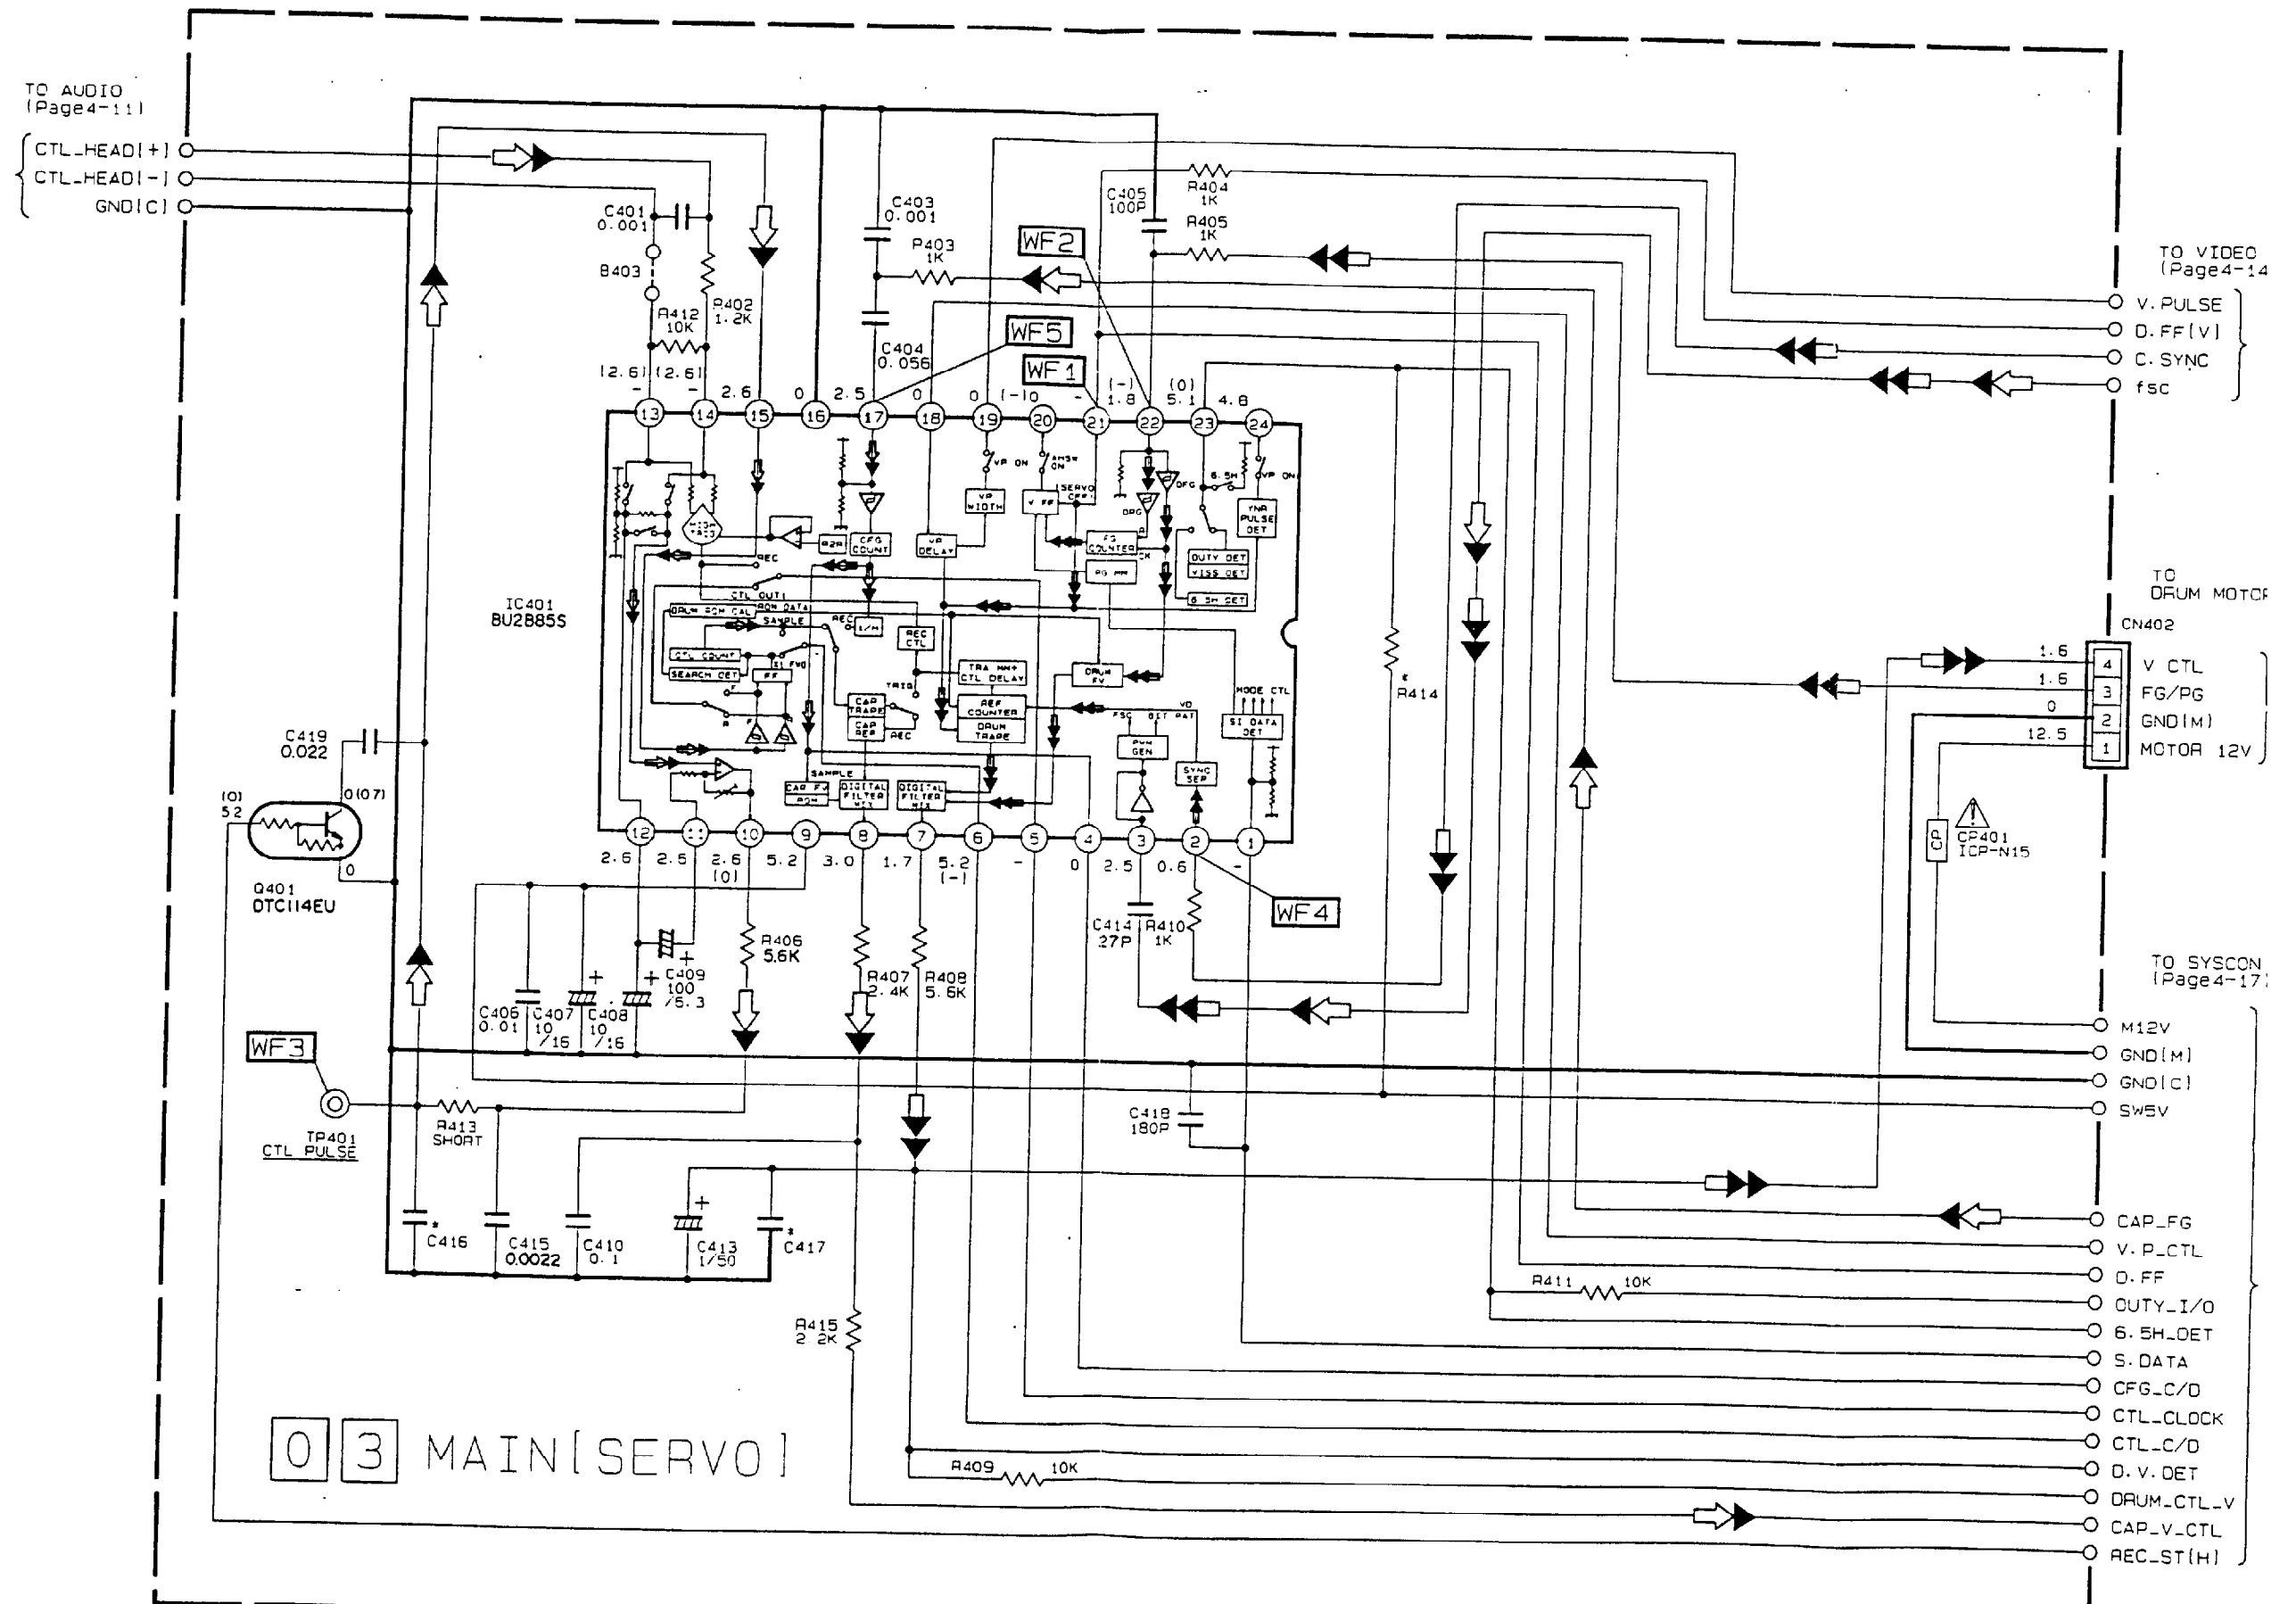


4.8 SYSTEM CONTROL SCHEMATIC DIAGRAM

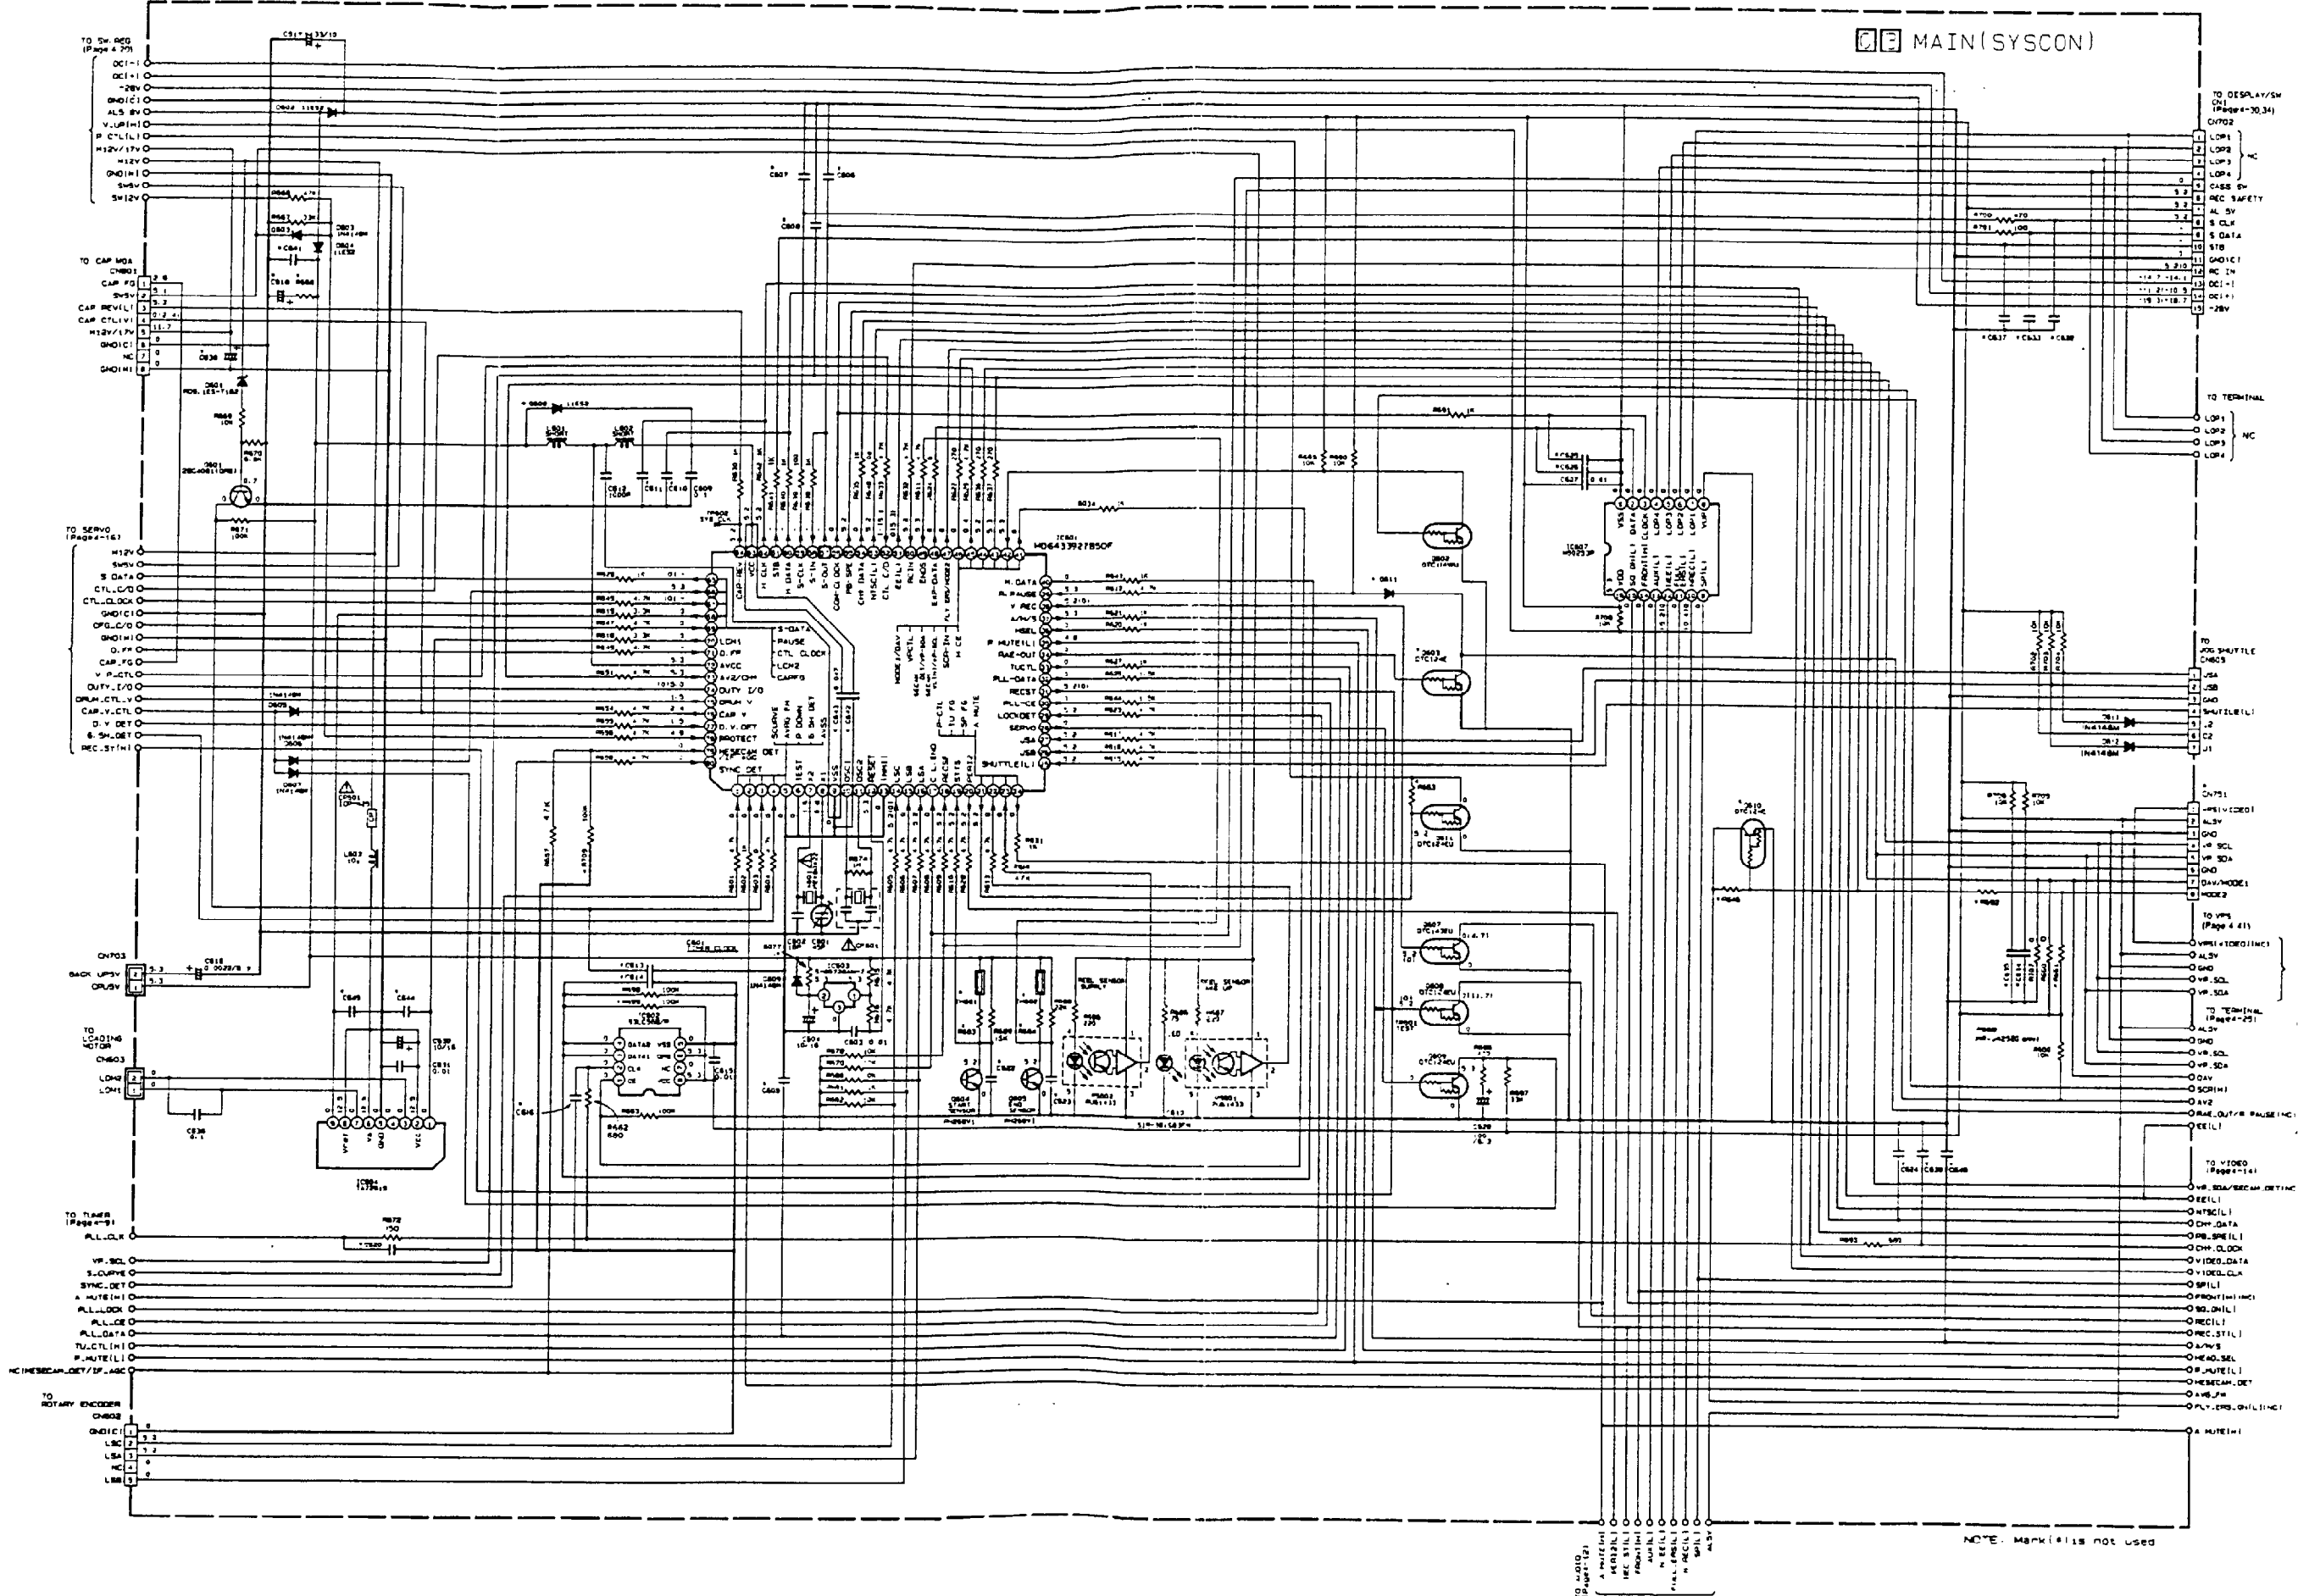


4.9 SWITCHING REGULATOR SCHEMATIC DIAGRAM

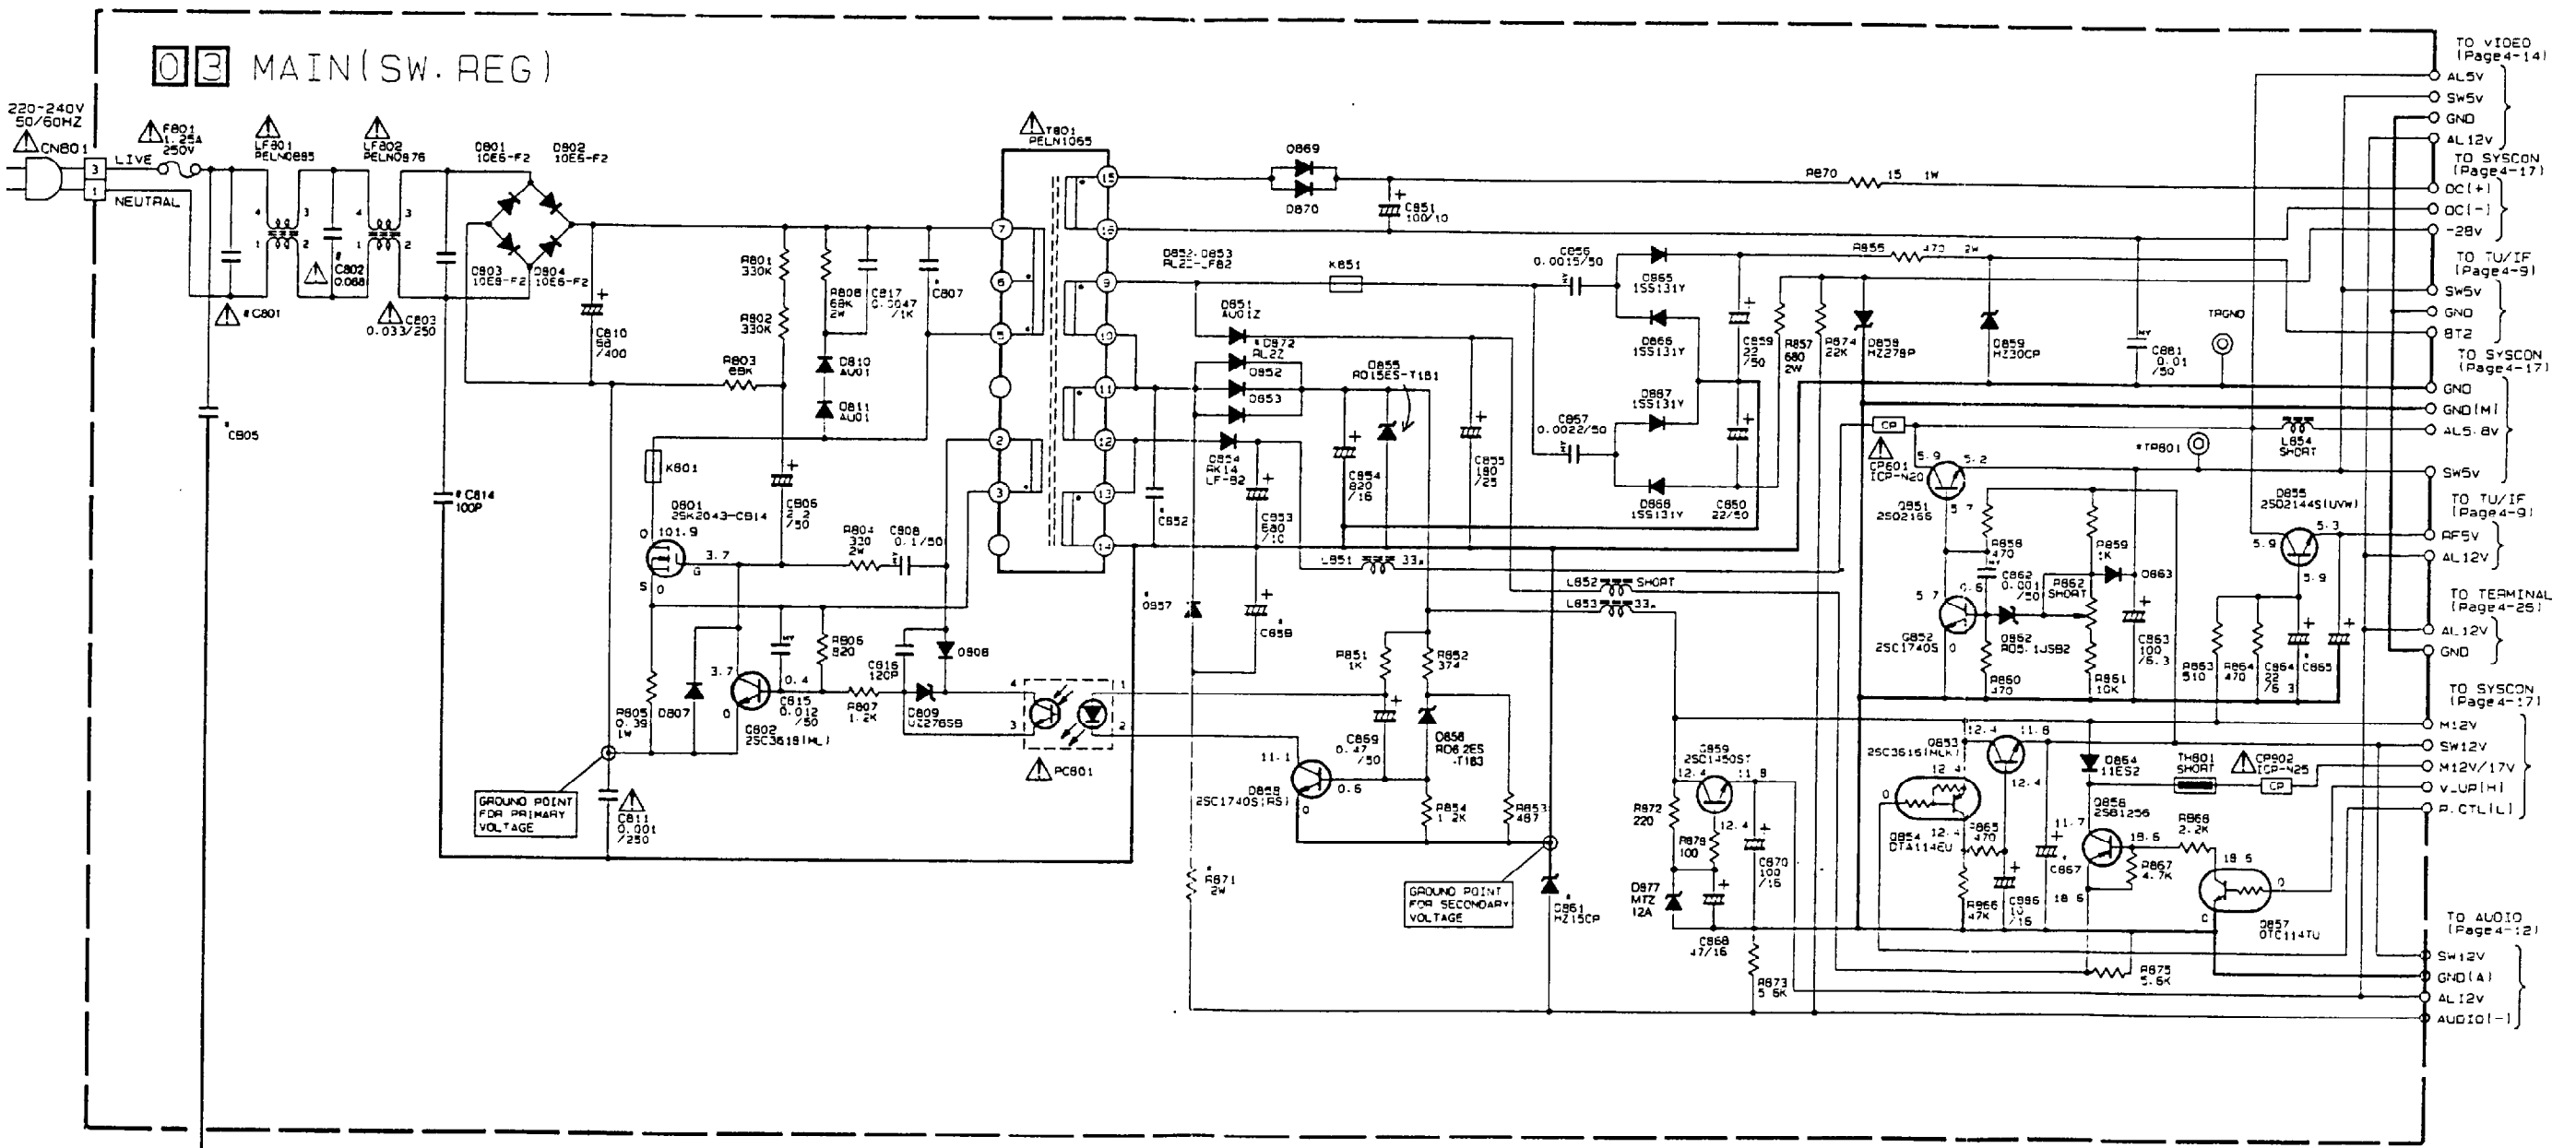


4.11 TERMINAL & MAIN (TERMINAL) SCHEMATIC DIAGRAMS

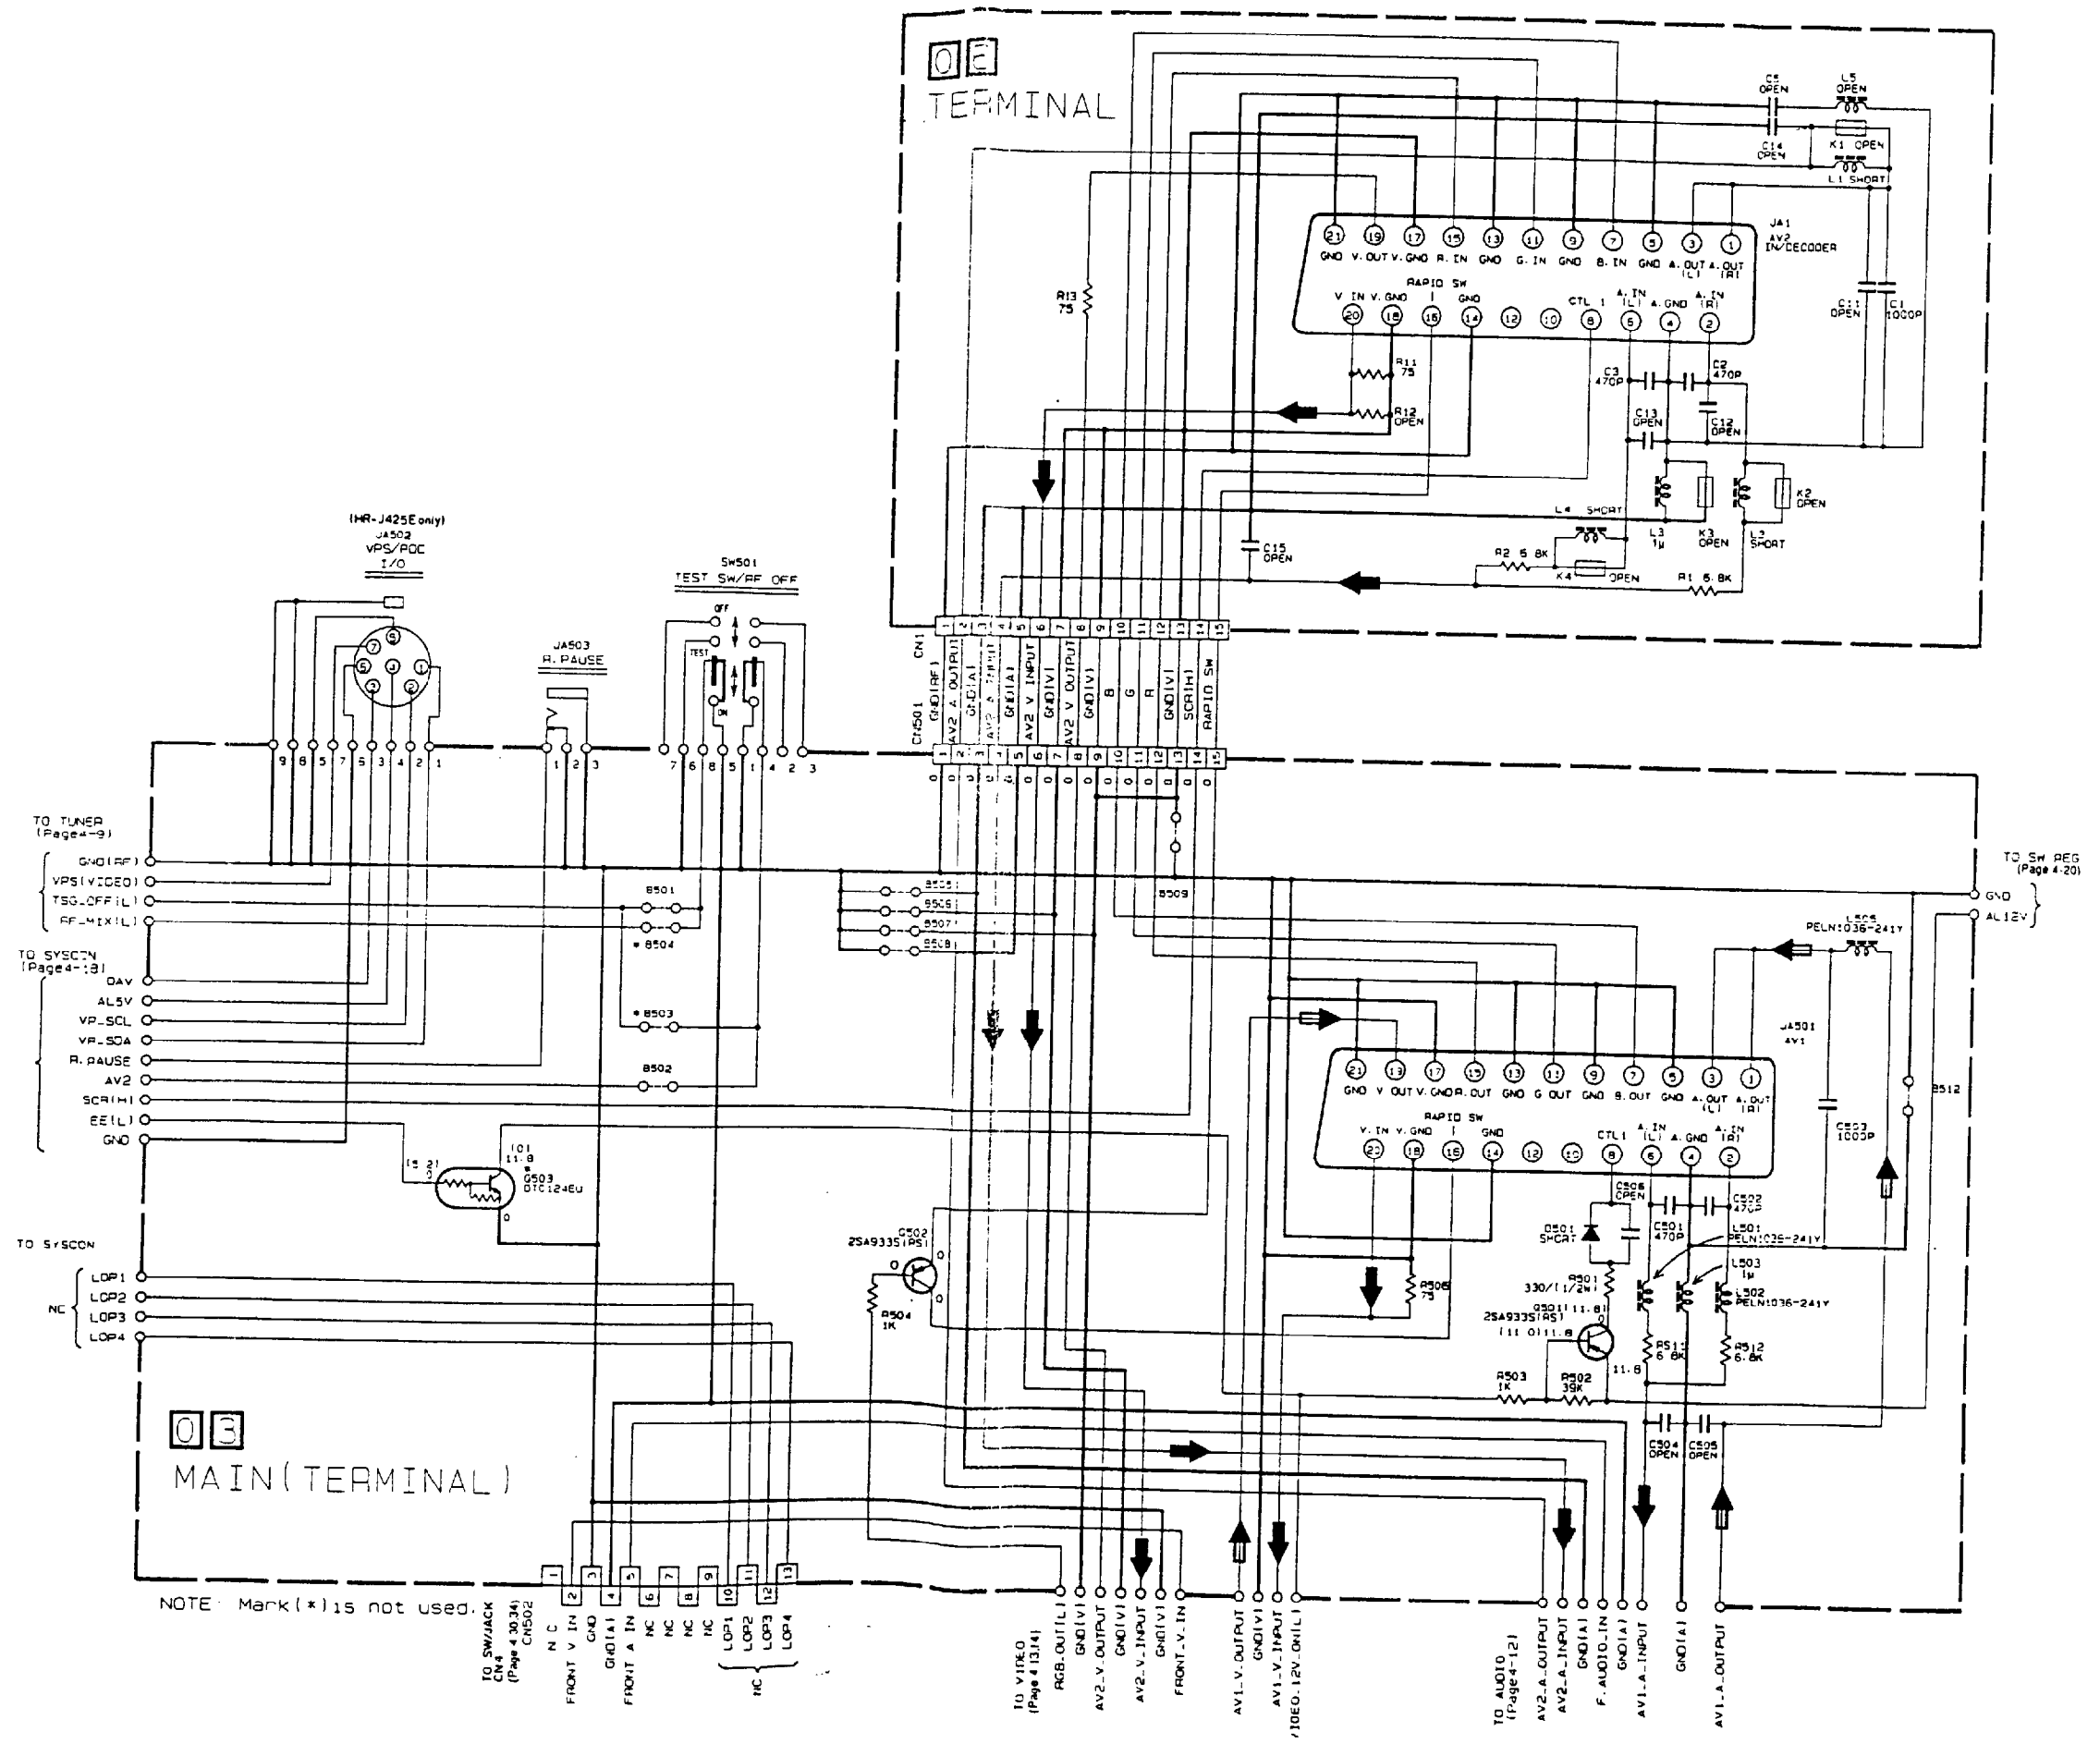


4.13 DISPLAY/SW & SW/JACK SCHEMATIC DIAGRAMS (for HR-J425E)

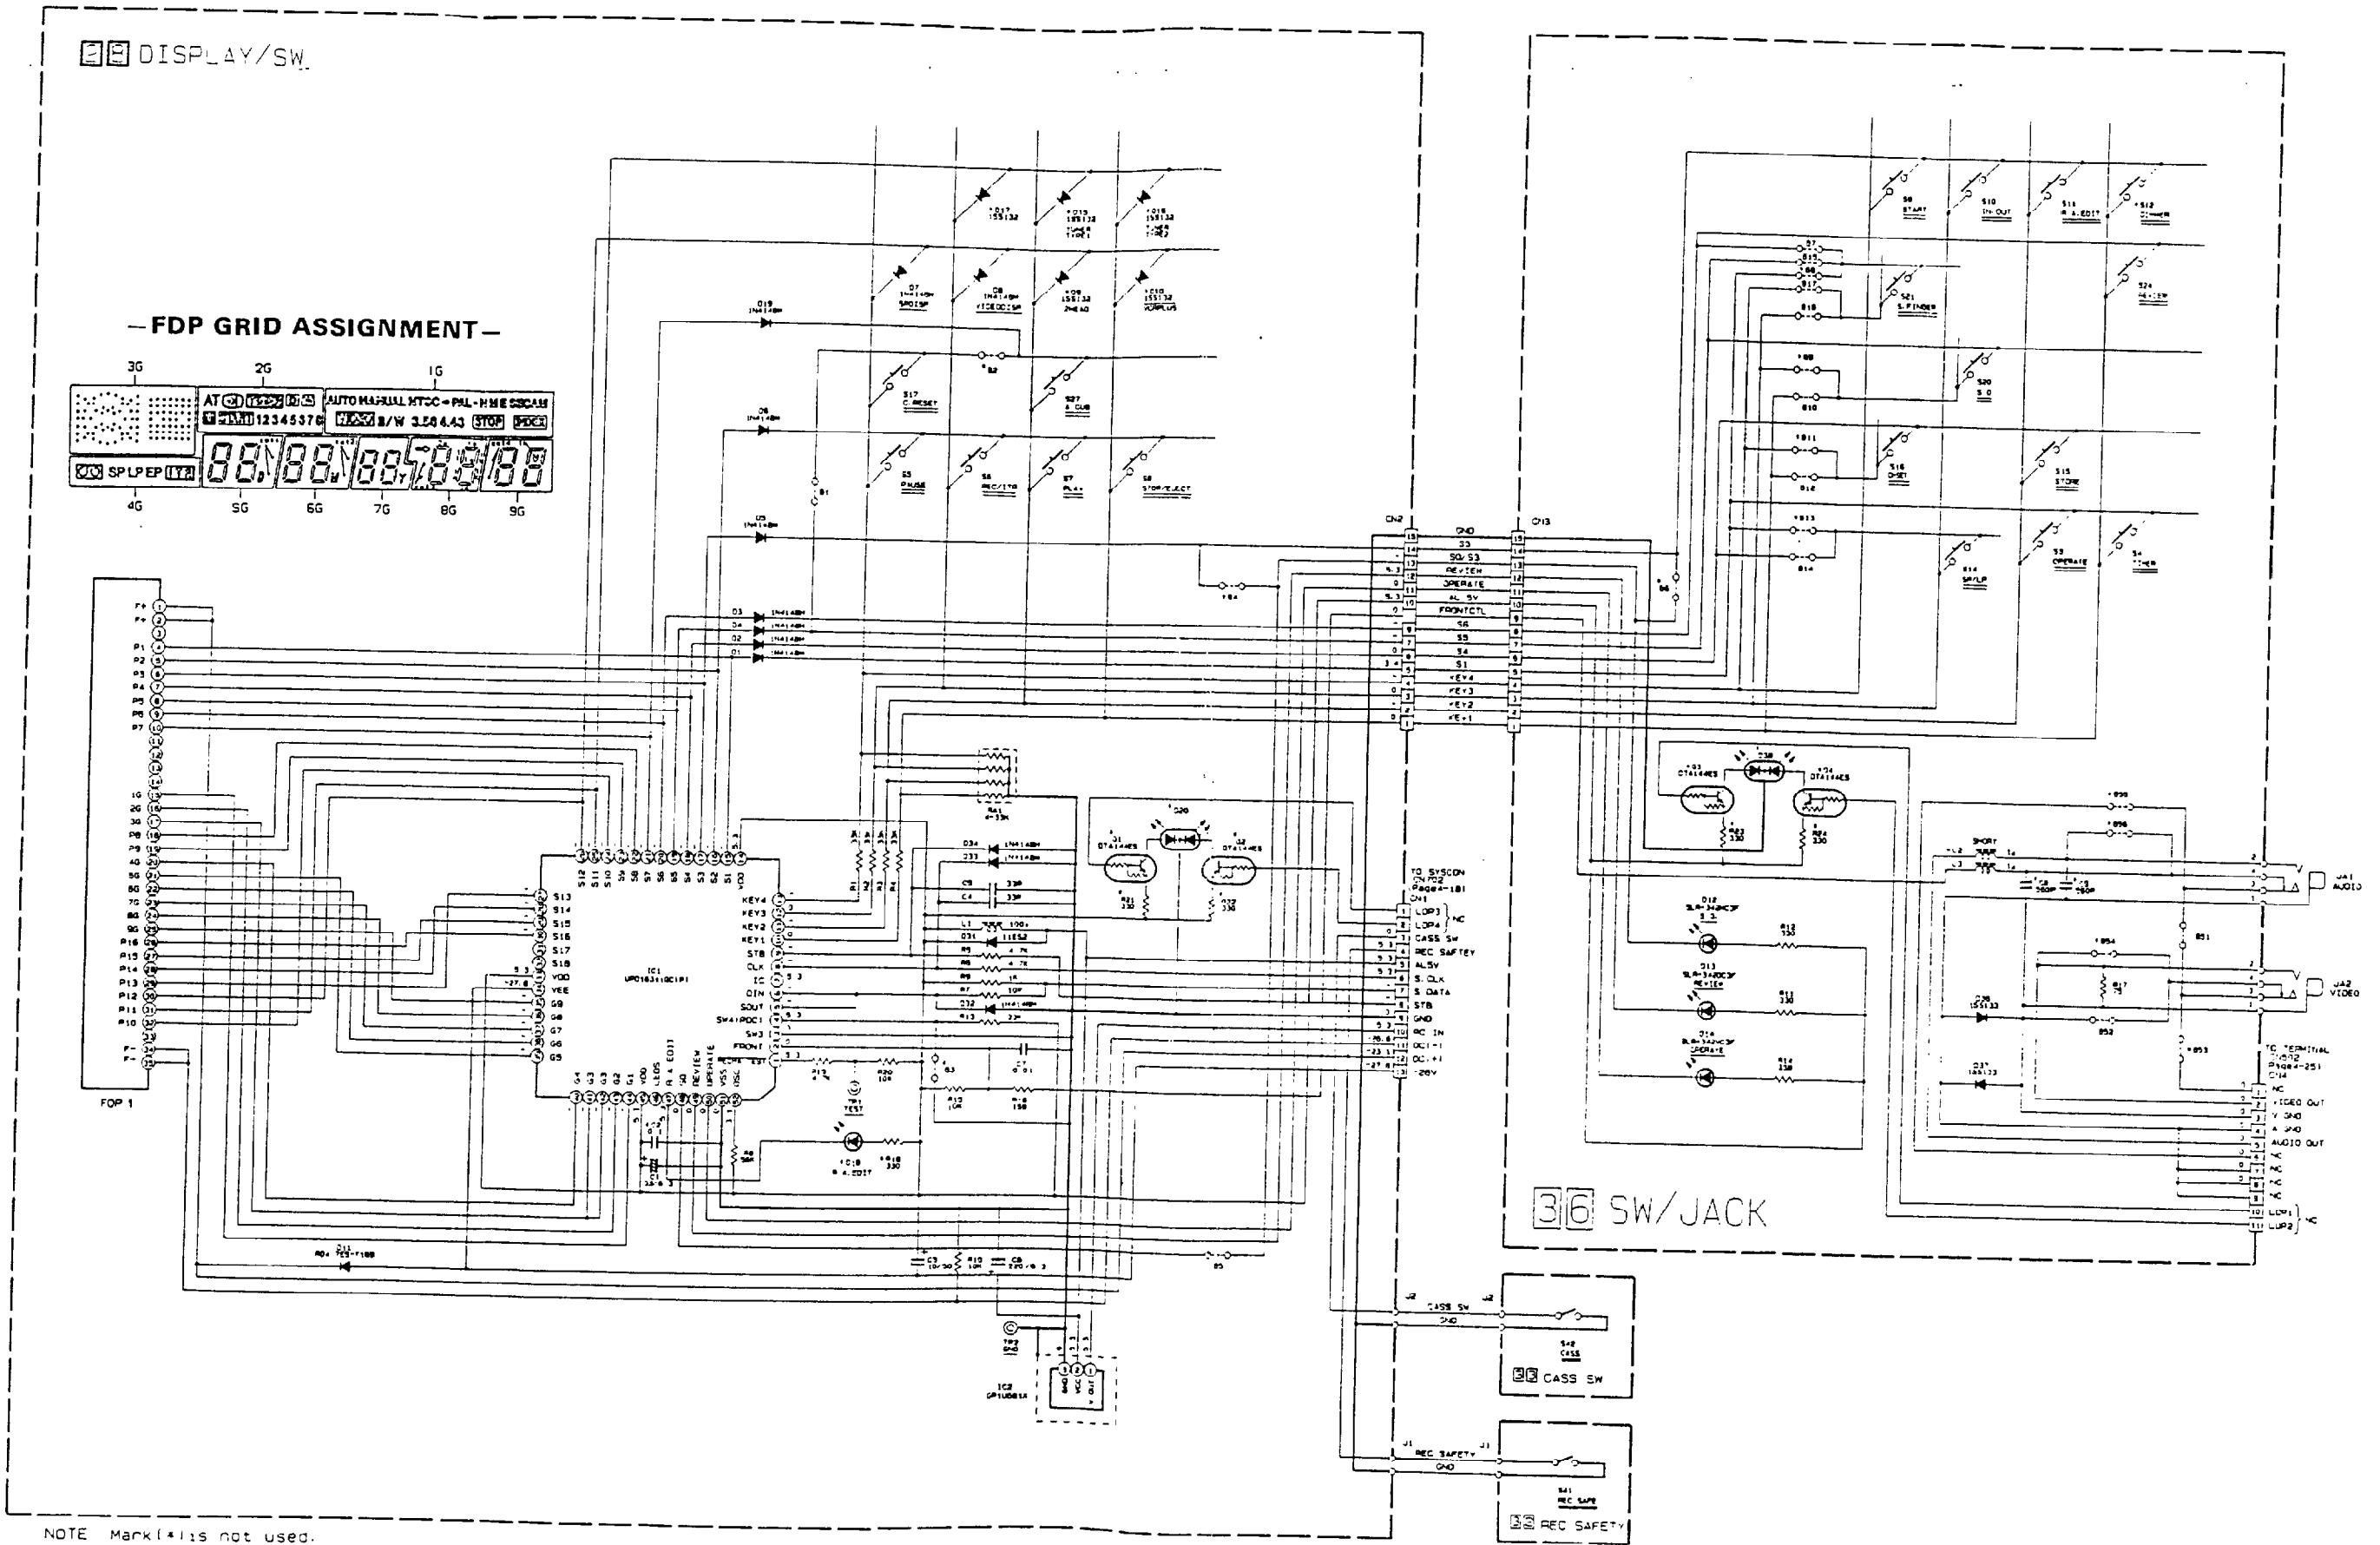

4.15 DISPLAY & SW/JACK SCHEMATIC DIAGRAMS (for HR-J425EG)

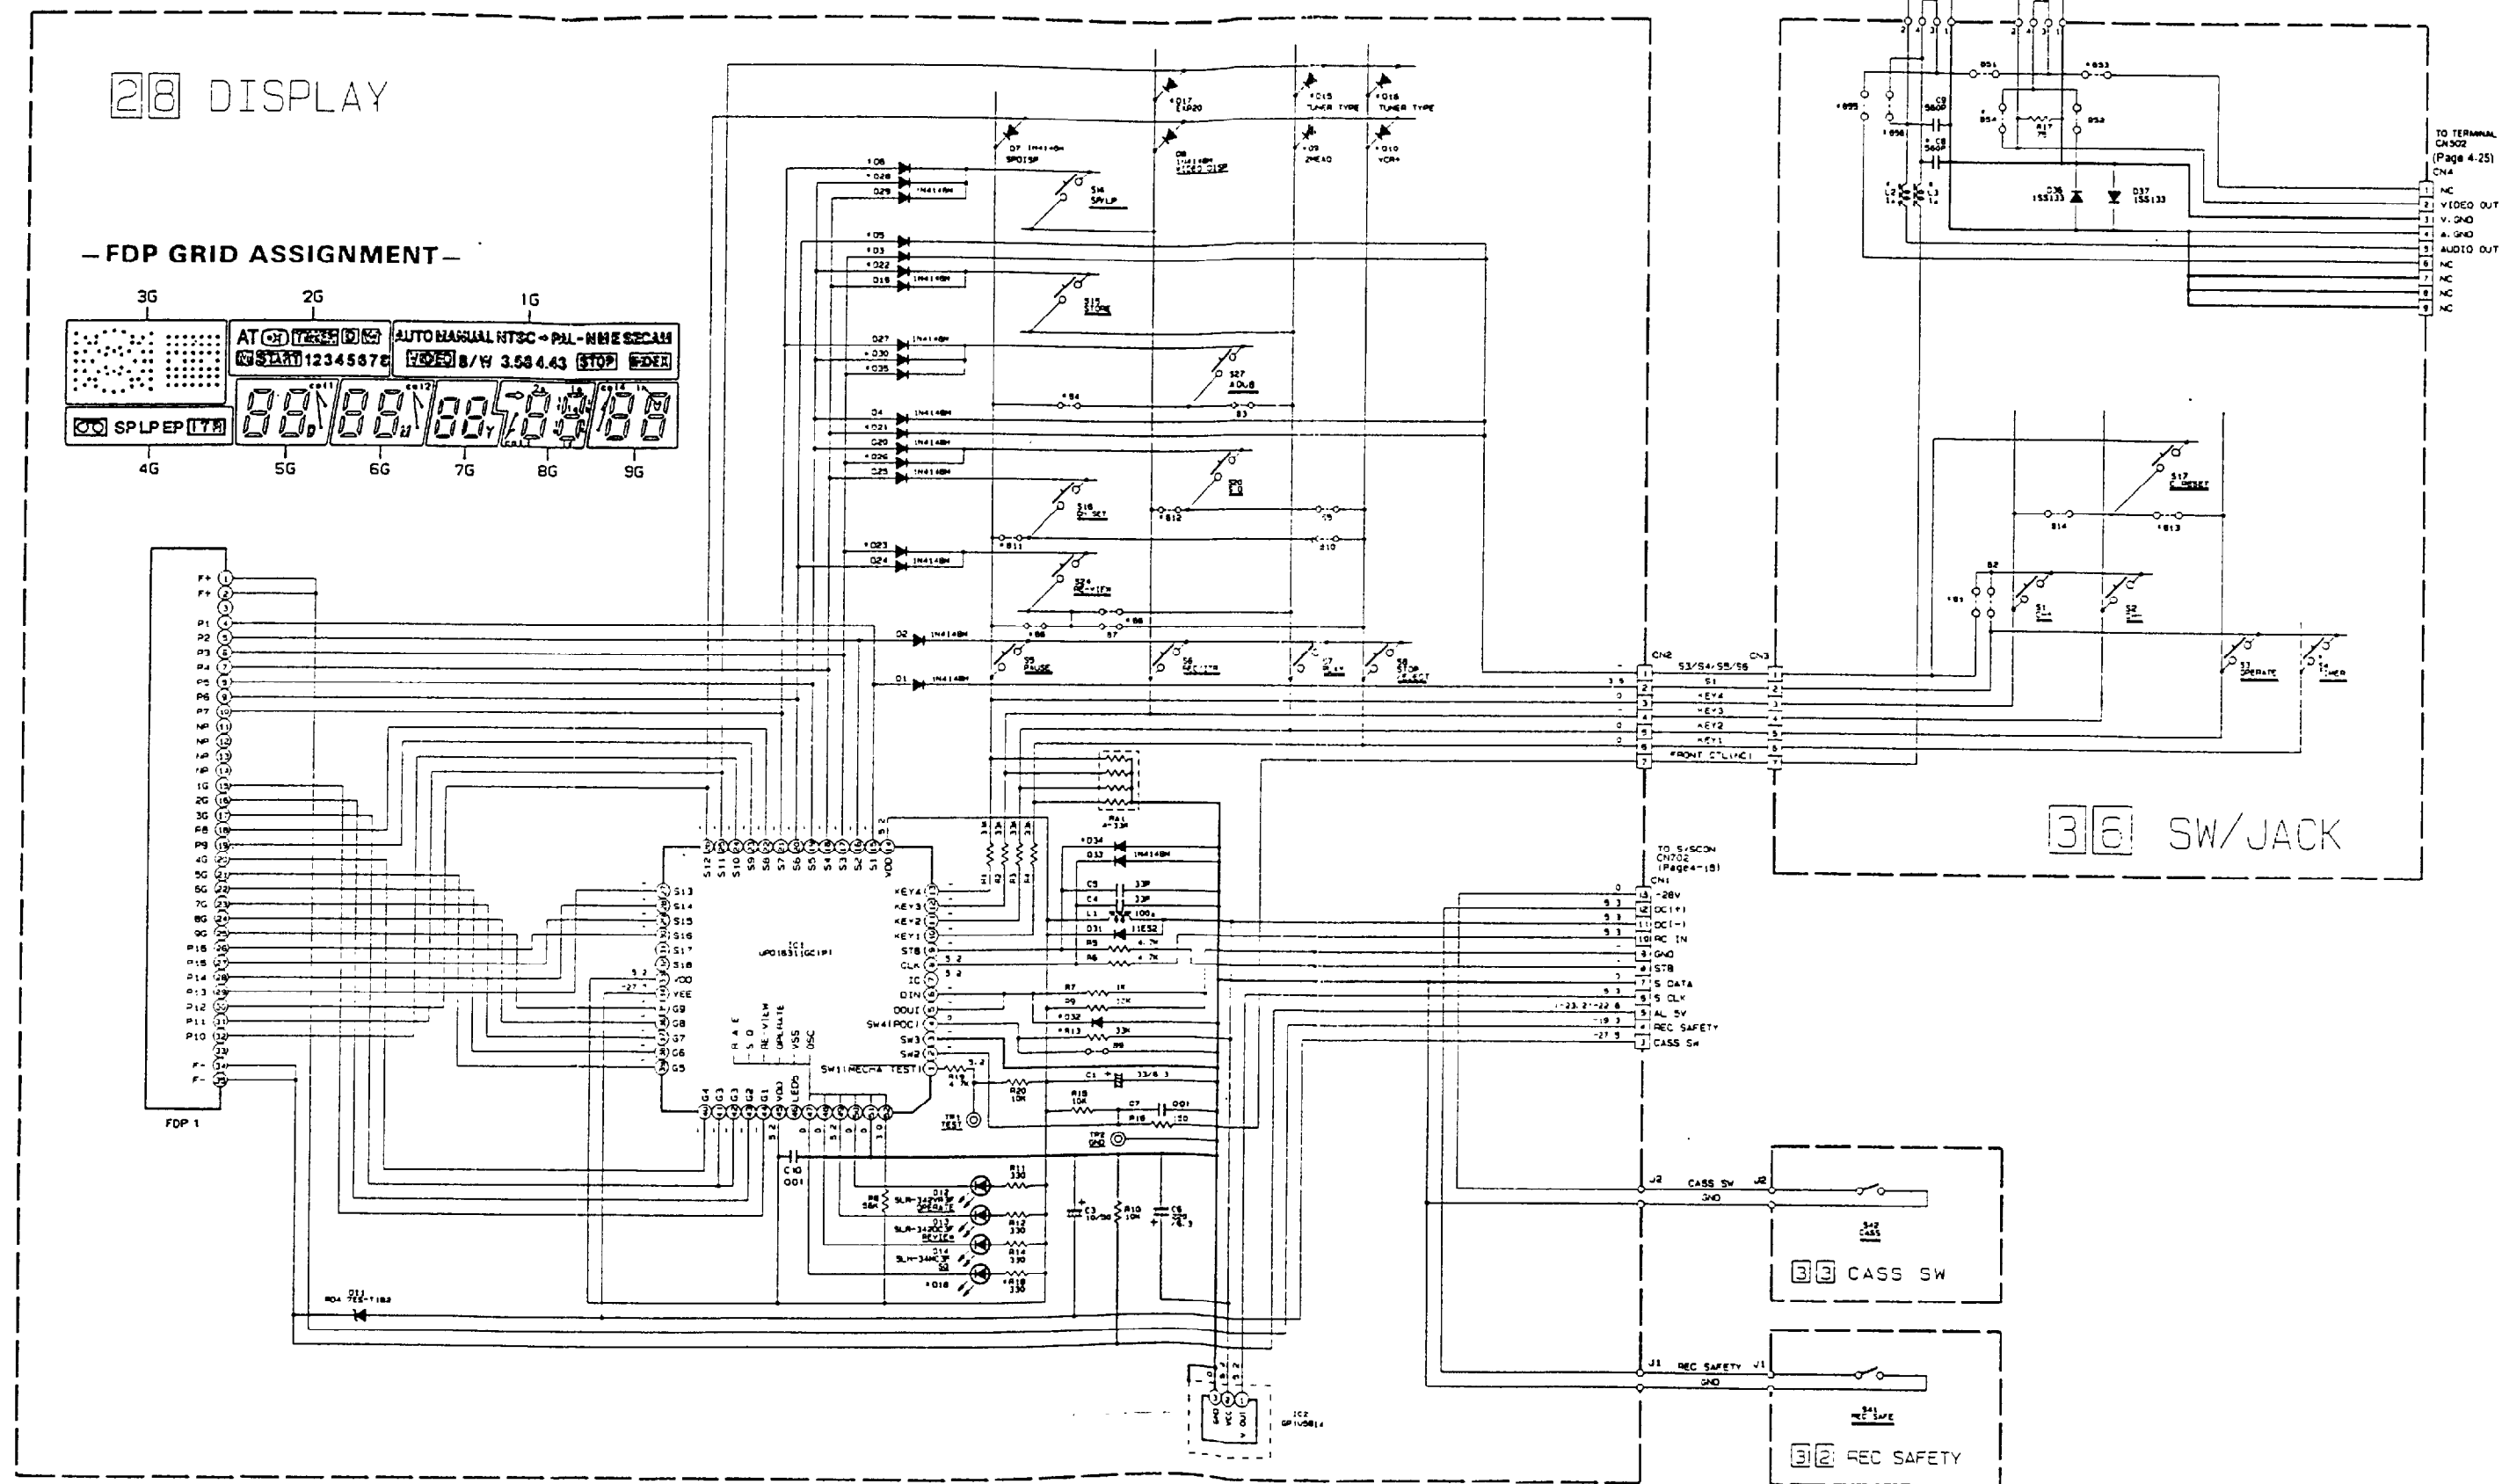

4.17 PRE/REC SCHEMATIC DIAGRAM

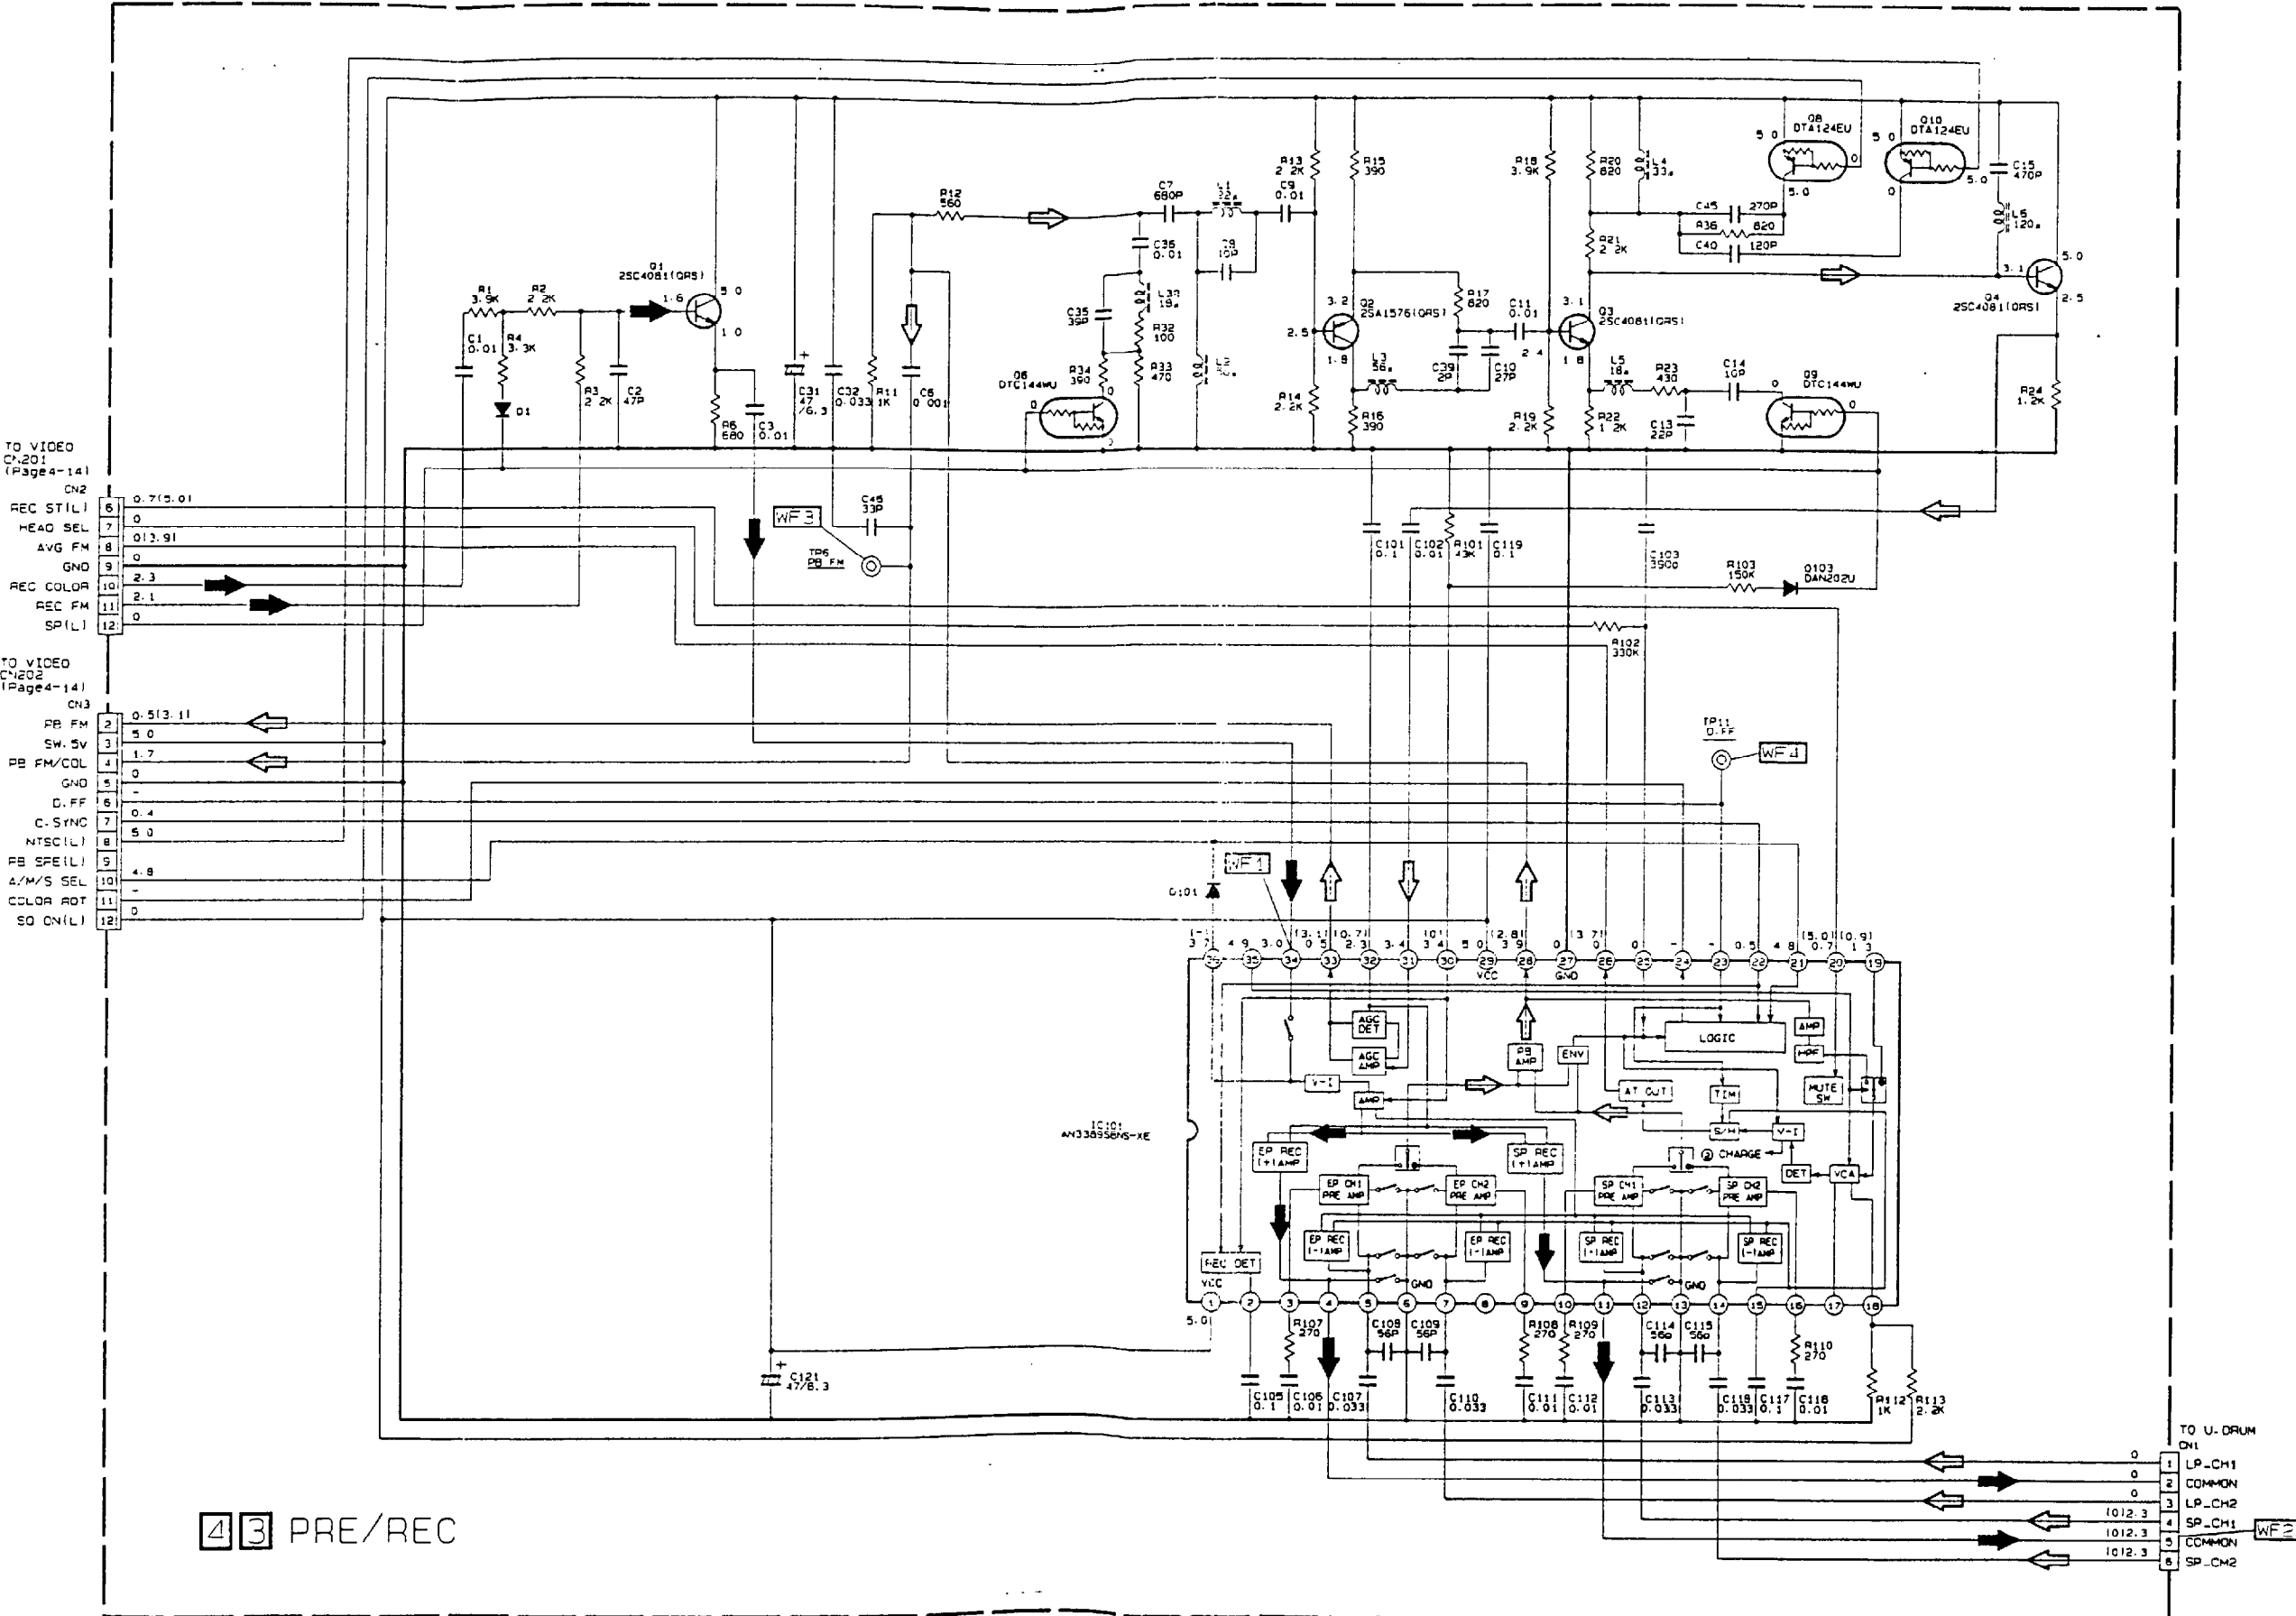

4.5 AUDIO SCHEMATIC DIAGRAM

