



## HEAVY DUTY

# JHD3510 Quick Reference Guide

### Basic Operation

**MODE:** With each press of the button the radio will change through the following modes: AM/FM, \*SAT, CD, \*iPOD, and AUX.

**AUDIO MENU:** With each press of the button choose from the following AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADER (front to back). Use the rotary encoder knob to adjust desired mode. Press and hold to access the SYSTEM MENU.

**MUTE:** Press to MUTE audio.



**Volume & Power On/Off:** Push to turn power ON or OFF. Turn to INCREASE or DECREASE volume.

**EQ/LOUD:** Press to choose one of the predefined bass and treble curves. Press and hold to turn loudness ON/OFF.

**AUXILIARY INPUT:** Insert stereo connector from any portable audio player.

### AM/FM/RBDS/WB Controls

**BAND:** Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.

**WB:** Press and hold to listen to WEATHERBAND.

**MUTE:** Press to MUTE audio.



**PTY:** Press to get program list type. Use rotary encoder knob to select. Press and hold SEEK < or > to tune to selected program type station.


**STATION STORE BUTTONS:**  
Press & hold to store current channel playing. Momentarily press to recall stored channel.  
**NOTE:** you can store up to 18 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

**TUNE:** Press > to tune UP in frequency. Press < to tune DOWN in frequency. Press and hold to fast search.

**AS/PS:** Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

### CD/MP3 Player Controls\*

**MUTE:** Press to MUTE audio.

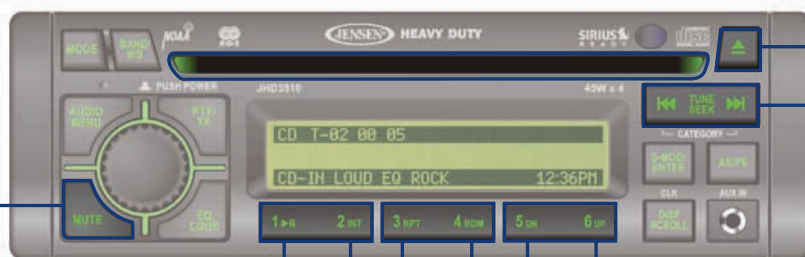

**PLAY/PAUSE:** Press to PLAY or PAUSE current audio.

**INTRO SCAN:** Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

**RPT:** Press to REPEAT current playing track. Press to release function. For MP3, press and hold for DIRECTORY REPEAT.

**RDM:** Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play. For MP3, press and hold for DIRECTORY RANDOM PLAY.

**DN:** Press when in MP3 mode to select folder DOWN.

**UP:** Press when in MP3 mode to select folder UP.

**EJECT:** Press to EJECT CD.

**TUNE/TRK:** Press to tune to next track. Press and hold to FAST FORWARD or REWIND current track playing.

**MODE:** Press and hold to enter CHANNEL LOCK function.

**BAND:** Press to select preset group SR1, SR2, or SR3 each with 6 channel memory locations.

**MUTE:** Press to MUTE audio.



**PTY:** Press and hold to change channel lock code.

**STATION STORE BUTTONS:**  
Press & hold to store current channel playing. Momentarily press to recall stored channel.  
NOTE: you can store up to 18 channels (6 channels per band SIR1, SIR2, SIR3).

**DISP/SCROLL:** Press to change display info between single and dual line text display.

**TUNE/SEEK:** Press >> to tune UP in frequency. Press << to tune DOWN in frequency. Press and hold to fast search.

**S-MOD/ENTER:** Press to access CATEGORY MODE and confirm selection. Press TUNE/SEEK to change category. Press again to select. Press and hold to return to channel tuning mode.

**AS/PS:** Press to scan through currently stored presets. Press and hold to access preset tuning mode.

**MUTE:** Press to MUTE audio.



**PLAY/PAUSE:** Press to PLAY or PAUSE current audio.

**RPT:** Press to REPEAT current playing song. Press to release function.

**RDM:** Press to play each song in RANDOM order. Press again for NORMAL play.

**DN:** Scroll DOWN playlists in playlist selection mode. Press PLAY to select.

**UP:** Scroll UP playlists in playlist selection mode. Press PLAY to select.

**TUNE/TRK:** Press to tune to next track. Press and hold to FAST FORWARD or REWIND current track playing.

**S-MOD/ENTER:** Press to access PLAYLIST selection mode. Use DN/UP to navigate list.

**DISP/SCROLL:** Press to change display info between single and dual line text display.



**NOTE:** To SET CLOCK, turn vehicle ON and radio OFF.

Press << to adjust the HOURS.  
Press >> to adjust the MINUTES.

**DISP:** Press & hold to enter CLOCK SETTING MODE. Set HOURS using TUNE/SEEK. Press again to set the MINUTES. Press again to set clock.

## Activating your SIRIUS® Subscription —

*Before you can listen to SIRIUS Satellite Radio, you must subscribe to the service.*

1. With the radio power ON, press the MODE button to enter SIRIUS Ready mode.

After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels.

**NOTE:** Don't push any buttons or perform any operations until updating has been completed.

2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel.

You will not be able to tune to any other SIRIUS Radio channels until you activate your subscription.

3. You will need to access your SIRIUS ID, which is displayed on channel 000. Use the TUNE/SEEK button to tune to channel 000. This will display your unit's unique 12-digit SIRIUS ID Number.

4. Write the SIRIUS ID number down and have your credit card handy.

5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/>

Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474).