



HEAVY DUTY

 
JHD3620 Quick Reference Guide

Basic Operation

MODE: Continue to press to navigate through the following modes: AM/FM, *SAT, CD, *iPOD, & AUX.

AUDIO MENU: With each press of the button choose from the following AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADER (front to back). Use the rotary encoder knob to adjust desired mode.

POWER ON/OFF: Push to turn power ON or OFF.
VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

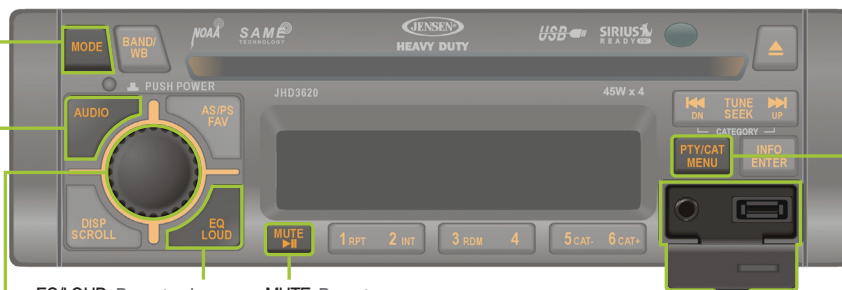

EQ/LOUD: Press to choose one of the predefined bass and treble curves. Press & hold to turn loudness ON/OFF.

MUTE: Press to MUTE audio.

AUXILIARY INPUT: Insert stereo connector from any portable audio player or USB device.

PTY/CAT MENU: Press & hold to access SYSTEM MENU. Press << or >> to navigate through menu items. Press ENTER to adjust desired menu item.

AM/FM/RBDS/WB Controls

BAND: Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.

WB: Press & hold to listen to WEATHERBAND.

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.



AS/PS/FAV: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

MUTE: Press to MUTE audio.

STATION STORE BUTTONS: Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

TUNE/SEEK: Momentarily press >> to tune UP in frequency or << to tune DOWN in frequency. Press & hold to SEEK to next strongest station.

PTY/CAT MENU: Press to enter program type search. Press << or >> to navigate through program types. Press PTY to select desired program type.

CD/MP3 Player Controls

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing track. Press to release function.

INTRO SCAN: Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RDM: Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

PTY/CAT MENU: Press to access folder list. Press << or >> to navigate through folder. Press ENTER to select desired folder. Press << or >> to navigate through songs. Press ENTER to select desired song.



EJECT: Press to EJECT CD.

TUNE/TRK: Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

USB Controls

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing track. Press to release function.

 
INTRO SCAN: Press when album/folder is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RDM: Press when album/folder is playing to play each track in RANDOM order. Press again for NORMAL play.

USB: Insert USB device here.

TUNE/TRK: Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

PTY/CAT MENU: Press to access folder list. Press << or >> to navigate through folder. Press ENTER to select desired folder. Press << or >> to navigate through songs. Press ENTER to select desired song.

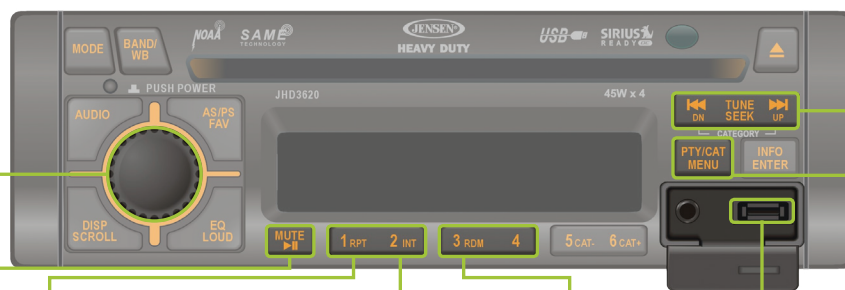

SIRIUS® Radio Controls*

BAND: Press to select pre-set group SR1, SR2, or SR3 each with 6 channel memory locations.

AS/PS/FAV: Press to scan through currently stored presets. Press & hold to store favorite Artist or Song currently playing. Press ENTER to select ARTIST. Press FAV to select SONG.

DISP/SCROLL: Press to change display info between single and dual line text display. Press & hold to SCROLL Artist & Song Title info.

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

 
MUTE: Press to MUTE audio.

STATION STORE BUTTONS: Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: You can store up to 18 channels (6 channels per band SIR1, SIR2, SIR3).

PTY/CAT MENU: Press to enter category list mode. Press CAT- to go DOWN a category or CAT+ to go UP a category. Press << or >> to navigate through category list. Press DISP/SCROLL to navigate through Channel Name, Artist & Song Title information. Press ENTER to select desired song in category.

TUNE/SEEK: Press >> to tune UP a channel or << to tune DOWN a channel. Press & hold to fast search.

INFO/ENTER: Press & hold to directly enter station number. Press << or >> to change number. Press again to select desired number.

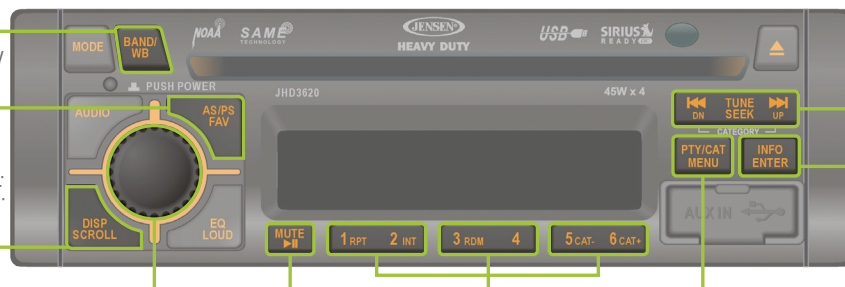

NOTE: Requires SIRIUS Tuner & Antenna. Sold Separately.

iPod® Controls*

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

DISP/SCROLL: Press to change display info between single and dual line text display. Press & hold to SCROLL Artist & Song Title info.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing track. Press to release function.

INTRO SCAN: Press when iPod is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RDM: Press when iPod is playing to play each track in RANDOM order. Press again for NORMAL play.

TUNE/TRK: Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

PTY/CAT MENU: Press to enter playlist selection mode. Press << or >> to navigate through Playlists, Artists, Albums, Genres, Songs, Audiobooks & Podcasts. Press ENTER to select desired item. Press << or >> to navigate through selected item folder. Press ENTER to select desired song.



NOTE: Full iPod control requires JENSEN iPod interface cable. Sold Separately.

Clock Settings



PTY/CAT MENU: Press & hold to enter menu. Press << or >> to navigate to SET CLOCK. Press ENTER to select. Press << or >> to adjust the HOUR. Press ENTER to move to the MINUTES. Press << or >> to adjust the MINUTES. Press ENTER to set the clock.

Activating your SIRIUS® Subscription —

Before you can listen to SIRIUS Satellite Radio, you must subscribe to the service.

1. With the radio power ON, press the MODE button to enter SIRIUS Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels.

NOTE: Don't push any buttons or perform any operations until updating has been completed.

2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other Sirius Radio channels until you activate your subscription.

3. You will need to access your SIRIUS ID, which is displayed on channel 000. Press and hold the INFO/ENTER button on the radio to enter Direct Tuning mode. Press << or >> to select digits 000. Press ENTER to make your selection. This will display your unit's unique 12-digit SIRIUS ID Number.

4. Write the SIRIUS ID number down and have your credit card handy.

5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/> Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474).