 


Picture Taking Options

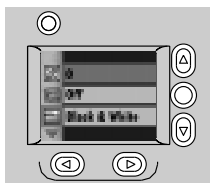

1. Set Mode dial to Capture and turn on camera.
2. Press MENU button.
3. Use ▲/▼ button to select icon you want to adjust. Press DO-IT button.
4. Use ▲/▼ button to adjust. Press DO-IT button to accept.

Adding Date Stamp



Places the date, time, or both on the front of picture.

Adjusting Exposure



If pictures are too dark, increase (+) exposure number.
If pictures are too light, decrease (-) exposure number.

Adding Borders



Places a border around pictures.

Pictures in Black and White, Sepia, or Documents



Black & White—creates black and white pictures.

Sepia Tone—creates an antique look to pictures.

Document—makes text stand out.

Quality Settings



Best—use when printing enlargements.

Better—use for everyday pictures.

Good—use for e-mail and computer viewing.

Resolution Options



High—1280x960-DC240/1760x1168-DC280 for print.

Standard—640x480-DC240/896x592-DC280 for e-mail.

White Balance Settings



Auto—use for everyday pictures.

Daylight—use under natural lighting without flash.

Tungsten—use under household lights without flash.

Fluorescent—use under fluorescent tubes without flash.

Metering Options



Multi-Pattern—use when even exposure is needed.

Center-Weighted—use to highlight center of subject.

Sharpness Setting



Sharp—use to highlight the edges in picture.

Standard—use for everyday pictures.

Soft—use to blur the edges in pictures.

Auto ISO (DC280)



OFF—use for everyday pictures.

 
ON—use for low light pictures without flash.

Locking Exposure



Use when a constant exposure and consistent look to pictures is needed.

Reviewing Your Pictures

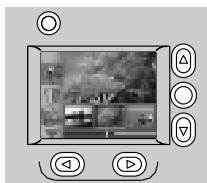

1. Set Mode dial to Review and turn on camera.
2. Use ◀/▶ button to scroll through pictures.
3. Press MENU button for filmstrip.
4. Use ▲/▼ button to select the icon you want. Press DO-IT button.
5. Use ▲/▼ button to adjust. Press DO-IT button to accept.

Magnifying Picture



Use ▲/▼ ◀/▶ button to pan around the picture.

Selecting Pictures for Print



Selects (or deselects) some or all pictures for printing on a KODAK Picture Maker kiosk.

Protecting Pictures



Protects (or unprotects) some or all pictures from being deleted.

Deleting Pictures



Deletes one or all pictures from camera memory card.

Running Slide Shows



Runs a slide show of pictures on a television or on the camera color LCD.

Viewing Picture Information



Shows specific picture-taking information about a picture.



Eastman Kodak Company
Rochester, New York 14650

Kodak is a registered trademark of Eastman Kodak Company.

©Eastman Kodak Company, 1999

Kodak

DC240/DC280 Zoom Digital Camera



Online registration is quick and easy!
www.kodak.com/go/register
Register your new camera now!

Quick Tips

P/N 6B5000

Quick Setup

Installing Batteries

Your camera comes with four AA alkaline and four AA Ni-MH rechargeable batteries. Do not mix different types of batteries in the camera. If Ni-MH rechargeable batteries are not charged, use the alkaline batteries in the camera.

Install batteries.

Charging Batteries

Use only Ni-MH rechargeable batteries in charger. Do not charge other types of batteries with charger.

1. Align + and - ends of Ni-MH rechargeable batteries with + and - connectors in the charger.
2. Push batteries into charger until they snap in place.
3. If needed, attach the correct power plug to the charger.
4. Plug charger into a power outlet.
5. Remove charged batteries when charger indicator lights go out. It takes approximately eight hours to fully charge batteries.


Inserting a Camera Memory Card

1. Open camera card door.
2. Insert camera memory card into slot with connecting end of card facing camera, and the lip on the card facing toward the front of camera.

Do not force card into slot.

 
3. Close camera card door.

Setting the Clock


1. Set Mode dial to Camera Setup.
2. Slide POWER switch to the right to turn on camera.
3. Use ▲/▼ button to select .
4. Press DO-IT button.
5. Use ◀/▶ ▲/▼ buttons to adjust date and time fields.
6. Press DO-IT button.

Camera Overview


Camera Front

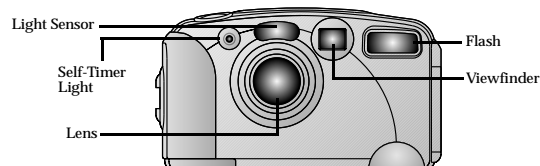


Camera Back

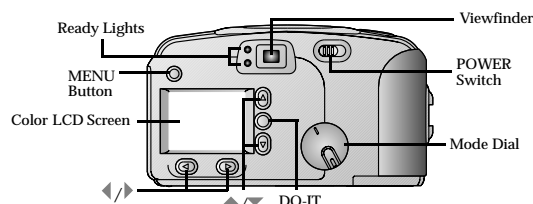 


Camera Side

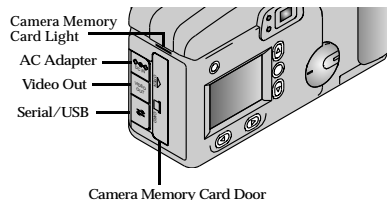 


Camera Bottom

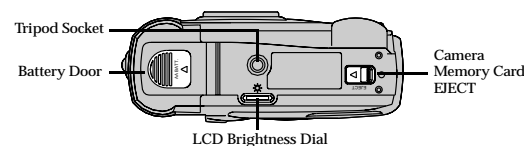 

Camera Top

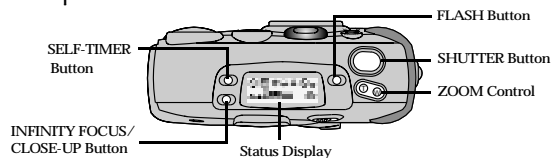 

Status Display

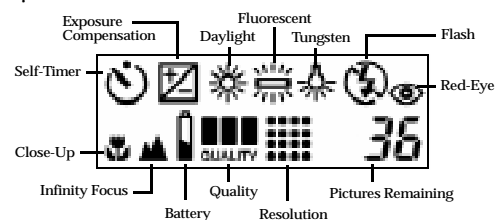 


Taking Pictures


1. Set Mode dial to Capture.
2. Slide POWER Switch to the right to turn on camera.
3. Center subject in viewfinder.
4. Adjust ZOOM.
5. Press SHUTTER button half-way down to lock auto focus, then completely down to take picture.

Picture is stored on camera memory card when the card light above the card door stops blinking.

 
Previewing Pictures

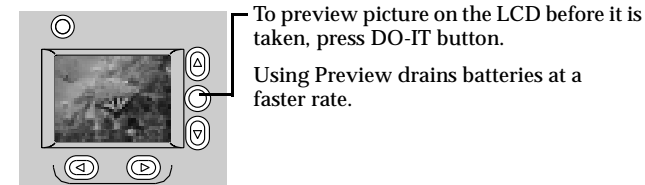

Viewing and Deleting Pictures

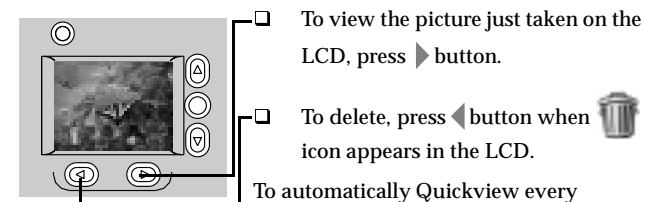 

To automatically Quickview every picture:

1. Set Mode dial to Capture and turn on camera.
2. Press the MENU button.
3. Use ▲/▼ button to select .
4. Press DO-IT button.
5. Use ▲/▼ button to select ON, then press DO-IT button.

Using Quickview drains batteries at a faster rate.