

Quick Reference Guide



Prints in minutes. Lasts for decades.

Amazing true-to-life color

Life's most precious moments are delivered to you by Kodak's exclusive Color Rich Technology which is capable of providing dynamic, photo-realistic quality prints. Automatically adjusts your printer giving you beautiful pictures for sharing with family and friends.

Kodak Color Rich Technology

Kodak's Color Rich Technology was developed to work specifically with KODAK Ultima and Premium Picture Paper and Kodak's unique dyes—providing industry-leading print life. Color Rich Technology makes it possible for the printer to work with your digital image so you get unsurpassed print quality. What's more, Kodak's Color Rich Technology's custom algorithms give you vibrant, colorful prints. Each step of the way, Kodak helps you to keep your quality prints longer.

Longer life prints

The PPM215 is optimized for KODAK Ultima and Premium Picture Papers, providing you with long-term color stability for prints you can enjoy for many years. Printing your pictures has never been easier.



IMPORTANT: Read the information within carefully and keep this document for future reference.

Contents

Important uninstallation information	2
Important installation information	3
Tips for making great prints	3
Recommended supplies	5
Customer support	6
Warranty and regulatory information	6

Important uninstallation information



IMPORTANT: If a LEXMARK Z22 or LEXMARK Z32 Color Jetprinter is, or has ever been connected to your PC, you must first uninstall it from your PC before installing the KODAK Personal Picture Maker 215.

To uninstall the LEXMARK Z22 or LEXMARK Z32 Color Jetprinter:

1. Disconnect the LEXMARK Z22 or LEXMARK Z32 Color Jetprinter cable.
2. Uninstall the printer driver (follow the instructions below according to your operating system).

In WINDOWS 95/98/ME:

1. From the Start menu, select Programs.
2. Select Lexmark Z22 Series or Lexmark Z32 Series.
3. Select Lexmark Z22 Series Uninstall or Lexmark Z32 Series Uninstall.
4. Follow the on-screen instructions.
5. Close any open applications and restart the PC.

In WINDOWS 2000/XP:

1. In WINDOWS 2000; from the Start menu, select Settings, then Printers. In WINDOWS XP; from the Start menu select Printers and Faxes.
2. Right-click on the LEXMARK Z22 OR LEXMARK Z32 icon, then select Delete.
3. When the message window appears to verify the removal of the printer, click Yes.

The printer icon disappears and a dialog box appears to report that the printer has been successfully removed.

4. Close any open applications and restart the PC.

Important installation information

To install the KODAK Personal Picture Maker 215, follow the instructions on the setup sheet, or refer to the User's Guide located on the Printer Software CD included with the printer.



IMPORTANT: During the installation process, be sure to select the proper ink cartridges (color, photo, or black) for the left and right slots when the cartridge maintenance window appears.

If prompted with a Digital Signature or Hardware Installation message regarding Microsoft testing or compatibility, click Yes or Continue Anyway, as appropriate.

ATTENTION WINDOWS XP USERS:

When connecting the KODAK Personal Picture Maker 215 printer cable to the PC, WINDOWS XP will detect hardware for a LEXMARK Z32 Color Jetprinter. Ignore this message and close the dialog box. Proceed with installing the KODAK Personal Picture Maker 215 software as usual.

Tips for making great prints

To get the most out of creating professional looking pictures, here are a couple tips to consider:

- Periodic cleaning of the print nozzles and alignment of the ink cartridges is essential to producing clean, sharp prints. It is especially important after installing or changing cartridges, or after long periods of non-use.
The cartridge maintenance utility for the KODAK Personal Picture Maker 215 allows you to install or change print cartridges, clean the print nozzles, align the cartridges, and even order supplies on-line.

In WINDOWS 95/98/ME:

1. From the Start menu, double-click on the KODAK Personal Picture Maker 215 Control Program icon on your desktop.
The KODAK Personal Picture Maker 215 Control Program appears.
2. Click on the Cartridges tab.
3. Select the feature you wish to use.

...great prints (continued)

In WINDOWS 2000/XP:

1. In WINDOWS 2000; from the Start menu, select Settings, then Printers. In WINDOWS XP; from the Start menu select Printers and Faxes.

2. Right-click on the KODAK Personal Picture Maker 215 icon, then select Properties.

The KODAK Personal Picture Maker 215 Properties window appears.

3. Click on the Cartridge Maintenance tab.
4. Select the feature you wish to use.

- For the best photo-quality prints, always use KODAK Premium Picture Paper or KODAK Ultima Picture Paper. Also, be sure the Printer Driver settings are configured for optimum image quality.

In WINDOWS 95/98/ME:

1. From the Start menu, select Settings, then Printers.

2. Right-click on the KODAK Personal Picture Maker 215 icon, then select Properties.

The KODAK Personal Picture Maker 215 Properties window appears.

3. Click on the Document/Quality tab.
4. For Paper Type, select Kodak Premium Picture Paper (this also applies when using Ultima Picture Paper).
5. Set Print Quality to High.
6. Click on the Apply button, then click the OK button to exit the Properties window.

In WINDOWS 2000/XP:

1. In WINDOWS 2000; from the Start menu, select Settings, then Printers. In WINDOWS XP; from the Start menu select Printers and Faxes.

2. Right-click on the KODAK Personal Picture Maker 215 icon, then select Printing Preferences.

The KODAK Personal Picture Maker 215 Printing Preferences window appears.

3. Click on the Paper/Quality tab.
4. For Media Selection, select Kodak Premium Picture Paper.
5. For Quality Setting, choose Best.
6. Click on the Advanced button.

The KODAK Personal Picture Maker 215 Advanced Options window appears.

7. Under Document Options—Printer, make sure that Color Intent is set to Natural. If it is not set to Natural, click on the current selection to open up a drop-down menu, and change it.
8. Click on the OK button to exit the Advanced Options window.
9. Click on the Apply button, then click the OK button to exit the Printing Preferences window.

Recommended supplies

KODAK Inkjet Cartridges for KODAK Personal Picture Maker 215

KODAK Color Inkjet Cartridge	CAT NO. 195-1730
KODAK Photo Inkjet Cartridge	CAT NO. 175-4852
KODAK Black Inkjet Cartridge	CAT NO. 136-9511

KODAK Picture Paper for Inkjet Prints

KODAK Ultima Picture Paper / High Gloss, 15 sheets, 8.5" x 11"	CAT NO. 811-0579
KODAK Ultima Picture Paper / Satin, 15 sheets, 8.5" x 11"	CAT NO. 845-6147
KODAK Premium Picture / High Gloss, 15 sheets, 8.5" x 11"	CAT NO. 824-5276
KODAK Premium Picture / High Gloss, 50 sheets, 8.5" x 11"	CAT NO. 109-6023
KODAK Premium Picture Paper / Satin, 15 sheets, 8.5" x 11"	CAT NO. 810-7120
KODAK Premium Picture Paper / Satin, 50 sheets, 8.5" x 11"	CAT NO. 123-0325
KODAK Bright White Inkjet Paper, 500 sheets, 8.5" x 11"	CAT NO. 193-9057

For more information on the KODAK Personal Picture Maker 215 and recommended supplies, visit:

www.kodak.com/go/PPM215

Customer support

If you need help with the information in this document or with the KODAK Personal Picture Maker 215 in general, visit:

www.kodak.com/go/PPM215.

Or, in the U.S. and Canada, you may call customer support at **1-877-774-6837** from 9:00 a.m. – 9:00 p.m. Monday through Friday, and 12:00 p.m. – 6:00 p.m. on Saturday (Eastern Standard Time).

Warranty and regulatory information

Statement of Limited Warranty

This warranty applies to the United States and Canada. For customers outside the U.S. and Canada, refer to the country-specific warranty information that came with your printer.

KODAK Personal Picture Maker 215

This Statement of Limited Warranty applies to this product if it was originally purchased for your use, and not for resale, from Kodak or a Kodak remarketer.

Warranty

Kodak warrants that this product:

- Is manufactured from new parts, or new and serviceable used parts, which perform like new parts,
- Is free from defects in material and workmanship,
- Conforms to Kodak's official published specifications, and
- Is in good working order.

If this product does not function as warranted during the warranty period, contact a Remarketer or Kodak for repair without charge.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Warranty service

The warranty period is 12 months and starts on the date of original purchase as shown on the purchase receipt.

To obtain warranty service you may be required to present proof of original purchase. Warranty service will be provided at a Kodak designated location. When warranty service involves the

exchange of a product or part, the item replaced becomes the property of the Remarketer or Kodak. The replacement may be a new or repaired item. The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, or damaged beyond repair. Also, such product must be free of any legal obligation or restrictions that prevent its exchange.

For further explanation of your warranty alternatives and the nearest Kodak authorized servicer in your area, please call 1-877-774-6837.

Free remote technical support is provided for this product throughout its warranty period. Kodak offers a variety of extended warranty programs that include an extension of technical support. For products no longer covered by a Kodak warranty, technical support may only be available for a fee.

Extent of warranty

Kodak does not warrant uninterrupted or error-free operation of a product.

Warranty service does not include repair of failures caused by:

- Modification or attachments
- Accidents or misuse
- Unsuitable physical or operating environment
- Maintenance by anyone other than Kodak or a Kodak authorized servicer
- Operation of a product beyond the limit of its duty cycle
- Failure to have installed a maintenance kit as specified (if applicable)
- Use of printing media outside of Kodak's published specifications
- Use of other than Kodak's inkjet cartridges manufactured by Lexmark
- Use of other than Kodak provided

product or component

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. KODAK DISCLAIMS ALL WARRANTIES, EITHER EXPRESSED OR IMPLIED.

Limitation of liability

Your sole remedy under this Statement of Limited Warranty is set forth in this section. For any claim concerning performance or nonperformance of Kodak or a Remarketer for this product under this Statement of Limited Warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Kodak's liability for actual damages from any cause whatsoever will be limited to the greater of 1) \$5,000 or 2) the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Kodak is legally liable. **IN NO EVENT WILL KODAK OR REMARKETER BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INDIRECT OR INCIDENTAL DAMAGES, OR OTHER ECONOMIC CONSEQUENTIAL DAMAGES.** This is true even if you advise Kodak or a Remarketer of the possibility of such damages. Kodak is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to any developer of materials supplied to Kodak. Kodak's and the developer's limitations of remedies are not cumulative. Such developer is an intended beneficiary of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Electronic emission notices

Federal Communications Commission (FCC) Compliance Information Statement

Statement

The KODAK Personal Picture Maker 215, Type 4103-P01 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for any radio or television interference caused by using other than recommended cables or by unauthorized changes or

modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable USB cable. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lab Operations
Lexmark International, Inc.
740 West New Circle Road
Lexington, KY 40550
(859) 232-3000

Notices

Industry Canada Compliance Statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Community (EC) Directives Conformity

This product is in conformity with the protection requirements of EC Council directives 89/336/EEC and 73/23/EEC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility and safety of electrical equipment designed for use within certain voltage limits.

A declaration of conformity with the requirements of the Directive has been signed by the Director of Manufacturing and Technical Support, Lexmark International, S.A., Boigny, France.

This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950.

Japanese VCCI notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

The United Kingdom Telecommunications Act 1984

This apparatus is approved under the approval number NS/G/1234/J/100003 for the indirect connections to the public telecommunications systems in the United Kingdom.

Energy Star

The EPA ENERGY STAR Computers program is a partnership effort with computer manufacturers to promote the introduction of energy-efficient products and to reduce air pollution caused by power generation.


Companies participating in this program introduce personal computers, printers, monitors, or fax machines that power down when they are not being used. This feature will cut the energy used by up to 50 percent. Lexmark is proud to be a participant in this program.

As an Energy Star Partner, Lexmark International, Inc. has determined that this product meets the Energy Star guidelines for energy efficiency.

Power supply information

If your power supply fails, replace it with the Lexmark replacement part.

Safety information

- If your product is NOT marked with this symbol , it MUST be connected to an electrical outlet that is properly grounded.
- The power supply must be connected to an electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the operating instructions, to a professional service person.
- This product is designed, tested and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.

© Copyright, 2001 Lexmark International, Inc.
All rights reserved.



EASTMAN KODAK COMPANY
Rochester, New York 14650
www.kodak.com/go/PPM215
TM/MC/MR: Kodak

© Eastman Kodak Company, 2001.

P/N 6B5878

9/01