

Kodak


DP900/1100 Digital Projectors

Connecting the Projector


You can connect your projector to a laptop computer, desktop computer, or video player. All connections are made with the aid of icons on the cables.

Caution: Make sure your projector, computer and video player are turned off before you connect them.

Connecting to a Laptop Computer

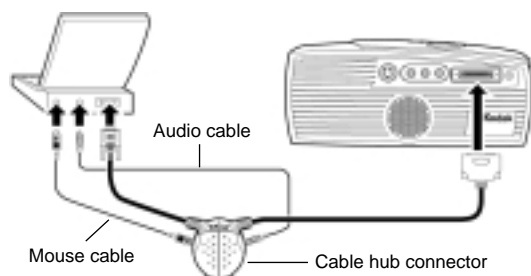

Connecting to a Desktop Computer

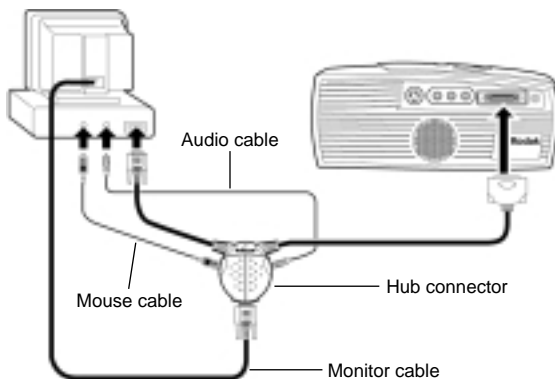


Connecting to a Video Player


If your video player uses a round, four-prong S-video connector, you need an S-video cable in addition to the A/V cable.

Note: The S-video cable is sold separately.

Connecting with an AV Cable

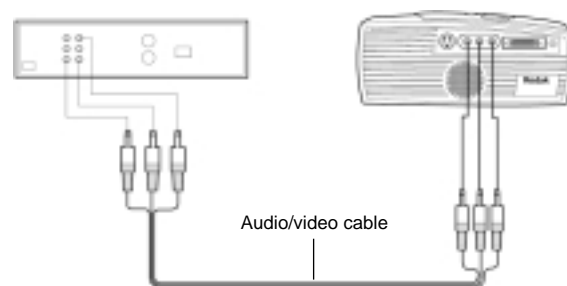


Connecting with an S-video Cable

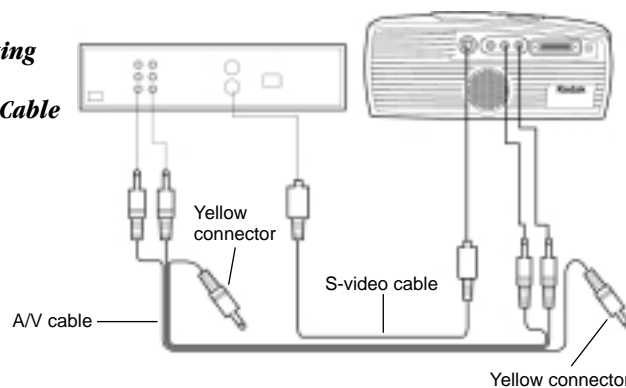

Starting the Projector

1. Remove the lens cap.
2. Plug the power cord into the side of the projector, then plug it into your electrical outlet.
3. Press the "I" side of the power switch to turn on the projector.
4. Turn on your video source - a video player or a computer.
5. Position the projector and adjust the zoom setting for the image size you want.
 - Adjust the zoom ring
 - Focus by rotating focus lens.
 - Be sure the projector is at a 90-degree angle to the screen.
 - Adjust the height of the projector. Press and hold the elevator button. Raise the projector to the height you want, then release the button.

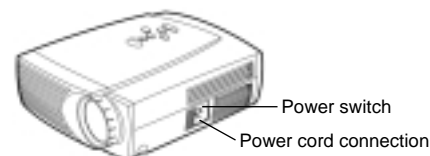



Quick Start Guide

Kodak

DP900/1100 Digital Projectors

Using the Remote Control


For best results, point the remote directly at the projector.

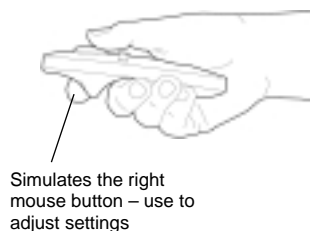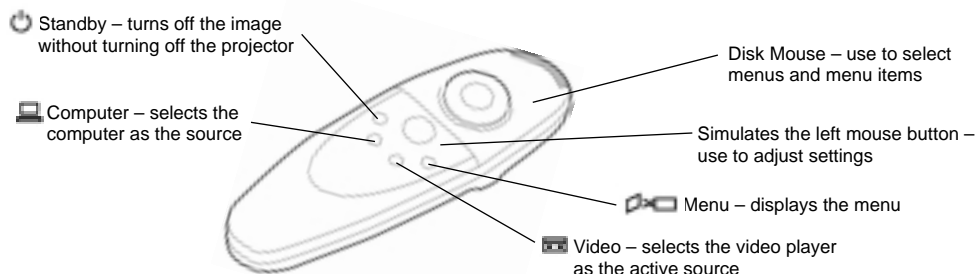

Using the Keypad

While the menu is displayed, the volume, source, and standby buttons act as navigation buttons. Use them to select menu items and move to different menus.

Turning Off the Projector

To turn off the projector for a short period of time, press the  button on the keypad or remote control.

To completely turn off the projector, press the “0” side of the power switch on the side of the projector.


Always unplug the projector from the wall outlet before unplugging the cord at the projector.


Safety Instructions


Safety Definitions

- **Warning:** Statements identify conditions or practices that could result in permanent personal injury.
- **Caution:** Statements identify conditions or practices that could result in damage to your equipment.

Safety Symbols


 **Attention:** For information about use of a feature, please refer to the *Reference Manual*.

 **Warning:** Hot surface. Do not touch.

 An arrow pointing to the lamp door on the projector.

Safety Terms:

- **Warning:** Don't look directly into the lens when the projector is turned on.
- **Warning:** Don't block ventilation openings.
- **Warning:** To replace the lamp, turn the power off and unplug the power cord. To avoid burns, wait 30 minutes before opening the lamp door.
- **Warning:** Please use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal.
- **Warning:** Refer all service to qualified service personnel. Servicing your own projector will void the warranty.
- **Caution:** Don't set liquids on the projector. Spilled liquids may damage your projector.
- **Caution:** Don't place the projector on a hot surface or in direct sunlight.
- **Caution:** Do not drop the projector. Transport the projector in a Kodak-approved case.

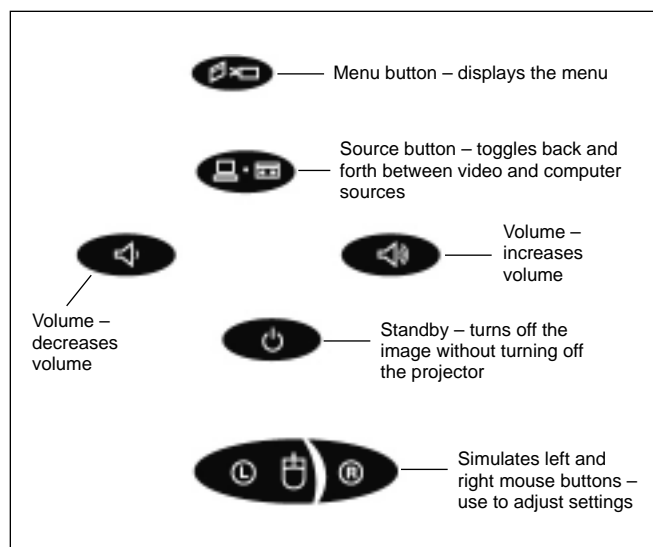

EASTMAN KODAK COMPANY
Rochester, NY 14650

© Eastman Kodak Company, 1999

Printed in the U.S.A.

8/99

Online registration is quick and easy!
www.kodak.com/go/register
Register your new projector now!