




Kurz-Kasch

Electronics Division
Box 1248
2876 Culver Ave.
Dayton, Ohio 45408
Telephone (513) 296-0000

Operating Instructions For Model 100 A

PONG/SUPER PONG/REBOUND - WINNER I
& II Atari/Midway

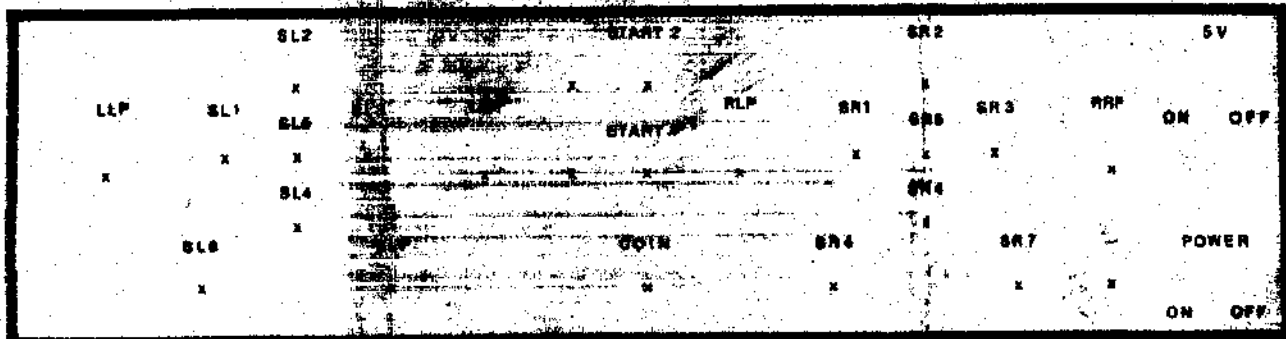

1. Insert program card with number facing you in slots A or B, as marked.
2. Power on
3. Coin
4. RRP - right paddle
5. LLP - left paddle