



DP-2800

PARTS LIST

Published in Oct. '98
5A270771
Revision 1

DP-2800

NOTE

1. Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5A210100	FRONT COVER	DP-2800	60Hz	1

2. Service calls and freight will be charged separately.

3. Symbols in the "Parts Number" column.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

eg.	Parts Number	Parts Name	Parts Number	Parts Name
	5A207600	COVER REAR ASS'Y	•5A208150	COVER REAR
			•5A208350	COVER MAIN

- Parts without "*" are produced only upon order.

4. See the last page of this parts list for the classification of the screws in the illustrations.

5. Items indicated by shaded areas () are supply parts and should be ordered through your Regional Office.

Parts List

DP-2800

———— CONTENTS ————

FIG.1	ENCLOSURE	2
FIG.2	FRAME	4
FIG.3	DRIVE	8
FIG.4	CONTROLLER	10
FIG.5	FEED-TRANSFER UNIT	12
FIG.6	FUSER	14
FIG.7	DRUM UNIT	16
FIG.8	DEVELOPER UNIT	18
FIG.9	MULTI-PURPOSE FEEDER	20
FIG.10	FACE-DOWN UNIT	22
	• INDEX	24

5A2



FIG. 1 ENCLOSURE

5A2

Ref. No.	Part. No.	Description
1	5A210100	COVER FRONT
2	5A211220	PLATE NAME
3	5A208510	PLATE MAGNET CATCH
4	*5A207790	HINGE FRONT LA
5	*5A207800	HINGE FRONT LB
6	5A207550	BKT RIGHT ASS'Y
7	*5A207810	COVER PANEL E ASS'Y
8	*5A211380	SEAL PANEL A
9	5A212720	COVER TOP
10	5A212890	RUBBER FRONT B
11	5A212370	COVER PANEL L
12	5A212380	COVER PANEL R
13	5A207600	COVER REAR ASS'Y
14	*5A208150	COVER REAR
15	*5A208350	COVER MAIN
16	5A207580	LID TOP ASS'Y
17	*5A209850	STOPPER PAPER
18	*5A209940	COVER STOPPER
19	*5A212130	LOCK COVER
20	*5A212240	PLATE TOWER
21	*5A210090	LID TOP
22	*5A211710	LABEL DIAGRAM C
23	*5A211730	LABEL DIAGRAM B
24	*5A211700	LABEL DIAGRAM A
25	5A209660	BRACKET FAN
26	*5A207940	FAN MOTOR
27	5A211920	LOCK LID TOP F
28	5A212200	LOCK LID TOP R
29	5A212550	LEVER TOP
30	5A209290	SPRING CONTA
31	*5A207750	KEY BOARD ASS'Y
32	5A209440	CORD KEEP
33	5A207070	CONN CORD ASS'Y S02057
34	5A208010	SHEET OPE.MANUAL
35	5A211010	RUBBER FRONT
36	5A209750	PUSH CONTAIN
37	*5A212840	TRAY FU ASS'Y
38	*5A212900	TRAY FU A
39	*5A212610	TRAY FU B
40	*5A212390	TRAY FU C

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

Ref. No.	Part. No.	Description
41	*5A209690	PLATE TRAY F
42	*5A209700	PLATE TRAY R
43	*5A209810	BKT TRAY FB
44	*5A212270	LINK FU F
45	*5A212280	LINK FU R
46	*5A212020	HINGE FU F
47	*5A212030	HINGE FU R
48	*5A208100	SLIDER FU
49	*5A209820	BKT TRAY RB
50	*5A209890	BKT TRAY RA
51	*5A209880	BKT TRAY FA
52	5A212700	COVER LEFT
53	5A210080	COVER RIGHT

• Parts without "*" are produced only upon order.

FIG. 2 FRAME

5A2

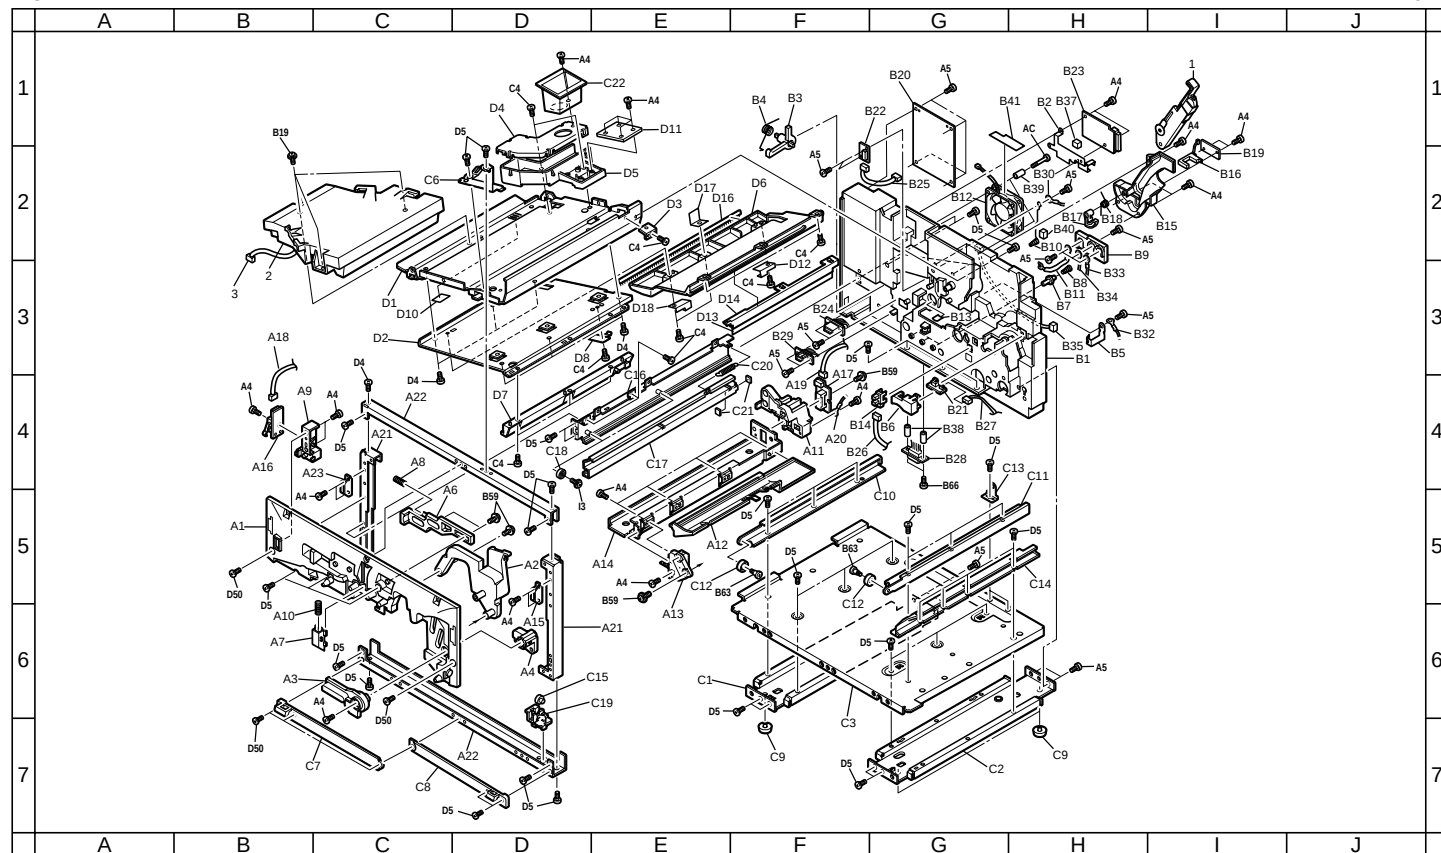


FIG. 2 FRAME

Ref. No.	Part. No.	Description
1	*5A212830	WASTE TONER CONVEYER
2	*5A212780	LK-30 SCANNER UNIT
3	5A207110	CONN CORD ASS'Y
A01	5A210060	FRAME FRONT
A02	5A210170	ARM LEVER DLP
A03	5A210990	LEVER DLP A
A04	5A212090	LEVER DLP B
A05	5A209370	SPRING LEVER A
A06	5A212340	LEVER DRUM
A07	5A211970	LOCK DRUM
A08	5A209360	SPRING LEVER DRUM
A09	5A212210	BKT PWB
A10	5A209300	SPRING LOCK DRUM
A11	5A212420	GUIDE DLP REAR
A12	5A210730	TRAY RAIL
A13	5A210710	RAIL DLP F
A14	5A208140	RAIL DLP
A15	5A207610	MAGNET CATCHER
A16	*5A207510	INTERLOCK SWITCH, FRONT (KP-556)
A17	*5A207420	DEVELOPER RELAY PWB (KP-560)
A18	5A207120	CONN CORD ASS'Y
A19	5A207200	CONN CORD ASS'Y
A20	5A207300	CONN CORD ASS'Y
A21	5A208190	PLATE FRAME SIDE
A22	5A208220	PLATE FRAME
B01	5A212710	FRAME REAR
B02	5A208170	PLATE CONA
B03	5A212190	ACTUATOR JOINT
B04	5A209080	SPRING JOINT
B05	5A208480	PLATE BIAS
B06	5A209790	COVER PWB CONT
B07	5A208460	PIN HV CONTACT
B08	5A209200	SPRING HV CONTACT
B09	5A209830	COVER CONTACT
B10	5A209380	SPRING MAIN A
B11	5A207690	HIGH MEG R ASS'Y
B12	*5A212880	FAN MOTOR
B13	5A211140	SHEET TONER

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5A2-1

Ref. No.	Part. No.	Description
B14	*5A207830	PHOTO SENSOR
B15	5A212620	CASE BELT GUIDE
B16	*5A207760	TOWER SENSOR ASS'Y
B17	5A212110	INTERRUPT SENSOR
B18	5A209050	SPRING SENSOR
B19	5A207490	UPPER CASSETTE PAPER SIZE SENSORS 1/2/3 (KP-581)
B20	*5A207710	TRANS ASS'Y
B21	*5A207530	P.W. BOARD ASS'Y
B22	*5A207410	DRUM RELAY PWB (KP-558)
B23	5A207440	WIRING LIAISON BOARD (KP-564)
B24	5A207040	CONN CORD ASS'Y
B25	5A207150	CONN CORD ASS'Y
B26	5A207170	CONN CORD ASS'Y
B27	5A207180	CONN CORD ASS'Y
B28	5A207210	CONN CORD ASS'Y
B29	5A207220	CONN CORD ASS'Y
B30	5A207230	CONN CORD ASS'Y
B31	5A207240	CONN CORD ASS'Y
B32	5A207250	CONN CORD ASS'Y
B33	5A207260	CONN CORD ASS'Y
B34	5A207270	CONN CORD ASS'Y
B35	5A207330	CONN CORD ASS'Y
B36	5A211620	DUCT DRUM
B37	5A211020	CORD PRESS
B38	5A208410	COLLAR SPACER
B39	5A208470	COLLAR SPACER
B40	5A211000	SPONGE MAIN
B41	5A211340	SHEET FAN A
C01	5A208240	BASE STAY L
C02	5A208250	BASE STAY R
C03	5A208160	PLATE BASE LID
C04	5A208200	FRAME BASE ASS'Y
C05	5A208230	FRAME BASE ASS'Y
C06	5A209580	PLATE EARTH FRONT
C07	5A212520	COVER FRONT LOW L
C08	5A212530	COVER FRONT LOW R
C09	*5A210860	FOOT
C10	5A208910	RAIL BOTTOM L
C11	5A208920	RAIL BOTTOM R

• Parts without "*" are produced only upon order.

FIG. 2 FRAME

5A2

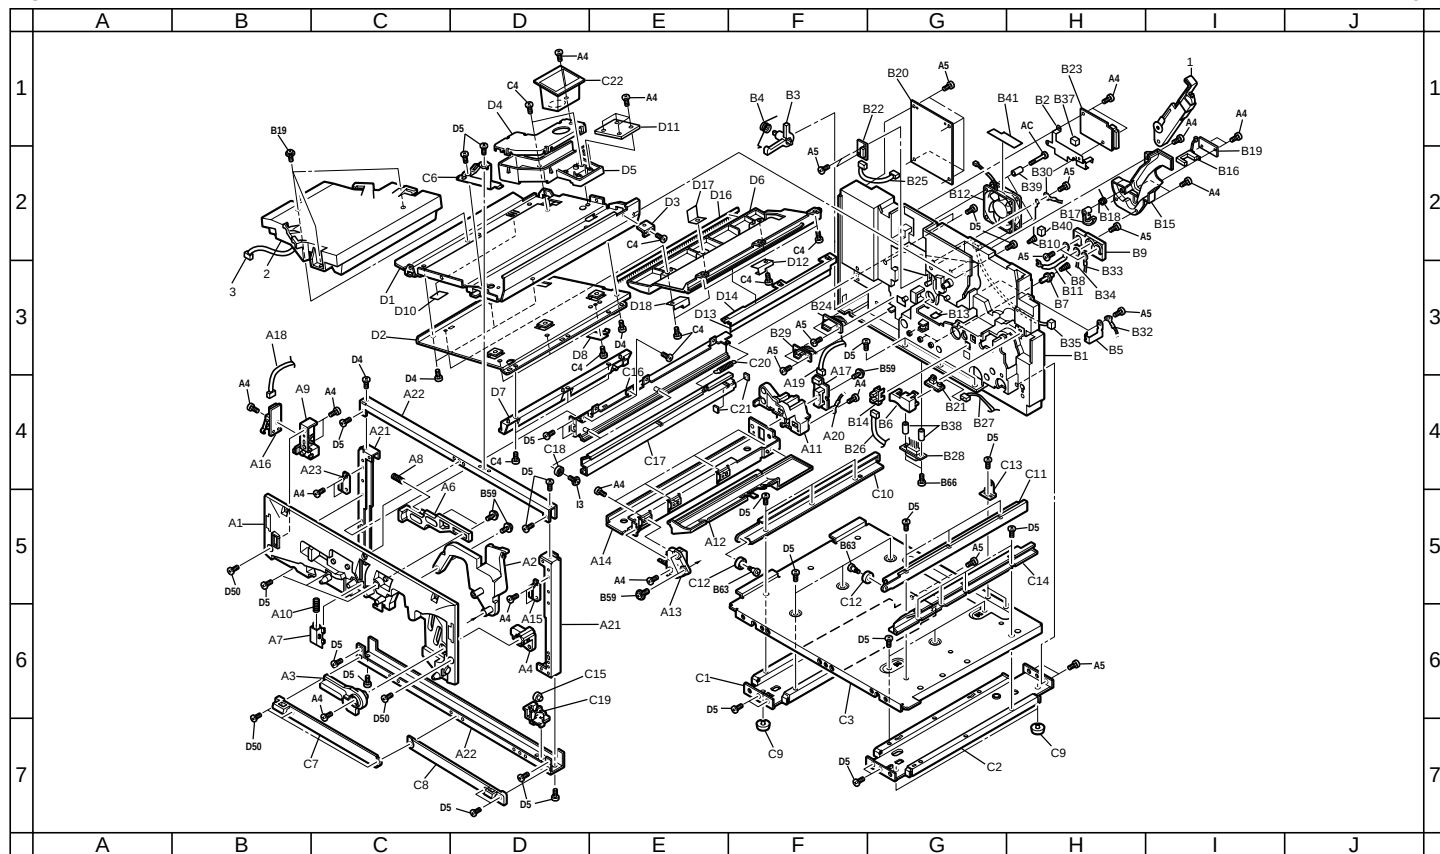


FIG. 2 FRAME

5A2-1

Ref. No.	Part. No.	Description
C12	5A208420	ROLLER DU
C13	5A208310	PLATE FG DRIVE
C14	5A212480	RAIL BASE
C15	5A210830	PULLEY RAIL B
C16	5A208930	RAIL BASE L
C17	5A209720	RAIL MIDDLE
C18	5A210840	PULLEY RAIL D
C19	5A211980	BRACKET PULLEY B
C20	5A209410	SPRING RAIL L
C21	5A211050	PAD FUSER
C22	5A209870	DUCT TOP COVER
D01	5A209730	PLATE SCAN
D02	5A208610	PLATE SCAN MID
D03	5A208320	PLATE COVER TOP
D04	5A209930	DUCT FUSER UP
D05	5A210040	DUCT FUSER BOTTOM
D06	5A212650	HEAT INSULATOR
D07	5A212510	RAIL DRUM
D08	5A209520	PLATE EARTH SD
D09	5A211230	STOPPER DRUM
D10	5A211410	SHEET SCAN
D11	*5A207430	APC-RELAY PWB (KP-570)
D12	5A209470	PLATE COVER FUSER B
D13	5A211560	SHEET INSULATOR A
D14	5A210720	HEAT SEPARATOR
D15	5A212260	COVER HINGE
D16	5A211530	DISCHARGER FU
D17	5A208520	SEAL EARTH FU
D18	5A212910	PLATE COVER FUSER A

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

Ref. No.	Part. No.	Description

• Parts without "*" are produced only upon order.

FIG. 3 DRIVE

5A2

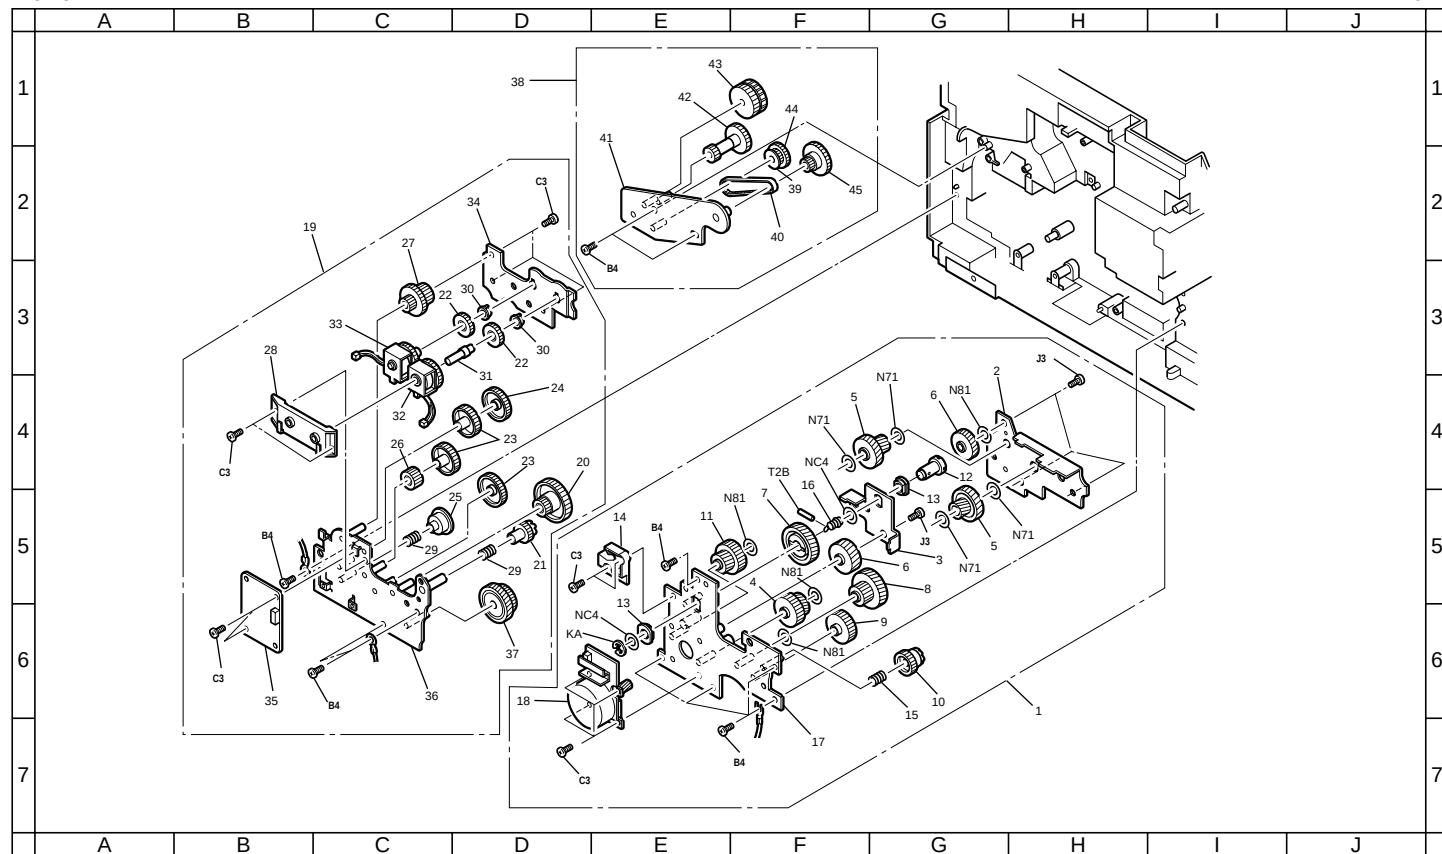


FIG. 3 DRIVE

Ref. No.	Part. No.	Description
1	*5A212800	DRIVE A ASS'Y
2	*5A208340	PLATE DRIVE FRONT
3	*5A208880	PLATE DRIVE MID
4	*5A210600	GEAR Z72H-Z27H
5	*5A210530	GEAR Z46H-Z22H
6	*5A210540	GEAR Z41H
7	*5A210610	GEAR Z55H
8	*5A210620	GEAR Z55H-Z27S
9	*5A210550	GEAR Z45SA
10	*5A210490	GEAR JOINT Z31S
11	*5A210630	GEAR Z76H-Z35H
12	*5A208660	JOINT DRUM
13	*5A208440	BUSH DRUM JOINT
14	*5A211990	JOINT DLP
15	*5A209150	SPRING JOINT UNIT
16	*5A209010	SPRING EARTH DD
17	*5A209710	PLATE DRIVE REAR
18	*5A207680	MOTOR MAIN
19	*5A212810	DRIVE B ASS'Y
20	*5A210650	GEAR Z53S-Z23S
21	*5A210350	GEAR JOINT Z28S
22	*5A210500	GEAR CLUTCH Z32S
23	*5A210560	GEAR Z45S B
24	*5A210590	GEAR Z50S-Z24S
25	*5A210360	GEAR JOINT Z26S
26	*5A210370	GEAR Z24S
27	*5A210580	GEAR Z30S-Z43S-Z17S
28	*5A210130	HOLDER CLUTCH
29	*5A209150	SPRING JOINT UNIT
30	*5A210790	BUSHING STOP
31	*5A208690	SHAFT CLUTCH F
32	*5A207920	CLUTCH REGIST
33	*5A207910	CLUTCH FEED
34	*5A208570	PLATE COVER GEAR
35	*5A207460	P.W. BOARD ASS'Y
36	*5A209680	PLATE DRIVE CLUTCH
37	*5A210640	GEAR Z56H-Z37S
38	*5A212820	DRIVE C ASS'Y
39	*5A210160	COVER PULLEY
40	*5A210870	BELT DRIVE TOWER

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5A2

Ref. No.	Part. No.	Description
41	*5A209670	PLATE D-CONTAINER
42	*5A210380	GEAR Z30S-Z20S
43	*5A210570	GEAR Z45S-Z22S
44	*5A210190	GEAR Z33S-P36
45	*5A210200	GEAR Z36S-P20

• Parts without "*" are produced only upon order.

FIG. 4 CONTROLLER

5A2

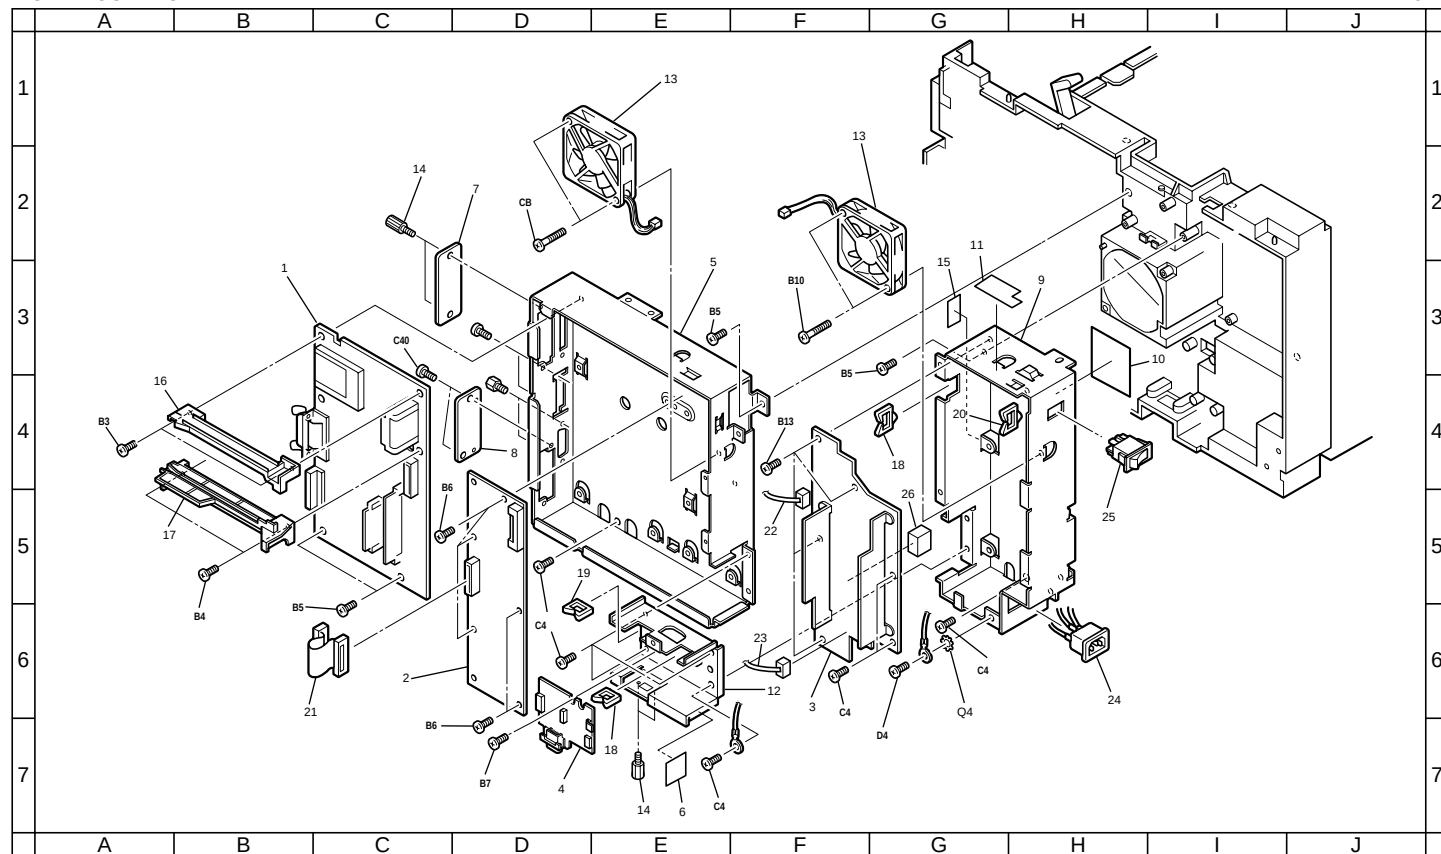


FIG. 4 CONTROLLER

5A2-1

Ref. No.	Part. No.	Description
1	*5A207480	MAIN LOGIC BOARD (KP-536)
2	*5A207370	ENGINE BOARD (KP-544)
3	*5A207350	SWITCHING REGULATOR
4	*5A207450	CON 3 PWB (KP-568)
5	5A208130	CONT BOX
6	5A211250	SHEET CONT D
7	5A208530	PLATE OPTION
8	5A208540	PLATE CONTROLLER
9	5A208120	SHIELD CASE
10	5A211590	SHEET CONT A
11	5A211400	SHEET CONT B
12	5A208180	PLATE CON C
13	*5A207940	FAN MOTOR
14	5A213060	SCREW OP
15	5A211180	SHEET CONT C
16	5A212320	RAIL OPTION A
17	5A212360	RAIL OPTION B
18	5A210110	EDGING SADDLE
19	5A210120	EDGING SADDLE
20	5A211820	LOCKING WIRE SADDLE
21	5A207010	CONN CORD ASS'Y
22	5A207080	CONN CORD ASS'Y
23	5A207140	CONN CORD ASS'Y
24	5A207160	CONN CORD ASS'Y
25	5A207870	SEE SAW SW
26	5A211160	SARCON GR

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

Ref. No.	Part. No.	Description

• Parts without "*" are produced only upon order.

FIG. 5 FEED-TRANSFER UNIT

5A2

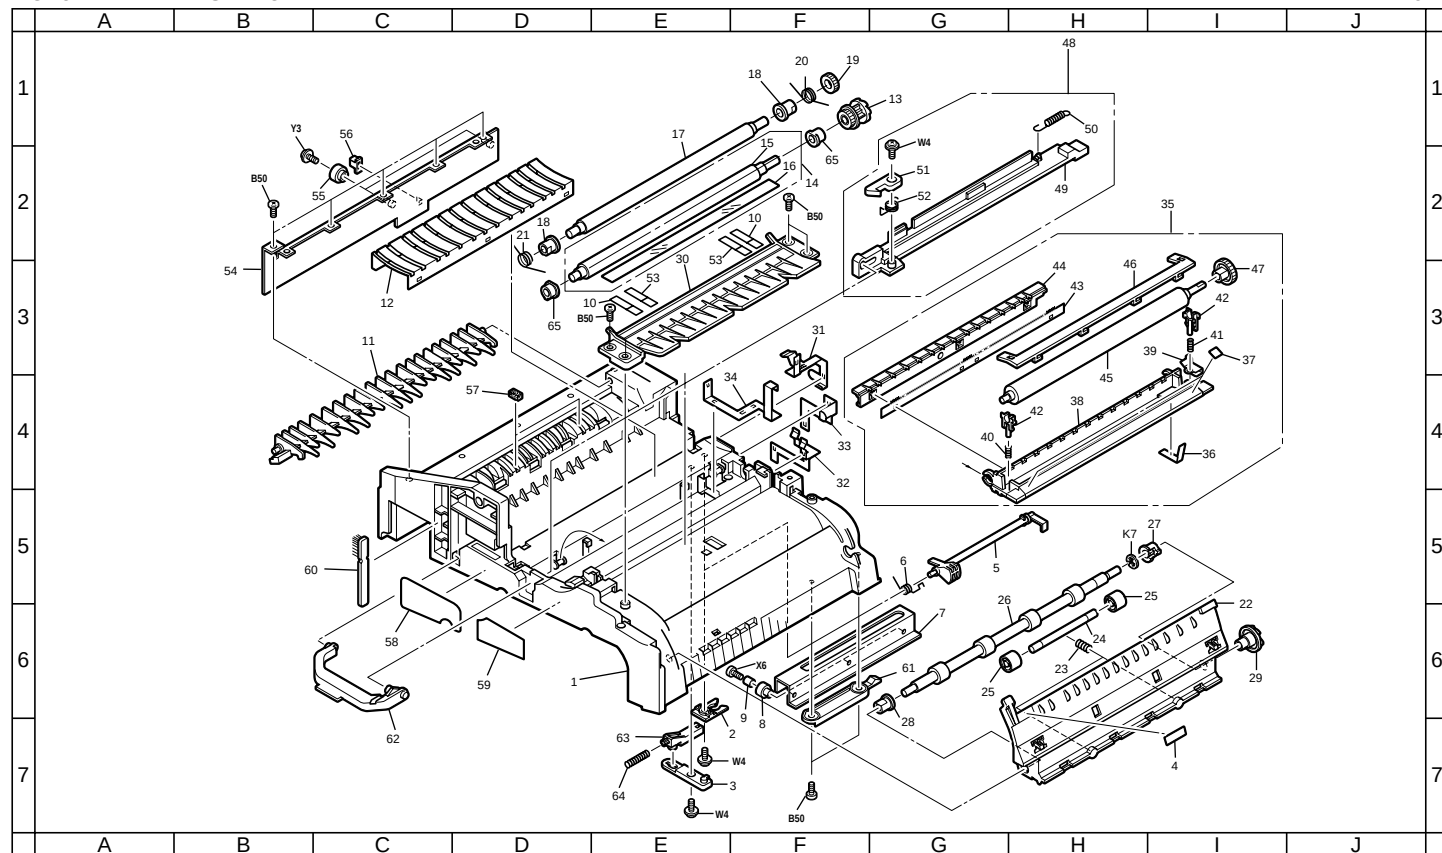


FIG. 5 FEED-TRANSFER UNIT

5A2

Ref. No.	Part. No.	Description
1	5A212730	CASE LOW
2	5A211810	LATCH RAIL
3	5A212120	PLATE LOCK A
4	5A211650	LABEL RELEASE B
5	*5A212310	ACTUATOR REGIST
6	5A209000	SPRING ACTUATOR RE
7	5A208210	RAIL CASE R
8	5A210880	PULLEY RAIL C
9	5A208400	COLLAR SPACER
10	5A211290	SHEET GUIDE PAPER B
11	5A212560	GUIDE CHANGE DU
12	5A208900	PLATE PAPER GUIDE
13	5A210420	GEAR JOINT Z32
14	*5A212860	REGIST LOW ASS'Y
15	*5A208820	ROLLER REGIST LOW
16	*5A211510	SHEET REGIST
17	5A208810	ROLLER REGIST UP
18	5A208450	METAL BUSH REGIST
19	5A210290	GEAR REGIST Z24
20	5A209060	SPRING REGIST A
21	5A209070	SPRING REGIST B
22	5A212660	GUIDE PAPER
23	5A209140	SPRING MIDDLE
24	5A208730	SHAFT PULLEY
25	5A210920	PULLEY MIDDLE
26	*5A208800	ROLLER MIDDLE
27	5A210930	BUSH B
28	5A210900	BUSH C
29	*5A210940	LATCH JOINT
30	5A211570	GUIDE PAPER B
31	5A209590	PLATE REGIST
32	5A209620	PLATE TC
33	5A209630	PLATE DISCHARGER
34	5A209570	PLATE EARTH REGIST
35	*5A212790	TR-30 TRANSFER UNIT ASS'Y
36	*5A208490	SHEET EARTH TC
37	*5A211640	LABEL RELEASE A
38	*5A210000	GUIDE TC
39	*5A209430	PLATE CONTACT TC
40	*5A209240	SPRING TC ROLL

Ref. No.	Part. No.	Description
41	*5A209110	SPRING BUSH
42	*5A211860	BUSH TRANSFER B
43	*5A208580	BRUSH DC CHARGE
44	*5A212470	HOLDER DC CHARGE
45	*5A208850	ROLLER TRANSFER
46	*5A212500	GUIDE CHUTE LOW
47	*5A210330	GEAR TC Z26
48	*5A212850	PLATE RELEASE ASS'Y
49	*5A212490	PLATE RELEASE
50	*5A209280	SPRING RELEASE B
51	*5A211910	HOLDER RELEASE
52	*5A209020	SPRING RELEASE C
53	5A211270	SHEET GUIDE PAPER A
54	5A208370	RAIL CASE L
55	5A210910	PULLEY RAIL E
56	5A211760	KNOB RELEASE
57	5A211080	PAD CUSHION
58	5A211720	LABEL CASE A
59	5A211670	LABEL CASE B
60	5A207560	BRUSH CLEAN ASS'Y
61	5A212290	HOLDER RAIL A
62	*5A212330	HANDLE CASE
63	5A212920	PLATE LOCK B
64	5A212930	SPRING RELEASE A
65	5A208380	BUSH DRUM

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts without "*" are produced only upon order.

FIG. 6 FUSER

5A2

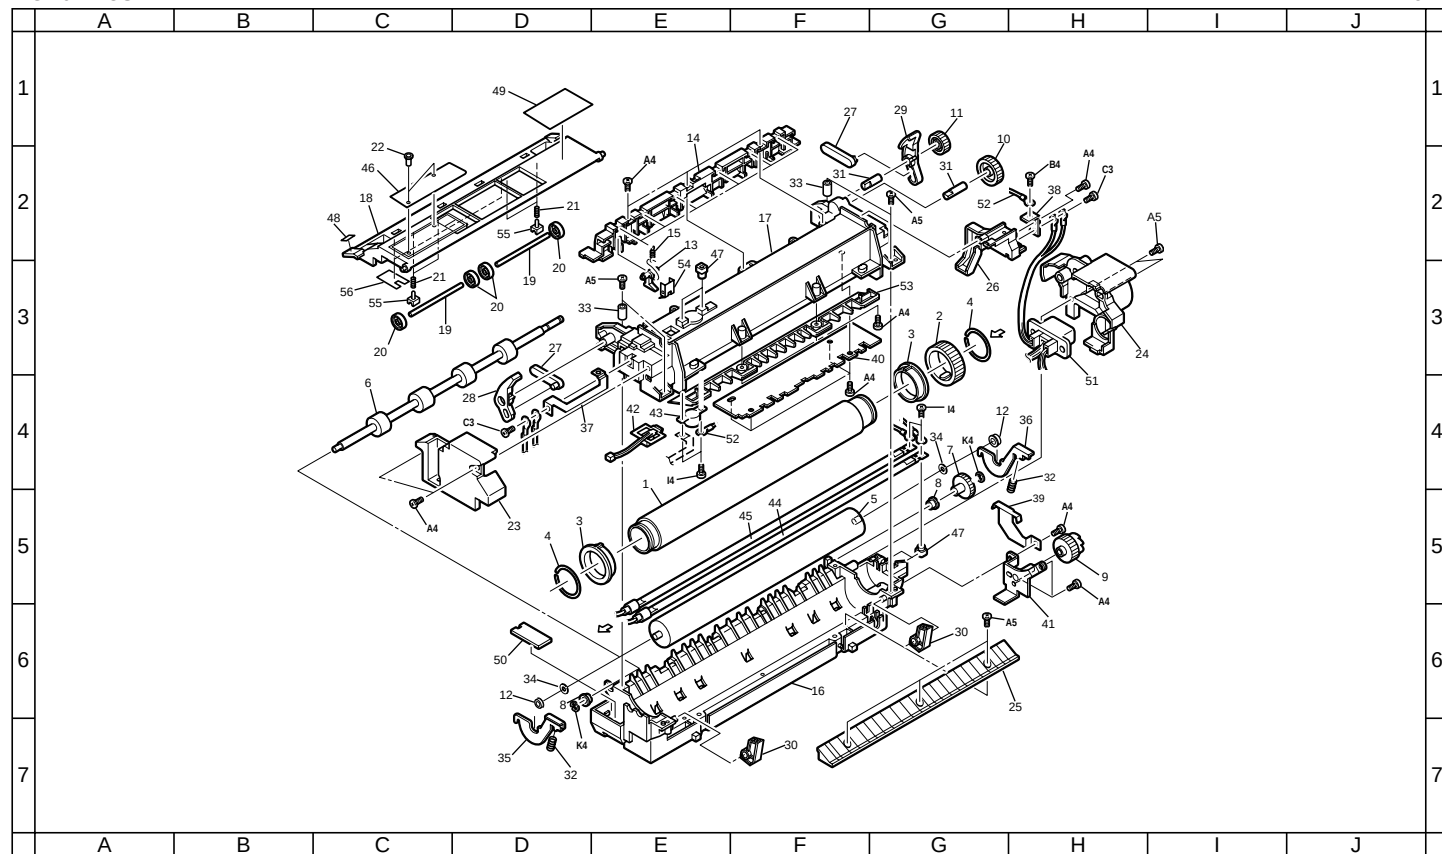


FIG. 6 FUSER

Ref. No.	Part. No.	Description
	*5A212750	FK-30 FUSER UNIT(U)
1	5A208840	ROLLER HEAT
2	5A210660	GEAR Z55
3	5A210970	BUSH HEAT
4	5A209320	RING STOP
5	5A208860	ROLLER PRESS
6	5A208830	ROLLER FUSER
7	5A210390	GEAR Z29S
8	5A208430	BUSHING SBK
9	5A210520	GEAR FUSER Z33
10	5A210510	GEAR Z36
11	5A210270	GEAR MFEED Z25
12	5A208030	BALL BEARING
13	*5A211780	SEPARATOR
14	5A209960	COVER SEPARATOR
15	5A209030	SPRING SEPARATOR
16	5A210050	FRAME FUSER LOW
17	5A210030	FRAME FUSER UP
18	5A212590	COVER FUSER
19	5A208700	SHAFT EXIT
20	5A210800	PULLEY EXIT
21	5A209120	SPRING EXIT
22	5A208040	GROMMET
23	5A209910	COVER FUSER F
24	5A209920	COVER FUSER R
25	5A209950	GUIDE ENTRANCE
26	5A212250	BKT FUSER
27	5A211030	LINK LOCK
28	5A212070	LEVER LOCK F
29	5A212080	LEVER LOCK R
30	5A211800	LEVER RELEASE
31	5A208640	PIN FUSER
32	5A209180	SPRING PRESS
33	5A210750	SPACER
34	5A210760	POLY WASHER
35	5A209600	PLATE PRESS F
36	5A209610	PLATE PRESS R
37	5A209560	PLATE FUSER
38	5A208290	PLUG FUSER
39	5A209530	PLATE EARTH

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5A2-1

Ref. No.	Part. No.	Description
40	5A208590	PLATE FUSER UP
41	5A209550	PLATE FUSER GEAR
42	*5A207700	THERMISTOR ASS'Y
43	5A207900	THERMO STAT 250V 175-C
44	*5A207970	HEATER LAMP C
45	*5A207980	HEATER LAMP S
46	5A211680	LABEL CAUTION FUSER
47	5A208260	NUT FUSER
48	5A211090	SHEET FUSER G
49	5A211690	LABEL CAUTION L
50	5A207400	<i>FUSER PWB (KP-550)</i>
51	5A207280	CONN CORD ASS'Y
52	5A207290	CONN CORD ASS'Y
53	5A212540	GUIDE CHUTE
54	5A208110	SUPPORT SEPARATOR
55	5A210140	BUSH SP
56	5A211190	SHEET FUSER A

• Parts without "*" are produced only upon order.

FIG. 7 DRUM UNIT

5A2

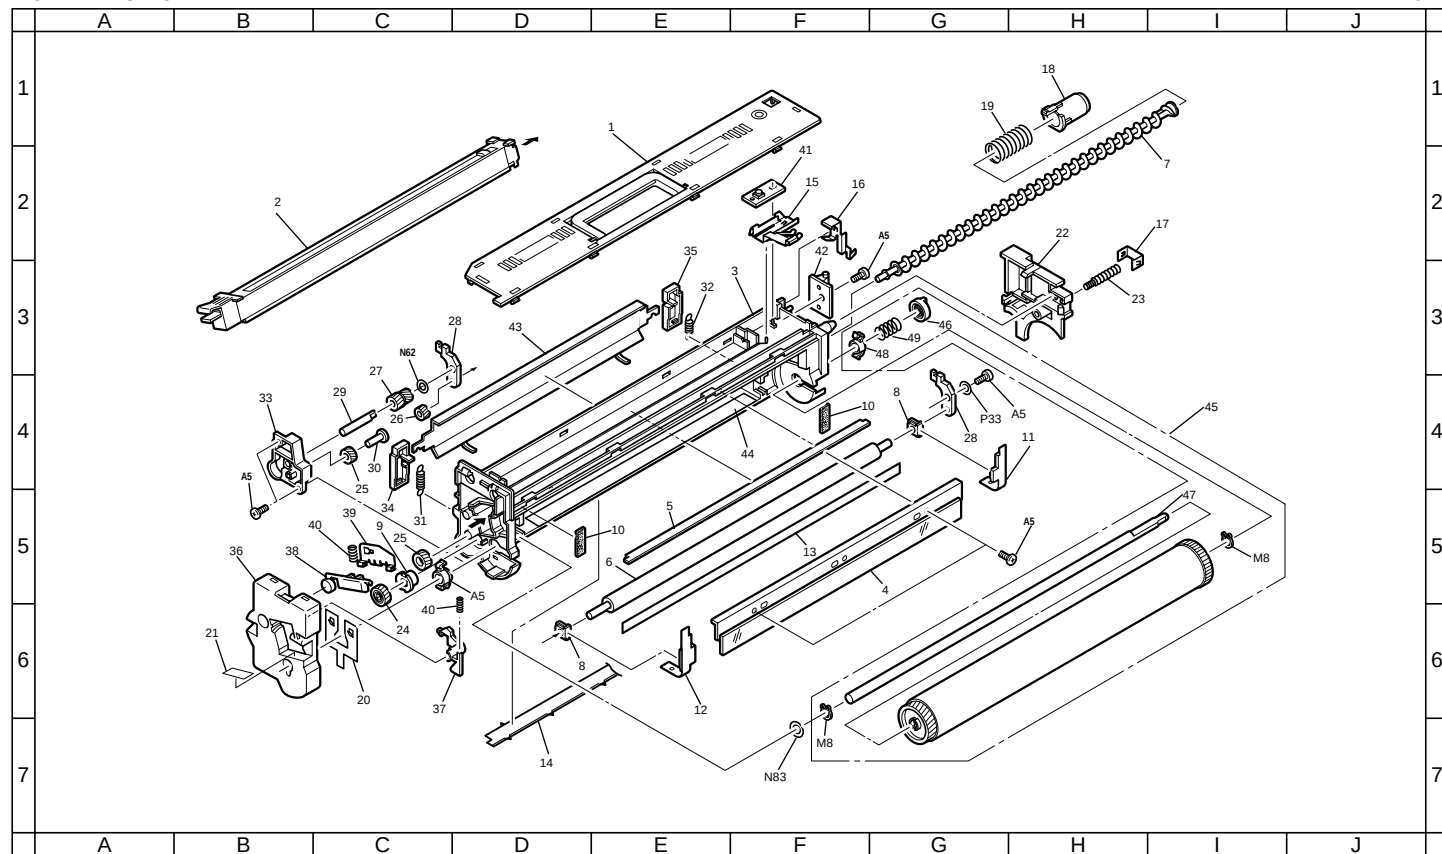


FIG. 7 DRUM UNIT

5A2-1

Ref. No.	Part. No.	Description
1	*5A212770	DK-30 DRUM UNIT
	5A207590	DRUM COVER UP ASS'Y
2	*5A212870	MCH UNIT
3	5A210070	FRAME DRUM
4	5A207540	BLADE ASS'Y
5	5A207670	LED ASS'Y
6	5A208790	ROLL CLN
7	5A210980	SCREW
8	5A211040	BUSH CLN
9	5A210890	BUSH SCREW
10	5A211120	SEAL BLADE
11	5A211300	SEAL DRUM R
12	5A211310	SEAL DRUM F
13	5A211460	SHEET DRUM
14	5A211550	SHEET DRUM LOW ASS'Y
15	5A209510	PLATE ZENER A
16	5A209460	PLATE ZENER B
17	5A208870	PLATE MCH U
18	5A210960	SHUTTER
19	5A209260	SPRING SHUTTER
20	5A208500	PLATE DRUM FRONT
21	5A211150	SHEET DRUM FRONT
22	5A209860	COVER DRUM REAR
23	5A209350	SPRING MCH
24	5A210250	GEAR Z17H
25	5A210220	GEAR Z16H
26	5A212950	GEAR Z13H
27	5A212960	GEAR Z15H-Z14H
28	5A211960	ARM ROLL CLN
29	5A208670	PIN IDLE A
30	5A208650	PIN IDLE B
31	5A209210	SPRING ROLL A
32	5A209220	SPRING ROLL B
33	5A212230	PLATE GEAR
34	5A209770	COVER CLN SPRING F
35	5A209780	COVER CLN SPRING R
36	5A209900	COVER DRUM FRONT
37	5A212050	LOCK COVER DRUM
38	5A212010	LOCK MCH
39	5A209490	PLATE COV HOLDER

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

Ref. No.	Part. No.	Description
40	5A208960	SPRING LOCK MCH
41	5A212970	DRUM UNIT ZENER PWB (KP-605)
42	5A212980	DRUM PWB (KP-562)
43	5A211630	PLATE DRUM LEFT
44	5A211520	SHEET CLN
45	5A207740	DRUM ASS'Y
46	*5A213050	SPRING ACTUATOR
47	*5A213020	SHAFT DRUM
48	*5A213030	BUSH DRUM
49	*5A213040	ACTUATOR DRUM

• Parts without "*" are produced only upon order.

FIG. 8 DEVELOPER UNIT

5A2

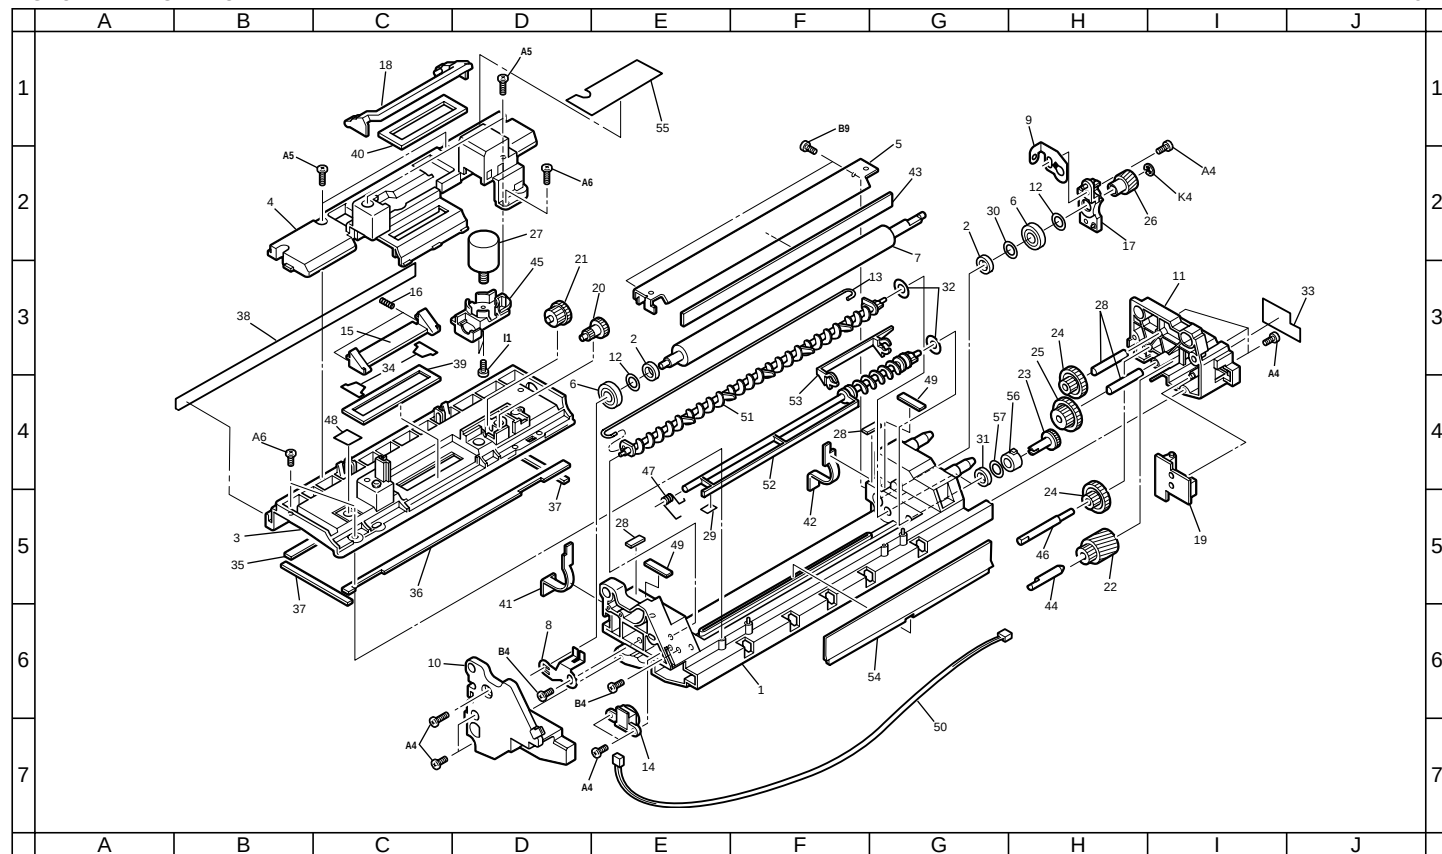


FIG. 8 DEVELOPER UNIT

Ref. No.	Part. No.	Description
1	5A212690	CASE DLP
2	5A208020	BALL BEARING
3	5A212640	LID DLP
4	5A212600	COVER DLP
5	5A208890	BLADE DLP
6	5A207630	PULLEY DLP ASS'Y
7	5A207640	ROLLER MAGNET
8	5A209740	PLATE BIAS A
9	5A208300	PLATE BIAS B
10	5A212400	COVER R DLP
11	5A212410	COVER GEAR
12	5A208070	POLY WASHER
13	5A209420	SCRAPER DLP B
14	5A207720	TONER SENSOR
15	5A212300	SHUTTER DLP
16	5A209230	SPRING SHUTTER
17	5A212040	FLANGE MAG
18	5A212350	HANDLE DLP
19	5A207390	DEVELOPER PWB (KP-548)
20	5A210180	WORM WHEEL H28-Z14
21	5A210280	GEAR IDLE Z30-Z15
22	5A210300	GEAR Z23H-Z18S
23	5A210230	GEAR SCRAPER Z18S
24	5A210460	GEAR Z34S-Z16S
25	5A210470	GEAR Z36S-Z23S
26	5A210240	GEAR MG Z17H
27	5A207820	DC MOTOR ASS'Y
28	5A211060	SPACER DLP
29	5A211070	SCRAPER SCREW
30	5A208090	POLY WASHER
31	5A211260	SEAL SCRAPER
32	5A211430	SHEET SCRAPER
33	5A211170	SHEET PWB
34	5A211130	SHEET SHUT SIDE
35	5A211480	SEAL LID A
36	5A211470	SEAL LID B
37	5A211280	SEAL LID SIDE
38	5A211500	SHEET MG UP
39	5A211350	SHEET SHUTTER
40	5A211360	SEAL SHUTTER

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5A2-1

Ref. No.	Part. No.	Description
41	5A211320	SEAL SIDE DLP L
42	5A211330	SEAL SIDE DLP R
43	5A211490	MAGNET BLADE
44	5A208680	PIN DLP A
45	5A212100	BRACKET MOTOR
46	5A208710	PIN DLP B
47	5A208970	SPRING SENSOR
48	5A211100	SEAL LID
49	5A211110	SEAL SIDE DLP
50	5A207310	CONN CORD ASS'Y
51	5A211600	SCREW F DLP
52	5A211610	SCREW B DLP
53	5A212140	SCRAPER B DLP
54	5A211540	SEPARATOR DLP
55	5A211660	LABEL CAUTION
56	5A210850	BUSH SCRAPER
57	5A211440	SHEET SCRAPER MID

• Parts without "*" are produced only upon order.

	A	B	C	D	E	F	G	H	I	J		
1												1
2												2
3												3
4												4
5												5
6												6
7												7
	A	B	C	D	E	F	G	H	I	J		

FIG. 9 MULTI-PURPOSE FEEDER

5A2-1

Ref. No.	Part. No.	Description
1	5A212680	FRAME RIGHT
2	5A212450	FRAME BOTTOM
3	5A209990	HOLDER FEED
4	5A209970	PLATE BOTTOM
5	5A211210	PAD FRICTION
6	5A208360	SUPPORT BOTTOM
7	5A211750	LEVER RETURN
8	5A212150	LEVER INTERLOCK
9	5A209540	PLATE EARTH MPF
10	5A208330	PLATE EARTH EF
11	5A208560	BKT CLUTCH
12	5A210320	GEAR FEED Z22
13	5A210340	GEAR MD Z26
14	5A210310	GEAR Z22
15	5A208740	SHAFT MPF
16	5A208780	ROLLER MPF MID
17	5A212220	BKT SEPARATOR
18	5A209760	CAP CONNECT EF
19	5A209250	SPRING SEPARATOR
20	5A209310	SPRING BOTTOM
21	5A209330	SPRING PULLEY MD
22	5A210950	PULLEY S
23	5A210810	BUSH POM B
24	5A210740	BUSH POM EW
25	5A207830	PHOTO SENSOR
26	*5A207570	CLUTCH ASS'Y
27	*5A207650	ROLLER FEED ASS'Y
28	*5A207360	SEPARATOR ASS'Y
29	*5A208000	SOLENOID FLAPPER
30	5A209800	BKT SENSOR A
31	5A211940	ACTUATOR EF
32	5A208990	SPRING ACT EF
33	5A209840	BKT SENSOR B
34	*5A207880	MICRO SWITCH 01X02
35	5A207890	PUSH SWITCH 01 SN
36	5A211870	ACTUATOR MPF A
37	5A207500	<i>MPF PAPER SIZE SENSORS 1&2 (KP-576)</i>
38	5A211790	ACTUATOR MPF B
39	*5A207660	TRAY MPF ASS'Y
40	*5A207780	SENSOR ETON ASS'Y

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

Ref. No.	Part. No.	Description
41	5A209500	STOPPER CAM
42	*5A207380	<i>ENVELOPE PWB (KP-502)</i>
43	5A207190	CONN CORD ASS'Y
44	5A207100	CONN CORD ASS'Y
45	5A209340	SPRING PULLEY EF
46	5A208980	SPRING ACT MPF
47	5A207130	CONN CORD ASS'Y

• Parts without "*" are produced only upon order.

FIG. 10 FACE-DOWN UNIT

5A2

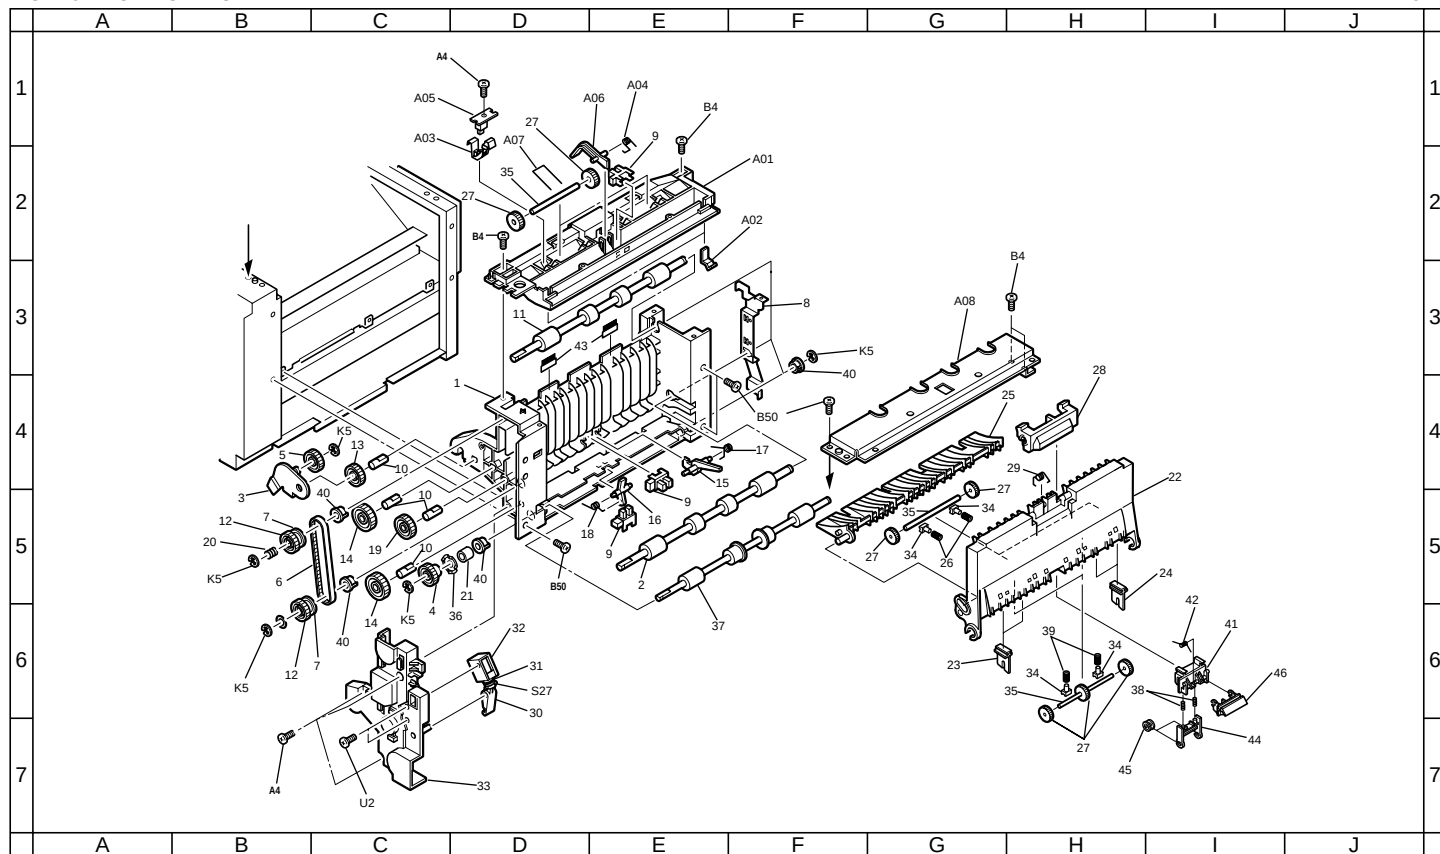


FIG. 10 FACE-DOWN UNIT

5A2-1

Ref. No.	Part. No.	Description
1	5A212670	FRAME FD
2	5A208770	ROLLER EXIT A
3	5A208550	PLATE JOINT FD
4	5A210410	GEAR Z29S A
5	5A210440	GEAR FEED Z34
6	5A210680	BELT FD
7	5A210670	PULLEY P26
8	5A209650	PLATE EARTH FD
9	*5A207830	PHOTO SENSOR
10	5A208630	PIN FDA
11	5A208760	ROLLER EXIT B
12	5A210400	GEAR Z29S
13	5A210480	GEAR IDLE Z33
14	5A210430	GEAR IDLE Z40
15	*5A212000	ACTUATOR FD
16	*5A211850	ACTUATOR FU
17	5A209040	SPRING FD
18	5A208950	SPRING FU
19	5A210450	GEAR Z38S
20	5A209190	SPRING PRESS A
21	5A210770	COLLAR
22	5A212630	COVER FD
23	5A211830	HOLDER FD R
24	5A211840	HOLDER FD L
25	5A212570	GUIDE CHANGE
26	5A209090	SPRING EXIT
27	5A210780	PULLEY EXIT
28	5A212160	LATCH FD
29	5A209130	SPRING LATCH
30	5A211930	ACTUATOR SOL
31	*5A209170	SPRING SOL
32	5A207990	SOLENOID
33	5A212460	COVER SIDE
34	5A210140	BUSH SP
35	5A208720	SHAFT EXIT
36	5A209480	WASHER WAVE
37	5A208750	ROLLER EXIT C
38	5A208940	SPRING PULLEY
39	5A209100	SPRING EXIT A
40	5A208380	BUSH DRUM

Ref. No.	Part. No.	Description
41	5A211950	BASE STOCKER
42	5A209390	SPRING STOCKER
43	5A211240	DISCHARGER FD
44	5A211880	HOLDER PULLEY
45	5A211740	PULLEY STOCKER
46	5A211900	STOCKER
A01	5A212580	GUIDE FD
A02	5A211890	SNAP
A03	5A209640	PLATE SWITCH
A04	5A209270	SPRING FULL
A05	5A207520	<i>PRINTER SIDE COVER SWITCH (KP-552)</i>
A06	*5A212060	ACTUATOR FULL
A07	5A209400	SPRING FD EXIT
A08	5A208620	PLATE FD

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts without "*" are produced only upon order.

INDEX

5A2-1

Part. No.	Description	Fig. No.
5A207010	CONN CORD ASS'Y	4
5A207040	CONN CORD ASS'Y	2
5A207070	CONN CORD ASS'Y S02057	1
5A207080	CONN CORD ASS'Y	4
5A207100	CONN CORD ASS'Y	9
5A207110	CONN CORD ASS'Y	2
5A207120	CONN CORD ASS'Y	2
5A207130	CONN CORD ASS'Y	10
5A207140	CONN CORD ASS'Y	4
5A207150	CONN CORD ASS'Y	2
5A207160	CONN CORD ASS'Y	4
5A207170	CONN CORD ASS'Y	2
5A207180	CONN CORD ASS'Y	2
5A207190	CONN CORD ASS'Y	9
5A207200	CONN CORD ASS'Y	2
5A207210	CONN CORD ASS'Y	2
5A207220	CONN CORD ASS'Y	2
5A207230	CONN CORD ASS'Y	2
5A207240	CONN CORD ASS'Y	2
5A207250	CONN CORD ASS'Y	2
5A207260	CONN CORD ASS'Y	2
5A207270	CONN CORD ASS'Y	2
5A207280	CONN CORD ASS'Y	6
5A207290	CONN CORD ASS'Y	6
5A207300	CONN CORD ASS'Y	2
5A207310	CONN CORD ASS'Y	8
5A207330	CONN CORD ASS'Y	2
5A207350	SWITCHING REGULATOR	4
5A207360	SEPARATOR ASS'Y	9
5A207370	ENGINE BOARD (KP-544)	4
5A207380	ENVELOPE PWB (KP-502)	9
5A207390	DEVELOPER PWB (KP-548)	8
5A207400	FUSER PWB (KP-550)	6
5A207410	DRUM RELAY PWB (KP-558)	2
5A207420	DEVELOPER RELAY PWB (KP-560)	2
5A207430	APC RELAY PWB (KP-570)	2
5A207440	WIRING LIAISON BOARD (KP-564)	2
5A207450	CON 3 PWB (KP-568)	4
5A207460	CON 2 PWB (KP-599)	3
5A207480	MAIN LOGIC BOARD (KP-536)	4

Part. No.	Description	Fig. No.
5A207490	UPPER CASSETTE PAPER SIZE SENSORS 1/2/3 (KP-581)	2
5A207500	MPF PAPER SIZE SENSORS 1&2 (KP-576)	9
5A207510	INTERLOCK SWITCH FRONT (KP-556)	2
5A207520	PRINTER SIDE COVER SWITCH (KP-552)	10
5A207530	P.W. BOARD ASS'Y	2
5A207540	BLADE ASS'Y	7
5A207550	BKT RIGHT ASS'Y	1
5A207560	BRUSH CLEAN ASS'Y	5
5A207570	CLUTCH ASS'Y	9
5A207580	LID TOP ASS'Y	1
5A207590	DRUM COVER UP ASS'Y	7
5A207600	COVER REAR ASS'Y	1
5A207610	MAGNET CATCHER	2
5A207630	PULLEY DLP ASS'Y	8
5A207640	ROLLER MAGNET	8
5A207650	ROLLER FEED ASS'Y	9
5A207660	TRAY MPF ASS'Y	9
5A207670	LED ASS'Y	7
5A207680	MOTOR MAIN	3
5A207690	HIGH MEG R ASS'Y	2
5A207700	THERMISTOR ASS'Y	6
5A207710	TRANS ASS'Y	2
5A207720	TONER SENSOR	8
5A207740	DRUM ASS'Y	7
5A207750	KEY BOARD ASS'Y	1
5A207760	TOWER SENSOR ASS'Y	2
5A207780	SENSOR ETON ASS'Y	9
5A207790	HINGE FRONT LA	1
5A207800	HINGE FRONT LB	1
5A207810	COVER PANEL E ASS'Y	1
5A207820	DC MOTOR ASS'Y	8
5A207830	PHOTO SENSOR	2, 9, 11
5A207870	SEE-SAW SW	4
5A207880	MICRO SWITCH 01X02	9
5A207890	PUSH SWITCH 01 SN	9
5A207900	THERMO STAT 250V 175-C	6
5A207910	CLUTCH FEED	3
5A207920	CLUTCH REGIST	3
5A207940	FAN MOTOR	1, 4
5A207970	HEATER LAMP C	6

Part. No.	Description	Fig. No.
5A207980	HEATER LAMP S	6
5A207990	SOLENOID	10
5A208000	SOLENOID FLAPPER	9
5A208010	SHEET OPE.MANUAL	1
5A208020	BALL BEARING	8
5A208030	BALL BEARING	6
5A208040	GROMMET	6
5A208070	POLY WASHER	8
5A208090	POLY WASHER	8
5A208100	SLIDER FU	1
5A208110	SUPPORT SEPARATOR	6
5A208120	SHIELD CASE	4
5A208130	CONT BOX	4
5A208140	RAIL DLP	2
5A208150	COVER REAR	1
5A208160	PLATE BASE LID	2
5A208170	PLATE CON A	2
5A208180	PLATE CON C	4
5A208190	PLATE FRAME SIDE	2
5A208200	FRAME BASE ASSY	2
5A208210	RAIL CASE R	5
5A208220	PLATE FRAME	2
5A208230	FRAME BASE ASS'Y	2
5A208240	BASE STAY L	2
5A208250	BASE STAY R	2
5A208260	NUT FUSER	6
5A208290	PLUG FUSER	6
5A208300	PLATE BIAS B	8
5A208310	PLATE FG DRIVE	2
5A208320	PLATE COVER TOP	2
5A208330	PLATE EARTH EF	9
5A208340	PLATE DRIVE FRONT	3
5A208350	COVER MAIN	1
5A208360	SUPPORT BOTTOM	9
5A208370	RAIL CASE L	5
5A208380	BUSH DRUM	5, 10
5A208400	COLLAR SPACER	5
5A208410	COLLAR SPACER	2
5A208420	ROLLER DU	2
5A208430	BUSHING SBK	6

Part. No.	Description	Fig. No.
5A208440	BUSH DRUM JOINT	3
5A208450	METAL BUSH REGIST	5
5A208460	PIN HV CONTACT	2
5A208470	COLLAR SPACER	2
5A208480	PLATE BIAS	2
5A208490	SHEET EARTH TC	5
5A208500	PLATE DRUM FRONT	7
5A208510	PLATE MAGNET CATCH	1
5A208520	SEAL EARTH FU	2
5A208530	PLATE OPTION	4
5A208540	PLATE CONTROLLER	4
5A208550	PLATE JOINT FD	10
5A208560	BKT CLUTCH	9
5A208570	PLATE COVER GEAR	3
5A208580	BRUSH DC CHARGE	5
5A208590	PLATE FUSER UP	6
5A208610	PLATE SCAN MID	2
5A208620	PLATE FD	10
5A208630	PIN FD A	10
5A208640	PIN FUSER	6
5A208650	PIN IDLE B	7
5A208660	JOINT DRUM	3
5A208670	PIN IDLE A	7
5A208680	PIN DLP A	8
5A208690	SHAFT CLUTCH F	3
5A208700	SHAFT EXIT	6
5A208710	PIN DLP B	8
5A208720	SHAFT EXIT	10
5A208730	SHAFT PULLEY	5
5A208740	SHAFT MPF	9
5A208750	ROLLER EXIT C	10
5A208760	ROLLER EXIT B	10
5A208770	ROLLER EXIT A	10
5A208780	ROLLER MPF MID	9
5A208790	ROLL CLN	7
5A208800	ROLLER MIDDLE	5
5A208810	ROLLER REGIST UP	5
5A208820	ROLLER REGIST LOW	5
5A208830	ROLLER FUSER	6
5A208840	ROLLER HEAT	6

Part. No.	Description	Fig. No.
5A208850	ROLLER TRANSFER	5
5A208860	ROLLER PRESS	6
5A208870	PLATE MCH U	7
5A208880	PLATE DRIVE MID	3
5A208890	BLADE DLP	8
5A208900	PLATE PAPER GUIDE	5
5A208910	RAIL BOTTOM L	2
5A208920	RAIL BOTTOM R	2
5A208930	RAIL BASE L	2
5A208940	SPRING PULLEY	10
5A208950	SPRING FU	10
5A208960	SPRING LOCK MCH	7
5A208970	SPRING SENSOR	8
5A208980	SPRING ACT MPF	9
5A208990	SPRING ACT EF	9
5A209000	SPRING ACTUATOR RE	5
5A209010	SPRING EARTH DD	3
5A209020	SPRING RELEASE C	5
5A209030	SPRING SEPARATOR	6
5A209040	SPRING FD	10
5A209050	SPRING SENSOR	2
5A209060	SPRING REGIST A	5
5A209070	SPRING REGIST B	5
5A209080	SPRING JOINT	2
5A209090	SPRING EXIT	10
5A209100	SPRING EXIT A	10
5A209110	SPRING BUSH	5
5A209120	SPRING EXIT	6
5A209130	SPRING LATCH	10
5A209140	SPRING MIDLE	5
5A209150	SPRING JOINT UNIT	3
5A209170	SPRING SOL	10
5A209180	SPRING PRESS	6
5A209190	SPRING PRESS A	10
5A209200	SPRING HV CONTACT	2
5A209210	SPRING ROLL A	7
5A209220	SPRING ROLL B	7
5A209230	SPRING SHUTTER	8
5A209240	SPRING TC ROLL	5
5A209250	SPRING SEPARATOR	9

Part. No.	Description	Fig. No.
5A209260	SPRING SHUTTER	7
5A209270	SPRING FULL	10
5A209280	SPRING RELEASE B	5
5A209290	SPRING CONTA	1
5A209300	SPRING LOCK DRUM	2
5A209310	SPRING BOTTOM	9
5A209320	RING STOP	6
5A209330	SPRING PULLEY MD	9
5A209340	SPRING PULLEY EF	9
5A209350	SPRING MCH	7
5A209360	SPRING LEVER DRUM	2
5A209370	SPRING LEVER A	2
5A209380	SPRING MAIN A	2
5A209390	SPRING STOCKER	10
5A209400	SPRING FD EXIT	10
5A209410	SPRING RAIL L	2
5A209420	SCRAPER DLP B	8
5A209430	PLATE CONTACT TC	5
5A209440	CORD KEEP	1
5A209460	PLATE ZENER B	7
5A209470	PLATE COVER FUSER B	2
5A209480	WASHER WAVE	10
5A209490	PLATE COV HOLDER	7
5A209500	STOPPER CAM	9
5A209510	PLATE ZENER A	7
5A209520	PLATE EARTH SD	2
5A209530	PLATE EARTH	6
5A209540	PLATE EARTH MPF	9
5A209550	PLATE FUSER GEAR	6
5A209560	PLATE FUSER	6
5A209570	PLATE EARTH REGIST	5
5A209580	PLATE EARTH FRONT	2
5A209590	PLATE REGIST	5
5A209600	PLATE PRESS F	6
5A209610	PLATE PRESS R	6
5A209620	PLATE TC	5
5A209630	PLATE DISCHARGER	5
5A209640	PLATE SWITCH	10
5A209650	PLATE EARTH FD	10
5A209660	BRACKET FAN	1

Part. No.	Description	Fig. No.
5A209670	PLATE D-CONTAINER	3
5A209680	PLATE DRIVE CLUTCH	3
5A209690	PLATE TRAY F	1
5A209700	PLATE TRAY R	1
5A209710	PLATE DRIVE REAR	3
5A209720	RAIL MIDDLE	2
5A209730	PLATE SCAN	2
5A209740	PLATE BIAS A	8
5A209750	PUSH CONTAIN	1
5A209760	CAP CONNECT EF	9
5A209770	COVER CLN SPRING F	7
5A209780	COVER CLN SPRING R	7
5A209790	COVER PWB CONT	2
5A209800	BKT SENSOR A	9
5A209810	BKT TRAY FB	1
5A209820	BKT TRAY RB	1
5A209830	COVER CONTACT	2
5A209840	BKT SENSOR B	9
5A209850	STOPPER PAPER	1
5A209860	COVER DRUM REAR	7
5A209870	DUCT TOP COVER	2
5A209880	BKT TRAY FA	1
5A209890	BKT TRAY RA	1
5A209900	COVER DRUM FRONT	7
5A209910	COVER FUSER F	6
5A209920	COVER FUSER R	6
5A209930	DUCT FUSER UP	2
5A209940	COVER STOPPER	1
5A209950	GUIDE ENTRANCE	6
5A209960	COVER SEPARATOR	6
5A209970	PLATE BOTTOM	9
5A209990	HOLDER FEED	9
5A210000	GUIDE TC	5
5A210030	FRAME FUSER UP	6
5A210040	DUCT FUSER BOTTOM	2
5A210050	FRAME FUSER LOW	6
5A210060	FRAME FRONT	2
5A210070	FRAME DRUM	7
5A210080	COVER RIGHT	1
5A210090	LID TOP	1

Part. No.	Description	Fig. No.
5A210100	COVER FRONT	1
5A210110	EDGING SADDLE	4
5A210120	EDGING SADDLE	4
5A210130	HOLDER CLUTCH	3
5A210140	BUSH SP	6, 10
5A210160	COVER PULLEY	3
5A210170	ARM LEVER DLP	2
5A210180	WORM WHEEL H28-Z14	8
5A210190	GEAR Z33S-P36	3
5A210200	GEAR Z36S-P20	3
5A210220	GEAR Z16H	7
5A210230	GEAR SCRAPER Z18S	8
5A210240	GEAR MG Z17H	8
5A210250	GEAR Z17H	7
5A210270	GEAR MFEED Z25	6
5A210280	GEAR IDLE Z30-Z15	8
5A210290	GEAR REGIST Z24	5
5A210300	GEAR Z23H-Z18S	8
5A210310	GEAR Z22	9
5A210320	GEAR FEED Z22	9
5A210330	GEAR TC Z26	5
5A210340	GEAR MD Z26	9
5A210350	GEAR JOINT Z28S	3
5A210360	GEAR JOINT Z26S	3
5A210370	GEAR Z24S	3
5A210380	GEAR Z30S-Z20S	3
5A210390	GEAR Z29S	6
5A210400	GEAR Z29S	10
5A210410	GEAR Z29S A	10
5A210420	GEAR JOINT Z32	5
5A210430	GEAR IDLE Z40	10
5A210440	GEAR FEED Z34	10
5A210450	GEAR Z38S	10
5A210460	GEAR Z34S-Z16S	8
5A210470	GEAR Z36S-Z23S	8
5A210480	GEAR IDLE Z33	10
5A210490	GEAR JOINT Z31S	3
5A210500	GEAR CLUTCH Z32S	3
5A210510	GEAR Z36	6
5A210520	GEAR FUSER Z33	6

Part. No.	Description	Fig. No.
5A210530	GEAR Z46H-Z22H	3
5A210540	GEAR Z41H	3
5A210550	GEAR Z45S A	3
5A210560	GEAR Z45S B	3
5A210570	GEAR Z45S-Z22S	3
5A210580	GEAR Z30S-Z43S-Z17S	3
5A210590	GEAR Z50S-Z24S	3
5A210600	GEAR Z72H-Z27H	3
5A210610	GEAR Z55H	3
5A210620	GEAR Z55H-Z27S	3
5A210630	GEAR Z76H-Z35H	3
5A210640	GEAR Z56H-Z37S	3
5A210650	GEAR Z53S-Z23S	3
5A210660	GEAR Z55	6
5A210670	PULLEY P26	10
5A210680	BELT FD	10
5A210710	RAIL DLP F	2
5A210720	HEAT SEPARATOR	2
5A210730	TRAY RAIL	2
5A210740	BUSH POM EW	9
5A210750	SPACER	6
5A210760	POLY WASHER	6
5A210770	COLLAR	10
5A210780	PULLEY EXIT	10
5A210790	BUSHING STOP	3
5A210800	PULLEY EXIT	6
5A210810	BUSH POM B	9
5A210830	PULLEY RAIL B	2
5A210840	PULLEY RAIL D	2
5A210850	BUSH SCRAPER	8
5A210860	FOOT	2
5A210870	BELT DRIVE TOWER	3
5A210880	PULLEY RAIL C	5
5A210890	BUSH SCREW	7
5A210900	BUSH C	5
5A210910	PULLEY RAIL E	5
5A210920	PULLEY MIDDLE	5
5A210930	BUSH B	5
5A210940	LATCH JOINT	5
5A210950	PULLEY S	9

Part. No.	Description	Fig. No.
5A210960	SHUTTER	7
5A210970	BUSH HEAT	6
5A210980	SCREW	7
5A210990	LEVER DLP A	2
5A211000	SPONGE MAIN	2
5A211010	RUBBER FRONT	1
5A211020	CORD PRESS	2
5A211030	LINK LOCK	6
5A211040	BUSH CLN	7
5A211050	PAD FUSER	2
5A211060	SPACER DLP	8
5A211070	SCRAPER SCREW	8
5A211080	PAD CUSHION	5
5A211090	SHEET FUSER G	6
5A211100	SEAL LID	8
5A211110	SEAL SIDE DLP	8
5A211120	SEAL BLADE	7
5A211130	SHEET SHUT SIDE	8
5A211140	SHEET TONER	2
5A211150	SHEET DRUM FRONT	7
5A211160	SARCON GR	4
5A211170	SHEET PWB	8
5A211180	SHEET CONT C	4
5A211190	SHEET FUSER A	6
5A211210	PAD FRICTION	9
5A211220	PLATE NAME	1
5A211230	STOPPER DRUM	2
5A211240	DISCHARGER FD	10
5A211250	SHEET CONT D	4
5A211260	SEAL SCRAPER	8
5A211270	SHEET GUIDE PAPER A	5
5A211280	SEAL LID SIDE	8
5A211290	SHEET GUIDE PAPER B	5
5A211300	SEAL DRUM R	7
5A211310	SEAL DRUM F	7
5A211320	SEAL SIDE DLP L	8
5A211330	SEAL SIDE DLP R	8
5A211340	SHEET FANA	2
5A211350	SHEET SHUTTER	8
5A211360	SEAL SHUTTER	8

Part. No.	Description	Fig. No.	Part. No.	Description	Fig. No.
5A211380	SEAL PANEL A	1	5A211830	HOLDER FD R	10
5A211400	SHEET CONT B	4	5A211840	HOLDER FD L	10
5A211410	SHEET SCAN	2	5A211850	ACTUATOR FU	10
5A211430	SHEET SCRAPER	8	5A211860	BUSH TRANSFER B	5
5A211440	SHEET SCRAPER MID	8	5A211870	ACTUATOR MPF A	9
5A211460	SHEET DRUM	7	5A211880	HOLDER PULLEY	10
5A211470	SEAL LID B	8	5A211890	SNAP	10
5A211480	SEAL LID A	8	5A211900	STOCKER	10
5A211490	MAGNET BLADE	8	5A211910	HOLDER RELEASE	5
5A211500	SHEET MG UP	8	5A211920	LOCK LID TOP F	1
5A211510	SHEET REGIST	5	5A211930	ACTUATOR SOL	10
5A211520	SHEET CLN	7	5A211940	ACTUATOR EF	9
5A211530	DISCHARGER FU	2	5A211950	BASE STOCKER	10
5A211540	SEPARATOR DLP	8	5A211960	ARM ROLL CLN	7
5A211550	SHEET DRUM LOW ASS'Y	7	5A211970	LOCK DRUM	2
5A211560	SHEET INSULATOR A	2	5A211980	BRACKET PULLEY B	2
5A211570	GUIDE PAPER B	5	5A211990	JOINT DLP	3
5A211590	SHEET CONTA	4	5A212000	ACTUATOR FD	10
5A211600	SCREW F DLP	8	5A212010	LOCK MCH	7
5A211610	SCREW B DLP	8	5A212020	HINGE FU F	1
5A211620	DUCT DRUM	2	5A212030	HINGE FU R	1
5A211630	PLATE DRUM LEFT	7	5A212040	FLANGE MAG	8
5A211640	LABEL RELEASE A	5	5A212050	LOCK COVER DRUM	7
5A211650	LABEL RELEASE B	5	5A212060	ACTUATOR FULL	10
5A211660	LABEL CAUTION	8	5A212070	LEVER LOCK F	6
5A211670	LABEL CASE B	5	5A212080	LEVER LOCK R	6
5A211680	LABEL CAUTION FUSER	6	5A212090	LEVER DLP B	2
5A211690	LABEL CAUTION L	6	5A212100	BRACKET MOTOR	8
5A211700	LABEL DIAGRAM A	1	5A212110	INTERRUPT SENSOR	2
5A211710	LABEL DIAGRAM C	1	5A212120	PLATE LOCK A	5
5A211720	LABEL CASE A	5	5A212130	LOCK COVER	1
5A211730	LABEL DIAGRAM B	1	5A212140	SCRAPER B DLP	8
5A211740	PULLEY STOCKER	10	5A212150	LEVER INTERLOCK	9
5A211750	LEVER RETURN	9	5A212160	LATCH FD	10
5A211760	KNOB RELEASE	5	5A212190	ACTUATOR JOINT	2
5A211780	SEPARATOR	6	5A212200	LOCK LID TOP R	1
5A211790	ACTUATOR MPF B	9	5A212210	BKT PWB	2
5A211800	LEVER RELEASE	6	5A212220	BKT SEPARATOR	9
5A211810	LATCH RAIL	5	5A212230	PLATE GEAR	7
5A211820	LOCKING WIRE SADDLE	4	5A212240	PLATE TOWER	1

Part. No.	Description	Fig. No.
5A212250	BKT FUSER	6
5A212260	COVER HINGE	2
5A212270	LINK FU F	1
5A212280	LINK FU R	1
5A212290	HOLDER RAIL A	5
5A212300	SHUTTER DLP	8
5A212310	ACTUATOR REGIST	5
5A212320	RAIL OPTION A	4
5A212330	HANDLE CASE	5
5A212340	LEVER DRUM	2
5A212350	HANDLE DLP	8
5A212360	RAIL OPTION B	4
5A212370	COVER PANEL L	1
5A212380	COVER PANEL R	1
5A212390	TRAY FU C	1
5A212400	COVER R DLP	8
5A212410	COVER GEAR	8
5A212420	GUIDE DLP REAR	2
5A212450	FRAME BOTTOM	9
5A212460	COVER SIDE	10
5A212470	HOLDER DC CHARGE	5
5A212480	RAIL BASE	2
5A212490	PLATE RELEASE	5
5A212500	GUIDE CHUTE LOW	5
5A212510	RAIL DRUM	2
5A212520	COVER FRONT LOW L	2
5A212530	COVER FRONT LOW R	2
5A212540	GUIDE CHUTE	6
5A212550	LEVER TOP	1
5A212560	GUIDE CHANGE DU	5
5A212570	GUIDE CHANGE	10
5A212580	GUIDE FD	10
5A212590	COVER FUSER	6
5A212600	COVER DLP	8
5A212610	TRAY FU B	1
5A212620	CASE BELT GUIDE	2
5A212630	COVER FD	10
5A212640	LID DLP	8
5A212650	HEAT INSULATOR	2
5A212660	GUIDE PAPER	5

Part. No.	Description	Fig. No.
5A212670	FRAME FD	10
5A212680	FRAME RIGHT	9
5A212690	CASE DLP	8
5A212700	COVER LEFT	1
5A212710	FRAME REAR	2
5A212720	COVER TOP	1
5A212730	CASE LOW	5
5A212750	FK-30 FUSER UNIT(U)	6
5A212770	DK-30 DRUM UNIT	7
5A212780	LK-30 SCANNER UNIT	2
5A212790	TR-30 TRANSFER UNIT	5
5A212800	DRIVE A ASS'Y	3
5A212810	DRIVE B ASS'Y	3
5A212820	DRIVE C ASS'Y	3
5A212830	WASTE TONER CONVEYER	2
5A212840	TRAY FU ASS'Y	1
5A212850	PLATE RELEASE ASS'Y	5
5A212860	REGIST LOW ASS'Y	5
5A212870	MCH UNIT	7
5A212880	FAN MOTOR	2
5A212890	RIBBER FRONT B	1
5A212900	TRAY FU A	1
5A212910	PLATE COVER FUSER A	2
5A212920	PLATE LOCK B	5
5A212930	SPRING RELEASE A	5
5A212950	GEAR Z13H	7
5A212960	GEAR Z15H-Z14H	7
5A212970	DRUM UNIT ZENER PWB (KP-605)	7
5A212980	DRUM PWB (KP-562)	7
5A213020	SHAFT DRUM	7
5A213040	ACTUATOR DRUM	7
5A213050	SPRING ACTUATOR	7
5A213060	SCREW OP	4

CLASSIFICATION OF THE SCREWS IN ILLUSTRATION

<u>REF.</u>	<u>ITEM #</u>	<u>DESCRIPTION</u>
A40	B3023080	BINDING TAP TIGHT SCREW M3X8
A5	B3023100	BINDING TAP TIGHT SCREW M3X10
AC	B8313300	M3X30 +BIND TAPTITE P
B4	B3024080	BINDING TAP-TIGHT SCREW M4X8
B5	B3024100	BINDING TAP-TIGHT SCREW M4X10
B7	B3064140	TAPPING SCREW M4X14 (B TYP)
C2	B3023050	BINDING TAP-TIGHT SCREW M3X5
C3	B3023060	BINDING TAP TIGHT SCREW M3X6
D4	B3314080	BINDING TAP-TITE P SCREW M4X08
D6	B8314120	BINDING TAP-TITE P BRONZE SCREW M4X12
E40	B4043080	TRIPLE TAP-TITE P SCREW M3X08
F5	B4304100	TRIPLE SCREW M4X10 (BLACK)
GC	B4303300	TRIPLE SCREW M3X30(BLACK)
J3	B4304060	TRIPLE SCREW M4X6 (BLACK)
K3	D1000300	STOP RING (E-3)
K5	D1000500	STOP RING (E-5)
KA	D1001000	STOP RING (E-10)
L3	D4000300	STOP RING CSTW-3
L8	D4000800	STOP RING CSTW-8
M8	D5000800	RETAINING RING GTW-8
N43	C2304080	PLAIN WASHER BPWM4-8 (BLACK)
N62	C2893140	SHIM 6.2X14X0.25T
N81	C2895110	SHIM 8.2-0.13T
N82	C2895120	SHIM 8.2-0.25T
NC4	C2891160	SHIM 12.2X16X0.13T
P85	C2008160	PLAIN WASHER PWM8-16
S15	E6120100	SPRING PIN H7A 2X10 SUS
S1A	E1120200	SPRING PIN 2.0X20(SUS.WAVE TYPE)
S27	E5125140	PARALLEL PIN H7A 2.5X14 SUS
T16	E5120120	SPRING PIN H7A 2X12 SUS
T1A	E0120200	SPRING PIN 2X20(SUS)
T2B	E5125200	PARALLEL PIN H7A 2.5X20 SUS
U2	B0603050	ROUND HEAD SCREW M3X5(BRASS,NI)
U3	B0603060	ROUND HEAD SCREW M3X6 (BRASS,NI)
V3	B0604060	ROUND HEAD SCREW M4X6 (BRASS,NI)

MITA COPYSTAR AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

149 West 51st street,
New York, NY 10019
TEL : (212) 554-2679
FAX : (212) 554-2625

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

225 Spring Lake Drive,
Itasca, Illinois 60143
TEL : (630) 250-7447
FAX : (630) 250-8787

Western Region:

14101 Alton Parkway,
P.O.Box 57006, Irvine,
California 92618-7006
TEL : (714) 457-9000
FAX : (714) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

MITA COPYSTAR CANADA, LTD.

6120 Kestrel Road,
Mississauga, Ontario L5T 1S8
TEL : (905) 670-4425
FAX : (905) 670-8116

MITA COPYSTER SOUTH AMERICA S.A.

Av. Mitre 1345 Florida (1602)
Pcia, Buenos Aires, Argentina
TEL : (54) 1-730-1070
FAX : (54) 1-760-2071

MITA COPYSTAR MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
Delegación Azcapotzalco
México, D.F. C.P. 02130
TEL : 3-83-27-41
FAX : 3-83-78-04

© 1998 MITA INDUSTRIAL CO., LTD.

MITA and *mita* are registered trademarks of MITA INDUSTRIAL CO., LTD.

Printed in U.S.A.