

mita[®]

DP-2800 plus

PARTS LIST

Published in June '99
5BS70771
Revision 1

DP-2800 plus

mita[®]

DP-2800 plus

PARTS LIST

Published in Feb. '00
5BS70772
Revision 2

DP-2800 plus

NOTE

1. Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5BS07020	RUBBER FRONT B	DP-2800 plus	60Hz	1

2. Service calls and freight will be charged separately.

3. Symbols in the "Parts Number" column.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

eg.	Parts Number	Parts Name	Parts Number	Parts Name
	5A207600	COVER REAR ASS'Y	•5A208350	COVER MAIN
			•5A208150	COVER REAR

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

eg.	Parts Number	Parts Name	Parts Number	Parts Name
	•5A212850	PLATE RELEASE ASS'Y	••5A209280	SPRING RELEASE B
			••5A211910	HOLDER RELEASE

4. See the last page of this parts list for the classification of the screws in the illustrations.

Parts List

DP-2800 plus

———— CONTENTS ————

FIG.1	COVERS	2
FIG.2	UPPER FRAME	4
FIG.3	DRIVE UNIT	8
FIG.4	CONTROLLER BOX	10
FIG.5	FEED-TRANS. UNIT	12
FIG.6	FUSER UNIT	14
FIG.7	DRUM UNIT	16
FIG.8	DEVELOPER UNIT	18
FIG.9	MULTI-PURPOSE TRAY	20
FIG.10	FACE-DOWN UNIT	22
	• INDEX	24

[illegible][illegible]

FIG. 1 COVERS

Ref. No.	Part. No.	Description	Quantity USA (120V)
2	5BT07530	PLATE NAME RC	1
3	5A208510	PLATE MAGNET CATCH	2
5	5A207800	HINGE FRONT LB	1
6	5A207750	KEY BOARD ASS'Y	1
7	5A211010	RUBBER FRONT	2
8	5BT07210	COVER PANEL MT ASS'Y	1
9	5A210080	COVER RIGHT	1
10	5A212700	COVER LEFT	1
11	5A212370	COVER PANEL L	1
12	5A212380	COVER PANEL R	1
13	5A207550	BKT RIGHT ASS'Y	1
14	5A207600	COVER REAR ASS'Y	1
15	*5A208350	COVER MAIN	1
16	*5A208150	COVER REAR	1
17	5A207580	LID TOP ASS'Y	1
18	*5A209940	COVER STOPPER	1
19	*5A212130	LOCK COVER	1
20	*5A212240	PLATE TOWER	1
21	*5A209850	STOPPER PAPER	1
22	*5A211700	LABEL DIAGRAM A	1
23	*5A211730	LABEL DIAGRAM B	1
24	*5A211710	LABEL DIAGRAM C	1
25	5A212720	COVER TOP	1
26	5BS07020	RUBBER FRONT B	1
27	5A211920	LOCK LID TOP F	1
28	5A212200	LOCK LID TOP R	1
29	5A212550	LEVER TOP	1
30	5A209290	SPRING CONT A	2
31	5A209750	PUSH CONTAIN	2
32	5A212840	TRAY FU ASS'Y	1
33	*5A209820	BKT TRAY RB	1
34	*5A209810	BKT TRAY FB	1
35	*5A209890	BKT TRAY RA	1
36	*5A209880	BKT TRAY FA	1
37	*5BS07030	SLIDER FU	2
38	*5A212030	HINGE FU R	1
39	*5A212610	TRAY FU B	1
40	*5A212390	TRAY FU C	1

* Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
41	*5A209690	PLATE TRAY F	1
42	*5A209700	PLATE TRAY R	1
43	*5A212900	TRAY FU A	1
44	*5A212270	LINK FU F	1
45	*5A212280	LINK FU R	1
46	*5A212020	HINGE FU F	1
47	5A209440	CORD KEEP	2
48	5A207070	CONN CORD ASS'Y S02057	1
49	5A208010	SHEET OPE.MANUAL	1
50	5A207940	FAN MOTOR	1

* Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 2 UPPER FRAME

5BS-1

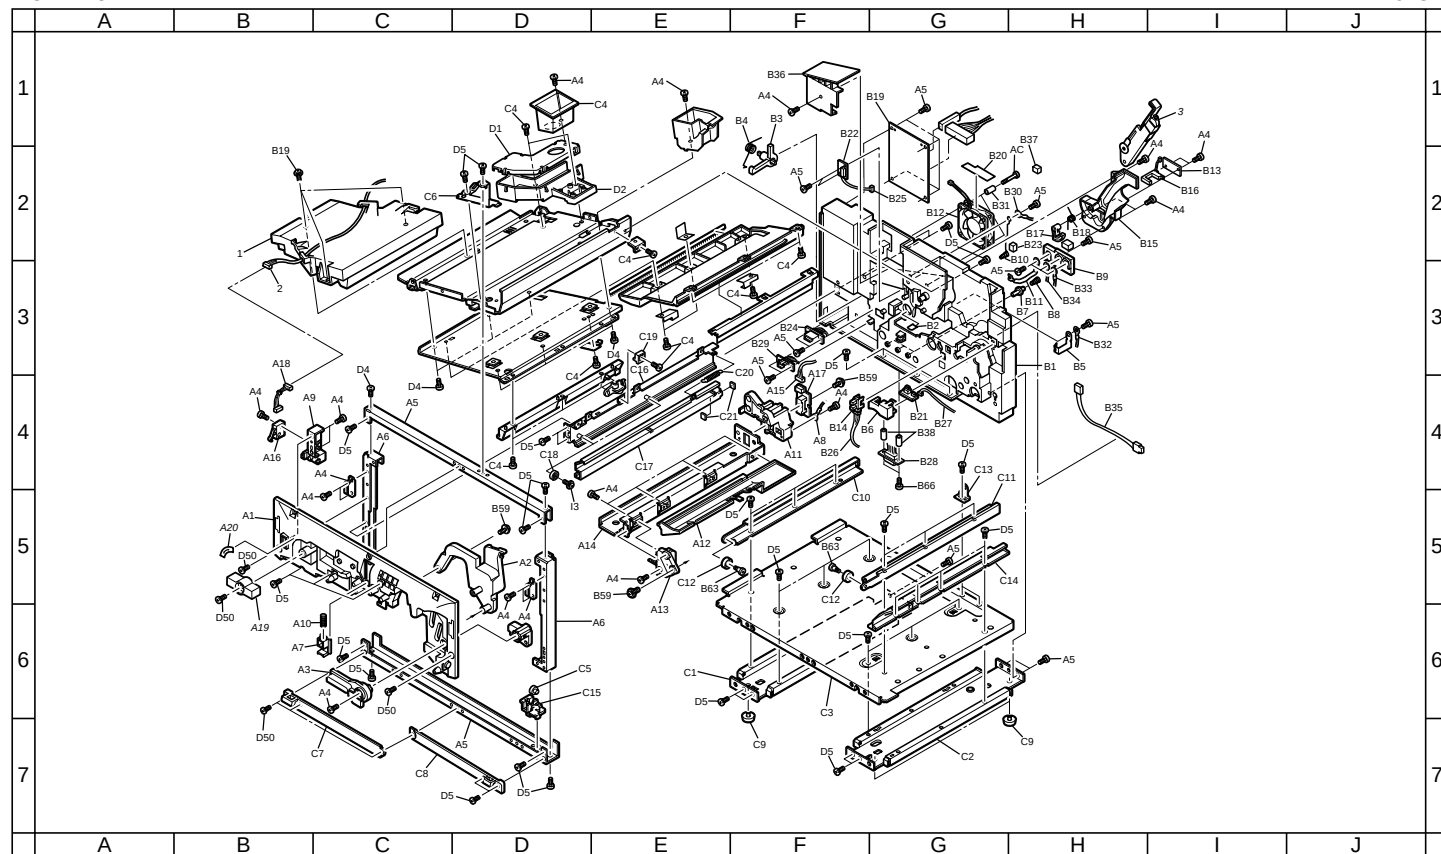


FIG. 2 UPPER FRAME

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5A212780	LK-30 SCANNER UNIT	1
2	5A207110	CONN CORD ASS'Y	1
3	5BT07220	WASTE TONER CONVEYER	1
A1	5A210060	FRAME FRONT	1
A2	5A210170	ARM LEVER DLP	1
A3	5BT07510	LEVER DLP	1
A4	5BT07160	MAGNET CATCHER	2
A5	5A208220	PLATE FRAME	2
A6	5A208190	PLATE FRAME SIDE	2
A7	5A211970	LOCK DRUM	1
A8	5A207300	CONN CORD ASS'Y	1
A9	5A212210	BKT PWB	1
A10	5A209300	SPRING LOCK DRUM	1
A11	5A212420	GUIDE DLP REAR	1
A12	5A210730	TRAY RAIL	1
A13	5A210710	RAIL DLP F	1
A14	5A208140	RAIL DLP	1
A15	5A207200	CONN CORD ASS'Y	1
A16	5A207510	P.W. BOARD ASS'Y	1
A17	5A207420	P.W. BOARD ASS'Y	1
A18	5BT07710	CONN CORD ASS'Y	1
A19	5BT07720	LEVER LOCK FEED	1
A20	5BS07210	LABEL FRAME FRONT	1
B1	5A212710	FRAME REAR	1
B2	5A211140	SHEET TONER	1
B3	5A212190	ACTUATOR JOINT	1
B4	5A209080	SPRING JOINT	1
B5	5A208480	PLATE BIAS	1
B6	5A209790	COVER PWB CONT	1
B7	5A208460	PIN HV CONTACT	3
B8	5A209200	SPRING HV CONTACT	3
B9	5A209830	COVER CONTACT	1
B10	5A209380	SPRING MAIN A	1
B11	5A207690	HIGH MEG R ASS'Y	1
B12	5A212880	FAN MOTOR	1
B13	5A207490	P.W. BOARD ASS'Y	1
B14	5A207830	PHOTO SENSOR	1
B15	5A212620	CASE BELT GUIDE	1
B16	5A207760	TOWER SENSOR ASS'Y	1
B17	5A212110	INTERRUPT SENSOR	1

* Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
B18	5A209050	SPRING SENSOR	1
B19	5A207710	TRANS ASS'Y	1
B20	5A211340	SHEET FAN A	1
B21	5A207530	P.W. BOARD ASS'Y	1
B22	5A207410	P.W. BOARD ASS'Y	1
B23	5A211000	SPONGE MAIN	1
B24	5A207040	CONN CORD ASS'Y	1
B25	5A207150	CONN CORD ASS'Y	1
B26	5A207170	CONN CORD ASS'Y	1
B27	5A207180	CONN CORD ASS'Y	1
B28	5A207210	CONN CORD ASS'Y	1
B29	5A207220	CONN CORD ASS'Y	1
B30	5A207230	CONN CORD ASS'Y	1
B31	5A208470	COLLAR SPACER	2
B32	5A207250	CONN CORD ASS'Y	1
B33	5A207260	CONN CORD ASS'Y	1
B34	5A207270	CONN CORD ASS'Y	1
B35	5A207330	CONN CORD ASS'Y	1
B36	5A211620	DUCT DRUM	1
B37	5BS07040	CORD PRESS	1
B38	5A208410	COLLAR SPACER	2
C1	5A208240	BASE STAY L	1
C2	5A208250	BASE STAY R	1
C3	5A208160	PLATE BASE LID	1
C4	5A209870	DUCT TOP COVER	1
C5	5A210830	PULLEY RAIL B	1
C6	5A209580	PLATE EARTH FRONT	1
C7	5A212520	COVER FRONT LOW L	1
C8	5A212530	COVER FRONT LOW R	1
C9	5A210860	FOOT	4
C10	5A208910	RAIL BOTTOM L	1
C11	5A208920	RAIL BOTTOM R	1
C12	5A208420	ROLLER DU	2
C13	5A208310	PLATE FG DRIVE	2
C14	5A212480	RAIL BASE	1
C15	5A211980	BRACKET PULLEY B	1
C16	5BS07050	RAIL BASE L	1
C17	5A209720	RAIL MIDDLE	1
C18	5A210840	PULLEY RAIL D	2
C19	5A211770	HOLDER RAIL B	1

* Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 2 UPPER FRAME

5BS-1

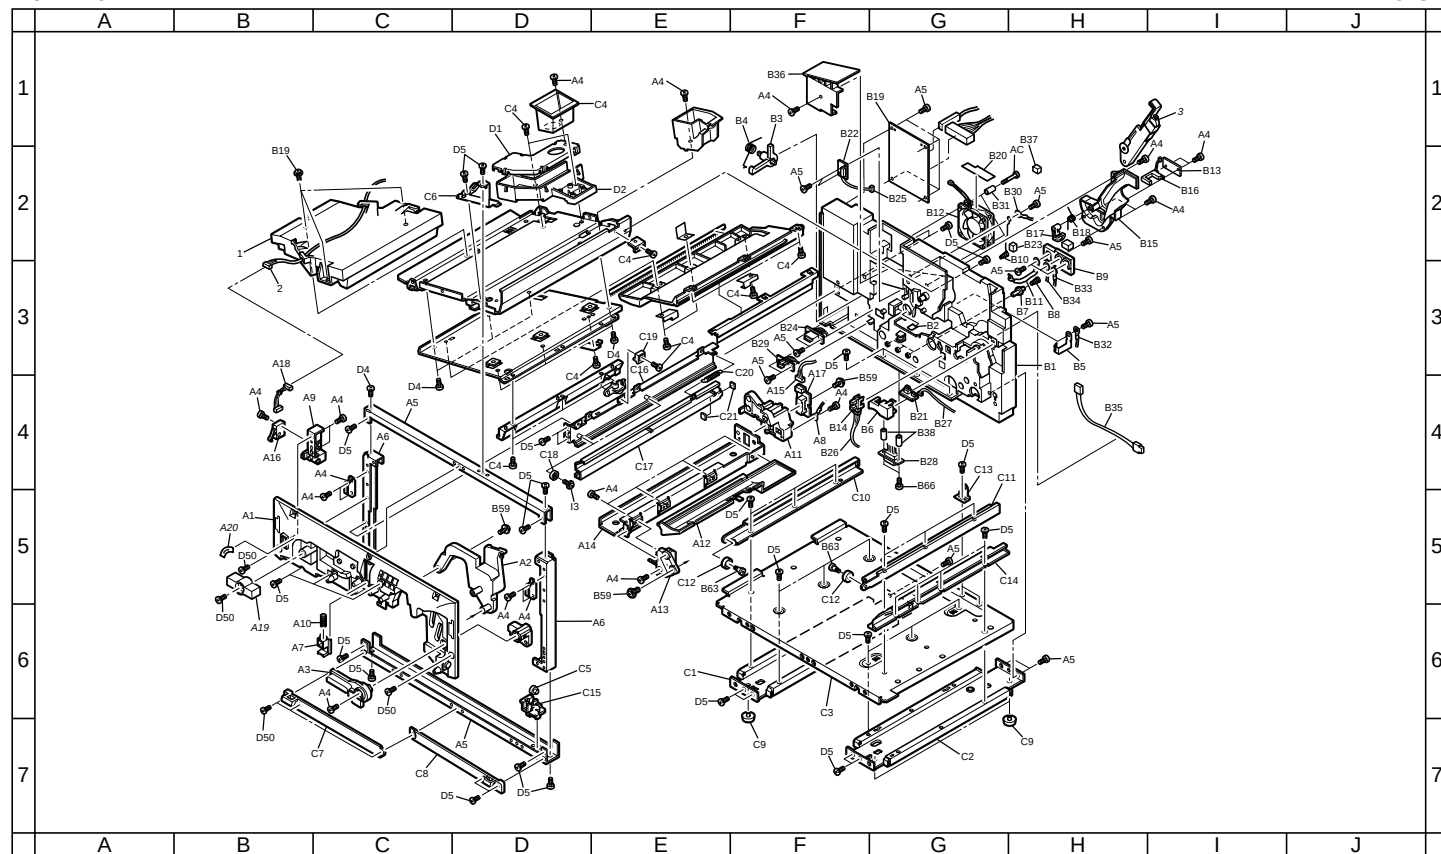


FIG. 2 UPPER FRAME

Ref. No.	Part. No.	Description	Quantity USA (120V)
C20	5A209410	SPRING RAIL L	1
C21	5A211050	PAD FUSER	2
D1	5A209930	DUCT FUSER UP	1
D2	5BT07610	DUCT DLP LOW	1

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 3 DRIVE UNIT

5BS-1

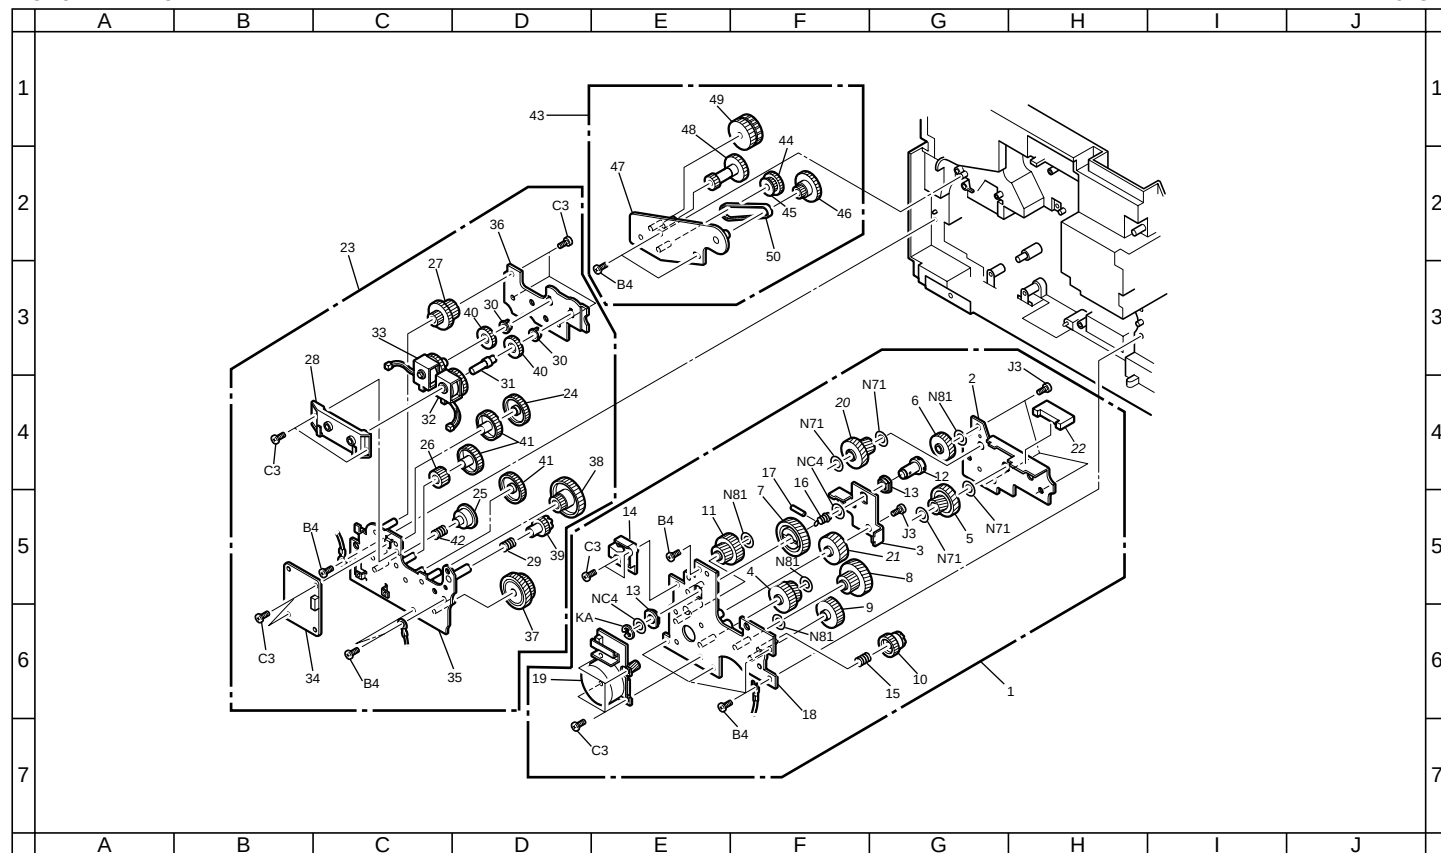


FIG. 3 DRIVE UNIT

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5BS07220	DRIVE A ASS'Y	1
2	*5A208340	PLATE DRIVE FRONT	1
3	*5A208880	PLATE DRIVE MID	1
4	*5A210600	GEAR Z72H-Z27H	1
5	*5BS07230	GEAR Z46H-Z36H ASS'Y	1
6	*5A210540	GEAR Z41H	1
7	*5A210610	GEAR Z55H	1
8	*5A210620	GEAR Z55H-Z27S	1
9	*5A210550	GEAR Z45S A	1
10	*5A210490	GEAR JOINT Z31S	1
11	*5A210630	GEAR Z76H-Z35H	1
12	*5A208660	JOINT DRUM	1
13	*5A208440	BUSH DRUM JOINT	2
14	*5A211990	JOINT DLP	1
15	*5A209150	SPRING JOINT UNIT	1
16	*5A209010	SPRING EARTH DD	1
17	*5BS07070	PARALLEL PIN	1
18	*5A209710	PLATE DRIVE REAR	1
19	*5A207680	MOTOR MAIN	1
20	*5BT07800	GEAR Z37H-Z22H ASS'Y	1
21	*5BT07810	GEAR Z65H	1
22	*5BT07770	SEAL SENSOR	1
23	5BT07250	DRIVE B ASS'Y	1
24	*5A210590	GEAR Z50S-Z24S	1
25	*5A210360	GEAR JOINT Z26S	1
26	*5A210370	GEAR Z24S	1
27	*5A210580	GEAR Z30S-Z43S-Z17S	1
28	*5A210130	HOLDER CLUTCH	1
29	*5A209150	SPRING JOINT UNIT	1
30	*5A210790	BUSHING STOP	2
31	*5BT07780	SHAFT CLUTCH R	1
32	*5A207920	CLUTCH REGIST	1
33	*5A207910	CLUTCH FEED	1
34	*5A207460	P.W. BOARD ASS'Y	1
35	*5A209680	PLATE DRIVE CLUTCH	1
36	*5A208570	PLATE COVER GEAR	1
37	*5A210640	GEAR Z56H-Z37S	1
38	*5A210650	GEAR Z53S-Z23S	1
39	*5A210350	GEAR JOINT Z28S	1
40	*5A210500	GEAR CLUTCH Z32S	2

* Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
41	*5A210560	GEAR Z45S B	3
42	*5BT07790	SPRING JOINT	1
43	5A212820	DRIVE C ASS'Y	1
44	*5A210190	GEAR Z33S-P36	1
45	*5A210160	COVER PULLEY	1
46	*5A210200	GEAR Z36S-P20	1
47	*5A209670	PLATE D-CONTAINER	1
48	*5A210380	GEAR Z30S-Z20S	1
49	*5A210570	GEAR Z45S-Z22S	1
50	*5A210870	BELT DRIVE TOWER	1

* Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 4 CONTROLLER BOX

5BS-1

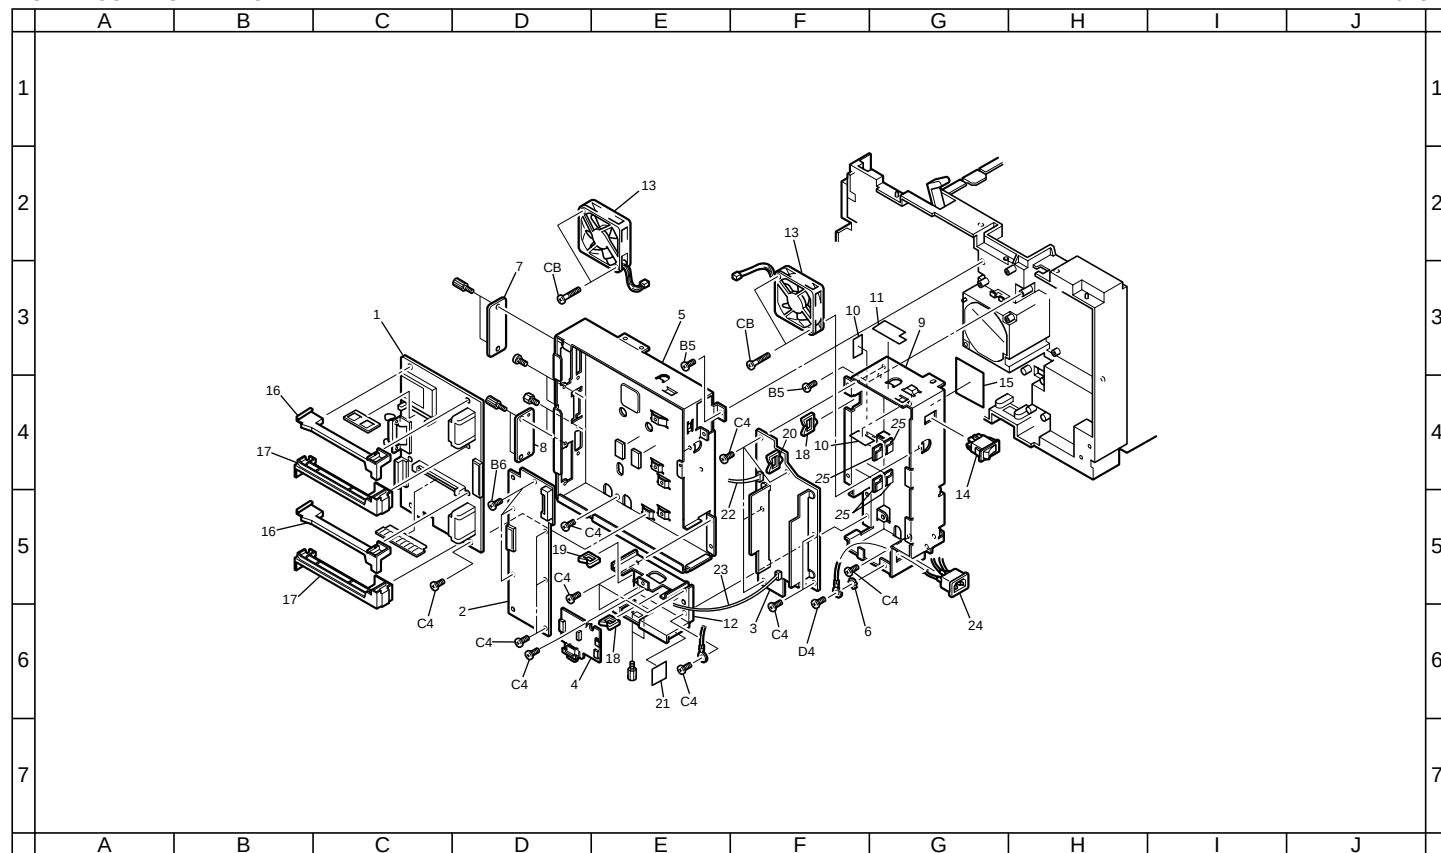


FIG. 4 CONTROLLER BOX

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5BS07290	P.W. BOARD ASS'Y(KP-668)	1
2	5BS07280	P.W. BOARD ASS'Y(KP-668)	1
3	5A207350	SWITCHING REGULATOR	1
4	5BT07110	P.W. BOARD ASS'Y (KP-675)	1
5	5A208130	CONT BOX	1
6	5BS07100	OT LOCK WASHER	1
7	5A208530	PLATE OPTION	1
8	5A208540	PLATE CONTROLLER	1
9	5A208120	SHIELD CASE	1
10	5A211180	SHEET CONT C	2
11	5A211400	SHEET CONT B	1
12	5A208180	PLATE CON C	1
13	5A207940	FAN MOTOR	2
14	5A207870	SEE-SAW SW	1
15	5A211590	SHEET CONT A	1
16	5A212320	RAIL OPTION A	2
17	5A212360	RAIL OPTION B	2
18	5A210110	EDGING SADDLE	2
19	5A210120	EDGING SADDLE	1
20	5A211820	LOCKING WIRE SADDLE	1
21	5A211250	SHEET CONT D	1
22	5A207080	CONN CORD ASS'Y	1
23	5BT07820	CONN CORD ASS'Y	1
24	5A207160	CONN CORD ASS'Y	1
25	5BS07240	MINI SLIDE CLAMP	4

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 5 FEED-TRANS. UNIT

5BS-1

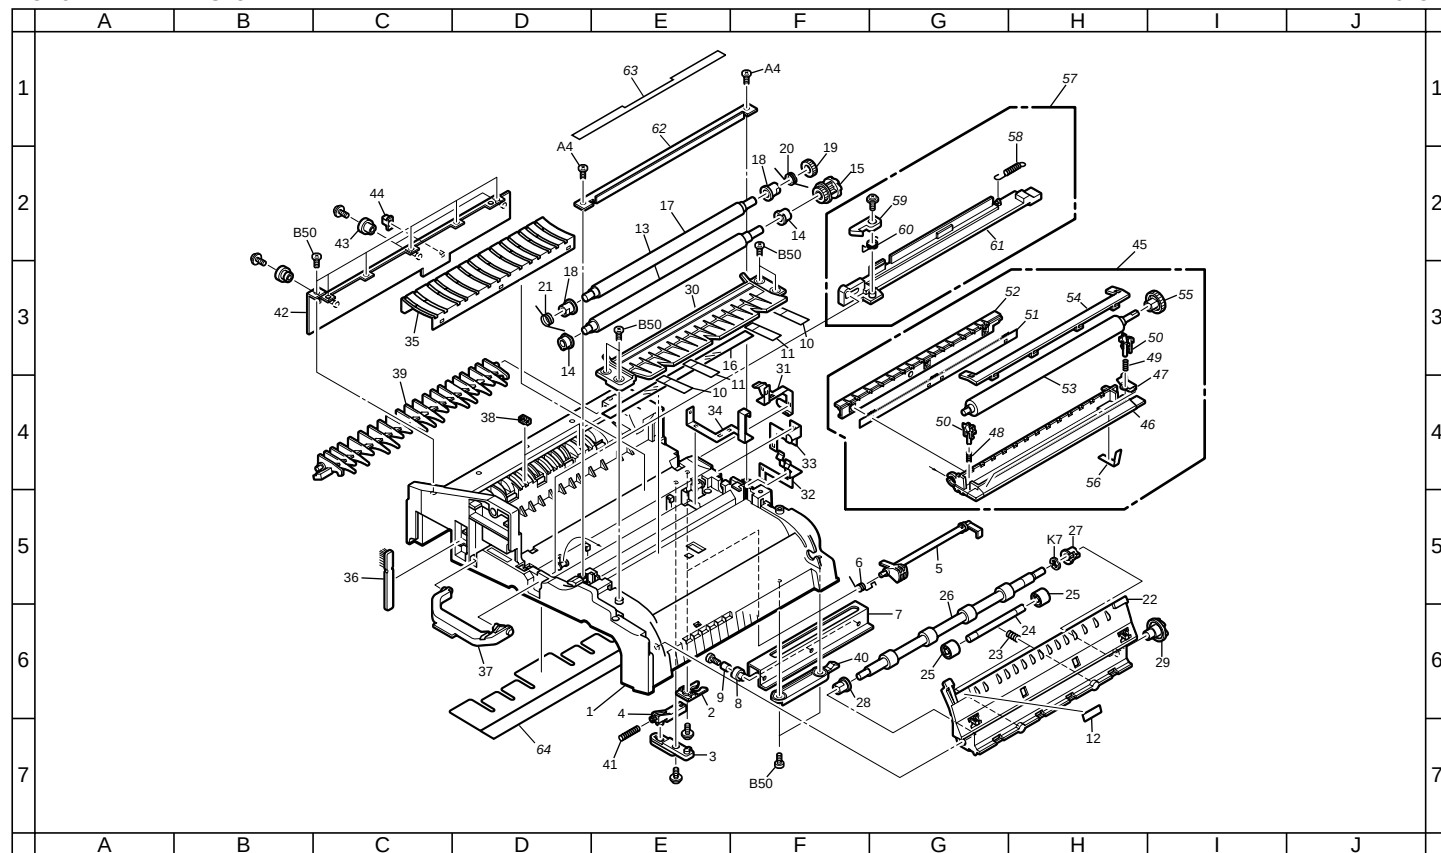


FIG. 5 FEED-TRANS. UNIT

Ref. No.	Part. No.	Description	Quantity USA (120V)
	5BS07250	FE-33 FEED UNIT	1
1	*5A212730	CASE LOW	1
2	*5A211810	LATCH RAIL	1
3	*5A212120	PLATE LOCK A	1
4	*5A212920	PLATE LOCK B	1
5	*5A212310	ACTUATOR REGIST	1
6	*5A209000	SPRING ACTUATOR RE	1
7	*5A208210	RAIL CASE R	1
8	*5A210880	PULLEY RAIL C	3
9	*5A208400	COLLAR SPACER	3
10	*5A211290	SHEET GUIDE PAPER B	2
11	*5A211270	SHEET GUIDE PAPER A	2
12	*5A211650	LABEL RELEASE B	1
13	*5A208820	ROLLER REGIST LOW	1
14	*5A208380	BUSH DRUM	2
15	*5A210420	GEAR JOINT Z32	1
16	*5A211510	SHEET REGIST	1
17	*5A208810	ROLLER REGIST UP	1
18	*5A208450	METAL BUSH REGIST	2
19	*5A210290	GEAR REGIST Z24	1
20	*5A209060	SPRING REGIST A	1
21	*5A209070	SPRING REGIST B	1
22	*5A212660	GUIDE PAPER	1
23	*5A209140	SPRING MIDDLE	2
24	*5A208730	SHAFT PULLEY	2
25	*5A210920	PULLEY MIDDLE	4
26	*5BS07110	ROLLER MIDDLE	1
27	*5A210930	BUSH B	1
28	*5A210900	BUSH C	1
29	*5A210940	LATCH JOINT	1
30	*5A211570	GUIDE PAPER B	1
31	*5A209590	PLATE REGIST	1
32	*5A209620	PLATE TC	1
33	*5A209630	PLATE DISCHARGER	1
34	*5BT07860	PLATE EARTH FEED	1
35	*5A208900	PLATE PAPER GUIDE	1
36	*5A207560	BRUSH CLEAN ASS'Y	1
37	*5A212330	HANDLE CASE	1
38	*5A211080	PAD CUSHION	2
39	*5A212560	GUIDE CHANGE DU	1

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
40	*5A212290	HOLDER RAIL A	1
41	*5A212930	SPRING RELEASE A	1
42	*5BT07350	RAIL CASE L	1
43	*5A210910	PULLEY RAIL E	2
44	*5A211760	KNOB RELEASE	1
45	*5BT07650	TR-30 TRANSFER UNIT	1
46	*5A210000	GUIDE TC OEM	1
47	*5A209430	PLATE CONTACT TC	1
48	*5A209240	SPRING TC ROLL	1
49	*5A209110	SPRING BUSH	1
50	*5BT07570	BUSH TRANSFER B	2
51	*5A208580	BRUSH DC CHARGE	1
52	*5A212470	HOLDER DC CHARGE	1
53	*5A208850	ROLLER TRANSFER	1
54	*5A212501	GUIDE CHUTE LOW	1
55	*5A210330	GEAR TC Z26	1
56	*5A208490	SHEET EARTH TC	1
57	*5A212850	PLATE RELEASE ASS'Y	1
58	*5A209280	SPRING RELEASE B	1
59	*5A211910	HOLDER RELEASE	1
60	*5A209020	SPRING RELEASE C	1
61	*5A212490	PLATE RELEASE	1
62	*5BT07850	GUIDE CHUTE UP	1
63	*5BT07870	SHEET GUIDE CHUTE	1
64	*5BT07880	SHEET LOW	1

• Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 6 FUSER UNIT

5BS-1

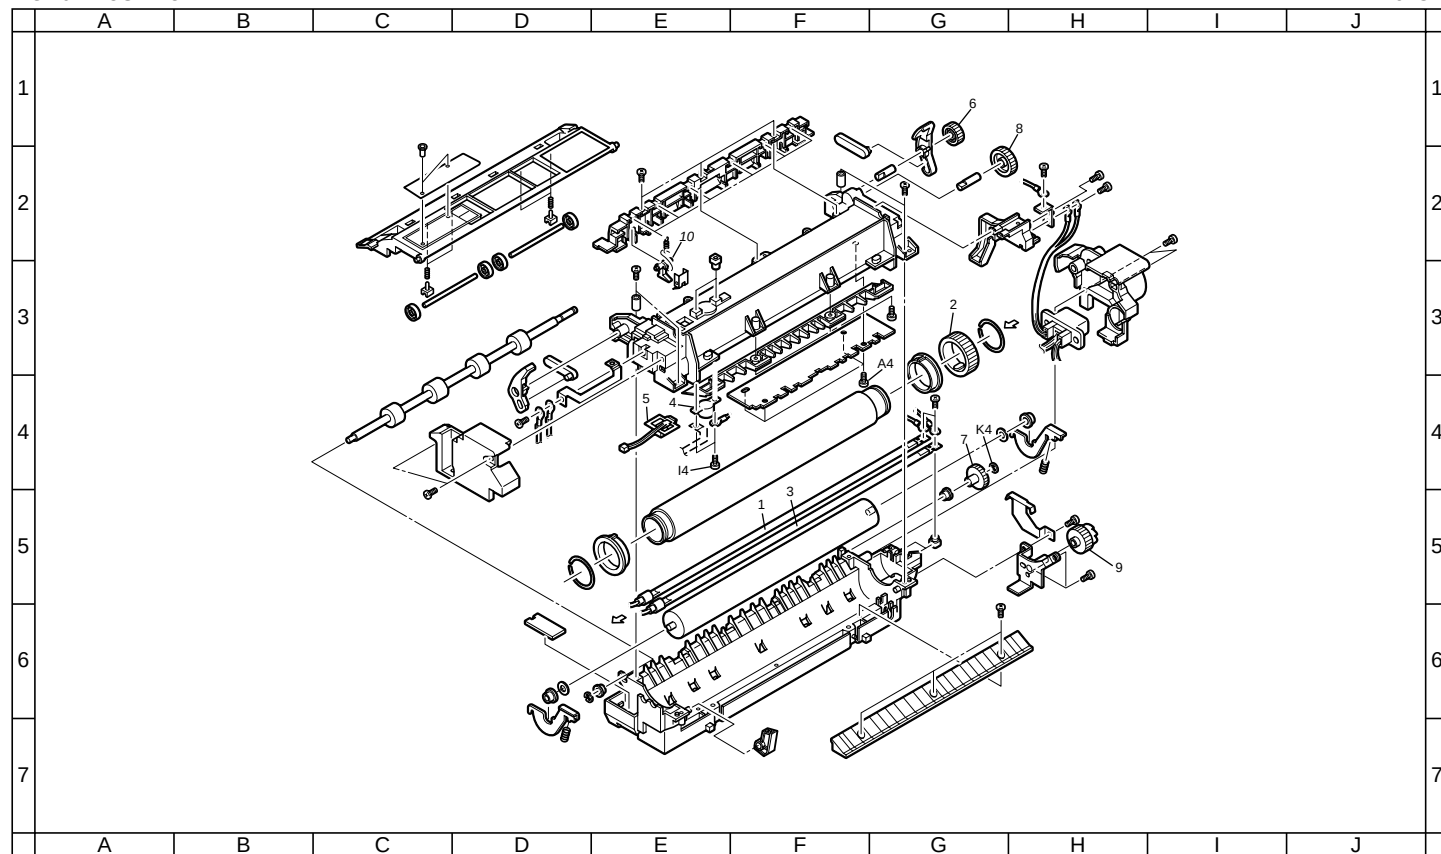


FIG. 6 FUSER UNIT

Ref. No.	Part. No.	Description	Quantity USA (120V)
	5BS07260	FK-30 FUSER UNIT	1
1	•5A207980	HEATER LAMP S	1
2	•5A210660	GEAR Z55	1
3	•5A207970	HEATER LAMP C	1
4	•5BS07130	THERMOSTAT 240V190°C	1
5	•5A207700	THERMISTOR ASS'Y	1
6	•5A210270	GEAR MFEED Z25	1
7	•5A210390	GEAR Z29S	1
8	•5A210510	GEAR Z36	1
9	•5A210520	GEAR FUSER Z33	1
10	•5A211780	SEPARATOR	6

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 7 DRUM UNIT

5BS-1

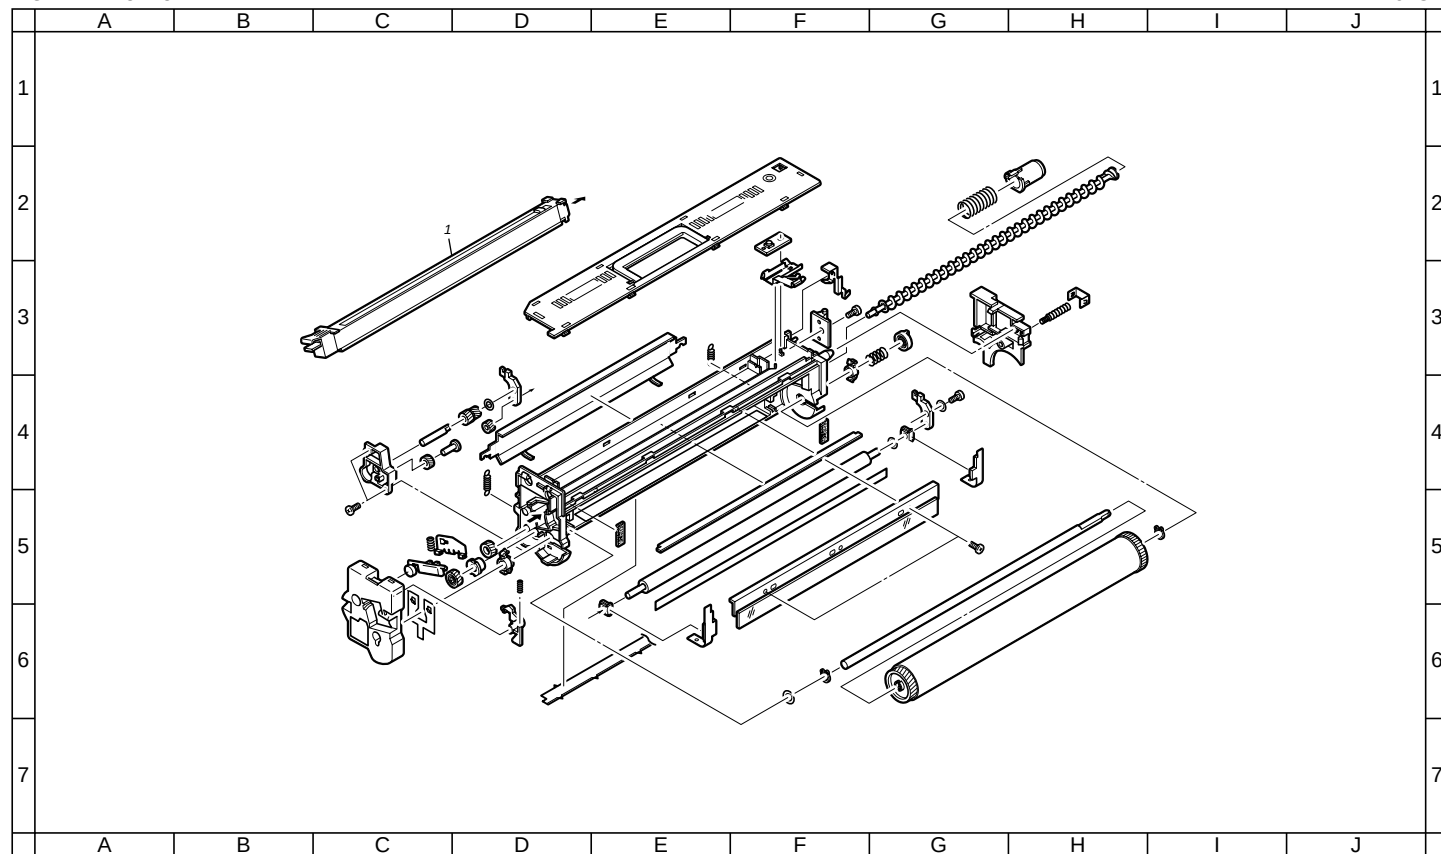


FIG. 7 DRUM UNIT

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5BS07300	DK-33 DRUM UNIT	1
	*5BS07270	MCH E ASS'Y	1

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "*•*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 8 DEVELOPER UNIT

5BS

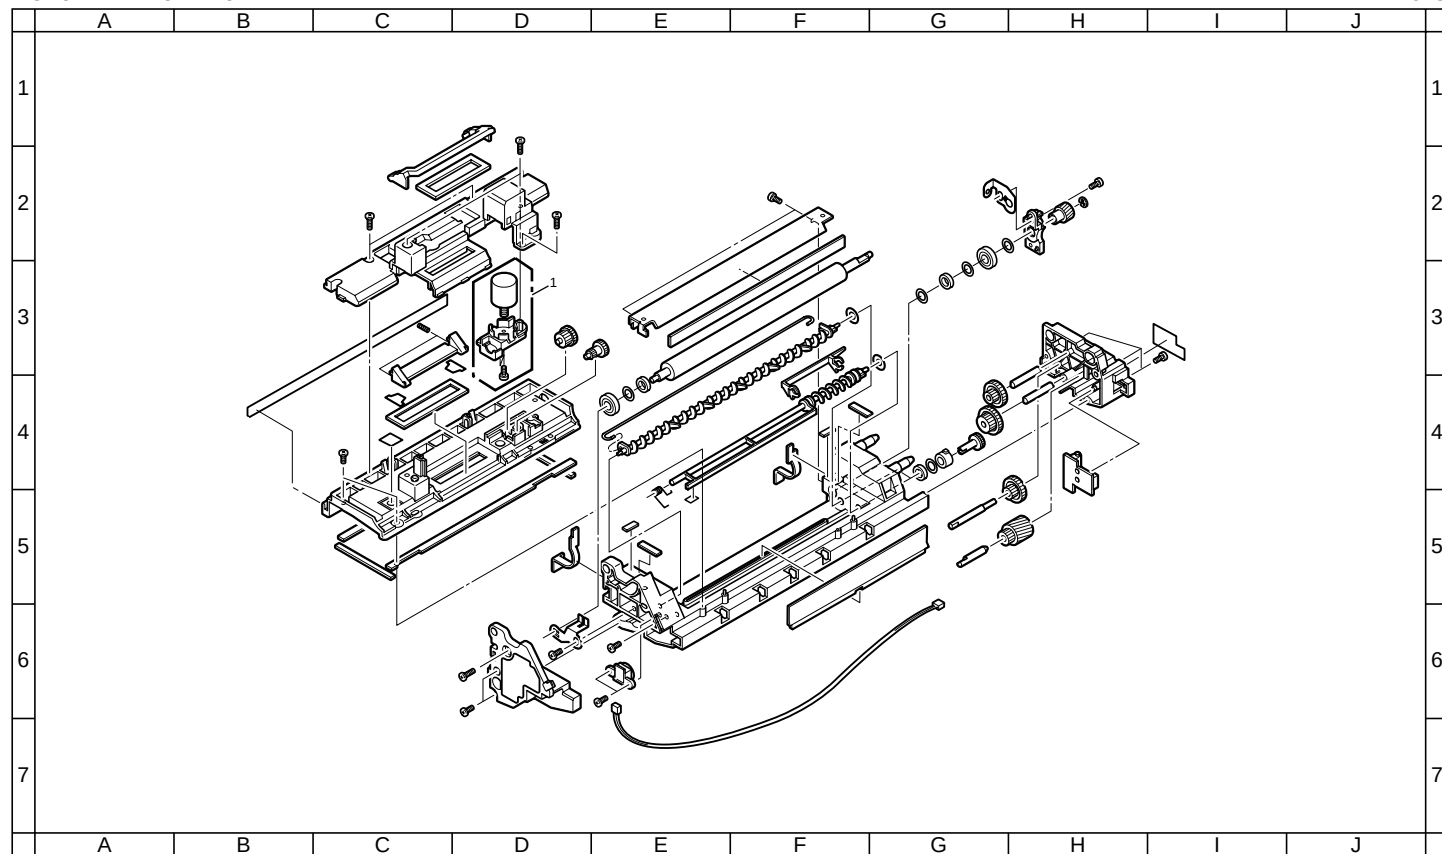


FIG. 8 DEVELOPER UNIT

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5BT07630	DV-35 DEVELOPMENT UNIT	1
	•5BS07140	TONER MOTOR ASS'Y	1

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

• Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 9 MULTI-PURPOSE TRAY

5BS

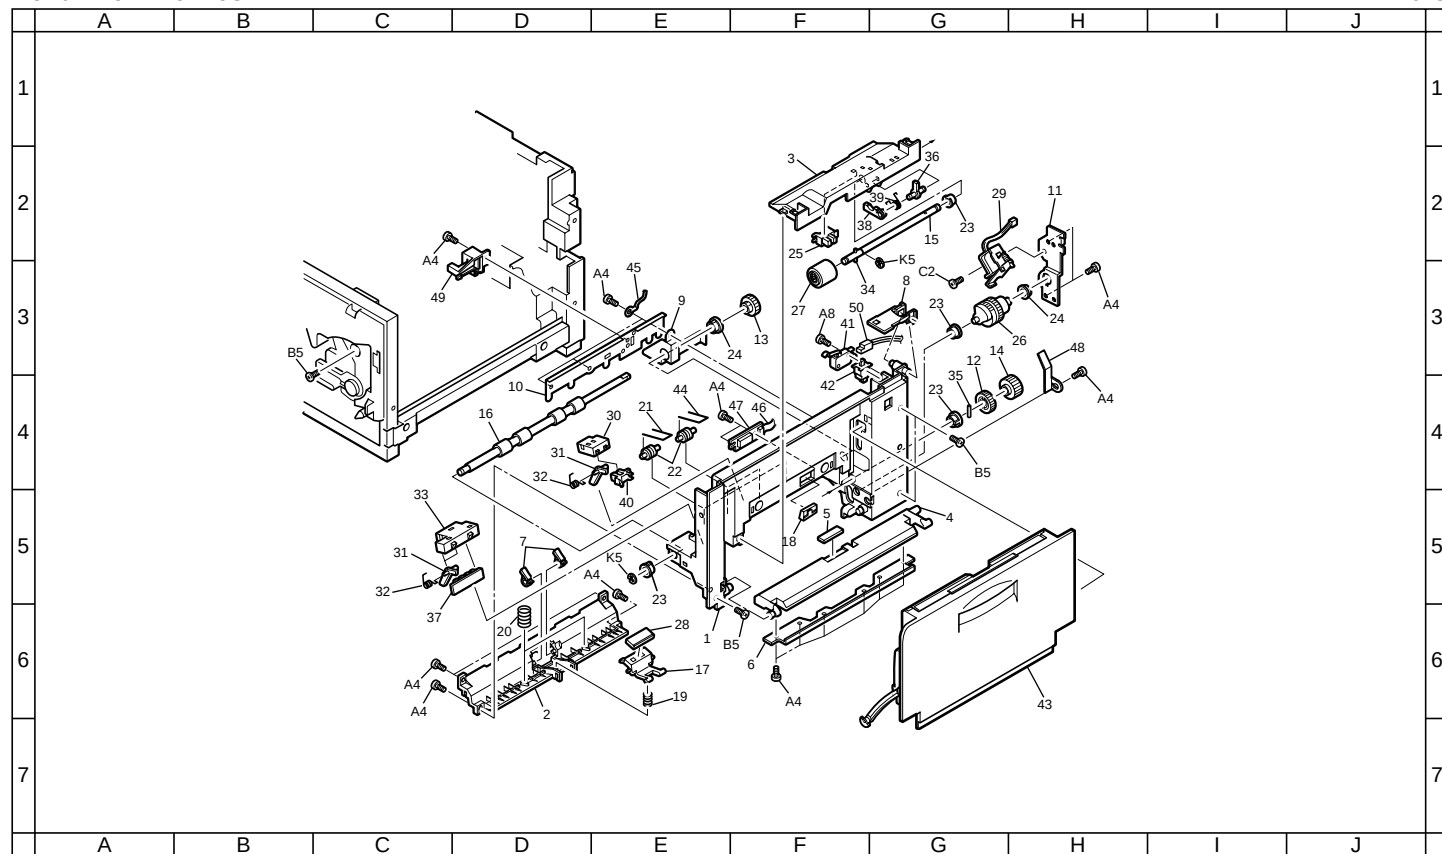


FIG. 9 MULTI-PURPOSE TRAY

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5A212680	FRAME RIGHT	1
2	5A212450	FRAME BOTTOM	1
3	5A209990	HOLDER FEED	1
4	5A209970	PLATE BOTTOM	1
5	5A211210	PAD FRICTION	1
6	5A208360	SUPPORT BOTTOM	1
7	5A211750	LEVER RETURN	2
8	5A212150	LEVER INTERLOCK	1
9	5A209540	PLATE EARTH MPF	1
10	5A208330	PLATE EARTH EF	1
11	5A208560	BKT CLUTCH	1
12	5A210320	GEAR FEED Z22	1
13	5A210340	GEAR MD Z26	1
14	5A210310	GEAR Z22	1
15	5A208740	SHAFT MPF	1
16	5A208780	ROLLER MPF MID	1
17	5A212220	BKT SEPARATOR	1
18	5A209760	CAP CONNECT EF	1
19	5BS07150	SPRING SEPARATOR	1
20	5A209310	SPRING BOTTOM	2
21	5A209330	SPRING PULLEY MD	2
22	5A210950	PULLEY S	4
23	5A210810	BUSH POM B	4
24	5A210740	BUSH POM EW	2
25	5A207830	PHOTO SENSOR	1
26	5A207570	CLUTCH ASS'Y	1
27	5A207650	ROLLER FEED ASS'Y	1
28	5A207360	SEPARATOR ASS'Y	1
29	5A208000	SOLENOID FLAPPER	1
30	5A209800	BKT SENSOR A	1
31	5A211940	ACTUATOR EF	2
32	5A208990	SPRING ACT EF	2
33	5A209840	BKT SENSOR B	1
34	5BS07190	SPRING PIN	1
35	5BS07180	PARALLEL PIN	1
36	5A211870	ACTUATOR MPF A	1
37	5A207500	P.W. BOARD ASS'Y	1
38	5A211790	ACTUATOR MPF B	1
39	5A208980	SPRING ACT MPF	1
40	5A207830	PHOTO SENSOR	1

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
41	5A207880	MICRO SWITCH 01X02	1
42	5A207890	PUSH SWITCH	1
43	5A207660	TRAY MPF ASS'Y	1
44	5A209340	SPRING PULLEY EF	2
45	5A207100	CONN CORD ASS'Y	1
46	5A207190	CONN CORD ASS'Y	1
47	5A207380	P.W. BOARD ASS'Y	1
48	5A209500	STOPPER CAM	1
49	5A207780	SENSOR ETON ASS'Y	1
50	5A207130	CONN CORD ASS'Y	1

• Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

FIG. 10 FACE-DOWN UNIT

5BS

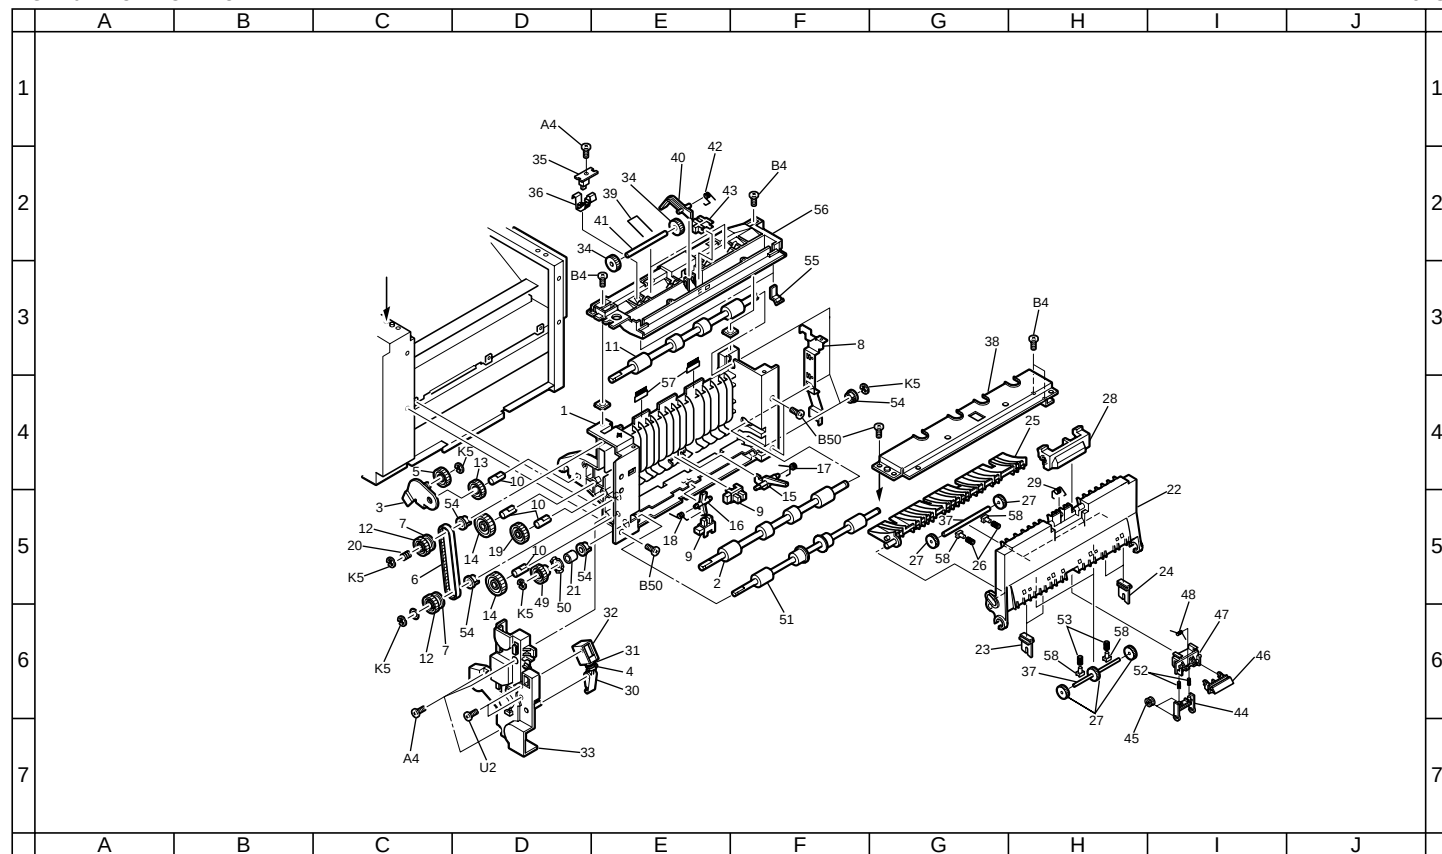


FIG. 10 FACE-DOWN UNIT

Ref. No.	Part. No.	Description	Quantity USA (120V)
1	5A212670	FRAME FD	1
2	5A208750	ROLLER EXIT C	1
3	5A208550	PLATE JOINT FD	1
4	5BS07170	SPRING PIN	1
5	5A210440	GEAR FEED Z34	1
6	5A210680	BELT FD	1
7	5A210670	PULLEY P26	2
8	5A209650	PLATE EARTH FD	1
9	5A207830	PHOTO SENSOR	2
10	5A208630	PIN FD A	4
11	5A208760	ROLLER EXIT B	1
12	5A210400	GEAR Z29S	2
13	5A210480	GEAR IDLE Z33	1
14	5A210430	GEAR IDLE Z40	2
15	5A212000	ACTUATOR FD	1
16	5A211850	ACTUATOR FU	1
17	5A209040	SPRING FD	1
18	5A208950	SPRING FU	1
19	5A210450	GEAR Z38S	1
20	5A209190	SPRING PRESS A	1
21	5A210770	COLLAR	1
22	5A212630	COVER FD	1
23	5A211830	HOLDER FD R	2
24	5A211840	HOLDER FD L	2
25	5A212570	GUIDE CHANGE	1
26	5A209090	SPRING EXIT	4
27	5A210780	PULLEY EXIT	10
28	5A212160	LATCH FD	1
29	5A209130	SPRING LATCH	1
30	5A211930	ACTUATOR SOL	1
31	5A209170	SPRING SOL	1
32	5BS07200	SOLENOID	1
33	5BT07590	COVER SIDE	1
34	5A210780	PULLEY EXIT	4
35	5A207520	P.W. BOARD ASS'Y	1
36	5A209640	PLATE SWITCH	1
37	5A208720	SHAFT EXIT	4
38	5A208620	PLATE FD	1
39	5A209400	SPRING FD EXIT	2
40	5A212060	ACTUATOR FULL	1

• Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.

5BS-1

Ref. No.	Part. No.	Description	Quantity USA (120V)
41	5A208720	SHAFT EXIT	2
42	5A209270	SPRING FULL	1
43	5A207830	PHOTO SENSOR	1
44	5A211880	HOLDER PULLEY	1
45	5A211740	PULLEY STOCKER	2
46	5A211900	STOCKER	1
47	5A211950	BASE STOCKER	1
48	5A209390	SPRING STOCKER	1
49	5A210410	GEAR Z29S A	1
50	5A209480	WASHER WAVE	1
51	5A208770	ROLLER EXIT A	1
52	5A208940	SPRING PULLEY	2
53	5A209100	SPRING EXIT A	4
54	5A208380	BUSH DRUM	6
55	5A211890	SNAP	2
56	5A212580	GUIDE FD	1
57	5A211240	DISCHARGER FD	2
58	5A210140	BUSH SP	8

• Parts with "*" are component parts or sub-assembly with "*" appearing immediately above them.

INDEX

5BS-2

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A207040	CONN CORD ASS'Y	1	2
5A207070	CONN CORD ASS'Y S02057	1	1
5A207080	CONN CORD ASS'Y	1	4
5A207100	CONN CORD ASS'Y	1	9
5A207110	CONN CORD ASS'Y	1	2
5A207130	CONN CORD ASS'Y	1	9
5A207150	CONN CORD ASS'Y	1	2
5A207160	CONN CORD ASS'Y	1	4
5A207170	CONN CORD ASS'Y	1	2
5A207180	CONN CORD ASS'Y	1	2
5A207190	CONN CORD ASS'Y	1	9
5A207200	CONN CORD ASS'Y	1	2
5A207210	CONN CORD ASS'Y	1	2
5A207220	CONN CORD ASS'Y	1	2
5A207230	CONN CORD ASS'Y	1	2
5A207250	CONN CORD ASS'Y	1	2
5A207260	CONN CORD ASS'Y	1	2
5A207270	CONN CORD ASS'Y	1	2
5A207300	CONN CORD ASS'Y	1	2
5A207330	CONN CORD ASS'Y	1	2
5A207350	SWITCHING REGULATOR	1	4
5A207360	SEPARATOR ASS'Y	1	9
5A207380	P.W. BOARD ASS'Y	1	9
5A207410	P.W. BOARD ASS'Y	1	2
5A207420	P.W. BOARD ASS'Y	1	2
5B707110	P.W. BOARD ASS'Y (KP-675)	1	4
5A207460	P.W. BOARD ASS'Y	1	3
5A207490	P.W. BOARD ASS'Y	1	2
5A207500	P.W. BOARD ASS'Y	1	9
5A207510	P.W. BOARD ASS'Y	1	2
5A207520	P.W. BOARD ASS'Y	1	10
5A207530	P.W. BOARD ASS'Y	1	2
5A207550	BKT RIGHT ASS'Y	1	1
5A207560	BRUSH CLEAN ASS'Y	1	5
5A207570	CLUTCH ASS'Y	1	9
5A207580	LID TOP ASS'Y	1	1
5A207600	COVER REAR ASS'Y	1	1

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A207650	ROLLER FEED ASS'Y	1	9
5A207660	TRAY MPF ASS'Y	1	9
5A207680	MOTOR MAIN	1	3
5A207690	HIGH MEG R ASS'Y	1	2
5A207700	THERMISTOR ASS'Y	1	6
5A207710	TRANS ASS'Y	1	2
5A207750	KEY BOARD ASS'Y	1	1
5A207760	TOWER SENSOR ASS'Y	1	2
5A207780	SENSOR ETON ASS'Y	1	9
5A207800	HINGE FRONT LB	1	1
5A207830	PHOTO SENSOR	6	2, 9, 10
5A207870	SEE-SAW SW	1	4
5A207880	MICRO SWITCH 01X02	1	9
5A207890	PUSH SWITCH	1	9
5A207910	CLUTCH FEED	1	3
5A207920	CLUTCH REGIST	1	3
5A207940	FAN MOTOR	3	1, 4
5A207970	HEATER LAMP C	1	6
5A207980	HEATER LAMP S	1	6
5A208000	SOLENOID FLAPPER	1	9
5A208010	SHEET OPE.MANUAL	1	1
5A208120	SHIELD CASE	1	4
5A208130	CONT BOX	1	4
5A208140	RAIL DLP	1	2
5A208150	COVER REAR	1	1
5A208160	PLATE BASE LID	1	2
5A208180	PLATE CON C	1	4
5A208190	PLATE FRAME SIDE	2	2
5A208210	RAIL CASE R	1	5
5A208220	PLATE FRAME	2	2
5A208240	BASE STAY L	1	2
5A208250	BASE STAY R	1	2
5A208310	PLATE FG DRIVE	2	2
5A208330	PLATE EARTH EF	1	9
5A208340	PLATE DRIVE FRONT	1	3
5A208350	COVER MAIN	1	1
5A208360	SUPPORT BOTTOM	1	9
5A208380	BUSH DRUM	8	5, 10

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A208400	COLLAR SPACER	3	5
5A208410	COLLAR SPACER	2	2
5A208420	ROLLER DU	2	2
5A208440	BUSH DRUM JOINT	2	3
5A208450	METAL BUSH REGIST	2	5
5A208460	PIN HV CONTACT	3	2
5A208470	COLLAR SPACER	2	2
5A208480	PLATE BIAS	1	2
5A208490	SHEET EARTH TC	1	5
5A208510	PLATE MAGNET CATCH	2	1
5A208530	PLATE OPTION	1	4
5A208540	PLATE CONTROLLER	1	4
5A208550	PLATE JOINT FD	1	10
5A208560	BKT CLUTCH	1	9
5A208570	PLATE COVER GEAR	1	3
5A208580	BRUSH DC CHARGE	1	5
5A208620	PLATE FD	1	10
5A208630	PIN FD A	4	10
5A208660	JOINT DRUM	1	3
5A208720	SHAFT EXIT	6	10
5A208730	SHAFT PULLEY	2	5
5A208740	SHAFT MPF	1	9
5A208750	ROLLER EXIT C	1	10
5A208760	ROLLER EXIT B	1	10
5A208770	ROLLER EXIT A	1	10
5A208780	ROLLER MPF MID	1	9
5A208810	ROLLER REGIST UP	1	5
5A208820	ROLLER REGIST LOW	1	5
5A208850	ROLLER TRANSFER	1	5
5A208880	PLATE DRIVE MID	1	3
5A208900	PLATE PAPER GUIDE	1	5
5A208910	RAIL BOTTOM L	1	2
5A208920	RAIL BOTTOM R	1	2
5A208940	SPRING PULLEY	2	10
5A208950	SPRING FU	1	10
5A208980	SPRING ACT MPF	1	9
5A208990	SPRING ACT EF	2	9
5A209000	SPRING ACTUATOR RE	1	5
5A209010	SPRING EARTH DD	1	3
5A209020	SPRING RELEASE C	1	5
5A209040	SPRING FD	1	10

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A209050	SPRING SENSOR	1	2
5A209060	SPRING REGIST A	1	5
5A209070	SPRING REGIST B	1	5
5A209080	SPRING JOINT	1	2
5A209090	SPRING EXIT	4	10
5A209100	SPRING EXIT A	4	10
5A209110	SPRING BRUSH	1	5
5A209130	SPRING LATCH	1	10
5A209140	SPRING MIDDLE	2	5
5A209150	SPRING JOINT UNIT	1	3
5A209170	SPRING SOL	1	10
5A209190	SPRING PRESS A	1	10
5A209200	SPRING HV CONTACT	3	2
5A209240	SPRING TC ROLL	1	5
5A209270	SPRING FULL	1	10
5A209280	SPRING RELEASE B	1	5
5A209290	SPRING CONT A	2	1
5A209300	SPRING LOCK DRUM	1	2
5A209310	SPRING BOTTOM	2	9
5A209330	SPRING PULLEY MD	2	9
5A209340	SPRING PULLEY EF	2	9
5A209380	SPRING MAIN A	1	2
5A209390	SPRING STOCKER	1	10
5A209400	SPRING FD EXIT	2	10
5A209410	SPRING RAIL L	1	2
5A209430	PLATE CONTACT TC	1	5
5A209440	CORD KEEP	2	1
5A209480	WASHER WAVE	1	10
5A209500	STOPPER CAM	1	9
5A209540	PLATE EARTH MPF	1	9
5A209580	PLATE EARTH FRONT	1	2
5A209590	PLATE REGIST	1	5
5A209620	PLATE TC	1	5
5A209630	PLATE DISCHARGER	1	5
5A209640	PLATE SWITCH	1	10
5A209650	PLATE EARTH FD	1	10
5A209670	PLATE D-CONTAINER	1	3
5A209680	PLATE DRIVE CLUTCH	1	3
5A209690	PLATE TRAY F	1	1
5A209700	PLATE TRAY R	1	1
5A209710	PLATE DRIVE REAR	1	3

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A209720	RAIL MIDDLE	1	2
5A209750	PUSH CONTAIN	2	1
5A209760	CAP CONNECT EF	1	9
5A209790	COVER PWB CONT	1	2
5A209800	BKT SENSOR A	1	9
5A209810	BKT TRAY FB	1	1
5A209820	BKT TRAY RB	1	1
5A209830	COVER CONTACT	1	2
5A209840	BKT SENSOR B	1	9
5A209850	STOPPER PAPER	1	1
5A209870	DUCT TOP COVER	1	2
5A209880	BKT TRAY FA	1	1
5A209890	BKT TRAY RA	1	1
5A209930	DUCT FUSER UP	1	2
5A209940	COVER STOPPER	1	1
5A209970	PLATE BOTTOM	1	9
5A209990	HOLDER FEED	1	9
5A210000	GUIDE TC OEM	1	5
5A210060	FRAME FRONT	1	2
5A210080	COVER RIGHT	1	1
5A210110	EDGING SADDLE	2	4
5A210120	EDGING SADDLE	1	4
5A210130	HOLDER CLUTCH	1	3
5A210140	BUSH SP	8	10
5A210160	COVER PULLEY	1	3
5A210170	ARM LEVER DLP	1	2
5A210190	GEAR Z33S-P36	1	3
5A210200	GEAR Z36S-P20	1	3
5A210270	GEAR MFEED Z25	1	6
5A210290	GEAR REGIST Z24	1	5
5A210310	GEAR Z22	1	9
5A210320	GEAR FEED Z22	1	9
5A210330	GEAR TC Z26	1	5
5A210340	GEAR MD Z26	1	9
5A210350	GEAR JOINT Z28S	1	3
5A210360	GEAR JOINT Z26S	1	3
5A210370	GEAR Z24S	1	3
5A210380	GEAR Z30S-Z20S	1	3
5A210390	GEAR Z29S	1	6
5A210400	GEAR Z29S	2	10

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A210410	GEAR Z29S A	1	10
5A210420	GEAR JOINT Z32	1	5
5A210430	GEAR IDLE Z40	2	10
5A210440	GEAR FEED Z34	1	10
5A210450	GEAR Z38S	1	10
5A210480	GEAR IDLE Z33	1	10
5A210490	GEAR JOINT Z31S	1	3
5A210500	GEAR CLUTCH Z32S	2	3
5A210510	GEAR Z36	1	6
5A210520	GEAR FUSER Z33	1	6
5A210540	GEAR Z41H	1	3
5A210550	GEAR Z45S A	1	3
5A210560	GEAR Z45S B	3	3
5A210570	GEAR Z45S-Z22S	1	3
5A210580	GEAR Z30S-Z43S-Z17S	1	3
5A210590	GEAR Z50S-Z24S	1	3
5A210600	GEAR Z72H-Z27H	1	3
5A210610	GEAR Z55H	1	3
5A210620	GEAR Z55H-Z27S	1	3
5A210630	GEAR Z76H-Z35H	1	3
5A210640	GEAR Z56H-Z37S	1	3
5A210650	GEAR Z53S-Z23S	1	3
5A210660	GEAR Z55	1	6
5A210670	PULLEY P26	2	10
5A210680	BELT FD	1	10
5A210710	RAIL DLP F	1	2
5A210730	TRAY RAIL	1	2
5A210740	BUSH POM EW	2	9
5A210770	COLLAR	1	10
5A210780	PULLEY EXIT	14	10
5A210790	BUSHING STOP	2	3
5A210810	BUSH POM B	4	9
5A210830	PULLEY RAIL B	1	2
5A210840	PULLEY RAIL D	2	2
5A210860	FOOT	4	2
5A210870	BELT DRIVE TOWER	1	3
5A210880	PULLEY RAIL C	3	5
5A210900	BUSH C	1	5
5A210910	PULLEY RAIL E	2	5
5A210920	PULLEY MIDDLE	4	5
5A210930	BUSH B	1	5
5A210940	LATCH JOINT	1	5

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A210950	PULLEY S	4	9
5A211000	SPONGE MAIN	1	2
5A211010	RUBBER FRONT	2	1
5A211050	PAD FUSER	2	2
5A211080	PAD CUSHION	2	5
5A211140	SHEET TONER	1	2
5A211180	SHEET CONT C	2	4
5A211210	PAD FRICTION	1	9
5A211240	DISCHARGER FD	2	10
5A211250	SHEET CONT D	1	4
5A211270	SHEET GUIDE PAPER A	2	5
5A211290	SHEET GUIDE PAPER B	2	5
5A211340	SHEET FAN A	1	2
5A211400	SHEET CONT B	1	4
5A211510	SHEET REGIST	1	5
5A211570	GUIDE PAPER B	1	5
5A211590	SHEET CONT A	1	4
5A211620	DUCT DRUM	1	2
5A211650	LABEL RELEASE B	1	5
5A211700	LABEL DIAGRAM A	1	1
5A211710	LABEL DIAGRAM C	1	1
5A211730	LABEL DIAGRAM B	1	1
5A211740	PULLEY STOCKER	2	10
5A211750	LEVER RETURN	2	9
5A211760	KNOB RELEASE	1	5
5A211770	HOLDER RAIL B	1	2
5A211780	SEPARATOR	6	6
5A211790	ACTUATOR MPF B	1	9
5A211810	LATCH RAIL	1	5
5A211820	LOCKING WIRE SADDLE	1	4
5A211830	HOLDER FD R	2	10
5A211840	HOLDER FD L	2	10
5A211850	ACTUATOR FU	1	10
5A211870	ACTUATOR MPF A	1	9
5A211880	HOLDER PULLEY	1	10
5A211890	SNAP	2	10
5A211900	STOCKER	1	10
5A211910	HOLDER RELEASE	1	5
5A211920	LOCK LID TOP F	1	1
5A211930	ACTUATOR SOL	1	10
5A211940	ACTUATOR EF	2	9

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A211950	BASE STOCKER	1	10
5A211970	LOCK DRUM	1	2
5A211980	BRACKET PULLEY B	1	2
5A211990	JOINT DLP	1	3
5A212000	ACTUATOR FD	1	10
5A212020	HINGE FU F	1	1
5A212030	HINGE FU R	1	1
5A212060	ACTUATOR FULL	1	10
5A212110	INTERRUPT SENSOR	1	2
5A212120	PLATE LOCK A	1	5
5A212130	LOCK COVER	1	1
5A212150	LEVER INTERLOCK	1	9
5A212160	LATCH FD	1	10
5A212190	ACTUATOR JOINT	1	2
5A212200	LOCK LID TOP R	1	1
5A212210	BKT PWB	1	2
5A212220	BKT SEPARATOR	1	9
5A212240	PLATE TOWER	1	1
5A212270	LINK FU F	1	1
5A212280	LINK FU R	1	1
5A212290	HOLDER RAIL A	1	5
5A212310	ACTUATOR REGIST	1	5
5A212320	RAIL OPTION A	2	4
5A212330	HANDLE CASE	1	5
5A212360	RAIL OPTION B	2	4
5A212370	COVER PANEL L	1	1
5A212380	COVER PANEL R	1	1
5A212390	TRAY FU C	1	1
5A212420	GUIDE DLP REAR	1	2
5A212450	FRAME BOTTOM	1	9
5A212470	HOLDER DC CHARGE	1	5
5A212480	RAIL BASE	1	2
5A212490	PLATE RELEASE	1	5
5A212501	GUIDE CHUTE LOW	1	5
5A212520	COVER FRONT LOW L	1	2
5A212530	COVER FRONT LOW R	1	2
5A212550	LEVER TOP	1	1
5A212560	GUIDE CHANGE DU	1	5
5A212570	GUIDE CHANGE	1	10
5A212580	GUIDE FD	1	10
5A212610	TRAY FU B	1	1

Part. No.	Description	Quantity USA (120V)	Fig. No.
5A212620	CASE BELT GUIDE	1	2
5A212630	COVER FD	1	10
5A212660	GUIDE PAPER	1	5
5A212670	FRAME FD	1	10
5A212680	FRAME RIGHT	1	9
5A212700	COVER LEFT	1	1
5A212710	FRAME REAR	1	2
5A212720	COVER TOP	1	1
5A212730	CASE LOW	1	5
5A212780	LK-30 SCANNER UNIT	1	2
5A212820	DRIVE C ASS'Y	1	3
5A212840	TRAY FU ASS'Y	1	1
5A212850	PLATE RELEASE ASS'Y	1	5
5A212880	FAN MOTOR	1	2
5A212900	TRAY FU A	1	1
5A212920	PLATE LOCK B	1	5
5A212930	SPRING RELEASE A	1	5
5BS07020	RUBBER FRONT B	1	1
5BS07030	SLIDER FU	2	1
5BS07040	CORD PRESS	1	2
5BS07050	RAIL BASE L	1	2
5BS07070	PARALLEL PIN	1	3
5BS07100	OT LOCK WASHER	1	4
5BS07110	ROLLER MIDDLE	1	5
5BS07130	THERMOSTAT 240V190C	1	6
5BS07140	TONER MOTOR ASS'Y	1	8
5BS07150	SPRING SEPARATOR	1	9
5BS07170	SPRING PIN	1	10
5BS07180	PARALLEL PIN	1	9
5BS07190	SPRING PIN	1	9

Part. No.	Description	Quantity USA (120V)	Fig. No.
5BS07200	SOLENOID	1	10
5BS07210	LABEL FRAME FRONT	1	2
5BS07220	DRIVE A ASS'Y	1	3
5BS07230	GEAR Z46H-Z36H ASS'Y	1	3
5BS07240	MINI SLIDE CLAMP	4	4
5BS07250	FE-33 FEED UNIT	1	5
5BS07260	FK-30 FUSER UNIT	1	6
5BS07270	MCH E ASS'Y	1	7
5BS07280	P.W. BOARD ASS'Y(KP-668)	1	4
5BS07290	P.W. BOARD ASS'Y(KP-668)	1	4
5BS07300	DK-33 DRUM UNIT	1	7
5BT07160	MAGNET CATCHER	2	2
5BT07210	COVER PANEL MT ASS'Y	1	1
5BT07220	WASTE TONER CONVEYER	1	2
5BT07250	DRIVE B ASS'Y	1	3
5BT07350	RAIL CASE L	1	5
5BT07510	LEVER DLP	1	2
5BT07530	PLATE NAME RC	1	1
5BT07570	BUSH TRANSFER B	2	5
5BT07590	COVER SIDE	1	10
5BT07610	DUCT DLP LOW	1	2
5BT07630	DV-35 DEVELOPMENT UNIT	1	8
5BT07650	TR-30 TRANSFER UNIT	1	5
5BT07710	CONN.CORD ASS'Y	1	2
5BT07720	LEVER LOCK FEED	1	2
5BT07770	SEAL SENSOR	1	3
5BT07780	SHAFT CLUTCH R	1	3
5BT07790	SPRING JOINT	1	3
5BT07800	GEAR Z37H-Z22H ASS'Y	1	3
5BT07810	GEAR Z65H	1	3
5BT07820	CONN.CORD ASS'Y	1	4
5BT07850	GUIDE CHUTE UP	1	5
5BT07860	PLATE EARTH FEED	1	5
5BT07870	SHHET GUIDE CHUTE	1	5
5BT07880	SHHET LOW	1	5

MITA COPYSTAR AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

149 West 51st street,
New York, NY 10019
TEL : (212) 554-2679
FAX : (212) 554-2625

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

225 Spring Lake Drive,
Itasca, Illinois 60143
TEL : (630) 250-7447
FAX : (630) 250-8787

Western Region:

14101 Alton Parkway,
P.O.Box 57006,Irvine,
California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

MITA COPYSTAR CANADA, LTD.

6120 Kestrel Road,
Mississauga, Ontario L5T 1S8
TEL : (905) 670-4425
FAX : (905) 670-8116

MITA COPYSTER SOUTH AMERICA S.A.

Av. Mitre 1345 Florida (1602)
Pcia, Buenos Aires,Argentina
TEL : (54) 11-4730-1070
FAX : (54) 11-4760-2071

MITA COPYSTAR MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
Delegación Azcapotzalco
México, D.F. C.P. 02130
TEL : 3-83-27-41
FAX : 3-83-78-04

© 1999 MITA INDUSTRIAL CO., LTD.

MITA and *mita* are registered trademarks of MITA INDUSTRIAL CO., LTD.

Printed in U.S.A.