



DP-3600

PARTS LIST

Published in Jan '00
5BT70772
Revision 2

DP-3600

NOTE

1. Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5BT07530	PLATE NAME RC	DP-3600	60Hz	1

2. Service calls and freight will be charged separately.

3. Symbols in the "Parts Number" column.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

eg.	Parts Number	Parts Name	Parts Number	Parts Name
	5BT07140	COVER REAR ASS'Y	•5BT07330	COVER REAR
			•5A208350	COVER MAIN

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

eg.	Parts Number	Parts Name	Parts Number	Parts Name
	•5BT07650	TR-30 TRANSFER UNIT	••5A210000	GUIDE TC OEM
			••5A209430	PLATE CONTACT TC

- Parts with "●" indicates the service parts and the parts without "●" can not be supplied.

4. See the last page of this parts list for the classification of the screws in the illustrations.

Parts List

DP-3600

———— CONTENTS ————

FIG.1	COVERS	2
FIG.2	UPPER FRAME	4
FIG.3	DRIVE UNIT	6
FIG.4	CONTROLLER BOX	8
FIG.5	FEED-TRANS. UNIT	10
FIG.6	FUSER UNIT	12
FIG.7	DRUM UNIT	14
FIG.8	DEVELOPER UNIT	16
FIG.9	MULTI-PURPOSE TRAY	18
FIG.10	FACE-DOWN UNIT	20
	• INDEX	22

5BT



FIG. 1 COVERS

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	1	5BT07460	COVER FRONT	1
●	2	5BT07530	PLATE NAME RC	1
●	3	5A208510	PLATE MAGNET CATCH	2
●	4	5A211010	RUBBER FRONT	3
●	5	5A207800	HINGE FRONT R ASS'Y	2
●	6	5A210080	COVER RIGHT	1
●	7	5A212700	COVER LEFT	1
●	8	5BT07210	COVER PANEL MT ASS'Y	1
●	9	5BT07300	SHEET OPE. MANUAL	1
●	10	5BT07020	CONN. CORD ASS'Y	1
●	11	5A212370	COVER PANEL L	1
●	12	5A212380	COVER PANEL R	1
●	13	5BT07140	COVER REAR ASS'Y	1
●	14	5BT07330	COVER REAR	1
●	15	5A208350	COVER MAIN	1
●	16	5BT07150	LID TOP ASS'Y	1
●	17	5A209850	STOPPER PAPER	1
●	18	5A209940	COVER STOPPER	1
●	19	5A212130	LOCK COVER	1
●	20	5A212240	PLATE TOWER	1
●	21	5A211710	LABEL DIAGRAM C	1
●	22	5BT07560	LABEL DIAGRAM D	1
●	23	5A212720	COVER TOP	1
●	24	5BT07230	KEY BOARD ASS'Y	1
●	25	5A209750	PUSH CONTAIN	2
●	26	5A209290	SPRING CONTA	2
●	27	5A211920	LOCK LID TOP F	1
●	28	5A212200	LOCK LID TOP R	1
●	29	5A212550	LEVER TOP	1
●	30	5A212840	TRAY FU ASS'Y	1
●	31	5A209820	BKT TRAY RB	1
●	32	5A209810	BKT TRAY FB	1
●	33	5A209890	BKT TRAY RA	1
●	34	5A209880	BKT TRAY FA	1
●	35	5BS07030	SLIDER FU	2
●	36	5A212030	HINGE FU R	1
●	37	5A212020	HINGE FU F	1
●	38	5A212280	LINK FU R	1
●	39	5A212610	TRAY FU B	1
●	40	5A212390	TRAY FU C	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	41	5A209690	PLATE TRAY F	1
●	42	5A209700	PLATE TRAY R	1
●	43	5A212900	TRAY FU A	1
●	44	5A212270	LINK FU F	1
●	45	5A209440	CORD KEEP	2
●	46	5A207550	BKT RIGHT ASS'Y	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 2 UPPER FRAME

5BT

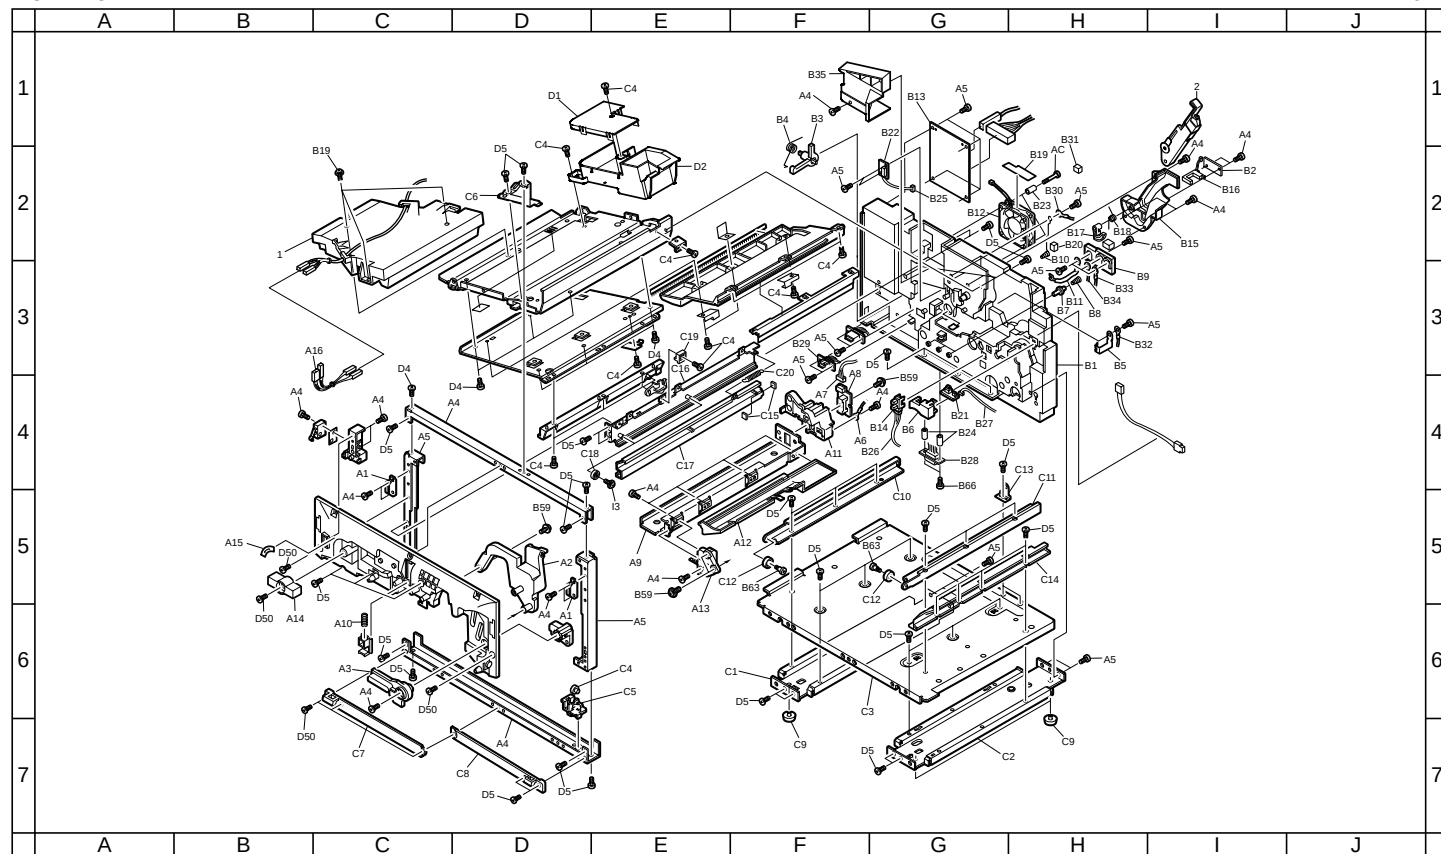


FIG. 2 UPPER FRAME

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	1	5BT07690	LK-35 SCANNER UNIT	1
	2	5BT07220	WASTE TONER CONVEYER	1
	A1	5BT07160	MAGNET CATCHER	2
	A2	5A210170	ARM LEVER DLP	1
	A3	5BT07510	LEVER DLP	1
	A4	5A208220	PLATE FRAME	2
	A5	5A208190	PLATE FRAME SIDE	2
	A6	5A207300	CONN. CORD ASS'Y	1
	A7	5A207200	CONN. CORD ASS'Y	1
●	A8	5A207420	P.W.BOARD ASS'Y(KP-560)	1
	A9	5A208140	RAIL DLP	1
	A10	5BT07400	SPRING LEVER DRUM	1
	A11	5A212420	GUIDE DLP REAR	1
	A12	5A210730	TRAY RAIL	1
	A13	5A210710	RAIL DLP F	1
	A14	5BT07720	LEVER LOCK FEED	1
	A15	5BT07730	LABEL FRAME FRONT	1
	A16	5BT07710	CONN. CORD ASS'Y	1
	B1	5A212710	FRAME REAR	1
	B2	5A207490	P.W.BOARD ASS'Y(KP-574)	1
	B3	5A212190	ACTUATOR JOINT	1
	B4	5A209080	SPRING JOINT	1
	B5	5A208480	PLATE BIAS	1
	B6	5A209790	COVER PWB CONT	1
	B7	5A208460	PIN HV CONTACT	3
	B8	5A209200	SPRING HV CONTACT	3
	B9	5A209830	COVER CONTACT	1
	B10	5A209380	SPRING MAIN A	1
	B11	5A207690	HIGH-MEG.R.ASS'Y	1
●	B12	5A212880	FAN MOTOR	1
	B13	5BT07200	TRANS ASS'Y	1
●	B14	5A207830	PT SENSOR GP1A73AZ	1
	B15	5A212620	CASE BELT GUIDE	1
	B16	5A207760	TOWER SENSOR ASS'Y	1
	B17	5A212110	INTERRUPT SENSOR	1
	B18	5A209050	SP INTERRUPT SENSOR	1
	B19	5A211340	SHEET FAN A	1
	B20	5A211000	SPONGE MAIN	1
●	B21	5A207530	P.W.BOARD ASS'Y(KP-552)	1
●	B22	5A207410	P.W.BOARD ASS'Y(KP-558)	1

- Parts with "●" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
	B23	5A208470	COLLAR SPACER	2
	B24	5A208410	COLLAR SPACER	2
	B25	5BT07050	CONN. CORD ASS'Y	1
	B26	5A207170	CONN. CORD ASS'Y	1
	B27	5A207180	CONN. CORD ASS'Y	1
	B28	5A207210	CONN. CORD ASS'Y	1
	B29	5A207220	CONN. CORD ASS'Y	1
	B30	5A207230	CONN. CORD ASS'Y	1
	B31	5BS07040	CORD PRESS	1
	B32	5A207250	CONN. CORD ASS'Y	1
	B33	5A207260	CONN. CORD ASS'Y	1
	B34	5A207270	CONN. CORD ASS'Y	1
	B35	5BT07550	DUCT DRUM	1
	C1	5A208240	BASE STAY L	1
	C2	5A208250	BASE STAY R	1
	C3	5A208160	PLATE BASE LID	1
	C4	5A210830	PULLEY RAIL B	1
	C5	5A211980	BRACKET PULLEY B	1
	C6	5A209580	PLATE EARTH FRONT	1
	C7	5A212520	COVER FRONT LOW L	1
	C8	5A212530	COVER FRONT LOW R	1
	C9	5A210860	FOOT	4
	C10	5A208910	RAIL BOTTOM L	1
	C11	5A208920	RAIL BOTTOM R	1
	C12	5A208420	ROLLER DU	2
	C13	5A208310	PLATE FG DRIVE	2
	C14	5A212480	RAIL BASE R	1
	C15	5A211050	PAD FUSER	2
	C16	5BS07050	RAIL BASE L	1
	C17	5A209720	RAIL MIDDLE	1
	C18	5A210840	PULLEY RAIL D	2
	C19	5A211770	HOLDER RAIL B	1
	C20	5A209410	SPRING RAIL L	1
	D1	5BT07580	DUCT DLP UP	1
	D2	5BT07610	DUCT DLP LOW	1

- Parts with "●" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 3 DRIVE UNIT

5BT

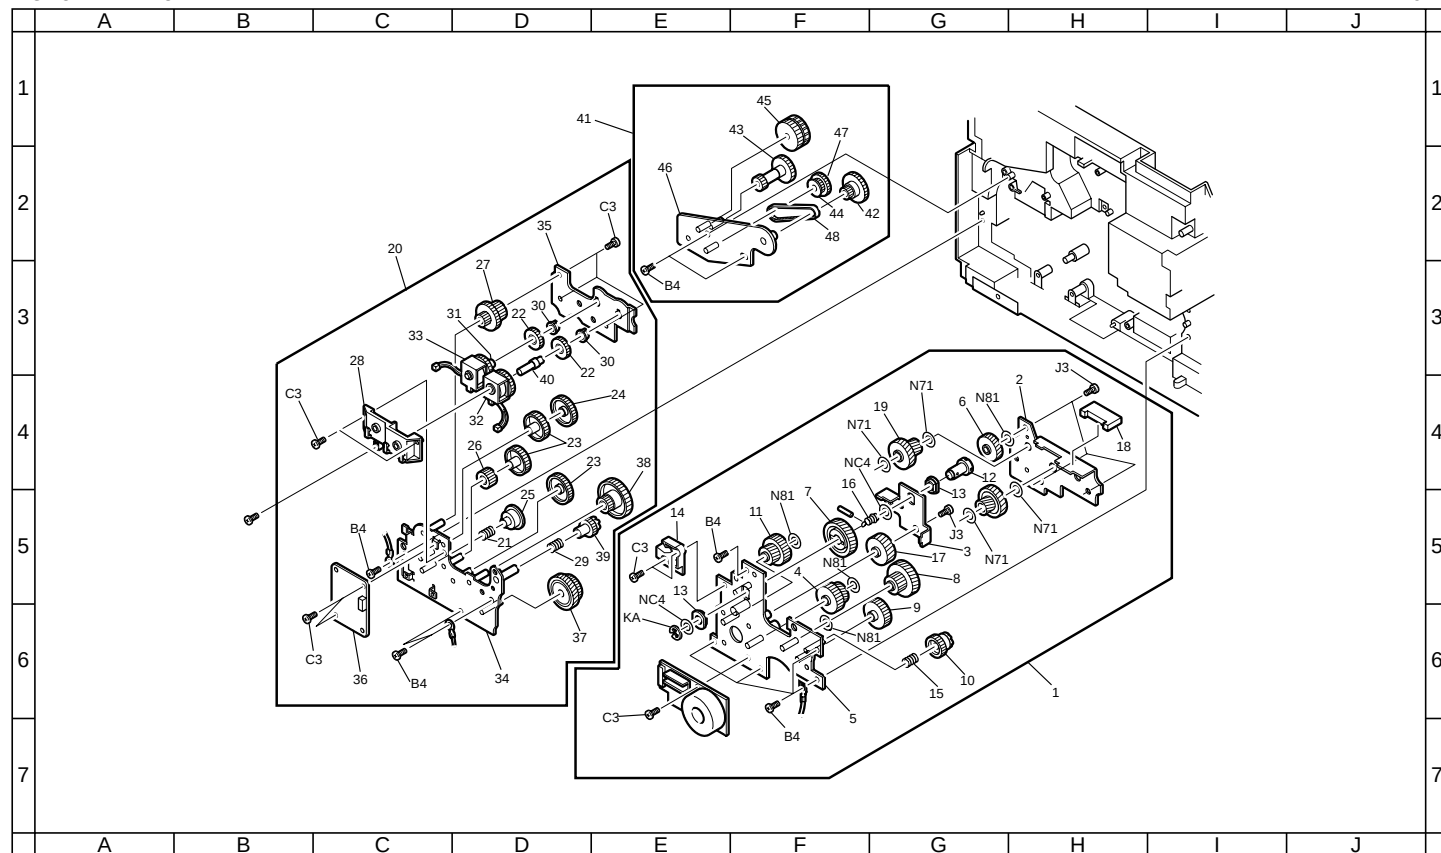


FIG. 3 DRIVE UNIT

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
	1	5BT07680	DR-35A DRIVE A ASS'Y	1
	2	•5BT07340	PLATE DRIVE F	1
	3	•5BT07360	PLATE DRIVE M	1
	4	•5A210600	GEAR Z72H-Z27H	1
	5	•5BT07420	PLATE DRIVE REAR	1
	6	•5A210540	GEAR Z41H	1
	7	•5BT07490	GEAR Z90H	1
	8	•5A210620	GEAR Z55H-Z27S	1
	9	•5A210550	GEAR Z45S A	1
	10	•5A210490	GEAR JOINT Z31S	1
	11	•5BT07480	GEAR Z76-35-23H	1
	12	•5A208660	JOINT DRUM	1
	13	•5A208440	BUSH DRUM JOINT	2
	14	•5A211990	JOINT DLP	1
	15	•5A209150	SPRING JOINT UNIT	1
	16	•5A209010	SPRING EARTH DD	1
	17	•5BT07810	GEAR Z65H	1
	18	•5BT07770	SEAL SENSOR	1
	19	•5BT07800	GEAR Z37H-Z22H ASS'Y	1
	20	5BT07250	DRIVE B ASS'Y	1
	21	•5BT07790	SPRING JOINT	1
	22	•5A210500	GEAR CLUTCH Z32S	2
	23	•5A210560	GEAR Z45S B	3
	24	•5A210590	GEAR Z50S-Z24S	1
	25	•5A210360	GEAR JOINT Z26S	1
	26	•5A210370	GEAR Z24S	1
	27	•5A210580	GEAR Z30S-Z43S-Z17S	1
	28	•5BT07470	HOLDER CLUTCH	1
	29	•5A209150	SPRING JOINT UNIT	1
	30	•5A210790	BUSHING STOP	2
	31	•5A208690	SHAFT CLUTCH F	1
●	32	•5BT07260	CLUTCH REGIST	1
●	33	•5A207910	CLUTCH FEED	1
	34	•5A209680	PLATE DRIVE CLUTCH	1
	35	•5A208570	PLATE COVER GEAR	1
●	36	•5BT07100	P.W.BOARD ASS'Y(KP-673)	1
	37	•5A210640	GEAR Z56H-Z37S	1
	38	•5A210650	GEAR Z53S-Z23S	1
	39	•5A210350	GEAR JOINT Z28S	1
	40	•5BT07780	SHAFT CLUTCH R	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
	41	5BT07700	DRIVE C ASS'Y	1
	42	•5BT07760	GEAR Z36-P37	1
	43	•5A210380	GEAR Z30S-Z20S	1
	44	•5A210160	COVER PULLEY	1
	45	•5A210570	GEAR Z45S-Z22S	1
	46	•5A209670	PLATE D-CONTAINER	1
	47	•5BT07740	GEAR Z33S-P29	1
	48	•5BT07750	BELT DRIVE TOWER	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 4 CONTROLLER BOX

5BT

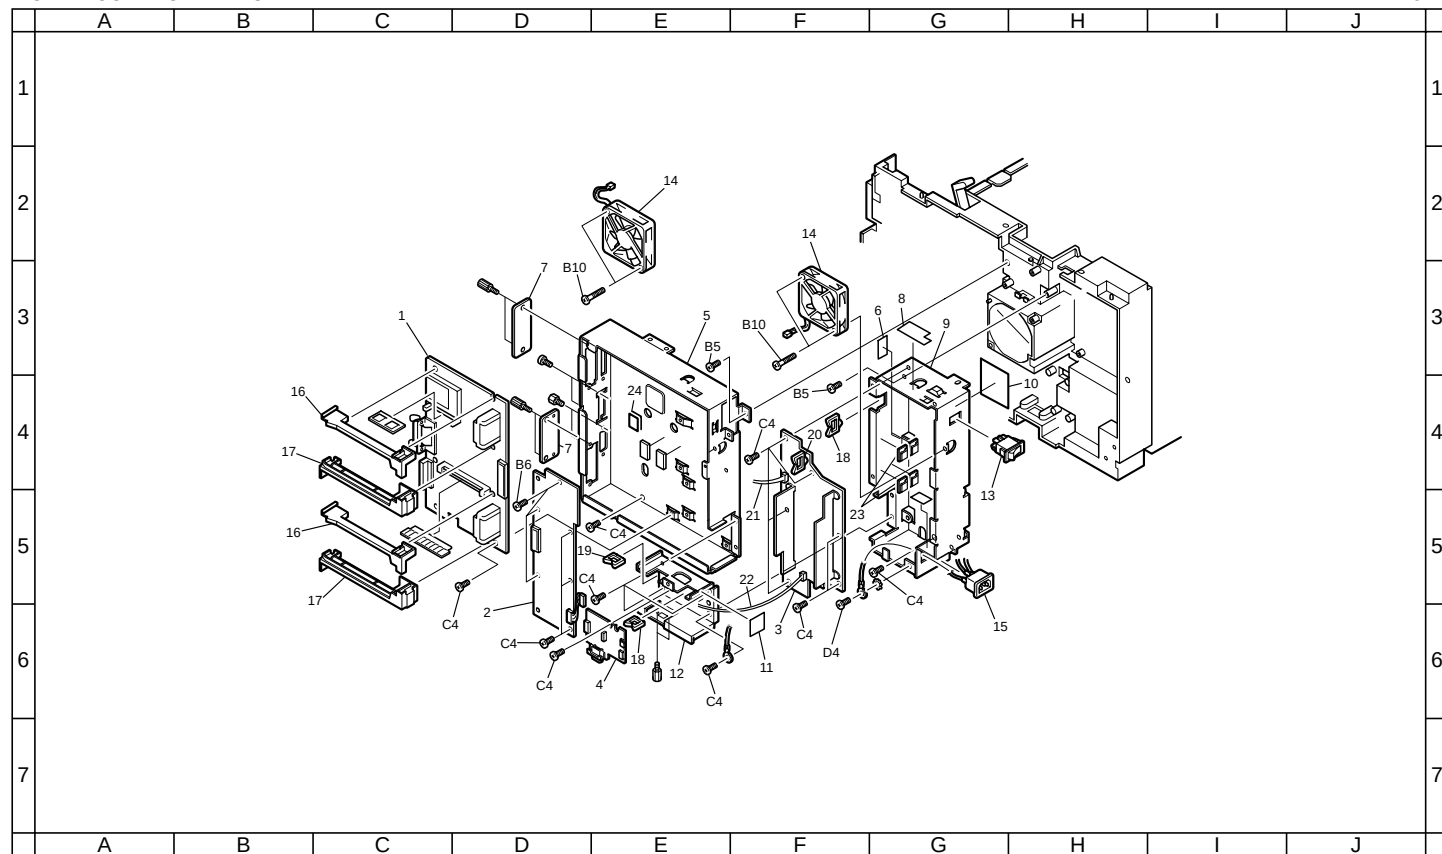


FIG. 4 CONTROLLER BOX

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	1	5BT07120	P.W.BOARD ASS'Y(KP-690)	1
●	2	5BT07090	P.W.BOARD ASS'Y(KP-669)	1
	3	5BT07070	SWITCHING REGULATOR	1
●	4	5BT07110	P.W.BOARD ASS'Y(KP-675)	1
	5	5BT07320	CONT BOX	1
	6	5A211180	SHEET CONT C	1
	7	5A208530	PLATE OPTION	2
	8	5A211400	SHEET CONT B	1
	9	5A208120	SHIELD CASE	1
	10	5BT07540	SHEET CONT E	1
	11	5A211250	SHEET CONT D	1
	12	5A208180	PLATE CON C	1
	13	5A207870	SEE-SAW SW. CSAVDEBS	1
●	14	5BT07270	FAN MOTOR	2
	15	5A207160	CONN. CORD ASS'Y	1
	16	5BT07430	RAIL OPTION L	2
	17	5BT07440	RAIL OPTION R	2
	18	5A210110	EDGING SADDLE	2
	19	5A210120	EDGING SADDLE	1
	20	5A211820	LOCKING WIRE SADDLE	1
	21	5A207080	CONN. CORD ASS'Y	1
	22	5BT07820	CONN. CORD ASS'Y	1
	23	5BT07830	MINI SLIDE CLAMP	4
	24	5BT07840	SORCON GR	2

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 5 FEED-TRANS. UNIT

5BT

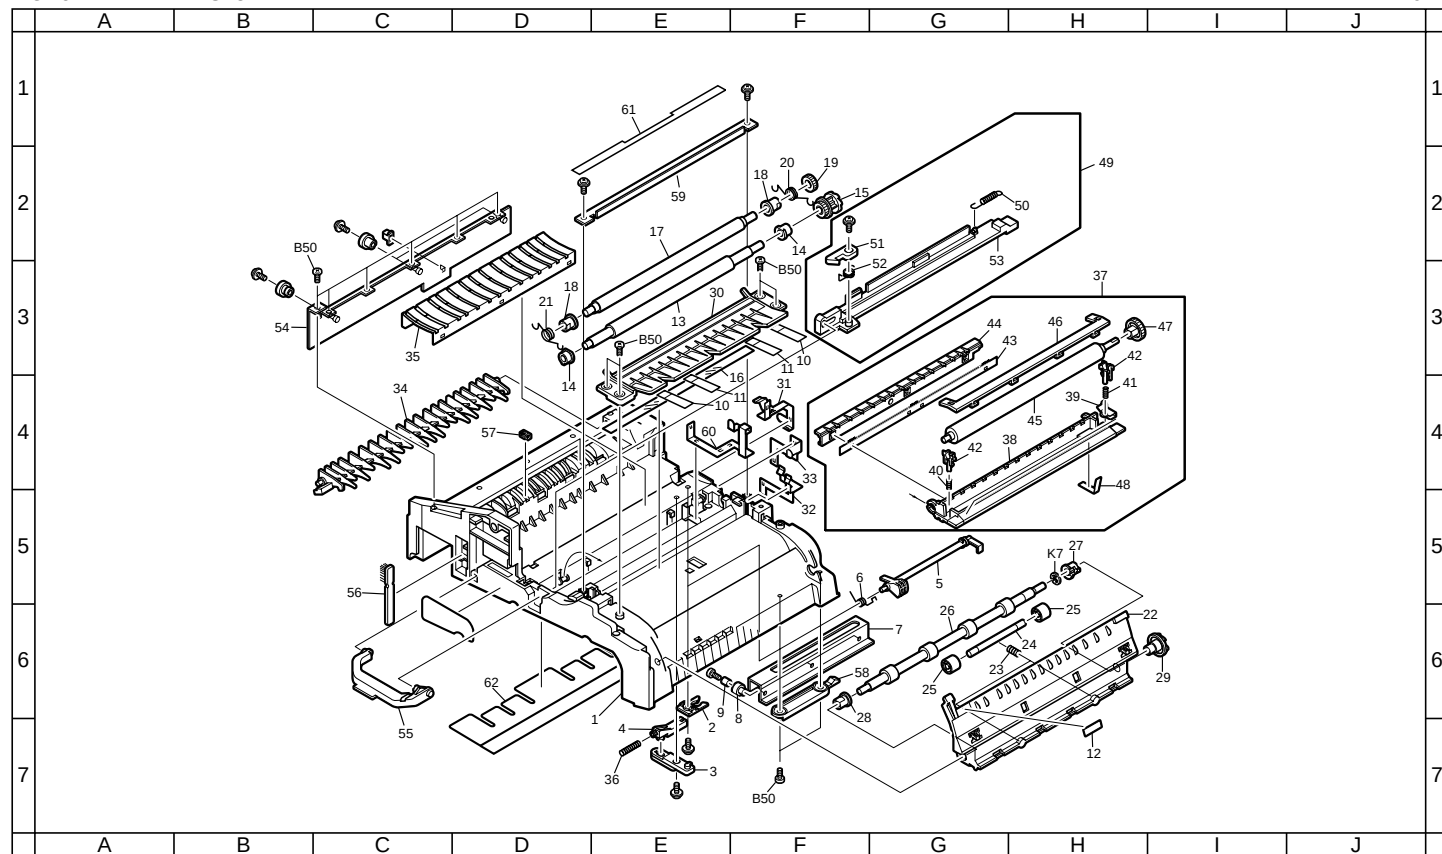


FIG. 5 FEED-TRANS. UNIT

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●		5BT07640	FE-35 FEED UNIT	1
	1	•5BT07620	CASE LOW	1
	2	•5A211810	LATCH RAIL	1
	3	•5A212120	PLATE LOCK A	1
	4	•5A212920	PLATE LOCK B	1
	5	•5A212310	ACTUATOR REGIST	1
	6	•5A209000	SPRING ACTUATOR RE	1
	7	•5A208210	RAIL CASE	1
	8	•5A210880	PULLEY RAIL C	3
	9	•5A208400	COLLAR SPACER	3
	10	•5A211290	SHEET GUIDE PAPER B	2
	11	•5A211270	SHEET GUIDE PAPER A	2
	12	•5A211650	LABEL RELEASE B	1
●	13	•5A208820	ROLLER REGIST LOW	1
	14	•5A208380	BUSH DRUM	2
	15	•5A210420	GEAR JOINT Z32	1
	16	•5A211510	SHEET REGIST	1
●	17	•5A208810	ROLLER REGIST UP	1
	18	•5A208450	METAL BUSH REGIST	2
	19	•5A210290	GEAR REGIST Z24	1
	20	•5BT07380	SPRING REGIST R	1
	21	•5BT07370	SPRING REGIST F	1
	22	•5A212660	GUIDE PAPER	1
	23	•5A209140	SPRING MIDDLE	2
	24	•5A208730	SHAFT PULLEY	2
●	25	•5A210920	PULLEY MIDDLE	4
●	26	•5BS07110	ROLLER MIDDLE	1
	27	•5A210930	BUSH B	1
	28	•5A210900	BUSH C	1
●	29	•5A210940	LATCH JOINT	1
	30	•5A211570	GUIDE PAPER B	1
	31	•5A209590	PLATE REGIST	1
	32	•5A209620	PLATE TC	1
	33	•5A209630	PLATE DISCHARGER	1
	34	•5A212560	GUIDE CHANGE DU	1
	35	•5A208900	PLATE PAPER GUIDE	1
	36	•5A212930	SPRING RELEASE A	1
	37	•5BT07650	TR-30 TRANSFER UNIT	1
	38	••5A210000	GUIDE TC OEM	1
	39	••5A209430	PLATE CONTACT TC	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
	40	••5A209240	SPRING TC ROLL	1
	41	••5A209110	SPRING BUSH	1
	42	••5BT07570	BUSH TRANSFER B	2
	43	••5A208580	BRUSH DC CHARGE	1
	44	••5A212470	HOLDER DC CHARGE	1
●	45	••5A208850	ROLLER TRANSFER	1
	46	••5A212501	GUIDE CHUTE LOW	1
	47	••5A210330	GEAR TC Z26	1
	48	••5A208490	SHEET EARTH TC	1
	49	•5A212850	PLATE RELEASE ASS'Y	1
	50	••5A209280	SPRING RELEASE B	1
	51	••5A211910	HOLDER RELEASE	1
	52	••5A209020	SPRING RELEASE C	1
	53	••5A212490	PLATE RELEASE	1
	54	•5BT07350	RAIL CASE L	1
	55	•5A212330	HANDLE CASE	1
	56	•5A207560	BRUSH CLEAN ASS'Y	1
	57	•5A211080	PAD CUSHION	2
	58	•5A212290	HOLDER RAILA	1
	59	5BT07850	GUIDE CHUTE UP	1
	60	5BT07860	PLATE EARTH FEED	1
●	61	5BT07870	SHEET GUIDE CHUTE	1
	62	5BT07880	SHEET LOW	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 6 FUSER UNIT

5BT

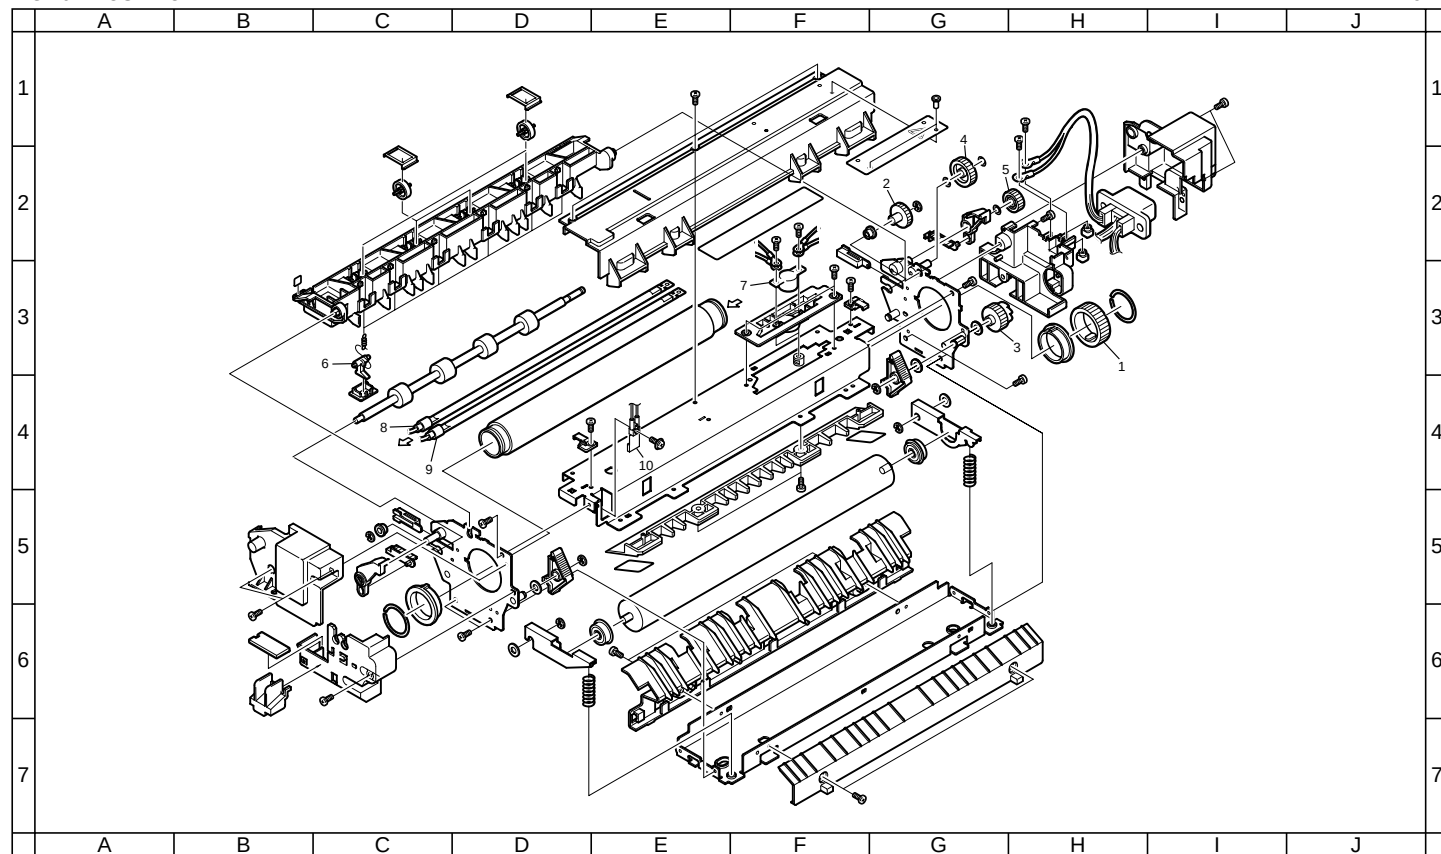


FIG. 6 FUSER UNIT

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●		5BT07670	FK-35 U FUSER UNIT	1
	1	•5A210660	GEAR Z55	1
	2	•5A210390	GEAR Z29	1
	3	•5A210520	GEAR FUSER Z33	1
	4	•5A210510	GEAR JOINT Z36	1
	5	•5A210270	GEAR M FEED Z25	1
●	6	•5BT07170	SEPARATOR ASS'Y	6
●	7	•5BS07130	THERMOSTAT 240V190I/C	1
●	8	•5BT07280	HEATER LAMP C	1
●	9	•5BT07290	HEATER LAMP S	1
●	10	•5BT07190	THERMISTOR ASS'Y	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 7 DRUM UNIT

5BT

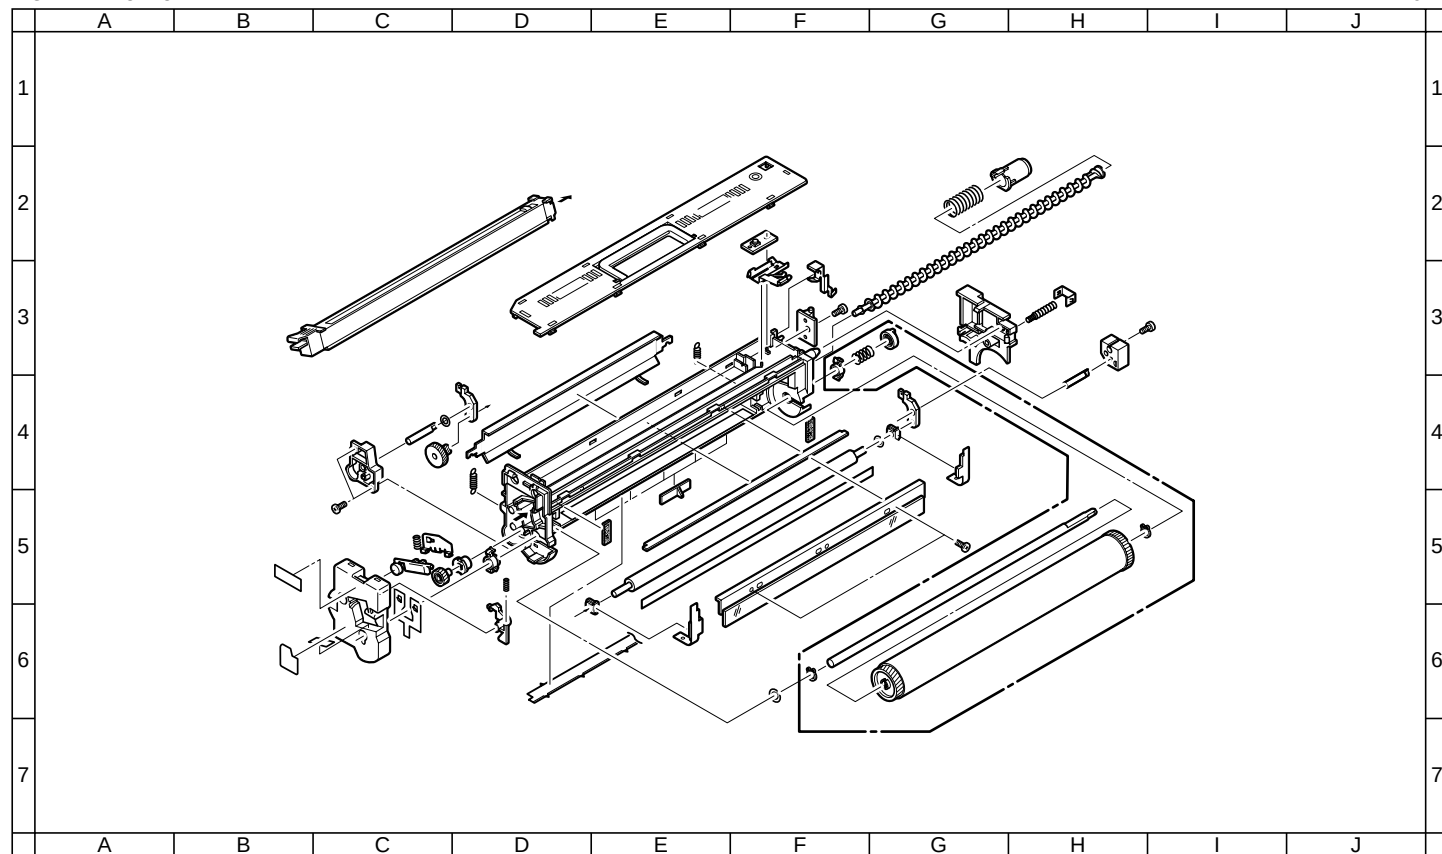


FIG. 7 DRUM UNIT

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●		5BT07660	DK-35 DRUM UNIT	1

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
• Parts with "●" indicates the service parts.

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
• Parts with "●" indicates the service parts.

FIG. 8 DEVELOPER UNIT

5BT

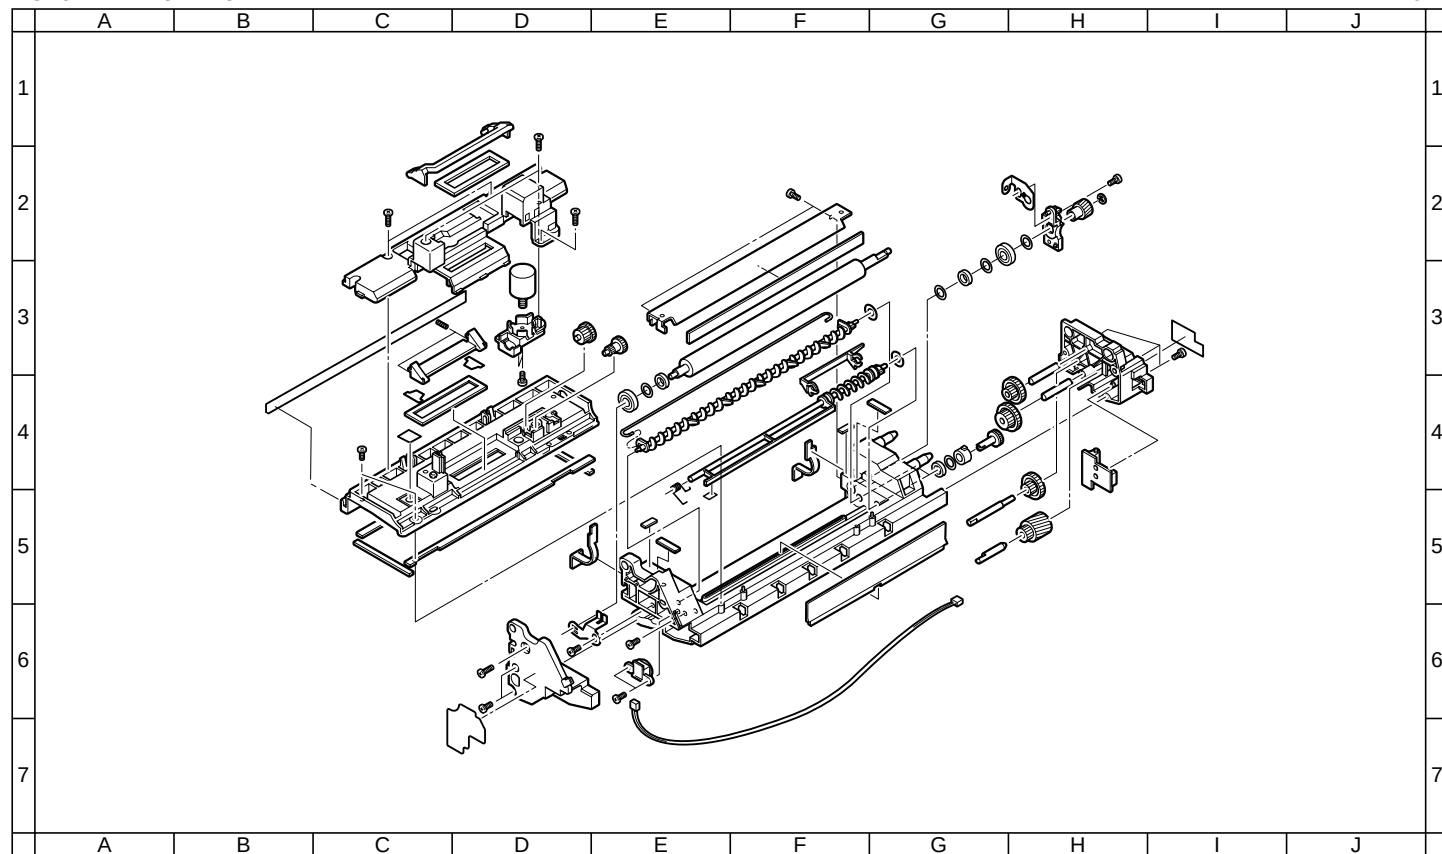


FIG. 8 DEVELOPER UNIT

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●		5BT07630	DV-35 DEVELOPER UNIT	1

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
• Parts with "●" indicates the service parts.

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
• Parts with "●" indicates the service parts.

FIG. 9 MULTI-PURPOSE TRAY

5BT-1

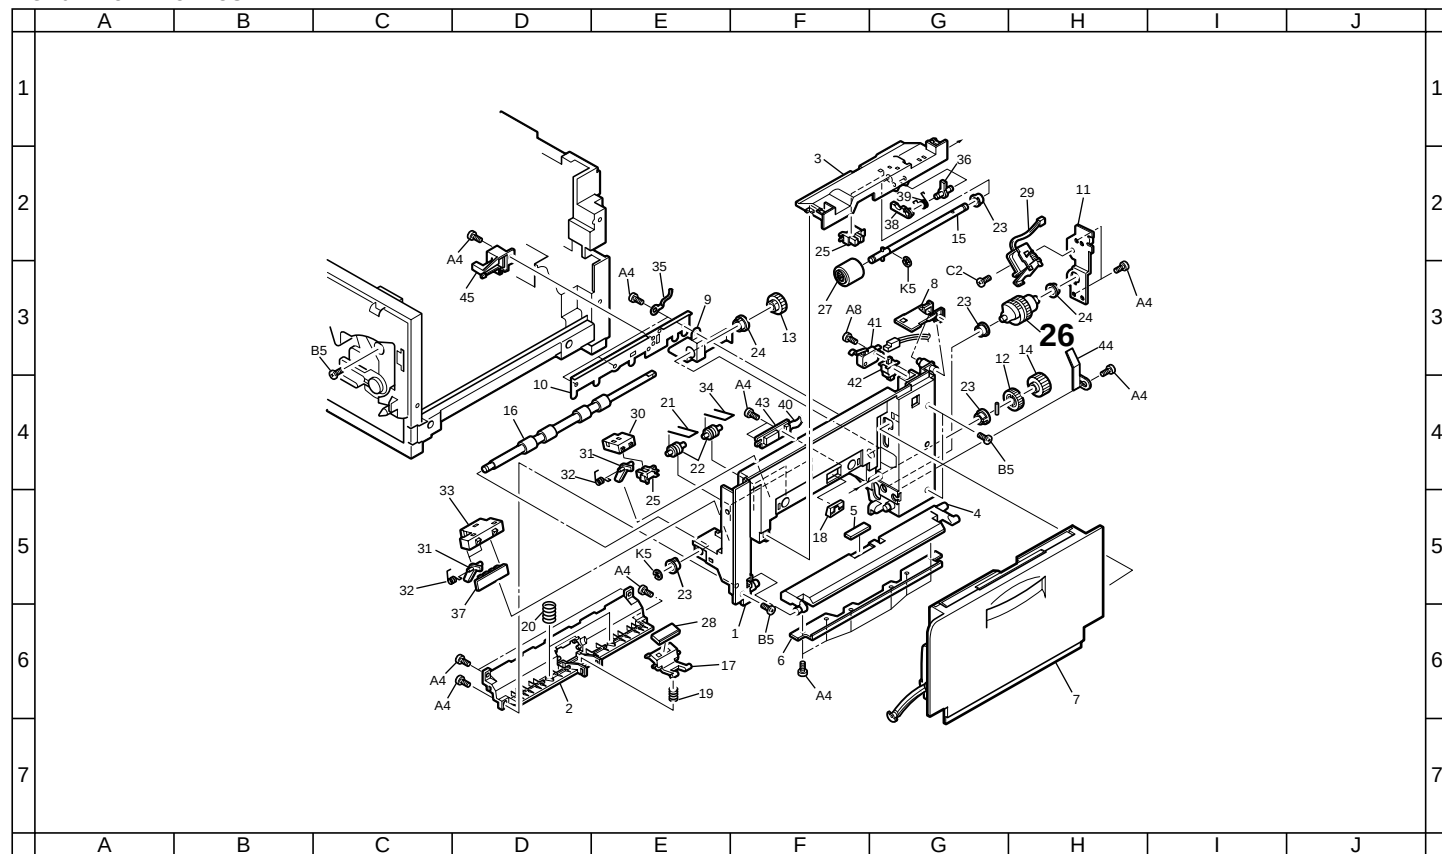


FIG. 9 MULTI-PURPOSE TRAY

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	1	5A212680	FRAME RIGHT	1
	2	5A212450	FRAME BOTTOM	1
	3	5A209990	HOLDER FEED	1
	4	5BT07450	PLATE BOTTOM	1
	5	5A211210	PAD FRICTION	1
	6	5A208360	SUPPORT BOTTOM	1
●	7	5A207660	TRAY MPF ASS'Y	1
	8	5A212150	LEVER INTER LOCK	1
	9	5A209540	PLATE EARTH MPF	1
	10	5A208330	PLATE EARTH EF	1
	11	5A208560	BKT CLUTCH	1
	12	5A210320	GEAR FEED Z22	1
	13	5A210340	GEAR MD Z26	1
	14	5A210310	GEAR Z22	1
	15	5A208740	SHAFT MPF	1
●	16	5A208780	ROLLER MPF MID	1
	17	5A212220	BKT SEPARATOR	1
	18	5A209760	CAP CONNECT EF	1
	19	5BT07390	SPRING SEPARATOR	1
	20	5BT07410	SPRING BOTTOM	2
	21	5A209330	SPRING PULLEY MD	2
	22	5A210950	PULLEY S	4
	23	5A210810	BUSH POM B	4
	24	5A210740	BUSH POM EW	2
●	25	5A207830	PT.SENSOR GP1A73AZ	2
	26	5A207570	CLUTCH ASS'Y	1
●	27	5A207650	ROLLER FEED ASS'Y	1
●	28	5A207360	SEPARATOR ASS'Y	1
●	29	5A208000	SOLENOID TDS-F12G-1	1
	30	5A209800	BKT SENSOR A	1
●	31	5A211940	ACTUATOR EF	3
	32	5A208990	SPRING ACT EF	3
	33	5A209840	BKT SENSOR B	1
	34	5A209340	SPRING PULLEY EF	2
	35	5A207100	CONN. CORD ASS'Y	1
●	36	5A211870	ACTUATOR MPF A	1
●	37	5A207500	P.W.BOARD ASS'Y(KP-576)	1
●	38	5A211790	ACTUATOR MPF B	1
	39	5A208980	SPRING ACT MPF	1
	40	5A207190	CONN. CORD ASS'Y	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

5BT-1

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	41	5A207880	MICRO SWITCH 01X02	1
●	42	5A207890	PUSH SWITCH 01 SN	1
●	43	5A207380	P.W.BOARD ASS'Y(KP-502)	1
	44	5A209500	STOPPER CAM	1
●	45	5A207780	SENSOR ETON ASS'Y	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "●" indicates the service parts.

FIG. 10 FACE-DOWN UNIT

5BT

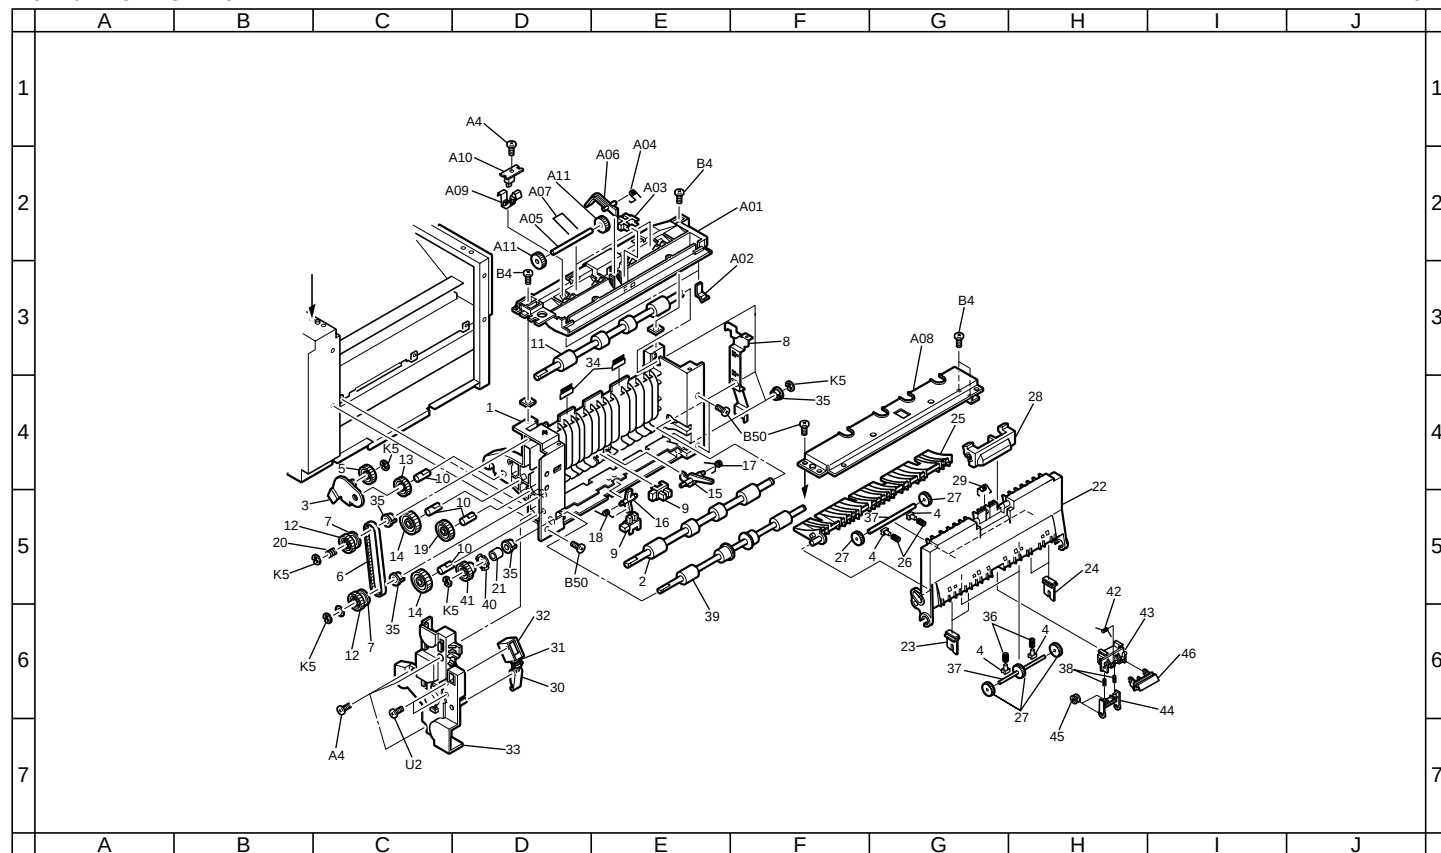


FIG. 10 FACE-DOWN UNIT

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
●	1	5A212670	FRAME FD	1
	2	5A208750	ROLLER EXIT A	1
	3	5A208550	PLATE JOINT FD	1
	4	5A210140	BUSH SP	8
	5	5A210440	GEAR FEED Z34	1
	6	5A210680	BELT FD	1
	7	5A210670	PULLEY P26	2
	8	5A209650	PLATE EARTH FD	1
●	9	5A207830	PT.SENSOR GP1A73AZ	2
	10	5A208630	PIN FD A	4
●	11	5A208760	ROLLER EXIT B	1
	12	5A210400	GEAR Z29S	2
	13	5A210480	GEAR IDLE Z33	1
	14	5A210430	GEAR IDLE Z40	2
●	15	5A212000	ACTUATOR FD	1
●	16	5A211850	ACTUATOR FU	1
	17	5A209040	SPRING FD	1
	18	5A208950	SPRING FU	1
	19	5A210450	GEAR Z38S	1
	20	5A209190	SPRING PRESS A	1
	21	5A210770	COLLAR	1
	22	5A212630	COVER FD	1
	23	5A211830	HOLDER FD R	2
	24	5A211840	HOLDER FD L	2
	25	5A212570	GUIDE CHANGE	1
	26	5A209090	SPRING EXIT	4
	27	5A210780	PULLEY EXIT	10
	28	5A212160	LATCH FD	1
	29	5A209130	SPRING LATCH	1
	30	5A211930	ACTUATOR SOL	1
	31	5A209170	SPRING SOL	1
	32	5BS07200	SOLENOID	1
	33	5BT07590	COVER SIDE	1
	34	5A211240	DISCHARGER FD	2
	35	5A208380	BUSH DRUM	6
	36	5A209100	SPRING EXIT A	4
	37	5A208720	SHAFT EXIT	4
	38	5A208940	SPRING PULLEY	2
●	39	5A208770	ROLLER EXIT C	1
	40	5A209480	WASHER WAVE	1

5BT-2

SP	Ref. No.	Part. No.	Description	Quantity USA(120V)
	41	5A210410	GEAR Z29S A	1
	42	5A209390	SPRING STOCKER	1
	43	5A211950	BASE STOCKER	1
	44	5A211880	HOLDER PULLEY	1
	45	5A211740	PULLEY STOCKER	2
	46	5A211900	STOCKER	1
	A01	5BT07600	GUIDE FD	1
	A02	5A211890	SNAP	2
●	A03	5A207830	PT.SENSOR GP1A73AZ	1
●	A04	5A209270	SPRING FULL	1
	A05	5A208720	SHAFT EXIT	2
●	A06	5A212060	ACTUATOR FULL	1
	A07	5A209400	SPRING FD EXIT	2
	A08	5A208620	PLATE FD	1
	A09	5A209640	PLATE SWITCH	1
●	A10	5A207520	P.W.BOARD ASS'Y(KP-552)	1
	A11	5A210780	PULLEY EXIT	4

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
 • Parts with "●" indicates the service parts.

• Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
 • Parts with "●" indicates the service parts.

INDEX

5BT-2

SP	Part. No.	Description	Quantity	Fig. No.
	5A207080	CONN. CORD ASS'Y	1	4
	5A207100	CONN. CORD ASS'Y	1	9
	5A207160	CONN. CORD ASS'Y	1	4
	5A207170	CONN. CORD ASS'Y	1	2
	5A207180	CONN. CORD ASS'Y	1	2
	5A207190	CONN. CORD ASS'Y	1	9
	5A207200	CONN. CORD ASS'Y	1	2
	5A207210	CONN. CORD ASS'Y	1	2
	5A207220	CONN. CORD ASS'Y	1	2
	5A207230	CONN. CORD ASS'Y	1	2
	5A207250	CONN. CORD ASS'Y	1	2
	5A207260	CONN. CORD ASS'Y	1	2
	5A207270	CONN. CORD ASS'Y	1	2
	5A207300	CONN. CORD ASS'Y	1	2
●	5A207360	SEPARATOR ASS'Y	1	9
●	5A207380	P.W.BOARD ASS'Y(KP-502)	1	9
●	5A207410	P.W.BOARD ASS'Y(KP-558)	1	2
●	5A207420	P.W.BOARD ASS'Y(KP-560)	1	2
	5A207490	P.W.BOARD ASS'Y(KP-574)	1	2
●	5A207500	P.W.BOARD ASS'Y(KP-576)	1	9
●	5A207520	P.W.BOARD ASS'Y(KP-552)	1	10
●	5A207530	P.W.BOARD ASS'Y(KP-552)	1	2
	5A207550	BKT RIGHT ASS'Y	1	1
	5A207560	BRUSH CLEAN ASS'Y	1	5
●	5A207650	ROLLER FEED ASS'Y	1	9
●	5A207660	TRAY MPF ASS'Y	1	9
	5A207690	HIGH-MEG. R. ASS'Y	1	2
	5A207760	TOWER SENSOR ASS'Y	1	2
●	5A207780	SENSOR ETON ASS'Y	1	9
	5A207800	HINGE FRONT R ASS'Y	2	1
●	5A207830	PT SENSOR GP1A73AZ	6	2,9,10
	5A207870	SEE-SAW SW. CSAVDEBS	1	4
●	5A207880	MICRO SWITCH 01X02	1	9
●	5A207890	PUSH SWITCH 01 SN	1	9
●	5A207910	CLUTCH FEED	1	3
●	5A208000	SOLENOID TDS-F12G-1	1	9
	5A208120	SHIELD CASE	1	4
	5A208140	RAIL DLP	1	2
	5A208160	PLATE BASE LID	1	2
	5A208180	PLATE CON C	1	4

SP	Part. No.	Description	Quantity	Fig. No.
	5A208190	PLATE FRAME SIDE	2	2
	5A208210	RAIL CASE	1	5
	5A208220	PLATE FRAME	2	2
	5A208240	BASE STAY L	1	2
	5A208250	BASE STAY R	1	2
	5A208310	PLATE FG DRIVE	2	2
	5A208330	PLATE EARTH EF	1	9
●	5A208350	COVER MAIN	1	1
	5A208360	SUPPORT BOTTOM	1	9
	5A208380	BUSH DRUM	8	5,10
	5A208400	COLLAR SPACER	3	5
	5A208410	COLLAR SPACER	2	2
	5A208420	ROLLER DU	2	2
	5A208440	BUSH DRUM JOINT	2	3
	5A208450	METAL BUSH REGIST	2	5
	5A208460	PIN HV CONTACT	3	2
	5A208470	COLLAR SPACER	2	2
	5A208480	PLATE BIAS	1	2
	5A208490	SHEET EARTH TC	1	5
	5A208510	PLATE MAGNET CATCH	2	1
	5A208530	PLATE OPTION	2	4
	5A208550	PLATE JOINT FD	1	10
	5A208560	BKT CLUTCH	1	9
	5A208570	PLATE COVER GEAR	1	3
	5A208580	BRUSH DC CHARGE	1	5
	5A208620	PLATE FD	1	10
	5A208630	PIN F D A	4	10
	5A208660	JOINT DRUM	1	3
	5A208690	SHAFT CLUTCH F	1	3
	5A208720	SHAFT EXIT	6	10
	5A208730	SHAFT PULLEY	2	5
	5A208740	SHAFT MPF	1	9
●	5A208750	ROLLER EXIT A	1	10
●	5A208760	ROLLER EXIT B	1	10
●	5A208770	ROLLER EXIT C	1	10
●	5A208780	ROLLER MPF MID	1	9
●	5A208810	ROLLER REGI ST UP	1	5
●	5A208820	ROLLER REGIST LOW	1	5
●	5A208850	ROLLER TRANSFER	1	5
	5A208900	PLATE PAPER GUIDE	1	5

SP	Part. No.	Description	Quantity	Fig. No.
●	5A208910	RAIL BOTTOM L	1	2
	5A208920	RAIL BOTTOM R	1	2
	5A208940	SPRING PULLEY	2	10
	5A208950	SPRING FU	1	10
	5A208980	SPRING ACT MPF	1	9
	5A208990	SPRING ACT EF	3	9
	5A209000	SPRING ACTUATOR RE	1	5
	5A209010	SPRING EARTH DD	1	3
	5A209020	SPRING RELEASE C	1	5
	5A209040	SPRING FD	1	10
	5A209050	SP INTERRUPT SENSOR	1	2
	5A209080	SPRING JOINT	1	2
	5A209090	SPRING EXIT	4	10
	5A209100	SPRING EXIT A	4	10
	5A209110	SPRING BUSH	1	5
	5A209130	SPRING LATCH	1	10
	5A209140	SPRING MIDDLE	2	5
	5A209150	SPRING JOINT UNIT	2	3
	5A209170	SPRING SOL	1	10
	5A209190	SPRING PRESS A	1	10
	5A209200	SPRING HV CONTACT	3	2
	5A209240	SPRING TC ROLL	1	5
	5A209270	SPRING FULL	1	10
	5A209280	SPRING RELEASE B	1	5
	5A209290	SPRING CONTA	2	1
	5A209330	SPRING PULLEY MD	2	9
	5A209340	SPRING PULLEY EF	2	9
	5A209380	SPRING MAIN A	1	2
	5A209390	SPRING STOCKER	1	10
	5A209400	SPRING FD EXIT	2	10
	5A209410	SPRING RAIL L	1	2
	5A209430	PLATE CONTACT TC	1	5
	5A209440	CORD KEEP	2	1
	5A209480	WASHER WAVE	1	10
	5A209500	STOPPER CAM	1	9
	5A209540	PLATE EARTH MPF	1	9
	5A209580	PLATE EARTH FRONT	1	2
	5A209590	PLATE REGIST	1	5
	5A209620	PLATE TC	1	5
	5A209630	PLATE DISCHARGER	1	5

SP	Part. No.	Description	Quantity	Fig. No.
●	5A209640	PLATE SWITCH	1	10
	5A209650	PLATE EARTH FD	1	10
	5A209670	PLATE D-CONTAINER	1	3
	5A209680	PLATE DRIVE CLUTCH	1	3
	5A209690	PLATE TRAY F	1	1
	5A209700	PLATE TRAY R	1	1
	5A209720	RAIL MIDDLE	1	2
	5A209750	PUSH CONTAIN	2	1
	5A209760	CAP CONNECT EF	1	9
	5A209790	COVER PWB CONT	1	2
	5A209800	BKT SENSOR A	1	9
	5A209810	BKT TRAY FB	1	1
	5A209820	BKT TRAY RB	1	1
	5A209830	COVER CONTACT	1	2
	5A209840	BKT SENSOR B	1	9
	5A209850	STOPPER PAPER	1	1
	5A209880	BKT TRAY FA	1	1
	5A209890	BKT TRAY RA	1	1
	5A209940	COVER STOPPER	1	1
	5A209990	HOLDER FEED	1	9
	5A210000	GUIDE TC OEM	1	5
	5A210080	COVER RIGHT	1	1
	5A210110	EDGING SADDLE	2	4
	5A210120	EDGING SADDLE	1	4
	5A210140	BUSH SP	8	10
	5A210160	COVER PULLEY	1	3
	5A210170	ARM LEVER DLP	1	2
	5A210270	GEAR M FEED Z25	1	6
	5A210290	GEAR REGIST Z24	1	5
	5A210310	GEAR Z22	1	9
	5A210320	GEAR FEED Z22	1	9
	5A210330	GEAR TC Z26	1	5
	5A210340	GEAR MD Z26	1	9
	5A210350	GEAR JOINT Z28S	1	3
	5A210360	GEAR JOINT Z26S	1	3
	5A210370	GEAR Z24S	1	3
	5A210380	GEAR Z30S-Z20S	1	3
	5A210390	GEAR Z29	1	6
	5A210400	GEAR Z29S	2	10
	5A210410	GEAR Z29SA	1	10

SP	Part. No.	Description	Quantity	Fig. No.
	5A210420	GEAR JOINT Z32	1	5
	5A210430	GEAR IDLE Z40	2	10
	5A210440	GEAR FEED Z34	1	10
	5A210450	GEAR Z38S	1	10
	5A210480	GEAR IDLE Z33	1	10
	5A210490	GEAR JOINT Z31S	1	3
	5A210500	GEAR CLUTCH Z32S	2	3
	5A210510	GEAR JOINT Z36	1	6
	5A210520	GEAR FUSER Z33	1	6
	5A210540	GEAR Z41H	1	3
	5A210550	GEAR Z45S A	1	3
	5A210560	GEAR Z45S B	3	3
	5A210570	GEAR Z45S-Z22S	1	3
	5A210580	GEAR Z30S-Z43S-Z17S	1	3
	5A210590	GEAR Z50S-Z24S	1	3
	5A210600	GEAR Z72H-Z27H	1	3
	5A210620	GEAR Z55H-Z27S	1	3
	5A210640	GEAR Z56H-Z37S	1	3
	5A210650	GEAR Z53S-Z23S	1	3
	5A210660	GEAR Z55	1	6
	5A210670	PULLEY P26	2	10
	5A210680	BELT FD	1	10
	5A210710	RAIL DLP F	1	2
	5A210730	TRAY RAIL	1	2
	5A210740	BUSH POM EW	2	9
	5A210770	COLLAR	1	10
	5A210780	PULLEY EXIT	14	10
	5A210790	BUSHING STOP	2	3
	5A210810	BUSH POM B	4	9
	5A210830	PULLEY RAIL B	1	2
	5A210840	PULLEY RAIL D	2	2
	5A210860	FOOT	4	2
	5A210880	PULLEY RAIL C	3	5
	5A210900	BUSH C	1	5
●	5A210920	PULLEY MIDDLE	4	5
	5A210930	BUSH B	1	5
●	5A210940	LATCH JOINT	1	5
	5A210950	PULLEY S	4	9
	5A211000	SPONGE MAIN	1	2
●	5A211010	RUBBER FRONT	3	1

SP	Part. No.	Description	Quantity	Fig. No.
	5A211050	PAD FUSER	2	2
	5A211080	PAD CUSHION	2	5
	5A211180	SHEET CONT C	1	4
	5A211210	PAD FRICTION	1	9
	5A211240	DISCHARGER FD	2	10
	5A211250	SHEET CONT D	1	4
	5A211270	SHEET GUIDE PAPER A	2	5
	5A211290	SHEET GUIDE PAPER B	2	5
	5A211340	SHEET FAN A	1	2
	5A211400	SHEET CONT B	1	4
	5A211510	SHEET REGIST	1	5
	5A211570	GUIDE PAPER B	1	5
	5A211650	LABEL RELEASE B	1	5
	5A211710	LABEL DIAGRAM C	1	1
	5A211740	PULLEY STOCKER	2	10
	5A211770	HOLDER RAIL B	1	2
●	5A211790	ACTUATOR MPF B	1	9
	5A211810	LATCH RAIL	1	5
	5A211820	LOCKING WIRE SADDLE	1	4
	5A211830	HOLDER FD R	2	10
	5A211840	HOLDER FD L	2	10
●	5A211850	ACTUATOR FU	1	10
●	5A211870	ACTUATOR MPF A	1	9
	5A211880	HOLDER PULLEY	1	10
	5A211890	SNAP	2	10
	5A211900	STOCKER	1	10
	5A211910	HOLDER RELEASE	1	5
	5A211920	LOCK LID TOP F	1	1
	5A211930	ACTUATOR SOL	1	10
●	5A211940	ACTUATOR EF	3	9
	5A211950	BASE STOCKER	1	10
	5A211980	BRACKET PULLEY B	1	2
	5A211990	JOINT DLP	1	3
●	5A212000	ACTUATOR FD	1	10
	5A212020	HINGE FU F	1	1
	5A212030	HINGE FU R	1	1
●	5A212060	ACTUATOR FULL	1	10
	5A212110	INTERRUPT SENSOR	1	2
	5A212120	PLATE LOCK A	1	5
	5A212130	LOCK COVER	1	1

SP	Part. No.	Description	Quantity	Fig. No.	SP	Part. No.	Description	Quantity	Fig. No.
	5A212150	LEVER INTER LOCK	1	9	●	5BS07030	SLIDER FU	2	1
	5A212160	LATCH FD	1	10		5BS07040	CORD PRESS	1	2
	5A212190	ACTUATOR JOINT	1	2		5BS07050	RAIL BASE L	1	2
	5A212200	LOCK LID TOP R	1	1	●	5BS07110	ROLLER MIDDLE	1	5
	5A212220	BKT SEPARATOR	1	9	●	5BS07130	THERMOSTAT 240V190#C	1	6
	5A212240	PLATE TOWER	1	1		5BS07160	CLUTCH ASS'Y	1	9
	5A212270	LINK FU F	1	1		5BS07200	SOLENOID	1	10
	5A212280	LINK FU R	1	1		5BT07020	CONN. CORD ASS'Y	1	1
	5A212290	HOLDER RAIL A	1	5		5BT07050	CONN. CORD ASS'Y	1	2
	5A212310	ACTUATOR REGIST	1	5		5BT07070	SWITCHING REGULATOR	1	4
	5A212330	HANDLE CASE	1	5	●	5BT07090	P.W.BOARD ASS'Y(KP-669)	1	4
●	5A212370	COVER PANEL L	1	1	●	5BT07100	P.W.BOARD ASS'Y(KP-673)	1	3
●	5A212380	COVER PANEL R	1	1	●	5BT07110	P.W.BOARD ASS'Y(KP-675)	1	4
●	5A212390	TRAY FU C	1	1	●	5BT07120	P.W.BOARD ASS'Y(KP-690)	1	4
	5A212420	GUIDE DLP REAR	1	2		5BT07140	COVER REAR ASS'Y	1	1
	5A212450	FRAME BOTTOM	1	9	●	5BT07150	LID TOP ASS'Y	1	1
	5A212470	HOLDER DC CHARGE	1	5		5BT07160	MAGNET CATCHER	2	2
	5A212480	RAIL BASE R	1	2	●	5BT07170	SEPARATOR ASS'Y	6	6
	5A212490	PLATE RELEASE	1	5	●	5BT07190	THERMISTOR ASS'Y	1	6
	5A212501	GUIDE CHUTE LOW	1	5		5BT07200	TRANS ASS'Y	1	2
	5A212520	COVER FRONT LOW L	1	2	●	5BT07210	COVER PANEL MT ASS'Y	1	1
	5A212530	COVER FRONT LOW R	1	2		5BT07220	WASTE TONER CONVEYER	1	2
	5A212550	LEVER TOP	1	1	●	5BT07230	KEY BOARD ASS'Y	1	1
	5A212560	GUIDE CHANGE DU	1	5		5BT07250	DRIVE B ASS'Y	1	3
	5A212570	GUIDE CHANGE	1	10	●	5BT07260	CLUTCH REGIST	1	3
●	5A212610	TRAY FU B	1	1	●	5BT07270	FAN MOTOR	2	4
	5A212620	CASE BELT GUIDE	1	2	●	5BT07280	HEATER LAMP C	1	6
	5A212630	COVER FD	1	10	●	5BT07290	HEATER LAMP S	1	6
	5A212660	GUIDE PAPER	1	5	●	5BT07300	SHEET OPE. MANUAL	1	1
	5A212670	FRAME FD	1	10		5BT07320	CONT BOX	1	4
●	5A212680	FRAME RIGHT	1	9	●	5BT07330	COVER REAR	1	1
●	5A212700	COVER LEFT	1	1		5BT07340	PLATE DRIVE F	1	3
	5A212710	FRAME REAR	1	2		5BT07350	RAIL CASE L	1	5
●	5A212720	COVER TOP	1	1		5BT07360	PLATE DRIVE M	1	3
	5A212840	TRAY FU ASS'Y	1	1		5BT07370	SPRING REGIST F	1	5
	5A212850	PLATE RELEASE ASS'Y	1	5		5BT07380	SPRING REGIST R	1	5
●	5A212880	FAN MOTOR	1	2		5BT07390	SPRING SEPARATOR	1	9
●	5A212900	TRAY FU A	1	1		5BT07400	SPRING LEVER DRUM	1	2
	5A212920	PLATE LOCK B	1	5		5BT07410	SPRING BOTTOM	2	9
	5A212930	SPRING RELEASE A	1	5		5BT07420	PLATE DRIVE REAR	1	3

SP	Part. No.	Description	Quantity	Fig. No.
●	5BT07430	RAIL OPTION L	2	4
	5BT07440	RAIL OPTION R	2	4
	5BT07450	PLATE BOTTOM	1	9
	5BT07460	COVER FRONT	1	1
	5BT07470	HOLDER CLUTCH	1	3
	5BT07480	GEAR Z76-35-23H	1	3
	5BT07490	GEAR Z90H	1	3
	5BT07510	LEVER DLP	1	2
	5BT07530	PLATE NAME RC	1	1
	5BT07540	SHEET CONT E	1	4
	5BT07550	DUCT DRUM	1	2
	5BT07560	LABEL DIAGRAM D	1	1
	5BT07570	BUSH TRANSFER B	2	5
	5BT07580	DUCT DLP UP	1	2
	5BT07590	COVER SIDE	1	10
	5BT07600	GUIDE FD	1	10
	5BT07610	DUCT DLP LOW	1	2
	5BT07620	CASE LOW	1	5
	5BT07630	DV-35 DEVELOPER UNIT	1	8
	5BT07640	FE-35 FEED UNIT	1	5
	5BT07650	TR-30 TRANSFER UNIT	1	5
	5BT07660	DK-35 DRUM UNIT	1	7
	5BT07670	FK-35 U FUSER UNIT	1	6
	5BT07680	DR-35A DRIVE A ASS'Y	1	3
	5BT07690	LK-35 SCANNER UNIT	1	2
	5BT07700	DRIVE C ASS'Y	1	3
	5BT07710	CONN. CORD ASS'Y	1	2
	5BT07720	LEVER LOCK FEED	1	2
	5BT07730	LABEL FRAME FRONT	1	2
	5BT07740	GEAR Z33S-P29	1	3
	5BT07750	BELT DRIVE TOWER	1	3
	5BT07760	GEAR Z36-P37	1	3
	5BT07770	SEAL SENSOR	1	3
	5BT07780	SHAFT CLUTCH R	1	3
	5BT07790	SPRING JOINT	1	3
	5BT07800	GEAR Z37H-Z22H ASS'Y	1	3
	5BT07810	GEAR Z65H	1	3
	5BT07820	CONN. CORD ASS'Y	1	4
	5BT07830	MINI SLIDE CLAMP	4	4
	5BT07840	SARCON GR	2	4

SP	Part. No.	Description	Quantity	Fig. No.
●	5BT07850	GUIDE CHUTE UP	1	5
	5BT07860	PLATE EARTH FEED	1	5
	5BT07870	SHEET GUIDE CHUTE	1	5
	5BT07880	SHEET LOW	1	5

CLASSIFICATION OF THE SCREWS IN ILLUSTRATION

<u>REF.</u>	<u>ITEM #</u>	<u>DESCRIPTION</u>	<u>REF.</u>	<u>ITEM #</u>	<u>DESCRIPTION</u>
A4	B3003080	TAPPING SCREW M3X8 (B TYP)	K5	D1000500	STOP RING (E-5)
A5	B3023100	BINDING TAP TIGHT SCREW M3X10	K7	D1000700	STOP RING (E-7)
A8	B8313160	BINDING TAP-TITE SCREW M3X16	KA	D1001000	STOP RING (E-10)
A40	B3023080	BINDING TAP TIGHT SCREW M3X8	N71	C2890140	SHIM 6.2X14X0.13T
AC	B8313300	M3X30 +BIND TAPTITE P	N81	C2895110	SHIM 8.2-0.13T
B4	B3024080	BINDING TAP-TIGHT SCREW M4X8	NC4	C2891160	SHIM 12.2X16X0.13T
B5	B3024100	BINDING TAP-TIGHT SCREW M4X10	U2	B0603050	ROUND HEAD SCREW M3X5(BRASS,NI)
B6	B8314120	BINDING TAP-TITE P BRONZE SCREW M4X12			
B10	B1604040	BIND SCREW M4X4 (BRASS,NI)			
B19	B1244040	BINDING SCREW WITH LOCK M4X4			
B50	B1604100	BINDING SCREW M4X10,BRASS,NI			
B59	B1004100	BINDING SCREW CVM4X10			
B63	B1104120	BINDING SCREW VM4X12 (CR)			
B66	B1004120	BINDING SCREW CVM4X12			
C2	B3023050	BINDING TAP-TIGHT SCREW M3X5			
C3	B3023060	BINDING TAP TIGHT SCREW M3X6			
C4	B3053080	TAPPING SCREW M3X8 (A TYP)			
CB	B1003250	BINDING SCREW CVM3X25			
D4	B3314080	BINDING TAP-TITE P SCREW M4X08			
D5	B3054100	TAPPING SCREW M4X10 (A TYP)			
D40	B4104040	TRIPLE SCREW M4X04 (CHROMIUM)			
D50	B3064100	TAPPING SCREW M4X10 (B TYP)			
D80	B4304160	TRIPLE SCREW M4X16 (BLACK)			
E40	B4043080	TRIPLE TAP-TITE P SCREW M3X08			
E41	B8013080	BINDING TAP-TIGHT SCREW M3X08			
I3	B3003060	TAPPING SCREW M3X6 (B TYPE)			
I4	B1303080	BINDING SCREW BVM3X8 (BLACK)			
J3	B4304060	TRIPLE SCREW M4X6 (BLACK)			
K4	D1000400	STOP RING (E-4)			

MITA COPYSTAR AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

149 West 51st street,
New York, NY 10019
TEL : (212) 554-2679
FAX : (212) 554-2625

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

225 Spring Lake Drive,
Itasca, Illinois 60143
TEL : (630) 250-7447
FAX : (630) 250-8787

Western Region:

14101 Alton Parkway,
P.O.Box 57006,Irvine,
California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

MITA COPYSTAR CANADA, LTD.

6120 Kestrel Road,
Mississauga, Ontario L5T 1S8
TEL : (905) 670-4425
FAX : (905) 670-8116

MITA COPYSTER SOUTH AMERICA S.A.

Av. Mitre 1345 Florida (1602)
Pcia, Buenos Aires,Argentina
TEL : (54) 11-4730-1070
FAX : (54) 11-4760-2071

MITA COPYSTAR MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
Delegación Azcapotzalco
México, D.F. C.P. 02130
TEL : 3-83-27-41
FAX : 3-83-78-04

© 1999 MITA INDUSTRIAL CO., LTD.

MITA and *mita* are registered trademarks of MITA INDUSTRIAL CO., LTD.

Printed in U.S.A.