


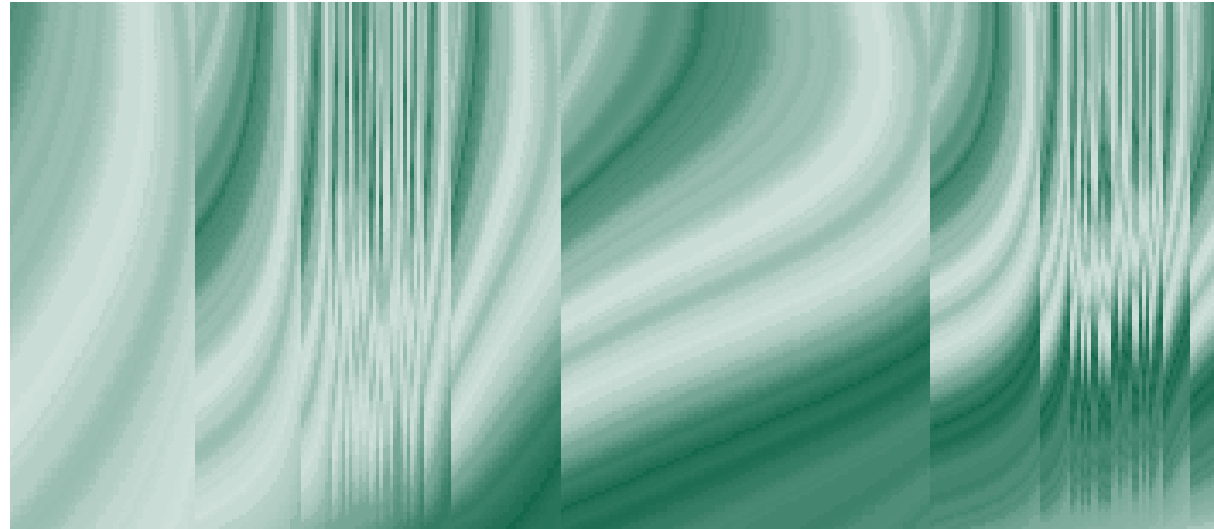

Parts Catalog M O D E L S F S - 1 7 0 0 / F S - 3 7 0 0
W I T H P L U S S E R I E S
Version 1.2/June 98



Contents

Screws/hardware	3
1 - Covers	5
2 - Frame unit	8
3- Drive unit	11
4 - Controller unit	14
5 - Feed unit	18
6 - Fuser unit	21
7 - Cassette	24
8 - Drum unit	26
9 - Scanner unit	29
10 - Developer unit	31
11 - Multi feed unit	35

Screws/hardware

The printer uses the following screws, washers, etc. The symbol numbers for these screws are referred to in the disassembling instructions in the following pages.




Caution - To secure a self-tapping screws, align it with the thread carefully. First turn it counterclockwise, then slowly clockwise. Do not overtighten. In case the selftapped thread is damaged, the affected part must be replaced with a new part.

Appearance	Description	Size (millimeters)	Part #	Symbol #
	Bind-head (machine)	M3×4	5MBSPB3004NZ	E1
		M3×6	5MBSPB3006NZ	E2
		M3×8	5MBSPB3008NZ	E3
	Bind-head S-tite (machine)	M3×6	5MBTPB3006TZ	C1
		M3×8	5MBTPB4008TZ	C2
		M3×10	5MBTPB3010TZ	C3
		M3×14	5MBTPB3014TZ	C4
		M4×6 - Plated	5MBTPB4006TN	D10
	Bind-head B-tite (self-tapper)	M3×8	5MBTPB3008WZ	A1
		M3×10	5MBTPB3010WZ	A2
		M4×6	5MBTPB4006WZ	B1
		M4×8	5MBTPB4008WZ	B2
		M4×10	5MBTPB4010WZ	B3
		M4×8 - Plated	5MBTPB4008WN	B20
	TP B-tite (self-tapper)	M4×10 - Plated	5MBTPB4010WZ	B30
	TP S-tite (self-tapper)	M3×30	5MBTP43030TZ	G

	TP tap (self-tapper)	M4	5MBTPS3012WZ 5MMT273SZ004	H N
	E stop ring	E5/E3/E4	E5: 5MBCE5060XSW E3: 5MBCE3060XSW E4: 5MBCE4060XSW	I S U
	C stop ring	C3/C2	C2: 5MBNPXX20NSB	J/T
	Lock washer	M4		K
	Spring pin	φ2.5×16	5MBP2516WXSP	L
	Flat T.T. screw	M3×12	5MBTPS3012WZ	M
	Nut washer	M3	5MMT273SZ004	O
	Screw stud B	M3	5MMT143SZ012	P
	Screw stud A	M3	5MMT143SZ011	Q
	Pan head screw	M3×4	5MBSPP3004NZ	R
	Poly slider	-	5MBWK62955NN 5MBWK41653NN	V W
	TP T.T. screw (+)	M3×5	5MBTP43005WZ	X


1 - Covers

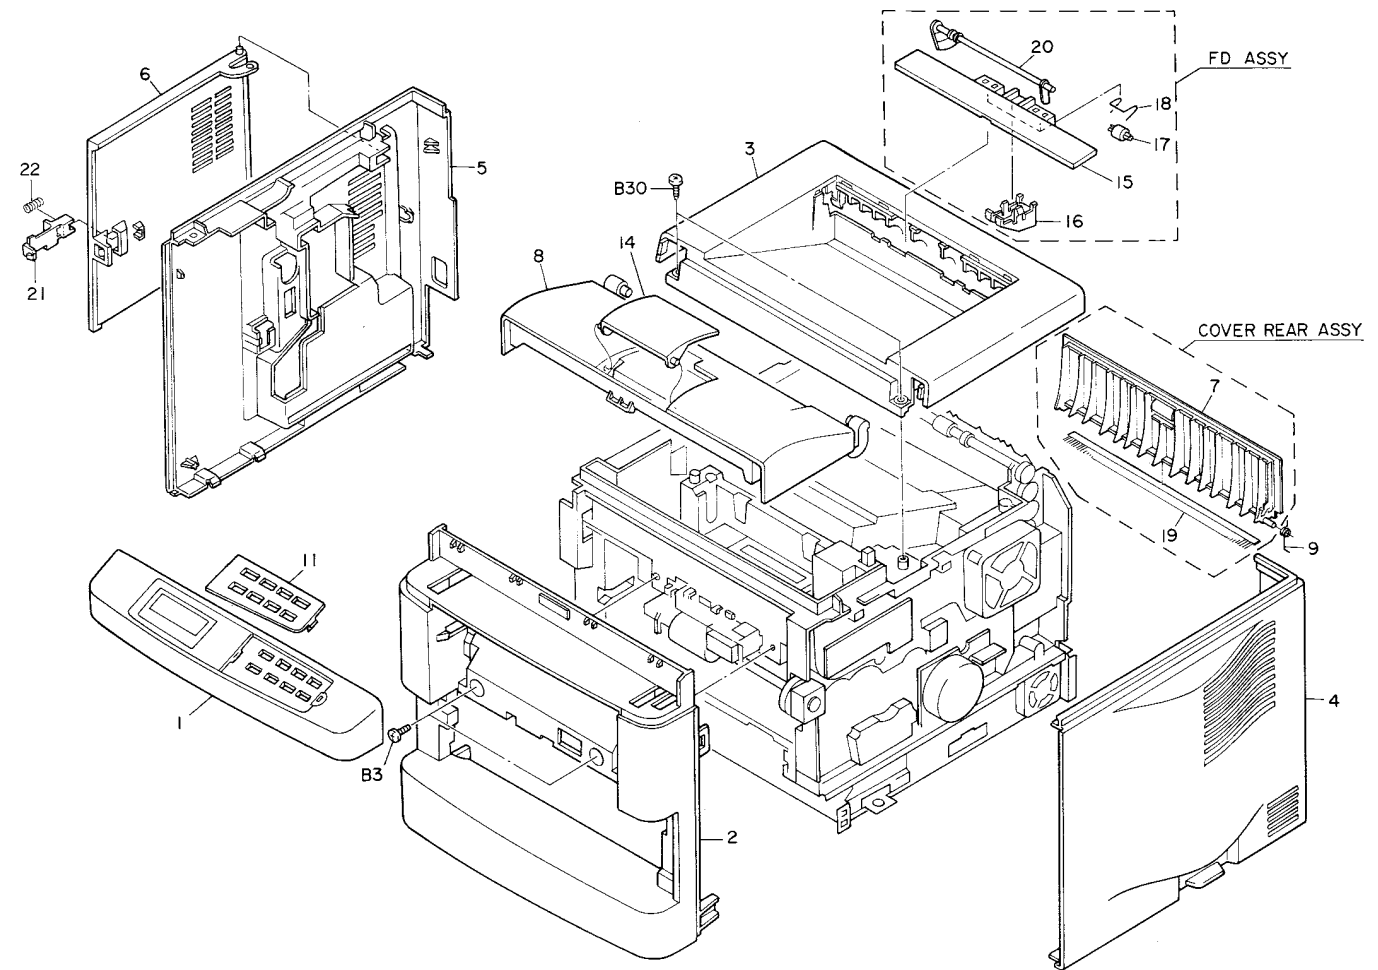

Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
Assembly	5AAY1700E*48	←	←	←	COVER REAR ASSY
	5AAY1700E*36	←	5AAY3700E*19	←	FD ASSY
1-1 e	5AAY1700E*35	5AAY17+E**02	5AAY3700E*18	5AAY370+E*02	KEYBOARD ASSY
1-1 u	5AAY1700U*08	5AAY17+U**02	5AAY3700U*08	5AAY370+U*02	KEYBOARD ASSY
1-2	5MVB886CH002	←	←	←	COVER FRONT A
1-3	5MVB886CH001	←	←	←	COVER TOP
1-4	5MVB886CH003	←	←	←	COVER RIGHT
1-5	5MVB886CH004	←	←	←	COVER LEFT
1-6	5MVB883CH001	←	←	←	COVER SIDE
1-7	5AAY1700*048	←	←	←	COVER REAR ASSY
1-8	5MVB874CH001	←	←	←	LID TOP
1-9	5MMW611LD002	←	←	←	SPRING COVER
1-10 e	5MVVS1700E*1	5MVVM17+E**1	5MVVS3700E*1	5MVVS370+E*1	SER. NO. PLATE
1-10 u	5MVVS1700U*1	5MVVM17+U**1	5MVVS3700U*1	5MVVS370+U*1	SER. NO. PLATE
1-11	5MVS651CH001	←	5MVS651CH001	←	PANEL ENGLISH
	5MVS651CH002	←	5MVS651CH002	←	PANEL GERMAN
	5MVS651CH003	←	5MVS651CH003	←	PANEL FRENCH
	5MVS651CH004	←	5MVS651CH004	←	PANEL SPANISH
	5MVS651CH005	←	5MVS651CH005	←	PANEL ITALIAN
	5MVS651CH006	←	5MVS651CH006	←	PANEL DANISH
	5MVS651CH015	←	5MVS651CH015	←	PANEL GERMAN/COLOR
1-12					
1-13					
1-14	5MVB662CH001	←	←	←	STOPPER FD
1-15	5MVX852CH001	←	←	←	FRAME FD
1-16	5MVX332DB010	←	←	←	GUIDE STOCK
1-17	5MVM273DB003	←	←	←	ROLLER PINCH
1-18	5MMW251LD025	←	←	←	SPRING PULLEY
1-19	5MVS711AQ001	←	←	←	DISCHARGER FD
1-20	Not used	Not used	5MVX743CB002	←	ACTUATOR FD

1-21	5MVX432CH001	←	←	←	LEVER SIDE
1-22	5MMW166LD008				SPRING LEVER


2 - Frame unit

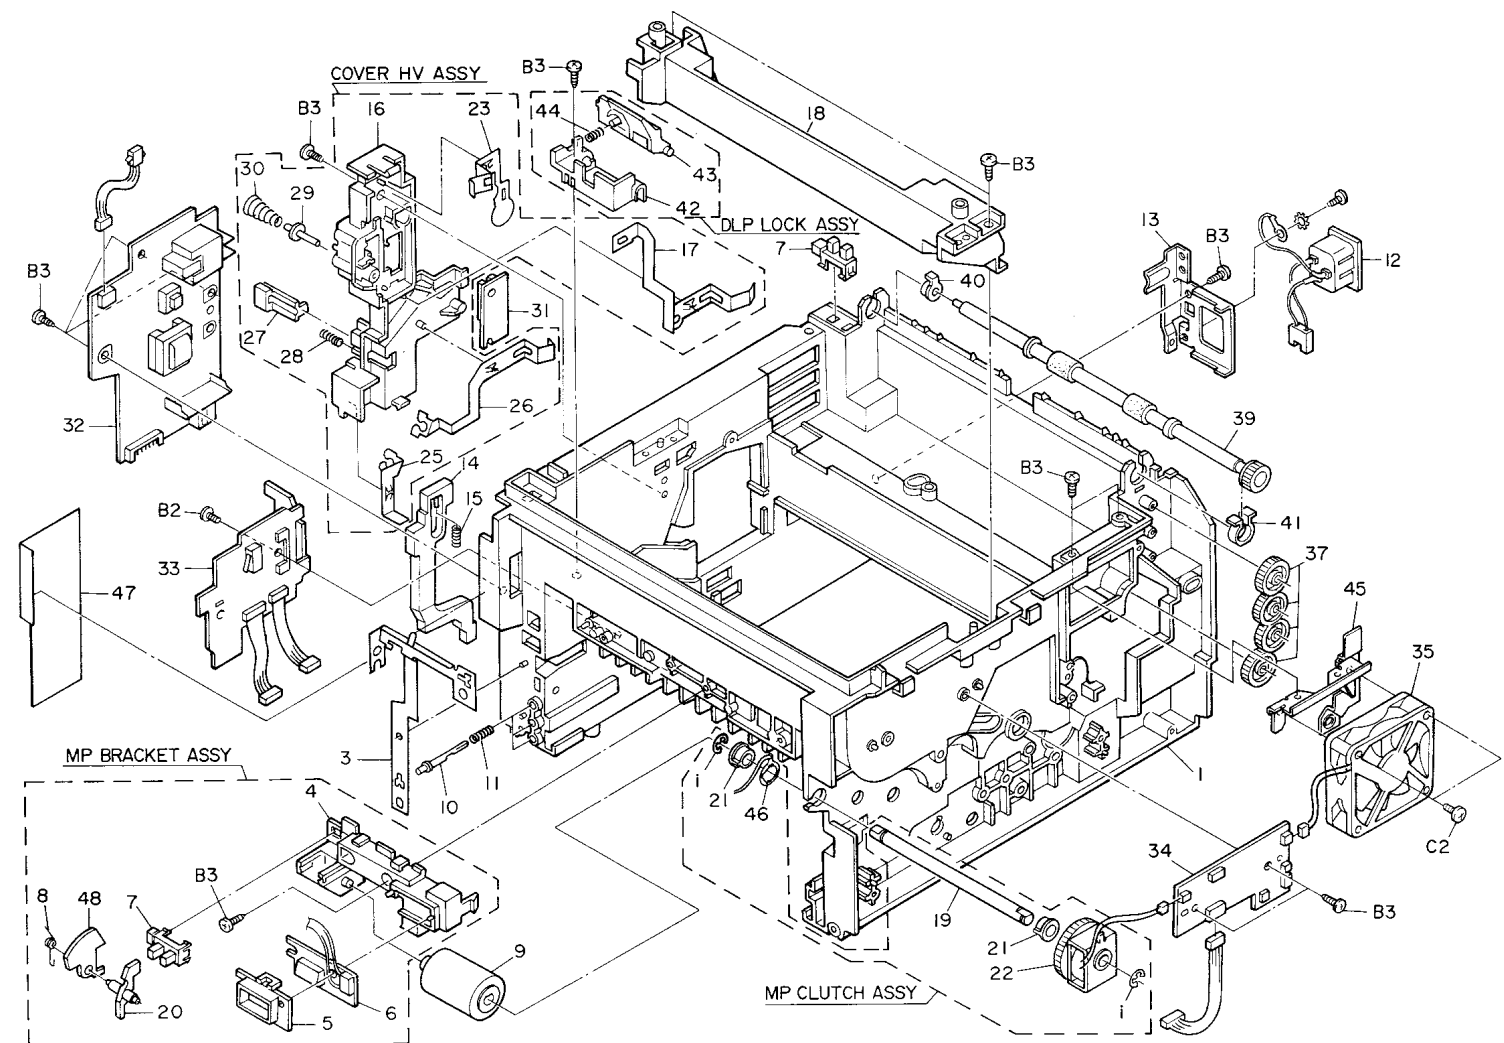

Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
	5AAY1700E*32	←	←	←	MP BRACKET ASSY
	5AAY1700E*33	←	←	←	COVER HV ASSY
	5AAY1700E*43	←	←	←	DLP LOCK ASSY
2-1	5MVB888CB001	←	←	←	FRAME BASE
2-2					
2-3	5MMX761SL002	←	←	←	PLATE EARTH EF
2-4	5MVX744SB002	←	←	←	BRACKET MANUAL
2-5	5MVB433SH005	←	←	←	BRACKET CONNECTOR
2-6	5AAPRIFC1009AH	←	←	←	P.W. BOARD ASSY, KP-502
2-7	Not used	Not used	5ENXGP1A73A**01	←	PT SENSOR GP1A73A
2-8	5MMW161LD025	←	←	←	SPRING ACTIVATOR
2-9	5AAVROLL*029	←	←	←	FEED ROLL ASSY
2-10	5MVT443DW001	←	←	←	PIN SIZE SELECT
2-11	5MMW241LD012	←	←	←	SPRING SIZE SELECT
2-12	5AACCNPR2GEA	←	←	←	CONN CORD S02013
2-13	5MMX644SL003	←	←	←	BRACKET INLET
2-14	5MVX742SB005	←	←	←	ROD INTERLOCK
2-15	5MMW451LD001	←	←	←	SPRING INTERLOCK
2-16	5MVX764SB005	←	←	←	COVER HV
2-17	5MMX665LD001	←	←	←	PLATE TC CONTACT
2-18	5MVB865CB005	←	←	←	FRAME MID
2-19	5MMT766SN004	←	←	←	SHAFT M/P
2-20	5MVX433SB005	←	←	←	ACTUATOR MANUAL
2-21	5MVM176DB012	←	←	←	BUSH POM B
2-22	5EYYAFAAM01**01	←	←	←	CLUTCH FEED
2-23	5MMX542LD001	←	←	←	PLATE MC CONTACT
2-24	5MML232LD003	←	←	←	PLATE LOCK DLP
2-25	5MMX322LD013	←	←	←	PLATE HI MEG A
2-26	5MMX654LD002	←	←	←	PLATE HI MED B
2-27	5MVX321SB016	←	←	←	LEVER BOTTLE

2-28	5MMW241LD014	←	←	←	SPRING LEVER BOTTLE
2-29	5MMM311SZ001	←	←	←	PIN HV CONTACT
2-30	5MMW311LD003	←	←	←	SPRING HV CONTACT
2-31	5AAPRIFC1011AH	←	←	←	P.W. BOARD ASSY, KP-505
2-32	5AAXTR036VDA	5AAXTR040VDA	5AAXTR035VDA	←	TRANS ASSY
2-33	5AAPRSSC1013AH	←	←	←	P.W.BOARD, KP-498
2-34	5AAPRIFC1010AH	←	←	←	P.W.BOARD, KP-504
2-35	5EZNF2402701*01	←	5EZNF2402502*01	←	FAN MOTOR
2-36	5AACCNPT9GEA	←	←	←	CONN. CORD, S02040
2-37	5MVG137DB025	←	←	←	GEAR IDLE Z25
2-38	5MVX653SB005	←	←	←	BRACKET FD GEAR
2-39	5MVT873DB001	←	←	←	ROLLER FD
2-40	5MVM162DN004	←	←	←	BUSH FD L
2-41	5MVM162DN005	←	←	←	BUSH FD R
2-42	5MVB532SB006	←	←	←	BRACKET LOCK
2-43	5MVX532DH002	←	←	←	LOCK DLP
2-44	5MMW261LJ035	←	←	←	SPRNG LOCK
2-45	5MMX763SL018	←	←	←	BRACKET FAN
2-46	5AAY1700E*47	←	←	←	PLATE EARTH ASSY
2-47	5MVS762KF007	←	←	←	SHEET HI VOLTAGE
2-48	5MVX443SB002	←	←	←	ACTUATIR M/P
2-49	5AACCNPQ1GEA	5AACCNQR5GEA	←	←	CONN CORD

3- Drive unit

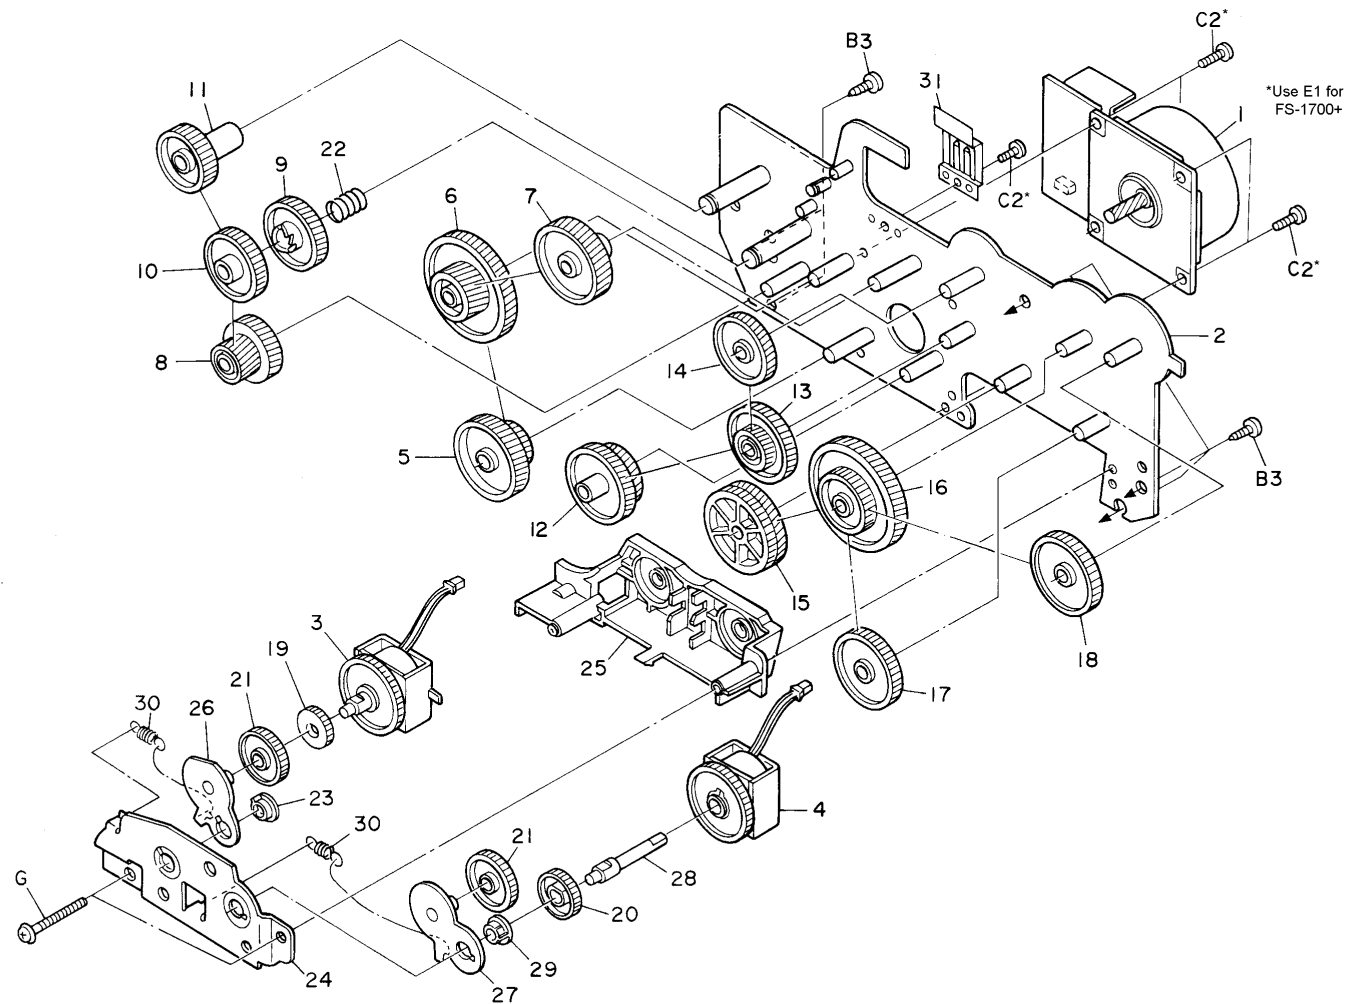


Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
3-1	5AAXMT023GEA	5AAXMT036GEA	5AAXMT024GEA	←	MOTOR MAIN
3-2	5MMX873SL006	←	5MMX873SL007	←	PLATE DRIVE
3-3	5EYYALAAK01**01	←	←	←	CLUTCH REGIST
3-4	5EYYAFAAM01**01	←	←	←	CLUTCH FEED
3-5	5MVG169DN013	←	←	←	GEAR Z21H-Z66H
3-6	5MVG169DN012	←	←	←	GEAR Z25H-Z53H
3-7	5MVG158DN012	←	←	←	GEAR Z42H
3-8	5MVG138DN023	←	←	←	GEAR Z20H-Z30H
3-9	5MVG148DN016	←	←	←	GEAR FREE Z34H
3-10	5MVG148DN017	←	←	←	GEAR FREE Z37S
3-11	5MVG148NN004	←	←	←	GEAR Z34S
3-12	5MVG169DN014	←	←	←	GEAR Z26H-Z63H
3-13	5MVG158DN013	←	←	←	GEAR Z23H-Z41H
3-14	5MVG148DN019	←	←	←	GEAR Z23H-Z41H
3-15	5MVG158DN014	←	←	←	GEAR Z43H-Z45S
3-16	5MVG169DN016	←	←	←	GEAR Z35H-Z57H
3-17	5MVG144DB004	←	5MVG138DN024	←	GEAR Z27S-Z28H
3-18	5MVG154DN002	←	←	←	GEAR Z44S
3-19	5MVG137DB024	←	←	←	GEAR CLUTCH Z22
3-20	5MVG138DN021	←	←	←	GEAR CLUTCH Z26S
3-21	5MVG138DN022	←	←	←	GEAR Z28S
3-22	5MMW361LD011	←	←	←	SPRING FREE
3-23	5MVM176DB008	←	5MMM176CJ005	←	BUSHING SBK
3-24	5MML754SL001	←	←	←	PLATE CLUTCH
3-25	5MVX633DN002	←	←	←	HOLDER CLUTCH
3-26	5MMX532SL010	←	←	←	PLATE JOINT R
3-27	5MMX532SL011	←	←	←	PLATE JOINT F
3-28	5MMT565XB001	←	←	←	SHAFT CLUTCH F
3-29	5MVM176DB008	←	←	←	BUSHING STOP


3-30	5MMW261LD006	←	←	←	SPRING JOINT
3-31	5MMX431LD004	←	←	←	PLATE EARTH DRIVE

4 - Controller unit

Models FS-1700/FS-3700

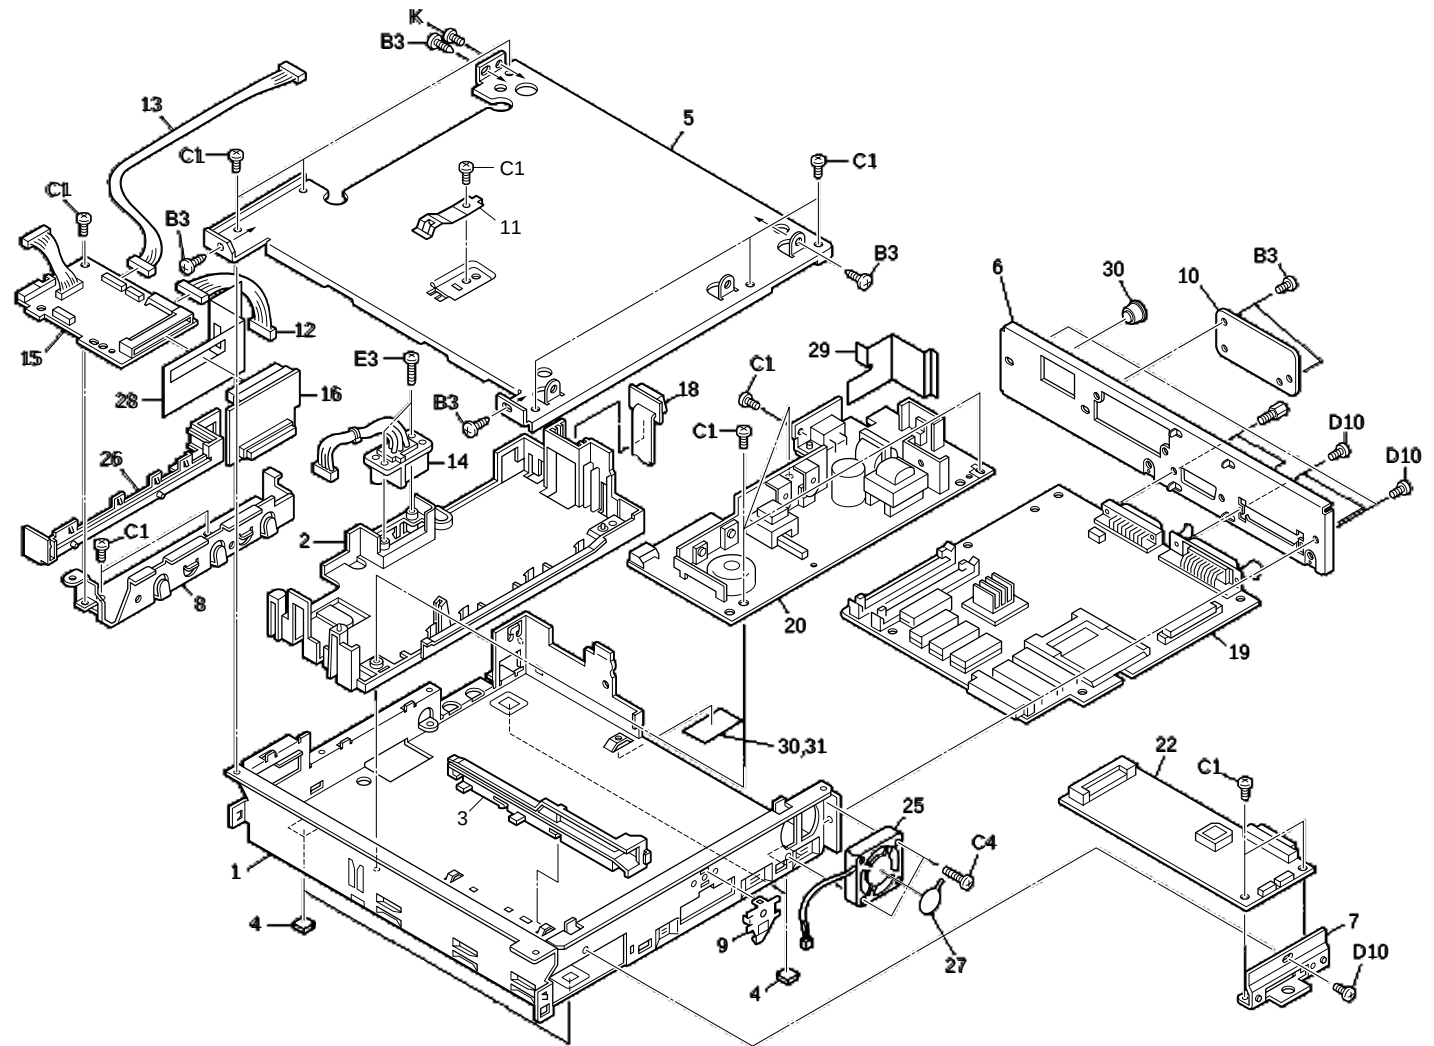


Plus-series models

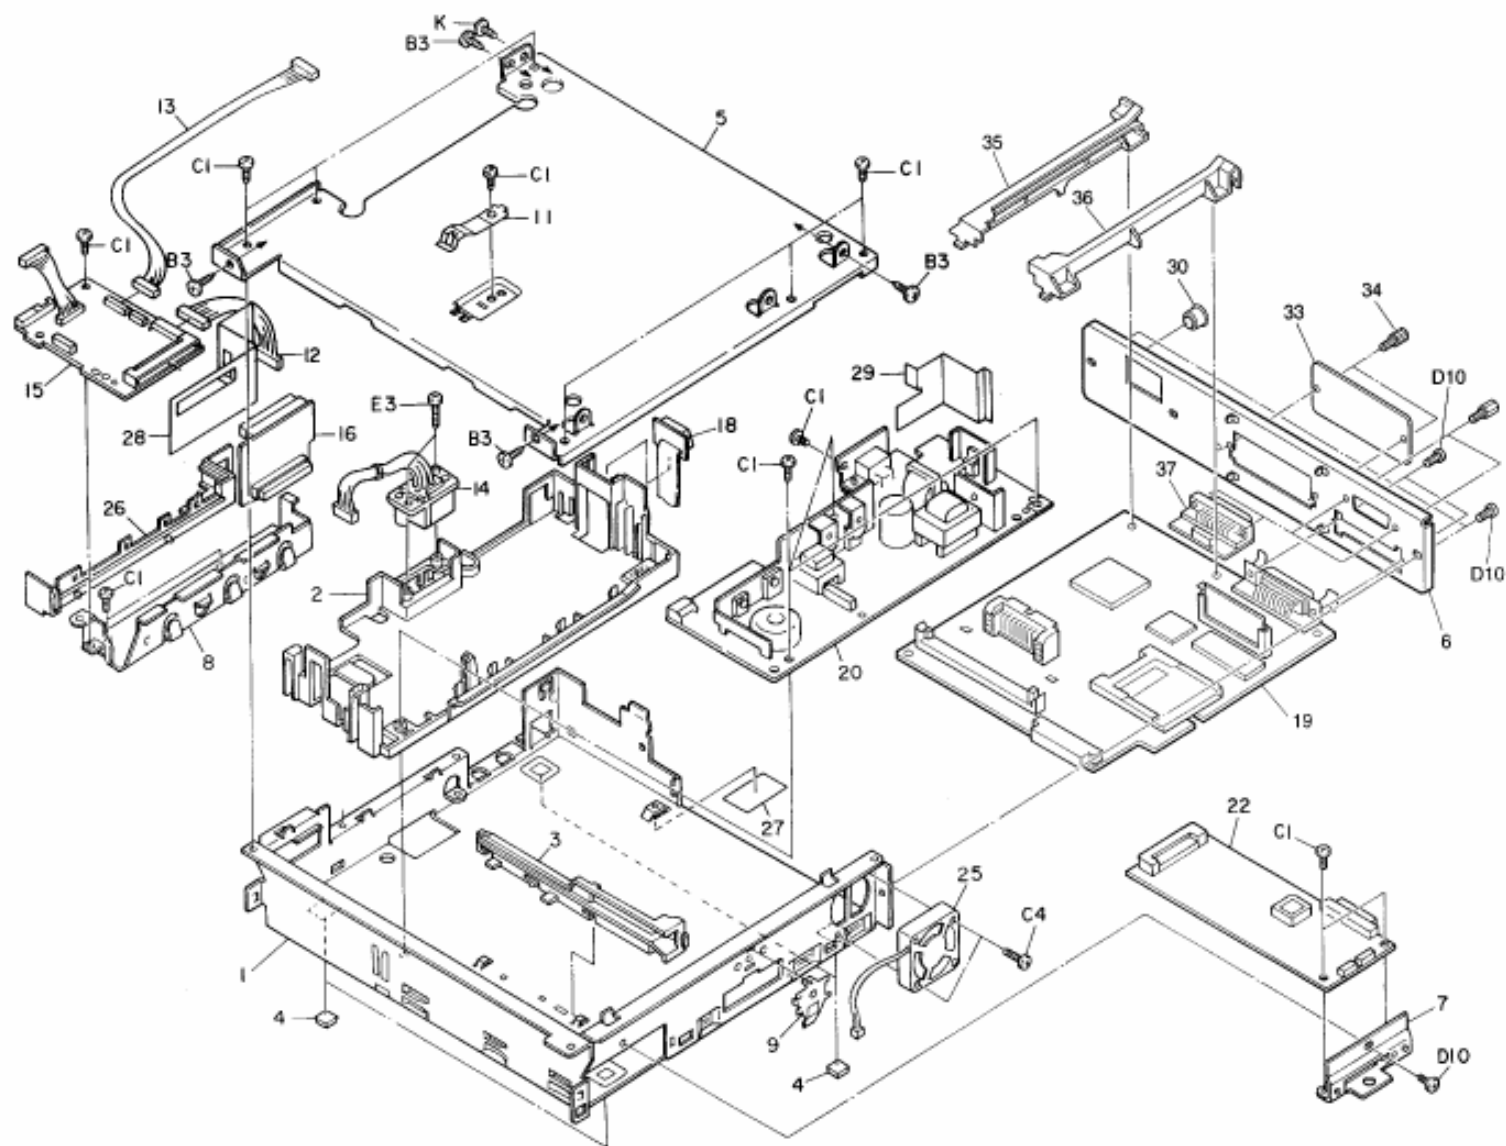

Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
4-1	5MMB886SL017	←	←	←	BOX CONTROLLER
4-2	5MVX876CB003	←	←	←	CASE PWB POWER
4-3	5MVX852CN001	←	←	←	RAIL PWB ENGINE
4-4	5MVX221RB005	←	←	←	FOOT
4-5	5MMS886SL009	←	←	←	LID CONTROLLER
4-6	5MMS867SL007	5MMS867SL001	5MMS867SL007	5MMS867SL001	PANEL REAR
4-7	5MMX642SL010	←	←	←	PANEL ENGINE
4-8	5MMX844SL002	←	←	←	COVER CONTROLLER
4-9	5MMX431LD005	Not used	5MMX431LD005	Not used	PLATE EARTH CONT
4-10	5MMS646SD009	5MMS636SD009	5MMX844SL002	5MMS636SD009	PLATE CONTROLLER
4-11	5MMX622LD001	←	←	←	PLATE RELEASE CONT
4-12	5AACCNP8GEA	←	←	←	CONN. CORD, S02017
4-13	5AACCNP8GEA	←	←	←	CONN. CORD, S02009
4-14	5AACCNP4GEA	←	←	←	CONN. CORD, S02015
4-15	5AAPRIFC2006AH	←	5AAPRIFC2006BH	←	P.W. BOARD ASSY, KP-492
4-16	5AAPRIFC2007AH	←	←	←	P.W. BOARD ASSY, KP-494
4-17					
4-18	5AAPRIFC2005AH	←	←	←	P.W. BOARD ASSY, KP-493
4-19 e	5AAPRLGG4027CH	5AAPRLGR4002AH	5AAPRLGG4027EH	5AAPRLGR4002FH	P.W. BOARD ASSY
4-19 u	5AAPRLGC4027DH	5AAPRLGR4002AH	5AAPRLGC4027FH	5AAPRLGR4002FH	P.W. BOARD ASSY
4-20 e	5AAY1700E*54	5AAEZ1700E*2	5AAY3700E*28	5AAEZ1700E*2	SW. POWER SUPPLY UNIT
4-20 u	5AAY1700U*09	5AAEZ1700U*1	5AAY3700U*09	5AAY1700U*09	SW. POWER SUPPLY UNIT
4-21					
4-22 e	5AAPRCZG4007AH	5AAPRCZR2021AH	5AAPRCZG4007CH	5AAPRCZG4007MH	P.W. BOARD ASSY, KP-503
4-22 u	5AAPRCZG4007BH	5AAPRCZC2021BH	5AAPRCZG4007DH	5AAPRCZG4007NH	P.W. BOARD ASSY, KP-503
4-23					
4-24					
4-25	5EZNF2405001*01	5EZNF2406101*01	5EZNF2405001*01	←	FAN MOTOR
4-26	5MVL833SH001	←	←	←	COVER CABLE

4-27	5MMS522AX001	←	←	←	SEAL FAN
4-28 e	Not used	Not used	Not used	5MVS753KN001	SHEET BOX F
4-28 u	5MVS753KN001	Not used	5MVS753KN001	Not used	SHEET BOX F
4-29 e	Not used	Not used	Not used	Not used	SHEET BOX R
4-29 u	5MVS653KN001	Not used	5MVS653KN001	Not used	SHEET BOX R
4-30					
4-31					
4-32					
4-33					
4-34	Not used	5MMT263SN012	Not used	5MMT263SN012	SCREW OP
4-35	Not used	5MVX743SB009	Not used	5MVX743SB009	RAIL OPTION L
4-36	Not used	5MVX743SB010	Not used	5MVX743SB010	RAIL OPTION R
4-37	Not used	5AAPRIFR4002AH	Not used	5AAPRIFR4002AH	P.W.BOARD ASSY KP-635


5 - Feed unit

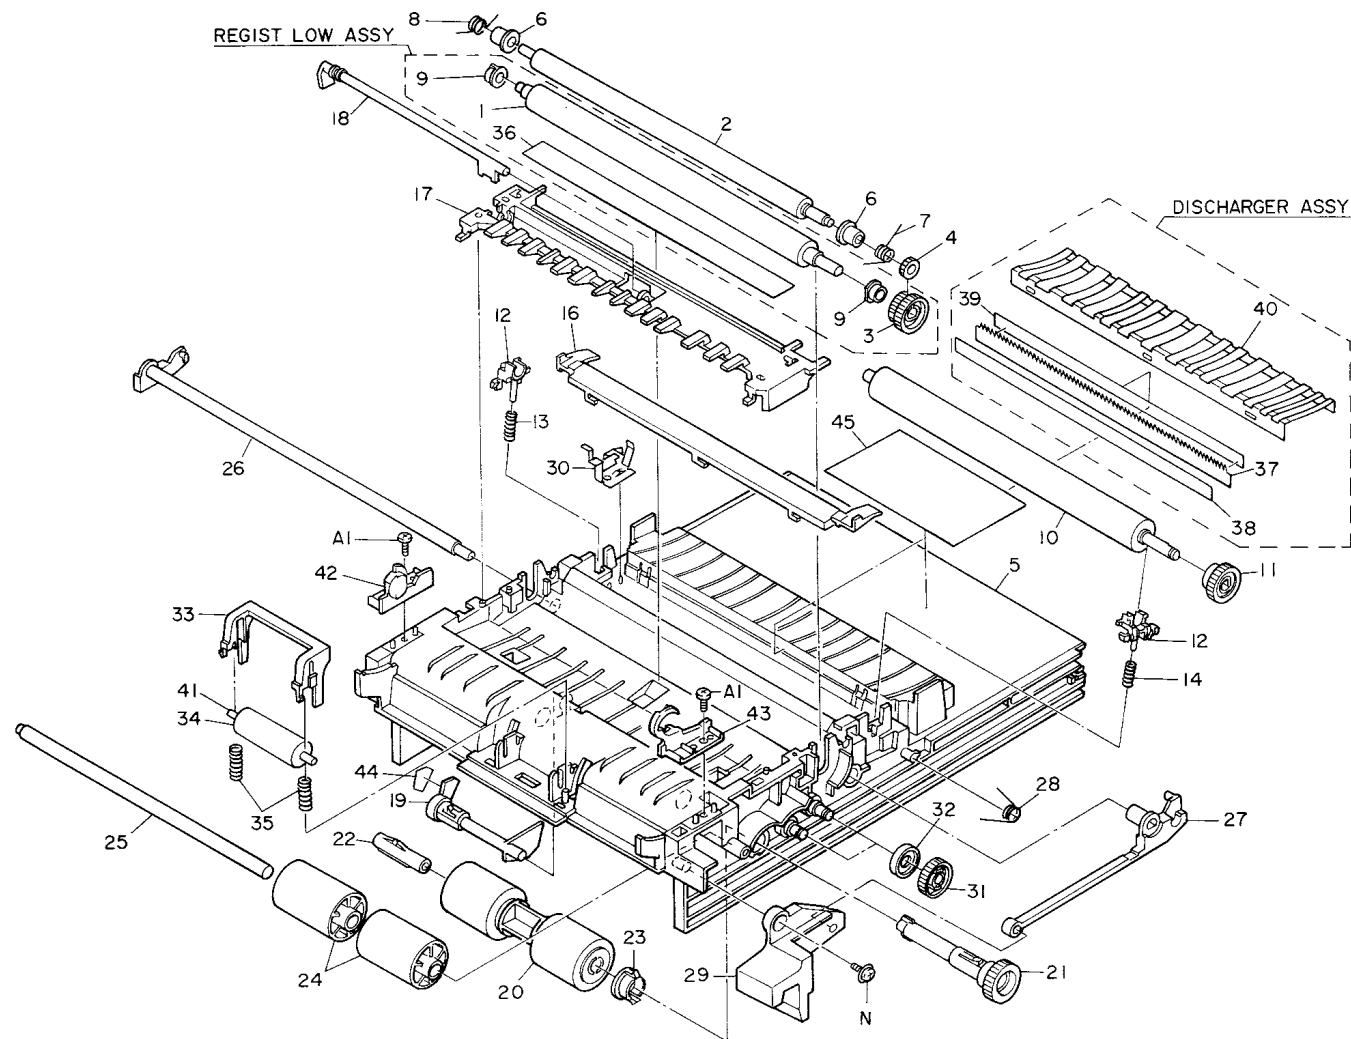

Ref. No.	Part code				Description
	FS-1700	FS-1700 +	FS-3700	FS-3700 +	
Assembly	5AAY1700E*55	←	←	←	REGIST LOW ASSY
	5AAY1700E*56	←	←	←	DISCHARGER ASSY
5-1	5MMT876SN046	←	←	←	ROLLER REGIST LOW
5-2	5MMT821SN003	←	←	←	ROLLER REGIST UP
5-3	5MVG148DB032	←	←	←	GEAR REGIST Z24-Z32
5-4	5MVG137DB064	←	←	←	GEAR REGIST Z24
5-5	5MVB886SB007	←	←	←	BASE FEED
5-6	5MVM276DB011	←	←	←	BUSH REGIST A
5-7	5MMW172SX005	←	←	←	SPRING REGIST R
5-8	5MMW172LD008	←	←	←	SPRING REGIST L
5-9	5MVM176DN019	←	←	←	BUSH POM A
5-10	5MMT876SN045	←	←	←	ROLLER TRANSFER
5-11	5MVG137DB065	←	←	←	GEAR T/C Z23H
5-12	5MVX331DB007	←	←	←	BUSH TRANSFER
5-13	5MMW241SX004	←	←	←	SPRING TRANS L
5-14	5MMW241SX005	←	←	←	SPRING TRANS R
5-15					
5-16	5MVX832CB009	←	←	←	PAPER CHUTE
5-17	5MVX863SB011	←	←	←	GUIDE PAPER
5-18	5MVX722SH004	←	←	←	SENSOR DOC
5-19	5MVX652CB001	←	←	←	ACTUATOR CASSETTE
5-20	5AAVROLL*039	←	←	←	FEED ROLL ASSY
5-21	5MVG038DB003	←	←	←	GEAR FEED Z27
5-22	5MVM410DB001	←	←	←	HOLDER ROLLER FEED
5-23	5MVM177DW002	←	←	←	BUSH FEED
5-24	5MVM687DB001	←	←	←	ROLLER GUIDE
5-25	5MMT866SN001	←	←	←	SHAFT FEED
5-26	5MVX842CB006	←	←	←	SHAFT RELEASE
5-27	5MVX731DW001	←	←	←	SHAFT LOCK R
5-28	5MMW161LD023	←	←	←	SPRING HINGE R

5-29	5MVX664SW002	←	←	←	LEVER LOCK
5-30	5MMX533LD002	←	←	←	PLATE EARTH TC
5-31	5MVG138DB060	←	←	←	GEAR IDLE Z26
5-32	5MVM121DB001	←	←	←	COLLER JOINT
5-33	5MVB644SB004	←	←	←	BRACKET M/P ROLL
5-34	5MVM676DB001	←	←	←	ROLLER M/P
5-35	5MMW351LD004	←	←	←	SPRING ROLL M/P
5-36	5MVS822KF006	←	←	←	SHEET REGIST C
5-37	5MMS711LD001	←	←	←	BRUSH DISCHARGER
5-38	5MVS711KF003	←	←	←	SHEET DISCHARGER
5-39	5MMU812AX001	←	←	←	SEAL ADHESIVE
5-40	5MMU862SD003	←	←	←	PLATE PAPER GUIDE
5-41	5MMT633SS001	←	←	←	SHAFT M/P ROLL
5-42	5MVX432DB005	←	←	←	HINGE M/P L
5-43	5MVX432DB006	←	←	←	HINGE M/P R
5-44	5MMS211AX001	←	←	←	SEAL ACTUATOR
5-45	5MVVL761WN41	←	←	←	LABEL CAUTION FE


6 - Fuser unit

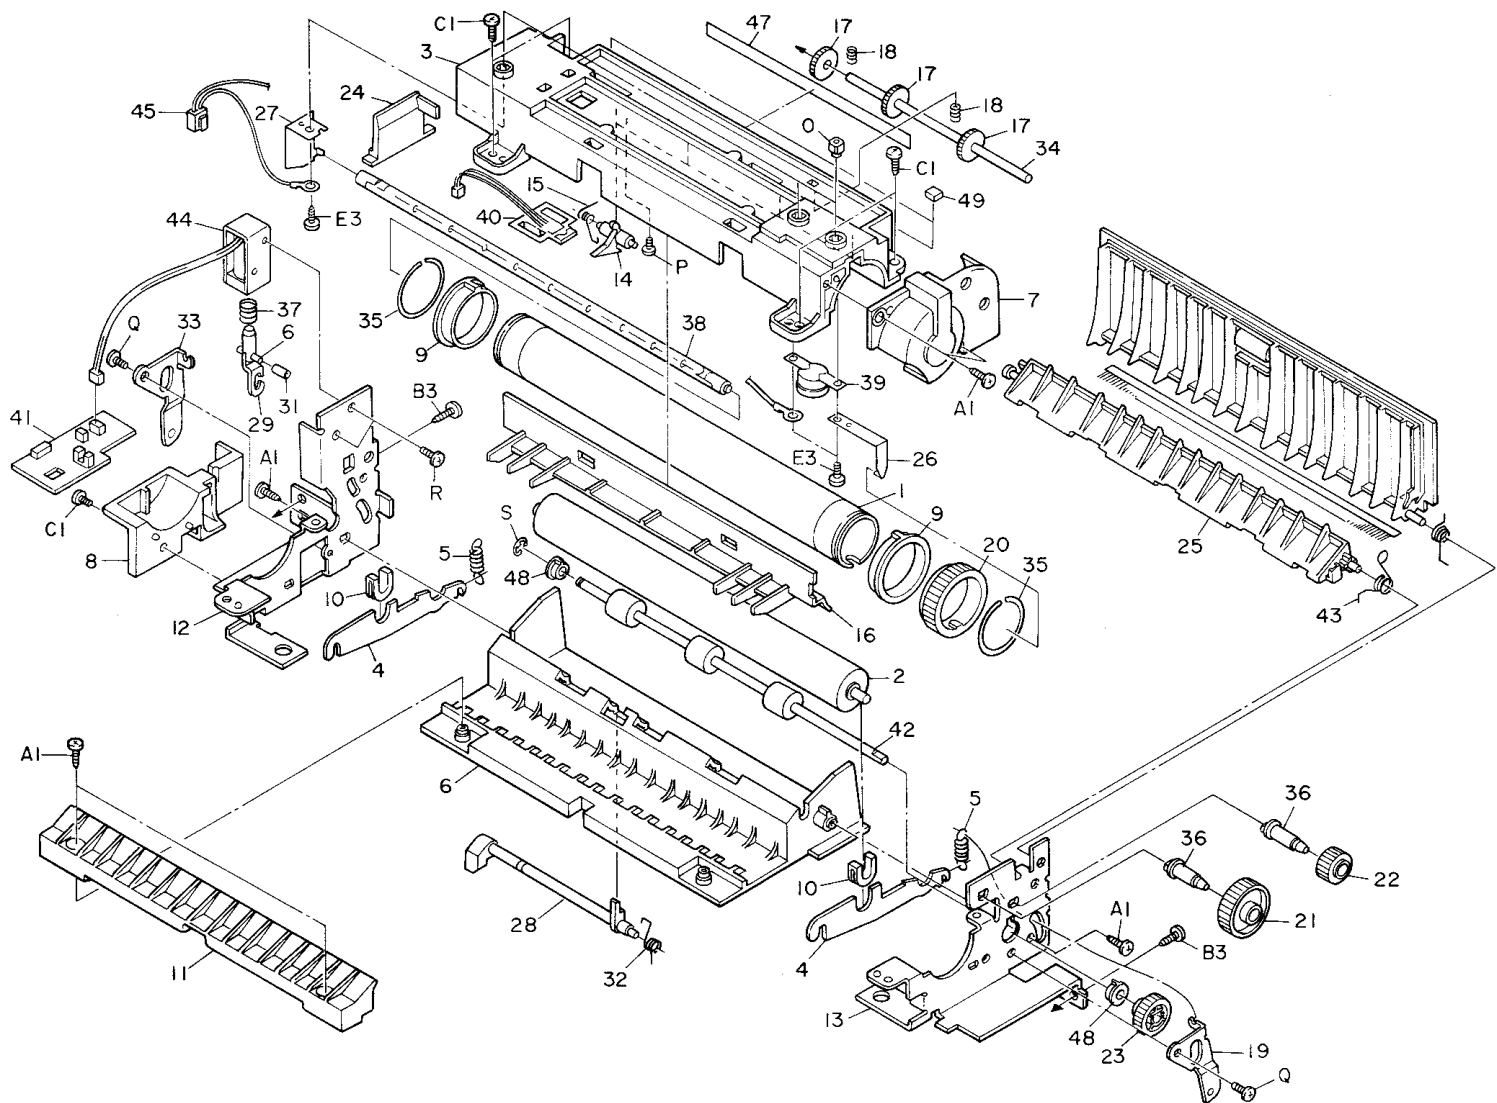

Ref. No.	Part code				Description
	FS-1700	FS-1700 +	FS-3700	FS-3700 +	
Assem. e	5PLPZSFAPKE	←	5PLPZSFAPKE		FUSER KIT, FK-21
Assem. u	5PLPZSGAAK1	←	5PLPZSGAAK1		FUSER KIT, FK-21
6-1	5MMT888AX013	←	←	←	ROLLER HEAT
6-2	5MMT886SN009	←	5MMT886SN011	←	ROLLER PRESS
6-3	5MVB864KB002	←	←	←	FRAME FUSER UP
6-4	5MMS627SL003	←	←	←	PLATE PRESS
6-5	5MMW251LD004	←	5MMW251LD008	←	SPRING PRESS
6-6	5MVX874KB001	←	←	←	FRAME FUSER LOW
6-7	5MVB663KB001	←	←	←	COVER FUSER R
6-8	5MVX644KB001	←	←	←	COVER FUSER L
6-9	5MVM188XN012	←	←	←	BUSH HEAT
6-10	5MVM166XN001	←	←	←	BUSHING PRESS
6-11	5MVX832NB001	←	←	←	PAPER CHUTE FUSER
6-12	5MMX666SL006	←	←	←	PLATE FUSER L
6-13	5MMX666SL008	←	←	←	PLATE FUSER R
6-14	5MVX222XN002	←	←	←	SEPARATOR
6-15	5MMW261LD015	←	←	←	SPRING SEPARATOR
6-16	5MVX832KB002	←	←	←	PLATE FUSER UP
6-17	5MVM176DB010	←	←	←	PULLEY EXIT
6-18	5MMW261LD016	←	←	←	SPRING PULLEY
6-19	5MMX531SL003	←	←	←	PLATE RELEASE R
6-20	5MVG158XN003	←	←	←	GEAR HEAT Z46
6-21	5MVG148XN005	←	←	←	GEAR JOINT Z36
6-22	5MVG127DW004	←	←	←	GEAR IDLE Z16
6-23	5MVG137DW002	←	←	←	GEAR EXIT Z21
6-24	5MVX432KB002	←	←	←	SUPPORT LAMP
6-25	5MVX832CB008	←	←	←	GUIDE CHANGE
6-26	5MML143RD001	←	←	←	HOLDER LAMP R
6-27	5MMX332RD001	←	←	←	HOLDER LAMP L
6-28	5MVX741CB001	←	←	←	ACTUATOR FUSER


6-29	5MVX311DB009	←	←	←	ACTUATOR SOL
6-30					
6-31	5MVM111RB002	←	←	←	RUBBER PIN
6-32	5MMW261LD017	←	←	←	SPRING ACTUATOR
6-33	5MMX531SL002	←	←	←	PLATE RELEASE L
6-34	5MMT722SZ001	←	←	←	SHAFT EXIT
6-35	5MMW381SJ001	←	←	←	RING STOP
6-36	5MVT366DB001	←	←	←	PIN FUSER
6-37	5MMW261LJ032	←	←	←	SPRING SOL
6-38 e	5EZPB2412520201	←	5EZPB2413320103	←	LAMP HEATER
6-38 u	5EZPB1215020201	←	5EZPB1216720103	←	LAMP HEATER
6-39	5EYFFQ16001Q*01	←	5EYFFQ17501Q*01	←	THERMAL CUT-OUT
6-40	5AAXTM009GEA	←	←	←	THERMISTOR ASSY
6-41	5AAPRIFC1008AH	←	5AAPRIFC1008BH	←	P.W. BOARD ASSY, KP-499
6-42	5MMT874SN004	←	←	←	ROLLER EXIT
6-43	5MMW361LD010	←	←	←	SPRING CHANGE
6-44	5EZSA2401020307	←	←	←	SOLENO:D
6-45 e	5AACCNPW6GEA	←	5AACCNPW6GEA	←	CONN. CORD, S02039/41
6-45 u	5AACCNP1GEA	←	5AACCNP1GEA	←	CONN. CORD, S02039/41
6-46	5MVVL731WN14	←	5MVVL731WN15	←	LABEL FUSER CAUTION

7 - Casseette

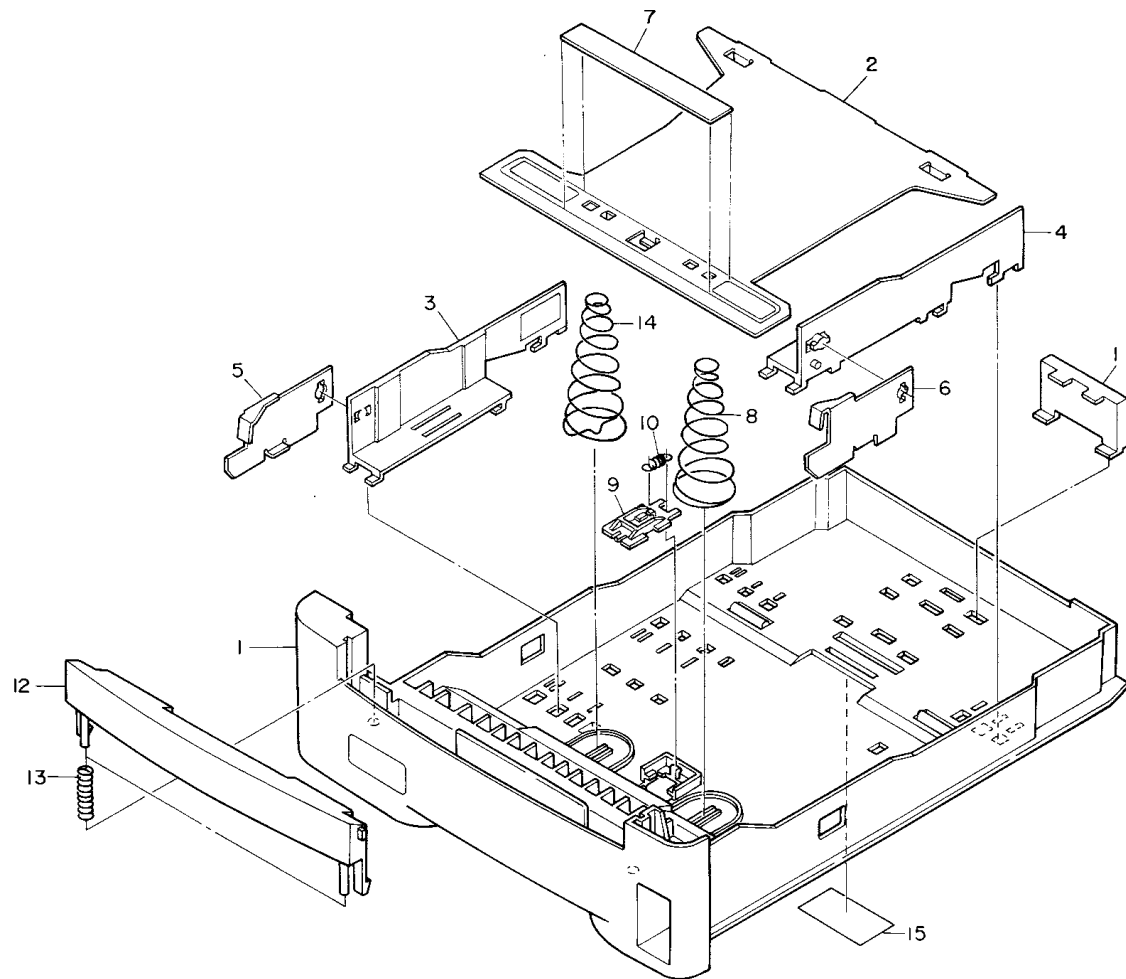

Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
Assem. e	5PLPZTPAPKE	←	5PLPZTPAPKE	←	PAPER CASSETTE, PC-21
Assem. u	5PLPZTUAPKE	←	5PLPZTUAPKE	←	PAPER CASSETTE, PC-21
7-1 e	5MVB886SH053(A4)	←	5MVB886SH053(A4)	←	BASE CASSETTE
7-1 u	5MVB886SH054(LTR)	←	5MVB886SH054(LTR)	←	
7-2 e	5MMS876SL008 (A4)	←	5MMS876SL008 (A4)	←	PLATE BOTTOM
7-2 u	5MMS876SL009 (LTR)	←	5MMS876SL009 (LTR)	←	
7-3	5MVL753SH001	←	←	←	PLATE SIDE L
7-4	5MVL753SH002	←	←	←	PLATE SIDE R
7-5	5MML641SW001	←	←	←	NAIL L
7-6	5MML641SW002	←	←	←	NAIL R
7-7	5MVS726XN001	←	←	←	PAD SEPARATOR
7-8	5MMW646LD001	←	←	←	SPRING CASSETTE
7-9	5MVX421DW001	←	←	←	LOCK BOTTOM
7-10	5MMW411LD002	←	←	←	SP STOPPER BOTTOM
7-11 e	Not used	←	Not used	←	RETAINER
7-11 u	5MVX642SH007	←	5MVX642SH007	←	RETAINER

8 - Drum unit

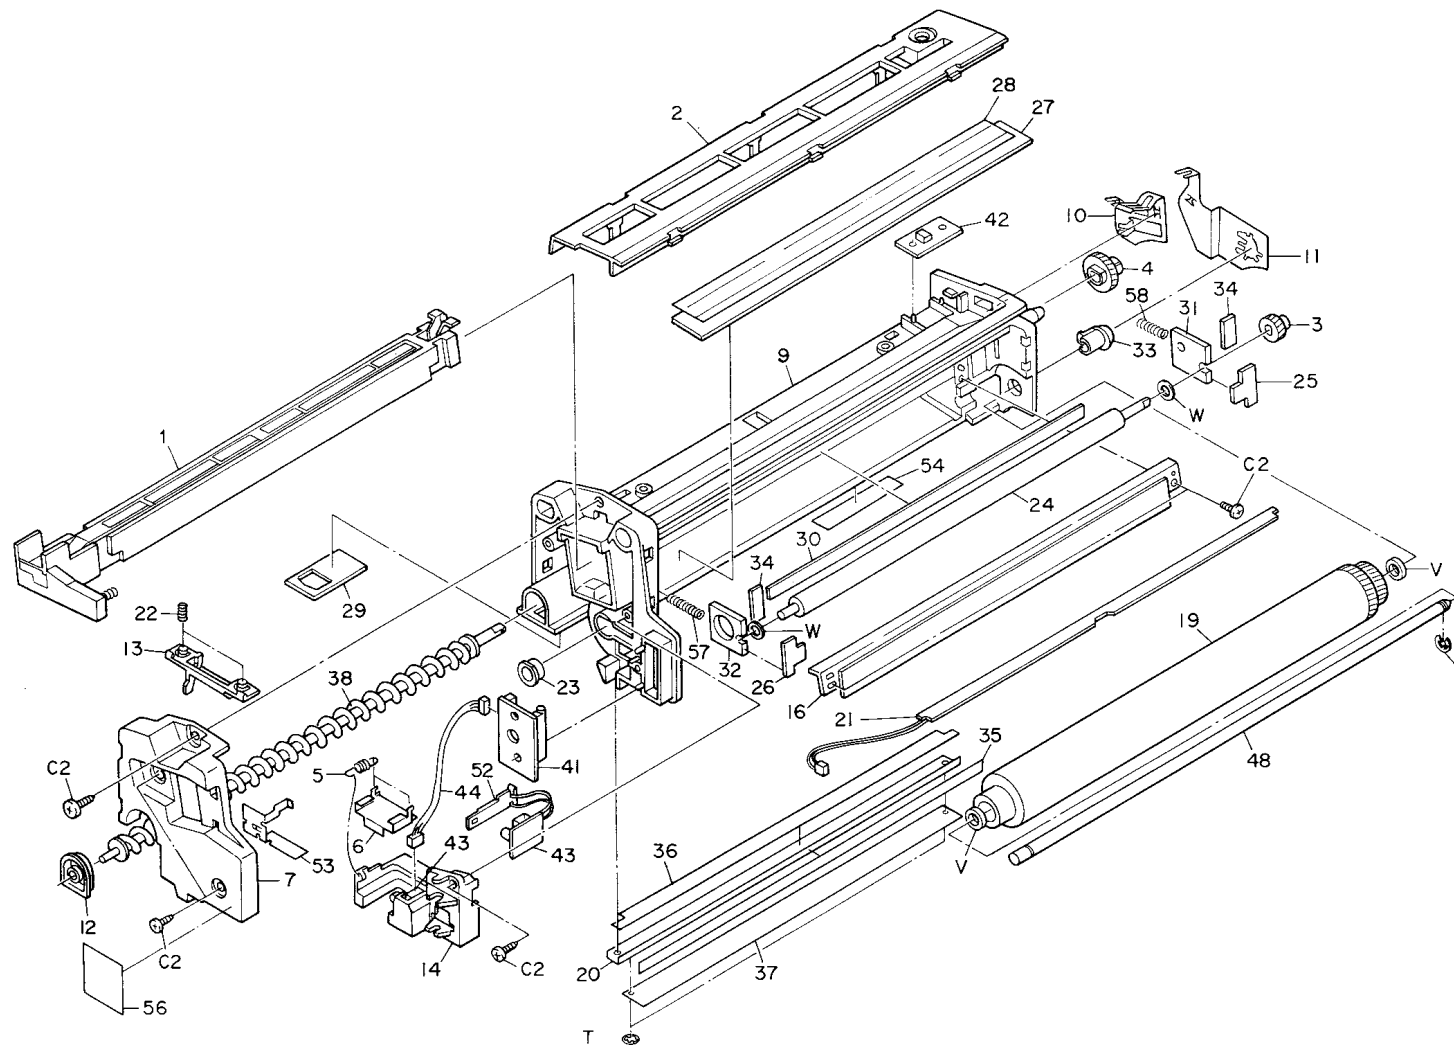

Ref. No.	Part code				Description
	FS-1700	FS-1700 +	FS-3700	FS-3700 +	
8-1	5AAY1700E*23	←	←	←	MCH ASSY
8-2	5MVL854SB001	←	←	←	COVER DRUM UP
8-3	5MVG116DN005	←	←	←	GEAR ROLL Z10H
8-4	5MVG137DN001	←	←	←	GEAR SCREW Z21H
8-5	5MMW251SX001	←	←	←	SPRING SHUTTER
8-6	5MMC231LD002	←	←	←	SHUTTER WASTE
8-7	5MVB663SB028	←	←	←	COVER DRUM LEFT
8-8	5MVB662SB026	←	←	←	COVER DRUM RIGHT
8-9	5MVB866CB004	←	←	←	FRAME DRUM
8-10	5MMX332LD007	←	←	←	PLATE ZENNER
8-11	5MMX552LD002	←	←	←	PLATE EARTH DRUM
8-12	5MVM122DN001	←	←	←	BUSH SCREW
8-13	5MVX621SB008	←	←	←	LOCK MCH
8-14	5MVX644SC001	←	←	←	BRACKET SENSOR
8-15					
8-16	5AAVBLADE025	←	←	←	BLADE ASSY
8-17					
8-18					
8-19	5AAY1700E*24	5AAY17+E**12	5AAY1700E*24	←	DRUM ASSY
8-20	5MML821LD006	←	←	←	BRACKET SHEET
8-21	5AAXLD028GEA	←	←	←	LED ASSY
8-22	5MMW154LD004	←	←	←	SPRING LOCK MCH
8-23	5MVM176DN016	←	←	←	BUSH A
8-24	5MMT864XN001	←	←	←	ROLL CLN
8-25	5MVS428LN007	←	←	←	SEAL DRUM RIGHT
8-26	5MVS428LN008	←	←	←	SEAL DRUM LEFT
8-27	5MVS821MN001	←	←	←	SEAL SCRAPER
8-28	5MVS821SN001	←	←	←	SHEET SCRAPER
8-29	5MVS628LN001	←	←	←	SEAL SHUTTER
8-30	5MVS818MN002	←	←	←	SEAL BLADE LONG


8-31	5MVQ321XN003	←	←	←	BUSH CLEANER RIGHT
8-32	5MVQ321XN004	←	←	←	BUSH CLEANER LEFT
8-33	5MVF276CB001	←	←	←	BUSH DRUM RIGHT
8-34	5MVS218RN010	←	←	←	SEAL BLADE
8-35	5MVS811RN004	←	←	←	SHEET ROLL
8-36	5MVS812XN001	←	←	←	TAPE ADHESIVE
8-37	5MVS822KB002	←	←	←	SHEET DRUM LOW
8-38	5MVT876CB005	←	←	←	SCREW CLEANER
8-39	5MVS218RN010	←	←	←	SEAL BLADE
8-40	5MMW141LD013	←	←	←	SPRING ROLL R
8-41	5AAPRIFC1012AH	←	5AAPRIFC1012AH	←	P.W. BOARD ASSY, KP-500
8-42	5AAPRIFC1047H	←	←	←	P.W. BOARD ASSY, KP-501
8-43	5AAPRSSC1014AH	←	←	←	P.W. BOARD ASSY, KP-506
8-44					
8-45					
8-46					
8-47					
8-48					
8-49					
8-50					
8-51					
8-52	5MVS418SB001	←	←	←	SPACER LED
8-53	5MMX522LD010	←	←	←	PLATE EARTH A
8-54	5MMS621AX003	←	←	←	SHEET HEAT DRUM
8-55					
8-56	5MVVL331WN13	←	←	←	LABEL DRUM
8-57	5MMW141SX015	←	←	←	SPRING ROLL 0.8
8-58	5MMW141SX003	←	←	←	SPRING ROLL 1.4

9 - Scanner unit

The scanner unit is supplied as a whole assembly. No components are separately supplied.

Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
Assembly	5PLPZVXAPKE	5PLPZ9FAEKX	5PLPZVYAPKE	←	SCANNER UNIT
	LK-20	LK-22	LK-21	←	SCANNER UNIT
9-1					POLYGON MOTOR ASSY
9-2					LASER MODULE ASSY
9-3					COLLIMATE LENS ASSY
9-4					ADJUST PD ASSY
9-5					CYLINDRICAL LENS
9-6					F LENS A
9-7					F LENS B
9-8					SOS LENS
9-9					MIRROR A
9-10					GLASS
9-11					GLASS A
9-12					GLASS B
9-13					FRAME SCANNER
9-14					FRAME SCANNER
9-15					SPRING MIRROR
9-16					P.W. BOARD ASSY, PD
9-17					P.W. BOARD ASSY
9-18					CONN. CORD
9-19					GLASS A
9-20					GLASS B
9-21					SEAL POLYGON

10 - Developer unit

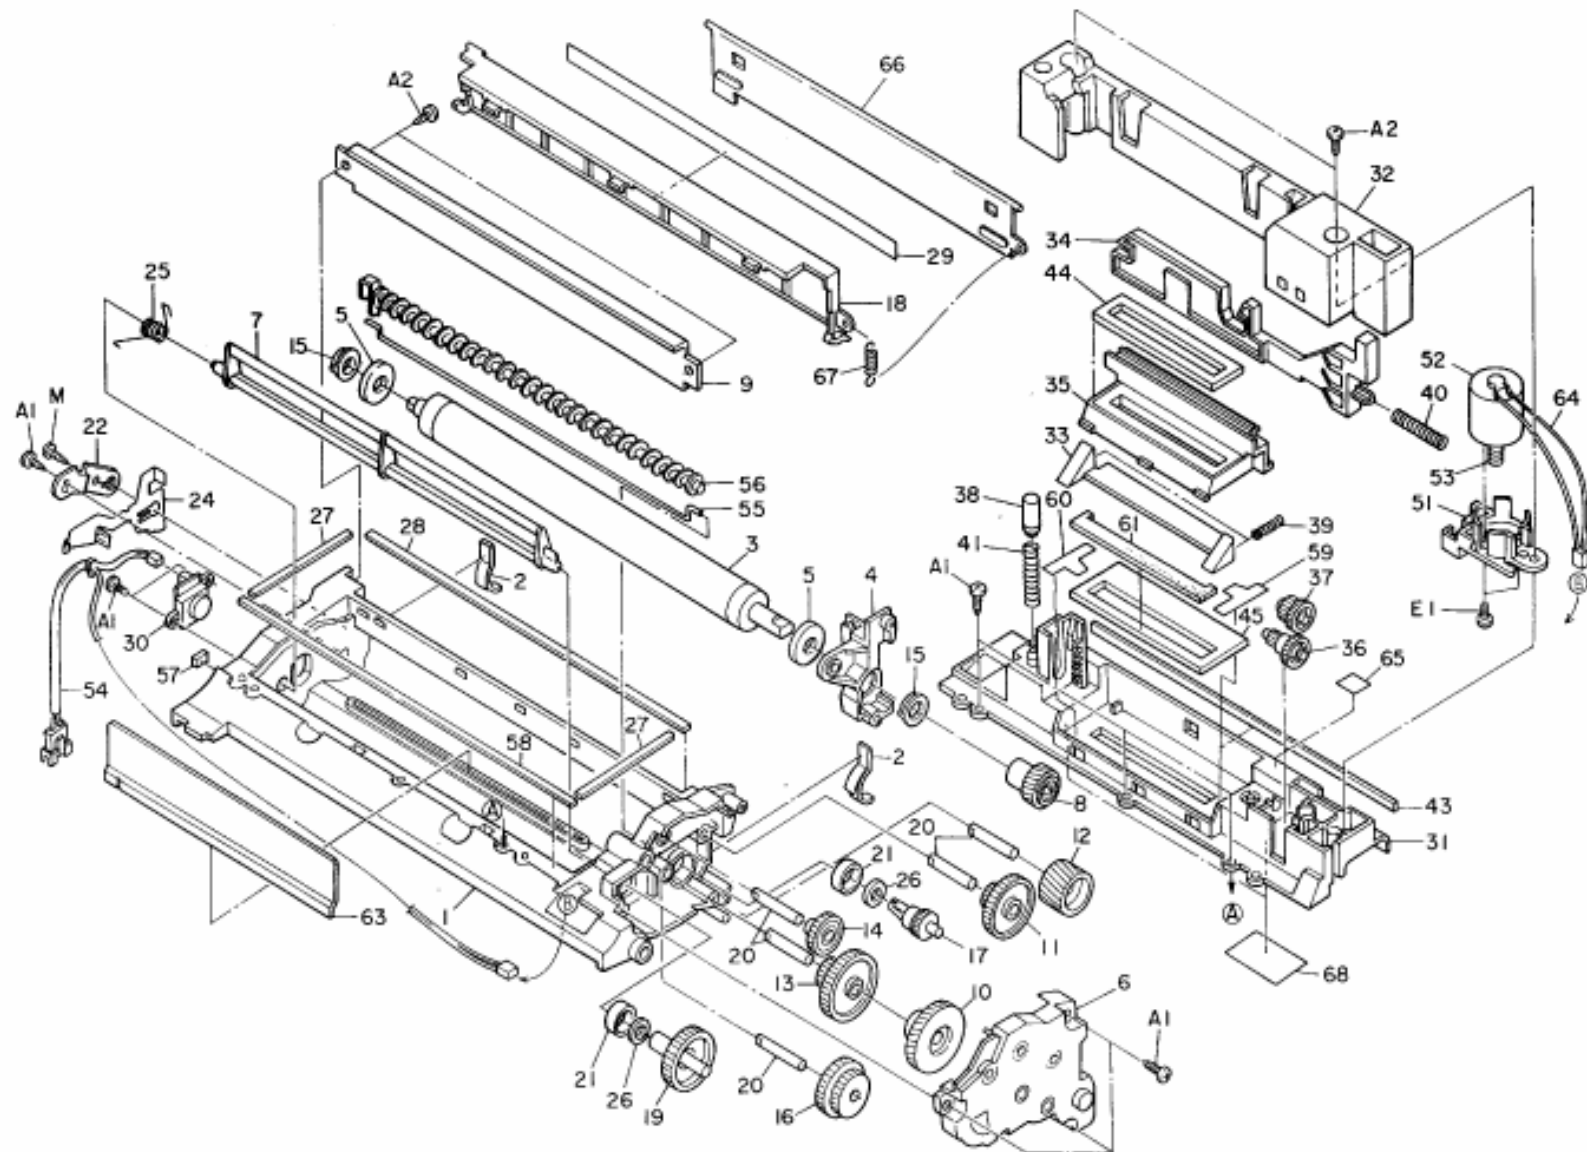


Ref. No.	Part code				Description
	FS-1700	FS-1700+	FS-3700	FS-3700+	
Assembly	5PLPZSEAPKE	←	←	←	DEVELOPER KIT, DV-20
	5AAY1700E*38	←	←	←	TONER MOTOR ASSY
10-1	5MVB876SB011	←	←	←	CASE DLP
10-2	5MVS518XF001	←	←	←	SEAL SIDE DLP
10-3	5AAVROLER029	←	←	←	ROLLER MAGNET
10-4	5MVX643SB007	←	←	←	HOLDER MAG
10-5	5MVM187DB007	←	←	←	PULLEY DLP
10-6	5MVB663SB032	←	←	←	COVER SIDE R
10-7	5MVX821SB006	←	←	←	SCRAPER DLP A
10-8	5MVG127DB041	←	←	←	GEAR Z19H
10-9	5MML831LD004	←	←	←	BLADE DLP
10-10	5MVG148DB033	←	←	←	GEAR Z18S-Z39H
10-11	5MVG148DB034	←	←	←	GEAR Z36S-Z14S
10-12	5MVG138DB061	←	←	←	GEAR Z23H
10-13	5MVG148DB037	←	←	←	GEAR Z40S-Z14S
10-14	5MVG137DB066	←	←	←	GEAR Z23S
10-15	5MVM170XN002	←	←	←	BUSH MAG
10-16	5MVG148DB038	←	←	←	GEAR Z34S-Z20S
10-17	5MVG127DB042	←	←	←	GEAR SCRAPER Z20S
10-18	5MVB843SB001	←	←	←	COVER MAG
10-19	5MVG148DB039	←	←	←	GEAR SCRAPER Z35S
10-20	5MMT455SZ002	←	←	←	PIN DLP
10-21	5MVM177XN004	←	←	←	BUSH SCRAPER
10-22	5MVZ222SB001	←	←	←	CAP MAG L
10-23					
10-24	5MMX631LD002	←	←	←	PLATE BIAS
10-25	5MMW161LD026	←	←	←	SPRING SENSOR
10-26	5MVS708XF001	←	←	←	SEAL SCRAPER
10-27	5MVS618RF014	←	←	←	SEAL CASE A
10-28	5MVS818RF012	←	←	←	SEAL CASE B

10-29	5MVS812RF003	←	←	←	SEAL COVER MAG
10-30	5ENXTSP15A10*01	←	←	←	TONER SENSOR
10-31	5MVX866SB009	←	←	←	LID DLP
10-32	5MVB854SB001	←	←	←	COVER DLP
10-33	5MVX622DB003	←	←	←	SHUTTER DLP
10-34	5MVX751DG001	←	←	←	LEVER DLP
10-35	5MVX652SB010	←	←	←	COVER SHUTTER
10-36	5MVG026DN001	←	←	←	WORM WHEEL H26-Z14
10-37	5MVG137DB056	←	←	←	GEAR IDLE Z30-Z15
10-38	5MVM211SB003	←	←	←	CAP DLP
10-39	5MMW451LJ002	←	←	←	SPRING SHUTTER
10-40	5MMW466SD001	←	←	←	SPRING LEVER
10-41	5MMW461LD007	←	←	←	SPRING LID
10-42	5AAY1700E*38	←	←	←	TONER MOTOR ASSY
10-43	5MVS818RF012	←	←	←	SEAL CASE B
10-44	5MVS638RF005	←	←	←	SEAL SHUTTER A
10-45	5MVS648RF006	←	←	←	SEAL SHUTTER B
10-46					
10-47					
10-48					
10-49					
10-50					
10-51	5MVX544SB001	←	←	←	BRACKET MOTOR
10-52	5EZND2402601*01	←	←	←	DC MOTOR
10-53	5MVG115DN001	←	←	←	GEAR WORM
10-54	5AACCNPS2GEA	←	←	←	CONN. CORD, S2023
10-55	5MMW802LD004	←	←	←	SCRAPER DLP B
10-56	5MVT864CB004	←	←	←	SCREW DLP
10-57	5MVS118RF027	←	←	←	SEAL CASE C
10-58	5MVS817RF015	←	←	←	SEAL CASE D
10-59	5MV312KF027	←	←	←	SEAL SHUTTER CL
10-60	5MVS312KF028	←	←	←	SEAL SHUTTER CR
10-61	5MVS618RF015	←	←	←	SEAL SHUTTER D
10-62	5MMW266SB001	←	←	←	SPRING LID B

10-63	5MVS737SB001	←	←	←	SEPARATOR DLP
10-64	5AACCNPT8GEA	←	←	←	CONN. CORD
10-65	5MVS222KF010	←	←	←	SEAL LID
10-66	5MVX831SB004	←	←	←	COVER SLEEVE
10-67	5MMW141LJ007	←	←	←	SPRING COVER SLV
10-68	5MVS751KF002	←	←	←	SEAL LID DLP

11 - Multi feed unit

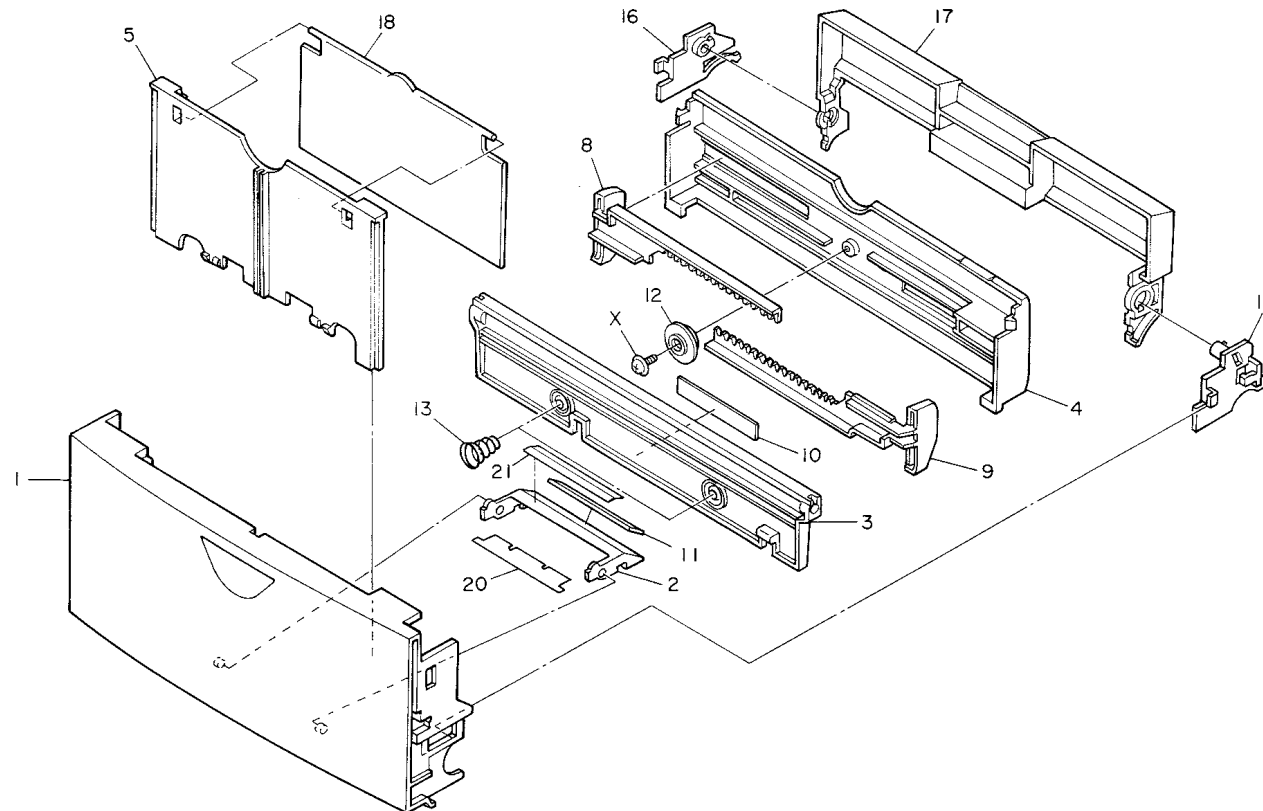

Ref. No.	Part code				Description
	FS-1700	FS-1700 +	FS-3700	FS-3700 +	
11-1	5MVB874SH016	←	←	←	BASE M/P
11-2	5MVX622SH003	←	←	←	SEPARATOR
11-3	5MVB851SH002	←	←	←	BOTTOM M/P A
11-4	5MVB862SH010	←	←	←	BOTTOM M/P B
11-5	5MVX761SH003	←	←	←	TRAY M/P
11-6					
11-7					
11-8	5MVX753DH001	←	←	←	GUIDE M/P L
11-9	5MVX753DH002	←	←	←	GUIDE M/P R
11-10	5MVS617WK001	←	←	←	PAD FRICTION
11-11	5MVS617WK002	←	←	←	PAD SSEPARATOR
11-12	5MVG127DH001	←	←	←	GEAR MANUAL
11-13	5MMW371LD003	←	←	←	SPRING BOTTOM
11-14					
11-15	5MVX421DH001	←	←	←	LOCK M/P L
11-16	5MVX421DH002	←	←	←	LOCK M/P R
11-17	5MVX863SH004	←	←	←	LEVER M/P
11-18					
11-19					
11-20					
11-21	5MML632LD001	←	←	←	PLATE SEPARATOR A
11-22	5MMS622LD002	←	←	←	PLATE SEPARATOR B

