



LASERBEAM PRINTER

F-1010



PARTS CATALOGUE

11-11-1998

F-1010 Parts Catalogue

Table of Contents

Outer Cover (Fig.1)	3
Upper Frame (Fig.2)	5
Lower Frame (Fig.3)	8
Controller (Fig.4)	10
Drive Mechanism (Fig.5)	12
Paper Feed Unit (Fig.6)	14
Face Down Unit (Fig.7)	17
Scanner Unit (Fig.8)	19
Drum Cartridge (Fig.9)	21
Developer Unit (Fig.10)	24
Fuser Unit (Fig.11)	26
Paper Cassette (Fig.12)	28
Transfer Charger Unit (Fig.13)	30
Upper Electrical Parts (Fig.14)	32
Lower Electrical Parts (Fig.15)	34
Electrical Parts of Paper Feed Unit (Fig.16)	36
Electrical Parts of Face Down Unit (Fig.17)	38
Electrical Parts of Fuser Unit (Fig.18)	40
Upper Frame Bundled Wires (Fig.19a)	42
Lower Frame Bundled Wires (Fig.19b)	44
Controller Bundled Wires (Fig.19c)	46

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:


'Ref No.'		Reference number which corresponds to the parts in the figure
'Part code'		Part code which identifies the part
'Part description'		A brief description of the part
'Quantity'		Quantity of the part used in the printer or option

Only the parts highlighted in **BOLD** should be ordered. All other parts are for reference only and are not stocked.

Consumables and Maintenance Kits


TK-4	Toner Kit
DK-3	Drum (10K pages)
DV-4	Developer (50K pages)
FK-4	Fuser (80K pages)

Fig.1 – Outer Cover

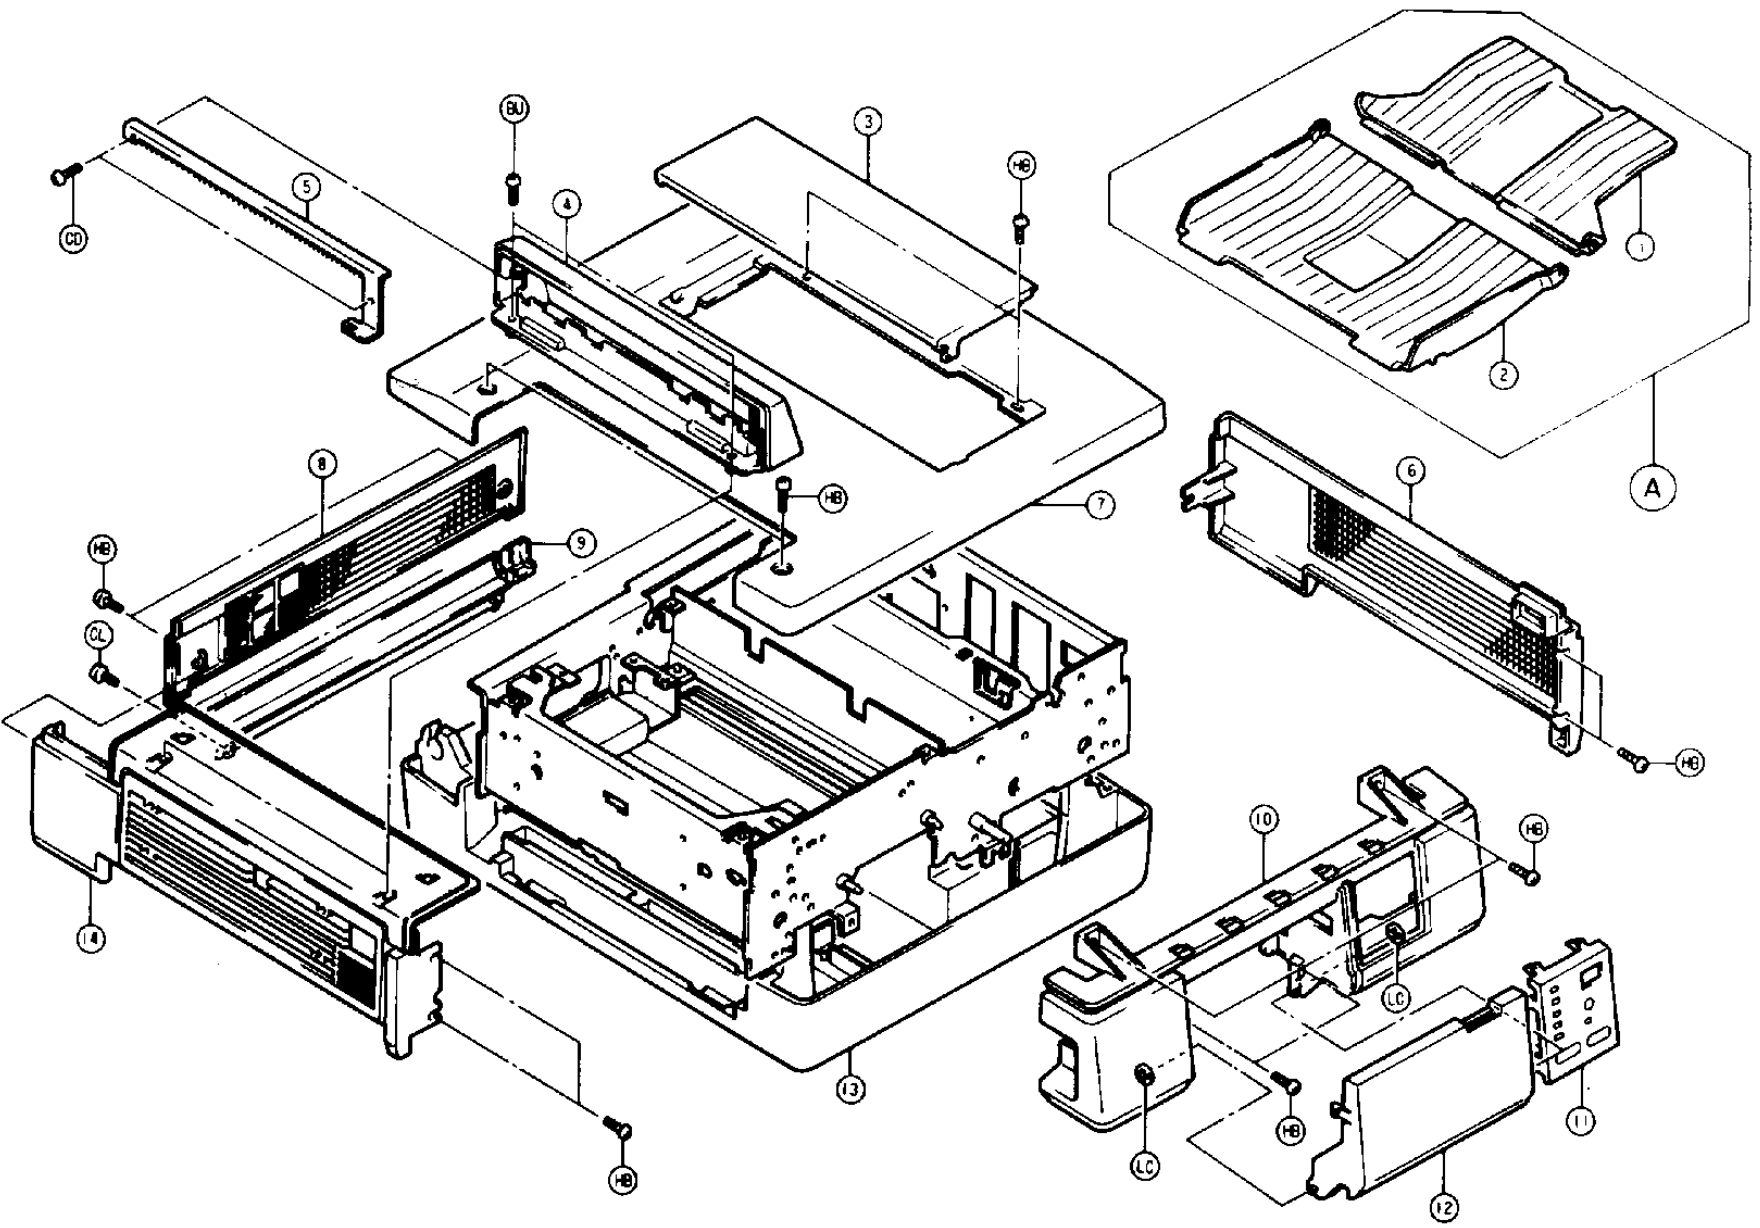

Ref No.	Part Code	Description	Quantity
01-00A	5AAMW1****09	Print Tray	1
01-003	5MVB873SH008	DLP Cover	1
01-004	5MVB865SH001	FD Sub Cover	1
01-005	5MMX151SX001	FD ES Eliminator	1
01-006	5MVX875SH001	Right Cover	1
01-007	5MVB883SH011	Top Cover	1
01-008	5AAVCOVER091	Rear Cover Assy	1
01-009	5MVX843AH001	Blind Cover	1
01-010	5MVB876SH012	Front Cover A	1
01-011	5AAFZF-10101	Key Board Assy	1
01-012	5MVB775SH001	Front Cover B	1
01-013	5MVB987SH004	Base	1
01-014	5MVX876SH003	Left Cover	1


Fig.2 – Upper Frame

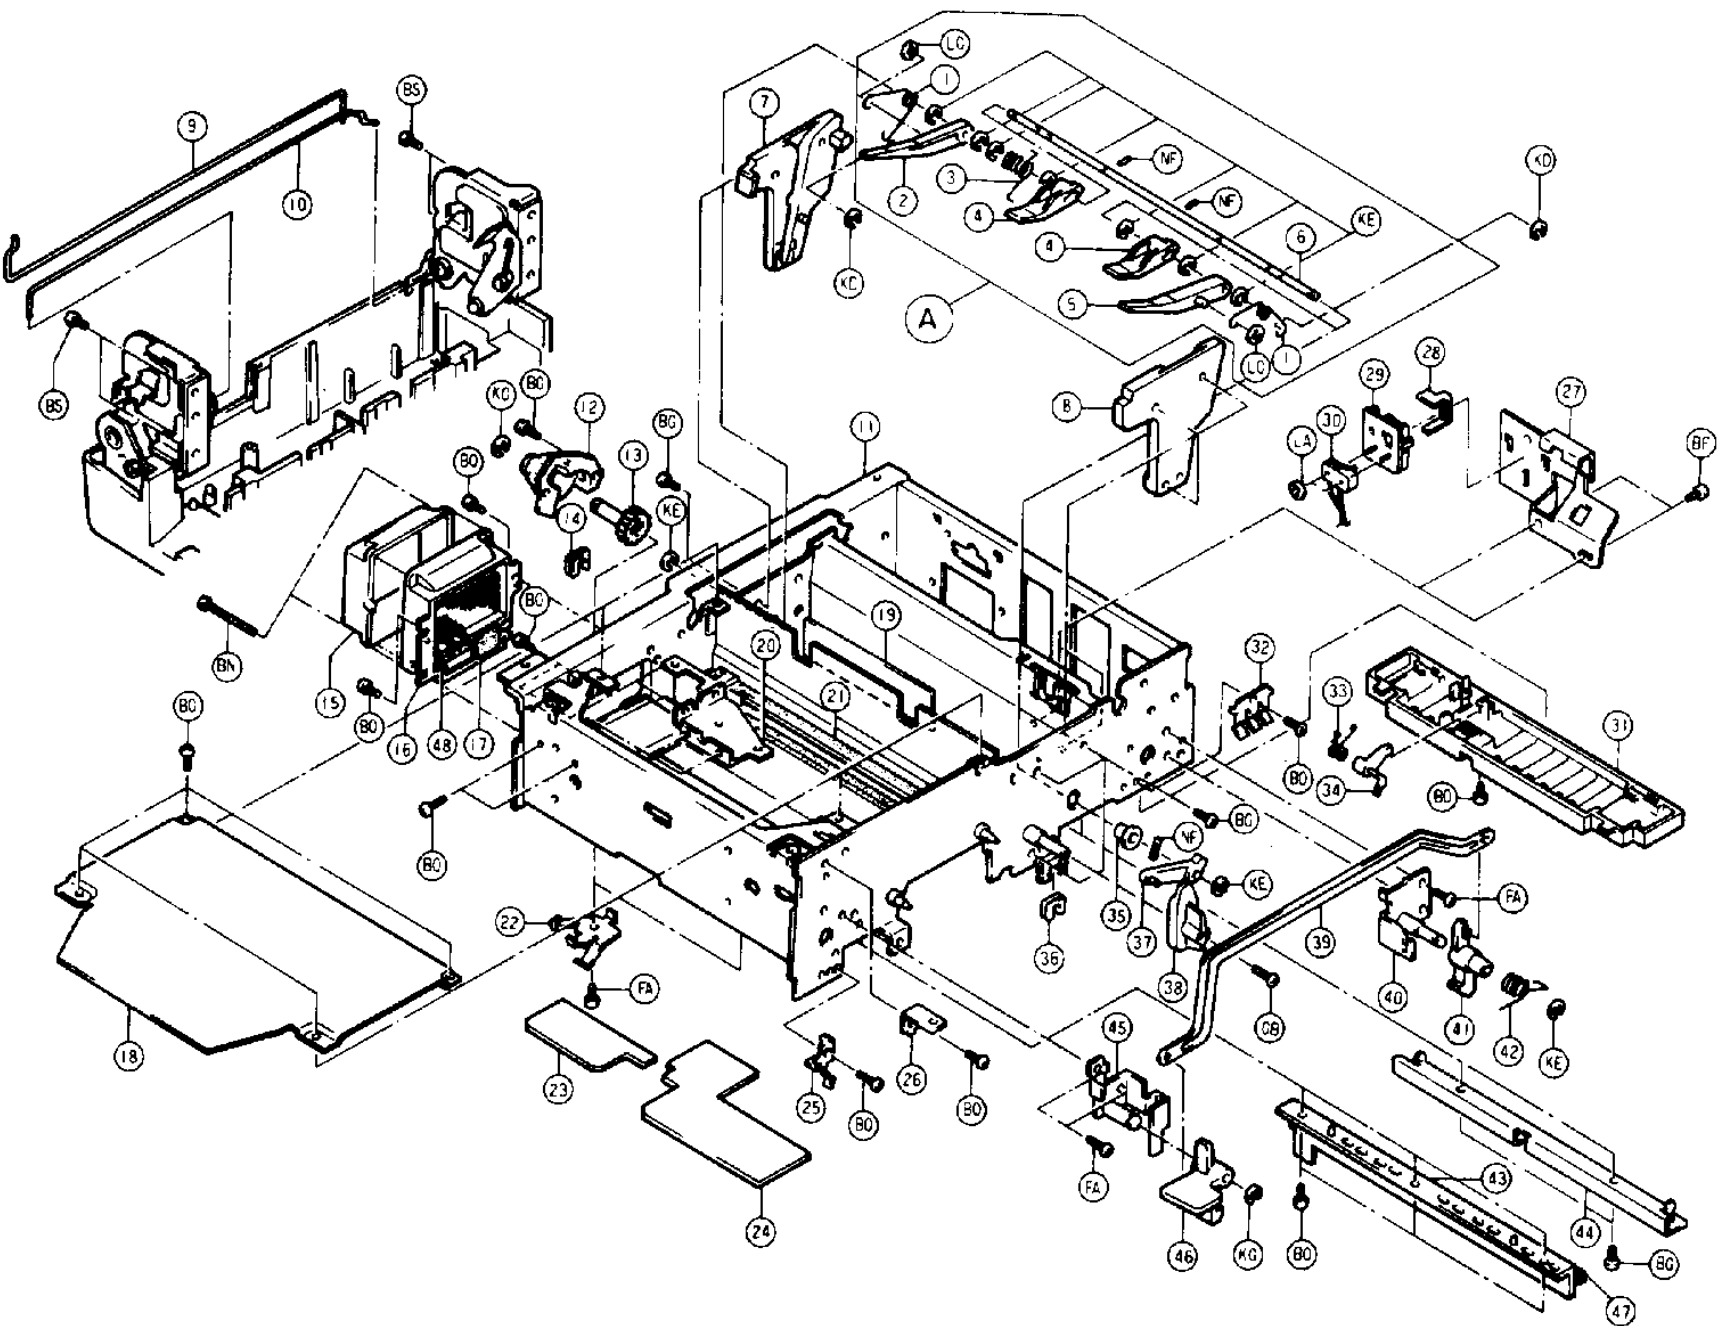

Ref No.	Part Code	Description	Quantity
02-00A	5AAVLEVER007	DLP Lever Assy	1
02-001	5MMW162LJ003	DLP Spring	2
02-002	5MVX632CX002	DLP Lever R	1
02-003	5MMW162LJ004	Lever B Spring	1
02-004	5MVX622CB001	DLP Lever B	2
02-005	5MVX632CX001	DLP Lever F	1
02-006	5MMT866SZ013	DLP Shaft	1
02-007	5MVX662SB011	DLP Guide R	1
02-008	5MVX662SB012	DLP Guide F	1
02-009	5MMW908SM002	Torsion Bar A	1
02-010	5MMW908SM001	Torsion Bar B	1
02-011	5AAVFRAME041	Frame Assy	1
02-012	5MVX665CB01%	Drum Bearing	1
02-013	5MVG138DB002	Drum Gear Z30	1
02-014	5MVX221DN005	Frame Guide R	1
02-015	5MVB773SB002	Nozzle B	1
02-016	AYW1****21	Filter Assy	1
02-017	5MVS329RB001	Nozzle Seal	1
02-018	5MMS876SL004	Top Cover Plate	1
02-019	5MVS732KN001	Toner Shutter	1
02-020	5MMU266SL002	Plate	1
02-021	5MVS838RB002	Scanner Pad	1
02-022	5MMX433LJ001	Cleaner Pressure	2
02-023	5MVS648RB003	Fuser Upper Pad B	1
02-024	5MVS768RB003	Fuser Upper Pad A	1
02-025	5MMX422RJ001	Earth Plate C	1
02-026	5MML342SL005	Top Cover Bkt F	1
02-027	5MMX653SL006	Connector Bkt	1
02-028	5MVU122DB002	Inter Lock SW Lever	1
02-029	5MVX443DB001	Inter Lock SW Bkt B	1
02-030	5AAXSW016GEA	Inter Lock SW Assy	1
02-031	5MVB862SB001	M Feed Upper Guide	1
02-032	5MMS334RJ001	Earth Plate A	1
02-033	5MMW161LJ008	Sensor Spring	1
02-034	5MVX442SB003	M Feed Sens Actuator	1
02-035	5MVM177DJ001	Drum Bushing R	1
02-036	5MVX221DB006	Frame Guide F	1
02-037	5MVX622DB001	DLP CAM Lever B	1
02-038	5MVX643CX001	DLP CAM Lever	1
02-039	5MMX861SL001	Hinge Arm	1
02-040	5MMX444SL003	Hook Plate B	1
02-041	5MVX632DN001	Hinge Hook B	1
02-042	5MMW172LJ003	Hinge Spring	1
02-043	5MVX842CB001	Unit Rail A	1
02-044	5MMU821SN002	Regist Paper Shoot	1


Ref No.	Part Code	Description	Quantity
02-045	5MMX644SL001	Hook Plate A	1
02-046	5MVX654DN001	Hinge Hook A	1
02-047	5MVS818RB003	Unit Rail Seal	1
02-048	5MVS518RB004	Wind Seal	1

Fig.3 – Lower Frame

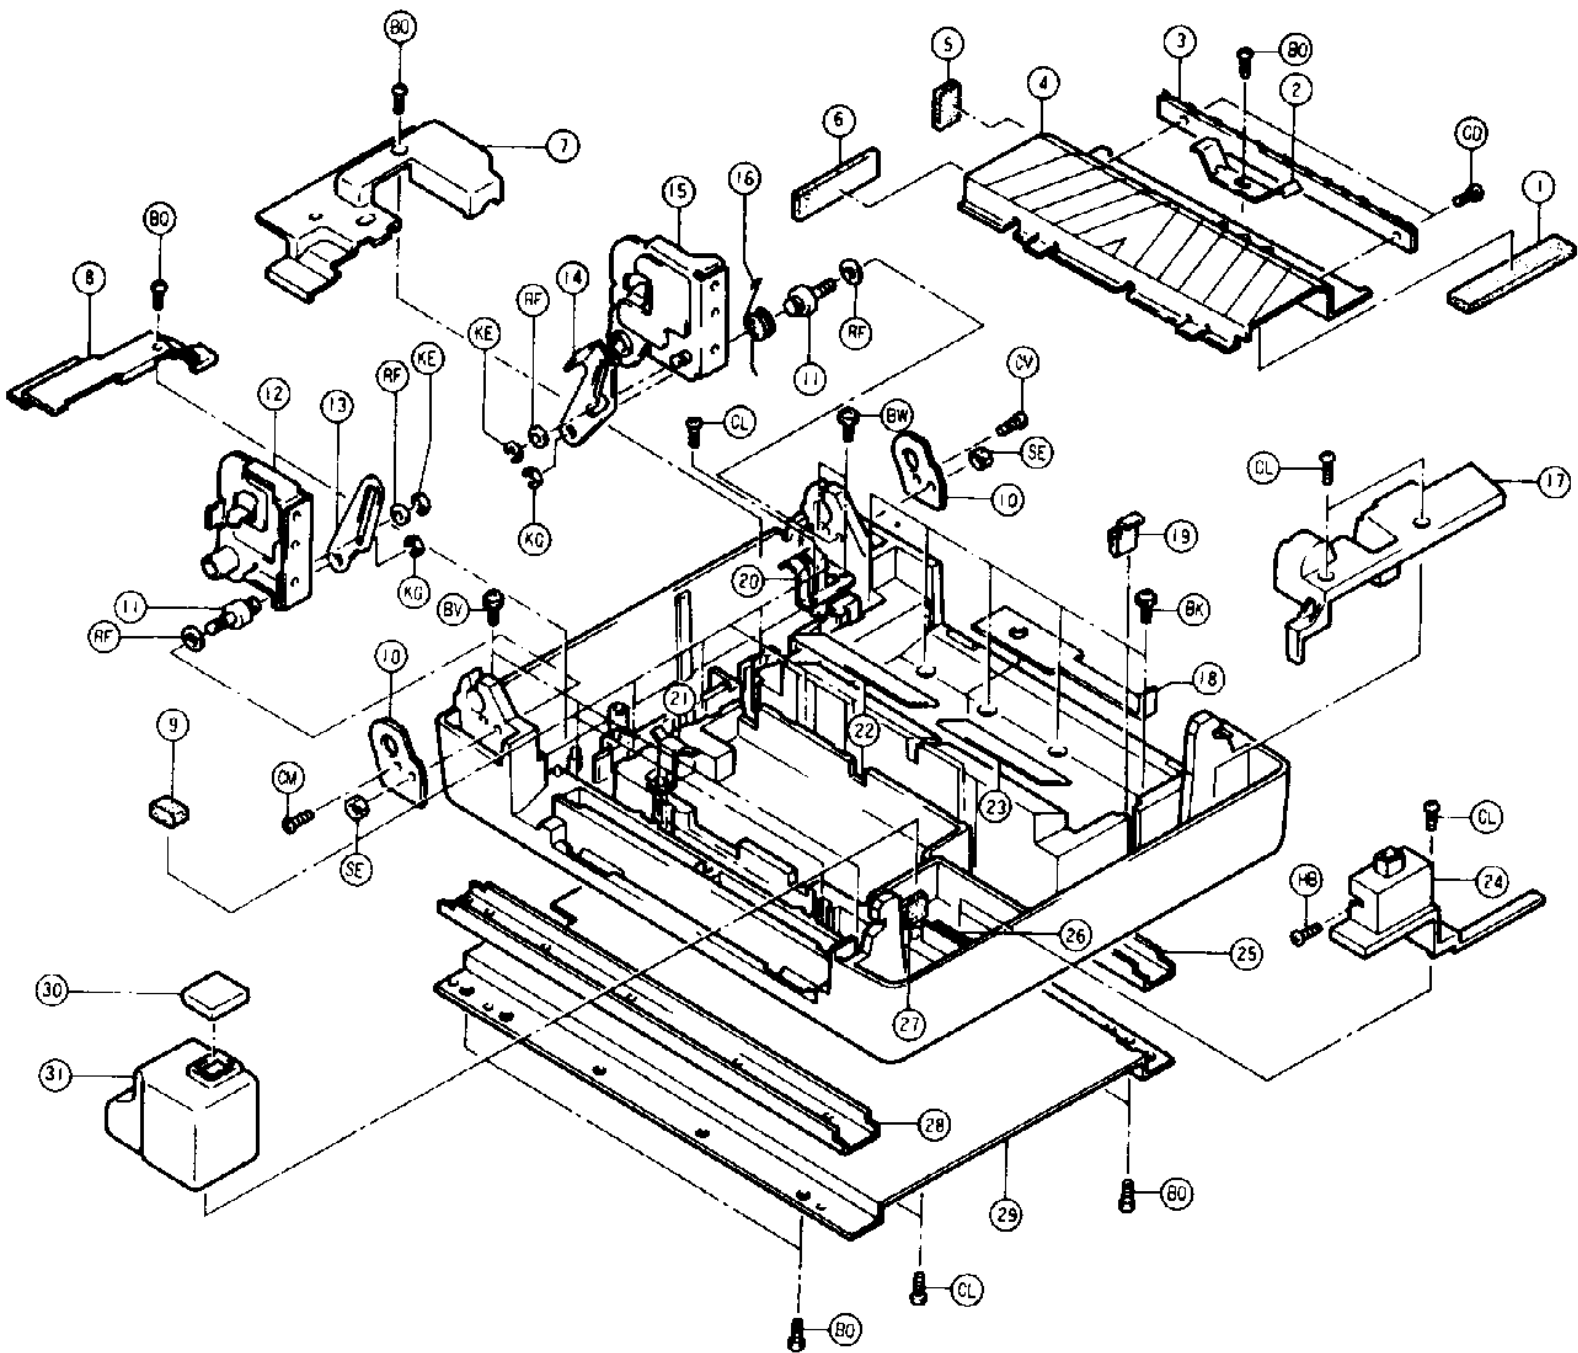

Ref No.	Part Code	Description	Quantity
03-001	5MVS618RB005	Seal A	1
03-002	5MMX641LJ001	TC UP Spring	1
03-003	5MMX852AJ001	TC Discharger	1
03-004	5MMU833SM001	Paper Guide Plate	1
03-005	5MVS218RB005	Seal D	1
03-006	5MVS618RB003	Seal C	1
03-007	5MVX764SB002	Inner Cover RB	1
03-008	5MVX743SB003	Inner Cover RA	1
03-009	5MVB222RB001	Cord Press	9
03-010	5MMS657SL010	Base Hinge Plate	2
03-011	5MMT321LJ001	Pin Stopper	2
03-012	5MMX763SL006	Frame Arm L	1
03-013	5MMS637SL003	Stopper L	1
03-014	5MML264SL001	Stopper R	1
03-015	5MMX763SL005	Frame Arm R	1
03-016	5MMW172LJ004	Stopper Spring	1
03-017	5MVX765SB002	Inner Cover FB	1
03-018	5MMS746SB001	Sensor Plate	1
03-019	5MMX222RJ001	Sensor Earth Plate	1
03-020	5MMX542RJ001	Earth Plate B	1
03-021	5MMX332RJ001	Fuser Earth Plate	2
03-022	5MVS742KN001	Guide Sheet R	1
03-023	5MVS642KN001	Guide Sheet F	1
03-024	5MVX765SB001	Inner Cover FA	1
03-025	5MMU832SB001	Base Support A	1
03-026	5MVS439RH002	Tank Pad B	1
03-027	5MVS428RH002	Tank Pad A	1
03-028	5MMU842SB001	Base Support B	1
03-029	5MMX881SL001	Shield Plate	1
03-030	5MVK431EN001	Toner Tank Cap	1
03-031	5MVK666EN001	Toner Tank	1

Fig.4 – Controller

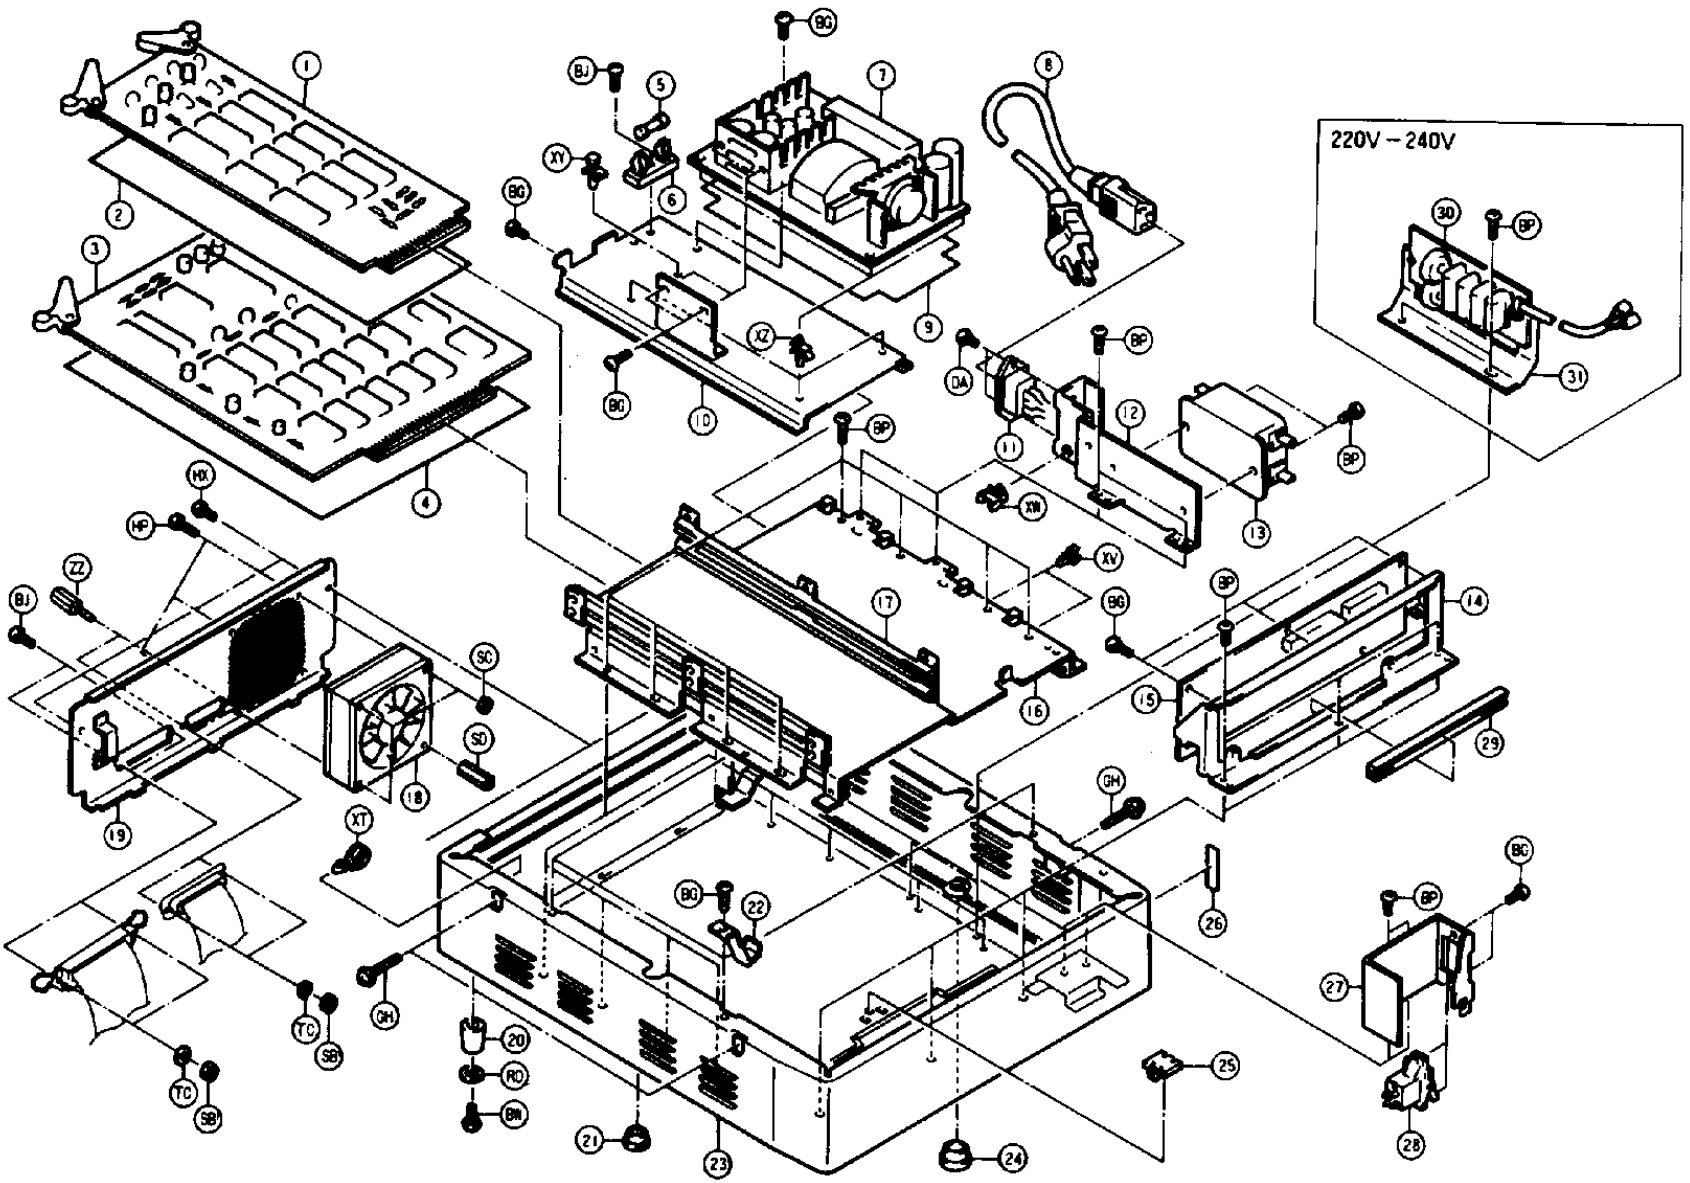

Ref No.	Part Code	Description	Quantity
04-001	5AAPRCZ001CA	Main Control PWB	1
04-002	5MVS872KF002	Insulator 3	1
04-003	5AAPRCZ002AA	Main Logic PWB	1
04-004	5MVS882KF001	Insulator 2	1
04-005	5EYFBQ50205**01	Line Fuse	1
04-006	5EYHF102004**01	Fuse Block	1
04-007	5AAEZW-1***3	DC Power Supply	1
04-008	5AACAC278EEA	AC Power Cord Assy	1
04-009	5MVS872KF001	Insulator 1	1
04-010	5MMC872SL001	P/S Base	1
04-011	5AACAC271GEA	Inlet Assy	1
04-012	5MMX765SL002	N.F Support	1
04-013	5EFNGT15J***01	Noise Filter	1
04-014	5MMC865SL003	M PWB Support	1
04-015	5AAPRZZ002AA	Mother Board Assy	1
04-016	5MMX886SL001	PWB Support	1
04-017	5MVC811CL001	PCB Guide Rail	6
04-018	5EZNF1202501*01	Fan Motor B	1
04-019	5MMS876SM014	Back Panel	1
04-020	5MMM322RX001	Cont Box Foot	4
04-021	5MVF222NB002	Hole Plug S	1
04-022	5MMZ232RJ001	Earth Plate	4
04-023	5AAVCASE*062	Controller Box Assy	1
04-024	5MVF222NB001	Hole Plug L	1
04-025	5MVX221SB007	Guide Parts	1
04-026	5MMC543SL001	SW Label	1
04-027	5MMU553SL003	SW Support	1
04-028	5ESC020103***01	Main Switch	1
04-029	5MVU711NW001	Edging	1
04-030	5AAPRZZ008AA	Noise Filter PWB	1
04-031	5MMZ742SL004	PWB Holder	1


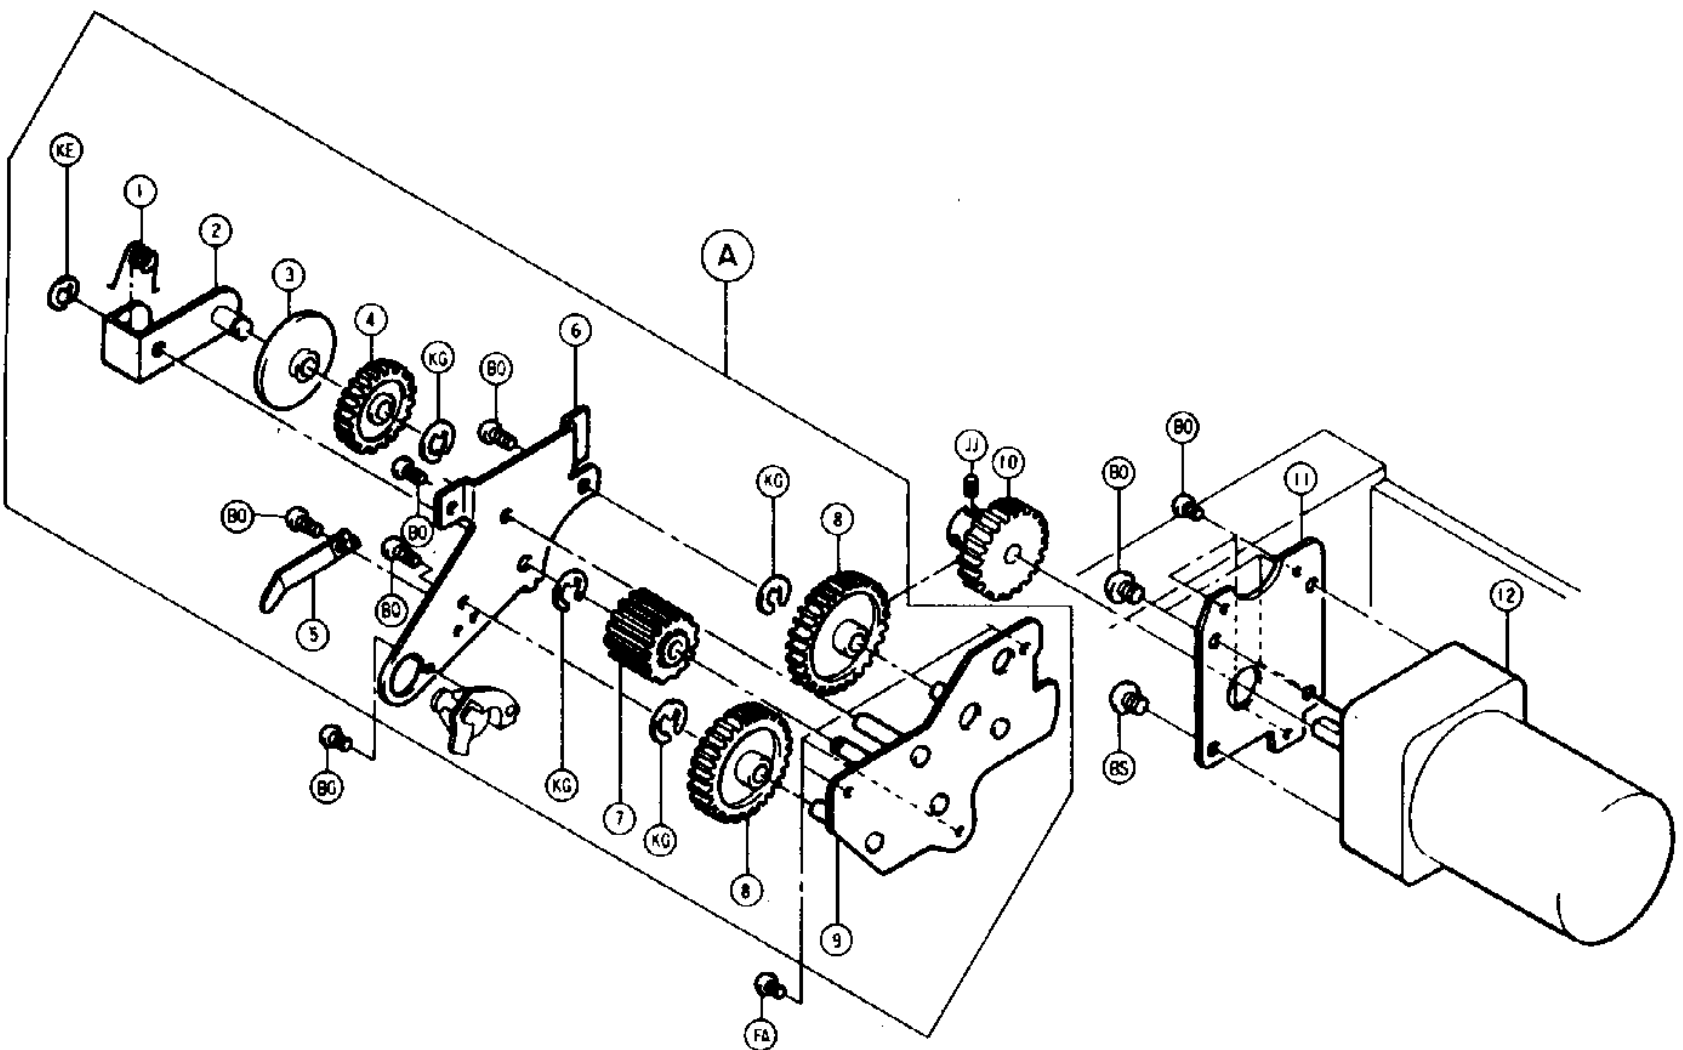


Fig.5 - Drive Mechanism

Ref No.	Part Code	Description	Quantity
05-00A	5AAYF1010*78	Drive Unit	1
05-001	5MMW261LJ021	Joint Spring	1
05-002	5MMX642SL005	Joint Gear Plate	1
05-003	5MVM197DN001	Collar 40	1
05-004	5MVG148DN008	Gear Z36	1
05-005	5MMX511RJ001	Drum Earth	1
05-006	5MMS767SL001	Plate B	1
05-007	5MVG138DN003	Table CL Gear Z27	1
05-008	5MMG159SX002	Gear Z48	2
05-009	5MMX766SL003	Plate A	1
05-010	5MMG138SX005	Motor Gear Z30	1
05-011	5MMS667SL003	Motor Plate	1
05-012	5EZNS180R401*01	DC Motor Assy	1


Fig.6 – Paper Feed Unit

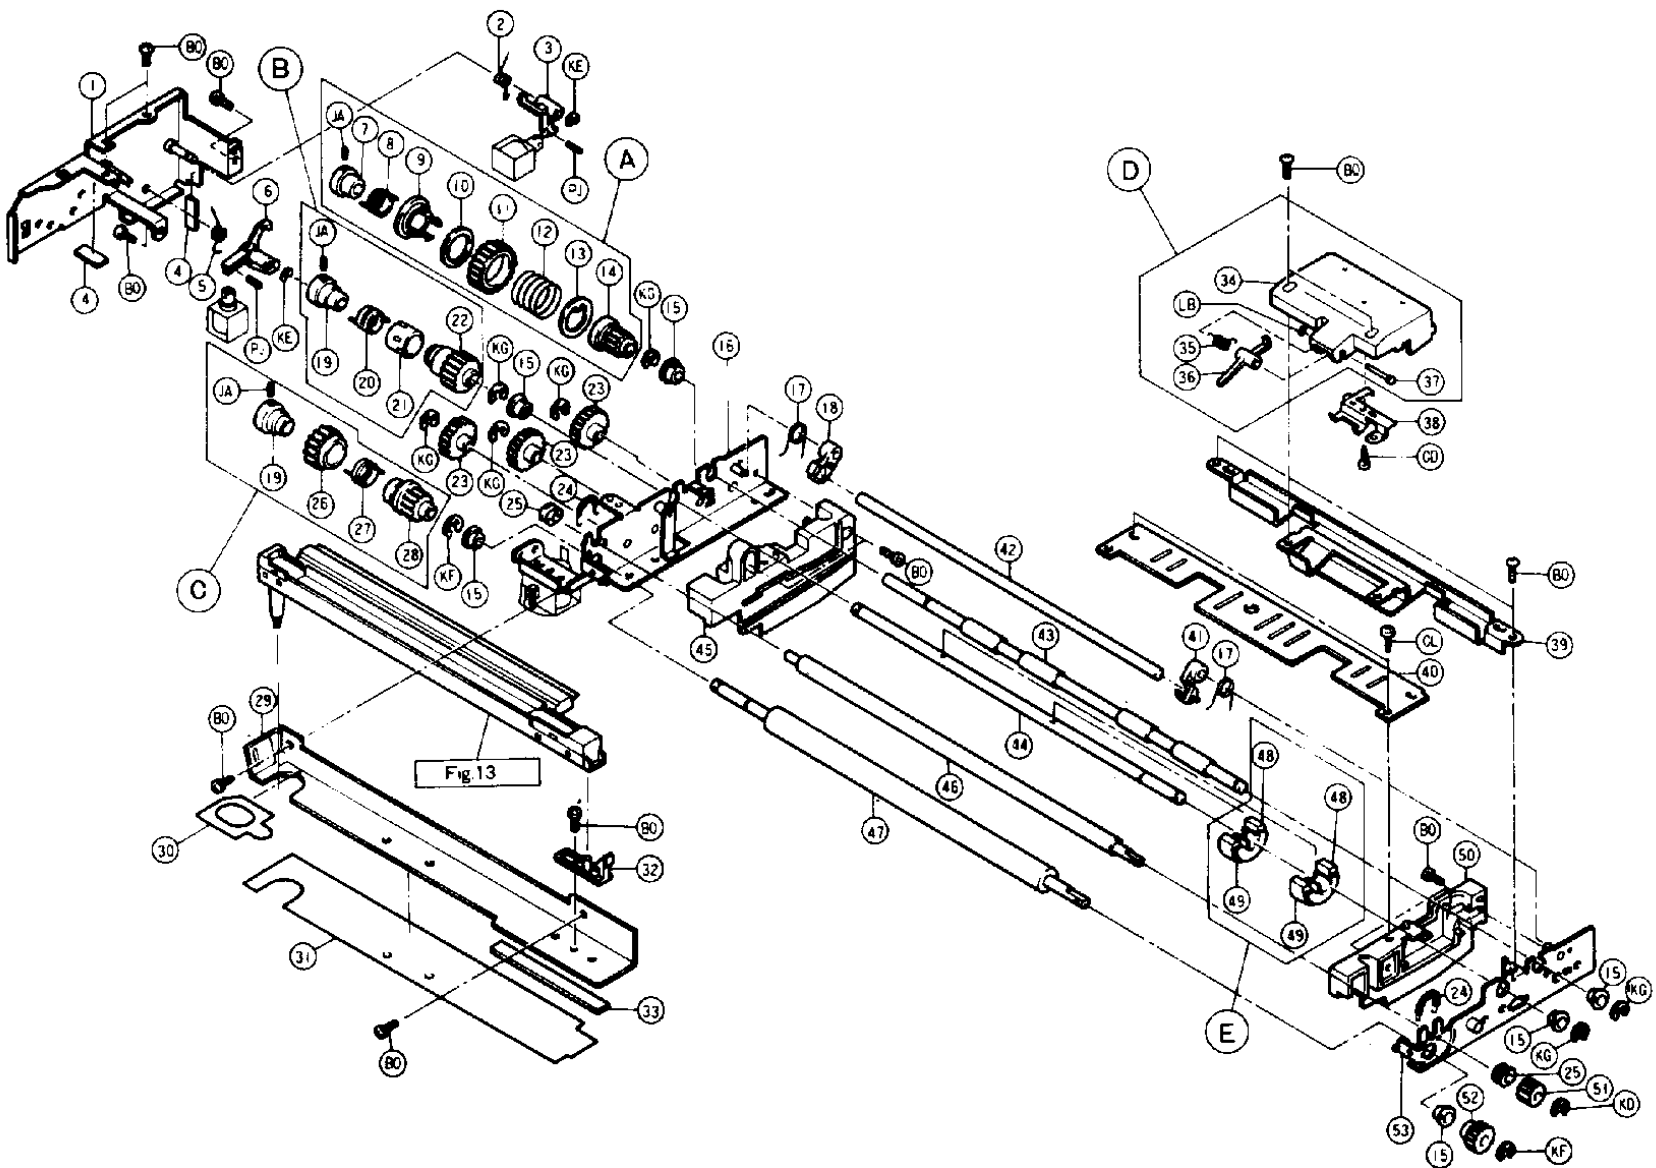

Ref No.	Part Code	Description	Quantity
06-000	5AAYF1010*18	Paper Feed Unit	1
06-002	5MMW171LJ004	M Feed CL Cam Spring	1
06-003	5MVX442DN001	M Feed CL Cam Lever	1
06-004	5MVS227RB003	Solenoid Pad	2
06-005	5MMW171LJ003	Feed CL Cam Spring	1
06-006	5MVX552DN001	Feed CL Cam Lever	1
06-00A	5AAVCLTCH002	Manual Feed Clutch	1
06-007	5MMM277SY001	M Feed Clutch Boss	1
06-008	5MMW171SY003	M Feed Wrap Spring	1
06-009	5MVM288DN002	Ratchet Sleeve	1
06-010	5MVS807XX001	Brake Ring	1
06-011	5MVM188DN001	M Feed CL Ratchet	1
06-012	5MMW481LJ001	M Feed CL Spring	1
06-013	5MVM180DN001	Spring Stopper	1
06-014	5MVG127DN018	Feed Clutch Gear Z16	1
06-015	5MMM176CJ001	Metal Bush KD	6
06-016	5MMX776SL001	Feed Unit Flame R	1
06-017	5MMW171LJ002	M Feed Roller Spring	2
06-018	5MVX322DB001	MFR Tension Bush R	1
06-00B	5AAVCLTCH001	Paper Feed Clutch	1
06-019	5MMM277SX001	Feed Clutch Boss	2
06-020	5MMW171SY002	Feed Wrap Spring	1
06-021	5MVM280DN001	Feed Clutch Cam	1
06-022	5MVG138DN012	Feed Clutch Gear Z26	1
06-023	5MVG138DN011	Feed Unit Gear Z28	3
06-024	5MMW241LJ009	Regist Spring	2
06-025	5MMM121XJ001	Regist Roller Bush	2
06-00C	5AAVCLTCH003	Regist Clutch	1
06-026	5MVM288DN001	Regist Clutch Cam	1
06-027	5MMW171SY001	Regist Wrap Spring	1
06-028	5MVG127DN019	Regist CL Gear Z16	1
06-029	5MML833SL002	TC Supporter	1
06-030	5MVS533KN001	Blind Sheet	1
06-031	5MVS852KN001	Cover Sheet	1
06-032	5MVX532DD002	TC Guide	1
06-033	5MVS618RB004	Seal B	1
06-00D	5AAYF1010*33	Feed Sensor Assy	1
06-034	5MVX663SB006	Sensor Cover	1
06-035	5MMW161LJ009	Feed Sensor Spring	1
06-036	5MVX522SB014	Feed Sensor Actuator	1
06-037	5MMT353SZ002	Actuator Shaft	1
06-038	5MMX543LJ001	Sensor Bracket	1
06-039	5MMX865SN001	M Feed Paper Shoot A	1
06-040	5MMS856SN001	M Feed Paper Shoot B	1

Ref No.	Part Code	Description	Quantity
06-041	5MVX322DB002	MFR Tension Bush F	1
06-042	5MMT866SN002	M Feed Roller B	1
06-043	5MMT876SN007	M Feed Roller A	1
06-044	5MMT866SN001	Feed Roll Shaft	1
06-045	5MVX764SB001	Cassette Guide R	1
06-046	5MMT866SN003	Regist Roller A	1
06-047	5MMT876SN006	Regist Roller B	1
06-00E	5AAMF1000*05	Feed Tyre Assy	2
06-048	5AAMF1000*05	Feed Wheel	2
06-049	5AAMF1000*05	Feed Tyre	2
06-050	5MVX763SB003	Cassette Guide F	1
06-051	5MVG127DN017	Regist Gear Z20	1
06-052	5MVG147DN001	Regist Gear Z32	1
06-053	5MMX775SL001	Feed Unit Frame F	1

Fig. 7 – Face Down Unit

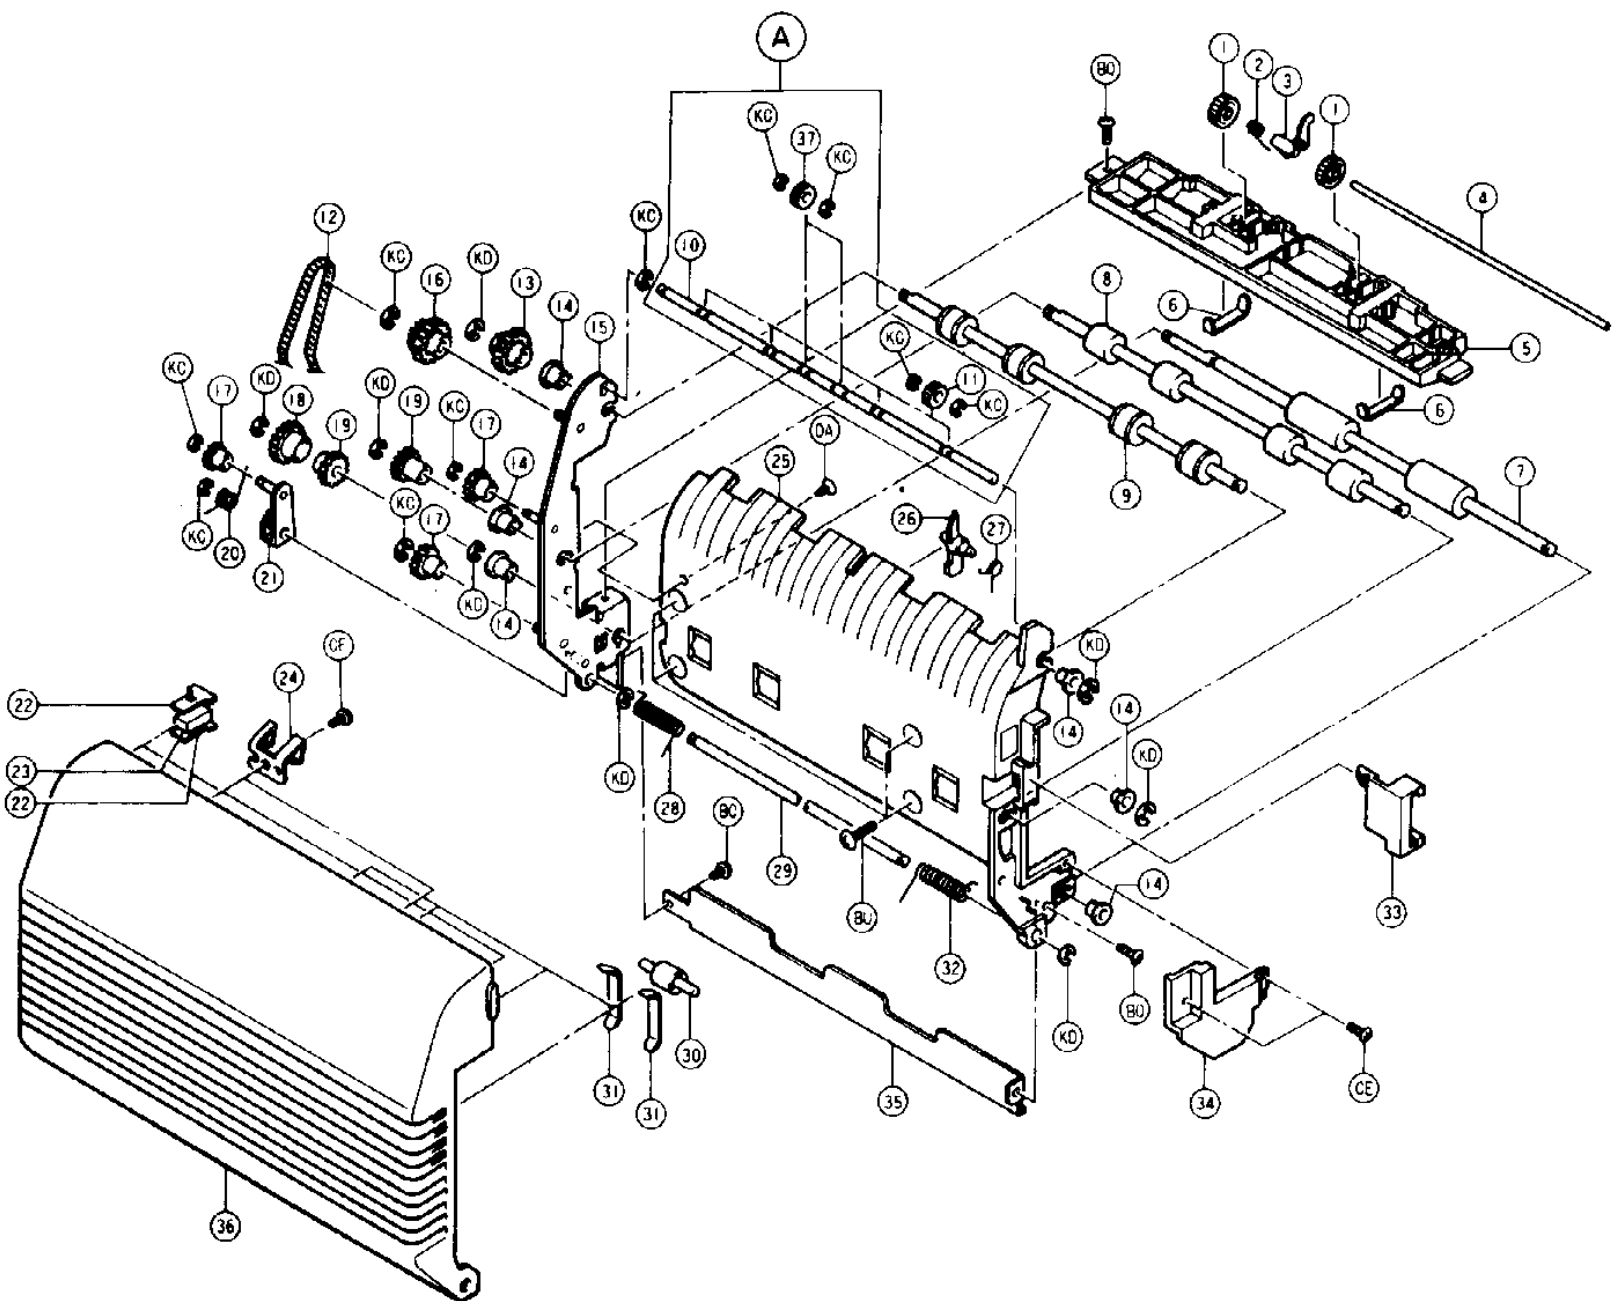

Ref No.	Part Code	Description	Quantity
07-000	5AAY1010*20	Face Down Unit	1
07-001	5MVM177DB003	Outlet Pulley	2
07-002	5MVX422DB002	Jam Actuator Spring	1
07-003	5MVX422DB002	Jam Actuator	1
07-004	5MMT833SN002	FD Enter Shaft	1
07-005	5MVB852CB001	FD Paper Guide	1
07-006	5MMU131LJ002	FD Enter Spring	2
07-007	5MMT876SN004	FD Roller B	1
07-008	5MMT876SN003	FD Roller A	1
07-009	5MMT876SN005	FD Roller C	1
07-0A	5AAVPULLY007	FD Pulley Assy	1
07-010	5MMT844SN001	FD Exit Shaft	1
07-011	5MVM170DB002	FD Pulley A	4
07-012	5MMX911SJ001	Ladder Chain	1
07-013	5MVG127DN016	Gear Z20 B	1
07-014	5MVM176DN009	Bearing	6
07-015	5MMX876SL003	Side Plate	1
07-016	5MVG027DN001	Gear Sprocket	1
07-017	5MVG417DN001	Ladder Sprocket 10T	3
07-018	5MVG127DN015	FD Joint Gear	1
07-019	5MVG427DN001	Ladder Sprocket 12T	2
07-020	5MMW161LJ005	Idle Spring	1
07-021	5MMX422SL003	Idle Bracket	1
07-022	5MMS216SN003	FD Magnet Plate	4
07-023	5MMS218FJ001	FD Magnet	2
07-024	5MMX222LJ003	FD Exit Spring	2
07-025	5MVB876SH007	FD Spring	1
07-026	5MVX422DB003	FD Jam Actuator	1
07-027	5MMW163LJ001	FD Actuator Spring	1
07-028	5MMW362LJ003	FD Spring R	1
07-029	5MMT866SZ014	FD Cover Shaft	1
07-030	5MVM474DB001	FD Pulley B	4
07-031	5MMU131LJ001	FD Pressure	8
07-032	5MMW362LJ002	FD Spring F	1
07-033	5MVB332SH001	FD Guide Lid	1
07-034	5MVX662SH001	FD Switch Cover	1
07-035	5MMX864SB001	FD Outlet Cover	1
07-036	5MVB876SH006	FD Cover	1
07-037	5MVM177DB005	FD Pulley C	2

Ref No.	Part Code	Description	Quantity
08-000	5AAYF1010*14	SCANNER UNIT	1
08-001	5MVX8755B001	SCANNER COVER	1
08-002	5MVS422SB001	SCANNER COVER LID	1
08-003	5AAVFRAME034	LENS SUPPORT ASSY	1
08-004	5MVX622GC001	LENS A	1
08-005	5MVX621GC001	LENS B	1
08-006	5MMX632SB001	LENS SPRING A	1
08-007	5MMX321SB001	MIRROR STOPPER A	2
08-008	5MVS729GC001	MIRROR A	1
08-009	5MMX331LJ001	MIRROR STOPPER BF	1
08-010	5MVS719GC001	MIRROR B	1
08-011	5MMX331LJ002	MIRROR STOPPER BR	1
08-012	5MVS117GC001	MIRROR C	2
08-013	5AAVHOLDR008	MIRROR HOLDER ASSY	1
08-014	5AAVHOLDR009	MIRROR BASE ASSY	1
08-015	5MVF174DB001	S MIRROR CAM	1
08-016	5MVX222DB001	SENSOR HOLDER	1
08-017	5AAMW1****04	POLYGON UNIT	1
08-0A	5AAVLASER001	LASER MODULE	1
08-018	5AAPRZZ001AA	LD PWB	1
08-019	5MMS439AD001	LASER BRACKET	1
08-020	5EDDHL7801E1201	LASER DIODE	1
08-021	5MMF387AD001	S LENS BRACKET	1
08-022	5MMT166AJ001	APERTURE	1
08-023	5MVM13OGC001	SELFOC LENS	1
08-024	5MMM374AD001	S LENS HOLDER	1
08-025	5MVX876KB001	SCANNER FRAME	1
08-026	5MMX311LJ001	MIRROR C SUPPORT	1
08-027	5MMX331SB001	C LENS SUPPORT	1
08-028	5MVS118GC001	CLYNDRICAL LENS	1
08-029	5MVX822AC001	TORIC LENS	1
08-030	5MVS827GC001	COVER GLASS	1
08-031	5MVS328RJ001	TORIC PAD	2
08-032	5MMU811SJ001	T LENS GUIDE	1
08-033	5MVS819RB001	SCANNER SEAL (U.S.A. 120v)	1
08-034	5AAPRS5004AA	PD PWB	1


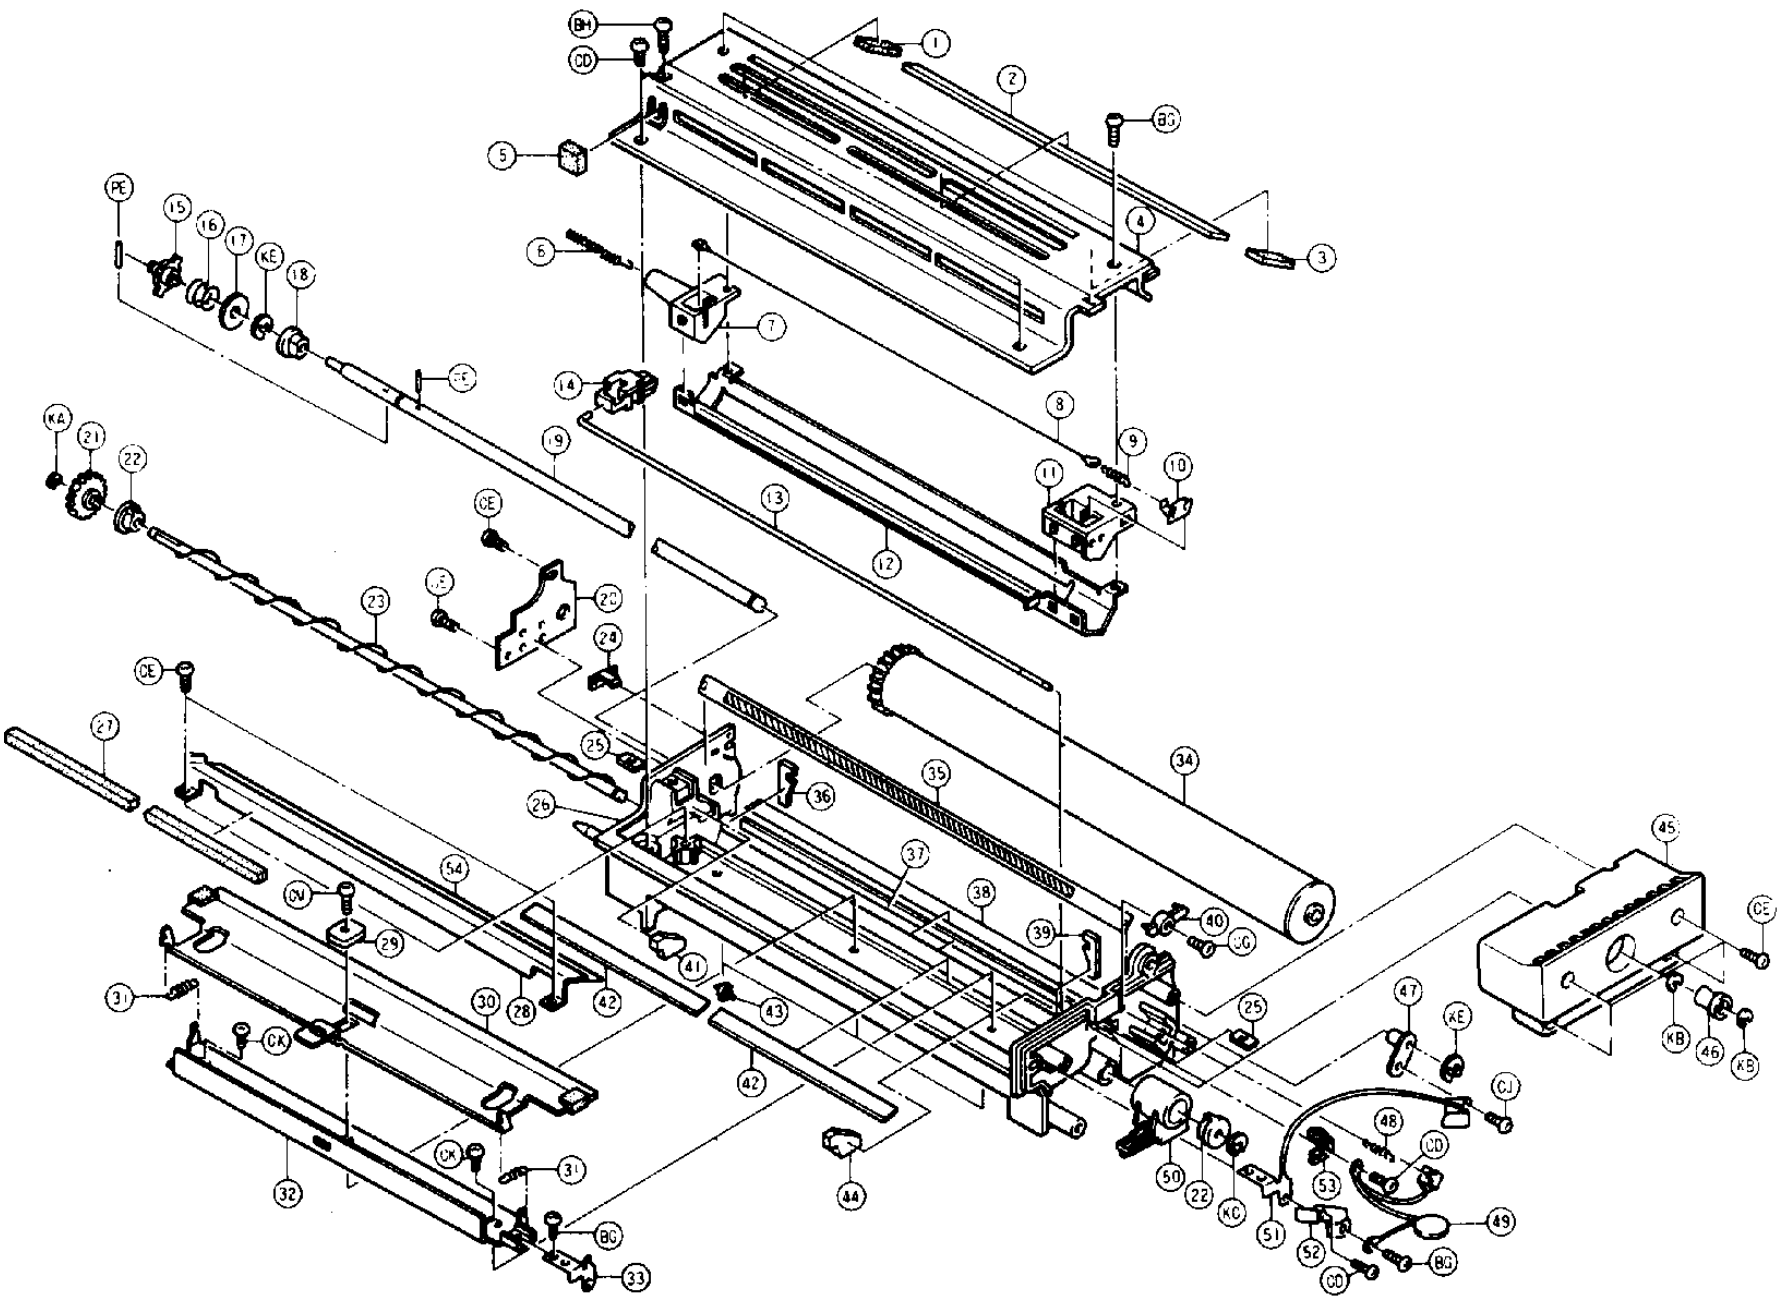


Fig.9 – Drum Cartridge

Ref No.	Part Code	Description	Quantity
09-000	DK-3	DRUM KIT	1
09-001	5MVS218RB006	DRUM WIPER R	1
09-002	5MVS816RX001	COVER MAGNET	1
09-003	5MVS228RB005	DRUM WIPER F	1
09-004	5MVX862CB002	DRUM COVER	1
09-005	5MVS228NN001	ERASE CLEANING PAD	1
09-006	5MMW351LJ004	MCH SPRING	1
09-007	5MVX532CB001	MCH END BLOCK R	1
09-008	5MMW801XJ004	CORONA WIRE	1
09-009	5MMW131LJ001	CHG SPRING B	1
09-010	5MMX221RJ002	MCH WIRE HOOK F	1
09-011	5MVX432CB001	MCH END BLOCK F	1
09-012	5MMU822LX001	MCH SHIELD	1
09-013	5MMT833SB001	MCH CLEANER ROD	1
09-014	5AAVCLEAN005	MCH CLEANER ASSY	1
09-015	5MVX221DN004	DRUM ACTUATOR	1
09-016	5MMW271LJ009	ACTUATOR SPRING	1
09-017	5MMS226SL002	DRUM SPRING STOPPER	1
09-018	5MVM177DJ001	DRUM BUSHING R	1
09-019	5MMT866LD002	DRUM SHAFT	1
09-020	5AAPRZZ004AA	DRUM FUSE BOARD	1
09-021	5MVG127DN026	SCREW GEAR Z20	1
09-022	5MVM176DN008	SCREW BUSHING	2
09-023	5MMT864LD001	CLEANER SCREW	1
09-024	5MML211RJ001	SEAL EARTH TAB A	1
09-025	5MMS217SL002	M3 PLATE	2
09-026	5MVB866CB002	DRUM FRAME	1
09-027	5MVS819RN001	REFRECTOR SHEAL	1
09-028	5MMX832AJ001	ERASE REFLECTOR	1
09-029	5MMT175SB001	BLADE BUSHING	1
09-030	5AAVBLADE005	CL BLADE ASSY	1
09-031	5MMW161LJ016	CLEANER SPRING	2
09-032	5MMX832SL002	BLADE HOLDER	1
09-033	5MML232CJ001	BLADE EARTH TAB	1
09-034	5AAVDRUM*024	DRUM ASSY	1
09-035	5MMS811LJ003	MCH GRID	1
09-036	5MVS418LX002	BLADE SEAL R	1
09-037	5MVS816RX002	SEAL MAGNET	1
09-038	5MVS812KN001	DRUM SEAL	1
09-039	5MVS418LX001	BLADE SEAL F	1
09-040	5MVX311CB01%	MCH F STOPPER	1
09-041	5MVS229RN002	REFRECTOR SHEAL R	1
09-042	5MVS721KN001	CLEANER PLATE	2
09-043	5MVM263DB002	GUIDE SPUR RING	3


Ref No.	Part Code	Description	Quantity
09-044	5MVS229RN001	REFLECTOR SEAL F	1
09-045	5MVB665CB001	DRUM FRAME COVER F	1
09-046	5MVM2765D001	MCH CLEANER KNOB	1
09-047	5MMF131XJ001	DRUM BUSHING F	1
09-048	5MMW151LJ002	MCH GRID SPRING	1
09-049	5AAXD1002GEA	ZENER DIODE ASSY	1
09-050	5AAVHOLDR005	SCREW BRACKET ASSY	1
09-051	5AACCNAN9GEA	PCA2033	1
09-052	5MMX221RD001	DRUM EARTH PLATE	1
09-053	5MMX221RJ001	MCH GRID TAB	1
09-054	5MVS821KN003	BLADE SEAL	1

Fig.10 – Developer Unit

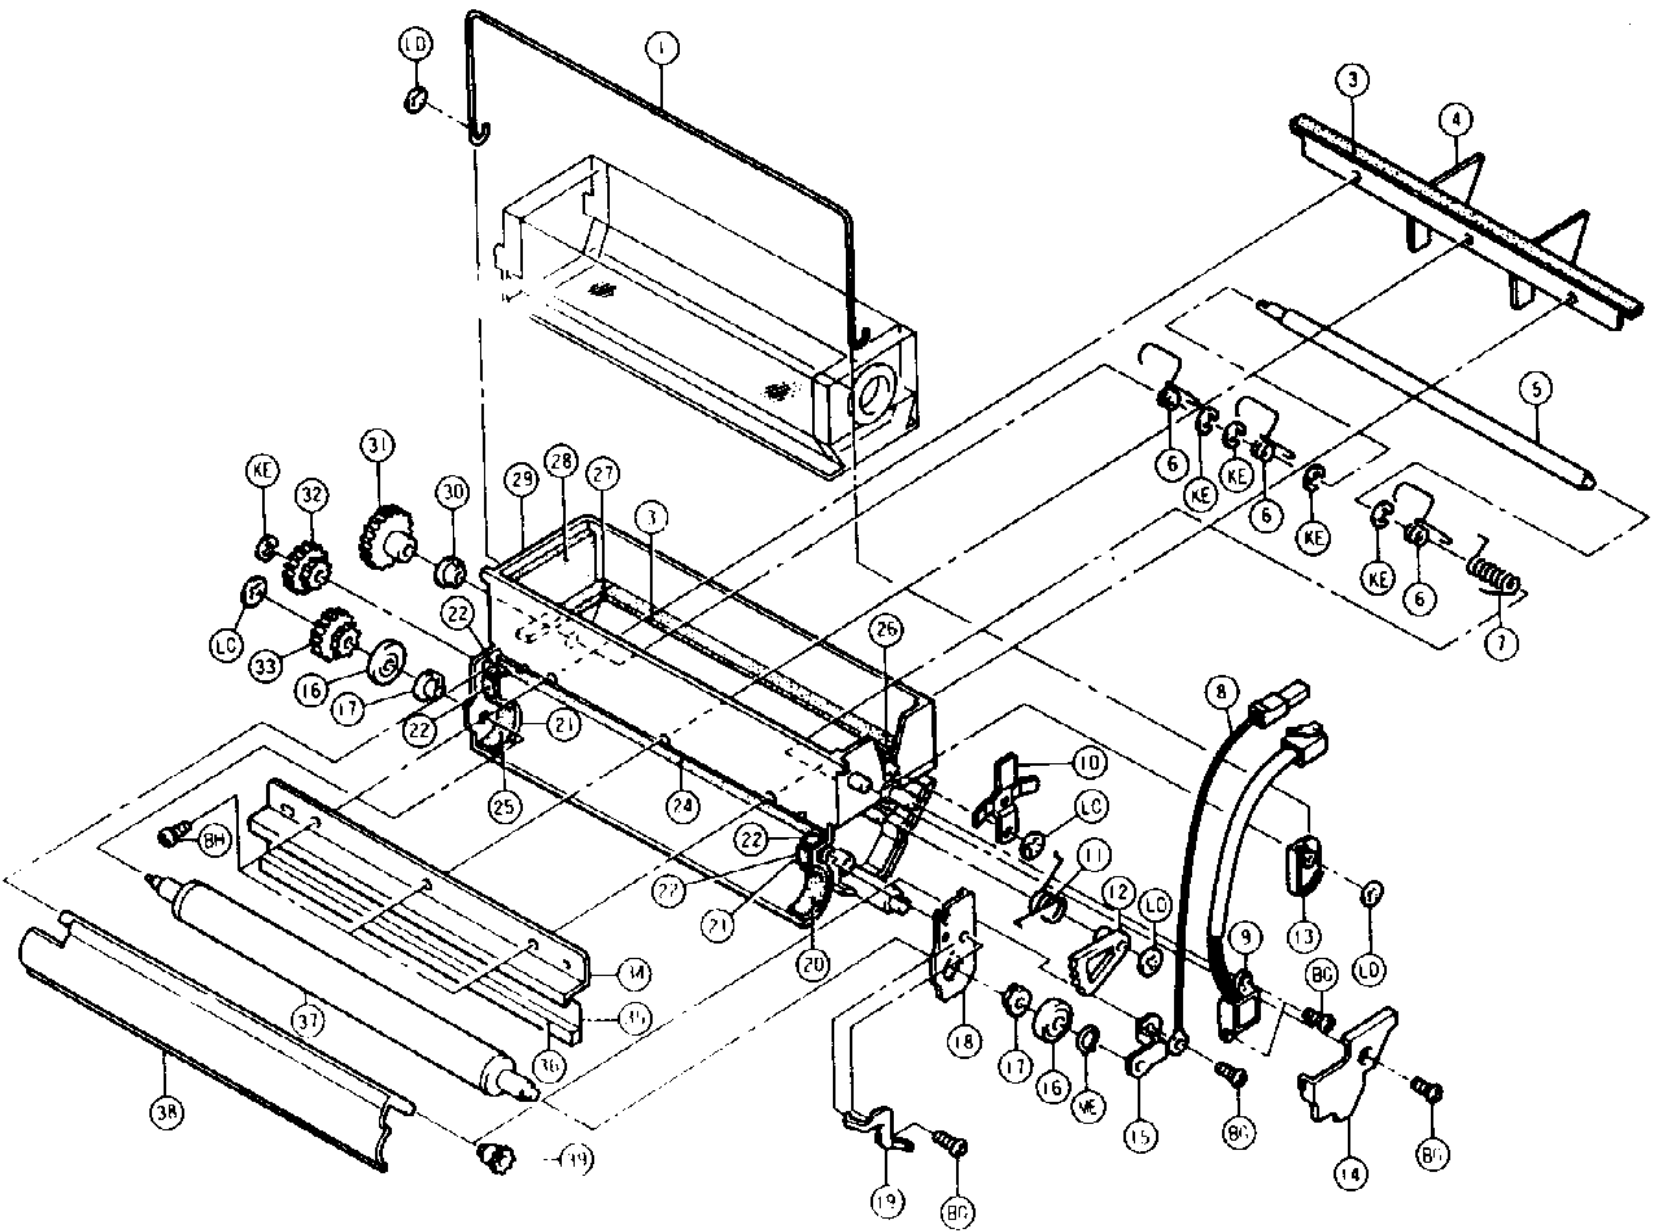

Ref No.	Part Code	Description	Quantity
10-000	DV-4	DEVELOPER UNIT	1
10-001	5MMW903LJ001	DLP HANDLE	1
10-003	5MVS818RB002	DLP SEAL A	2
10-004	5MMX853SL001	DLP BLADE BKT B	1
10-005	5MMT8645N001	PADDLE SHAFT	1
10-006	5MMW667LJ001	DLP SPRING	3
10-007	5MMW461LJ009	TONER SPRING	1
10-008	5AACCNAP3GEA	PCA5040	1
10-009	5AAXTS003GEA	TONER SENSOR ASSY B (with Life Fuse)	1
10-009	5AAXTS002GEA	TONER SENSOR ASSY (w/o Life Fuse)	1
10-010	5MVX511NN003	CARTRIDGE STOPPER	1
10-011	5MMW161LJ010	Z50 SPRING	1
10-012	5MVG159DN007	GEAR Z50	1
10-013	5MVX311NN028	DLP COVER CAM	1
10-014	5MVX651SB003	DLP SIDE COVER	1
10-015	5MMZ132RJ001	MAGNET BRACKET	1
10-016	5MMM188DN002	DLP PULLEY	2
10-017	5MVM177DN003	DLP BEARING	2
10-018	5MVX531SB001	DLP SIDE FRAME	1
10-019	5MMX333RJ001	MAGNET BKT B	1
10-020	5MVS818RB001	DLP SEAL C	1
10-021	5MVS312KN001	DLP SEAL J	2
10-022	5MVS219RB001	DLP SEAL G	4
10-024	5MVS518LN001	DLP SEAL F	1
10-025	5MVS518LN002	DLP SEAL E	1
10-026	5MVS528RN001	DLP SEAL H	1
10-027	5MVS618RB002	DLP SEAL B	1
10-028	5MVS529RX001	DLP SEAL K	1
10-029	5MVB866SB001	DLP CASE	1
10-030	5MVM176DN008	SCREW BUSHING	1
10-031	5MVG138DN015	GEAR Z28 M	1
10-032	5MVG138DN014	GEAR Z12-Z22	1
10-033	5MVG128DN001	GEAR Z14-Z20	1
10-034	5MMZ822BJ001	DLP BLADE BKT A	1
10-035	5MML821LJ002	DLP BLADE	1
10-036	5MVS818RX001	BLADE MAGNET	1
10-037	5AAVROLER010	MAGNET ROLLER	1
10-038	5MVX852SB003	ROLLER COVER	1
10-039	5MVG127DN025	GEAR Z11	1

Fig.11 – Fuser Unit

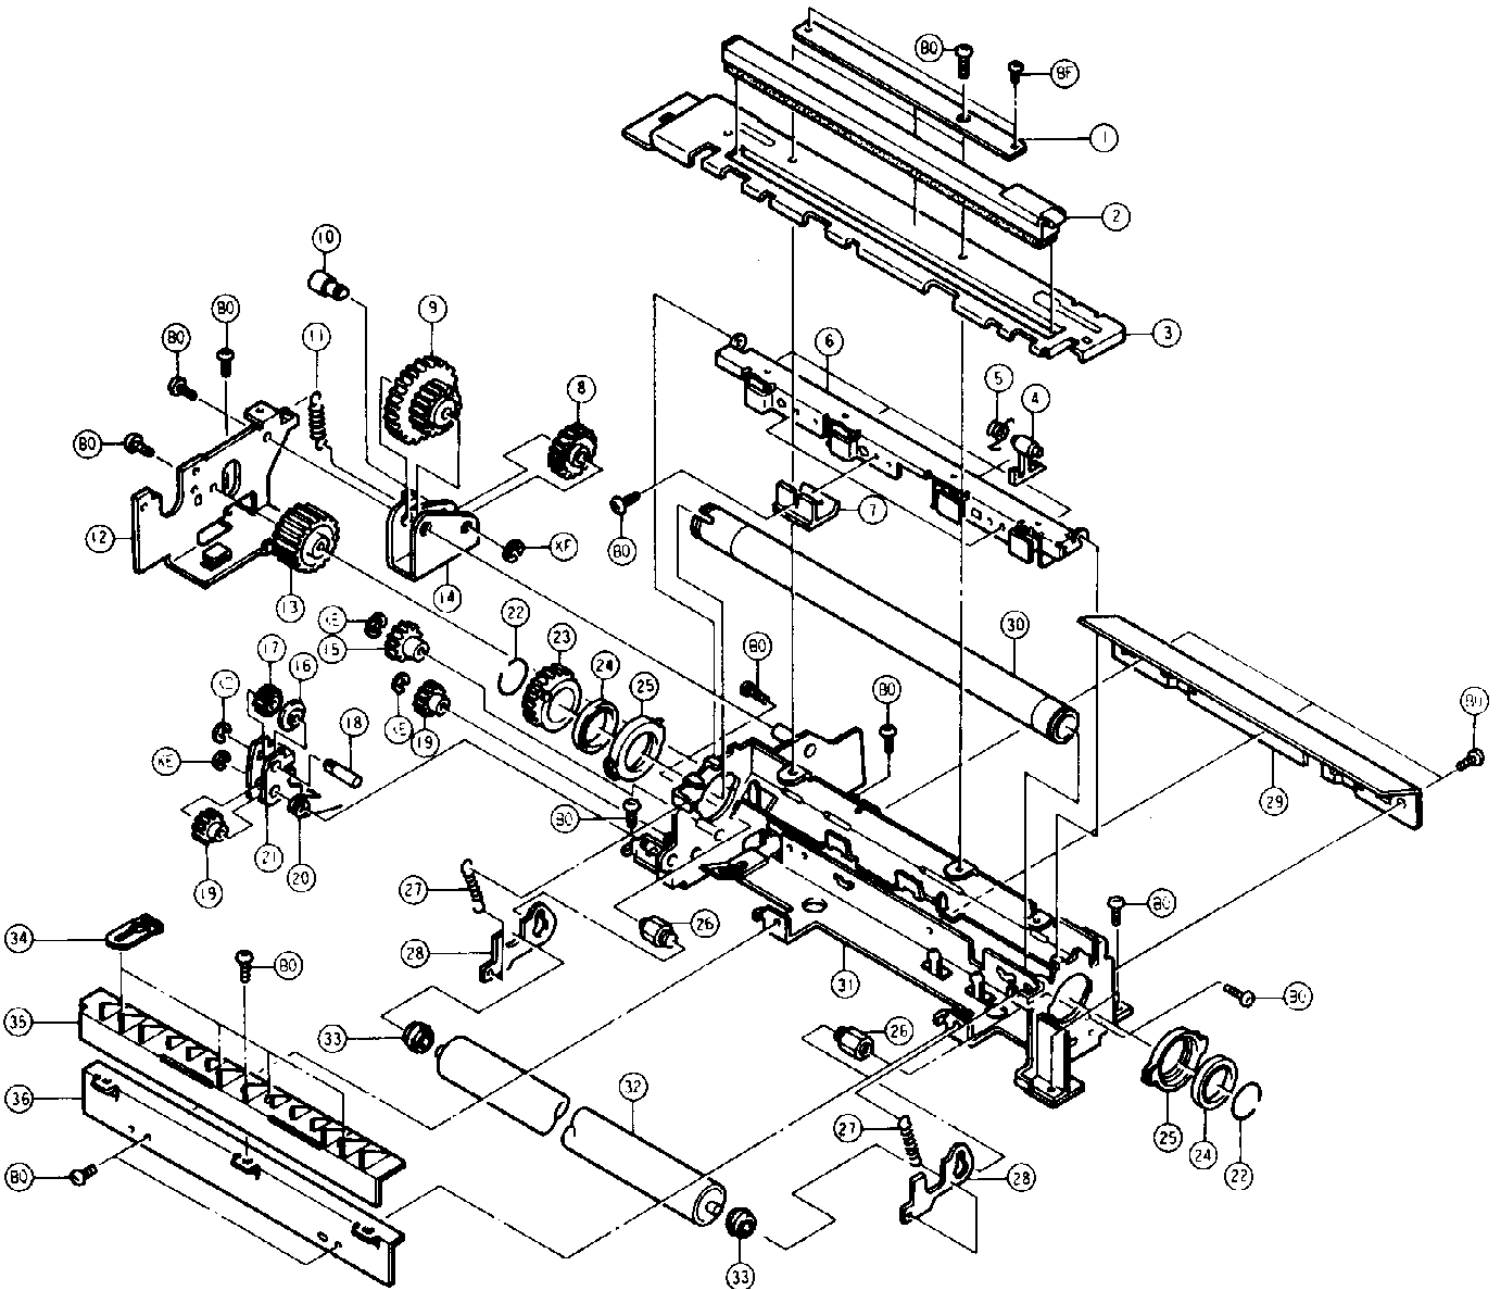

Ref No.	Part Code	Description	Quantity
11-000	FK-4	FUSER UNIT	1
11-001	5MVVL725WN05	FUSER COVER SHEET B	1
11-002	5A AVCLEAN006	ROLLER CLEANER	1
11-003	5MMX852SL001	FUSER COVER A	1
11-004	5MVX332XN001	SEPARATOR	4
11-005	5MMW161LJ013	SEPARATOR SPRING	4
11-006	5A AVFRAME033	FUSER COVER B	1
11-007	5MVL322XB01%	FUSER PAPER GUIDE B	3
11-008	5MVG138DN016	GEAR Z28	1
11-009	5MVG159DN006	FUSER GEAR Z31-Z43	1
11-010	5MMT311LJ001	GEAR PIN	1
11-011	5MMW161LJ011	GEAR SPRING	1
11-012	5MML763SL001	GEAR PLATE	1
11-013	5MVG148DN009	FUSER GEM Z35	1
11-014	5MMU553SL002	GEAR BRACKET	1
11-015	5MVG127DN021	FUSER GEAR Z20	1
11-016	5MVM186DN002	FUSER JOINT COLLAR	1
11-017	5MVG127DN01%	FUSER GEAR Z15 B	1
11-018	5MMT266LJ002	JOINT PIN	1
11-019	5MVG127DN020	FUSER GEAR Z15 A	2
11-020	5MMW161LJ015	FUSER JOINT SPRING	1
11-021	5MMX432SL002	FUSER JOINT PLATE	1
11-022	5MMW601SJ001	STOP RING	2
11-023	5MVG138XN002	FUSER GEAR Z28	1
11-024	5M BEA2520ZZ*	FUSER BEARING	2
11-025	5MVM188XN001	BEARING SLEEVE	2
11-026	5MMT266LJ003	PRESS PLATE PIN	2
11-027	5MMW361LJ017	FUSER SPRING	2
11-028	5MMS6375L004	PRESSURE PLATE	2
11-029	5A AVBRUSH009	PAPER SHOOT ASSY	1
11-030	5MMT877AX001	FIXING ROLLER	1
11-031	5MMX876SL004	FUSER FRAME	1
11-032	5MMT886SX009	PRESS ROLLER	1
11-033	5M BE688ZZNR*	PRESS ROLLER BEARING	2
11-034	5MMX321LJ006	SEPARATE PLATE	4
11-035	5MVX833CB002	FUSER PAPER GUIDE A	1
11-036	5MML832SL001	EXIT COVER	1

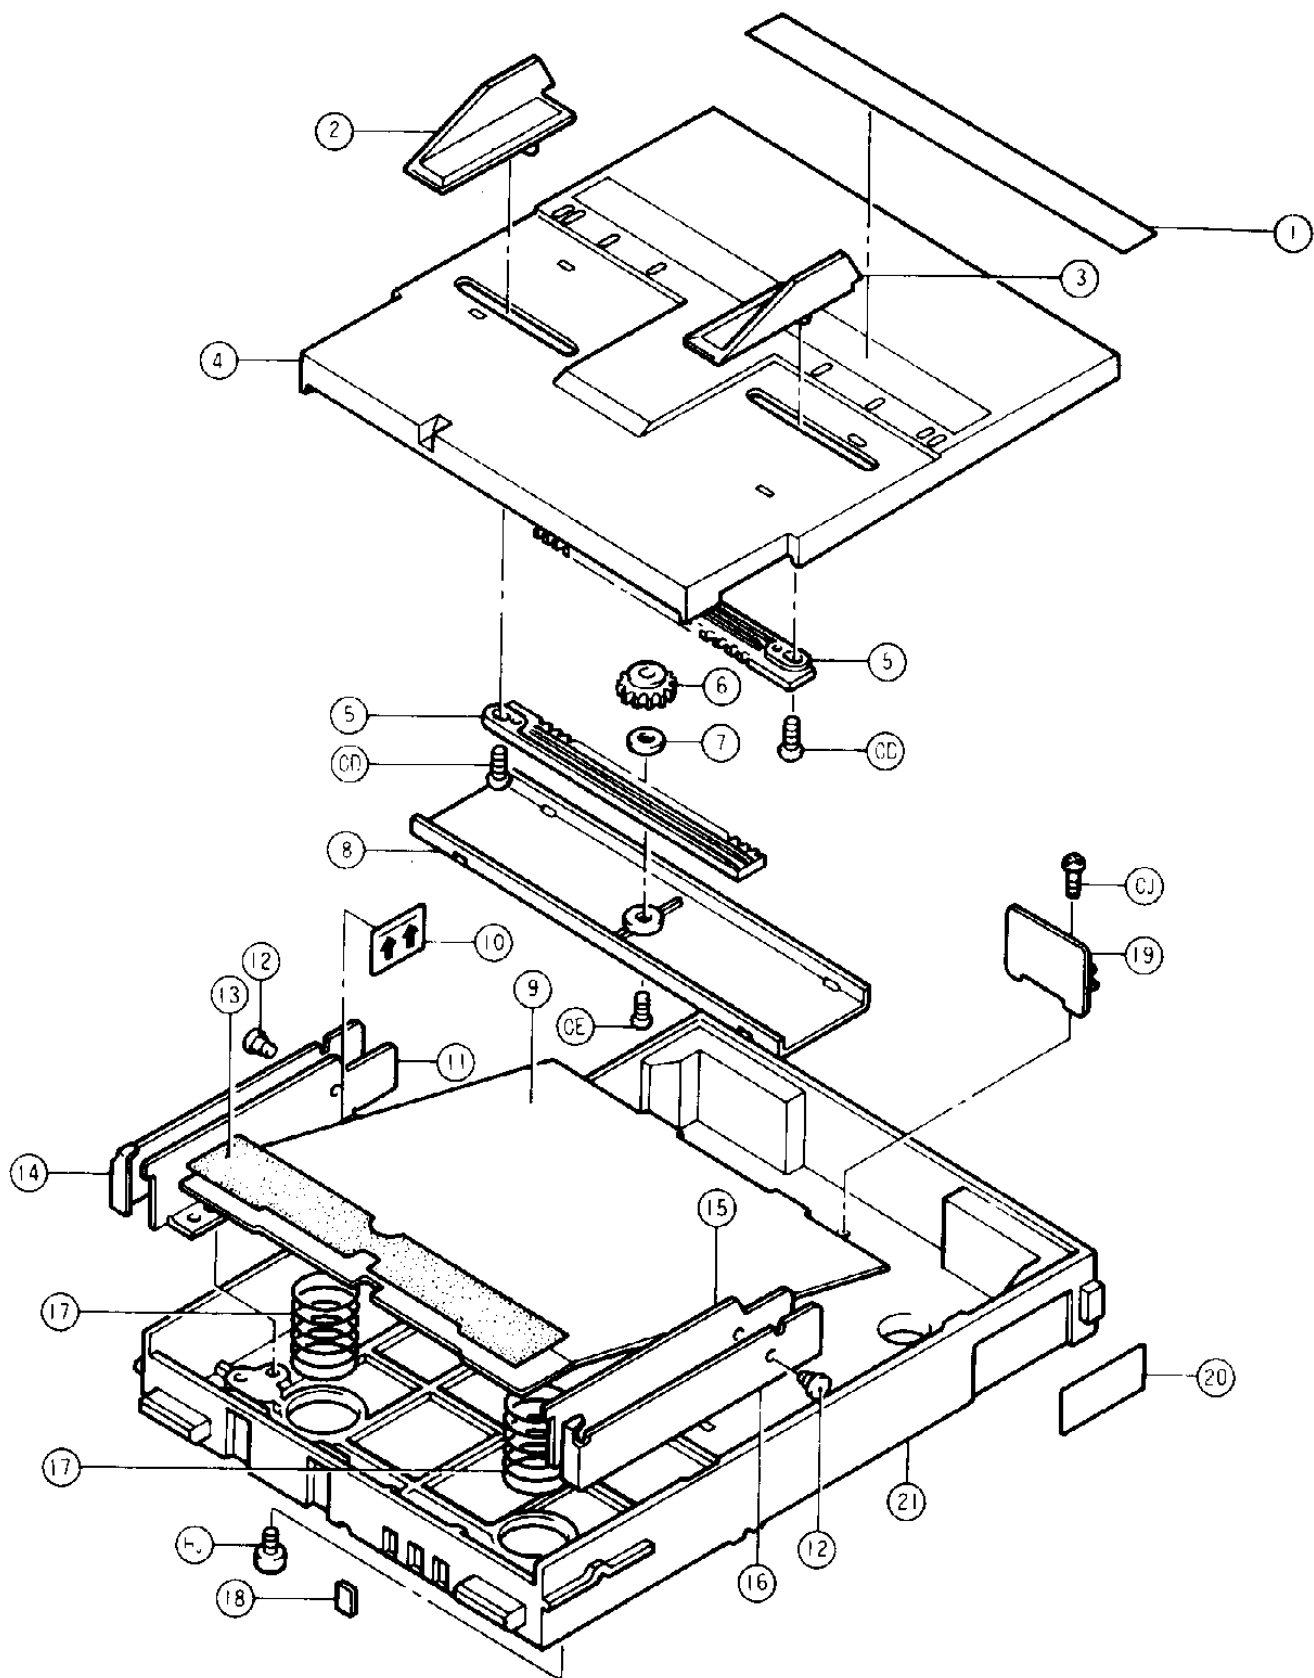


Fig.12 - Paper Cassette

Ref No.	Part Code	Description	Quantity
12-000	PC1-A4	PAPER CASSETTE	1
12-001	5MVVL835WN01	PAPER SIZE LABEL	1
12-002	5MVL632SH002	PAPER GUIDE MR	1
12-003	5MVL632SH001	PAPER GUIDE MF	1
12-004	5MVB882SH003	M FEED TRAY	1
12-005	5MVK721SN001	M FEED RACK	2
12-006	5MVG127DN024	GEAR Z20	1
12-007	5MVS227YN001	BRAKE PAD	1
12-008	5MVU861SH001	SLIDER COVER	1
12-009	5MMS8865Z047	PAPER BOTTOM LTR	1
12-009	5MMS886SZ046	PAPER BOTTOM A4	1
12-009	5MMS876SZ020	PAPER BOTTOM B5	1
12-010	5MVVL431WN13	PAPER LIMIT LABEL	1
12-011	5MML742SZ020	NAIL SUPPORT R	1
12-012	5MMT164LJ002	CASSETTE PIN	2
12-013	5MVS846LH002	PAD LETTER	1
12-013	5MVS846LH001	PAD A4	1
12-013	5MVS746LH001	PAD B5	1
12-014	5MMS737SZ003	NAIL R	1
12-015	5MML742SZ019	NAIL SUPPORT F	1
12-016	5MMS737SZ002	NAIL F	1
12-017	5MMW681LJ001	CASSETTE SPRING	2
12-018	5EZZZ0000160*01	MAGNET	1
12-019	5MML542SZ004	PAPER END M	1
12-020	5MVVL621WN51	SIZE PLATE LTR	1
12-020	5MVVL621WN49	SIZE PLATE A4	1
12-020	5MVVL621WN50	SIZE PLATE B5	1
12-020	5MVVL651WN11	SIZE PLATE RGL	1
12-021	5MVB885SH008	CASSETTE CASE (Letter A4 B5)	1
12-021	5MVB885SH009	CASSETTE CASE B (Legal)	1


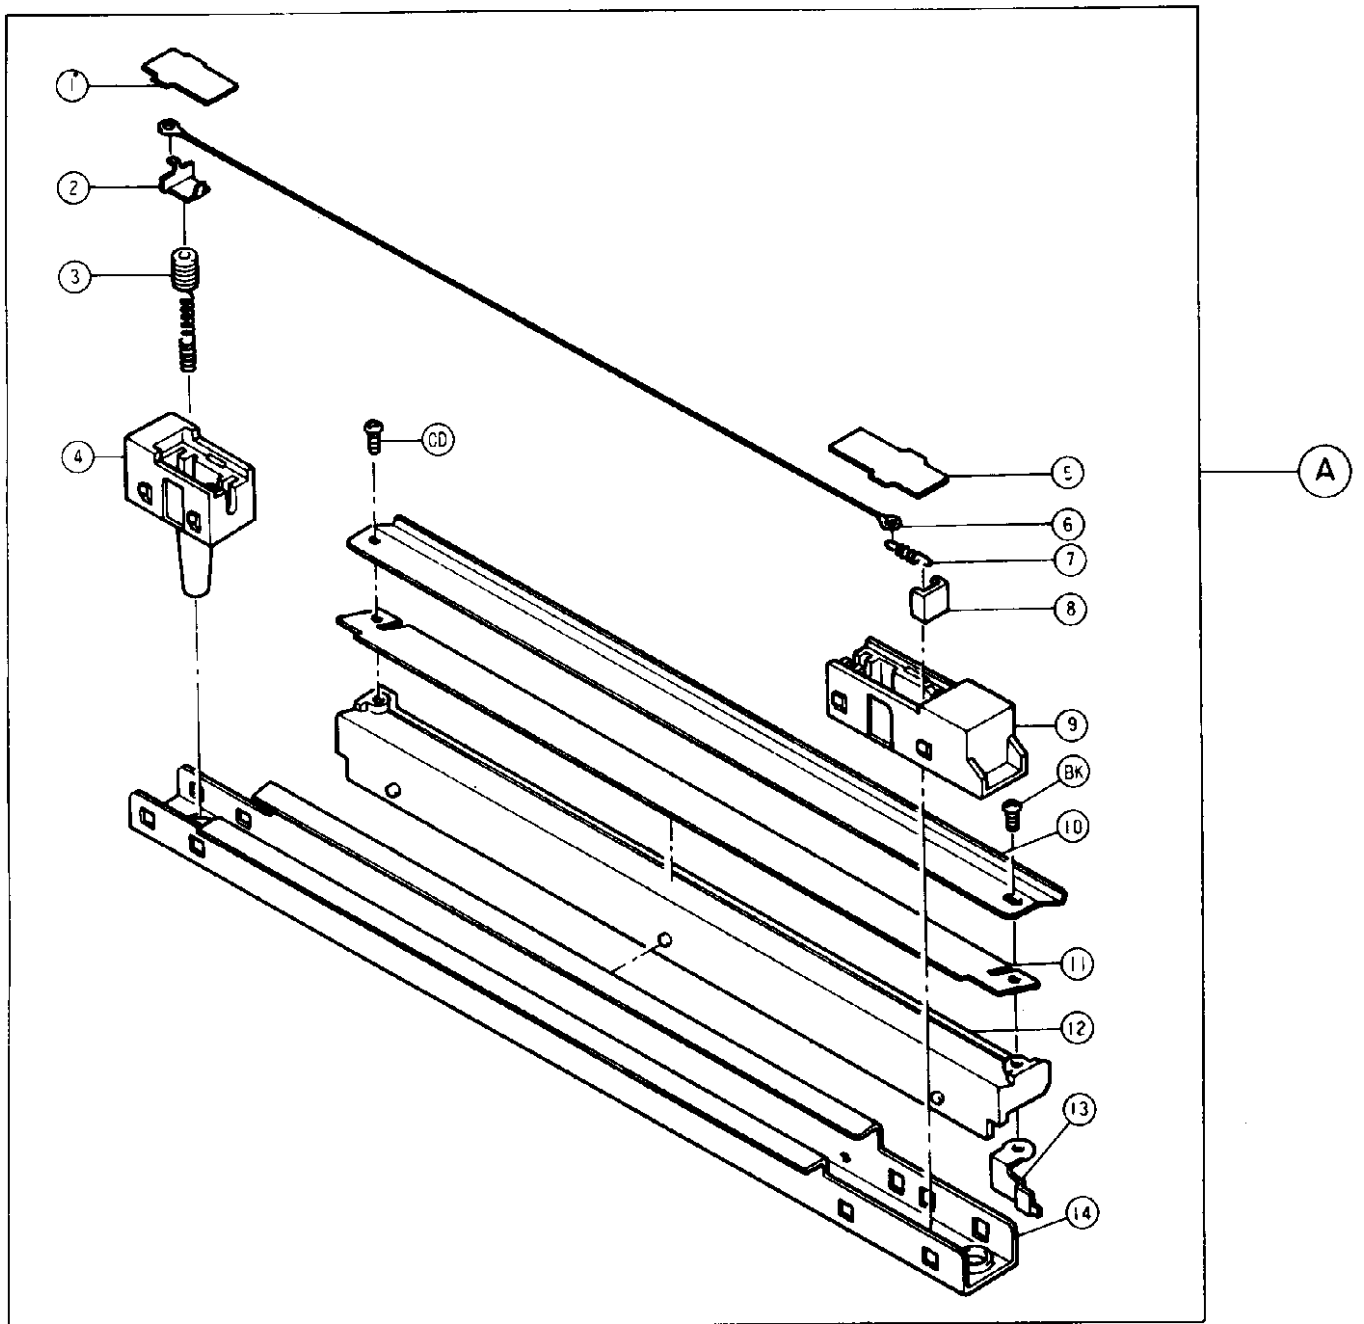


Fig.13 – Transfer Charger Unit


Ref No.	Part Code	Description	Quantity
13-00A	5AAVSHILD017	TRANSFER CHARGER UNIT	1
13-001	5MVS323KN001	TC END BLOCK LID A	1
13-002	5MMX322RJ001	TC WIRE HOOK A	1
13-003	5MMW461LJ008	TC CONTACT SPRING	1
13-004	5MVK532RJ001	TC END BLOCK A	1
13-005	5MVS423KN001	TC END BLOCK LID B	1
13-006	5MMW801XJ003	TC CORONA WIRE	1
13-007	5MMW131LJ001	CHG SPRING B	1
13-008	5MVK221CD001	TC WIRE HOOK B	1
13-009	5MVK662CD001	TC END BLOCK B	1
13-010	5MMX852LJ001	TC PAPER SHOOT A	1
13-011	5MVS822KX001	SHIELD SHEET	1
13-012	5MVX822SB001	TC PAPER SHOOT B	1
13-013	5MMX222LJ002	EARTH PLATE	1
13-014	5MMU822LJ001	TC SHIELD CASE	1

Fig.14 – Upper Electrical Parts

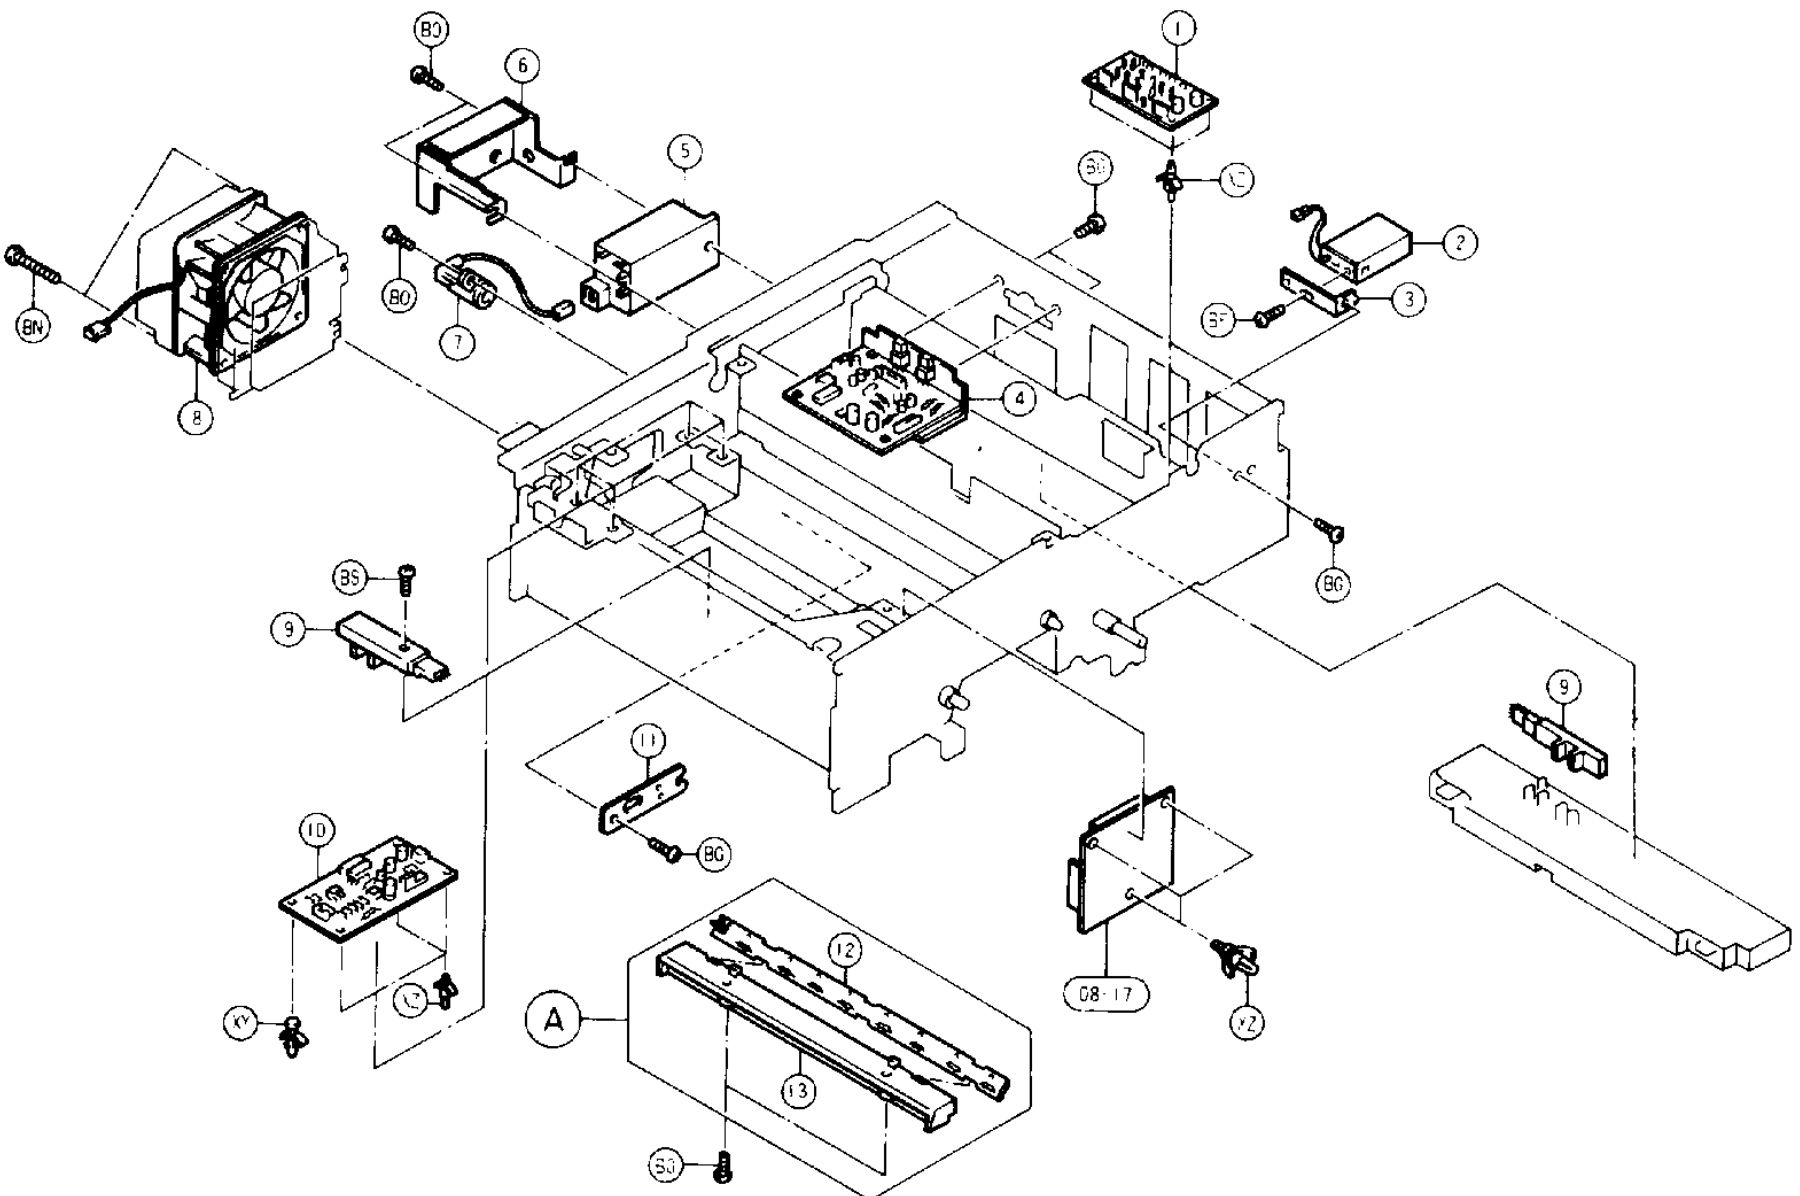

Ref No.	Part Code	Description	Quantity
14-001	5ETNB60101***01	DEVELOPER BIAS PWB	1
14-002	5EZKD6Z02301*01	TOTAL COUNTER	1
14-003	5MML252SL001	COUNTER BKT	1
14-004	5APRZZ003AA	MOTOR CONTROL PWB	1
14-005	5ETNB66202***01	MAIN HV UNIT	1
14-006	5MMB654SL002	H.V. COVER (220-240v)	1
14-007	5MVX543XN001	MCH CONNECT	1
14-008	5EZNF2403001*01	FAN MOTOR A	1
14-009	5ENXGP1A05HR*01	PHOTO SENSOR (GP1A05HR)	1
14-010	5APRAPC1004AH	APC PWB	1
14-011	5APRZZ005AA	DRUM BOARD	1
14-00A	5AMW1****02	ERASER ASSY	1
14-012	5AAXLD011GEA	L.E.D.ASSY	1
14-013	5MVX833CB001	ERASE LAMP HOLDER	1
08-017	NIL	POLYGON DRIVER PWB	1

Fig.15 – Lower Electrical Parts

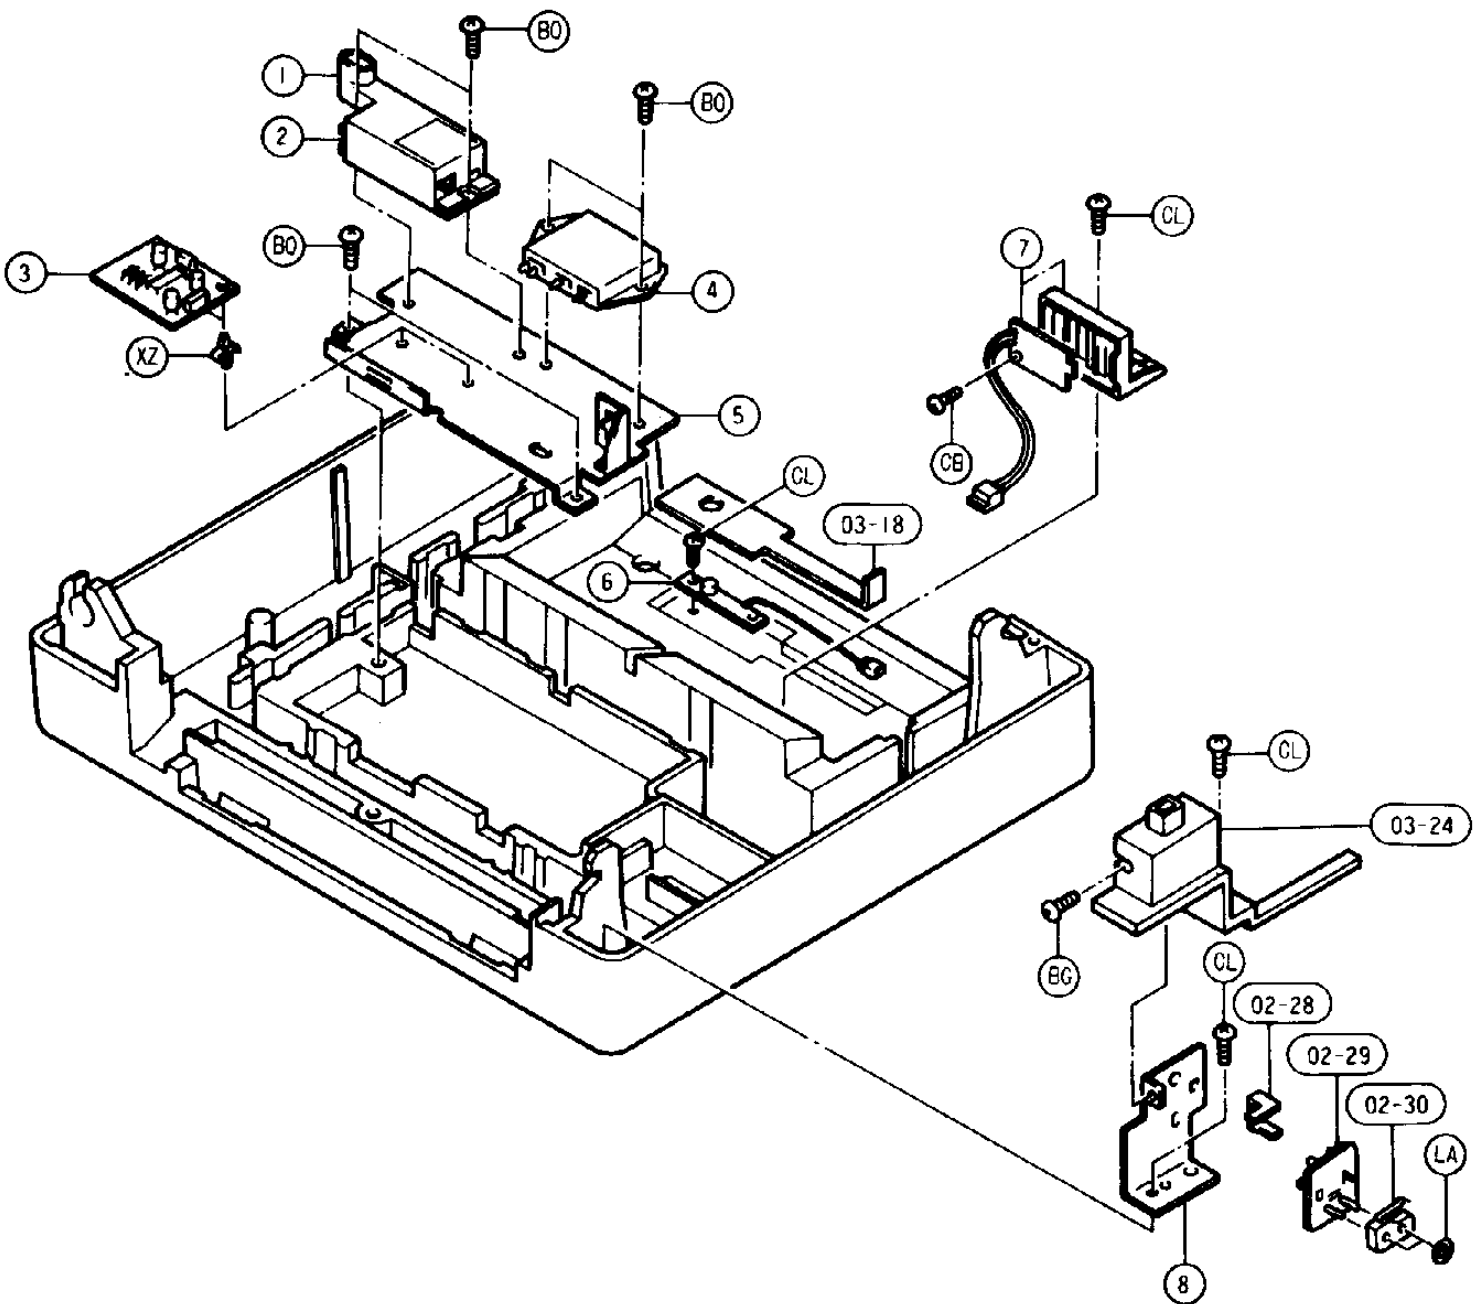

Ref No.	Part Code	Description	Quantity
15-001	5MVX332XH001	TC RECEPTACLE	1
15-002	5ETNB66201***01	TRANSFER HV UNIT	1
15-003	5APRHC002AA	HEAT CONTROL PWB	1
15-004	5EZR1G012301*01	SOLID STATE RELAY (220-240v)	1
15-005	5MMX865SL001	ELEC.PLATE	1
15-006	5APRSS005BA	PEP BOARD ASSY B(PHOTO)	1
15-007	5AAXAP00IGEA	CASSETTE SENSOR ASSY	1
15-008	5MMX663SL005	INTER LOCK SW BKT	1
02-028	5MVU122DB002	INTER LOCK SW LEVER	1
02-029	5MVX443DB001	INTER LOCK SW BKT B	1
02-030	5AAXSW016GEA	INTER LOCK SW ASSY (220-240v)	1
03-018	5MMS746SB001	SENSOR PLATE	1
03-024	5MVX765SB001	INNER COVER FA	1

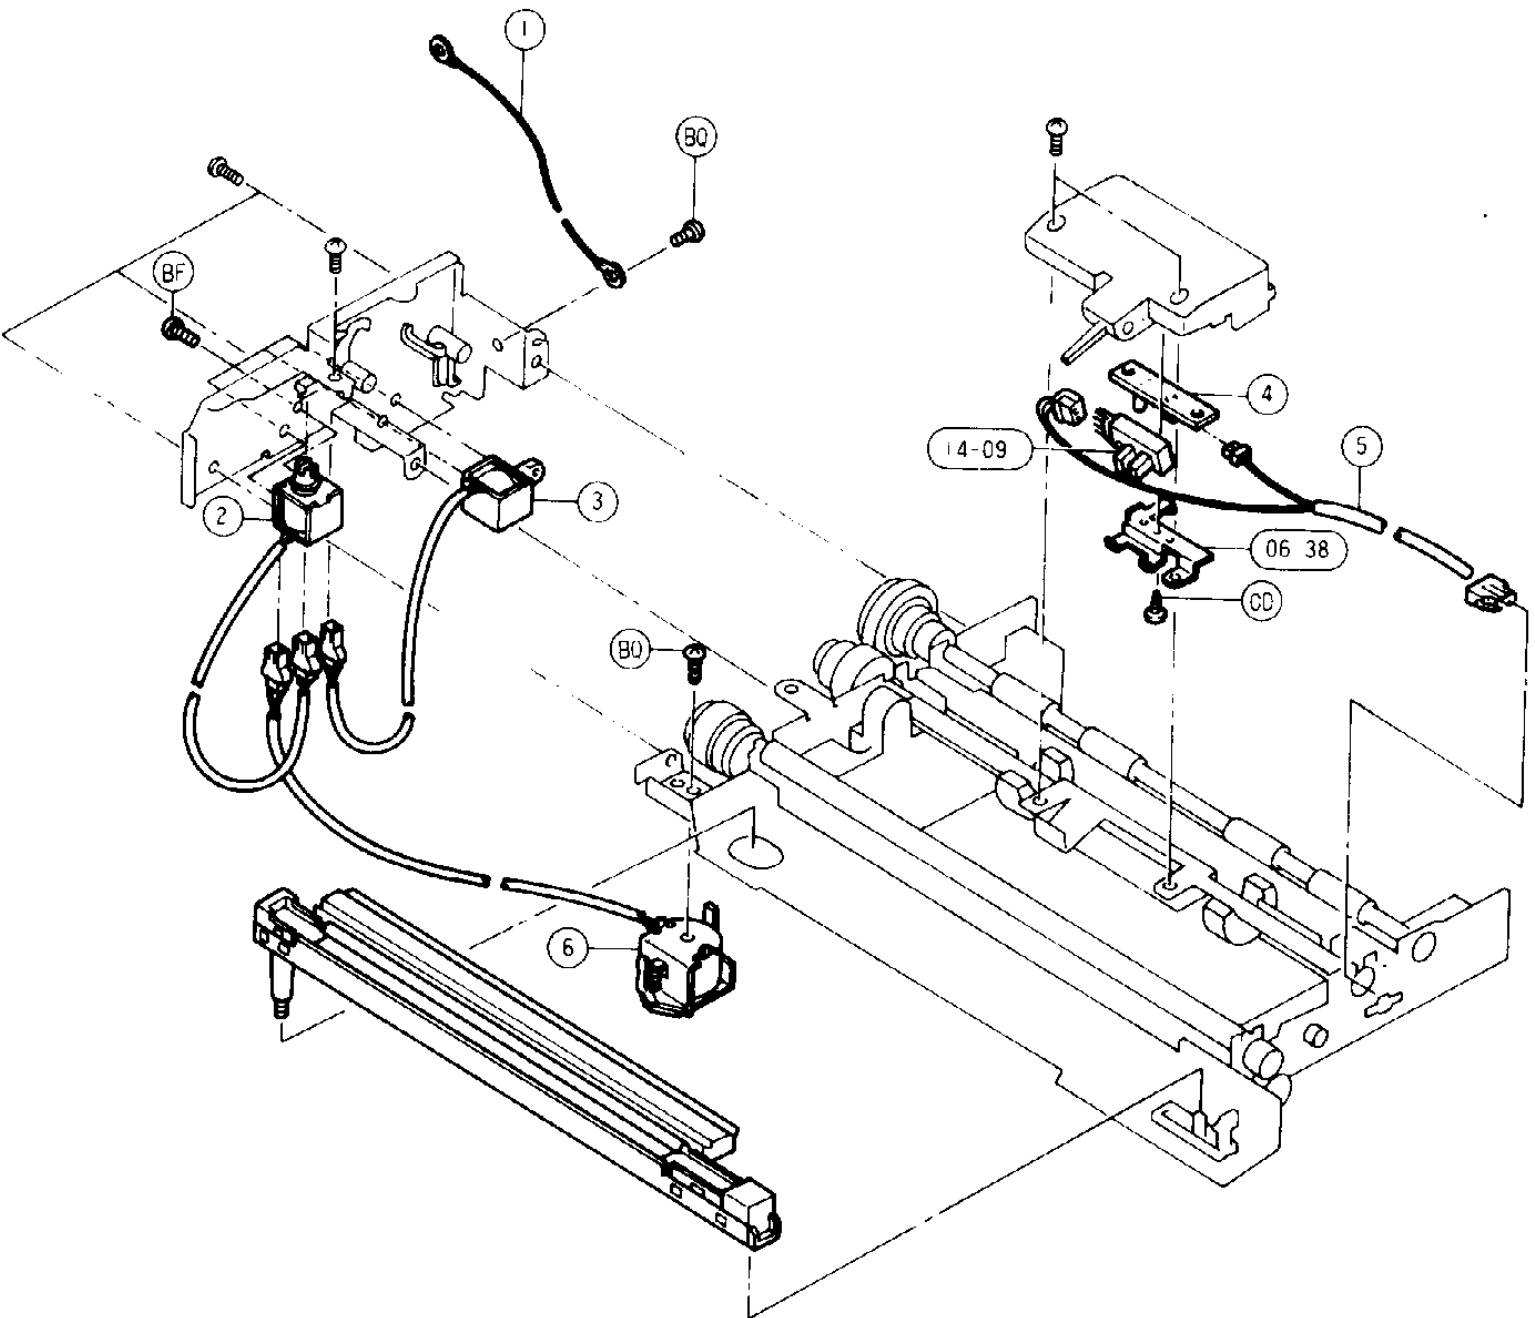


Fig.16 - Electrical Parts of Paper Feed Unit

Ref No.	Part Code	Description	Quantity
16-001	5AACCNAN8GEA	PCA2032	1
16-002	5EZSA2403010302	SOLENOID A-1 (CN: BLACK)	1
16-003	5EZSA2403010303	SOLENOID A-2 (CN:BLUE)	1
16-004	5APRSS005AA	PEP BOARD ASSY A(LED)	1
16-005	5AACCNAG4GEA	PCA2016	1
16-006	5EZSA2403010101	SOLENOID B (CN:WHITE)	1
06-038	5MMX543LJ001	SENSOR BRACKET	1
14-009	5ENXGPIA05HR*01	PHOTO SENSOR (GP1A05HR)	1


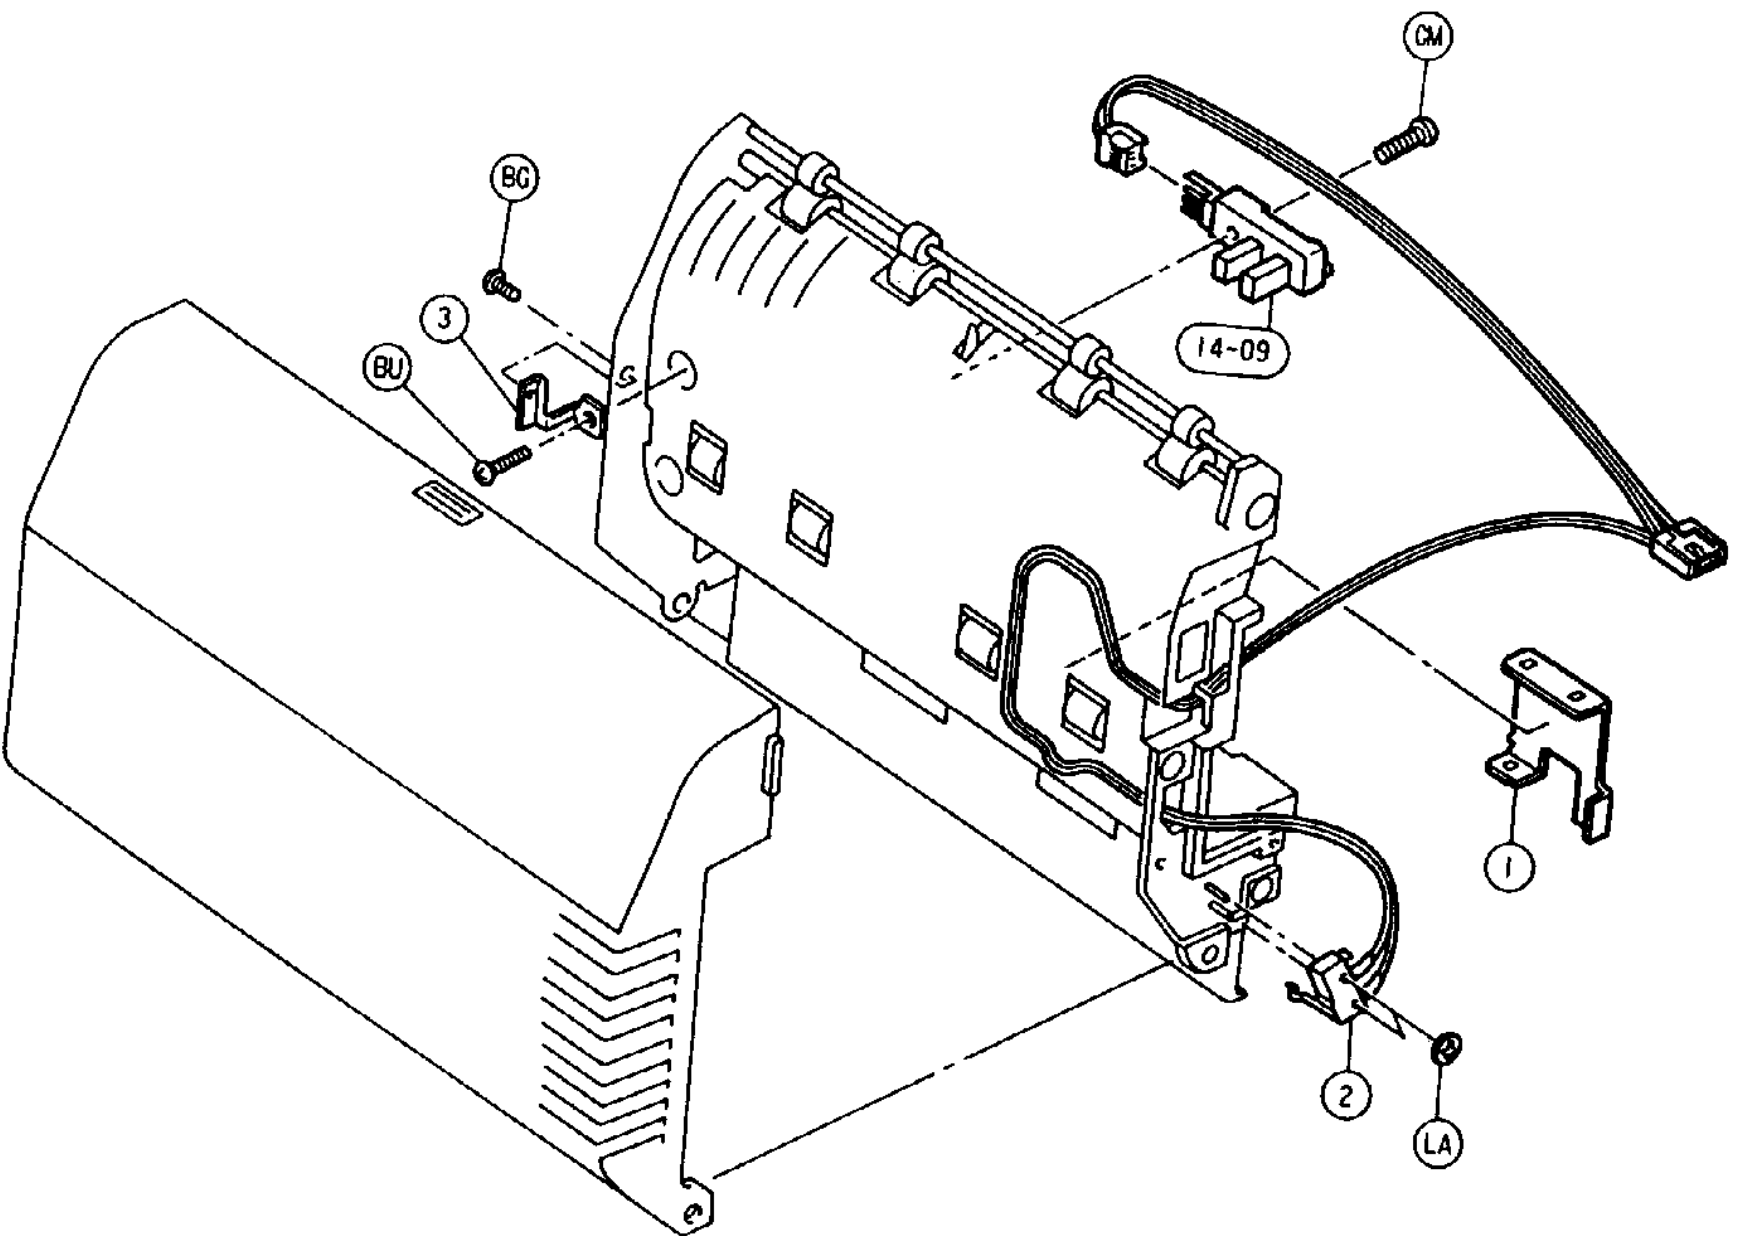


Fig.17 - Electrical Parts of Face Down Unit

Ref No.	Part Code	Description	Quantity
17-001	5MMB552SLOO1	FD WIRE SADDLE	1
17-002	5AAXSW015GEA	FD SW ASSY	1
17-003	5MMX322CJOO1	FD EARTH PLATE	1
14-009	5ENXGP1A05HR*01	PHOTO SENSOR (GP1A05HR)	1

Fig.18 – Electrical Parts of Fuser Unit

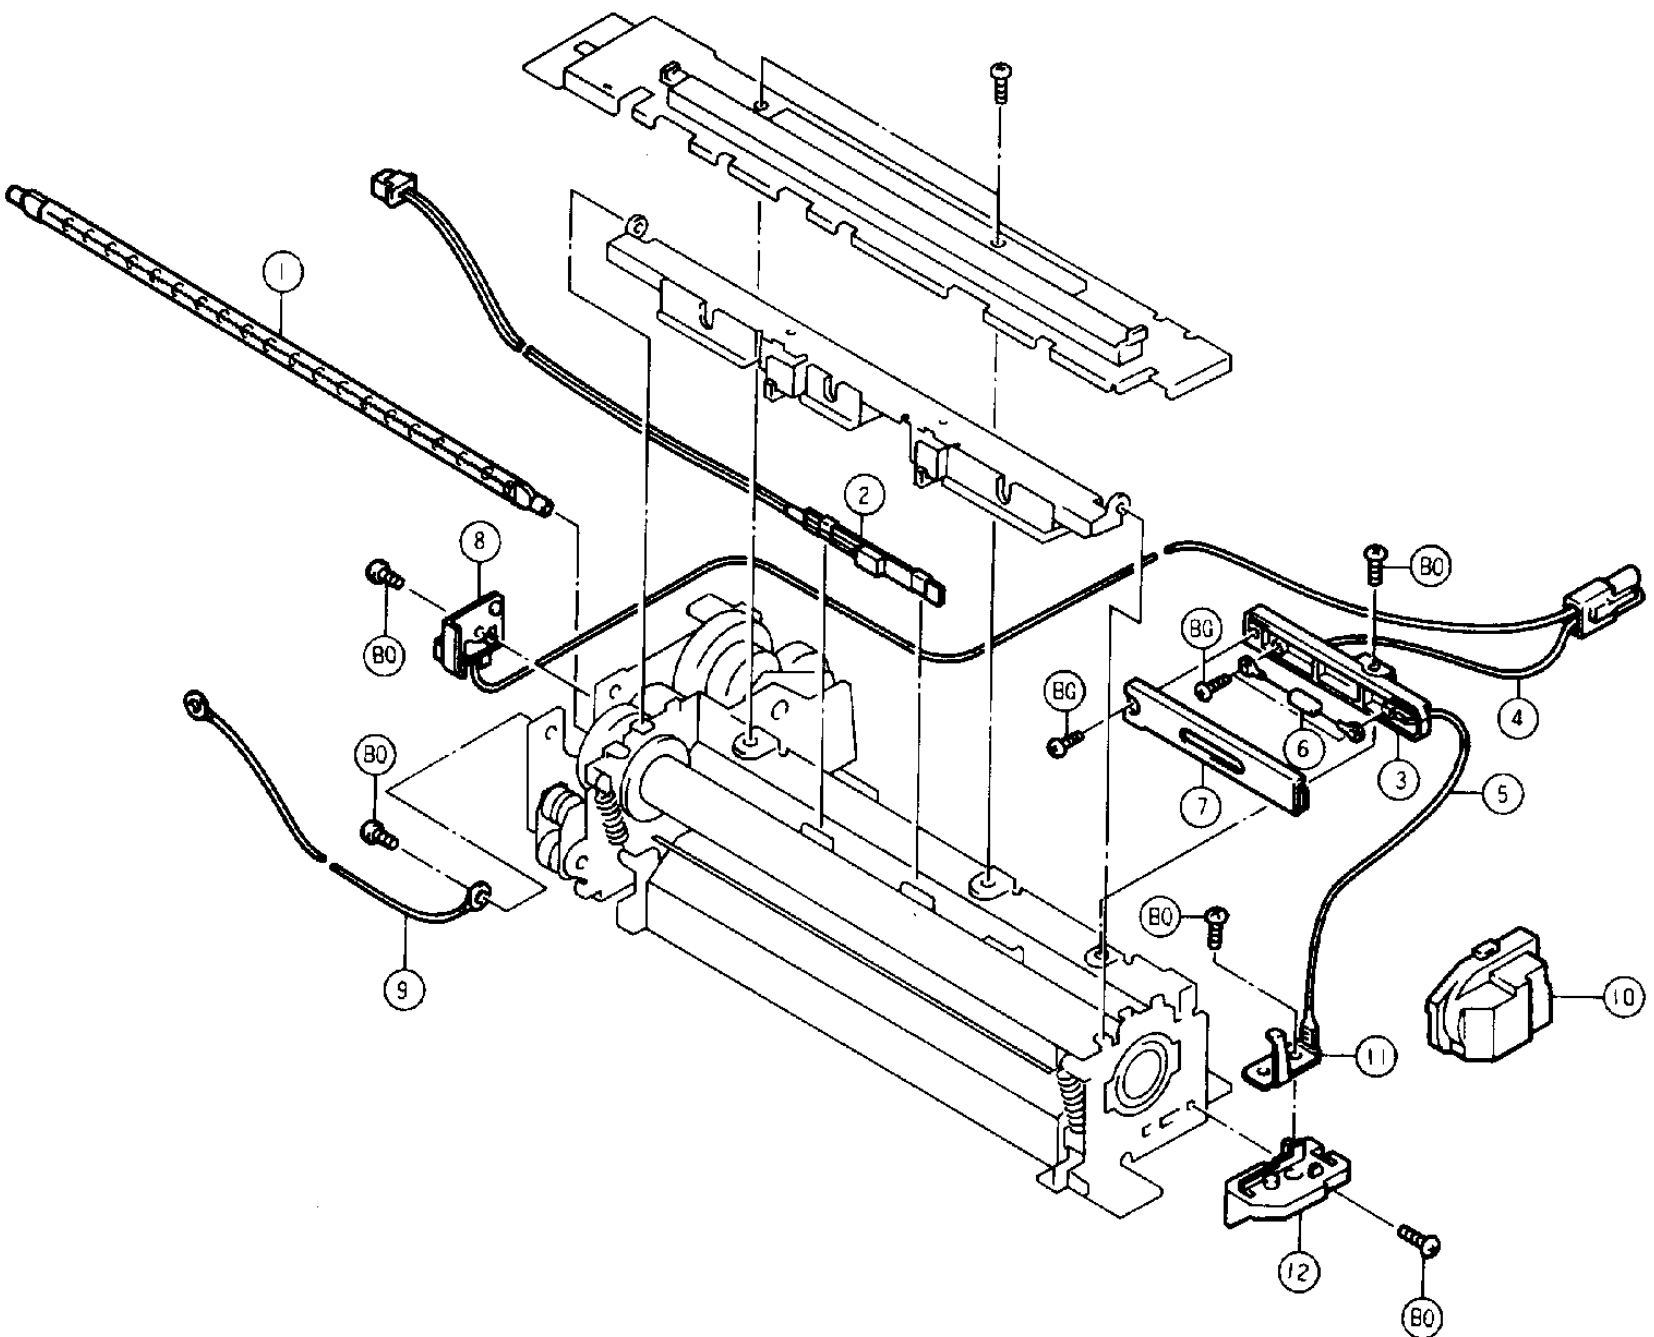

Ref No.	Part Code	Description	Quantity
18-001	5EZPB2413320101	HEATER (240v 800w)	1
18-002	5AACCNAG2GEA	PCA4014 (THERMISTOR) (with Life Fuse)	1
18-002	5AACCNAP6GEA	PCA2043 (THERMISTOR) (w/o Life Fuse)	1
18-003	5MVK622XB001	FUSE BRACKET	1
18-004	5AACCNAE6GEA	PCA4024	1
18-005	5AACCNAF7GEA	PCA3023	1
18-006	5AAXTF003VDA	THERMAL FUSE ASSY (220-240v)	1
18-007	5MVS627XB001	TEMP FUSE COVER	1
18-008	5MVX432XB001	LAMP HOLDER R	1
18-009	5AACCNAN7GEA	PCA2031	1
18-010	5MVX643XB001	TERMINAL COVER	1
18-011	5MMX322RJ002	LAMP HOLDER F	1
18-012	5MVX532XB001	LAMP HOLDER BRACKET	1


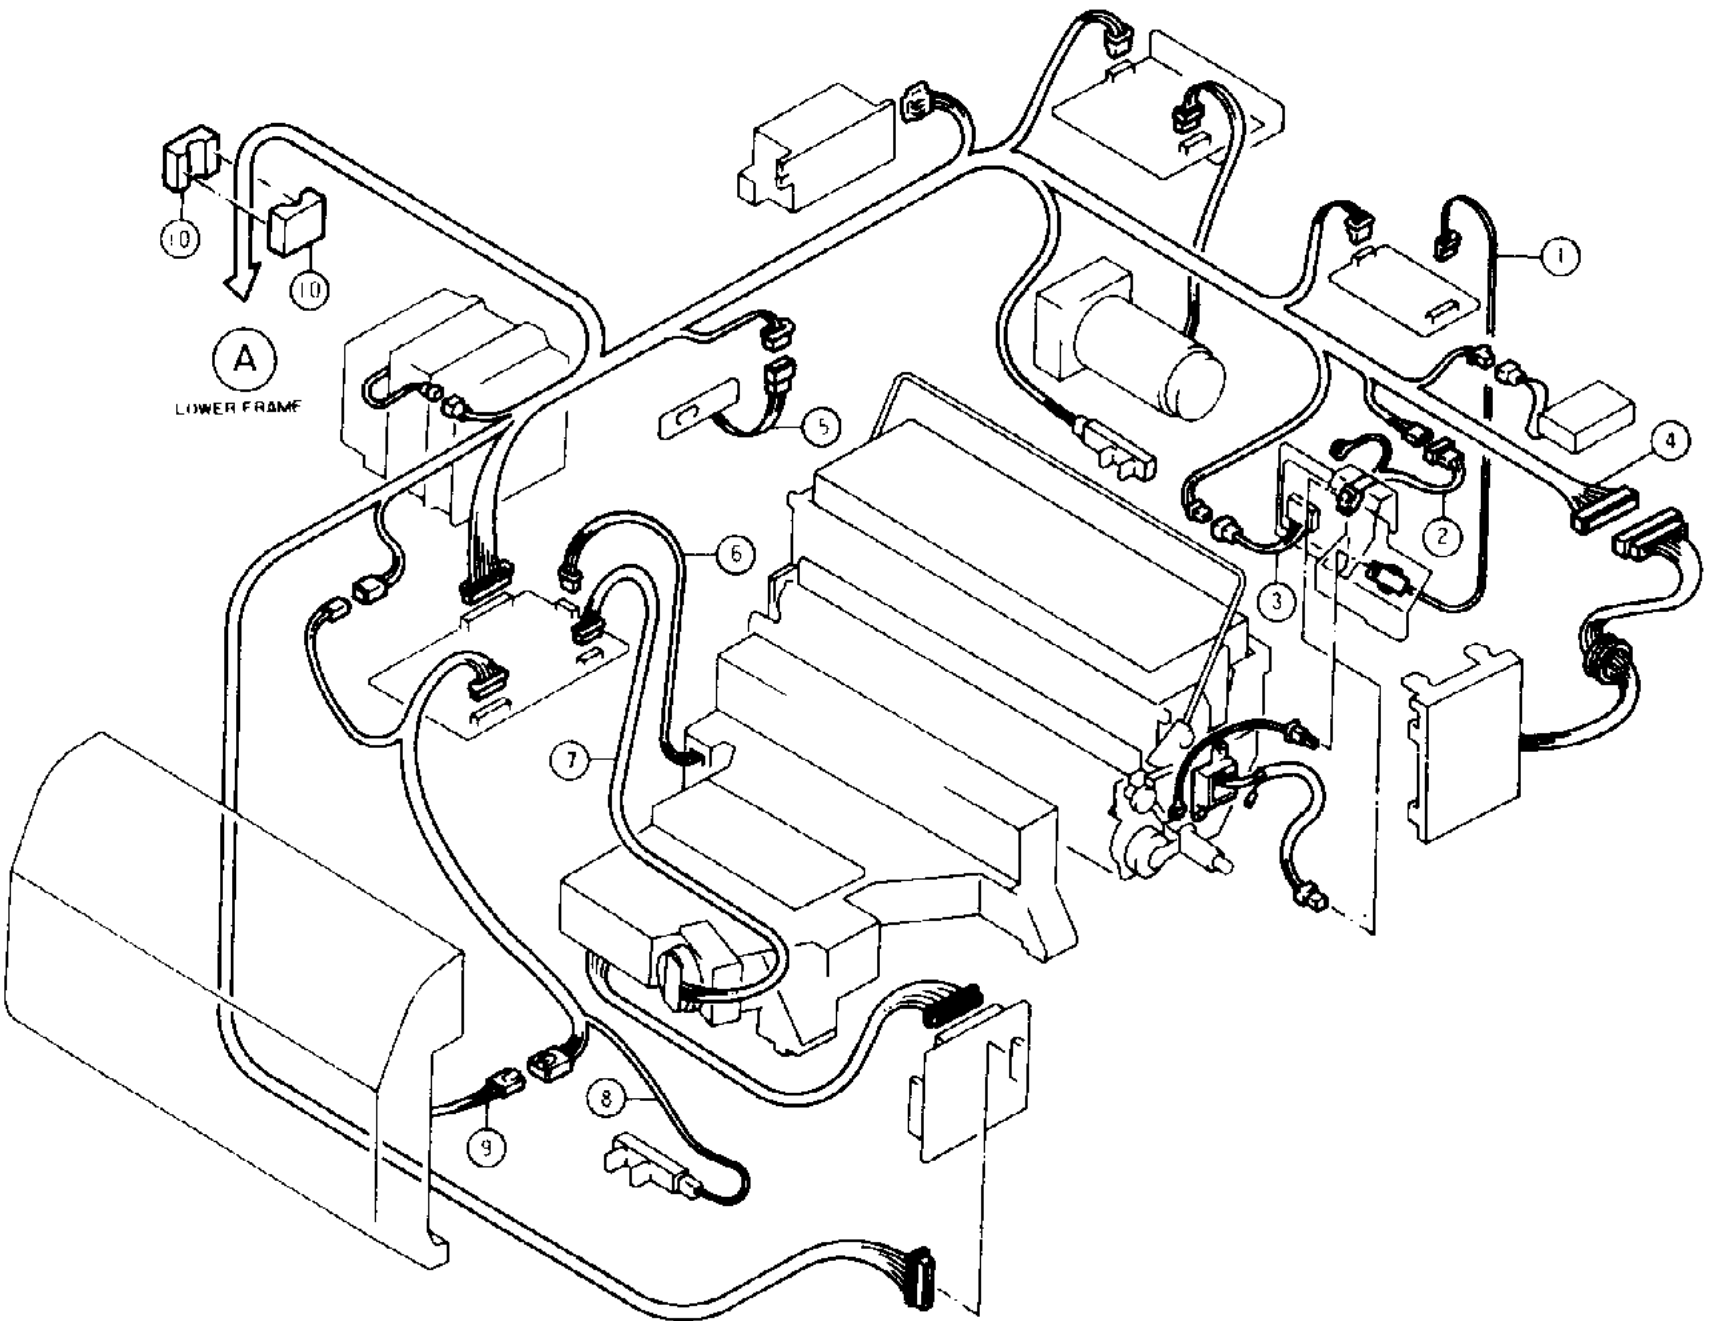


Fig.19a - Upper Frame Bundled Wires


Ref No.	Part Code	Description	Quantity
19-101	5AACCNAP2GEA	PCA2039	1
19-102	5AACCNAP4GEA	PCA3041	1
19-103	5AACCNAF2GEA	PCA2018	1
19-104	5AACCNAG3GEA	PCA4015	1
19-105	5AACCNAE7GEA	PCA2025	1
19-106	5AACCNAF5GEA	PCA3021	1
19-107	5AACCNAF3GEA	PCA3019	1
19-108	5AACCNAF0GEA	PCA3028	1
19-109	5AACCNAF6GEA	PCA2022	1
19-110	5EYBZ2592860101	FERRITE CORE (NF3 SUU26)	2

Fig.19b – Lower Frame Bundled Wires

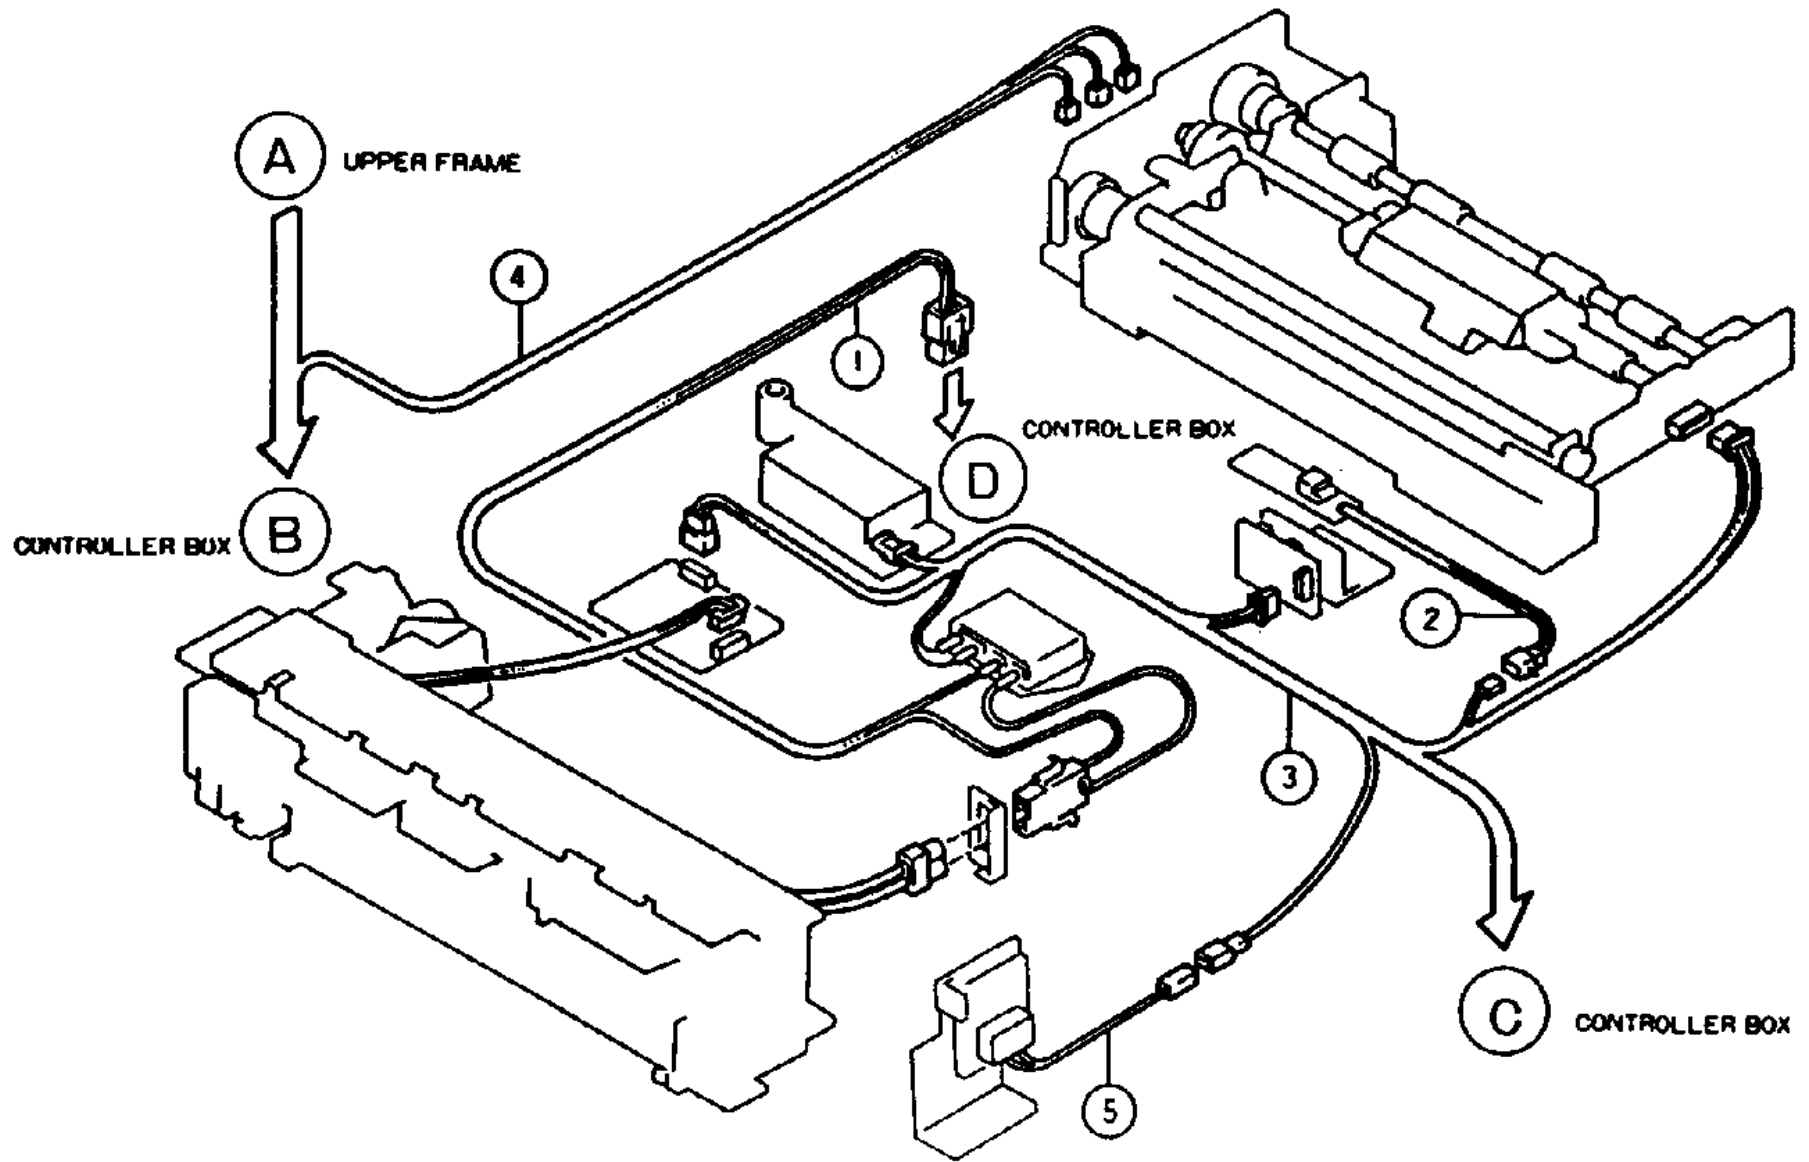

Ref No.	Part Code	Description	Quantity
19-201	5AACCNAE5GEA	PCA2008	1
19-202	5AACCNAH2GEA	PCA2029	1
19-203	5AACCNAG1GEA	PCA3012	1
19-204	5AACCNAH1GEA	PCA3013	1
19-205	5AACCNAF2GEA	PCA2018	1

Fig.19c – Controller Bundled Wires

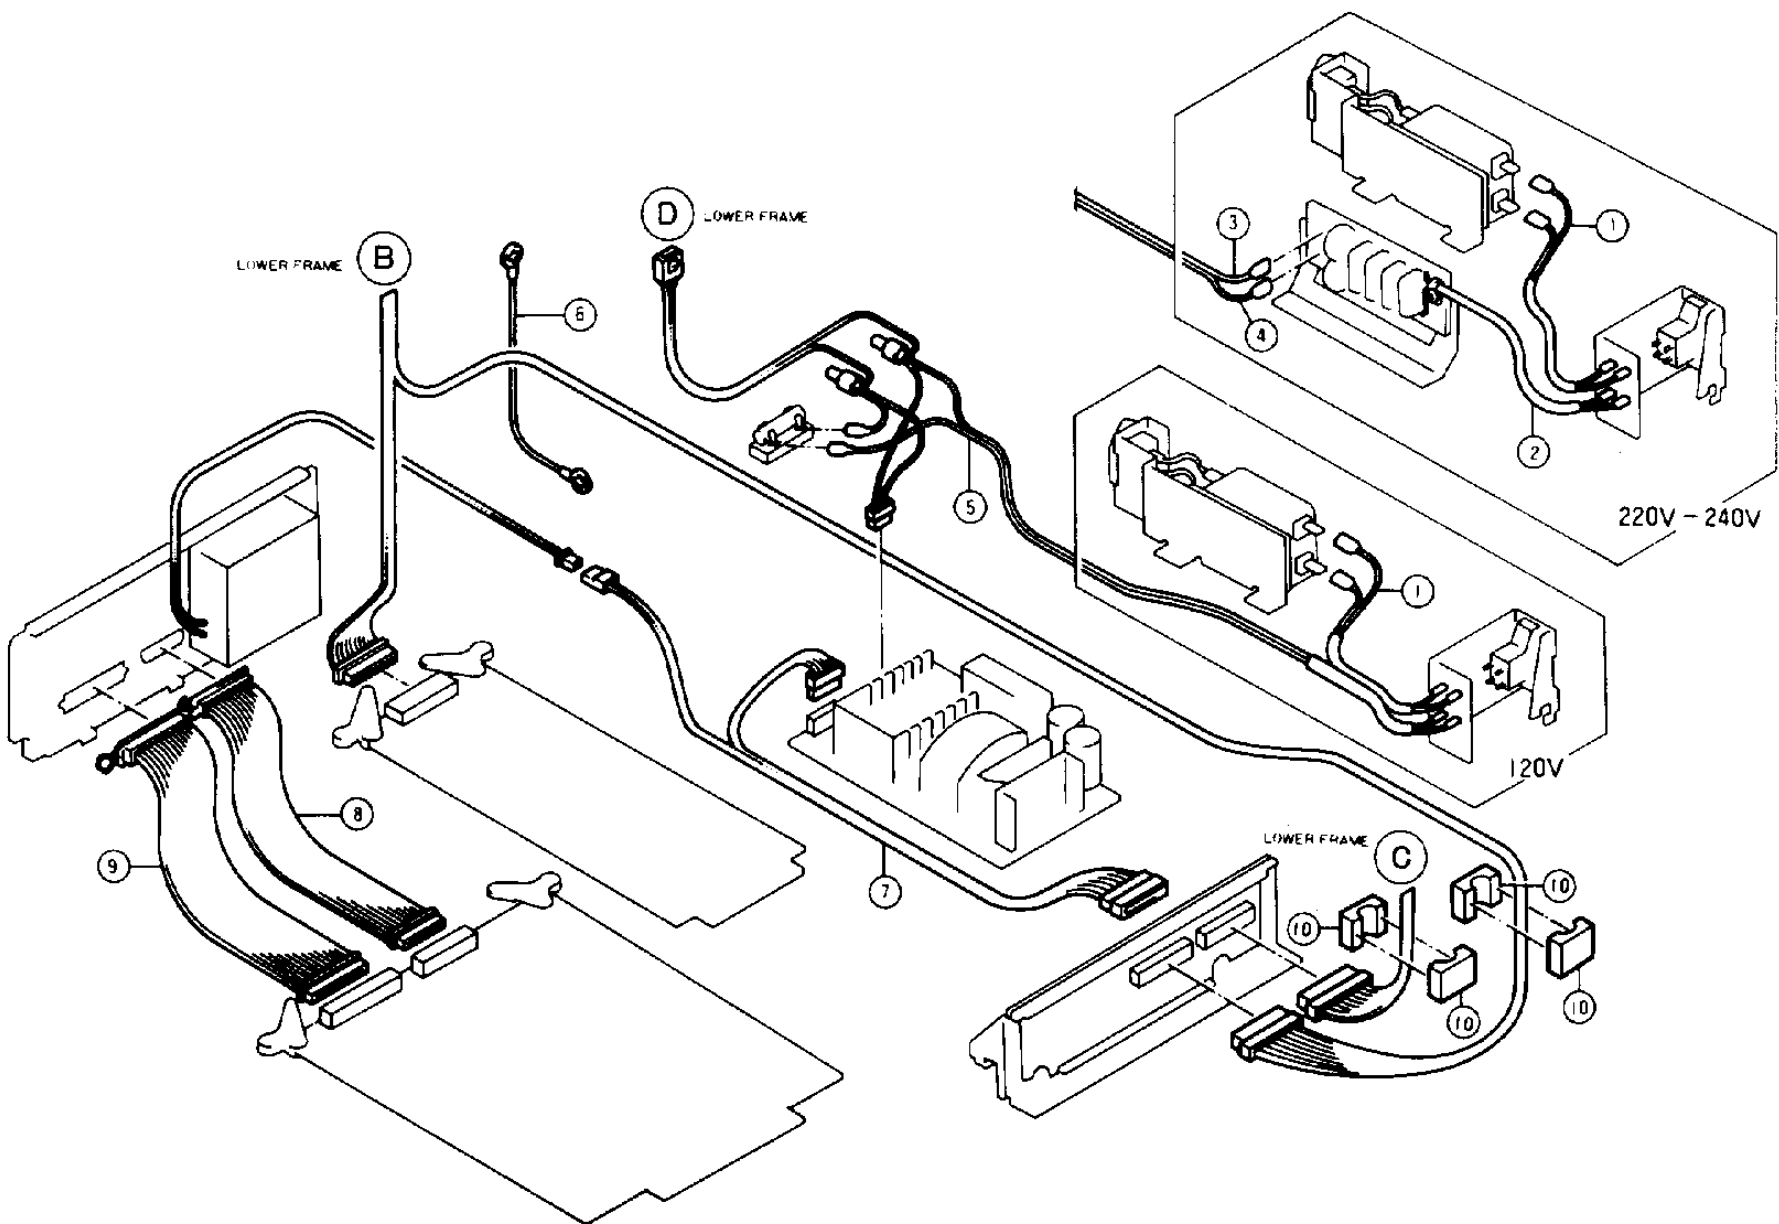

Ref No.	Part Code	Description	Quantity
19-301	5AACCNAD9GEA	PCA4001	1
19-302	5AACCNAR0GEA	PCA2045 (220-240v)	1
19-303	5AACCNAE4GEA	PCA3006 (220-240v)	1
19-304	5AACCNAE2GEA	PCA3004 (220-240v)	1
19-305	5AACCNAE3GEA	PCA3005 (120v)	1
19-306	5AACCNAP5GEA	PCA2042	1
19-307	5AACCNAF8GEA	PCA3009	1
19-308	5AACCNAF9GEA	PCA2010	1
19-309	5AACCNAGOGEA	PCA2011	1
19-310	5EYBZ2592860101	FERRITE CORE (NF3 SUU26)	4