



LASERBEAM PRINTER

F-800/800T



PARTS CATALOGUE

10-11-1998

F-800/800T Parts Catalogue

Table of Contents

Covers (Fig.1)	3
Upper Unit (Fig.2)	5
Lower Unit (Fig.3)	7
Controller box (Fig.4)	10
Drive unit (Fig.5)	12
Fuser (Fig.6)	14
Connection cords (Fig.7).....	16

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

'Ref No.'Reference number which corresponds to the parts in the figure
'Part code'.....Part code which identifies the part
'Part description'A brief description of the part
'Quantity'.....Quantity of the part used in the printer or option

Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

Consumables and Maintenance Kits

TK-6	Toner Kit
DK-5	Drum (12K pages)
DV-10	Developer (20K pages)
FK-5	Fuser (100K pages)


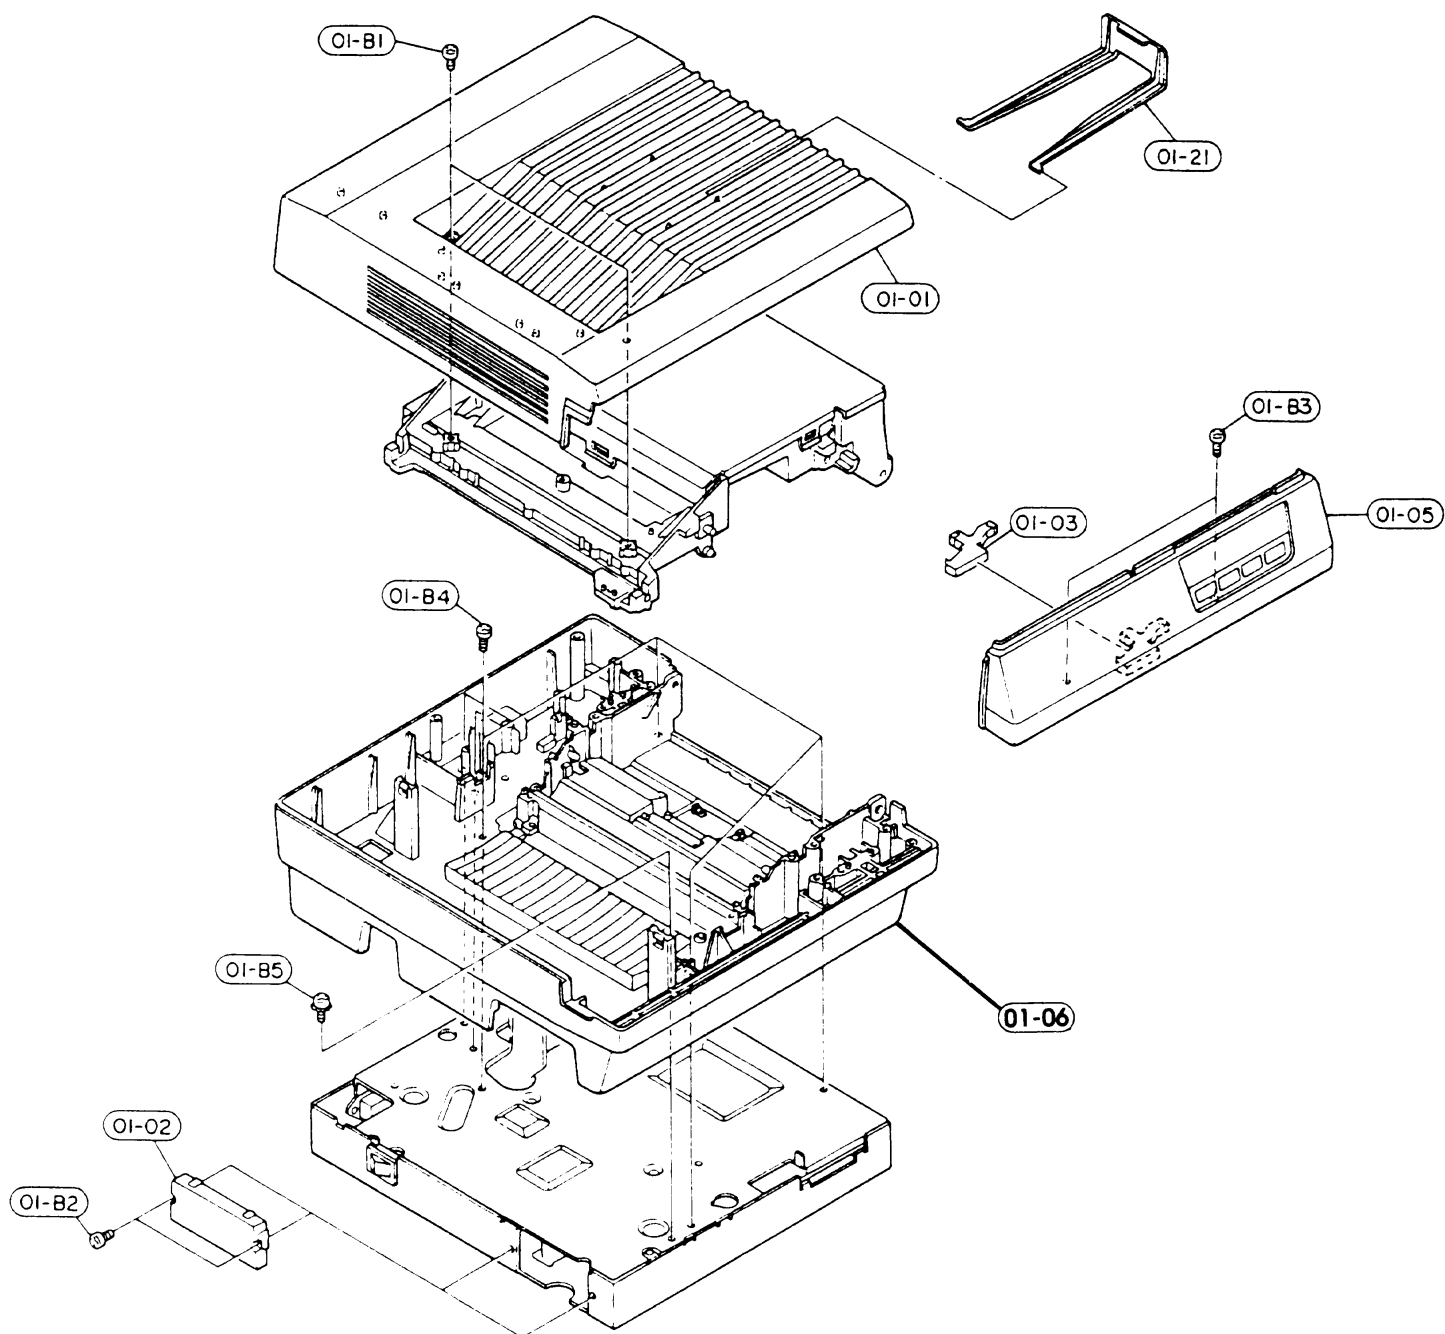


Fig.1 – Covers


Ref No.	Part Code	Description	Quantity
01-001	5AAMF800**03	Top Cover Assy	1
01-002	5MVB752SH002	Base Side Cover	1
01-003	5AAVCLEAN018	Cleaning Stick	1
01-005	5AAFZF800T*1	Key Board Assy F800T	1
01-021	5MVU741SH001	Paper Stopper	1
01-006	5AAMF800**02	Base Assy F800T	1

Fig.2 – Upper Unit

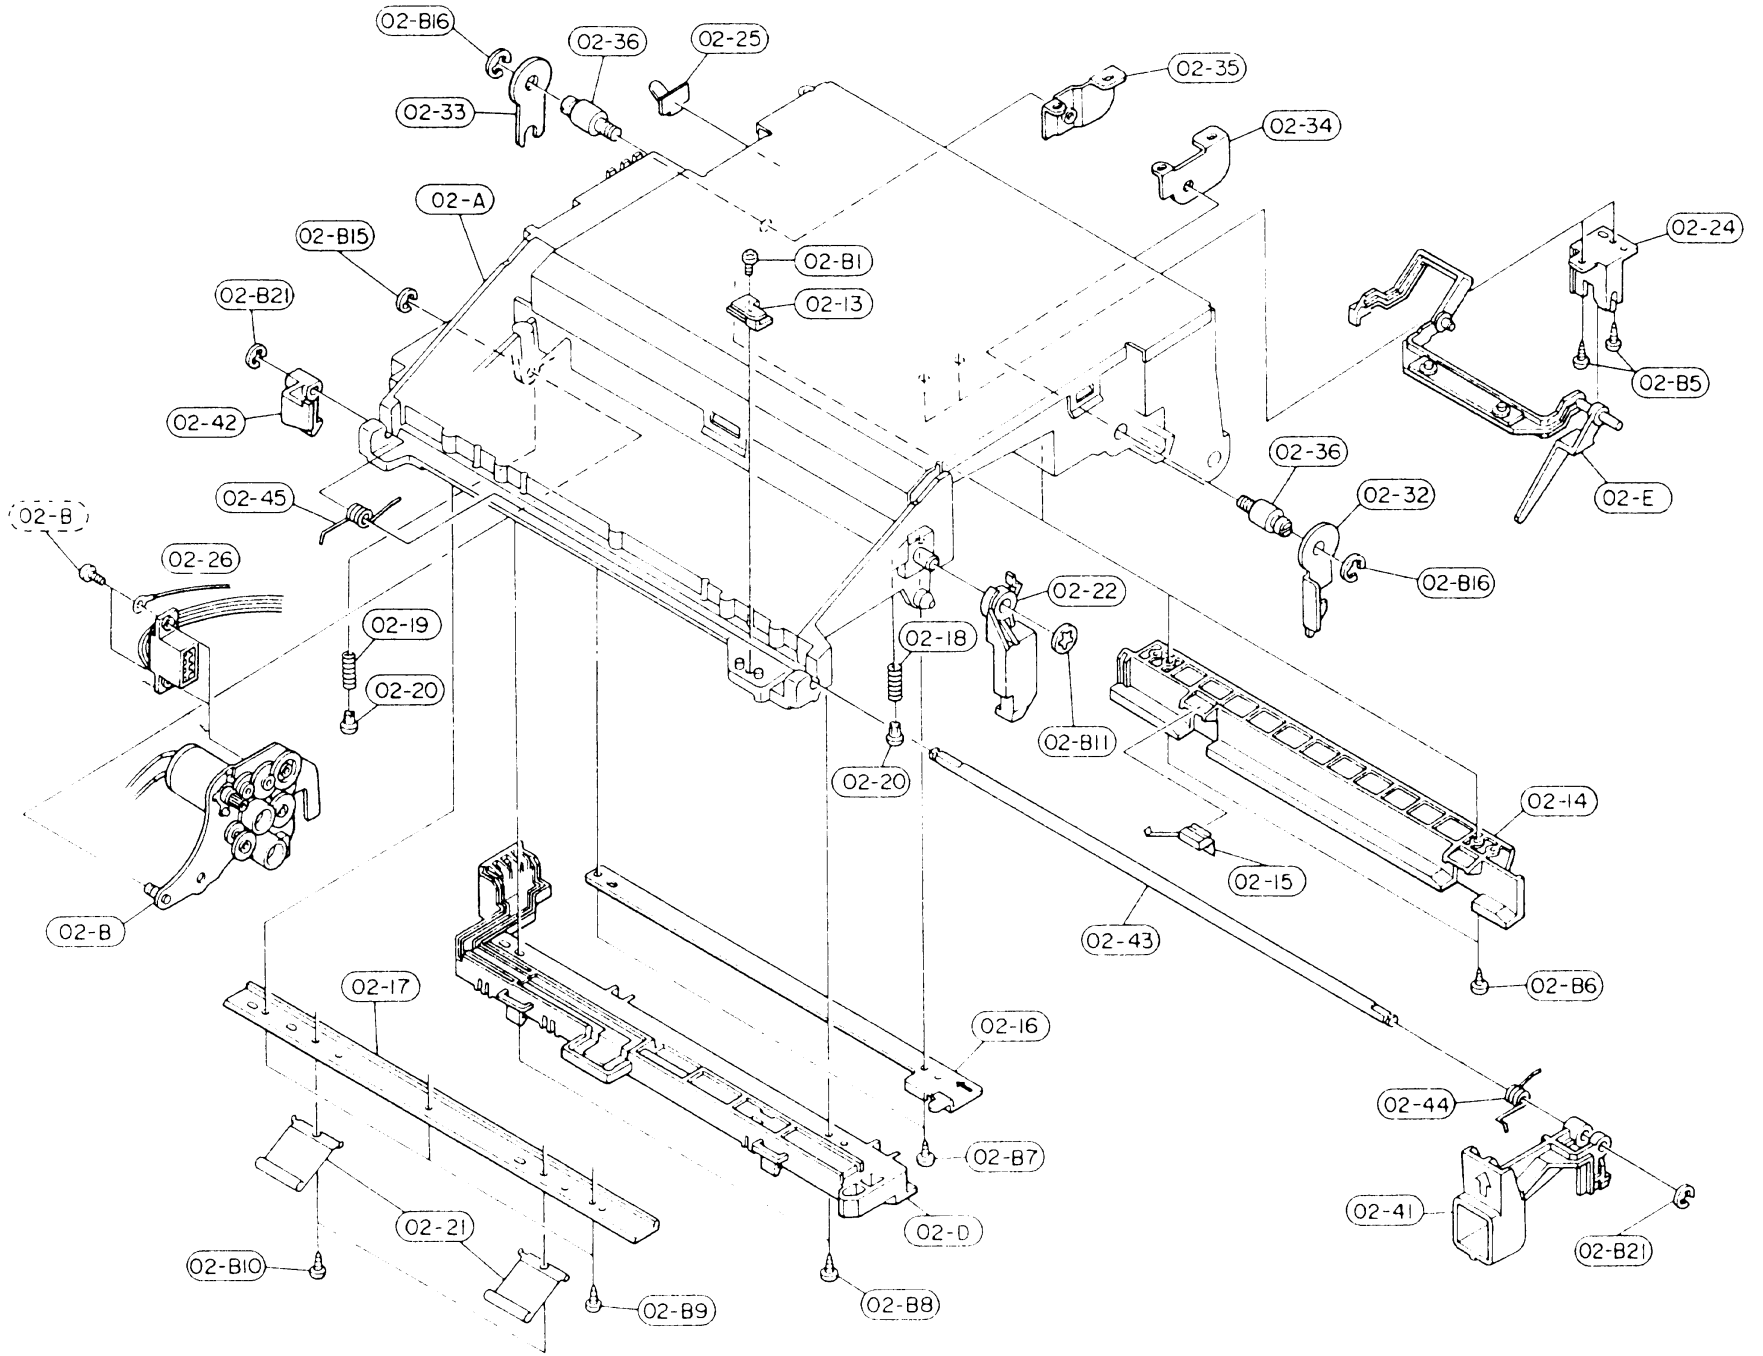

Ref No.	Part Code	Description	Quantity
02-00A	5AAYF800*C2	Upper Unit Entirety	1
02-00B	5AAYF800*B7	Deve Drive Assy	1
02-00D	5AAYF800*B1	Eraser Assy	1
02-00E	5AAYF800*88	Paper Sensor Assy	1
02-013	5MMZ321SL003	Eject Stopper	1
02-014	5MVX833SL001	Deve Guide A	1
02-015	5MMX522LD003	Guide Spring	1
02-016	5MMX831SL001	Deve Guide B	1
02-017	5MVL821SB002	Drum Rail	1
02-018	5MMW361LJ019	Drum Spring F	1
02-019	5MMW361LJ020	Drum Spring R	1
02-020	5MVF166SB002	Spring Foot	2
02-021	5MMX422LD001	Fuser Press SP	2
02-022	5MVX622DG001	Safety Lever	1
02-024	5MVX483SB002	P.Sensor Bkt	1
02-025	5MMX321SM001	Cord Keep	1
02-026	5AACCNFC1GEA	Conn Cord Assy	1
02-032	5MML363SL002	B-S Angle (FU)	1
02-033	5MMS531SL002	B-S Angle (RU)	1
02-034	5MML532SL002	SCN Angle (F)	1
02-035	5MML532SL003	SCN Angle (R)	1
02-036	5MMT476LD003	SCN Shaft	2
02-041	5MVX664SX001	Eject Lever F	1
02-042	5MVX321SJ001	Eject Lever R	1
02-043	5MMT865SD001	Eject Stay	1
02-044	5MMW262LJ004	Eject Spring	1
02-045	5MMW267LJ001	Eject Spring	1


Fig.3 – Lower Unit

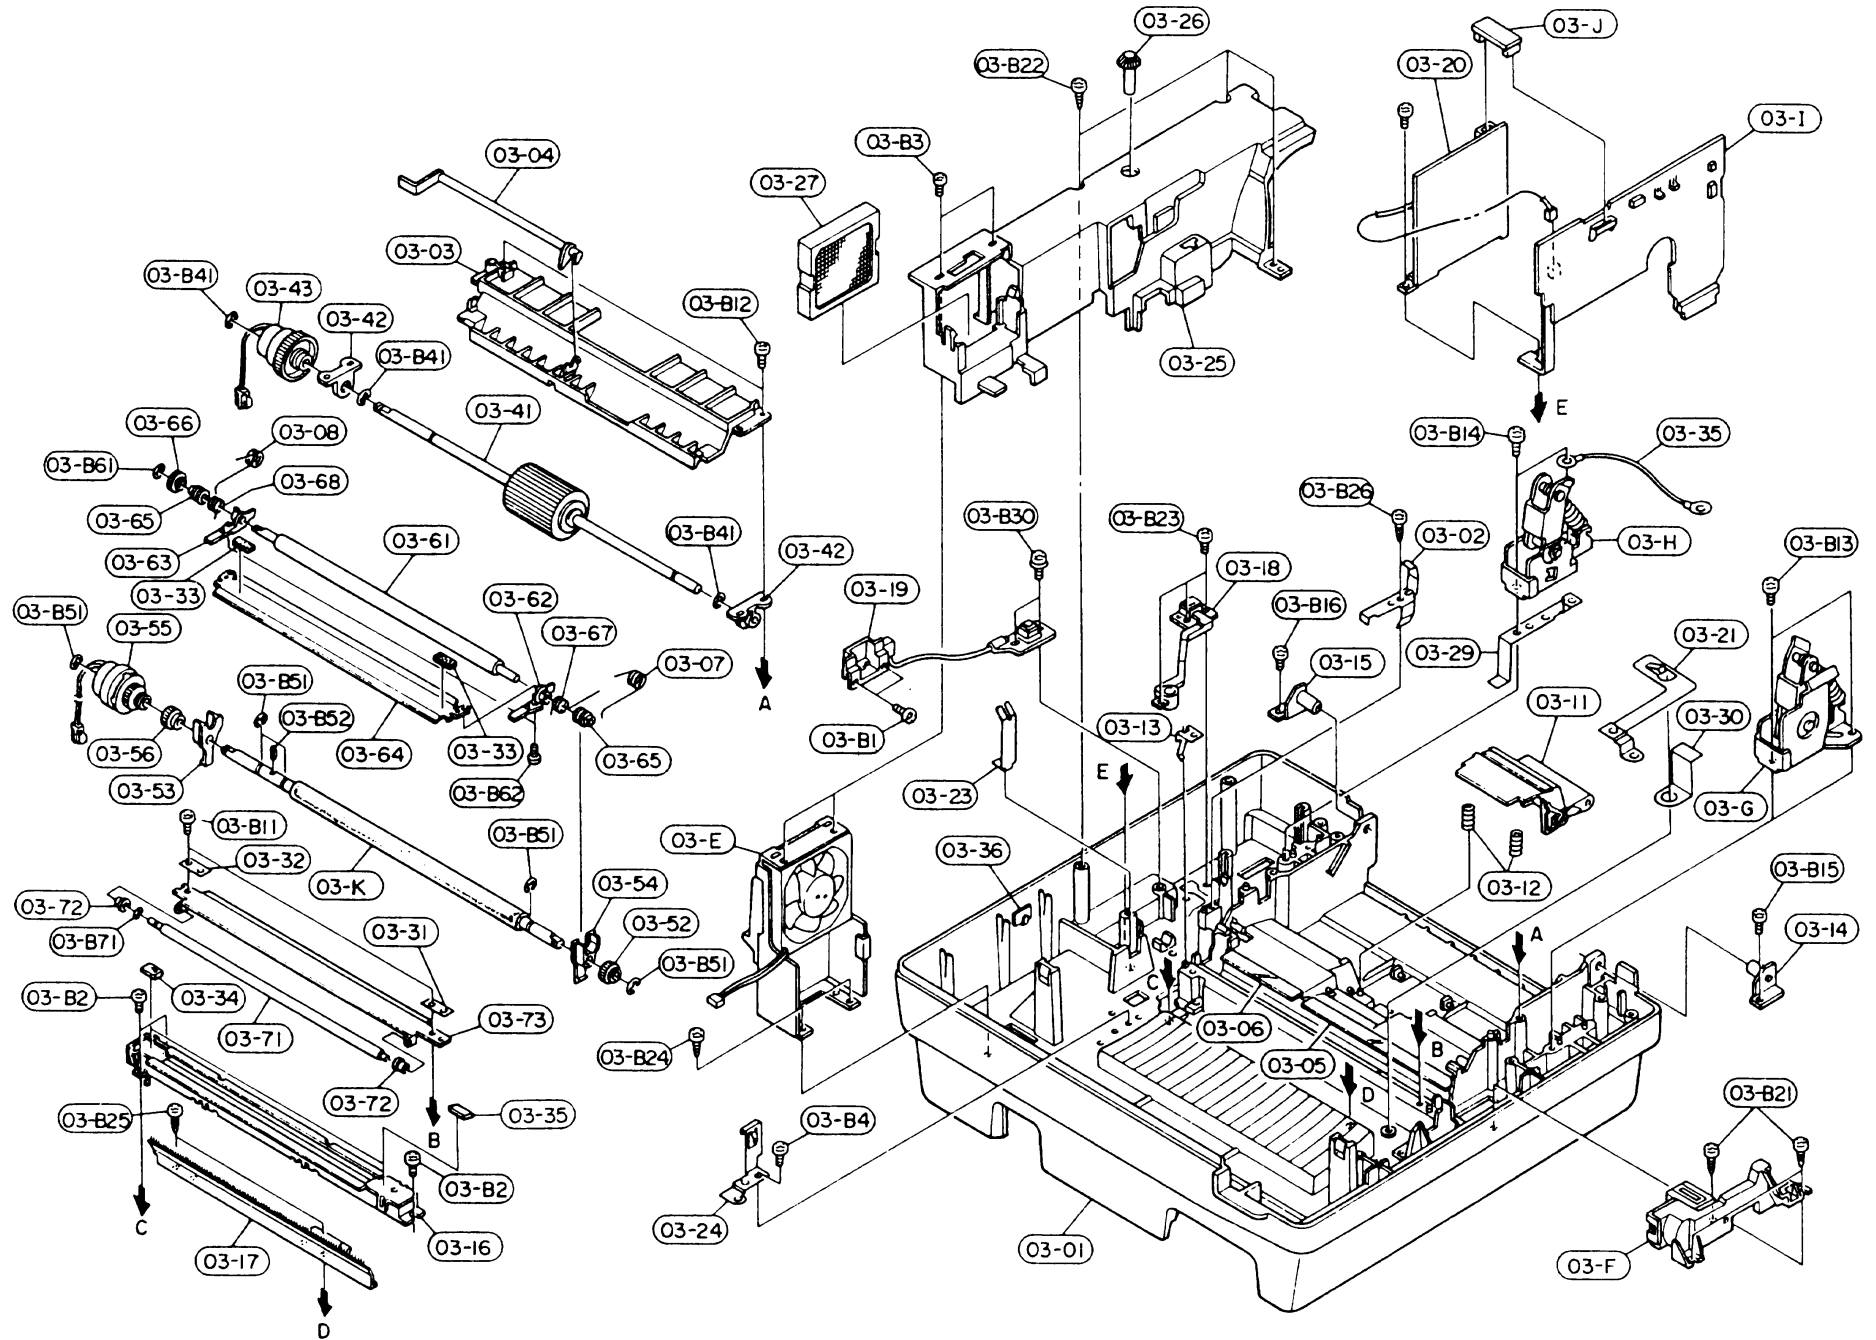

Ref No.	Part Code	Description	Quantity
03-00C	5AAYF800**D6	Paper Shute T Assy	1
03-00D	5AAYF800**D5	Paper Shute B Assy	1
03-00E	5AAYF800**97	Fan Assy	1
03-00F	5AAYF800**53	Counter Gear Assy	1
03-00G	5AAYF800**37	B-S Bkt Assy (F)	1
03-00H	5AAYF800**38	B-S Bkt Assy (R)	1
03-00I	5APRZZC1011BH	P.W.Board Assy Rear	1
03-00J	5APRZZC1008BH	Assy Connect	1
03-00K	5AAYF800**94	Regist Roller B Sub	1
03-00L	5AAYF800**D3	Transfer Charger Assy (AVSHILD026)	1
03-001	5AAMF800**02	Base Assy	1
03-002	5MMX552RD001	Clutch Earth Plate	1
03-003	5MVX864SB005	Entrance Guide	1
03-004	5MVX731SB001	Sensor Dog	1
03-005	5MVS723KF001	Regist Guide F	1
03-006	5MVS623KF002	Regist Guide R	1
03-007	5MMW167LJ003	Regist Spring F	1
03-008	5MMW167LJ004	Regist Spring R	1
03-011	5AAVSEPRT003	Paper Separator Assy	1
03-012	5MMW365LJ001	Paper Separator SP	2
03-013	5MML222RD002	Earth Plate	1
03-014	5MMX332SL004	SCN BKT Assy (A)	1
03-015	5MMX332SL005	SCN BKT Assy (B)	1
03-016	5AAYF800**D3	TC Assy	1
03-017	5AAVPLATE010	Discharger Assy	1
03-018	5MVX773XH001	TC Receptacle	1
03-019	5MVX853XH001	MCH Connect	1
03-020	5AAYF800T*03	Trans Assy	1
03-021	5MMS663RD001	Front Earth Plate	1
03-023	5MML262RD001	Drum Earth	1
03-024	5MML422RJ001	Drive Earth	1
03-025	5MVB877SB001	Inner Cover	1
03-026	5MVN331SX001	Dens Cont Knob	1
03-027	5MVX662SB013	Ozone Filter	1
03-029	5MML632RD001	B-S Earth 1	1
03-030	5MML643RD001	B-S Earth 2	1
03-031	5MVS321KJ003	P Side Seal F (Incl. 03-D)	1
03-032	5MVS331KJ001	P Side Seal R (Incl. 03-D)	1
03-033	5MVS217RJ002	P Sponge S (Incl. 03-C)	2
03-034	5MVS617RJ001	P Sponge L (Incl. 03-L)	2
03-035	5AACCNFT6GEA	Conn Cord Assy	1
03-036	5MMX321SM001	Cord Keep	1
03-041	5AAYF800**93	Feed Roller Sub Assy	1
03-042	5MVX422DX001	Feed Bearing	2
03-043	5EYYAGAAF02**01	Feed Clutch	1


Ref No.	Part Code	Description	Quantity
03-052	5MVG137DB009	Count Gear Z28	1
03-053	5MVX421DX002	Regist Bearing R	1
03-054	5MVX421DX001	Regist Bearing F	1
03-055	5EYYAGAAF01**01	Regist Clutch	1
03-056	5MVG127DB014	Regist Gear B	1
03-061	5MMT876SN023	Regist Roller T (Incl. 03-C)	1
03-062	5MVX511DB001	Regist Arm F (Incl. 03-C)	1
03-063	5MVX511DB002	Regist Arm R (Incl. 03-C)	1
03-064	5MML831LD002	Paper Shot T (Incl. 03-C)	1
03-065	5MVX211DX001	Regist Bearing T (Incl. 03-C)	2
03-066	5MVG127DB013	Regist Gear T (Incl. 03-C)	1
03-067	5MMW176LJ004	Arm Spring F (Incl. 03-C)	1
03-068	5MMW176LJ005	Arm Spring R (Incl. 03-C)	1
03-071	5MMT863LD001	Paper Roller (Incl. 03-D)	1
03-072	5MMF154CJ001	Paper Roller Bushing (Incl. 03-D)	2
03-073	5MMC183LD001	Regist P Shoot B (Incl. 03-D)	1

Fig.4 – Controller box

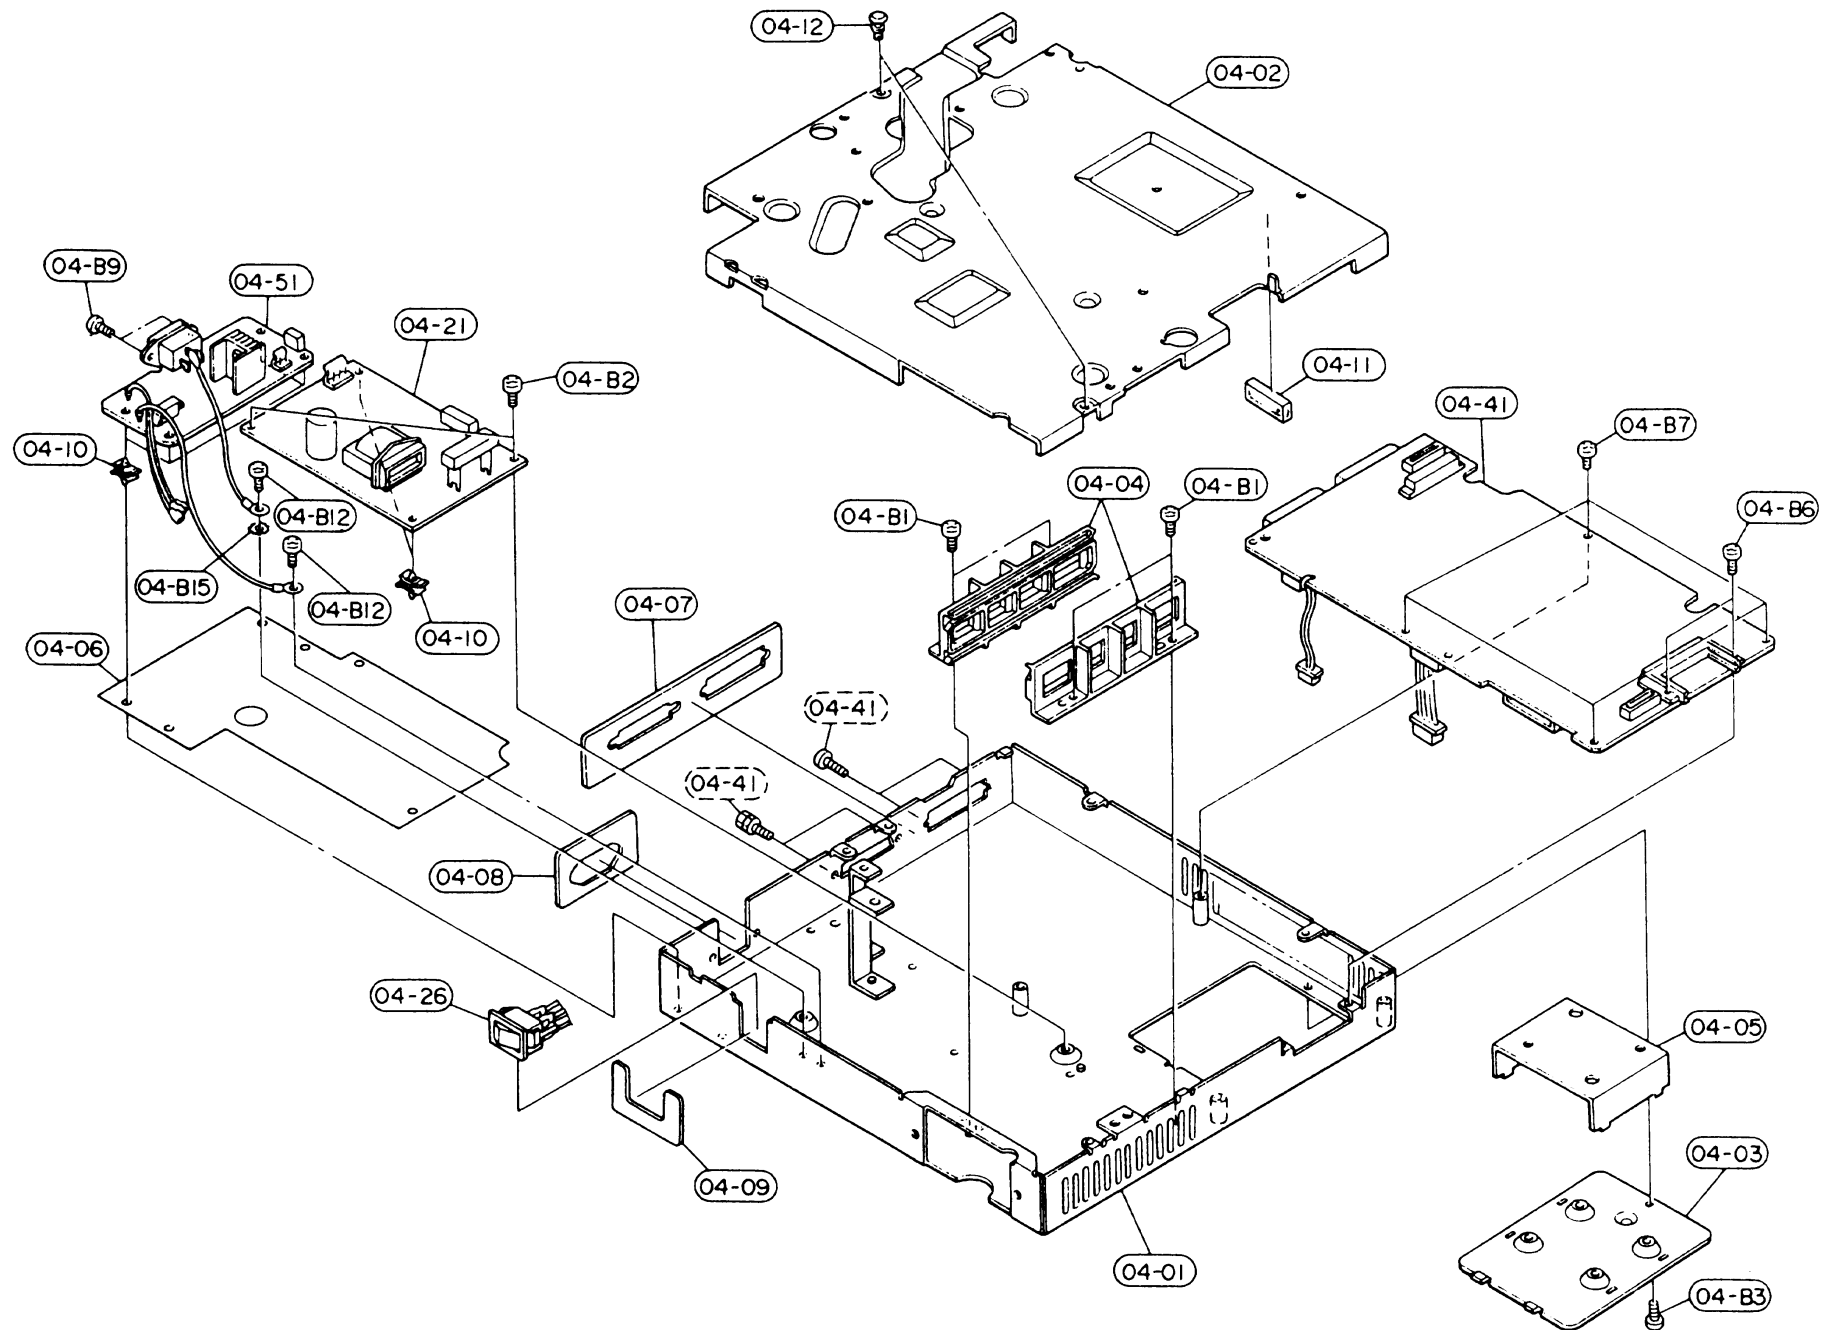


Ref No.	Part Code	Description	Quantity
04-001	5AAVCHASS015	Controller Box Assy	1
04-002	5MMB884SL001	Controller Cover	1
04-003	5MMS777SL003	Controller Box Plate	1
04-004	5MVE75JSJ001	Guide Rail	2
04-005	5MMU663LD001	Rom Push Plate	1
04-006	5MVS873KJ001	Insulator	1
04-007	5MVS755VH001	I/F Sheet	1
04-008	5MVS655VH001	Inlet Sheet	1
04-009	5MVS655VH002	Switch Sheet	1
04-010	5MVT211NW001	Doub Locking Spacer	7
04-011	5MVQ421RB004	Board Spacer	1
04-012	5MVX111NB003	Plasti Rivet	2
04-021	5AAEZF800**2	Switching Regulator	1
04-026	5ESC0220106***01	See-Saw SW UL VDE S	1
04-041	5AAPRLGG2002CH	Main PWB Assy F-800T	1
04-041	5AAPRLGG2002EH	Main PWB Assy F-800	1
04-051	5AAYF800**C3	Inlet Assy AC	1

Fig.5 – Drive unit

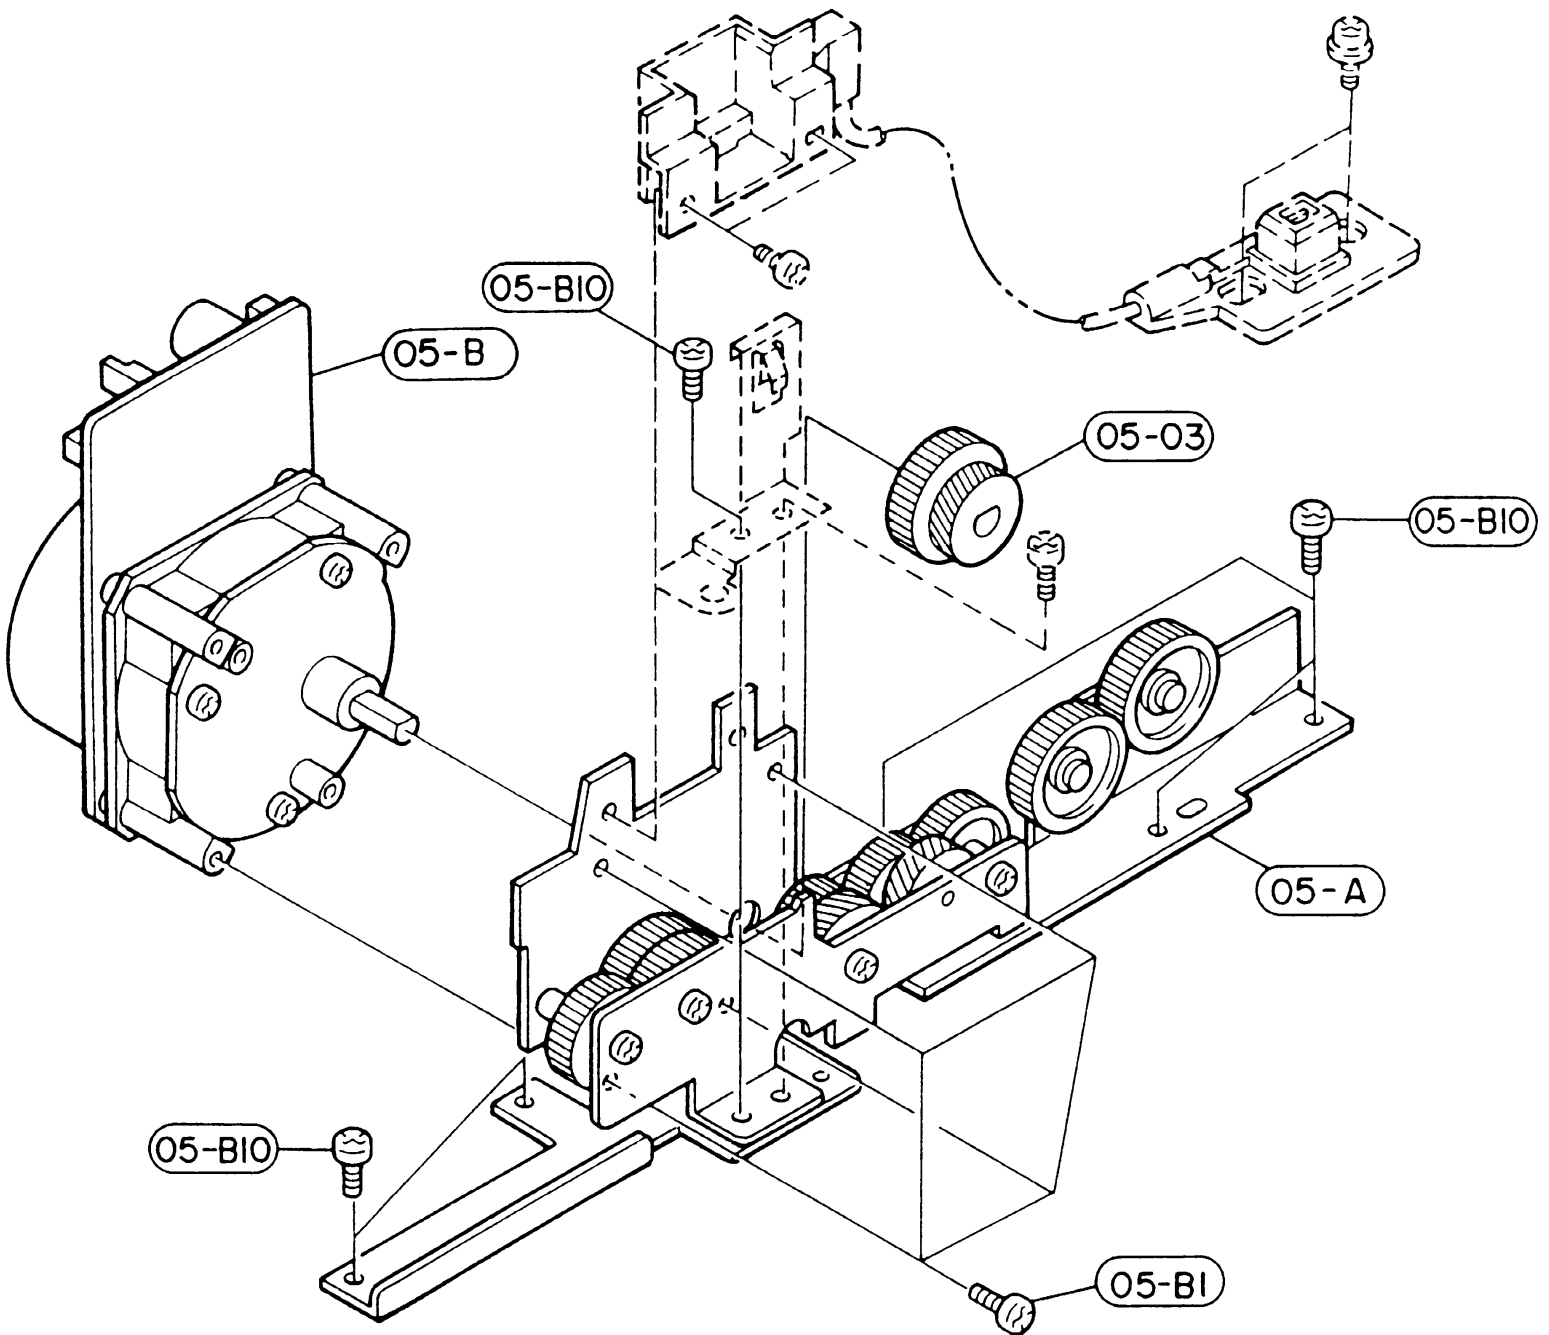


Ref No.	Part Code	Description	Quantity
05-000	5AAYF800**B2	Drive Gear Assy (with Motor)	1
05-00A	5AAYF800**C5	Drive Gear Sub (without Motor)	1
05-00B	5AAYF800**C6	Main Motor Sub (AXMT002GEA)	1
05-003	5MMG038SV01	Motor Gear Z30 H24	1

Fig.6 – Fuser

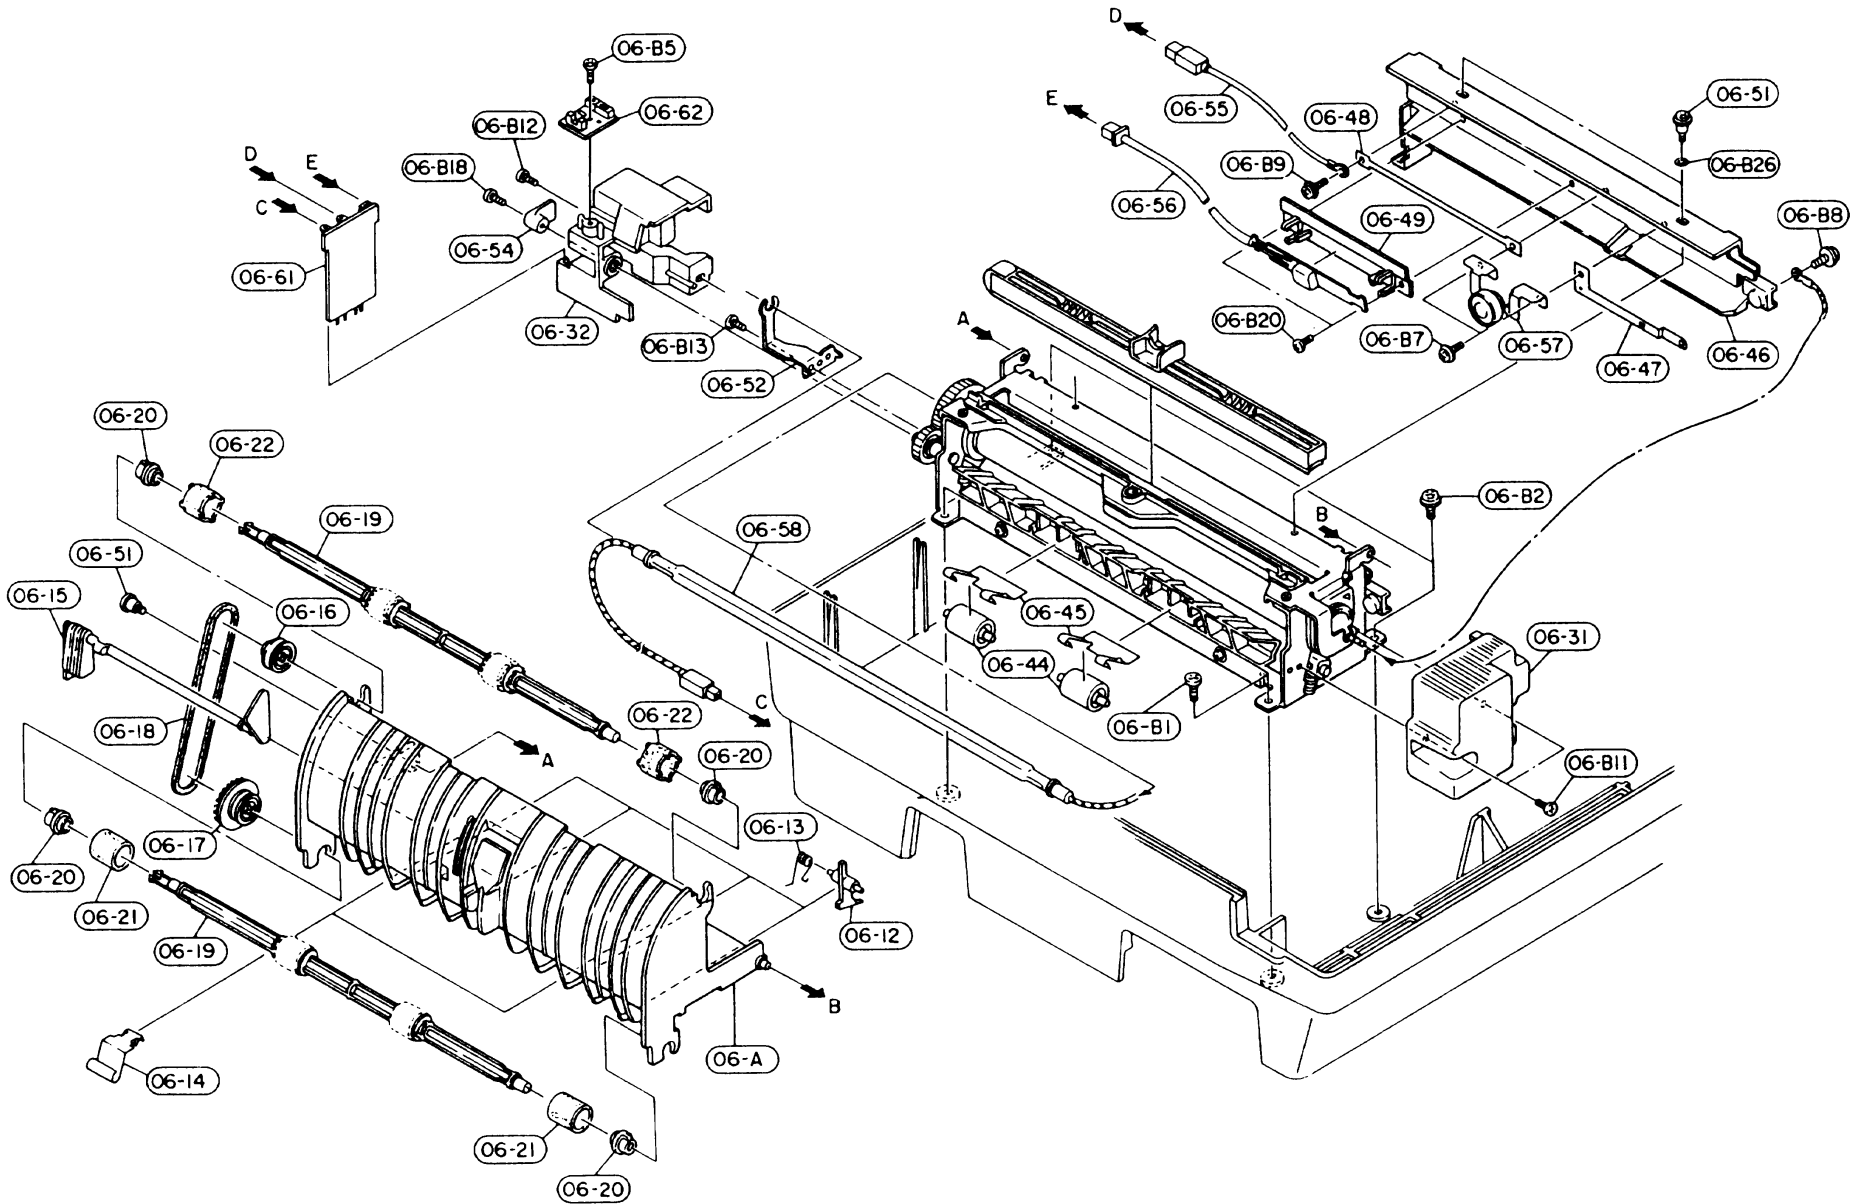

Ref No.	Part Code	Description	Quantity
06-000	FK-5	Fuser Unit	1
06-00A	5AAYF800**B4	Fuser Sub Cover Assy	1
06-00A	5AAYF800**C7	Fuser Cover	1
06-012	5MVX332XN002	Separator	4
06-013	5MMW163LJ003	Separator Spring	4
06-014	5MMP232LD001	Cleaner Spring	2
06-015	5MVX752SB001	Jam Actuator	1
06-016	5MVG307DB001	Exit Roll Pulley	1
06-017	5MVG038DB001	Exit Roll GE Z23	1
06-018	5MVS668RB003	Exit Belt	1
06-019	5MVT877CB001	Exit Roller	2
06-020	5MVM176DB003	Exit Roll Bushing	4
06-021	5MVM272RB003	Exit Tire A	2
06-022	5MVM272RB002	Exit Tire B	2
06-031	5MVB664XB001	Fuser Cover F	1
06-032	5MVB666XB001	Fuser Cover R	1
06-044	5MVM374DB001	Exit Pulley	2
06-045	5MMP332LD001	Exit Pulley Bkt	2
06-046	5MVX642CB002	Inlet Upper Guide	1
06-047	5MMS623RD001	Cord Plate F	1
06-048	5MMS713RD001	Cord Plate R	1
06-049	5MVX622XB001	Thermister Support	1
06-051	5MBSP%4007NZ	Stud Screw	3
06-052	5MMP333LD001	Heater Support	1
06-054	5MVX221XB001	Cord Stopper	1
06-055	5AACCNFR0GEA	Conn Cord Assy	1
06-056	5AAXTM001GEA	Thermistor Assy	1
06-057	5EYFFQ21001**01	Thermostat 240V 210C	1
06-058	5EZPB24125220101	Heater Lamp 240V	1
06-061	5AAPRHCC1002BH	Heat Control PWB	1
06-062	5AAPRSSC1002BH	P.W. Board Assy Jam	1
06-063	5AAVCLEAN	Cleaning Pad	

Fig.7 – Connection cords

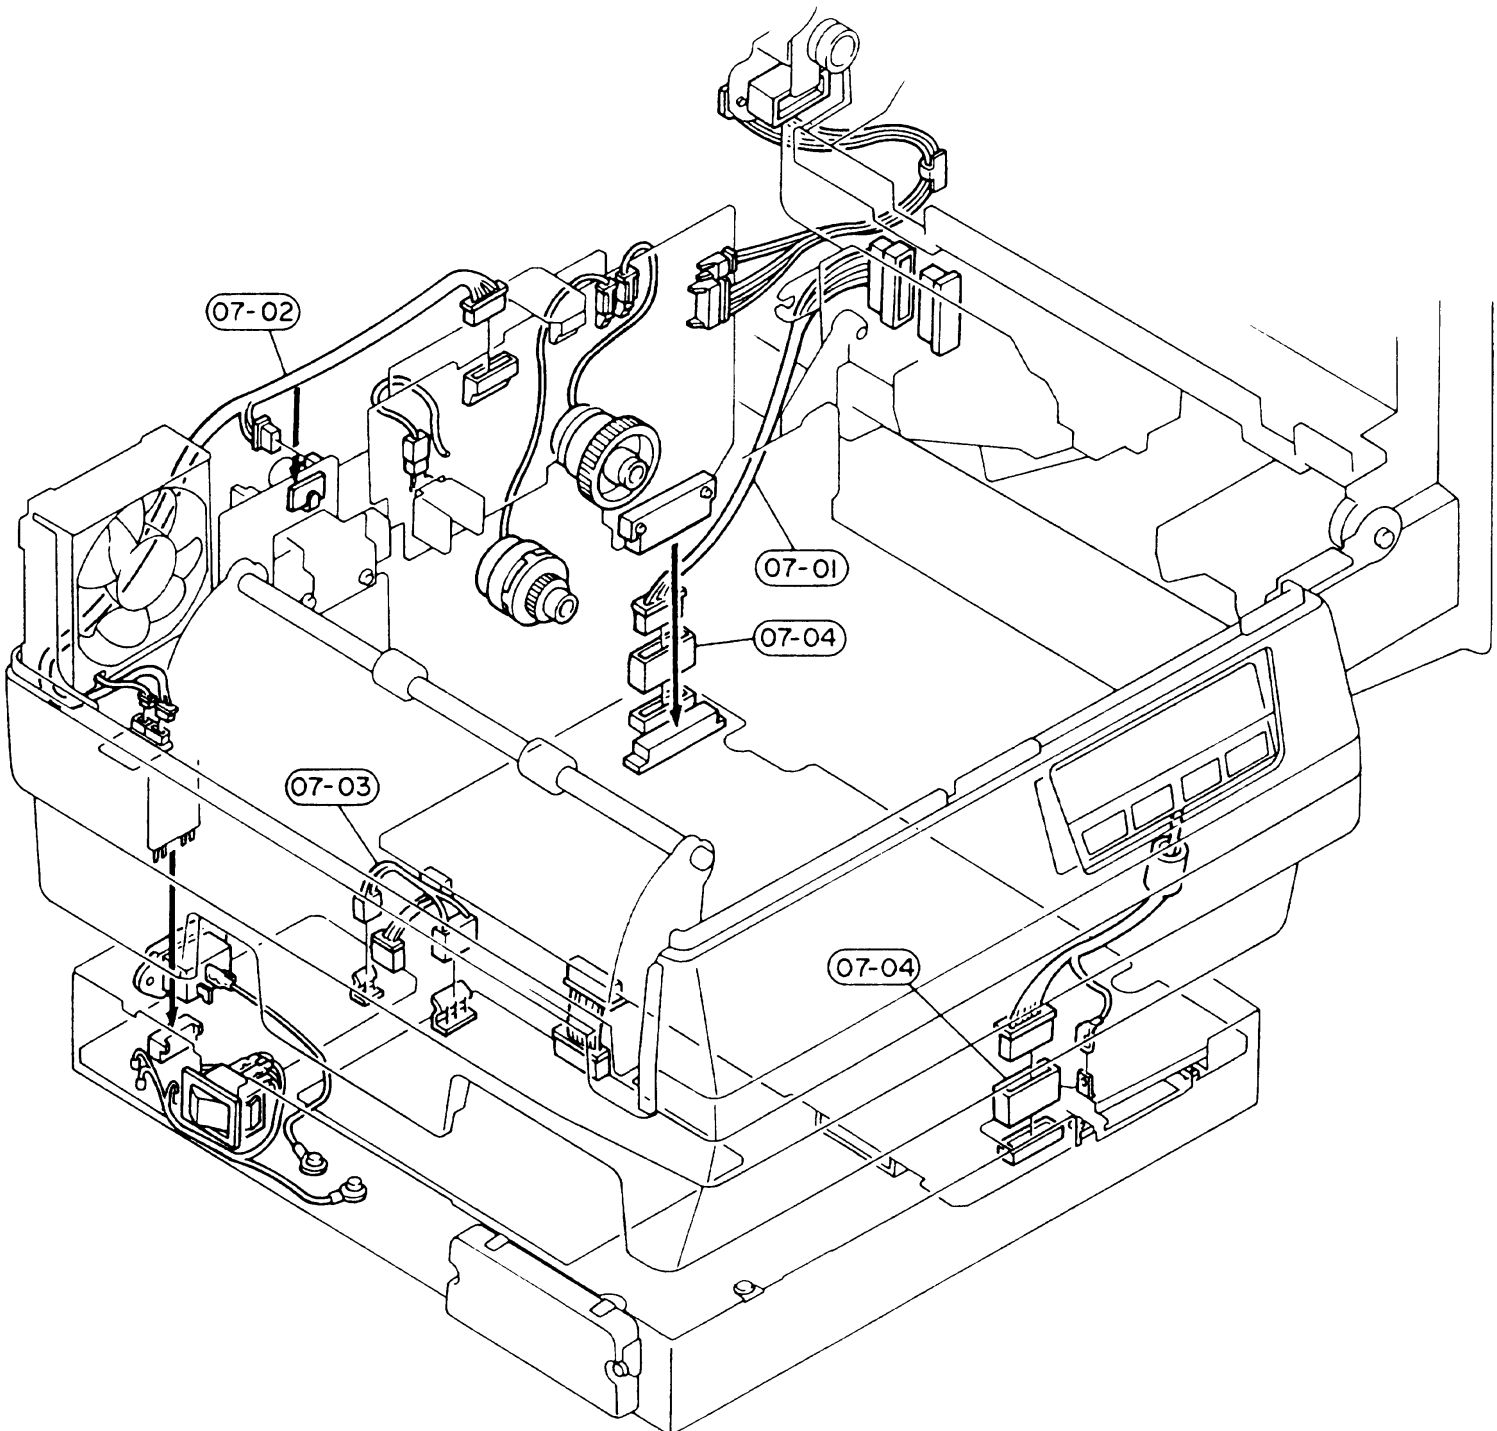

Ref No.	Part Code	Description	Quantity
07-001	5AACC�FN0GEA	Conn Cord Assy	1
07-002	5AACC�EP8GEA	Conn Cord Assy	1
07-003	5AACC�EQ3GEA	Conn Cord S00026	1
07-004	5EYCS12C129**01	Connector	2