



PRINTER OPTIONS

SO-30

PARTS CATALOGUE

14-12-1998

SO-30 Parts Catalogue

Table of Contents

External Covers (Fig.1)	3
Paper Conveying Assembly (Fig.2).....	5
Frame Assembly (Fig.3).....	8
Mail Tray Assembly 1-8 (Fig.4).....	10
Mail Tray Assembly 9 (Fig.5)	12
Drive Assembly (Fig.6)	14
Multi Tray, Door Assembly (Fig.7).....	17
Base Assembly (Fig.8)	19

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

'Ref No.'Reference number which corresponds to the parts in the figure
'Part code'.....Part code which identifies the part
'Part description'A brief description of the part
'Quantity'.....Quantity of the part used in the printer or option

Only the parts highlighted in **BOLD** should be ordered. All other parts are for reference only and are not stocked.

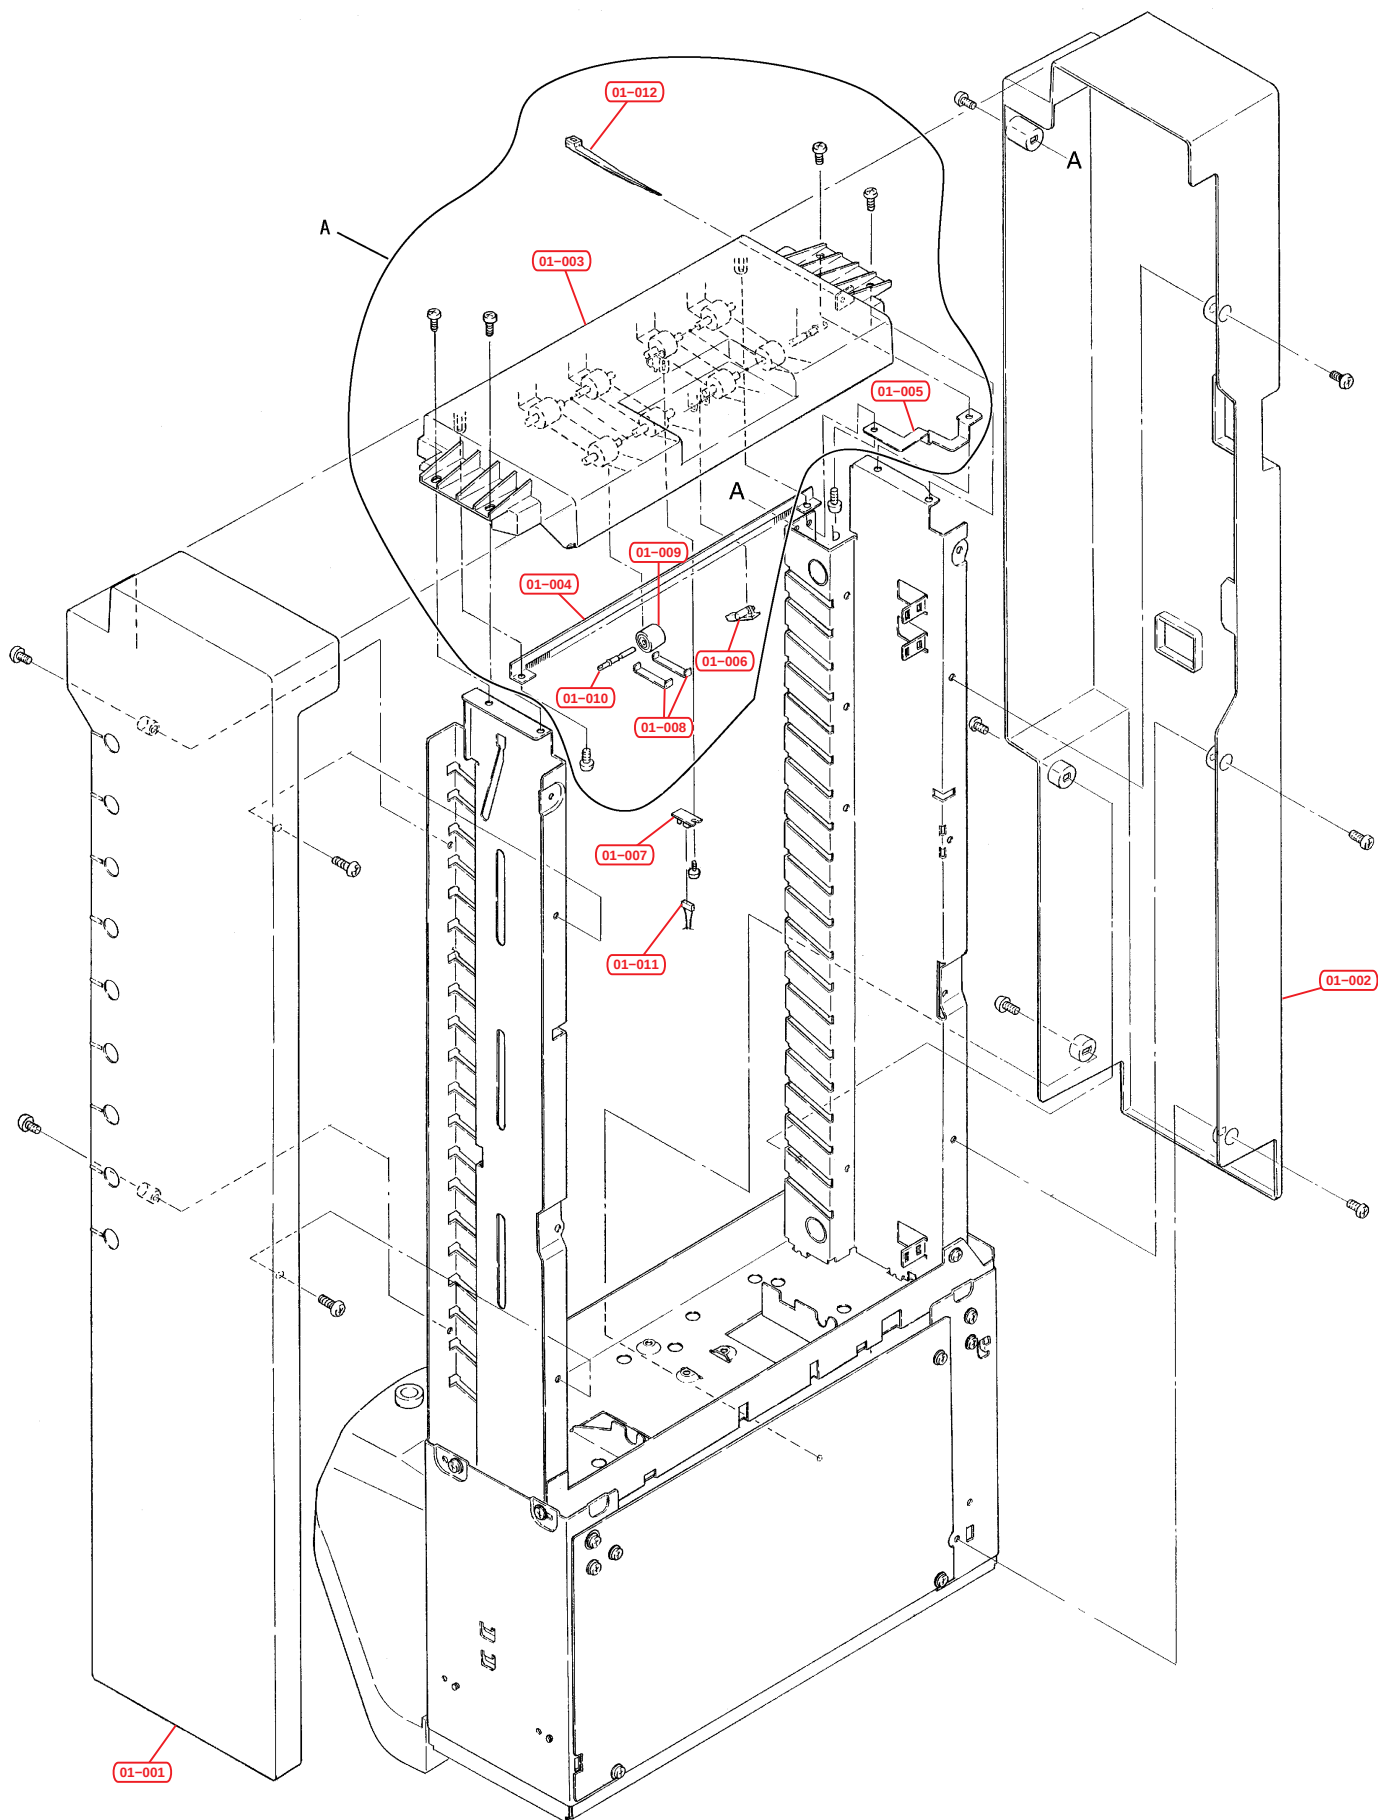


Fig.1 – External Covers

Ref No.	Part Code	Description	Quantity
01-00A	5SNSASO30E32	COVER TOP ASSEMBLY	1
01-001	5SNSP0012739	COVER FRONT	1
01-002	5SNSP0012740	COVER REAR	1
01-003	5SNSP0012698	COVER TOP	1
01-004	5SNSP0012703	BRUSH EXIT	1
01-005	5SNSP0012704	PLATE EARTH EXIT	1
01-006	5SNSP0012702	LEVER SENSOR TOP	1
01-007	5SNSASO30E19	PWB SENSOR TOP	1
01-008	5SNSP0012699	PLATE SPRING ROLLER	1
01-009	5SNSP0012700	ROLLER TOP	1
01-010	5SNSP0012701	SHAFT ROLLER TOP	1
01-011	5SNSASO30E20	CONN.ASM-CK2	1
01-012	5SNSP0012750	CLAMP WIRE	1



Ref No.	Part Code	Description	Quantity
02-00B	5SNSASO30E33	INDEXER ASSEMBLY	1
02-00F	5SNSASO30E37	REEL FILM ASSEMBLY	1
02-001	5SNSP0012705	SHAFT GUIDE 2	1
02-002	5SNSP0012710	GUIDE PAPER	1
02-003	5SNSP0012708	SHAFT GUIDE 1	1
02-004	5SNSP0012709	GUIDE CENTER	1
02-005	5SNSP0012706	ROLLER GUIDE	1
02-006	5SNSP0012707	GUIDE LOWER	1
02-007	5SNSP0012656	ROLLER INDEXER	1
02-008	5SNSP0012633	FLAPPER	1
02-009	5SNSP0012634	GUIDE FLAPPER	1
02-010	5SNSP0012636	SPRING FLAPPER	1
02-011	5SNSP0012637	GUIDE PAPER EXIT	1
02-012	5SNSASO30E07	PWB LR43	1
02-013	5SNSP0012749	SENSOR TLP1241	1
02-014	5SNSASO30E04	CONN.CORD ASSEMBLY PES	1
02-015	5SNSP0012609	GUIDE PAPER ENTRANCE	1
02-016	5SNSP0012608	BUSHING 6	1
02-017	5SNSP0012657	FRAME INDEXER UPPER	1
02-018	5SNSP0012667	BRUSH INDEXER LOWER	1
02-019	5SNSP0012638	ROLLER EXIT	1
02-020	5SNSP0012658	PLATE INDEXER	1
02-021	5SNSP0012662	GUIDE INDEXER	1
02-022	5SNSP0012660	ROLLER INDEXER W	1
02-023	5SNSP0012659	ROLLER INDEXER A	1
02-024	5SNSP0012661	SPRING INDEXER A	1
02-025	5SNSP0012629	FILM PAPER GUIDE	1
02-026	5SNSP0012631	GUIDE FILM 2	1
02-027	5SNSP0012630	GUIDE FILM 1	1
02-028	5SNSP0012649	HOLDER INDEXER	1
02-029	5SNSP0012652	ROLLER INDEXER BELT	1
02-030	5SNSASO30E10	BKT INDEXER	1
02-031	5SNSP0012664	PULLEY GEAR Z31	1
02-032	5SNSP0012665	FLANGE PULLEY	1
02-033	5SNSP0012666	GEZR Z20	1
02-034	5SNSP0012663	PLATE EARTH INDEXER 1	1
02-035	5SNSP0012653	FRAME INDEXER LOWER	1
02-036	5SNSP0012654	RIB FRONT INDEXER	1
02-037	5SNSP0012655	RIB REAR INDEXER	1
02-038	5SNSP0012755	BUSHING 4	1
02-039	5SNSP0012744	WIRE CLAMP	1
02-040	5SNSP0012750	WIRE CLAMP	1
02-041	5SNSP0012610	CUSHION SENSOR	1
02-042	5SNSP0012585	SHEET	1
02-043	5SNSP0012670	PLATE EARTH INDEXER 2	1

Ref No.	Part Code	Description	Quantity
02-044	5SNSP0012800	CUSHION GUIDE ROLLER	1
02-045	5SNSP0012669	BRUSH INDEXER UPPER	1
02-046	5SNSP0012650	PLATE EARTH HOLDER 1	1
02-047	5SNSP0012651	PLATE EARTH HOLDER 2	1
02-048	5SNSP0012611	GUIDE PAPER ENTRANCE	1
02-049	5SNSP0012635	BUSHING 4	1
02-050	5SNSP0012639	BKT SENSOR	1
02-051	5SNSASO30E05	PWB SENSOR	1
02-052	5SNSP0012640	HOLDER SENSOR	1
02-053	5SNSP0012675	PULLEY S2M-20	1
02-054	5SNSP0012674	FLANGE PULLEY	1
02-055	5SNSP0012648	CLIP 5	1
02-056	5SNSP0012592	COVER SENSOR	1


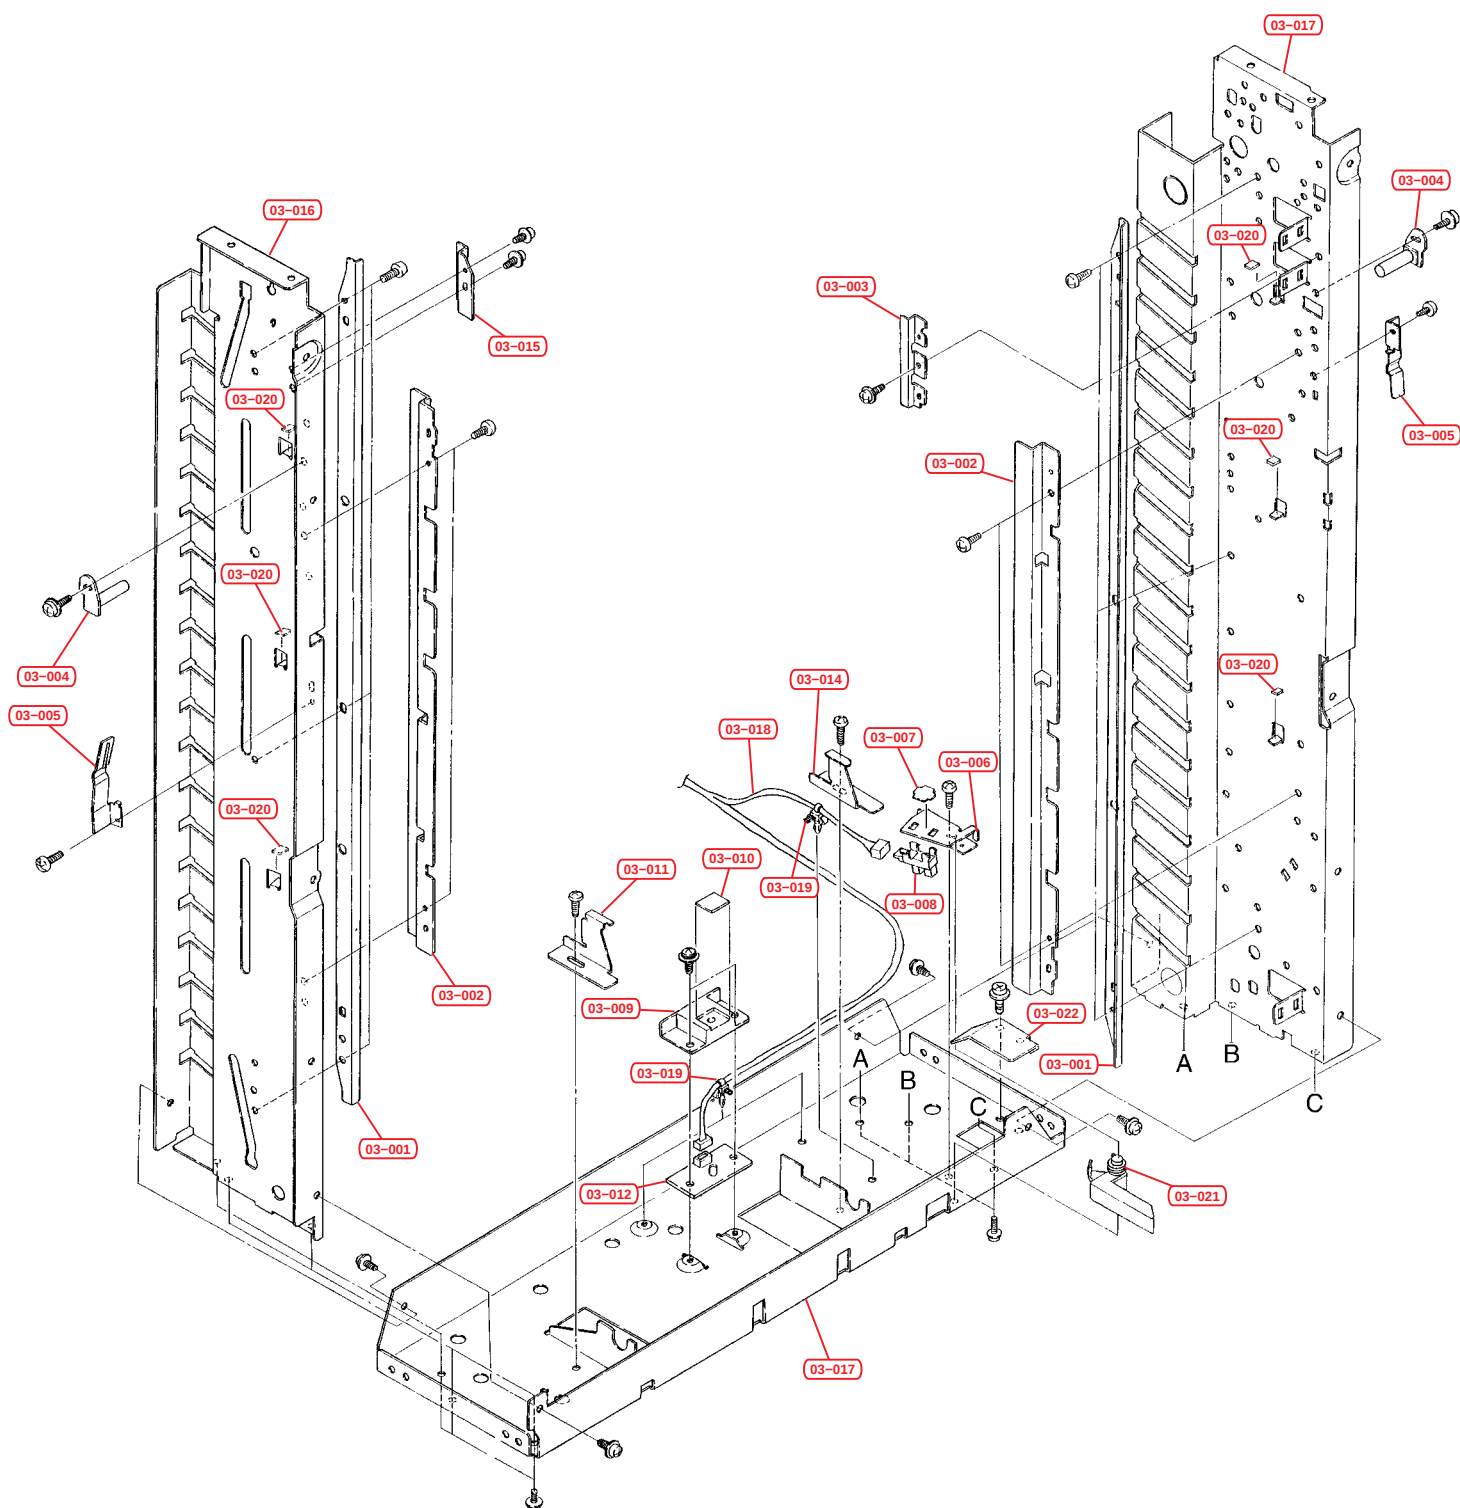


Fig.3 – Frame Assembly

Ref No.	Part Code	Description	Quantity
03-001	5SNSP0012599	RAIL INDEXER	1
03-002	5SNSP0012711	GUIDE A RAIL	1
03-003	5SNSP0012605	GUIDE RAIL	1
03-004	5SNSP0012536	PIN ROCK	1
03-005	5SNSP0012597	ACTUATOR K	1
03-006	5SNSP0012584	BKT SENSOR	1
03-007	5SNSP0012585	SHEET SENSOR	1
03-008	5SNSP0012743	SENSOR GP1S74P	1
03-009	5SNSP0012592	COVER SENSOR	1
03-010	5SNSP0012593	FILM SENSOR	1
03-011	5SNSP0012589	PLATE B STOPPER F	1
03-012	5SNSASO30E01	PWB PT43	1
03-013	5SNSP0012586	LEVER SENSOR	1
03-014	5SNSP0012591	PLATE B STOPPER R	1
03-015	5SNSP0012600	GUIDE C RAIL	1
03-016	5SNSP0012594	FRAME FRONT	1
03-017	5SNSP0012602	FRAME REAR	1
03-018	5SNSASO30E02	CONN.CORD ASSMBLY PT	1
03-019	5SNSP0012744	CLAMP WIRE	1
03-020	5SNSP0012595	MAT CUSHION	1
03-021	5SNSP0012587	SPRING LEVER	1
03-022	5SNSP0012808	COVER CASTER	1

Fig.4 – Mail Tray Assembly 1-8

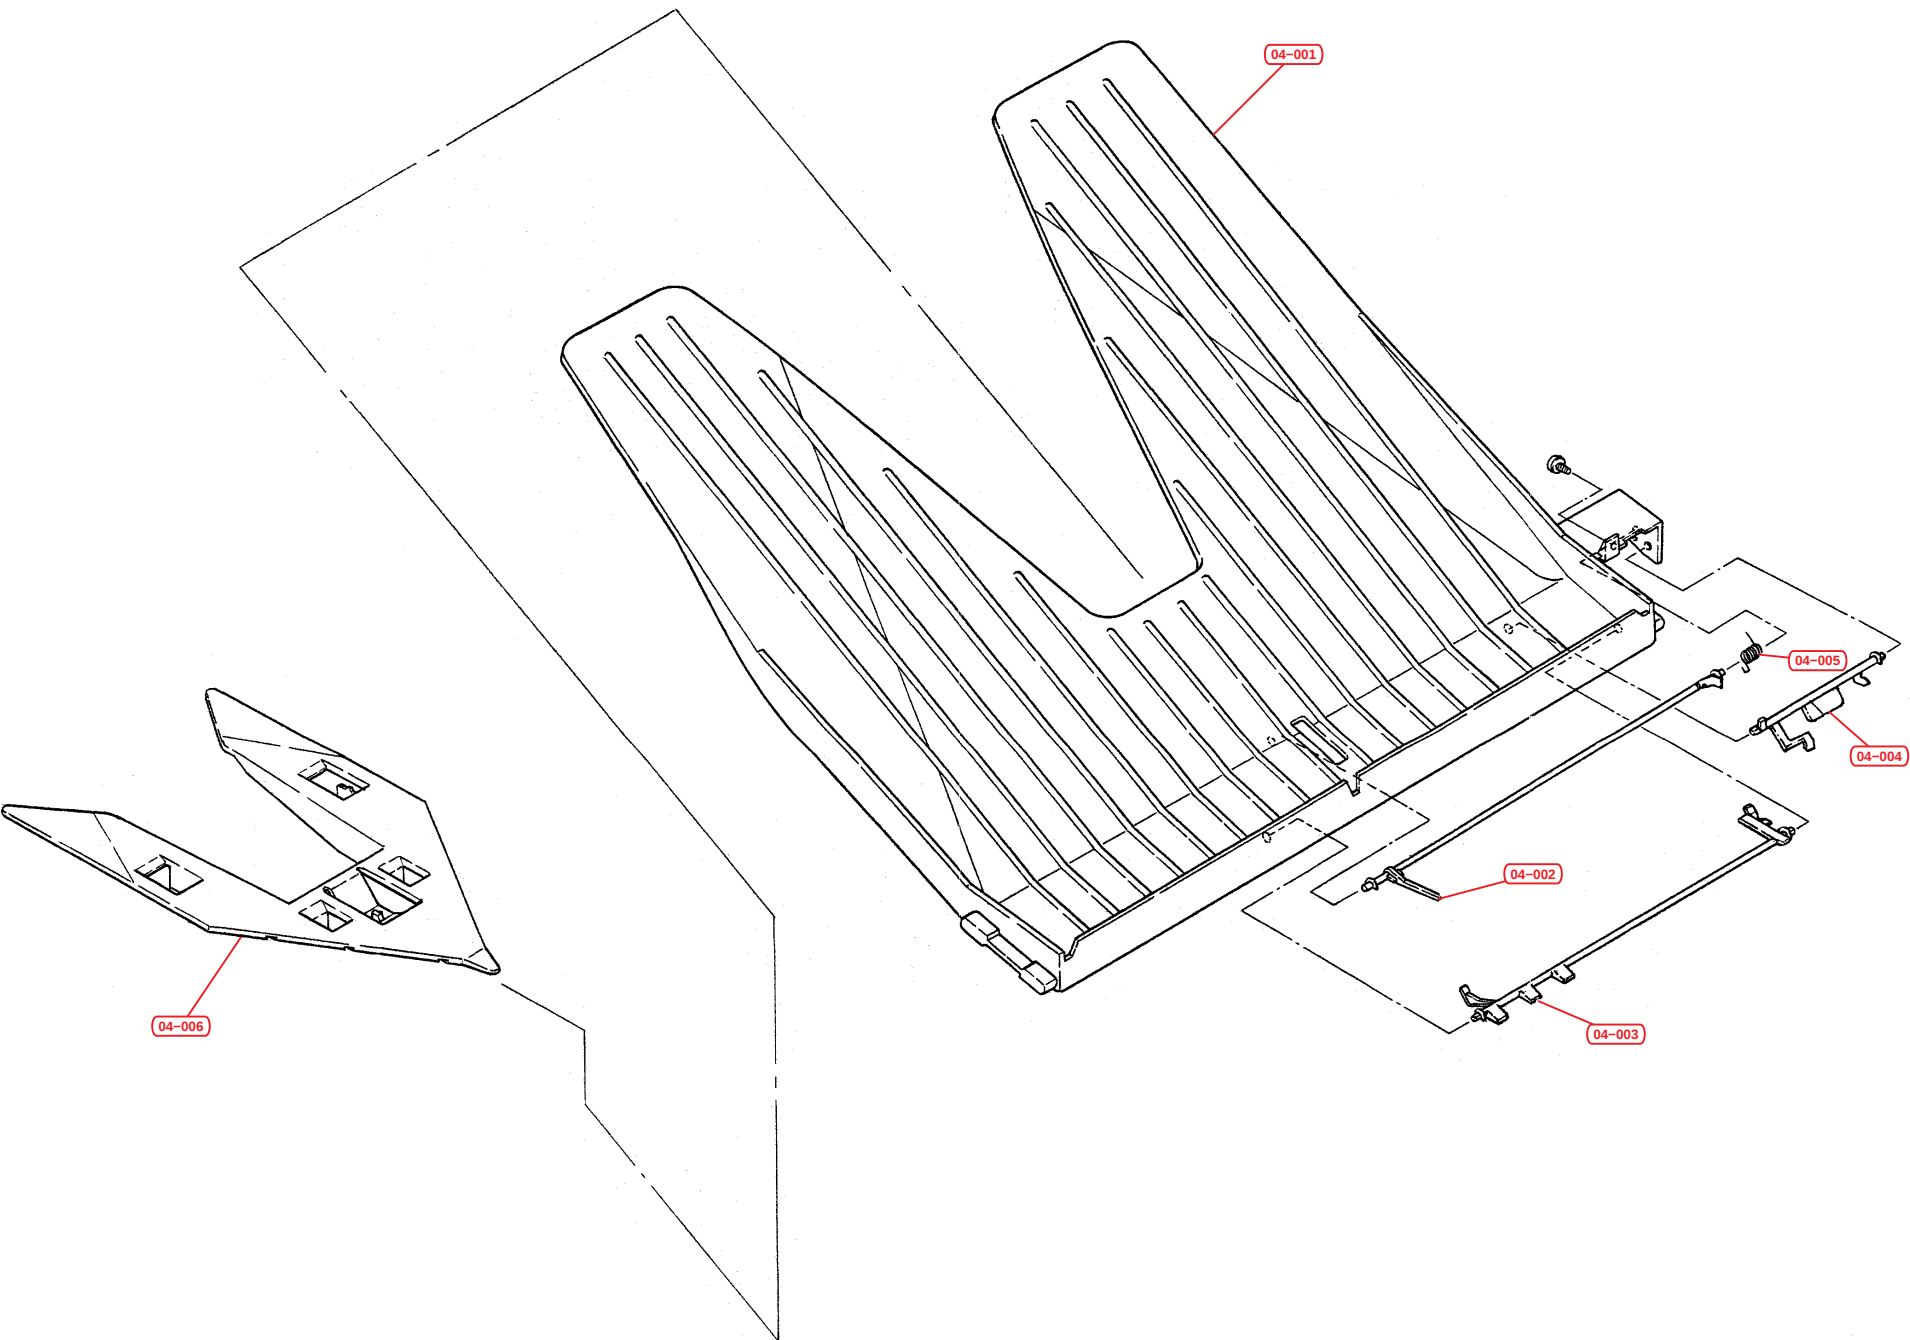

Ref No.	Part Code	Description	Quantity
04-001	5SNSP0012731	TRAY MAIL	1
04-002	5SNSP0012732	LEVER EMPTY	1
04-003	5SNSP0012734	LEVER FULL 1	1
04-004	5SNSP0012735	LEVER FULL 2	1
04-005	5SNSP0012801	SPRING LEVER EMPTY	1
04-006	5SNSP0012802	AADITIONAL MAIL TRAY	1

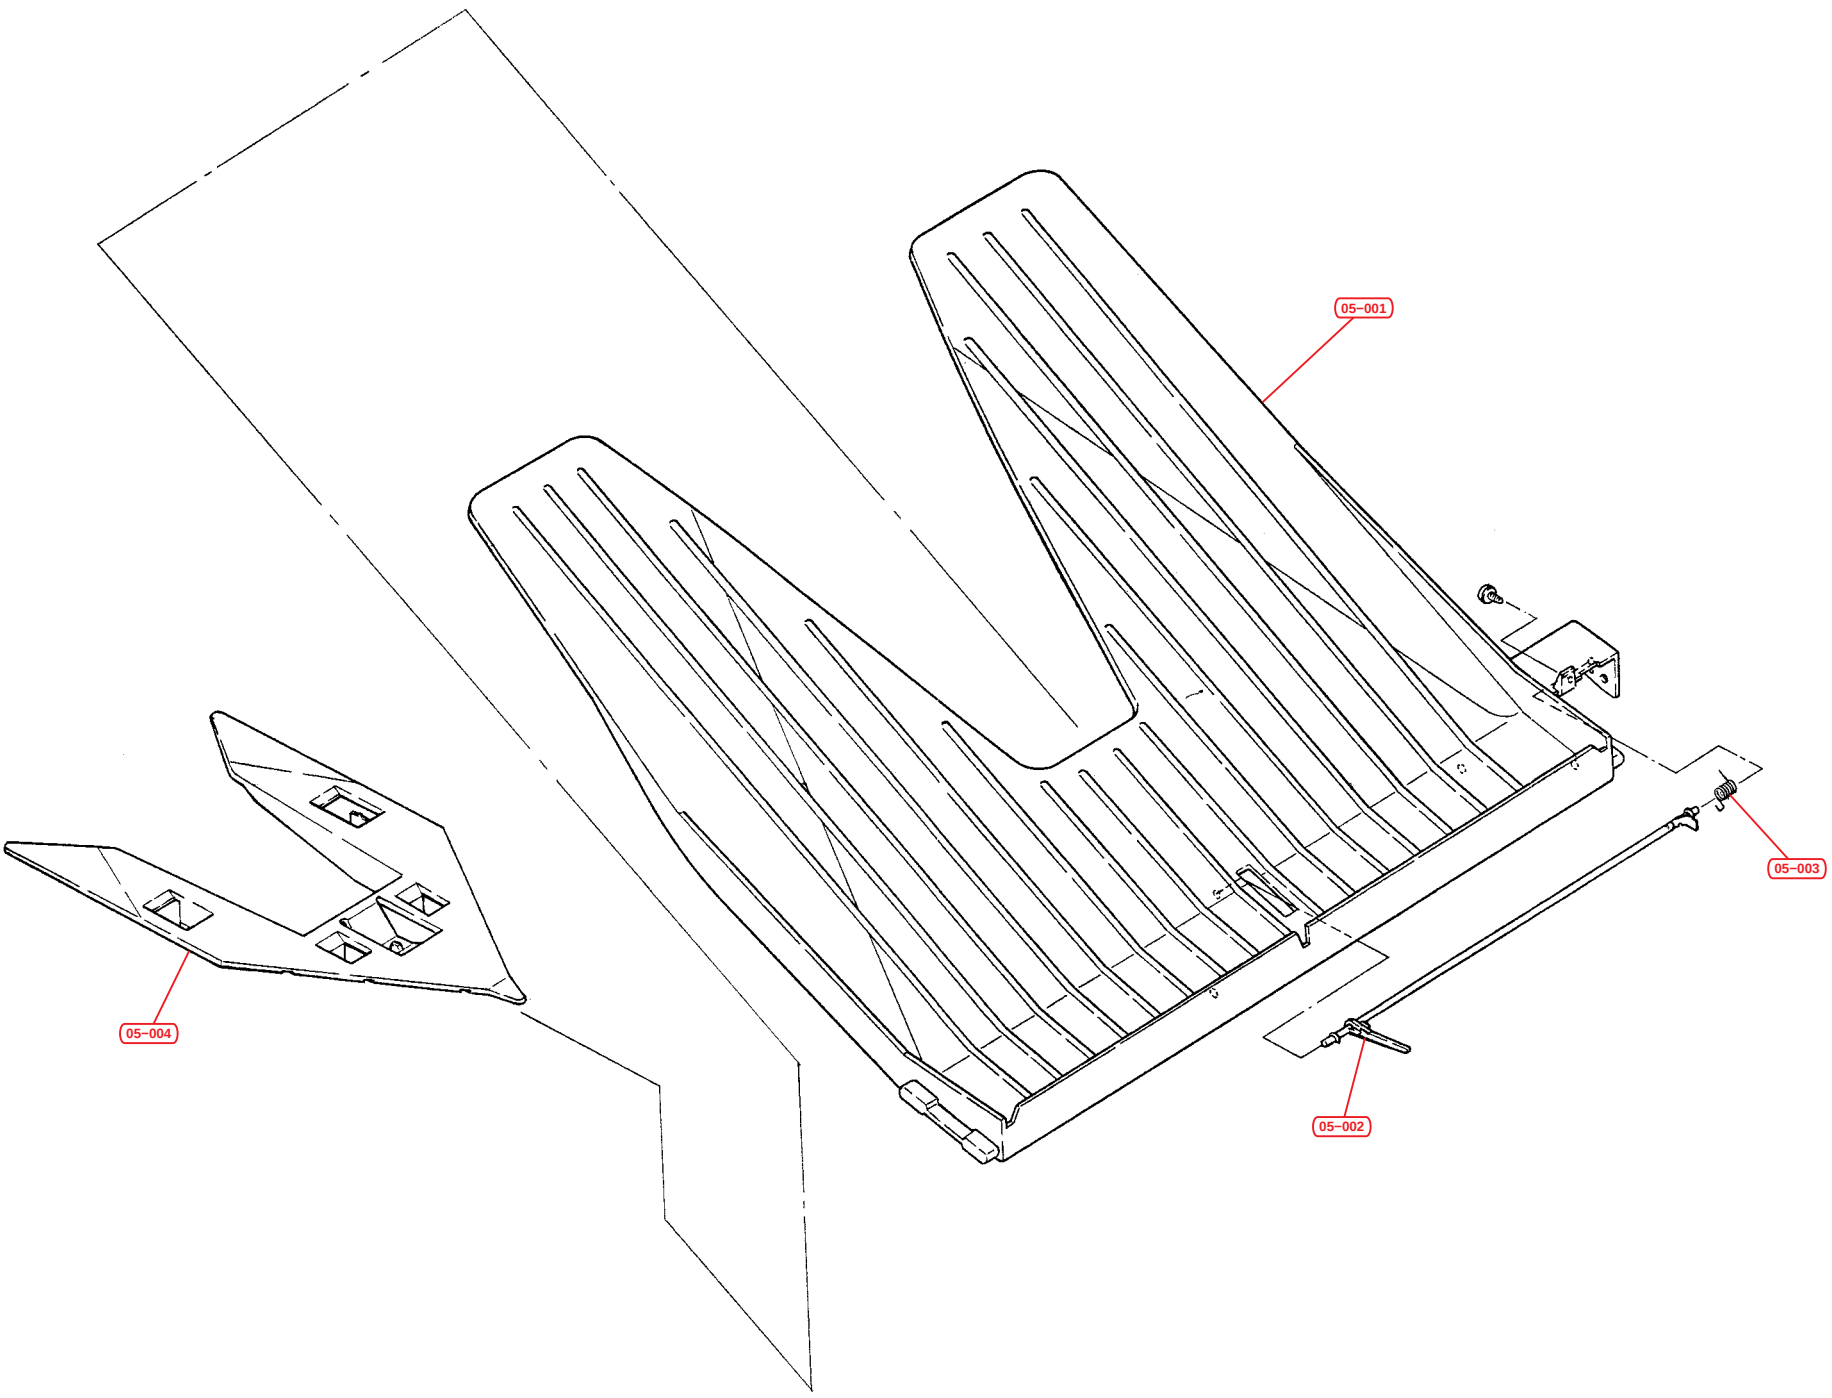


Fig.5 – Mail Tray Assembly 9

Ref No.	Part Code	Description	Quantity
05-001	5SNSP0012731	TRAY MAIL	1
05-002	5SNSP0012732	LEVER EMPTY	1
05-003	5SNSP0012801	SPRING LEVER EMPTY	1
05-004	5SNSP0012802	ADDITIONAL MAIL TRAY	1

Ref No.	Part Code	Description	Quantity
06-001	5SNSASO30E25	PWB SENSOR A	1
06-002	5SNSP0012607	ROLLER ENTRANCE	1
06-003	5SNSP0012632	SHAFT HANGER FILM	1
06-004	5SNSP0012621	SHAFT REEL FILM	1
06-005	5SNSP0012624	ARBOR REEL FILM	1
06-006	5SNSO0012622	PULLEY REEL FILM	1
06-007	5SNSP0012746	SPACER KGLS-18S	1
06-008	5SNSP0012623	SPRING REEL FILM	1
06-009	5SNSP0012626	SPRING REEL FILM R	1
06-010	5SNSP0012617	BELT S3M 442 60	1
06-011	5SNSP0012615	BELT S3M 430 60	1
06-012	5SNSP0012613	PULLEY S3M 18 A	1
06-013	5SNSP0012619	PULLEY S3M 18 B	1
06-014	5SNSP0012627	REEL ADJUST ARBOR	1
06-015	5SNSP0012628	SPRING REEL ADJUST	1
06-016	5SNSP0012752	BUSHING MF	1
06-017	5SNSP0012608	BUSHING 6	1
06-018	5SNSP0012641	SPRING REEL SHAFT	1
06-019	5SNSP0012612	SHAFT DRIVE LOWER	1
06-020	5SNSP0012614	PULLEY S3M 23	1
06-021	5SNSP0012648	CLIP 5	1
06-022	5SNSP0012756	WIRE CLAMP	1
06-023	5SNSP0012616	BELT S3M 5760	1
06-024	5SNSP0012743	SENSOR GP1S74P	1
06-025	5SNSP0012713	BKT CONN. INTER	1
06-026	5SNSASO30E23	CONT SUB PWB	1
06-027	5SNSASO30E24	EPROM	1
06-028	5SNSP0012712	SWITCHING REG	1
06-029	5SNSP0012676	MOTOR INDEXER	1
06-030	5SNSP0012680	PLATE ENCODER 40	1
06-031	5SNSP0012679	COLLAR MOTOR	1
06-032	5SNSP0012678	GEAR WORM	1
06-033	5SNSP0012677	BKT MOTOR INDEXER	1
06-034	5SNSP0012681	BKT SENSOR INDEXER	1
06-035	5SNSP0012748	SENSOR TLP1225	1
06-036	5SNSP0012671	PLATE ENCODER 4	1
06-037	5SNSP0012620	GEAR Z30	1
06-038	5SNSP0012747	SPACER KGLS-16S	1
06-039	5SNSP0012618	SHAFT DRIVE INDEXER	1
06-040	5SNSP0012604	PLATE CONT. PWB	1
06-041	5SNSP0012745	SW INDEXER POSITION	1
06-042	5SNSP0012603	SENSOR BKT PWB	1
06-043	5SNSP0012675	GEAR LIMIT	1
06-044	5SNSP0012750	WIRE CLAMP SKB-1M	1
06-045	5SNSASO30E09	BKT MOTOR CONVEYING	1

Ref No.	Part Code	Description	Quantity
06-046	5SNSP0012646	SHAFT DRIVE UPPER	1
06-047	5SNSP0012647	GEAR Z23	1
06-048	5SNSP0012754	BEARING MF106ZZ	1
06-049	5SNSP0012753	BELT S2M 60	1
06-050	5SNSP0012643	PULLEY IDLER GEAR	1
06-051	5SNSP0012644	MOTOR CONVEYING	1
06-052	5SNSP0012645	PULLEY S2M 16	1
06-053	5SNSASO30E26	CONN. CORD BIN 2	1
06-054	5SNSASO30E28	SENSOR B PWB	1
06-055	5SNSP0012672	MOTOR REVERSE BKT	1
06-056	5SNSP0012744	WIRE CLAMP	1
06-057	5SNSP0012803	BELT S2M 56-40	1
06-058	5SNSP0012804	MOTOR REVERSE	1
06-059	5SNSP0012805	REAR COVER BKT	1
06-060	5SNSASO30E16	SOLENOID BKT	1
06-061	5SNSP0012682	LEVER FLIPPER	1
06-062	5SNSP0012683	SOLENOID NS38	1
06-063	5SNSP0012684	SOLENOID SPRING	1
06-064	5SNSP0012606	SENSOR COVER BKT	1
06-065	5SNSASO30E13	CONN. CORD SENSOR 2	1
06-066	5SNSASO30E22	CONN. CORD REG	1
06-067	5SNSASO30E03	CONN. CORD SW	1
06-068	5SNSASO30E14	CONN. CORD MOTOR	1
06-069	5SNSASO30E06	CONN. CORD INDEXER	1
06-070	5SNSASO30E27	CONN. CORD BIN	1
06-071	5SNSASO30E15	CONN. CORD MOTOR	1
06-072	5SNSASO30E12	CONN. CORD TOP	1
06-073	5SNSP0012585	SENCOR SHEET	1
06-074	5SNSASO30E08	CONN. CORD REVERSE	1
06-075	5SNSP0012757	SPACER KGLS-6S	1

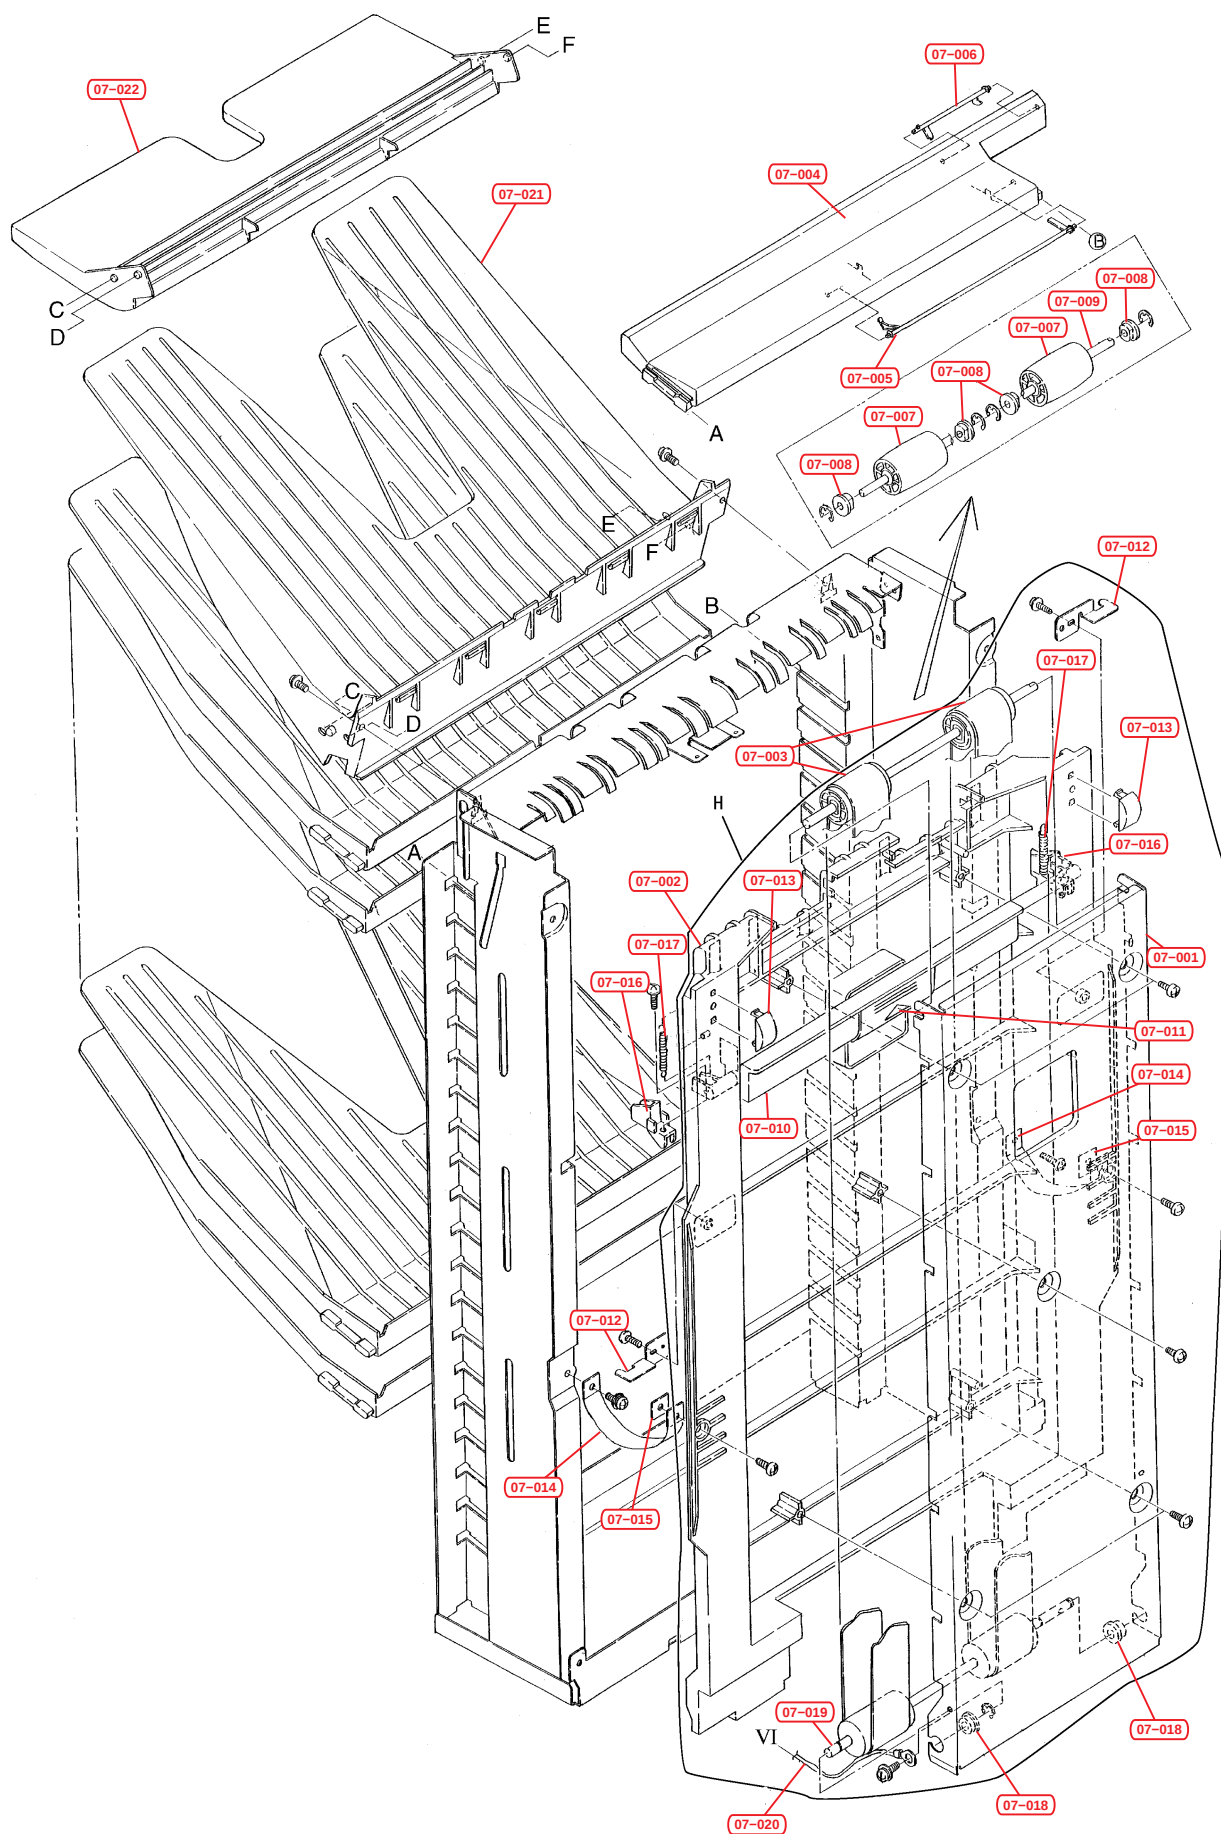


Fig.7 – Multi Tray, Door Assembly

Ref No.	Part Code	Description	Quantity
07-001	5SNSP0012691	FRAME DOOR	1
07-002	5SNSP0012685	COVER DOOR	1
07-003	5SNSP0012688	CONVEYING BELT	1
07-004	5SNSP0012737	SENSOR COVER	1
07-005	5SNSP0012734	LEVER FULL 1	1
07-006	5SNSP0012735	LEVER FULL 2	1
07-007	5SNSP0012690	ROLLER IDLER	1
07-008	5SNSP0012608	BUSHING 6	1
07-009	5SNSP0012689	SHAFT ROLLER IDLER	1
07-010	5SNSP0012693	JAM LEVER	1
07-011	5SNSP0012694	JAM LEVER SEAL	1
07-012	5SNSP0012686	JAM INTERLOCK BKT	1
07-013	5SNSP0012687	DOOR LOCK SUPPORT	1
07-014	5SNSP0012601	DOOR STOPPER	1
07-015	5SNSP0012697	DOOR LOCKER PLATE	1
07-016	5SNSP0012696	DOOR LOCKER	1
07-017	5SNSP0012695	JAM LEVER SPRING	1
07-018	5SNSP0012806	BEARING LF1360ZZ	1
07-019	5SNSP0012692	CONVEYING BELT ROLLER	1
07-020	5SNSASO30E18	CONN. CORD	1
07-021	5SNSP0012738	MULTI TRAY	1
07-022	5SNSP0012807	MULTI TRAY GUIDE	1

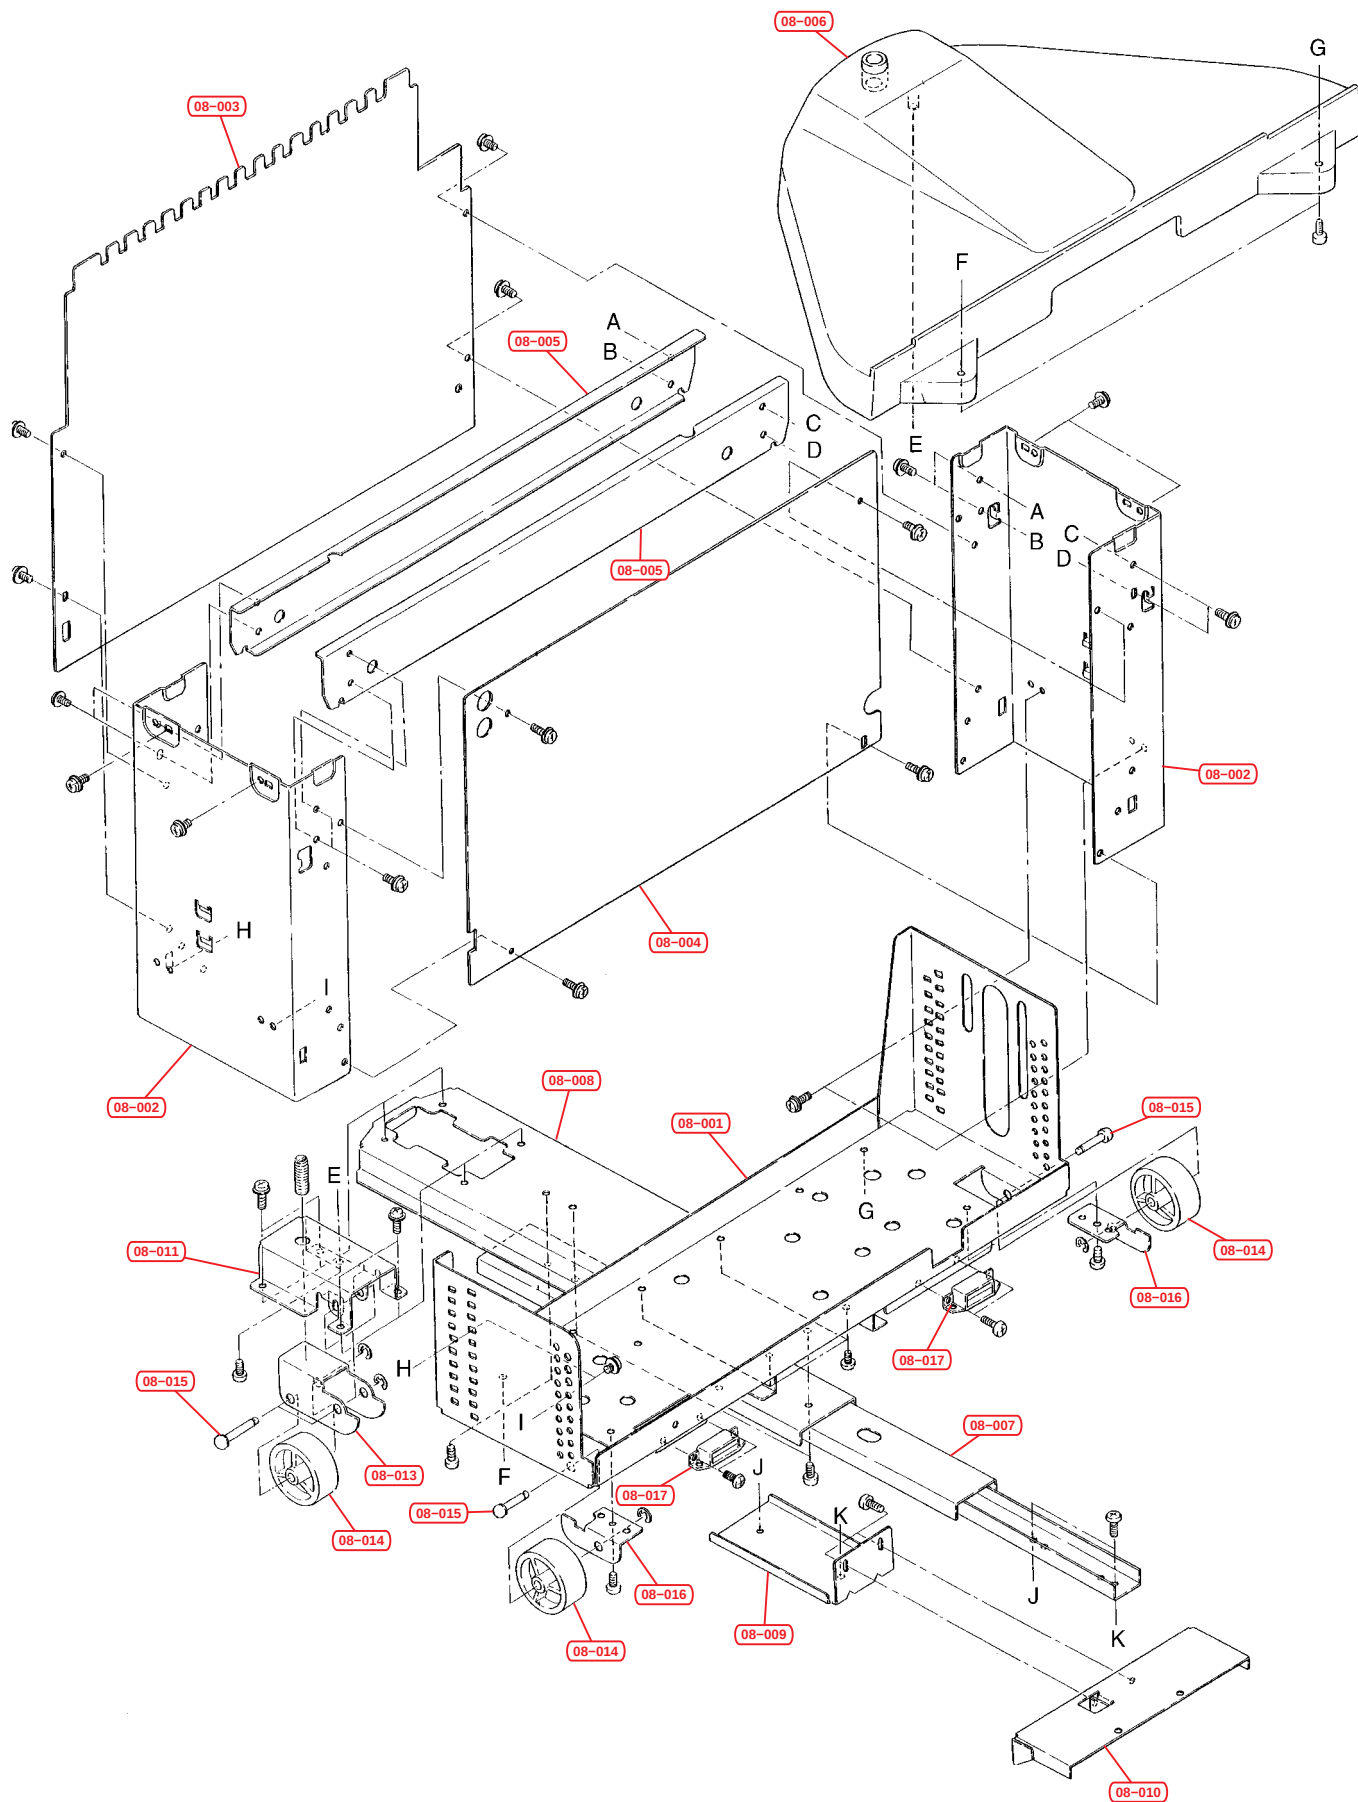


Fig.8 – Base Assembly

Ref No.	Part Code	Description	Quantity
08-000	5SNSASO30E39	DOOR ASSEMBLY	1
08-001	5SNSP0012714	HIGHT ADJUST BKT	1
08-002	5SNSP0012715	KC FRAME	1
08-003	5SNSP0012729	COVER L PLATE	1
08-004	5SNSP0012730	COVER R PLATE	1
08-005	5SNSP0012716	SIDE REINFORCEMENT	1
08-006	5SNSP0012726	CASTER COVER	1
08-007	5SNSP0012725	RAIL	1
08-008	5SNSP0012723	FRAME ADJUST	1
08-009	5SNSP0012724	JOINT PLATE	1
08-010	5SNSP0012741	JOINT BKT	1
08-011	5SNSP0012722	CASTER ADJUST BKT	1
08-012	5SNSP0012728	ADJUST SCREW	1
08-013	5SNSP0012719	PLATE	1
08-014	5SNSP0012720	CASTER ROLLER	1
08-015	5SNSP0012721	CASTER SHAFT	1
08-016	5SNSP0012717	PLATE	1
08-017	5SNSP0012718	CATCH MAGNET	1