



PRINTER OPTIONS

HS-1 / HS-2

PARTS CATALOGUE

HS-1 / HS-2 Parts Catalogue

Table of Contents


Exploded View (HS-1/HS-2) (Fig.1).....3
Exploded View (HS-2 Base Unit) (Fig.2)5

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:


- 'Ref No.'Reference number which corresponds to the parts in the figure
- 'Part code'.....Part code which identifies the part
- 'Part description'A brief description of the part
- 'Quantity'.....Quantity of the part used in the printer or option

Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

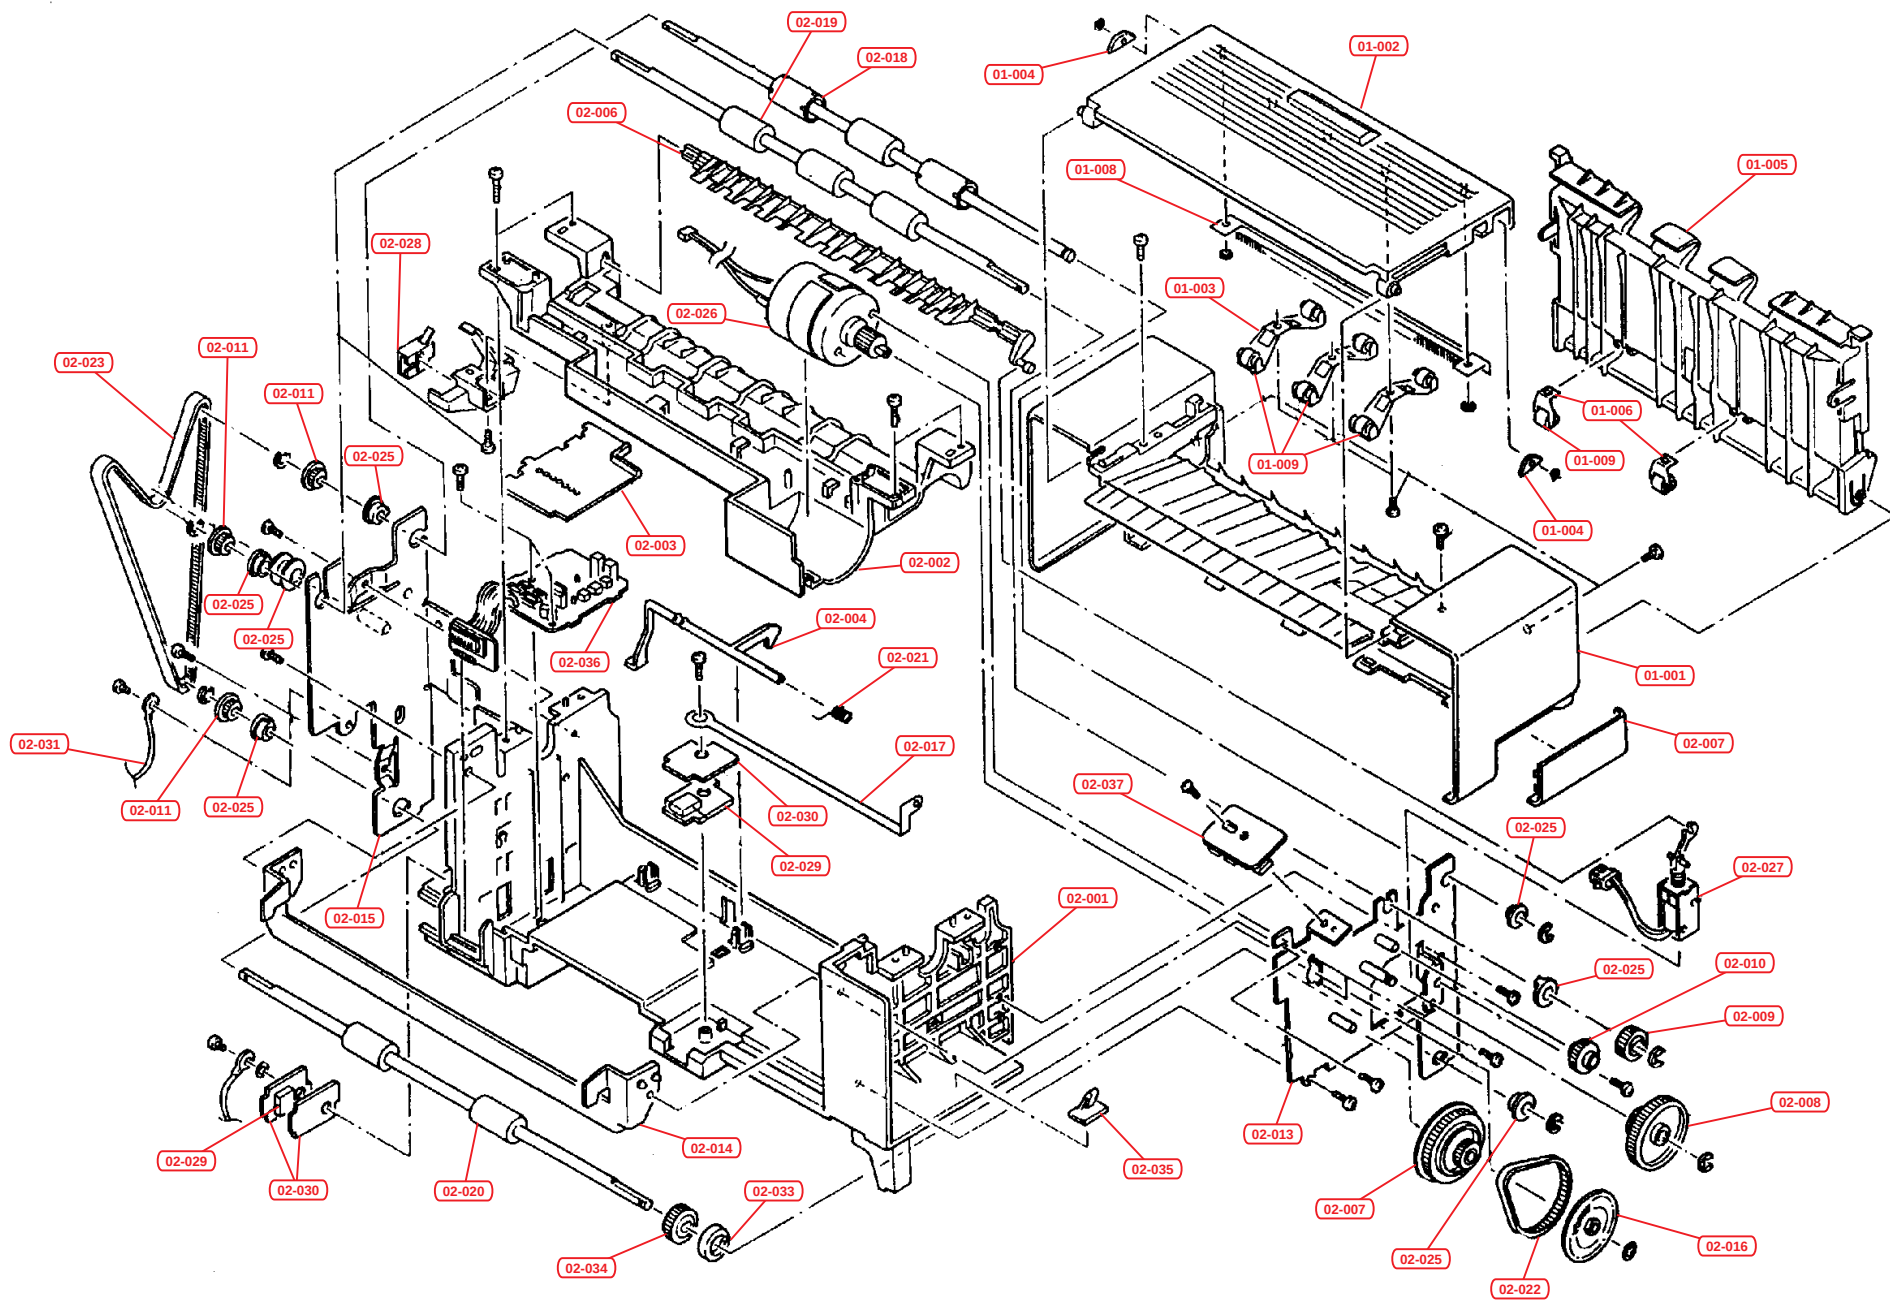

Ref No.	Part Code	Description	Quantity
01-001	5MVB877SH004	COVER	1
01-002	5MVB872SH012	LID TOP	1
01-003	5MMX621LD006	SPRING ROLLER	3
01-004	5MVX211DB011	LEVER LOCK	2
01-005	5MVB872SH013	LID REAR	1
01-006	5MMX222LD010	SPRING ROLLER	2
01-007	5MVS739SH001	COVER CONNECTOR	1
01-008	5MMX711AD002	BRUSH EXIT	1
01-009	5MVM273DB003	ROLLER PINCH	8
02-001	5MVX877SH001	BASE	1
02-002	5MVX866SH007	GUIDE INNER	1
02-003	5MVS667SH002	LID PWB	1
02-004	5MVX642SH004	LEVER SENSOR	1
02-006	5MVX542DB002	HOLDER SWITCH	1
02-006	5MVX832SB006	GUIDE FLAP	1
02-007	5MVG368DB001	GEAR Z28-P56	1
02-008	5MVG148DB018	GEAR Z14-Z36	1
02-009	5MVG127DB029	GEAR Z14	1
02-010	5MVG127DB030	GEAR FEED Z14	1
02-011	5MVG327DB003	PULLEY P17	1
02-012	5MVM177DB004	BELT IDLE PULLEY	3
02-013	5MMS777SL004	FRAME RIGHT	1
02-014	5MMX822SL002	BRACKET HOOK	1
02-015	5MMS767SL005	FRAME LEFT	1
02-016	5MVM196DB003	PLATE ENCODER	1
02-017	5MML623DB001	PLATE EARTH	1
02-018	5MMT876SN001	ROLLER EXIT	
02-019	5MMT875SN002	ROLLER FEED A	1
02-020	5MMT875SN003	ROLLER FEED B	1
02-021	5MMW161LD014	SPRING SENSOR	1
02-022	5MVM150RB007	BELT MOTOR Z70	1
02-023	5MVM170RB025	BELT TRANS Z164	1
02-025	5MMM176CJ005	BUSHING SBK	6
02-026	5AAYHS1***04	DC MOTOR ASSY	1
02-027	5AAYHS1***05	SOLENOID ASSY	1
02-028	5ESM010234***01	MICRO SWITCH	1
02-029	5MMK224FJ001	MAGNET	2
02-030	5MMS227SL003	PLATE MAGNET	4
02-031	5AACCNLYOGEA	CONNCORD S00577	1
02-032	5MVVSHS1***1	SER. NO. LABEL	1
02-033	5MVX321DB014	PLATE ADJUST	1
02-034	5MVG127D 032	GEAR FEED Z16S	1
02-035	5MMX321SM001	CORD KEEP	1
02-036	5AAYHS1***06	PWB UNIT AAPRDVR2001	1
02-037	5AAPRSSR2001AH	P.W. BOARD ASSY (SENSOR)	1

Fig.2 - Exploded View (HS-2 Base Unit)

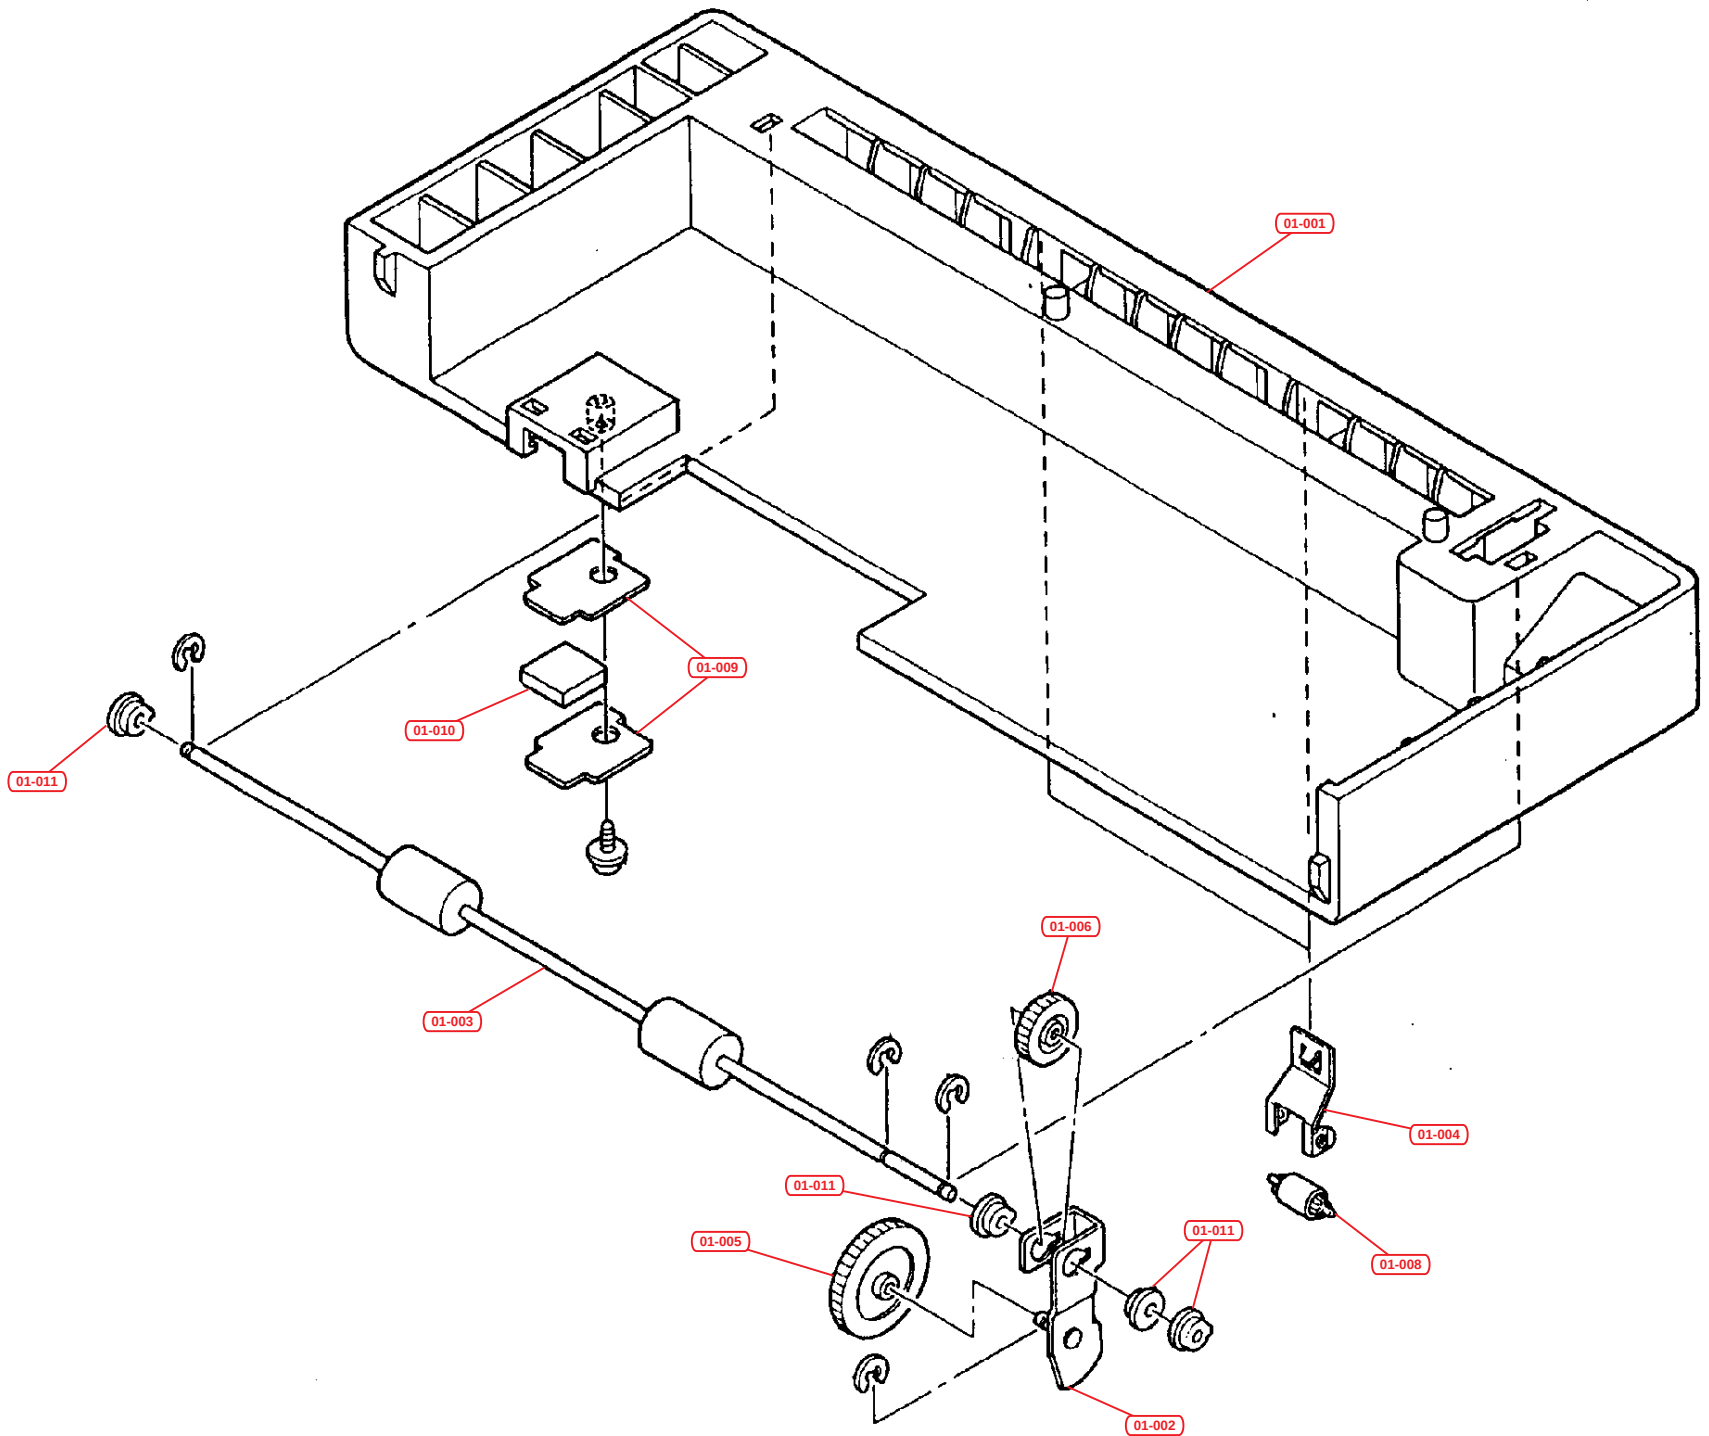

Ref No.	Part Code	Description	Quantity
01-001	5MVB875SH005	CASE	1
01-002	5MMS527SL001	ARM	1
01-003	5MMT875SN004	ROLLER FEED C	1
01-004	5MMX322LD009	SPRING ROLLER C	2
01-005	5MVG138DB043	GEAR COUNTER Z26S	1
01-006	5MVG127DB032	GEAR FEED Z16S	1
01-008	5MVM273DB003	ROLLER PINCH	2
01-009	5MMS227SL003	PLATE MAGNET	2
01-010	5MMK224FJ001	MAGNET	1
01-011	5MVM176DB006	BUSHING POM	4