



**PRINTER OPTION**

**HS-3E**

# **PARTS CATALOGUE**

# HS-3E Parts Catalogue

## Table of Contents

HS-3E Handler Stacker (Fig.1).....3


## Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

|                    |       |                                                               |
|--------------------|-------|---------------------------------------------------------------|
| 'Ref No.'          | ..... | Reference number which corresponds to the parts in the figure |
| 'Part code'        | ..... | Part code which identifies the part                           |
| 'Part description' | ..... | A brief description of the part                               |
| 'Quantity'         | ..... | Quantity of the part used in the printer or option            |

Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

Fig.1 - HS-3E Handler Stacker

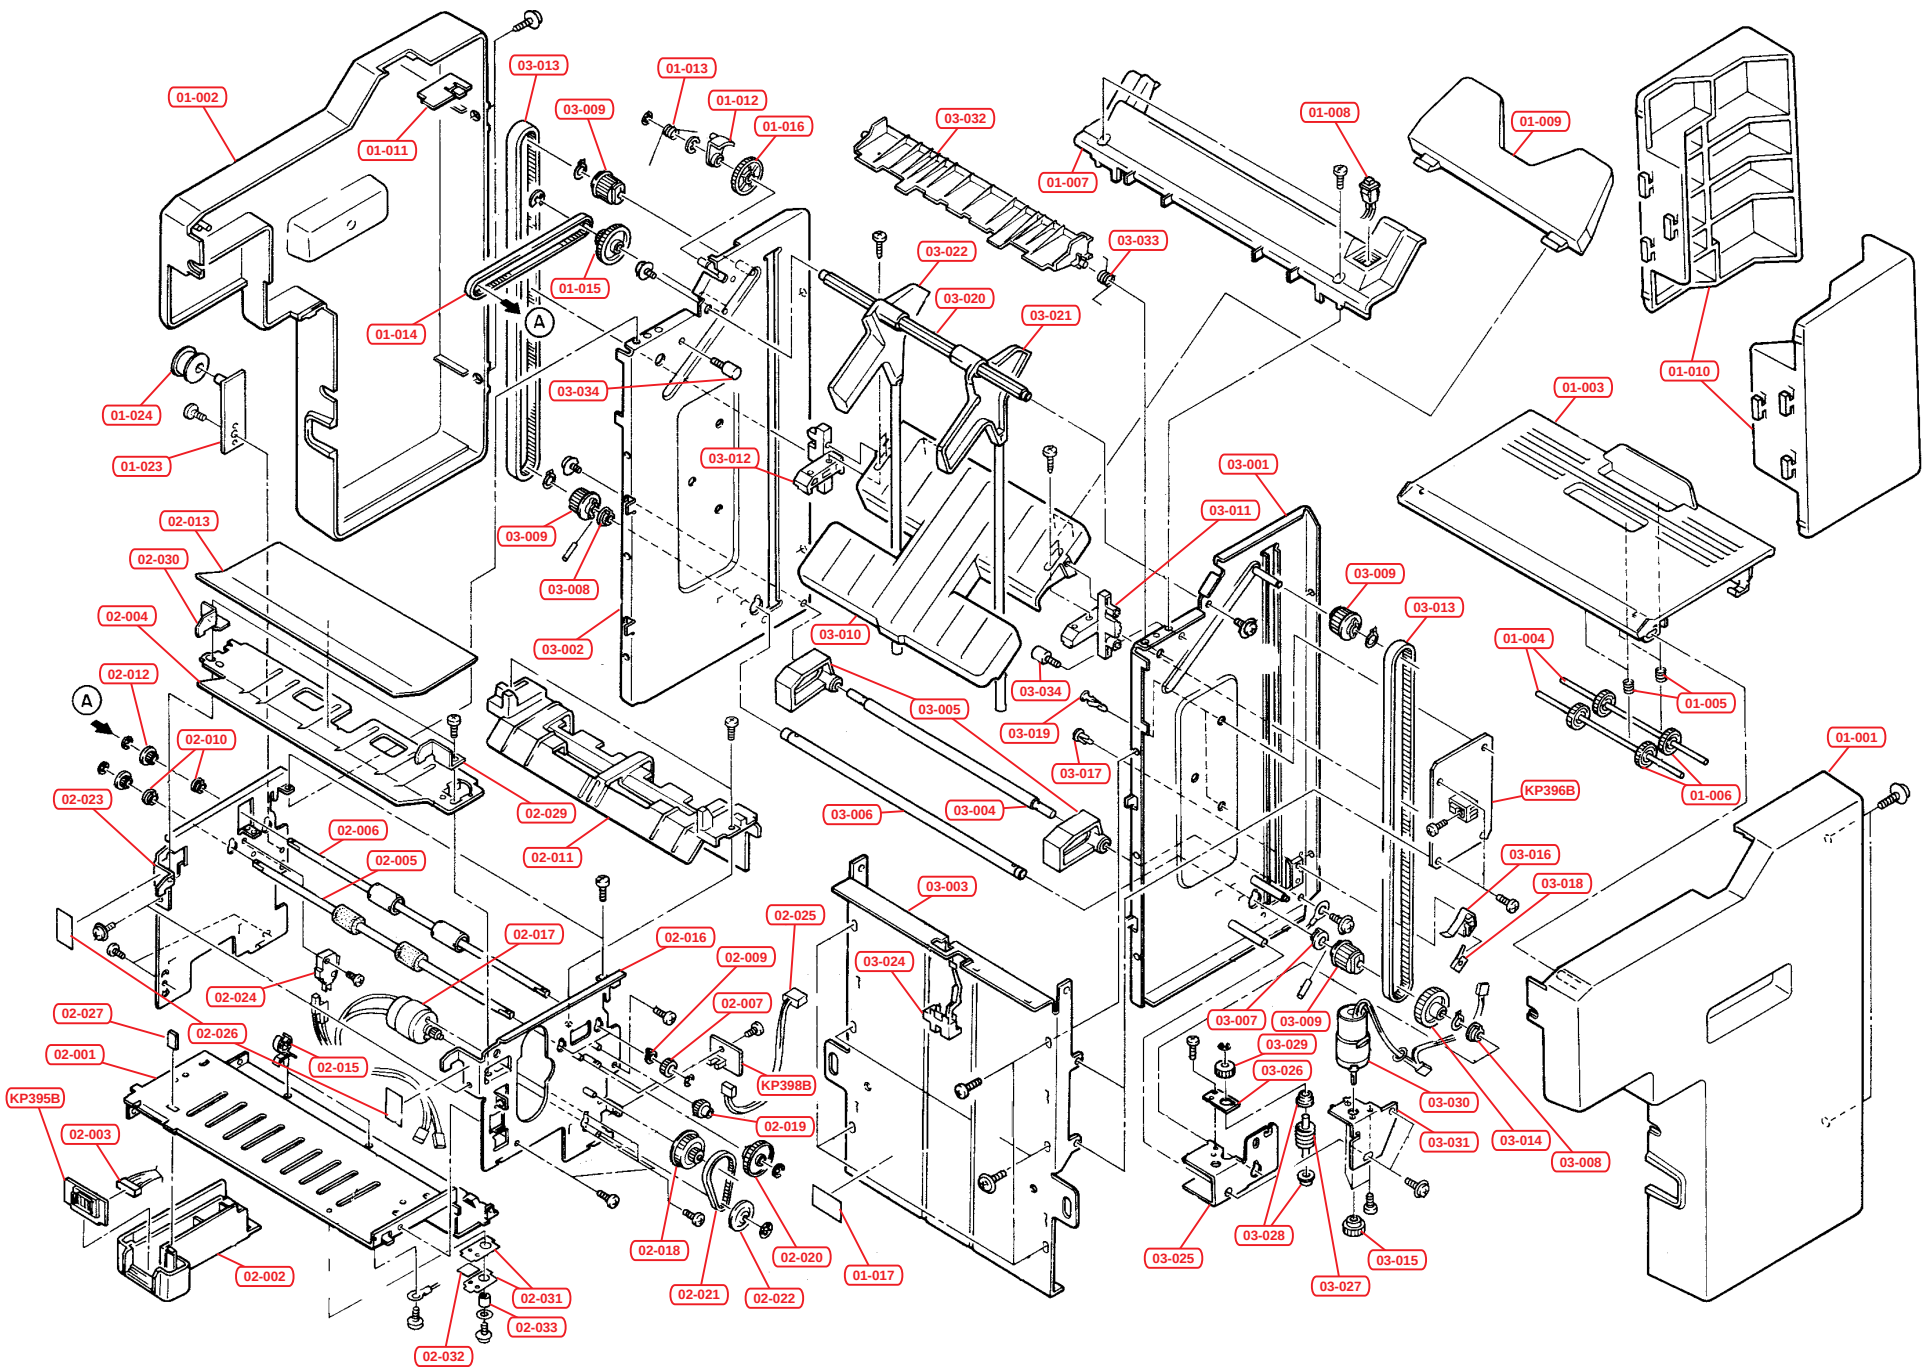

| Ref No.       | Part Code              | Description             | Quantity |
|---------------|------------------------|-------------------------|----------|
| <b>01-000</b> | <b>HS-3E</b>           | <b>HANDLER STACKER</b>  | <b>1</b> |
| 01-001        | 5MVB885SW008           | COVER RIGHT             | 1        |
| 01-002        | 5MVB885SW009           | COVER LEFT              | 1        |
| 01-003        | 5MVX874SW002           | LID TOP                 | 1        |
| 01-004        | 5MMT733SN001           | SHAFT EXIT              | 2        |
| 01-005        | 5MMW251LD005           | SPRING PULLEY           | 4        |
| 01-006        | 5MVM174DB002           | PULLEY EXIT             | 4        |
| 01-007        | 5MVX863SW005           | COVER TOP               | 1        |
| <b>01-008</b> | <b>5AAYHS3***03</b>    | <b>PUSH SWITCH ASSY</b> | <b>1</b> |
| <b>01-009</b> | <b>5MVB872SW030</b>    | <b>TRAY BACK</b>        | <b>1</b> |
| <b>01-010</b> | <b>5MVB876SW008</b>    | <b>BKT HS</b>           | <b>2</b> |
| 01-011        | 5MVS432SW001           | COVER JOINT             | 1        |
| 01-012        | 5MVX332SB016           | COVER GEAR              | 1        |
| 01-013        | 5MMW162LJ012           | SPRING COVER            | 1        |
| 01-014        | 5MVM150RB009           | BELT MXL109-32          | 1        |
| 01-015        | 5MVG048DB007           | GEAR FUX Z32-P19        | 1        |
| 01-016        | 5MVG138DB020           | GEAR FD Z30             | 1        |
| 01-017        | 5MVVSHS3E**1           | LABEL SERIAL            | 1        |
| 01-023        | 5MMS522SL001           | PLATE IDLE              | 1        |
| 01-024        | 5MVM177DB004           | BELT IDLE PULLEY        | 1        |
| 01-025        | 5MVX333DN001           | GUIDE PAPER EXIT        | 1        |
| 02-001        | 5MMZ866SL002           | FRAME LOW               | 1        |
| 02-002        | 5MVB764SW005           | BOX PWB                 | 1        |
| 02-003        | 5AACCNNB3GEA           | CONN. CORD S00844       | 1        |
| 02-004        | 5MMS866SL017           | GUIDE PAPER F           | 1        |
| <b>02-005</b> | <b>5MMT875SN005</b>    | <b>ROLLER TRANS A</b>   | <b>1</b> |
| <b>02-006</b> | <b>5MMT875SN006</b>    | <b>ROLLER EXIT</b>      | <b>1</b> |
| 02-007        | 5MVG127DB029           | GEAR Z14                | 2        |
| 02-009        | 5MMM176CJ005           | BUSHING SBK             | 2        |
| 02-010        | 5MVM176DB006           | BUSHING POM             | 2        |
| 02-011        | 5MVL866SW002           | GUIDE PAPER R           | 1        |
| 02-012        | 5MVG326DB001           | PULLEY MXL14            | 2        |
| 02-013        | 5MVS862KN002           | SHEET TRANSFER          | 1        |
| 02-015        | 5MVX431NN001           | SPACING CLIP            | 2        |
| 02-016        | 5MMX777SL001           | FRAME RIGHT             | 1        |
| <b>02-017</b> | <b>5AAYHS3***02</b>    | <b>TRANS MOTOR ASSY</b> | <b>1</b> |
| 02-018        | 5MVG368DB001           | GEAR Z28-P56            | 1        |
| 02-019        | 5MVG127DB030           | GEAR FEED Z14           | 2        |
| 02-020        | 5MVG148DB018           | GEAR Z14-Z36            | 1        |
| <b>02-021</b> | <b>5MVM150RB007</b>    | <b>BELT MOTOR Z70</b>   | <b>1</b> |
| 02-022        | 5MVM196DB003           | PLATE ENCODER           | 1        |
| 02-023        | 5MMX777SL002           | FRAME LEFT              | 1        |
| <b>02-024</b> | <b>5ESM010234***01</b> | <b>MICRO SWITCH</b>     | <b>1</b> |
| 02-025        | 5AACCNNB4GEA           | CONN CORD S00845        | 1        |
| 02-026        | 5MVS421KN002           | SHEET A                 | 2        |

| Ref No. | Part Code       | Description         | Quantity |
|---------|-----------------|---------------------|----------|
| 02-027  | 5MVS217SF001    | SPACER BOX          | 1        |
| 02-029  | 5MMX332SL006    | ADAPTER FRAME R     | 1        |
| 02-030  | 5MMX332SL007    | ADAPTER FRAME L     | 1        |
| 02-031  | 5MMS227SL003    | PLATE MAGNET        | 2        |
| 02-032  | 5MMK224FJ001    | MAGNET              | 1        |
| 02-033  | 5MVM110DN001    | ROLLER BELT         | 1        |
| 03-001  | 5MMX876SL020    | FRAME ELEVATOR R    | 1        |
| 03-002  | 5MMX876SL021    | FRAME ELEVATOR L    | 1        |
| 03-003  | 5MMS886SL007    | FRAME STACK         | 1        |
| 03-004  | 5MMT865SN005    | SHAFT FOOT          | 1        |
| 03-005  | 5MVX643SW003    | FOOT                | 2        |
| 03-006  | 5MMT866SN018    | SHAFT ELEVATOR      | 1        |
| 03-007  | 5MMM176CJ003    | METAL BUSH KD       | 1        |
| 03-008  | 5MVM122DB003    | BUSH POM            | 2        |
| 03-009  | 5MVG318DN001    | PULLEY XL14         | 4        |
| 03-010  | 5MVB882SW004    | TRAY ELEVATOR       | 1        |
| 03-011  | 5MVX665DN001    | GUIDE ELEVATOR R    | 1        |
| 03-012  | 5MVX665DN002    | GUIDE ELEVATOR L    | 1        |
| 03-013  | 5MVM190RB016    | BELT XL280-9.6      | 2        |
| 03-014  | 5MVG138DN018    | GEAR WHEEL H30      | 1        |
| 03-015  | 5MVG127DN031    | GEAR MOTOR          | 1        |
| 03-016  | 5MVX532DN001    | BKT SENSOR BOTTLE   | 1        |
| 03-017  | 5MBRP3045QNB    | PAN HEAD RIVET      | 1        |
| 03-018  | 5ESM010235***01 | MICRO SWITCH        | 1        |
| 03-019  | 5MVX211NN019    | LOCKING CARD SPACER | 2        |
| 03-020  | 5MMT865SN004    | SHAFT STAY          | 1        |
| 03-021  | 5AAYHS3***14    | PAPER SIZE R ASSY   | 1        |
| 03-022  | 5AAYHS3***15    | PAPER SIZE L ASSY   | 1        |
| 03-024  | 5ENXOS840133*01 | PT. SENSOR          | 1        |
| 03-025  | 5MMU654SL001    | BKT WORM            | 1        |
| 03-026  | 5MMS336SL008    | PLATE WORM          | 1        |
| 03-027  | 5MVG117DN001    | GEAR WORM           | 1        |
| 03-028  | 5MVM122DB003    | BUSH POM            | 2        |
| 03-029  | 5MVG137DB024    | GEAR CLUTCH Z22     | 1        |
| 03-030  | 5AAYHS3E***01   | ELEV MOTOR ASSY     | 1        |
| 03-031  | 5MML654SL002    | BKT DC MOTOR        | 1        |
| 03-032  | 5MVX832CB007    | GUIDE CHANGE        | 1        |
| 03-033  | 5MMW162LJ011    | SPRING GUIDE        | 1        |
| 03-034  | 5MMT263SZ016    | PIN STUD            | 2        |
| KP395B  | 5AAPRIFC2004AH  | P.W. BOARD ASSY     | 1        |
| KP396B  | 5AAPRDVC2004AH  | P.W. BOARD ASSY     | 1        |
| KP398B  | 5AAPRSSC2002AH  | P.W. BOARD ASSY     | 1        |