



LT-412

PARTS LIST

Published in Oct.'02
5HF70770

NOTE

1.Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5HF10010	PAPER SUPPLY COVER	LT-412	60Hz	1

2.Service calls and freight will be charged separately.

Parts List

LT-412

———— CONTENTS ————

FIG.1	LT-412 (1)	2
FIG.2	LT-412 (2)	4
FIG.3	LT-412 (3)	6
FIG.4	LT-412 (4)	8
FIG.5	LT-412 (5)	10
FIG.6	LT-412 (6)	12
FIG.7	LT-412 (7)	14
FIG.8	LT-412 (8)	16
FIG.9	LT-412 (9)	18
	• INDEX	20

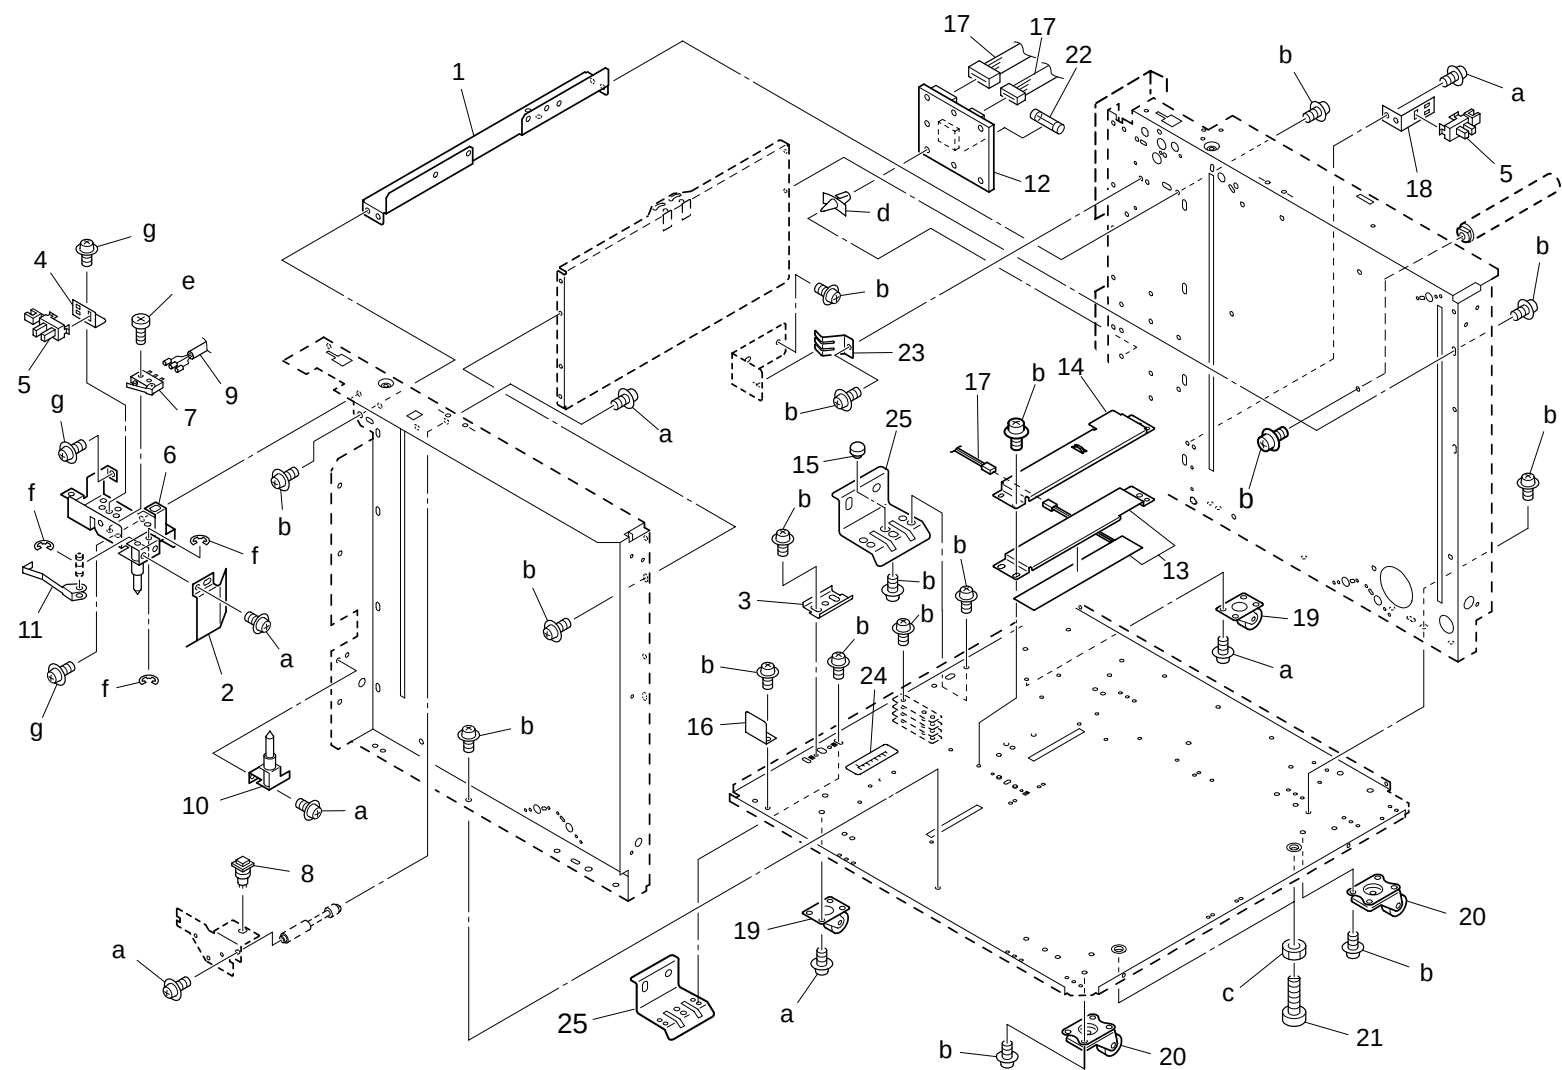


FIG. 1 LT-412 (1)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C710020	BOARD CONNECTING STAY/LEFT	a-5A807450
2	5C710070	DRIVING PROTECT COVER	b-5A807460
3	5C710030	MAIN POSITIONING PLATE	c-5BA07510
4	5C710040	SENSOR FIXED PLATE	d-5A809310
5	5C319250	PHOTO SENSOR	e-5A912110
6	5C710080	DOOR SENSOR PLATE/COMBINED	f-5A812850
7	5C710620	INTER LOCK SWITCH	g-5A807440
8	5BA07930	SWITCH(1)	
9	5C710510	LCT SIGNAL WIRING/FRONT	
10	5C710090	JAM DOOR HINGE/LOWER COMBINED	
11	5BA08000	ACTUATOR	
12	5HF10090	LCT DRIVING BOARD ASSEMBLY	
13	5HA11290	HEATER MOUNTING PLATE ASSEMBLY	
14	5HA11850	HEATER COVER	
15	5HF10110	MAIN FIXED PIN	
16	5C710610	MAGNET PRESSURE PLATE	
17	5HD10200	LCT CONTROL WIRING	
18	5C710050	SENSOR SUPPORT PLATE/LOWER	
19	5BA07230	LCT SETTING ROLLER(LEFT)	
20	5C710630	LCT SUPPORT PART/LEFT	
21	5C710060	BOTTOM PLATE SUPPORT PART	
22	5C710760	HUSE	
23	5D510310	MAIN BODY FIXING PLATE/1	
24	5HF10030	PAPER BASE LABEL	
25	5HF10100	MAIN FIXED PLATE	

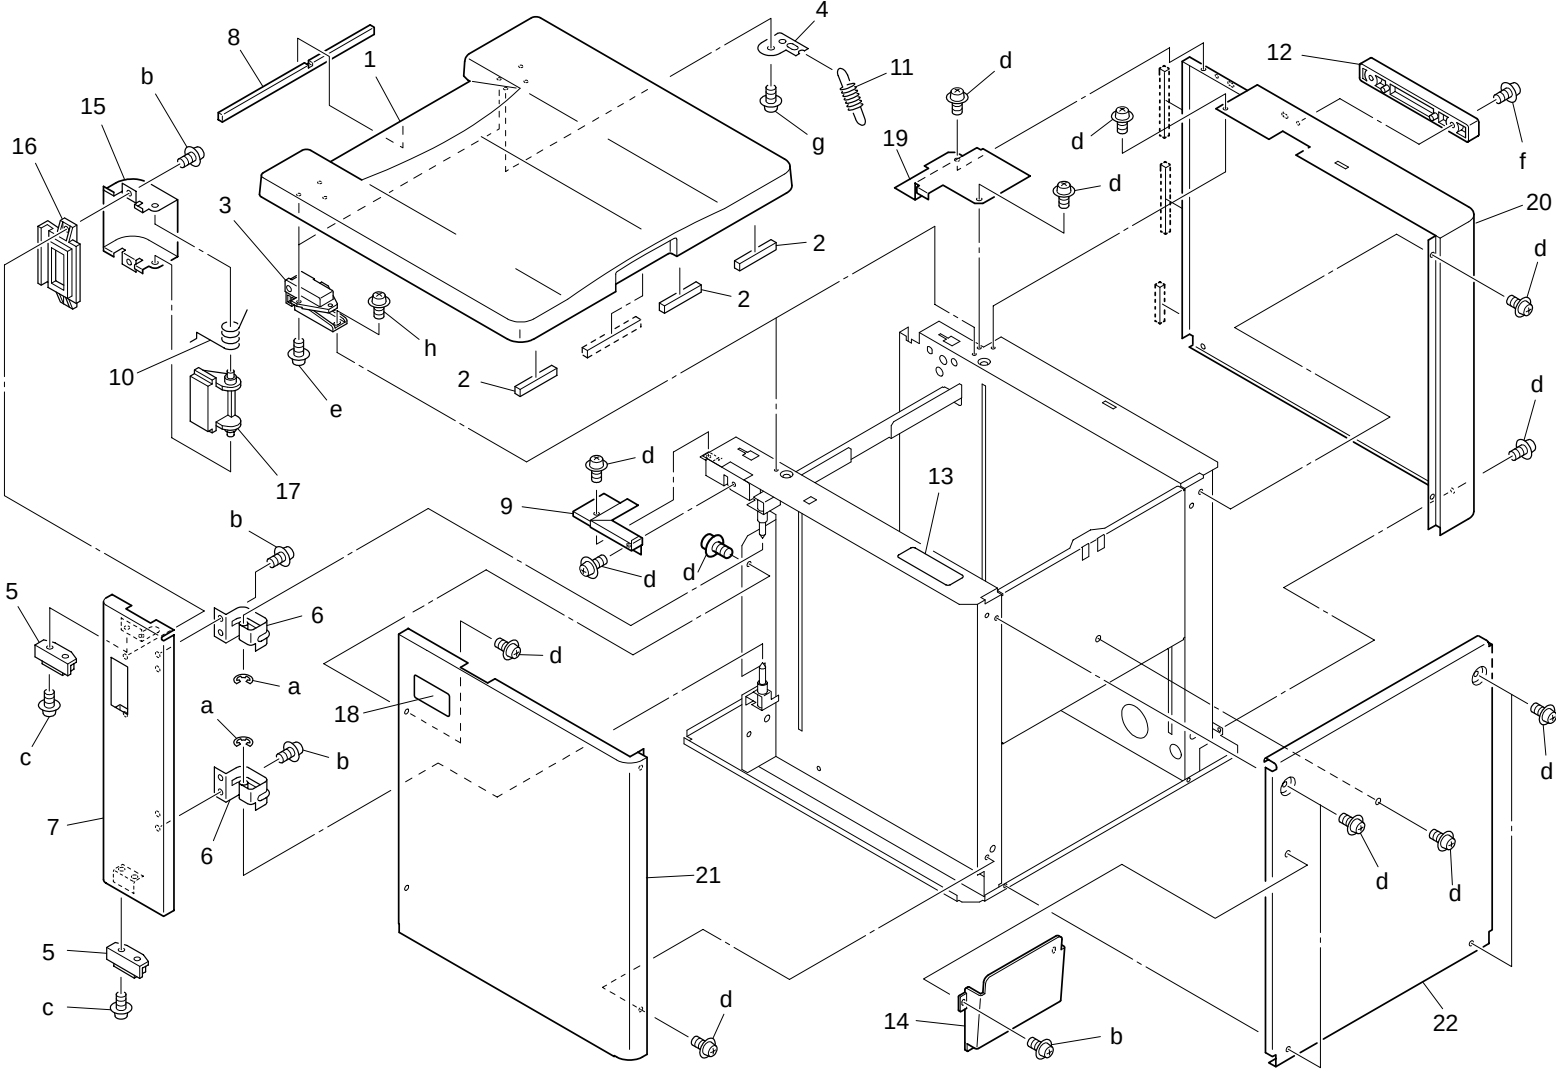


FIG. 2 LT-412 (2)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5HF10010	PAPER SUPPLY COVER	a-5A808630
2	5BA07620	STOPPER MATERIAL	b-5A807460
3	5D510020	OPEN/SHUT HINGE	c-5A823400
4	5A819620	SPRING MT PLATE	d-5A808350
5	5A825890	MAGNET CATCH	e-5A809280
6	5C710570	HINGE PLLATE/A	f-5C331400
7	5HD10060	JAM OPEN-CLOSE DOOR	g-5A812100
8	5HD10150	CUSHION/C	h-5A912100
9	5HD10070	PAPER FEED AUXILIARY COVER/FRONT	
10	5C710590	OPEN-CLOSE SPRING	
11	5BA07600	LIFT UP SPRING	
12	5HD10080	PAPER GUIDE KNOB	
13	5HF10020	PAPER SUPPLY LABEL	
14	5D510320	ACCESSORIES INSTALLING COVER	
15	5C710580	MOUNT PLATE	
16	5HD10010	MOUNT COVER/B	
17	5HD10020	OPEN-CLOSE KNOB	
18	5HF10120	PAPER FEED INDICATION LABEL/L	
19	5HD10130	CLUTCH EXCHANGING COVER	
20	5HF10050	REAR COVER	
21	5HF10040	FRONT COVER	
22	5HD10110	SIDE COVER/RIGHT	

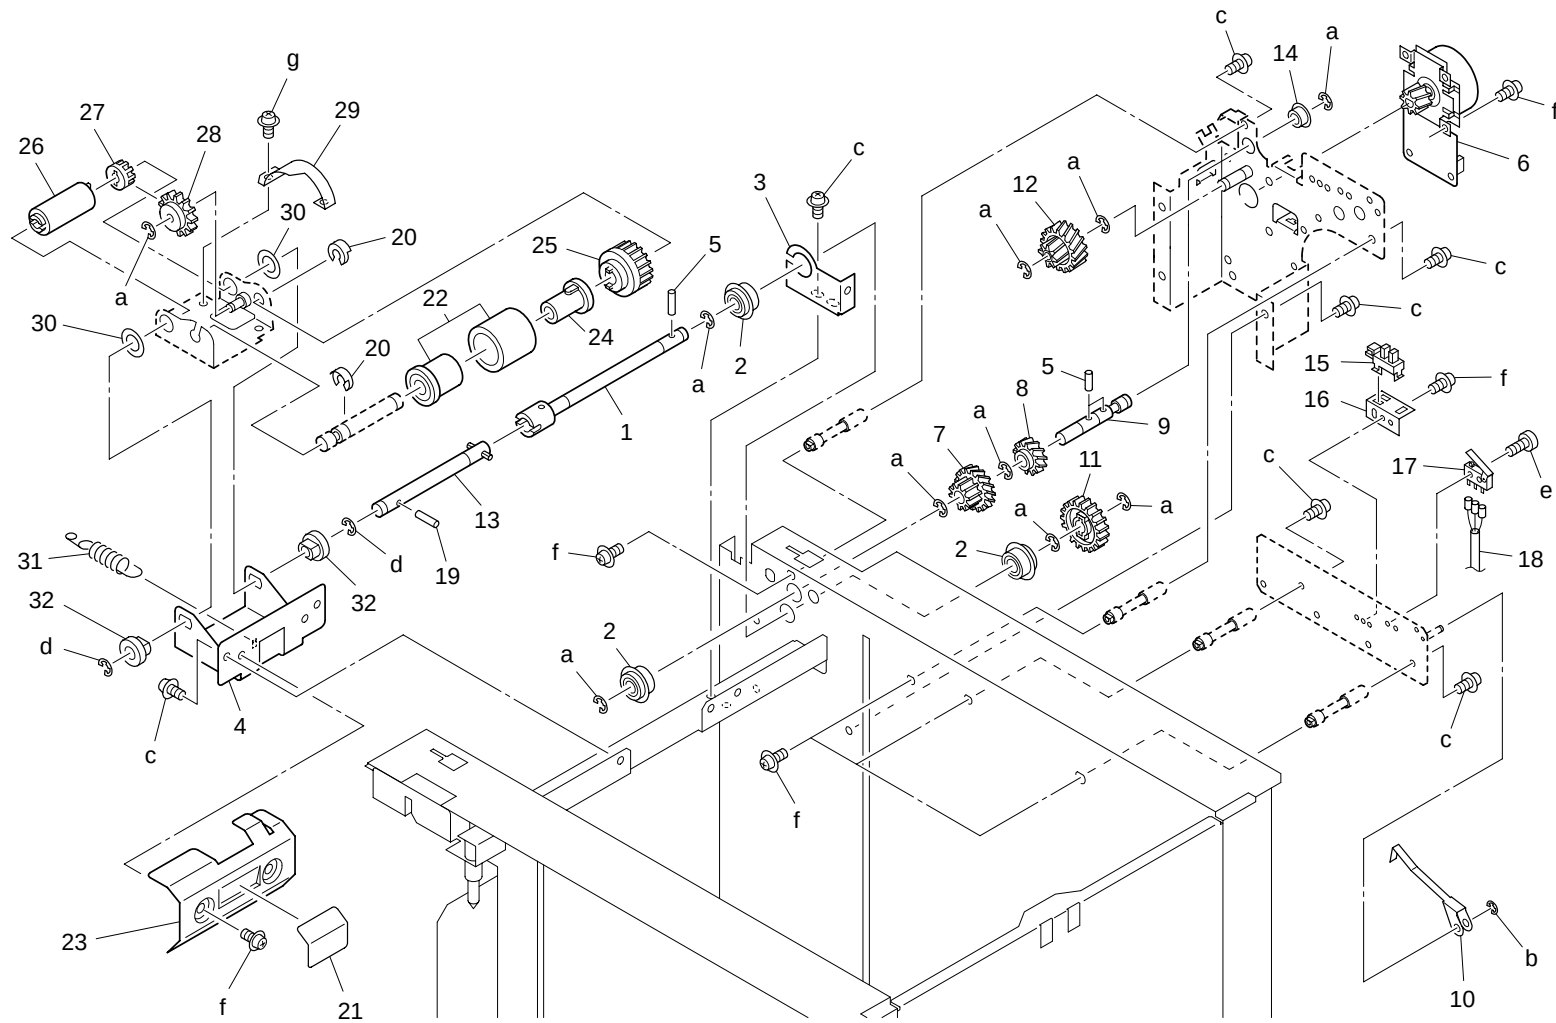


FIG. 3 LT-412 (3)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C710190	FUNNING DRIVE SHAFT	a-5A807490
2	5A810950	DRIVE SHAFT HOLDER	b-5A812850
3	5C312640	SHAFT SUPPORT PLATE	c-5A807460
4	5C312120	PAPER FEED HOLDER PLATE/LOWER	d-5A808640
5	5A815900	PIN(B)(3X14)	e-5A912110
6	5HA11310	DC BRUSHLESS MOTOR/15	f-5A807450
7	5HA10400	PAPER FEED DRIVING GEAR/B(Z=22/30)	g-5A807440
8	5HA10410	PAPER FEED DRIVING GEAR/C(Z=22)	
9	5C710180	PAPER FEED INPUT SHAFT	
10	5BA08000	ACTUATOR	
11	5C317040	PAPER FEED REVERSAL GEAR/A(Z=60)	
12	5HD10180	REGISTRATION IDLER GEAR(Z=66/27)	
13	5C710450	TORQUE DRIVE SHAFT ASSEMBLY	
14	5C330500	PAPER FEED SHAFT HOLDER	
15	5C319250	PHOTO SENSOR	
16	5C710040	SENSOR FIXED PLATE	
17	5C710620	INTER LOCK SWITCH	
18	5C710530	LCT DRIVING WIRING	
19	5A811870	PIN (2X8)	
20	5A814320	STOPPER RING	
21	5C312540	ENTRANCE GUIDE SHEET	
22	5C314340	FEEDING ROLLER ASSEMBLY/B	
23	5C710250	ENTRANCE GUIDE PLATE	
24	5C331120	REVERSAL ROLLER	
25	5C317150	PAPER FEED REVERSAL GEAR/D(Z=19)	
26	5A821360	TORQUE LIMITTER	
27	5C317060	PAPER FEED REVERSAL GEAR/C(Z=14)	
28	5C317080	IDLER GEAR/B(Z=24)	
29	5C312720	PAPER FEED DRIVING COVER/2	
30	5A814660	SPACER(18X13)	
31	5C312170	REVERSAL SPRING/B	
32	5A814600	OILLESS METAL	



FIG. 4 LT-412 (4)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C313330	PAPER DUST SCRAPER	a-5A807490
2	5C312950	LOCK SHAFT HOLDER	b-5A809700
3	5C330160	CONNECTING PART/A	c-5A810180
4	5HD10170	FEEDING COVER ASSEMBLY	d-5A807450
5	5C312680	SHAFT STOPPER	e-5A820670
6	5C710230	EXIT GUIDE PLATE/LOWER	f-5A807460
7	5A908030	STOPPER RUBBER	g-5A808370
8	5C710710	OPEN-CLOSE LEVER	
9	5C710690	SPRING GUIDE PART	
10	5C710300	PAPER FEED PRESSURE SPRING/FRONT	
11	5C710290	PAPER FEED PRESSURE SPRING/REAR	
12	5C710270	ENTRANCE GUIDE PLATE/REAR	
13	5HA11350	PAPER FEED DRIVE CLUTCH	
14	5C710330	SENSOR MOUNT PLATE/A	
15	5C319250	PHOTO SENSOR	
16	5C710200	PAPER FEED DRIVING SHAFT/A	
17	5A811470	METAL	
18	5HF10080	LCT SIGNAL WIRING/UPPER	
19	5HA11400	APS SENSOR/1	
20	5C710240	PAPER CONVEYANCE ROLLER	
21	5C316140	PAPER FEED SHAFT HOLDER/B	
22	5HD10140	CUSHION/B	
23	5HD10160	RUBBER/A	

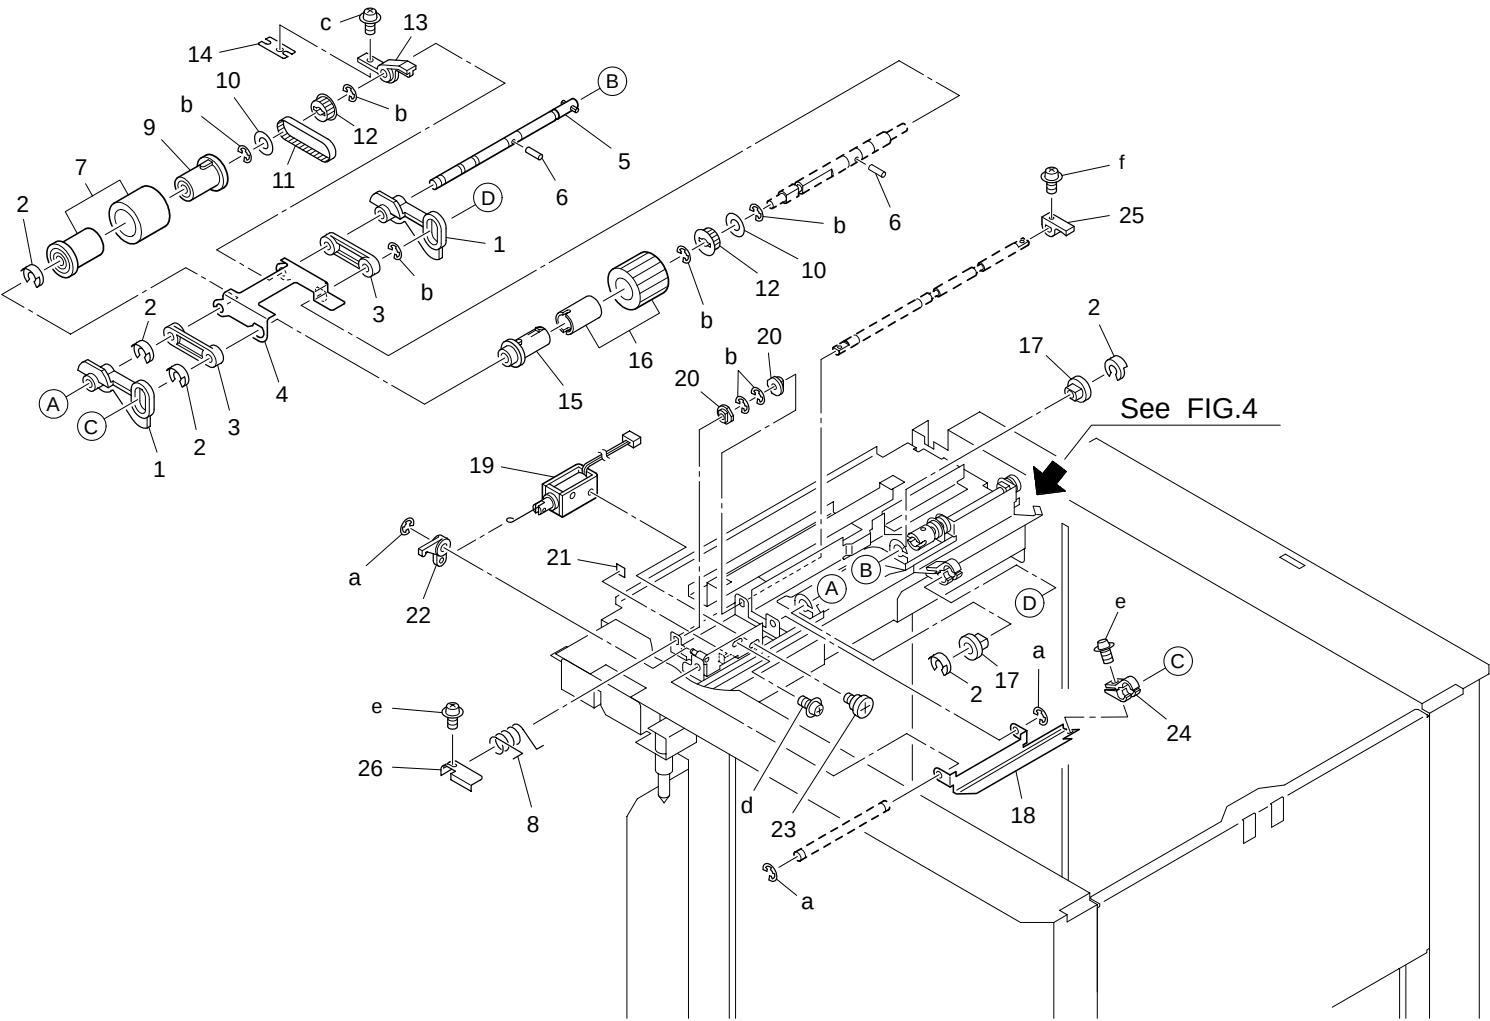


FIG. 5 LT-412 (5)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C312510	PAPER FEED STANDARD ACTUATOR	a-5A808630
2	5A814320	STOPPER RING	b-5A808640
3	5C312160	PAPER FEEDING SHAFT HOLDER	c-5A810700
4	5C710320	PAPER FEED HOLDER PLATE	d-5A810180
5	5C710440	FEEDING SHAFT	e-5A807450
6	5A814450	PIN(B)(2X9.5)	f-5A809690
7	5C314340	FEEDING ROLLER ASSEMBLY/B	
8	5C710280	LEVER SPRING	
9	5C312090	DOUBLE FEED FEEDING ROLLER	
10	5A814410	ROLLER COLLAR(16X6)	
11	5A814420	PAPER FEED DRIVE BELT(L=126)	
12	5A814430	PULLEY(1)(Z=15)	
13	5C312150	PAPER FEED LIFT-UP LEVER	
14	5C312480	LEVER AUXILIARY PLATE	
15	5C312080	PAPER FEEDING ROLLER/A	
16	5C314350	FEEDING ROLLER ASSEMBLY/A	
17	5A814270	OILLESS METAL(A)	
18	5C710260	ENTRANCE GUIDE PLATE/FRONT	
19	5C313350	PICK-UP SOLENOID	
20	5A811720	PAPER FEED DELIVERY SHAFT HOLDER	
21	5C312670	SOLENOID STOPPER SHEET	
22	5C330170	SWITCH LEVER/1	
23	5C312700	POSITIONING SCREW	
24	5C330160	CONNECTING PART/A	
25	5C312240	PRESSURE PLATE/B	
26	5C710310	PRESSURE PLATE/L	

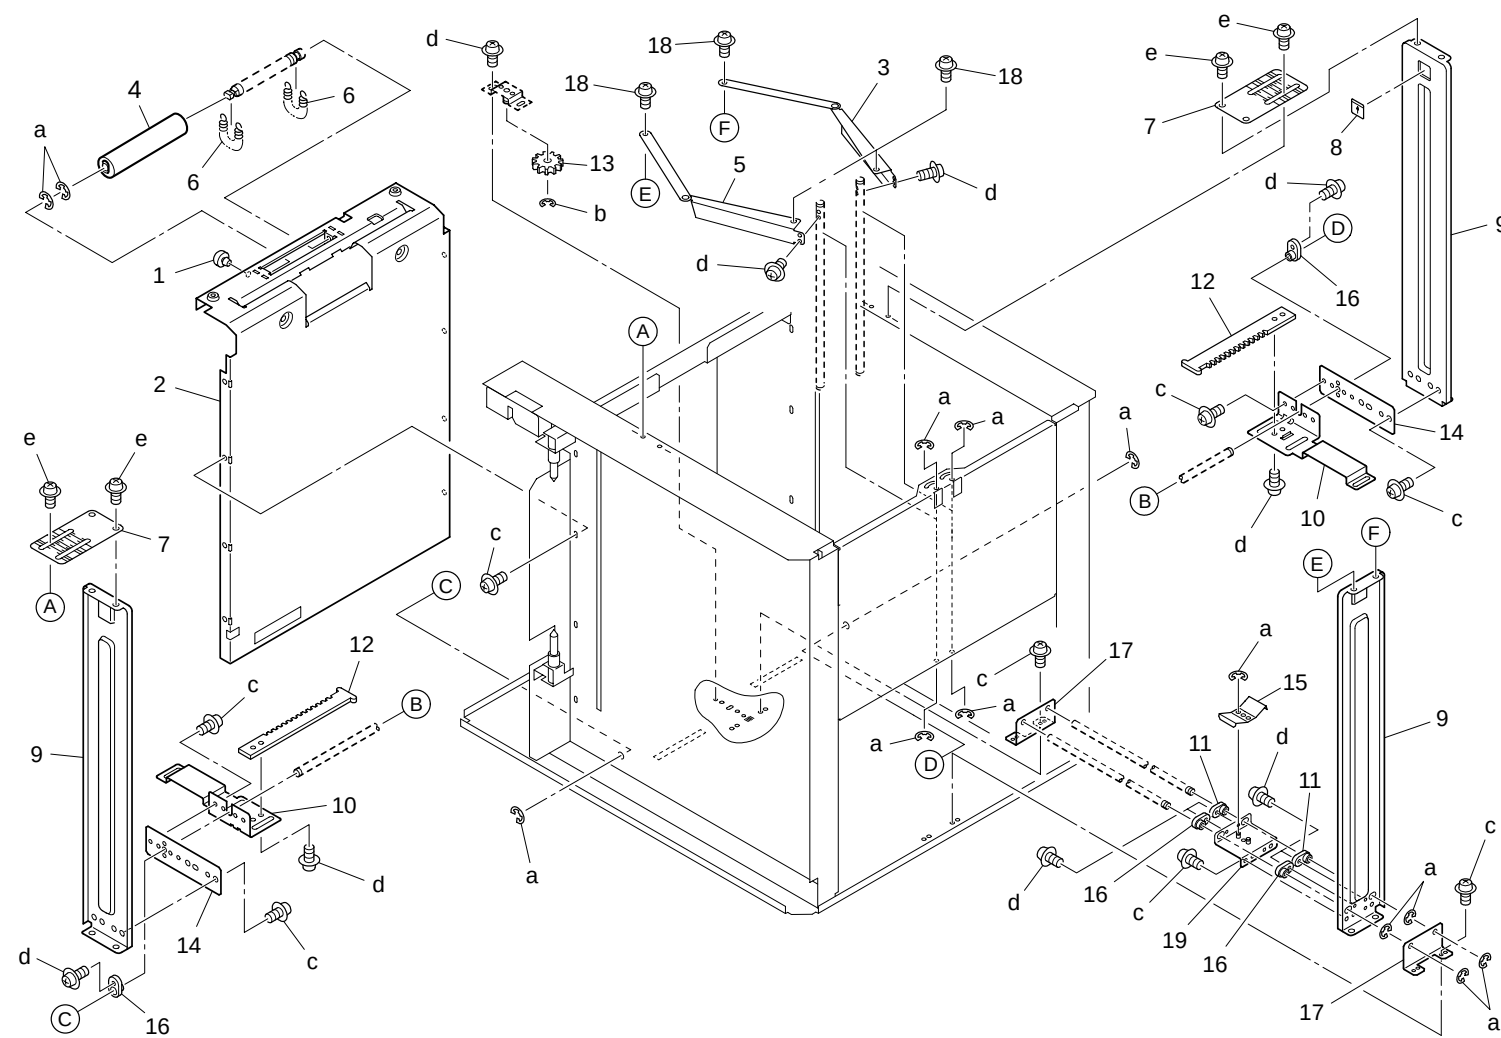


FIG. 6 LT-412 (6)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C710600	STOPPER RUBBER	a-5A808640
2	5C710370	PAPER STOPPER PLATE	b-5A808630
3	5D510080	REAR GUIDE ARM/REAR ASSEMBLY	c-5A807460
4	5HA11800	CONVEYANCE DRIVEN ROLLER	d-5A807450
5	5D510090	REAR GUIDE ARM/FRONT ASSEMBLY	e-5A808350
6	5C313540	RESIST PRESSURE SPRING	
7	5D510110	PAPER POSITIONING PLATE	
8	5C710730	PAPER GUIDE SEAL	
9	5C710390	PAPER SUPPLY SIDE PLATE	
10	5C710420	SIDE FIXED PLATE	
11	5C510440	GUIDE SHAFT HOLDER/A	
12	5A817060	RACK(FRONT)	
13	5A817070	CASSETTE PINION(Z=14)	
14	5D510130	SIDE CONNECTING PLATE	
15	5D510140	BOTTOM PLATE LOCKING PLATE	
16	5C510450	GUIDE SHAFT HOLDER/B	
17	5D510120	SHAFT SUPPORT PLATE/A	
18	5A807950	SCALEPLATE FIXED SCREW(M4X4.5)	
19	5D510150	REAR SLIDE PLATE	

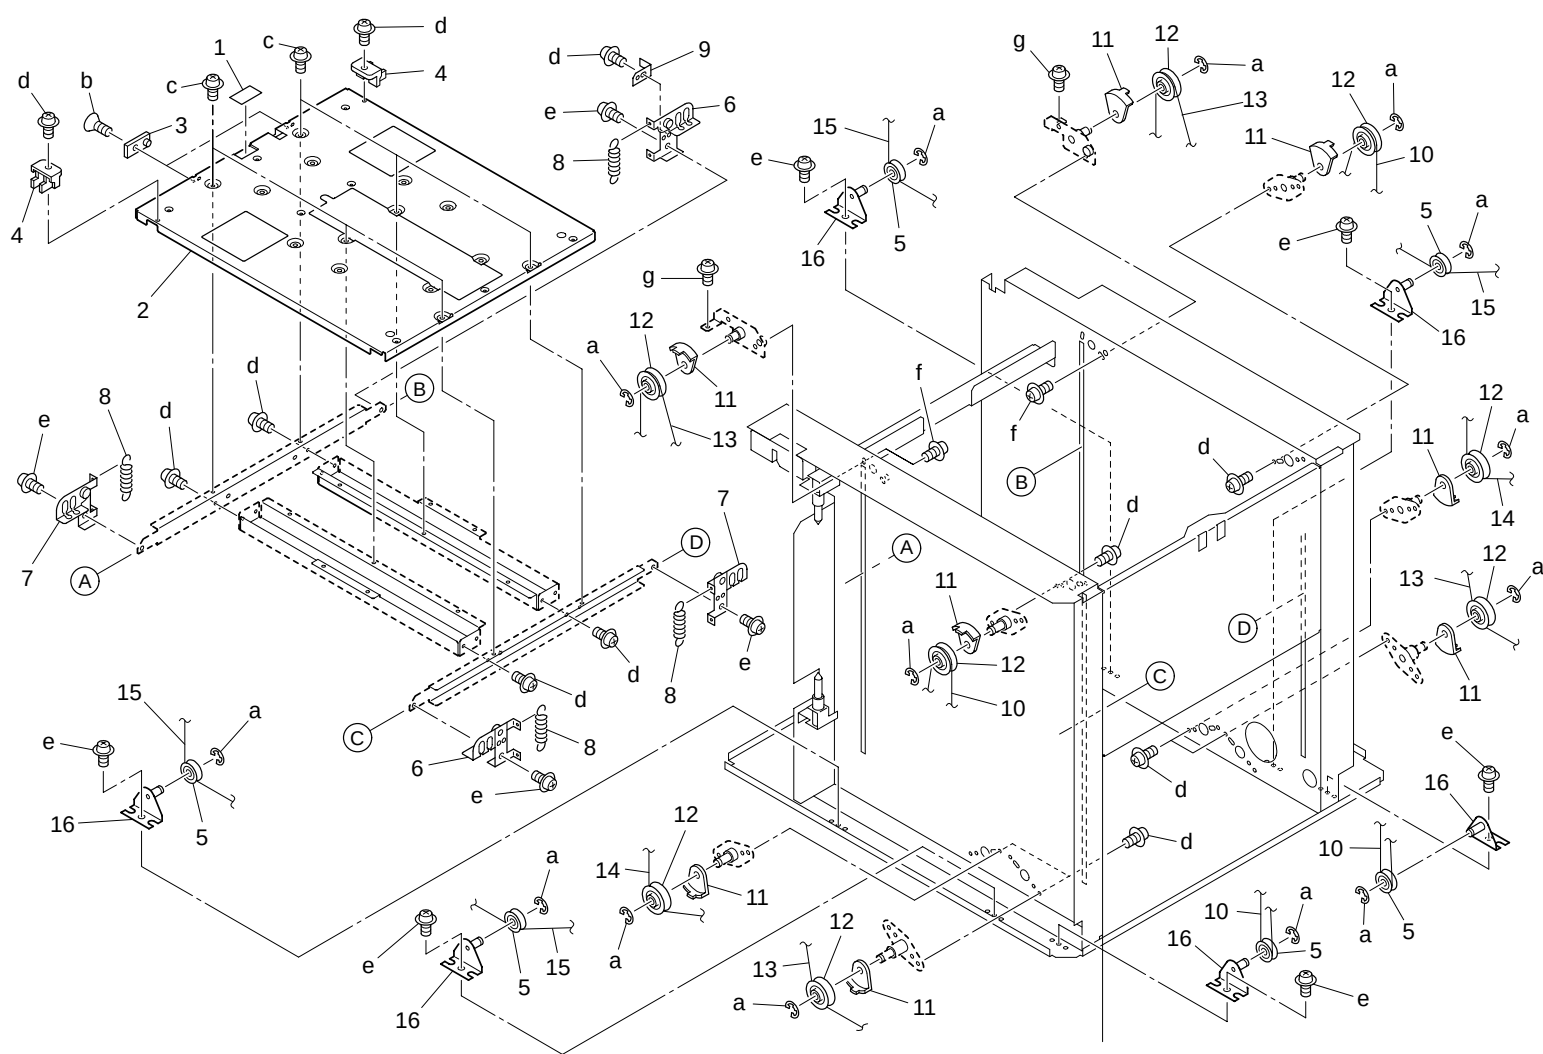


FIG. 7 LT-412 (7)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C312450	DOUBLE FEED PREVENTIVE PLATE	a-5A807490
2	5D510100	PAPER UP/DOWN PLATE	b-5C331380
3	5C710740	SPACER PLATE	c-5A808350
4	5C710431	BOARD POSITIONING BLOCK	d-5A807450
5	5C330240	WIRE PULLEY	e-5A807460
6	5C710680	WIRE FIXED PLATE/A COOMBINED	f-5A810180
7	5C710700	WIRE FIXED PLATE/B COMBINED	g-5A807890
8	5C710660	UP-DOWN SPRING	
9	5C313130	SENSOR DETECTING PLATE	
10	5D510070	DRIVING UP-DOWN WIRE/D	
11	5C710650	WIRE HOLDER/A	
12	5C710640	DRIVEN PULLEY	
13	5D510040	DRIVE UP/DOWN WIRE/A	
14	5D510050	DRIVE UP/DOWN WIRE/B	
15	5D510060	DRIVE UP/DOWN WIRE/C	
16	5C710670	WIRE MOUNT PLATE COMBINED	

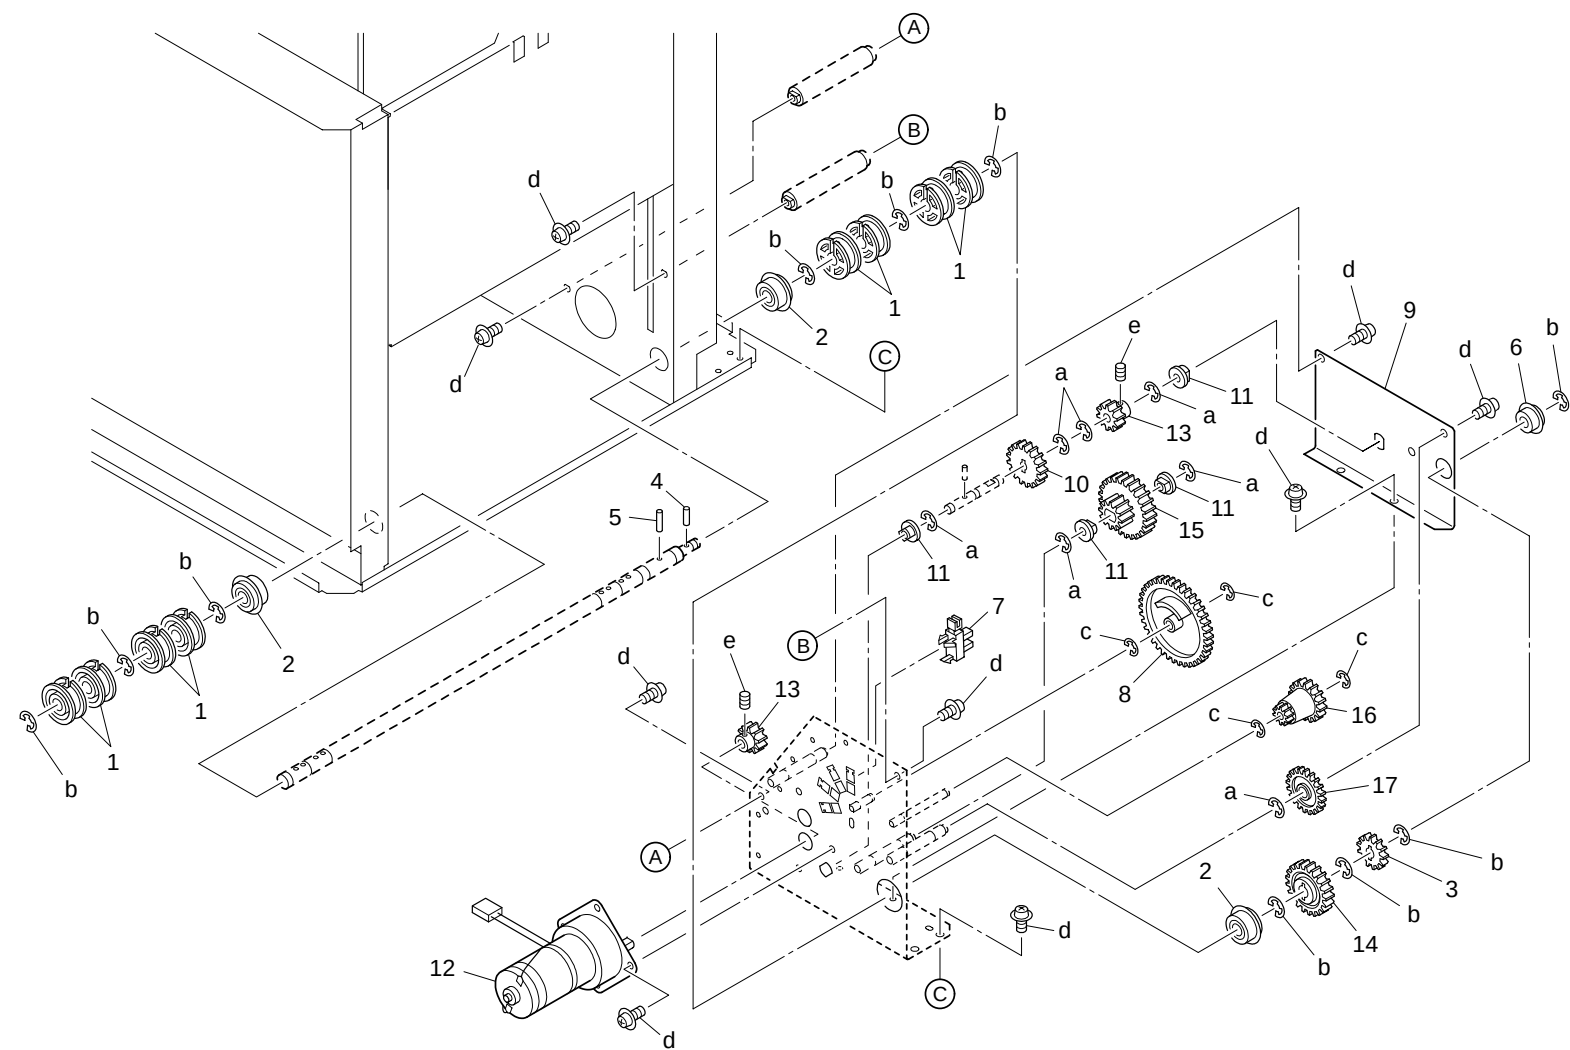


FIG. 8 LT-412 (8)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C710120	DRIVING UP-DOWN PULLEY	a-5A807490
2	5C319210	BALL BEARING(A)	b-5A816190
3	5BA08570	DELIVERY GEAR(Z=26)	c-5A808640
4	5A815900	PIN(B)(3X14)	d-5A807460
5	5A910030	PIN C	e-5C331800
6	5A810950	DRIVE SHAFT HOLDER	
7	5C319250	PHOTO SENSOR	
8	5C710460	SENSOR DETECTING GEAR(Z=92)	
9	5D510030	DRIVING UP-DOWN PLATE/FRONT	
10	5C710720	TONER SUPPLY AGITATE GEAR	
11	5A811470	METAL	
12	5D510390	PAPER FEED UNIT MOTOR	
13	5D510160	MOTOR DRIVING GEAR/B	
14	5A910020	UP-DOWN GEAR/C(Z=30)	
15	5A909980	UP-DOWN GEAR/B(Z=52,15)	
16	5D510400	GEAR(B)	
17	5D510410	PAPER FEED DRIVING GEAR/3	

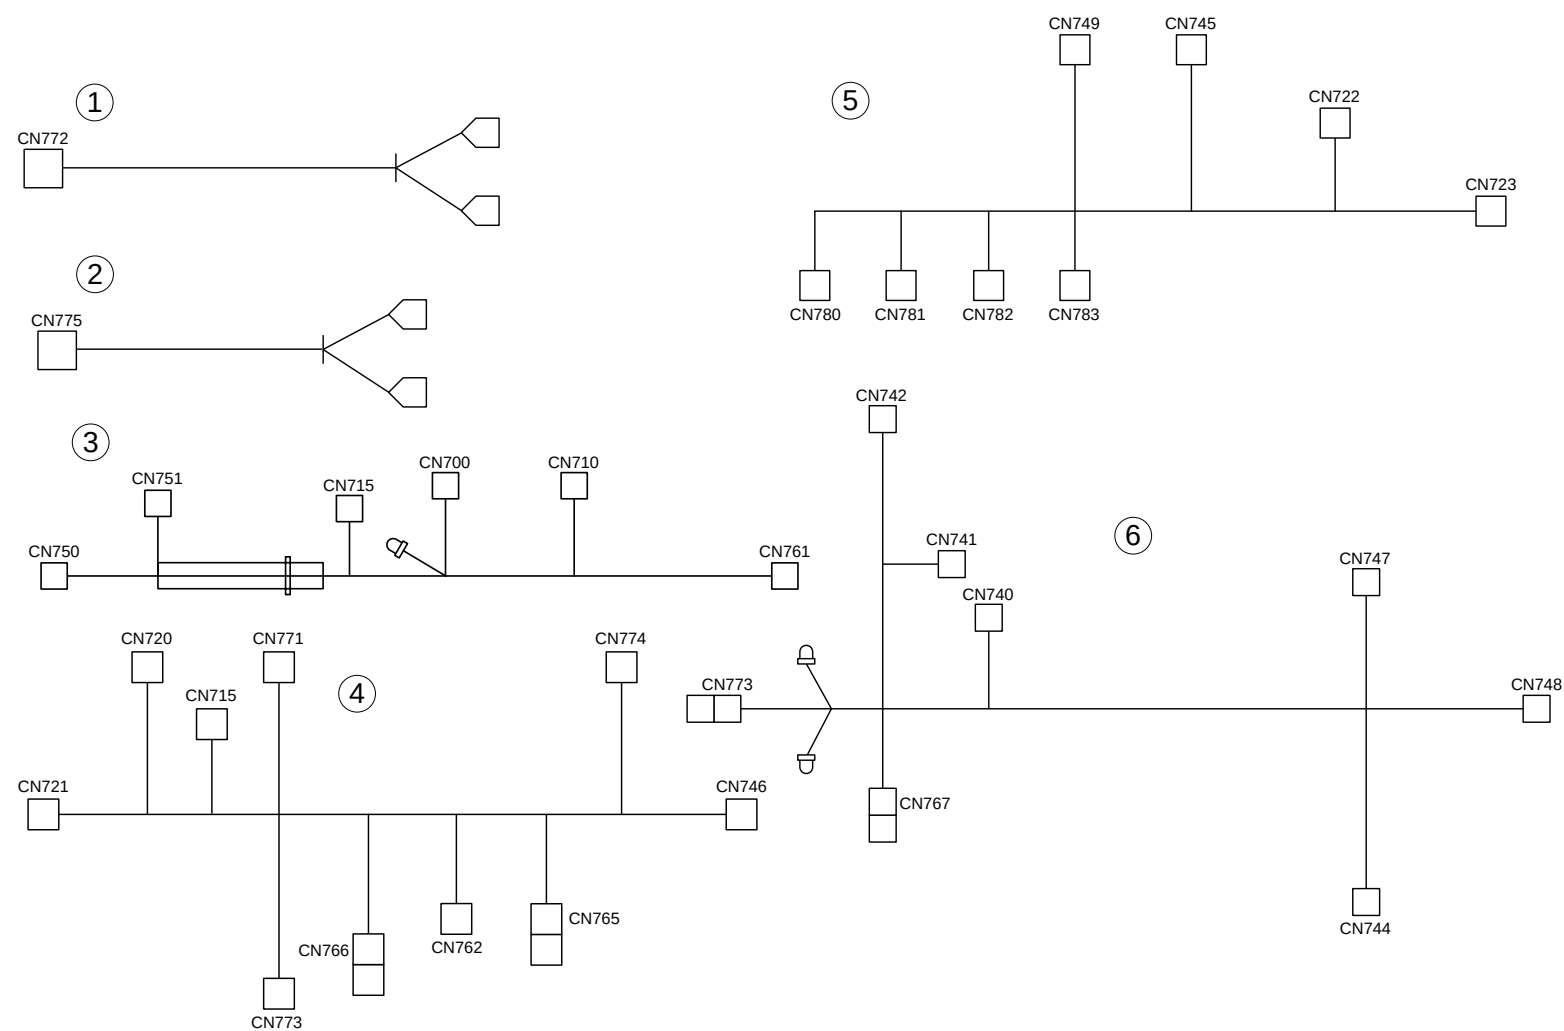


FIG. 9 LT-412 (9)

5HF

Ref.No.	Parts No.	Description	Standard parts
1	5C710510	LCT SIGNAL WIRING/FRONT	
2	5C710530	LCT DRIVING WIRING	
3	5HA10200	WEB DRIVING MOTOR	
4	5HF10060	LCT SIGNAL WIRING/1	
5	5HF10070	LCT SIGNAL WIRING/LOWER	
6	5HF10080	LCT SIGNAL WIRING/UPPER	

INDEX

5HF

Parts No.	Description	Fig. No.
5A807950	SCALEPLATE FIXED SCREW(M4X4.5)	6
5A810950	DRIVE SHAFT HOLDER	3,8
5A811470	METAL	4,8
5A811720	PAPER FEED DELIVERY SHAFT HOLD	5
5A811870	PIN (2X8)	3
5A814270	OILLESS METAL(A)	5
5A814320	STOPPER RING	3,5
5A814410	ROLLER COLLAR(16X6)	5
5A814420	PAPER FEED DRIVE BELT(L=126)	5
5A814430	PULLEY(1)(Z=15)	5
5A814450	PIN(B)(2X9.5)	5
5A814600	OILLESS METAL	3
5A814660	SPACER(18X13)	3
5A815900	PIN(B)(3X14)	3,8
5A817060	RACK(FRONT)	6
5A817070	CASSETTE PINION(Z=14)	6
5A819620	SPRING MT PLATE	2
5A821360	TORQUE LIMITTER	3
5A825890	MAGNET CATCH	2
5A908030	STOPPER RUBBER	4
5A909980	UP-DOWN GEAR/B(Z=52,15)	8
5A910020	UP-DOWN GEAR/C(Z=30)	8
5A910030	PIN C	8
5BA07230	LCT SETTING ROLLER(LEFT)	1
5BA07600	LIFT UP SPRING	2
5BA07620	STOPPER MATERIAL	2
5BA07930	SWITCH(1)	1
5BA08000	ACTUATOR	1,3
5BA08570	DELIVERY GEAR(Z=26)	8
5C312080	PAPER FEEDING ROLLER/A	5
5C312090	DOUBLE FEED FEEDING ROLLER	5
5C312120	PAPER FEED HOLDER PLATE/LOWER	3
5C312150	PAPER FEED LIFT-UP LEVER	5
5C312160	PAPER FEEDING SHAFT HOLDER	5
5C312170	REVERSAL SPRING/B	3
5C312240	PRESSURE PLATE/B	5
5C312450	DOUBLE FEED PREVENTIVE PLATE	7
5C312480	LEVER AUXILIARY PLATE	5
5C312510	PAPER FEED STANDARD ACTUATOR	5
5C312540	ENTRANCE GUIDE SHEET	3

Parts No.	Description	Fig. No.
5C312640	SHAFT SUPPORT PLATE	3
5C312670	SOLENOID STOPPER SHEET	5
5C312680	SHAFT STOPPER	4
5C312700	POSITIONING SCREW	5
5C312720	PAPER FEED DRIVING COVER/2	3
5C312950	LOCK SHAFT HOLDER	4
5C313130	SENSOR DETECTING PLATE	7
5C313330	PAPER DUST SCRAPER	4
5C313350	PICK-UP SOLENOID	5
5C313540	RESIST PRESSURE SPRING	6
5C314340	FEEDING ROLLER ASSEMBLY/B	3,5
5C314350	FEEDING ROLLER ASSEMBLY/A	5
5C316140	PAPER FEED SHAFT HOLDER/B	4
5C317040	PAPER FEED REVERSAL GEAR/A(Z=60)	3
5C317060	PAPER FEED REVERSAL GEAR/C(Z=14)	3
5C317080	IDLER GEAR/B(Z=24)	3
5C317150	PAPER FEED REVERSAL GEAR/D(Z=19)	3
5C319210	BALL BEARING(A)	8
5C319250	PHOTO SENSOR	1,3,4,8
5C330160	CONNECTING PART/A	4,5
5C330170	SWITCH LEVER/1	5
5C330240	WIRE PULLEY	7
5C330500	PAPER FEED SHAFT HOLDER	3
5C331120	REVERSAL ROLLER	3
5C510440	GUIDE SHAFT HOLDER/A	6
5C510450	GUIDE SHAFT HOLDER/B	6
5C710020	BOARD CONNECTING STAY/LEFT	1
5C710030	MAIN POSITIONING PLATE	1
5C710040	SENSOR FIXED PLATE	1,3
5C710050	SENSOR SUPPORT PLATE/LOWER	1
5C710060	BOTTOM PLATE SUPPORT PART	1
5C710070	DRIVING PROTECT COVER	1
5C710080	DOOR SENSOR PLATE/COMBINED	1
5C710090	JAM DOOR HINGE/LOWER COMBINED	1
5C710120	DRIVING UP-DOWN PULLEY	8
5C710180	PAPER FEED INPUT SHAFT	3
5C710190	FUNNING DRIVE SHAFT	3
5C710200	PAPER FEED DRIVING SHAFT/A	4
5C710230	EXIT GUIDE PLATE/LOWER	4
5C710240	PAPER CONVEYANCE ROLLER	4

5HF

Parts No.	Description	Fig. No.
5C710250	ENTRANCE GUIDE PLATE	3
5C710260	ENTRANCE GUIDE PLATE/FRONT	5
5C710270	ENTRANCE GUIDE PLATE/REAR	4
5C710280	LEVER SPRING	5
5C710290	PAPER FEED PRESSURE SPRING/REAR	4
5C710300	PAPER FEED PRESSURE SPRING/FRONT	4
5C710310	PRESSURE PLATE/L	5
5C710320	PAPER FEED HOLDER PLATE	5
5C710330	SENSOR MOUNT PLATE/A	4
5C710370	PAPER STOPPER PLATE	6
5C710390	PAPER SUPPLY SIDE PLATE	6
5C710420	SIDE FIXED PLATE	6
5C710431	BOARD POSITIONING BLOCK	7
5C710440	FEEDING SHAFT	5
5C710450	TORQUE DRIVE SHAFT ASSEMBLY	3
5C710460	SENSOR DETECTING GEAR(Z=92)	8
5C710510	LCT SIGNAL WIRING/FRONT	1,9
5C710530	LCT DRIVING WIRING	3,9
5C710570	HINGE PLLATE/A	2
5C710580	MOUNT PLATE	2
5C710590	OPEN-CLOSE SPRING	2
5C710600	STOPPER RUBBER	6
5C710610	MAGNET PRESSURE PLATE	1
5C710620	INTER LOCK SWITCH	1,3
5C710630	LCT SUPPORT PART/LEFT	1
5C710640	DRIVEN PULLEY	7
5C710650	WIRE HOLDER/A	7
5C710660	UP-DOWN SPRING	7
5C710670	WIRE MOUNT PLATE COMBINED	7
5C710680	WIRE FIXED PLATE/A COOMBINED	7
5C710690	SPRING GUIDE PART	4
5C710700	WIRE FIXED PLATE/B COMBINED	7
5C710710	OPEN-CLOSE LEVER	4
5C710720	TONER SUPPLY AGITATE GEAR	8
5C710730	PAPER GUIDE SEAL	6
5C710740	SPACER PLATE	7
5C710760	HUSE	1
5D510020	OPEN/SHUT HINGE	2
5D510030	DRIVING UP-DOWN PLATE/FRONT	8
5D510040	DRIVE UP/DOWN WIRE/A	7

Parts No.	Description	Fig. No.
5D510050	DRIVE UP/DOWN WIRE/B	7
5D510060	DRIVE UP/DOWN WIRE/C	7
5D510070	DRIVING UP-DOWN WIRE/D	7
5D510080	REAR GUIDE ARM/REAR AEEMBLY	6
5D510090	REAR GUIDE ARM/FRONT ASSEMBLY	6
5D510100	PAPER UP/DOWN PLATE	7
5D510110	PAPER POSITIONING PLATE	6
5D510120	SHAFT SUPPORT PLATE/A	6
5D510130	SIDE CONNECTING PLATE	6
5D510140	BOTTOM PLATE LOCKING PLATE	6
5D510150	REAR SLIDE PLATE	6
5D510160	MOTOR DRIVING GEAR/B	8
5D510310	MAIN BODY FIXING PLATE/1	1
5D510320	ACCESSORIES INSTALLING COVER	2
5D510390	PAPER FEED UNIT MOTOR	8
5D510400	GEAR(B)	8
5D510410	PAPER FEED DRIVING GEAR/3	8
5HA10200	WEB DRIVING MOTOR	9
5HA10400	PAPER FEED DRIVING GEAR/B(Z=22/30)	3
5HA10410	PAPER FEED DRIVING GEAR/C(Z=22)	3
5HA11290	HEATER MOUNTING PLATE ASSEMBLY	1
5HA11310	DC BRUSHLESS MOTOR/15	3
5HA11350	PAPER FEED DRIVE CLUTCH	4
5HA11400	APS SENSOR/1	4
5HA11800	CONVEYANCE DRIVEN ROLLER	6
5HA11850	HEATER COVER	1
5HD10010	MOUNT COVER/B	2
5HD10020	OPEN-CLOSE KNOB	2
5HD10060	JAM OPEN-CLOSE DOOR	2
5HD10070	PAPER FEED AUXILIARY COVER/FRONT	2
5HD10080	PAPER GUIDE KNOB	2
5HD10110	SIDE COVER/RIGHT	2
5HD10130	CLUTCH EXCHANGING COVER	2
5HD10140	CUSHION/B	4
5HD10150	CUSHION/C	2
5HD10160	RUBBER/A	4
5HD10170	FEEDING COVER ASSEMBLY	4
5HD10180	REGISTRATION IDLER GEAR(Z=66/27)	3
5HD10200	LCT CONTROL WIRING	1
5HF10010	PAPER SUPPLY COVER	2

Parts No.	Description	Fig. No.
5HF10020	PAPER SUPPLY LABEL	2
5HF10030	PAPER BASE LABEL	1
5HF10040	FRONT COVER	2
5HF10050	REAR COVER	2
5HF10060	LCT SIGNAL WIRING/1	9
5HF10070	LCT SIGNAL WIRING/LOWER	9
5HF10080	LCT SIGNAL WIRING/UPPER	4,9
5HF10090	LCT DRIVING BOARD ASSEMBLY	1
5HF10100	MAIN FIXED PLATE	1
5HF10110	MAIN FIXED PIN	1
5HF10120	PAPER FEED INDICATION LABEL/L	2

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

1410 Broadway 23rd floor
New York, NY 10018
TEL : (917) 286-5400
FAX : (917) 286-5402

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60191
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
Irvine, California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,
Ontario L5T 1S8, Canada
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
02130 Azcapotzalco
México, D.F. México
TEL : (55) 383-2741
FAX : (55) 383-7804

© 2002 KYOCERA MITA CORPORATION

 **KYOCERA** is a trademark of Kyocera Corporation

mita is a registered trademark of KYOCERA MITA CORPORATION

Printed in U.S.A.