



PH-1

PARTS LIST

Published in Jun.'01
5F770770

PH-1

NOTE

1. Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5F710140	FRONT DOOR	PH-1	60Hz	1

2. Service calls and freight will be charged separately.

3. Symbols in the "Parts Number" column.

- Parts with "●" indicates the service parts and the parts without "●" can not be supplied.

Parts List

PH-1

———— CONTENTS ————

FIG.1	PH-1 (1).....	2
FIG.2	PH-1 (2).....	4
FIG.3	PH-1 (3).....	6
FIG.4	PH-1 (4).....	8
FIG.5	PH-1 (5).....	10
FIG.6	PH-1 (6).....	12
FIG.7	PH-1 (7).....	14
FIG.8	PH-1 (8).....	16
FIG.9	PH-1 (9).....	18
	• INDEX.....	20

FIG. 1 PH-1 (1)

5F7

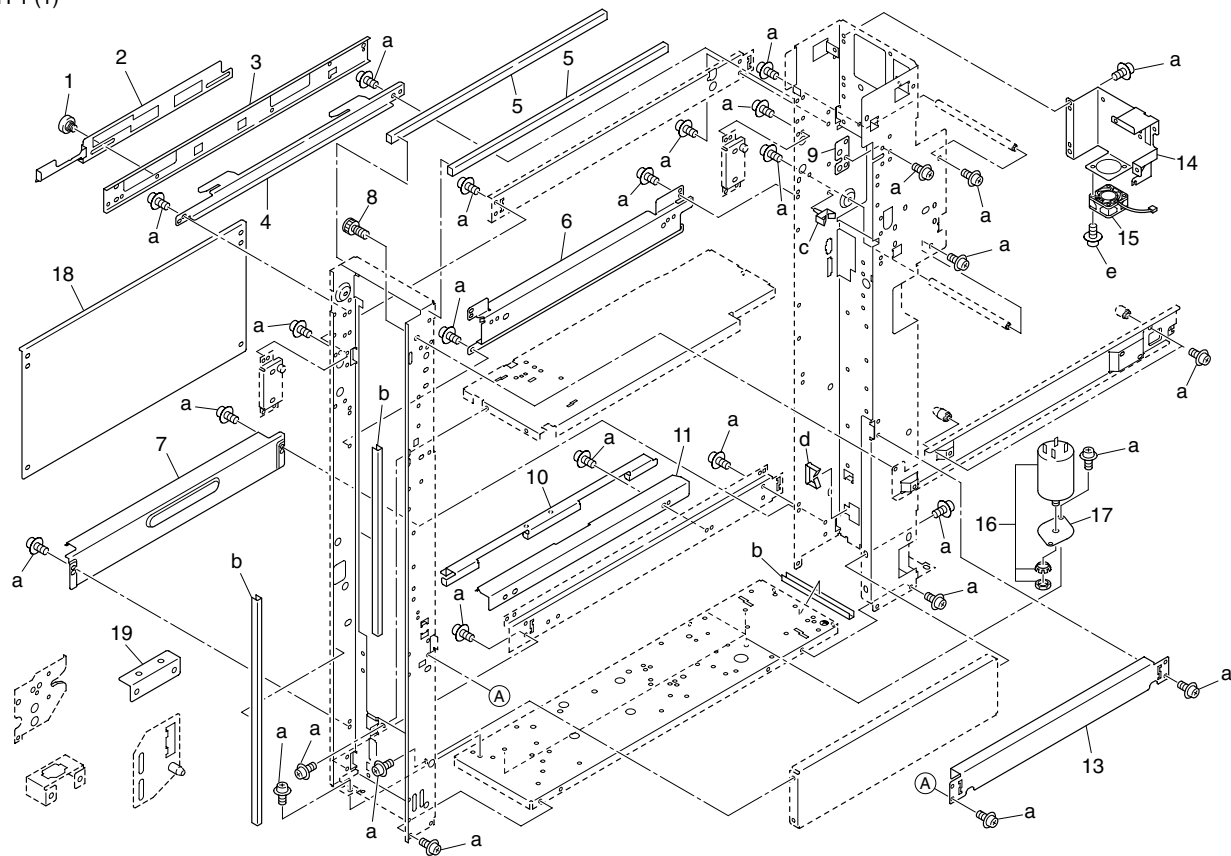 


FIG. 1 PH-1 (1)


5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD02040	PAPER EXIT UP/DOWN SCREW		a-5A807460
	2	5F710070	FINISHER MOUNTING STAY/2		b-5A807930
	3	5F710060	FINISHER MOUNTING STAY/1		c-5A811610
	4	5F710040	FINISHER MOUNTING PLATE		d-5C332320
	5	5F710030	PREVENTING PART/1		e-5C331470
	6	5F710010	EXIT GUIDE PLATE/A		
	7	5F710080	FINISHER MOUNTING STAY/3		
	8	5F715020	ADF MOUNTING SCREW		
	9	5F710090	CONVEYANCE MOUNTING SPACER		
	10	5F710110	FINISHER STAY		
	11	5F710100	FINISHER MOUNTING STAY/A		
	13	5A907211	RF STAY		
	14	5F710020	MOUNTING PLATE/1		
	15	5F715070	COOLING FAN MOTOR		
	16	5A823260	NOISE FILTER		
	17	5F710050	FILTER MOUNTING PLATE		
	18	5F710120	FINISHER COVER PLATE		
	19	5F710130	POSITIONING PLATE/1		

The parts with "●" only are available as spare parts.

FIG. 2 PH-1 (2)

 5F7

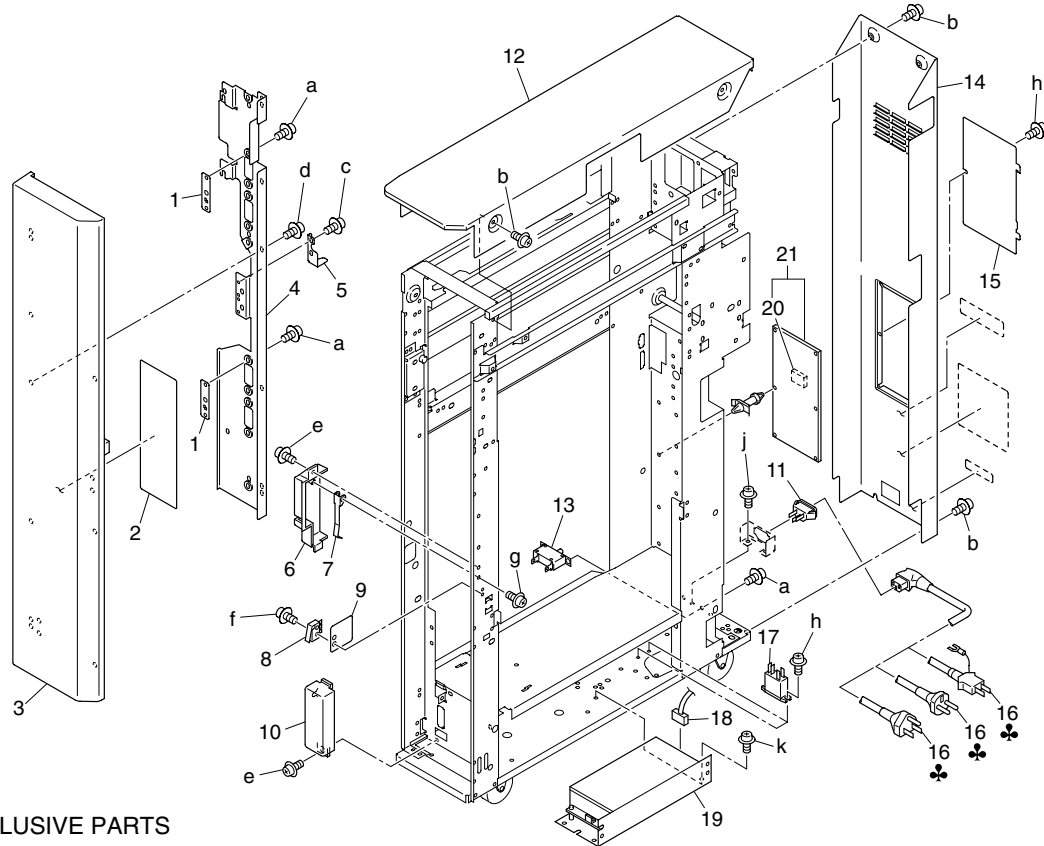

♣ EXCLUSIVE PARTS

FIG. 2 PH-1 (2)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5F710180	MOUNTING PLATE/RIGHT		a-5A811530
●	2	5F711140	JAM PROCESSING LABEL		b-5C331360
●	3	5F710140	FRONT DOOR		c-5A810180
	4	5F710170	EXTERNAL CONNECTING PLATE/A		d-5C331740
	5	5F710190	SWITCH OPEN/SHUT PLATE		e-5A807450
	6	5A907150	COVER		f-5A912110
	7	5BA08000	ACTUATOR		g-5A912160
●	8	5C710620	INTER LOCK SWITCH		h-5A809690
	9	5C511100	SWITCH INSULATING SHEET		j-5A807460
	10	5FD00030	SWITCH COVER		k-5A807430
	11	5F715110	POWER SOCKET		
●	12	5F710150	EXTERNAL COVER/UPPER		
●	13	5F711030	CIRCUIT BREAKER		
●	14	5F710160	REAR COVER		
●	15	5A808170	EXTERNAL AUX PANEL		
	16	5F715120	POWER SOURCE CORD		
	16	5F715130	POWER SOURCE CORD		
	16	5F715140	POWER SOURCE CORD		
	17	5C317550	POWER SOURCE RELAY		
	18	5F711060	AC POWER SOURCE WIRING/1		
●	19	5F711020	DC POWER SOURCE		
●	20	5F711120	ROM UNIT		
●	21	5F711110	CONTROL BOARD UNIT		

The parts with "●" only are available as spare parts.

FIG. 3 PH-1 (3)

5F7

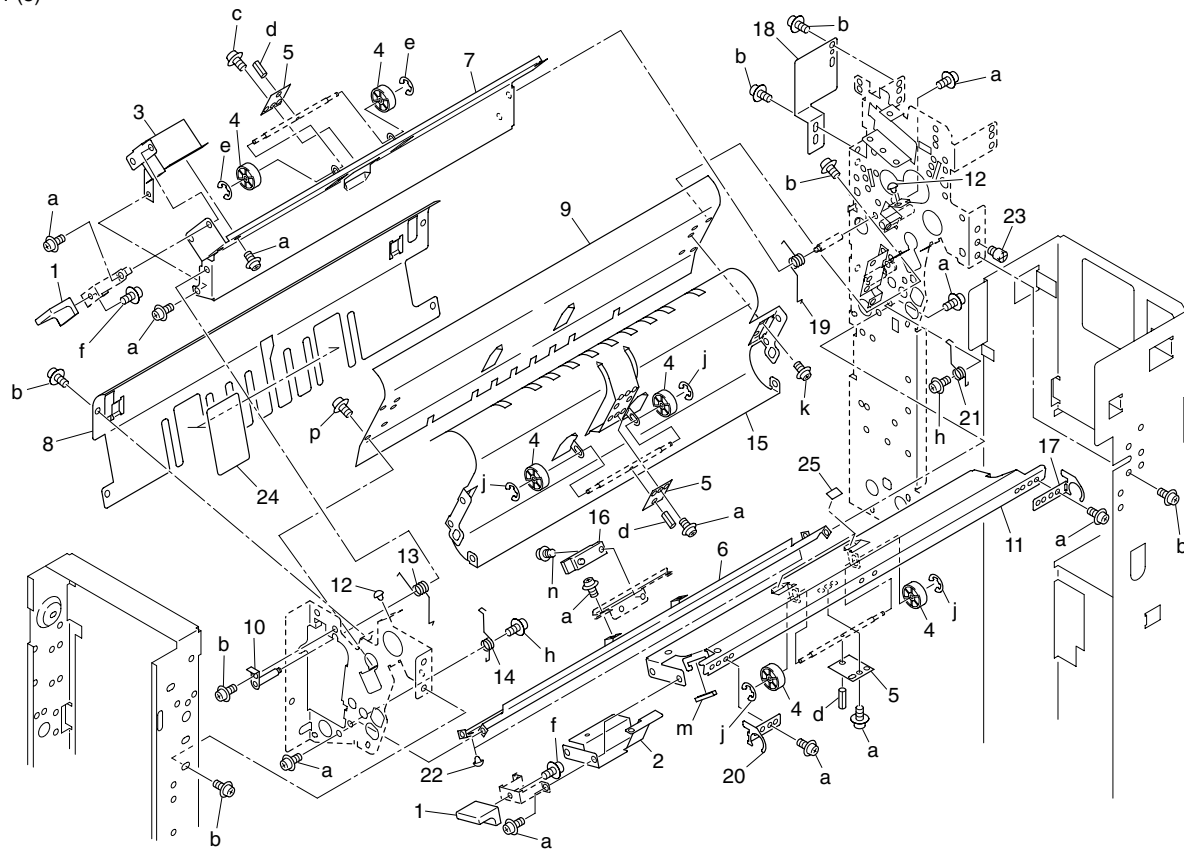 


FIG. 3 PH-1 (3)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5A908450	RELEASE LEVER KNOB		a-5A807450
	2	5F710420	REINFORCE PLATE/1		b-5A807460
	3	5F710440	REINFORCE PLATE/3		c-5C331590
	4	5A908160	ENTRANCE ROLLER		d-5A912230
	5	5F710300	PRESSING SPRING		e-5A812850
	6	5F710240	EXIT GUIDE PLATE/1		f-5A809280
	7	5F710230	GUIDE PLATE/5		h-5C331640
	8	5F710220	GUIDE PLATE/3		j-5A812850
	9	5F710200	GUIDE PLATE/1		k-5A822190
	10	5F710540	HINGE PLATE CAULKING		m-5C332340
	11	5F710250	EXIT GUIDE PLATE/2		n-5A816180
	12	5C314230	STOPPER RUBBER		p-5A807900
	13	5F710330	JAM RELEASE SPRING/7		
	14	5F710310	JAM RELEASE SPRING/1		
	15	5F710210	GUIDE PLATE/2		
●	16	5A824810	RESIST SENSOR		
	17	5F710490	HINGE PLATE/REAR		
	18	5F710430	REINFORCE PLATE/2		
	19	5F710340	JAM RELEASE SPRING/8		
	20	5F710480	HINGE PLATE/FRONT		
	21	5F710320	JAM RELEASE SPRING/2		
●	22	5A908030	STOPPER RUBBER		
	23	5A811980	SEPARATE SCREW (M3X3.2)		
	24	5F710510	CONVEYANCE GUIDE SHEET		
	25	5F710520	CONVEYANCE GUIDE SHEET/B		

The parts with "●" only are available as spare parts.

FIG. 4 PH-1 (4)

5F7

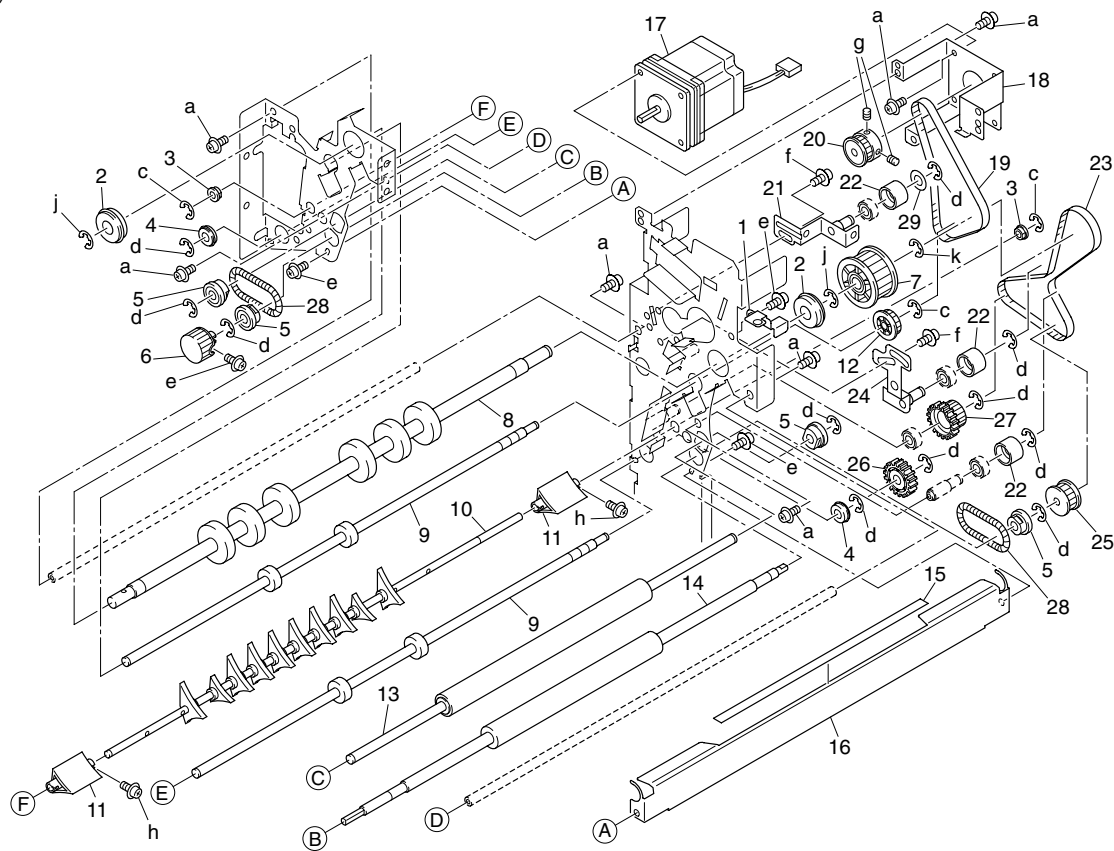 


FIG. 4 PH-1 (4)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5F710360	SOLENOID ARM/2		a-5A807460
	2	5F715170	FIXING ROLLING SHAFT HALDER/LOWER		c-5A808640
	3	5F715010	SHAFT HOLDER		d-5A807490
●	4	5F715100	FIXING SHAFT HOLDER/LOWER		e-5A807450
●	5	5F715160	SHAFT HOLDER(RESIST)		f-5A811530
	6	5F715040	ROTARY KNOB		g-5A813720
	7	5F710920	FOLDING PULLEY/1(Z=42)		h-5A809690
	8	5F710410	CONVEYANCE DRIVING ROLLER		j-5C331840
	9	5F710290	CONVEYANCE ROLLER		k-5A816190
	10	5F710260	PAPER UP/DOWN LEVER/1		
	11	5F710450	GUIDE PART/1		
	12	5F710940	CONVEYANCE PULLEY(Z=24)		
	13	5F710280	RESIST DRIVEN ROLLER		
	14	5F710270	RESIST DRIVING ROLLER		
	15	5F710470	GUIDE SHEET		
	16	5F710460	RESIST GUIDE PLATE		
●	17	5A824330	RADF DRIVE MOTOR(1)		
	18	5F710380	MOTOR MOUNTING PLATE/2		
●	19	5F710990	DRIVE BELT/1(L=333)		
	20	5F710930	MOTOR PULLEY/2(Z=24)		
	21	5F710400	TENSION PLATE/1 CAULKING		
	22	5F710500	BELT TENSION ROLLER		
●	23	5F711000	DRIVE BELT/2		
	24	5F710530	TENSION PLATE/2 CAULKING		
	25	5A908190	DRIVING PULLEY/A		
	26	5F710960	CONVEYANCE GEAR(Z=30)		
	27	5F710950	LDLING PULLEY(Z=24/30)		
	28	5F710390	RESIST SPRING		
	29	5A910790	BELT HOLDER		

The parts with "●" only are available as spare parts.

FIG. 5 PH-1 (5)

5F7

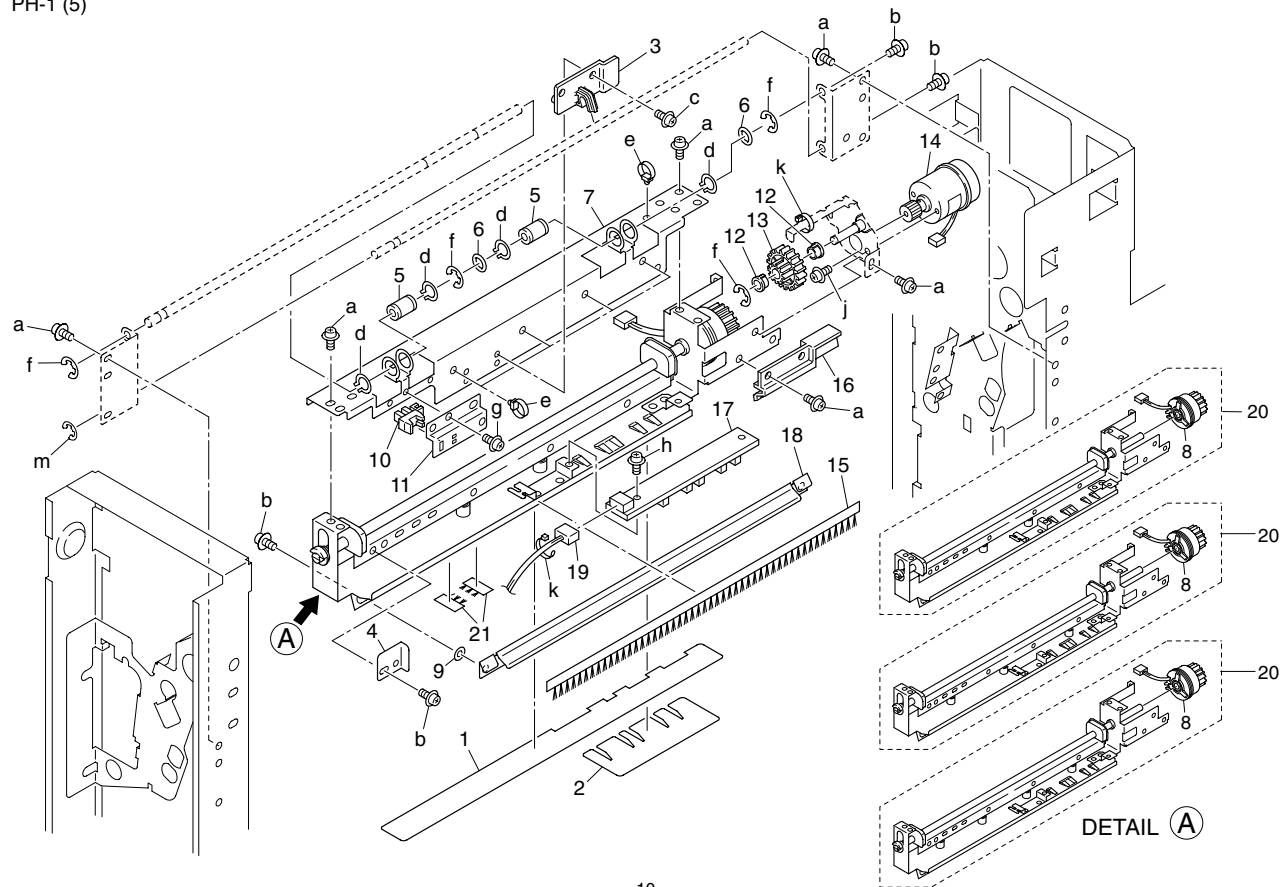 


FIG. 5 PH-1 (5)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5F710840	ENTRANCE SHEET		a-5A807460
●	2	5F710860	ENTRANCE SHEET/B		b-5A807450
	3	5F710740	GUIDE PART		c-5A822190
	4	5F710760	PUNCH ACTUATOR		d-D2001200
	5	5F710900	SLIDE SHAFT HOLDER		e-5C332350
	6	5F710720	PROTECTION RUBBER		f-5A808640
	7	5F710570	PUNCH MOUNTING PLATE		g-5A810180
●	8	5F711150	SPRING CLUTCH		h-5A809690
	9	5F710770	SPACER		j-5A807440
●	10	5A823760	PHOTO SENSOR		k-5A810740
	11	5F710680	MOUNTING PLATE/B		m-5A808630
	12	5F715030	SHAFT HOLDER		
	13	5F710970	PUNCH IDLING GEAR		
●	14	5F710890	PUNCH DRIVE GEAR ASSEMBLY		
●	15	5F710690	NEUTRALIZING BRUSH/A		
	16	5F710640	PUNCH RACK		
	17	5F711130	SIZE DETECT BOARD ASSEMBLY		
	18	5F710620	ENTRANCE GUIDE PLATE/B		
	19	5F711080	INTERNAL WIRING/1		
●	20	5F710560	PUNCH UNIT(2 HOLES)		
●	20	5F711160	PUNCH UNIT(3 HOLES)		
●	20	5F711170	PUNCH UNIT(4 HOLES)		
●	21	5F710800	NEUTRALIZING BRUSH/C		

The parts with "●" only are available as spare parts.

FIG. 6 PH-1 (6)

5F7

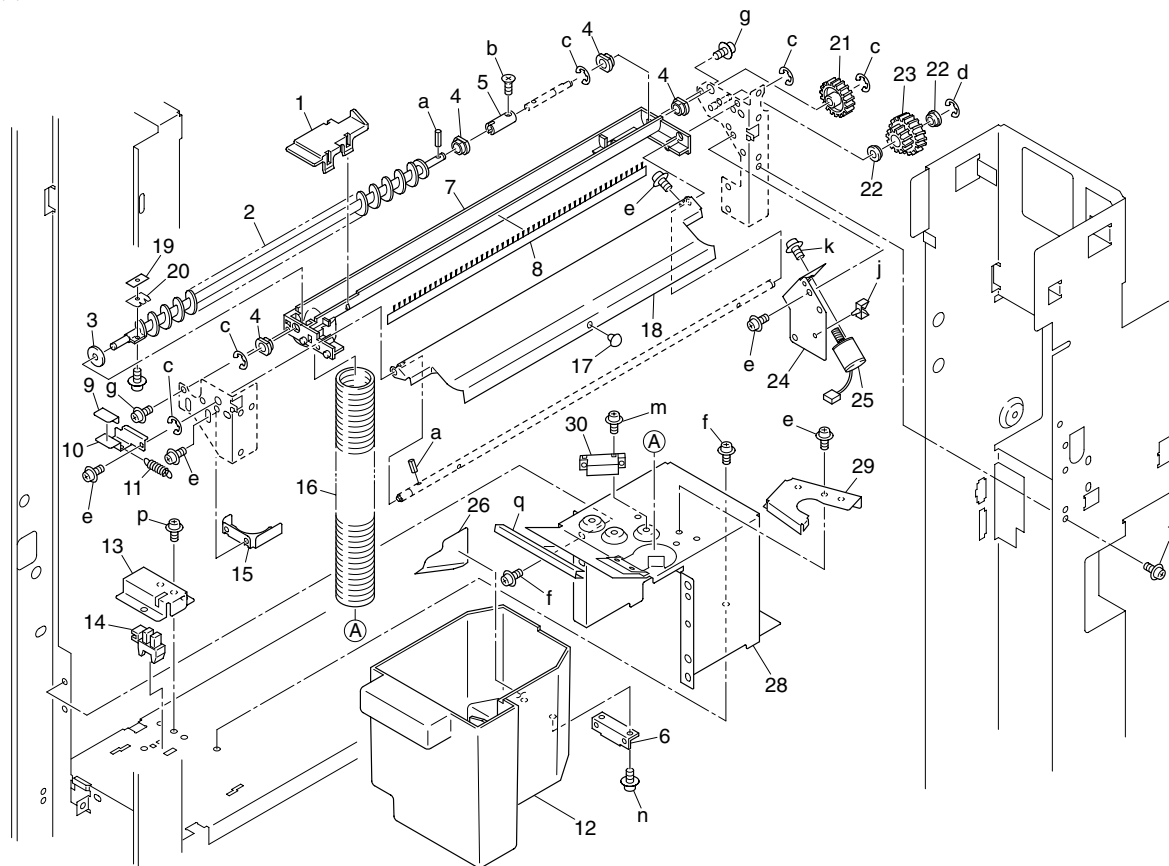 


FIG. 6 PH-1 (6)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5F710630	SCREW COVER		a-E0120120
	2	5F710850	CONVEYING SCREW/A		b-B0130600
	3	5F710660	SPACER/A		c-5A808640
	4	5F715050	SHAFT HOLDER/A		d-5A808630
	5	5F710730	COUPLING		e-5A807450
	6	5A813710	MAGNET CATCH		f-5A807460
	7	5F710580	SCREW CONVEYANCE CASING		g-5A808380
	8	5F710790	NEUTRALIZING BRUSH/B		j-5A811610
	9	5A819520	KNOB LABEL(B)		k-5A912130
	10	5F710700	ROTARY LEVER		m-5C331460
	11	5F710710	RELEASE SPRING		n-5A809270
	12	5F710590	PUNCH COLLECTING BOX		p-5A822190
	13	5F710750	COVER/LOWER		q-5C332360
●	14	5A823760	PHOTO SENSOR		
	15	5F710820	DUCT HOLDING PLATE/UPPER		
●	16	5F710600	PUNCH COLLECTING DUCT		
	17	5A908030	STOPPER RUBBER		
	18	5F710610	ENTRANCE GUIDE PLATE/A		
	19	5F710880	HOLD PLATE		
	20	5F710870	BRUSH		
	21	5F715150	CONVEYANCE GEAR(Z=33)		
	22	5C330130	SEPARATION FULCRUM SHAFT HOLDER		
	23	5F710980	SCREW IDLING GEAR(Z=18/24)		
●	24	5F710830	MOTOR MOUNTING PLATE/C		
	25	5A825150	ELEVATION MOTOR ASS'Y		
	26	5F710810	PUNCH COLLECTING PLATE		
	28	5F710780	GUIDE COVER		
●	29	5F710650	COVER/B		
	30	5A815350	PHOTO SENSOR(2)		

The parts with "●" only are available as spare parts.

FIG. 7 PH-1 (7)

5F7

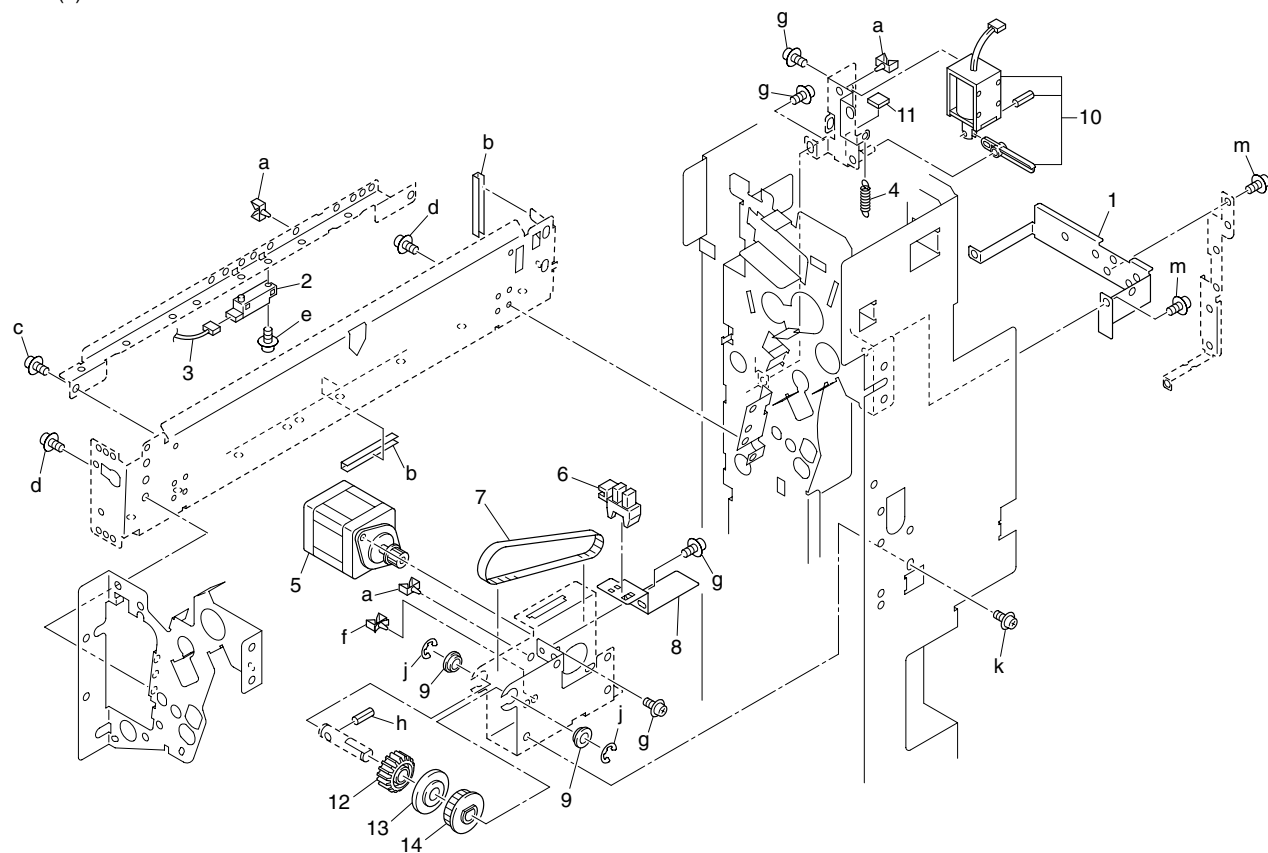 


FIG. 7 PH-1 (7)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
● ● ● ● ● ● ● ● ● ● ● ● ● ●	1	5F710370	WIRING GUIDE PLATE/2		a-5A811610
	2	5C330600	PHOTO SENSOR		b-5C332360
	3	5F711090	INTERNAL WIRING/2		c-5A822190
	4	5F710350	SOLENOID SPRING		d-5A811530
	5	5F715060	FNS MOTOR/2		e-B0013100
	6	5A823760	PHOTO SENSOR		f-5A825250
	7	5F711010	PUNCH ROCKING BELT		g-5A810180
	8	5F710670	MOUNTING PLATE/A		h-5A814720
	9	5C330500	PAPER FEED SHAFT HOLDER		j-5A807490
	10	5F710550	DC SOLENOID ASSEMBLY		k-5A809800
	11	5A909230	STICKING PART		m-5A807460
	12	5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)		
	13	5F715080	DEVELOPING POSITIONING ROLLER		
	14	5F710910	PUNCH ROCKING PULLEY		

The parts with "●" only are available as spare parts.

FIG. 8 PH-1 (8)

5F7

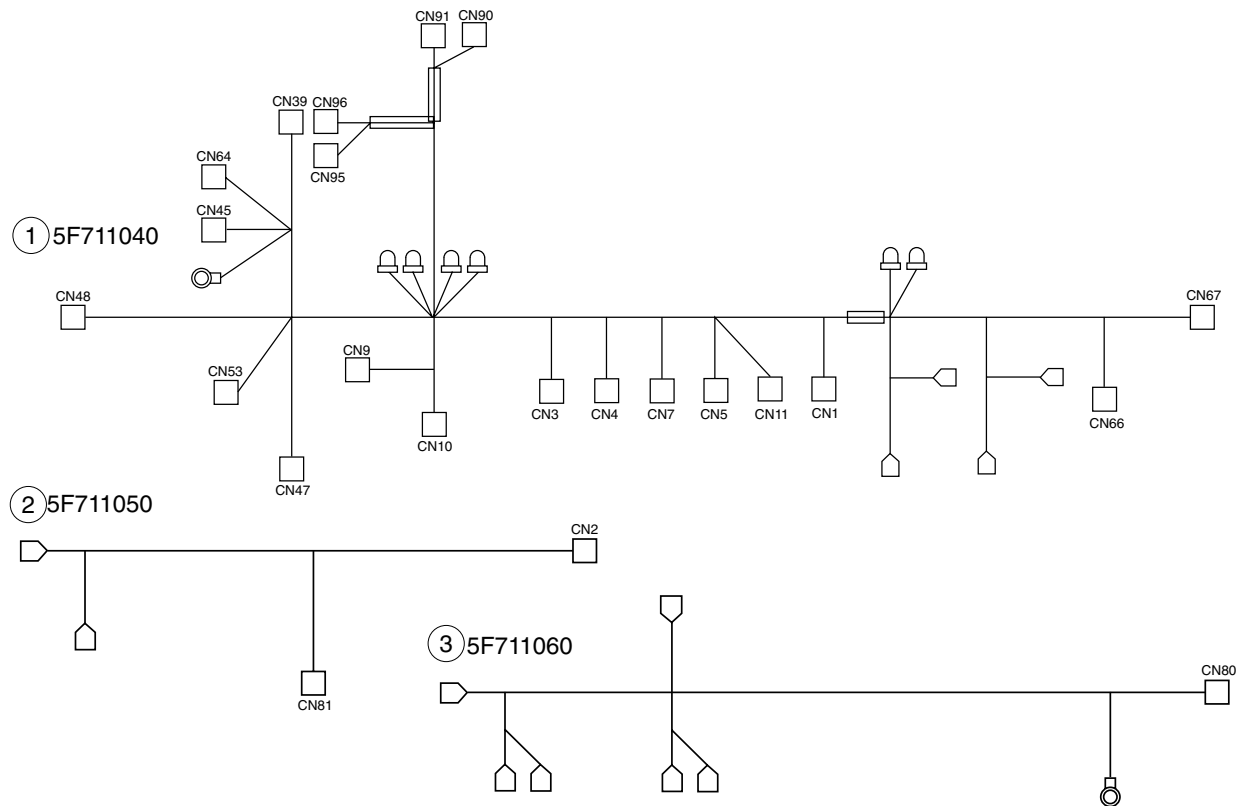 



FIG. 8 PH-1 (8)

5F7


SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5F711040	MAIN WIRING		
	2	5F711050	DC POWER SOURCE WIRING/1		
	3	5F711060	AC POWER SOURCE WIRING/1		

The parts with "●" only are available as spare parts.

 
① 5F711070

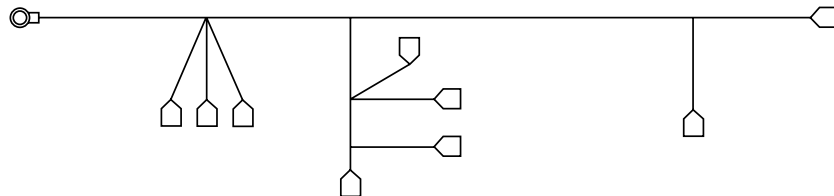

② 5F711080

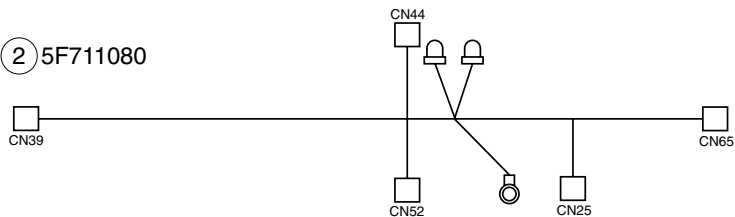 

③ 5F711090

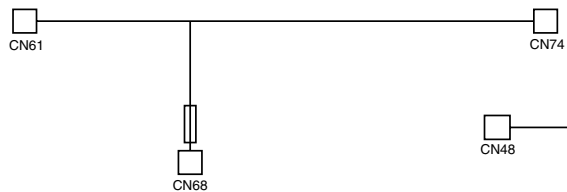 

④ 5F711100

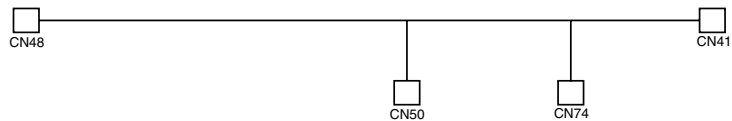 


FIG. 9 PH-1 (9)

5F7

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5F711070	AC POWER SOURCE WIRING/2		
	2	5F711080	INTERNAL WIRING/1		
	3	5F711090	INTERNAL WIRING/2		
	4	5F711100	INTERNAL WIRING/3		

The parts with "●" only are available as spare parts.

INDEX

SP	Parts No.	Description	Fig. No.
●	5A808170	EXTERNAL AUX PANEL	2
	5A811980	SEPARATE SCREW (M3X3.2)	3
	5A813710	MAGNET CATCH	6
●	5A815350	PHOTO SENSOR(2)	6
	5A819520	KNOB LABEL(B)	6
	5A823260	NOISE FILTER	1
●	5A823760	PHOTO SENSOR	5,6,7
●	5A824330	RADF DRIVE MOTOR(1)	4
●	5A824810	RESIST SENSOR	3
●	5A825150	ELEVATION MOTOR ASS'Y	6
	5A907150	COVER	2
	5A907211	RF STAY	1
●	5A908030	STOPPER RUBBER	3,6
	5A908160	ENTRANCE ROLLER	3
	5A908190	DRIVING PULLEY/A	4
●	5A908450	RELEASE LEVER KNOB	3
	5A909230	STICKING PART	7
	5A910790	BELT HOLDER	4
	5BA08000	ACTUATOR	2
	5C314230	STOPPER RUBBER	3
	5C317550	POWER SOURCE RELAY	2
	5C330130	SEPARATION FULCRUM SHAFT HOLDER	6
	5C330500	PAPER FEED SHAFT HOLDER	7
●	5C330600	PHOTO SENSOR	7
	5C511100	SWITCH INSULATING SHEET	2
●	5C710620	INTER LOCK SWITCH	2
	5FD00030	SWITCH COVER	2
	5FD02040	PAPER EXIT UP/DOWN SCREW	1
	5F710010	EXIT GUIDE PLATE/A	1
	5F710020	MOUNTING PLATE/1	1
	5F710030	PREVENTING PART/1	1
	5F710040	FINISHER MOUNTING PLATE	1
	5F710050	FILTER MOUNTING PLATE	1
	5F710060	FINISHER MOUNTING STAY/1	1
	5F710070	FINISHER MOUNTING STAY/2	1
	5F710080	FINISHER MOUNTING STAY/3	1
	5F710090	CONVEYANCE MOUNTING SPACER	1
	5F710100	FINISHER MOUNTING STAY/A	1
	5F710110	FINISHER STAY	1
	5F710120	FINISHER COVER PLATE	1

The parts with "●" only are available as spare parts.

5F7

SP	Parts No.	Description	Fig. No.
	5F710130	POSITIONING PLATE/1	1
●	5F710140	FRONT DOOR	2
●	5F710150	EXTERNAL COVER/UPPER	2
●	5F710160	REAR COVER	2
	5F710170	EXTERNAL CONNECTING PLATE/A	2
	5F710180	MOUNTING PLATE/RIGHT	2
	5F710190	SWITCH OPEN/SHUT PLATE	2
	5F710200	GUIDE PLATE/1	3
	5F710210	GUIDE PLATE/2	3
	5F710220	GUIDE PLATE/3	3
	5F710230	GUIDE PLATE/5	3
	5F710240	EXIT GUIDE PLATE/1	3
	5F710250	EXIT GUIDE PLATE/2	3
	5F710260	PAPER UP/DOWN LEVER/1	4
	5F710270	RESIST DRIVING ROLLER	4
	5F710280	RESIST DRIVEN ROLLER	4
	5F710290	CONVEYANCE ROLLER	4
	5F710300	PRESSING SPRING	3
	5F710310	JAM RELEASE SPRING/1	3
	5F710320	JAM RELEASE SPRING/2	3
	5F710330	JAM RELEASE SPRING/7	3
	5F710340	JAM RELEASE SPRING/8	3
	5F710350	SOLENOID SPRING	7
	5F710360	SOLENOID ARM/2	7
	5F710370	WIRING GUIDE PLATE/2	4
	5F710380	MOTOR MOUNTING PLATE/2	4
	5F710390	RESIST SPRING	4
	5F710400	TENSION PLATE/1 CAULKING	4
	5F710410	CONVEYANCE DRIVING ROLLER	4
	5F710420	REINFORCE PLATE/1	3
	5F710430	REINFORCE PLATE/2	3
	5F710440	REINFORCE PLATE/3	3
	5F710450	GUIDE PART/1	4
	5F710460	RESIST GUIDE PLATE	4
	5F710470	GUIDE SHEET	4
	5F710480	HINGE PLATE/FRONT	3
	5F710490	HINGE PLATE/REAR	3
	5F710500	BELT TENSION ROLLER	4
	5F710510	CONVEYANCE GUIDE SHEET	3
	5F710520	CONVEYANCE GUIDE SHEET/B	3

SP	Parts No.	Description	Fig. No.
	5F710530	TENSION PLATE/2 CAULKING	4
	5F710540	HINGE PLATE CAULKING	3
●	5F710550	DC SOLENOID ASSEMBLY	7
●	5F710560	PUNCH UNIT(2 HOLES)	5
	5F710570	PUNCH MOUNTING PLATE	5
	5F710580	SCREW CONVEYANCE CASING	6
	5F710590	PUNCH COLLECTING BOX	6
	5F710600	PUNCH COLLECTING DUCT	6
	5F710610	ENTRANCE GUIDE PLATE/A	6
	5F710620	ENTRANCE GUIDE PLATE/B	5
	5F710630	SCREW COVER	6
	5F710640	PUNCH RACK	5
	5F710650	COVER/B	6
	5F710660	SPACER/A	6
	5F710670	MOUNTING PLATE/A	7
	5F710680	MOUNTING PLATE/B	5
●	5F710690	NEUTRALIZING BRUSH/A	5
	5F710700	ROTARY LEVER	6
	5F710710	RELEASE SPRING	6
	5F710720	PROTECTION RUBBER	5
	5F710730	COUPLING	6
	5F710740	GUIDE PART	5
	5F710750	COVER/LOWER	6
	5F710760	PUNCH ACTUATOR	5
	5F710770	SPACER	5
	5F710780	GUIDE COVER	6
	5F710790	NEUTRALIZING BRUSH/B	6
●	5F710800	NEUTRALIZING BRUSH/C	5
	5F710810	PUNCH COLLECTING PLATE	6
	5F710820	DUCT HOLDING PLATE/UPPER	6
	5F710830	MOTOR MOUNTING PLATE/C	6
●	5F710840	ENTRANCE SHEET	5
	5F710850	CONVEYING SCREW/A	6
●	5F710860	ENTRANCE SHEET/B	5
	5F710870	BRUSH	6
	5F710880	HOLD PLATE	6
●	5F710890	PUNCH DRIVE GEAR ASSEMBLY	5
	5F710900	SLIDE SHAFT HOLDER	5
	5F710910	PUNCH ROCKING PULLEY	7
	5F710920	FOLDING PULLEY/1(Z=42)	4

SP	Parts No.	Description	Fig. No.
	5F710930	MOTOR PULLEY/2(Z=24)	4
	5F710940	CONVEYANCE PULLEY(Z=24)	4
	5F710950	LDLING PULLEY(Z=24/30)	4
	5F710960	CONVEYANCE GEAR(Z=30)	4
	5F710970	PUNCH IDLING GEAR	5
	5F710980	SCREW IDLING GEAR(Z=18/24)	6
●	5F710990	DRIVE BELT/1(L=333)	4
●	5F711000	DRIVE BELT/2	4
●	5F711010	PUNCH ROCKING BELT	7
●	5F711020	DC POWER SOURCE	2
●	5F711030	CIRCUIT BREAKER	2
	5F711040	MAIN WIRING	8
	5F711050	DC POWER SOURCE WIRING/1	8
	5F711060	AC POWER SOURCE WIRING/1	2,8
	5F711070	AC POWER SOURCE WIRING/2	9
	5F711080	INTERNAL WIRING/1	5,9
	5F711090	INTERNAL WIRING/2	7,9
	5F711100	INTERNAL WIRING/3	9
●	5F711110	CONTROL BOARD UNIT	2
●	5F711120	ROM UNIT	2
	5F711130	SIZE DETECT BOARD ASSEMBLY	5
●	5F711140	JAM PROCESSING LABEL	2
●	5F711150	SPRING CLUTCH	5
●	5F711160	PUNCH UNIT(3 HOLES)	5
●	5F711170	PUNCH UNIT(4 HOLES)	5
	5F715010	SHAFT HOLDER	4
	5F715020	ADF MOUNTING SCREW	1
	5F715030	SHAFT HOLDER	5
	5F715040	ROTARY KNOB	4
	5F715050	SHAFT HOLDER/A	6
●	5F715060	FNS MOTOR/2	7
●	5F715070	COOLING FAN MOTOR	1
	5F715080	DEVELOPING POSITIONING ROLLER	7
	5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)	7
●	5F715100	FIXING SHAFT HOLDER/LOWER	4
	5F715110	POWER SOCKET	2
	5F715120	POWER SOURCE CORD	2
	5F715130	POWER SOURCE CORD	2
	5F715140	POWER SOURCE CORD	2
	5F715150	CONVEYANCE GEAR(Z=33)	6

The parts with "●" only are available as spare parts.

SP	Parts No.	Description	Fig. No.
●	5F715160	SHAFT HOLDER(RESIST)	4
●	5F715170	FIXING ROLLING SHAFT HALDER/LOWER	4

The parts with "●" only are available as spare parts.

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

149 West 51st street,
New York, NY 10019
TEL : (212) 554-2679
FAX : (212) 554-2625

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60179
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
Irvine, California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,
Ontario L5T 1S8, Canada
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
02130 Azcapotzalco
México, D.F. Mexico
TEL : (5) 383-2741
FAX : (5) 383-7804

© 2001 KYOCERA MITA CORPORATION

 **KYOCERA** is a trademark of Kyocera Corporation

mita is a registered trademark of KYOCERA MITA CORPORATION

Printed in U.S.A.