



PU-108

PARTS LIST

Published in Oct.'02
5HJ70770

NOTE

1.Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5HJ10010	NEUTRALIZING BRUSH	PU-108	60Hz	1

2.Service calls and freight will be charged separately.

Parts List

PU-108

———— CONTENTS ————

FIG.1	PU-108 (1)	2
FIG.2	PU-108 (2)	4
FIG.3	PU-108 (3)	6
FIG.4	PU-108 (4)	8
FIG.5	PU-108 (5)	10
FIG.6	PU-108 (6)	12
FIG.7	PU-108 (7)	14
FIG.8	PU-108 (8)	16
FIG.9	PU-108 (9)	18
	• INDEX	20

FIG. 1 PU-108 (1)

5HJ

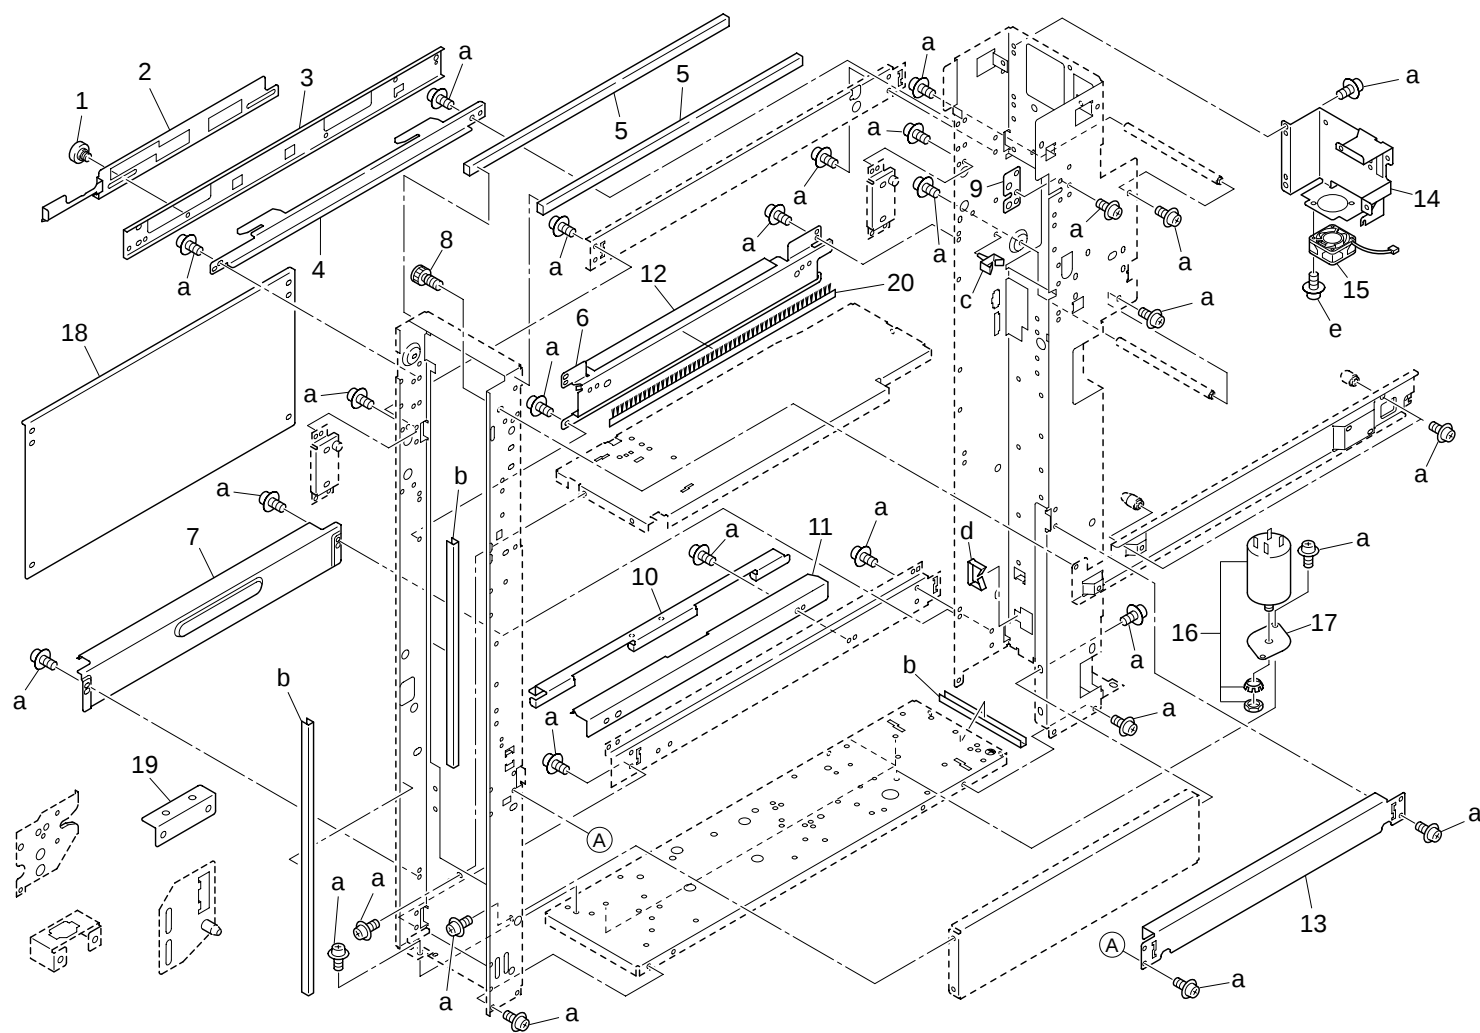


FIG. 1 PU-108 (1)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5FD02040	PAPER EXIT UP/DOWN SCREW	a-5A807460
2	5F710070	FINISHER MOUNTING STAY/2	b-5A807930
3	5F710060	FINISHER MOUNTING STAY/1	c-5A811610
4	5F710040	FINISHER MOUNTING PLATE	d-5C332320
5	5F710030	PREVENTING PART/1	e-5HA50170
6	5F710010	EXIT GUIDE PLATE/A	
7	5F710080	FINISHER MOUNTING STAY/3	
8	5F715020	ADF MOUNTING SCREW	
9	5F710090	CONVEYANCE MOUNTING SPACER	
10	5F710110	FINISHER STAY	
11	5F710100	FINISHER MOUNTING STAY/A	
12	5HJ10060	CONVEYANCE GUIDE SHEET/C	
13	5A907210	RF STAY	
14	5F710020	MOUNTING PLATE/1	
15	5HA10440	MAIN BODY FAN MOTOR	
16	5A823260	NOISE FILTER	
17	5F710050	FILTER MOUNTING PLATE	
18	5F710120	FINISHER COVER PLATE	
19	5F710130	POSITIONING PLATE/1	
20	5HJ10010	NEUTRALIZING BRUSH	

FIG. 2 PU-108 (2)

5HJ

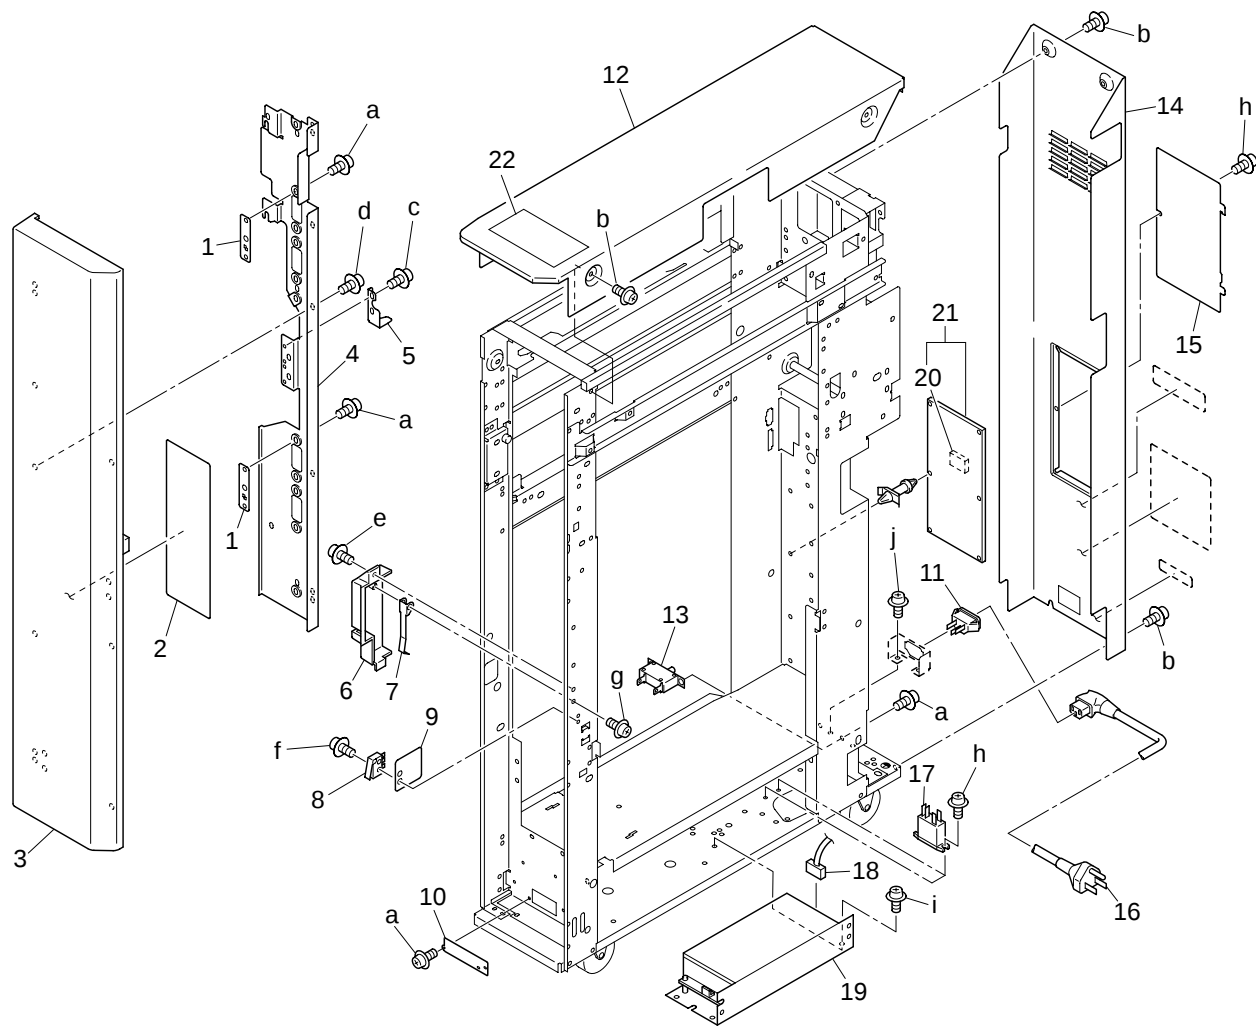


FIG. 2 PU-108 (2)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F710180	MOUNTING PLATE/RIGHT	a-5A811530
2	5F711140	JAM PROCESSING LABEL	b-5C331390
3	5HJ10030	FRONT DOOR	c-5A810180
4	5F710170	EXTERNAL CONNECTING PLATE/A	d-5C331740
5	5F710190	SWITCH OPEN/SHUT PLATE	e-5A807450
6	5A907150	COVER	f-5A912110
7	5BA08000	ACTUATOR	g-5A912160
8	5C710620	INTER LOCK SWITCH	h-5A809690
9	5C511100	SWITCH INSULATING SHEET	i-5A807430
10	5HJ10020	COVER PLATE	j-5A807460
11	5F715110	POWER SOCKET	
12	5HJ10040	EXTERNAL COVER/UPPER	
13	5F711030	CIRCUIT BREAKER	
14	5HJ10050	REAR COVER	
15	5A808170	EXTERNAL AUX PANEL	
16	5F715130	POWER SOURCE CORD	
17	5C317550	POWER SOURCE RELAY	
18	5F711060	AC POWER SOURCE WIRING/1	
19	5F711020	DC POWER SOURCE	
20	5F711122	ROM UNIT	
21	5F711112	CONTROL BOARD UNIT	
22	5HJ10070	PUNCH REGULATING LABEL	

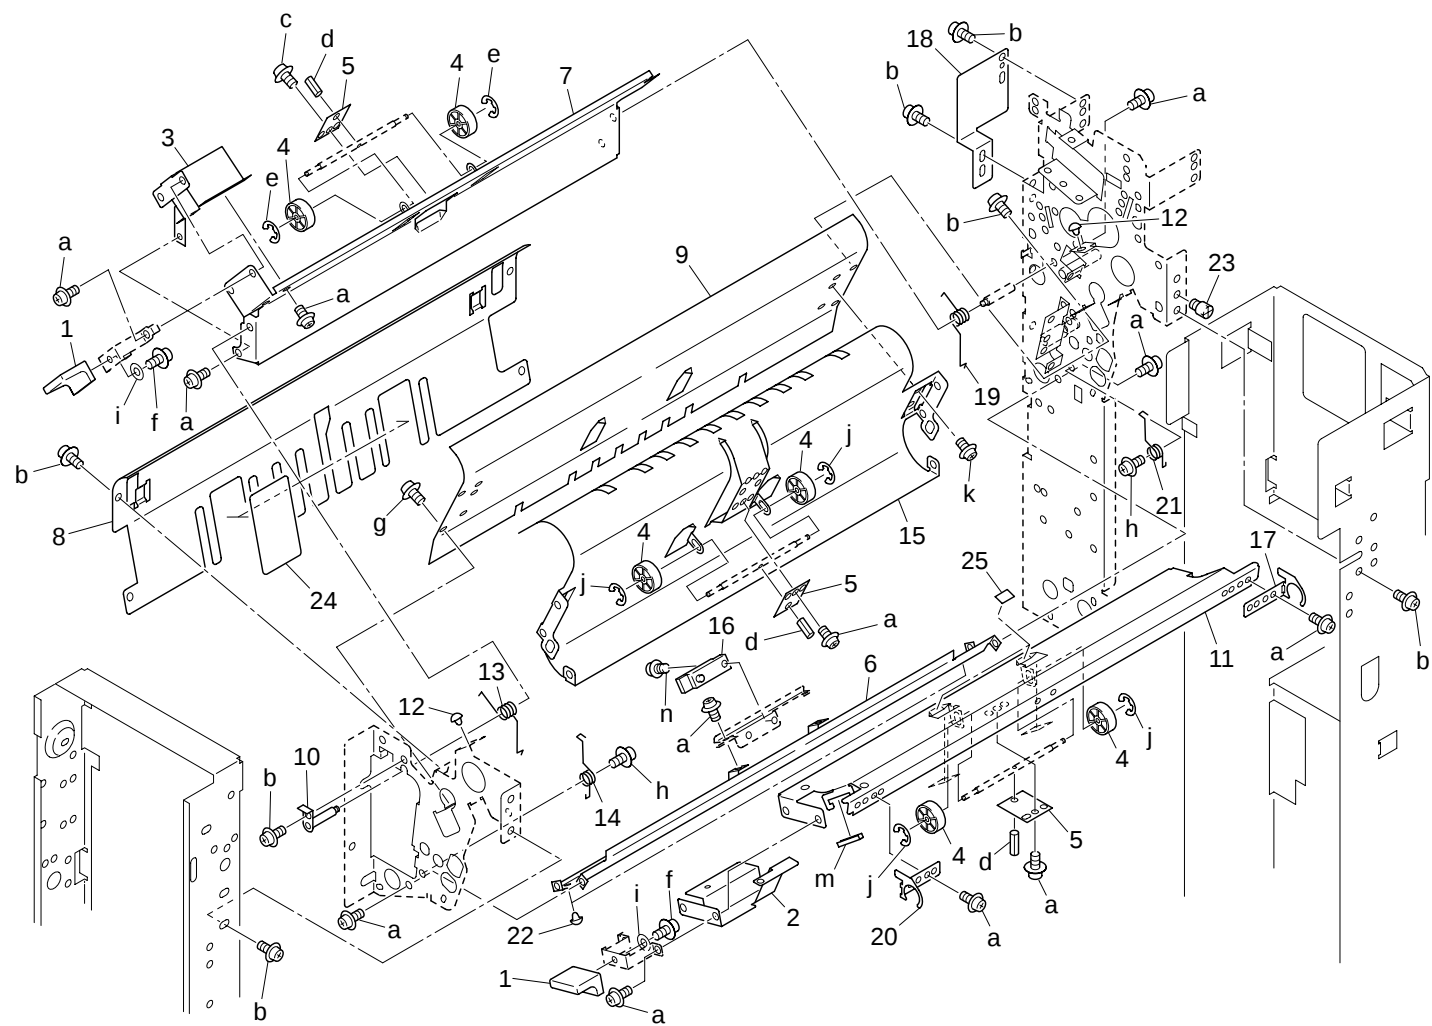


FIG. 3 PU-108 (3)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5A908450	RELEASE LEVER KNOB	a-5A807450
2	5F710420	REINFORCE PLATE/1	b-5A807460
3	5F710440	REINFORCE PLATE/3	c-5C331590
4	5A908160	ENTRANCE ROLLER	d-5A912230
5	5F710300	PRESSING SPRING	e-5A812850
6	5F710240	EXIT GUIDE PLATE/1	f-5A809280
7	5F710230	GUIDE PLATE/5	g-5A807900
8	5F710220	GUIDE PLATE/3	h-5C331640
9	5F710200	GUIDE PLATE/1	i-5A814200
10	5F710540	HINGE PLATE CAULKING	j-5A812850
11	5F710250	EXIT GUIDE PLATE/2	k-5A822190
12	5C314230	STOPPER RUBBER	m-5C332340
13	5F710330	JAM RELEASE SPRING/7	n-5A816180
14	5F710310	JAM RELEASE SPRING/1	
15	5F710210	GUIDE PLATE/2	
16	5A824810	RESIST SENSOR	
17	5F710490	HINGE PLATE/REAR	
18	5F710430	REINFORCE PLATE/2	
19	5F710340	JAM RELEASE SPRING/8	
20	5F710480	HINGE PLATE/FRONT	
21	5F710320	JAM RELEASE SPRING/2	
22	5A908030	STOPPER RUBBER	
23	5A811980	SEPARATE SCREW (M3X3.2)	
24	5F710510	CONVEYANCE GUIDE SHEET	
25	5F710520	CONVEYANCE GUIDE SHEET/B	

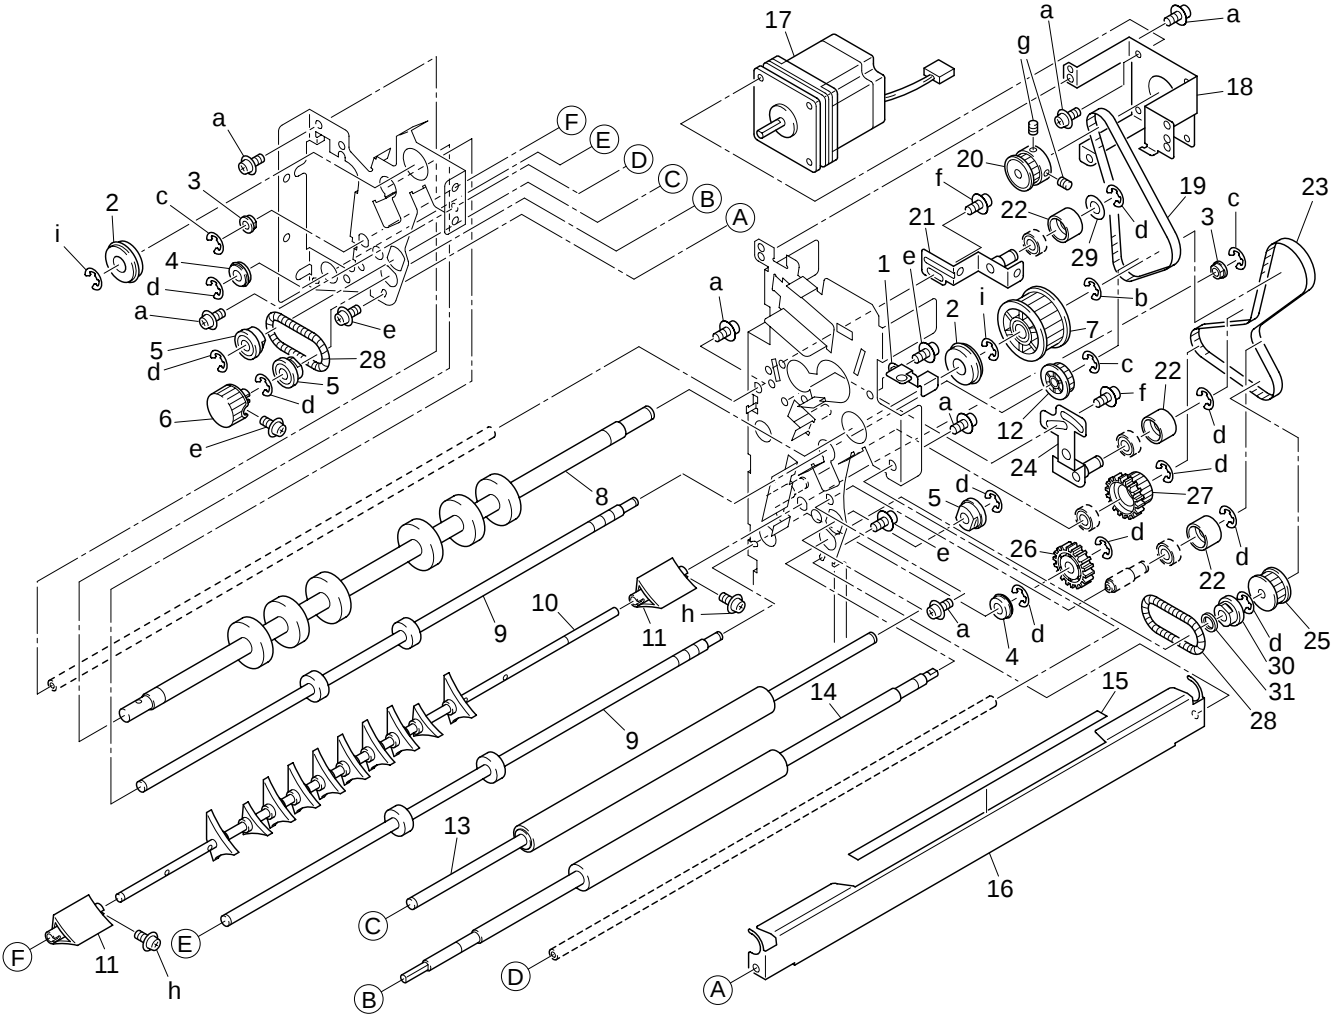


FIG. 4 PU-108 (4)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F710360	SOLENOID ARM/2	a-5A807460
2	5F715170	FIXING ROLLING SHAFT HALDER/LOWER	b-5A816190
3	5F715010	SHAFT HOLDER	c-5A808640
4	5F715100	FIXING SHAFT HOLDER/LOWER	d-5A807490
5	5F715160	SHAFT HOLDER(RESIST)	e-5A807450
6	5F715040	ROTARY KNOB	f-5A811530
7	5F710920	FOLDING PULLEY/1(Z=42)	g-5A813720
8	5F710410	CONVEYANCE DRIVING ROLLER	h-5A809690
9	5F710290	CONVEYANCE ROLLER	i-5C331840
10	5F710260	PAPER UP/DOWN LEVER/1	
11	5F710450	GUIDE PART/1	
12	5F710940	CONVEYANCE PULLEY(Z=24)	
13	5F710280	RESIST DRIVEN ROLLER	
14	5F710270	RESIST DRIVING ROLLER	
15	5F710470	GUIDE SHEET	
16	5F710460	RESIST GUIDE PLATE	
17	5A824330	RADF DRIVE MOTOR(1)	
18	5F710380	MOTOR MOUNTING PLATE/2	
19	5F710990	DRIVE BELT/1(L=333)	
20	5F710930	MOTOR PULLEY/2(Z=24)	
21	5F710400	TENSION PLATE/1 CAULKING	
22	5F710500	BELT TENSION ROLLER	
23	5F711000	DRIVE BELT/2	
24	5F710530	TENSION PLATE/2 CAULKING	
25	5A908190	DRIVING PULLEY/A	
26	5F710960	CONVEYANCE GEAR(Z=30)	
27	5F710950	LDLING PULLEY(Z=24/30)	
28	5F710390	RESIST SPRING	
29	5A910790	BELT HOLDER	
30	5HJ10090	REGISTRATION DRIVING BUSH	
31	5HJ10080	REGISTRATION DRIVING SPACER	

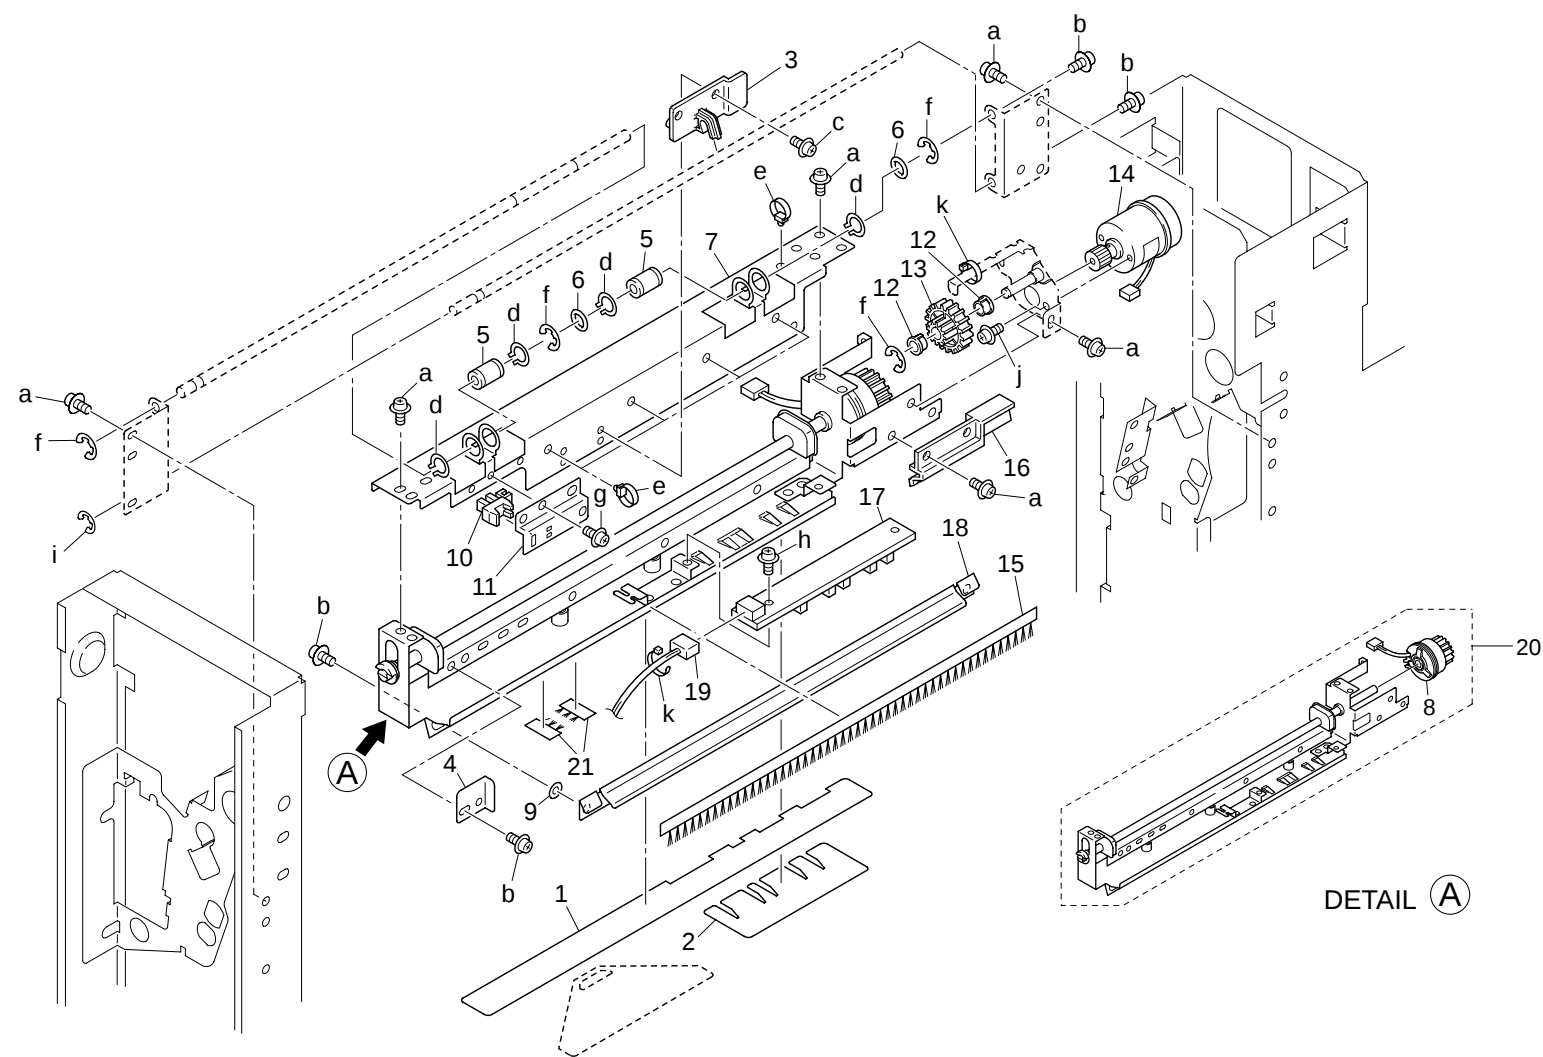


FIG. 5 PU-108 (5)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F710840	ENTRANCE SHEET	a-5A807460
2	5F710860	ENTRANCE SHEET/B	b-5A807450
3	5F710740	GUIDE PART	c-5A822190
4	5F710760	PUNCH ACTUATOR	d-5HA50310
5	5F710900	SLIDE SHAFT HOLDER	e-5C332350
6	5F710720	PROTECTION RUBBER	f-5A808640
7	5F710570	PUNCH MOUNTING PLATE	g-5A810180
8	5F711150	SPRING CLUTCH	h-5A809690
9	5F710770	SPACER	i-5A808630
10	5A823760	PHOTO SENSOR	j-5A807440
11	5F710680	MOUNTING PLATE/B	k-5A810740
12	5F715030	SHAFT HOLDER	
13	5F710970	PUNCH IDLING GEAR	
14	5F710890	PUNCH DRIVE GEAR ASSEMBLY	
15	5F710690	NEUTRALIZING BRUSH/A	
16	5F710640	PUNCH RACK	
17	5F711130	SIZE DETECT BOARD ASSEMBLY	
18	5F710620	ENTRANCE GUIDE PLATE/B	
19	5F711080	INTERNAL WIRING/1	
20	5F711160	PUNCH UNIT(3 HOLES)	
21	5F710800	NEUTRALIZING BRUSH/C	

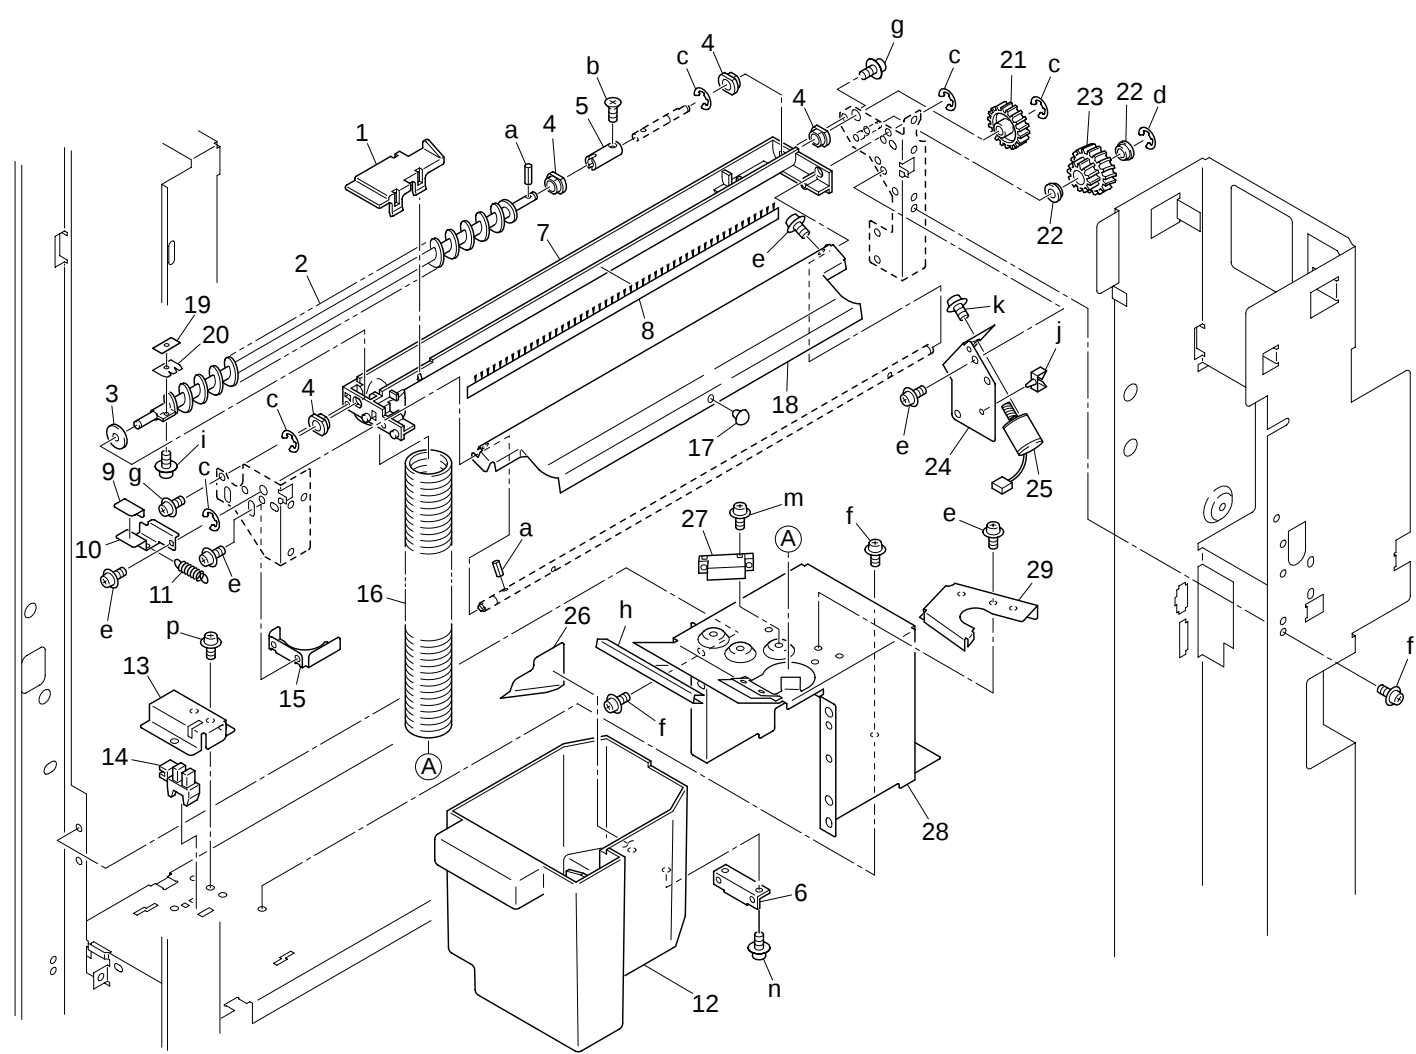


FIG. 6 PU-108 (6)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F710630	SCREW COVER	a-5HA50330
2	5F710850	CONVEYING SCREW/A	b-5HA50040
3	5F710660	SPACER/A	c-5A808640
4	5F715050	SHAFT HOLDER/A	d-5A808630
5	5F710730	COUPLING	e-5A807450
6	5A813710	MAGNET CATCH	f-5A807460
7	5F710580	SCREW CONVEYANCE CASING	g-5A808380
8	5F710790	NEUTRALIZING BRUSH/B	h-5C332340
9	5A819520	KNOB LABEL(B)	i-5HA50150
10	5F710700	ROTARY LEVER	j-5A811610
11	5F710710	RELEASE SPRING	k-5A912130
12	5F710590	PUNCH COLLECTING BOX	m-5C331460
13	5F710750	COVER/LOWER	n-5A809270
14	5A823760	PHOTO SENSOR	p-5A822190
15	5F710820	DUCT HOLDING PLATE/UPPER	
16	5F710600	PUNCH COLLECTING DUCT	
17	5A908030	STOPPER RUBBER	
18	5F710610	ENTRANCE GUIDE PLATE/A	
19	5F710880	HOLD PLATE	
20	5F710870	BRUSH	
21	5F715150	CONVEYANCE GEAR(Z=33)	
22	5C330130	SEPARATION FULCRUM SHAFT HOLDER	
23	5F710980	SCREW IDLING GEAR(Z=18/24)	
24	5F710830	MOTOR MOUNTING PLATE/C	
25	5A825150	ELEVATION MOTOR ASS'Y	
26	5F710810	PUNCH COLLECTING PLATE	
27	5A815350	PHOTO SENSOR(2)	
28	5F710780	GUIDE COVER	
29	5F710650	COVER/B	

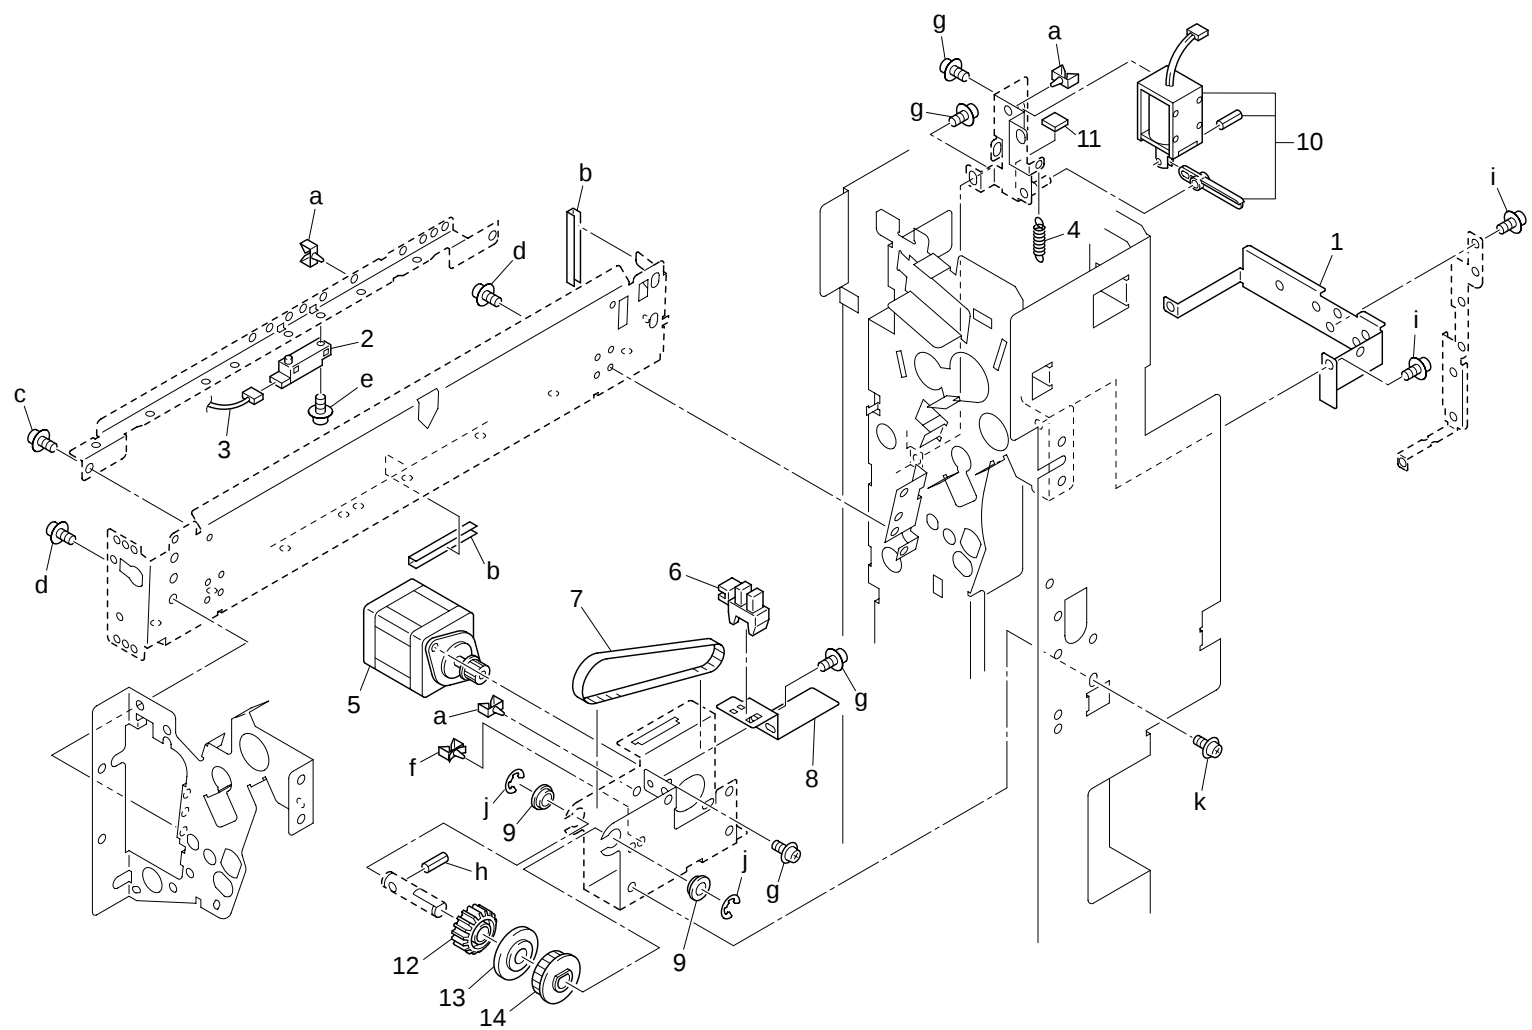


FIG. 7 PU-108 (7)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F710370	WIRING GUIDE PLATE/2	a-5A811610
2	5C330600	PHOTO SENSOR	b-5C332340
3	5F711090	INTERNAL WIRING/2	c-5A822190
4	5F710350	SOLENOID SPRING	d-5A811530
5	5F715060	FNS MOTOR/2	e-5HA50060
6	5A823760	PHOTO SENSOR	f-5A825250
7	5F711010	PUNCH ROCKING BELT	g-5A810180
8	5F710670	MOUNTING PLATE/A	h-5A814720
9	5C330500	PAPER FEED SHAFT HOLDER	i-5A807460
10	5F710550	DC SOLENOID ASSEMBLY	j-5A807490
11	5A823820	STICK MATERIAL	k-5A809800
12	5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)	
13	5F715080	DEVELOPING POSITIONING ROLLER	
14	5F710910	PUNCH ROCKING PULLEY	

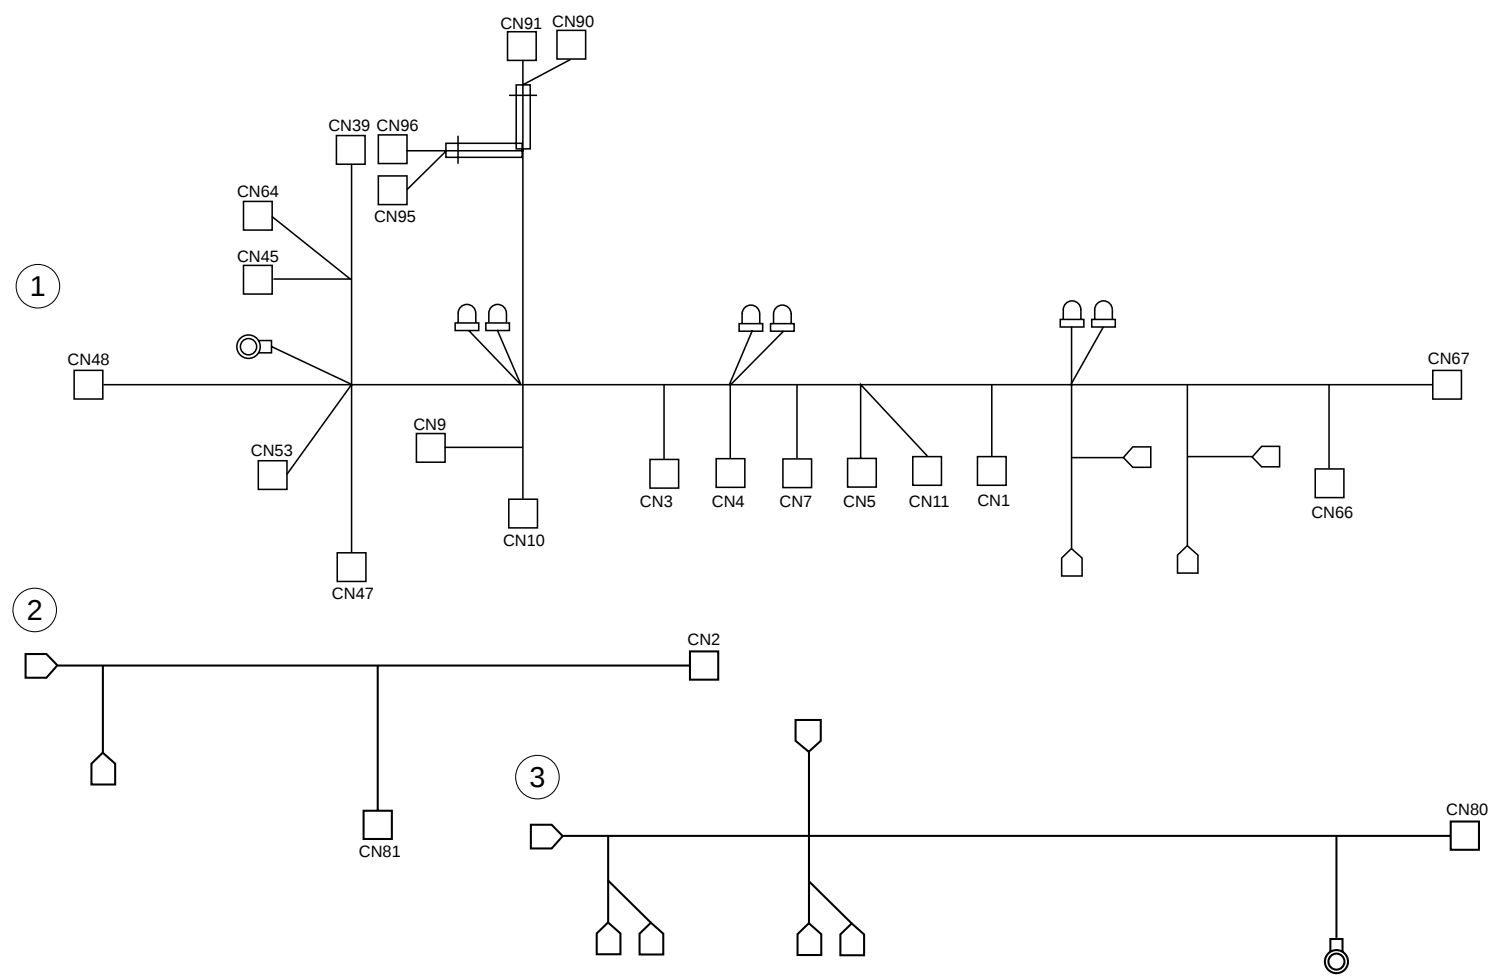


FIG. 8 PU-108 (8)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F711040	MAIN WIRING	
2	5F711050	DC POWER SOURCE WIRING/1	
3	5F711060	AC POWER SOURCE WIRING/1	

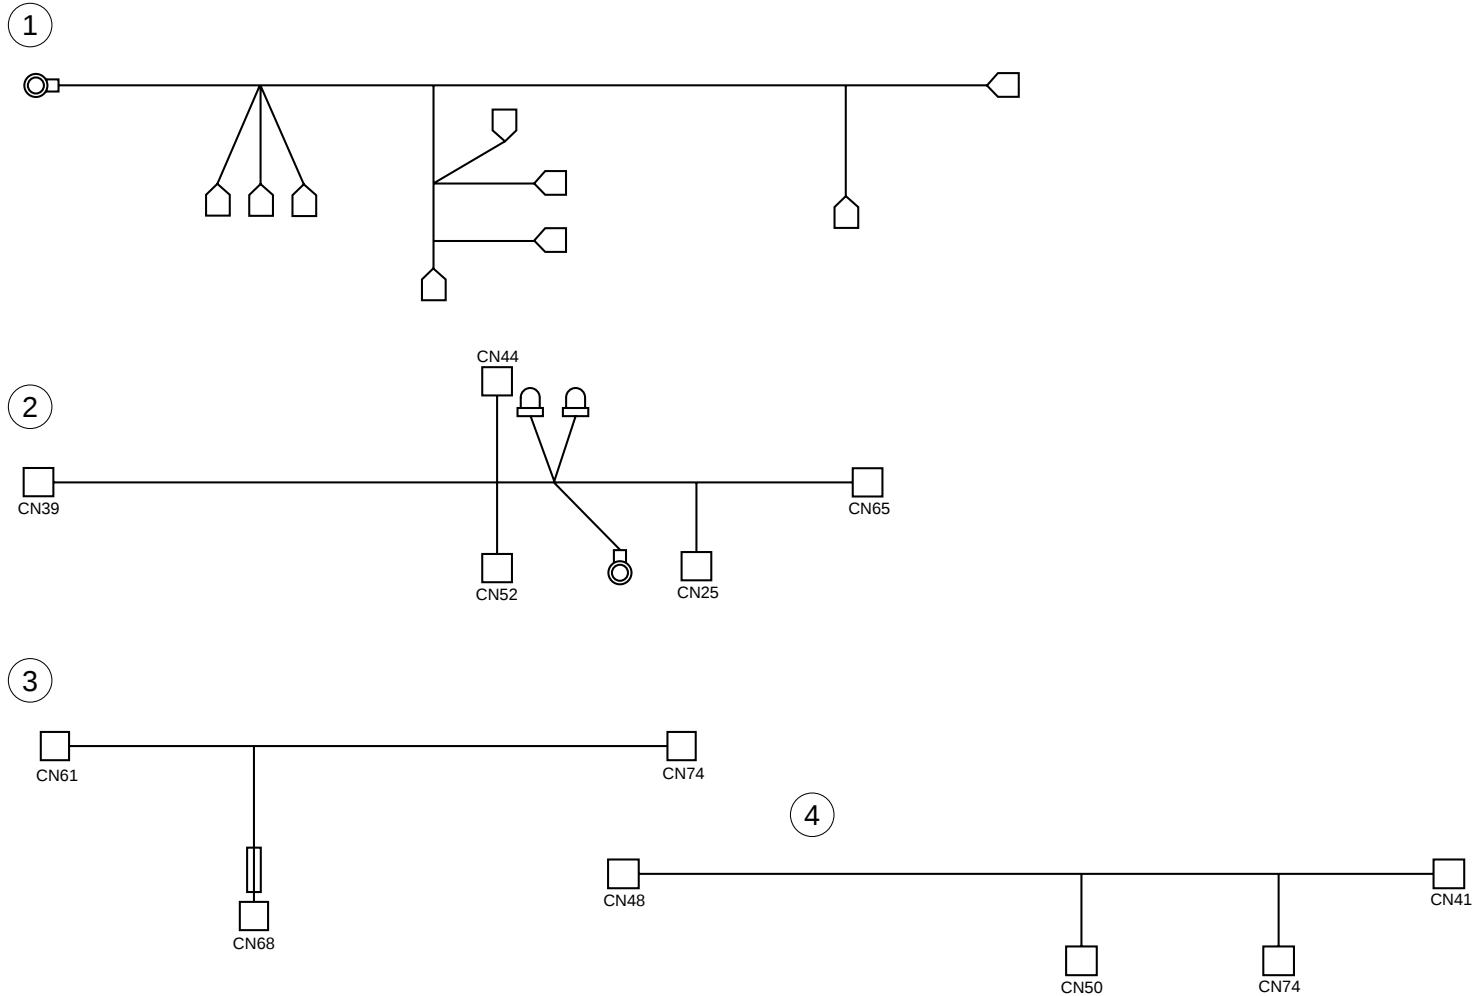


FIG. 9 PU-108 (9)

5HJ

Ref.No.	Parts No.	Description	Standard parts
1	5F711070	AC POWER SOURCE WIRING/2	
2	5F711080	INTERNAL WIRING/1	
3	5F711090	INTERNAL WIRING/2	
4	5F711100	INTERNAL WIRING/3	

INDEX

5HJ

Parts No.	Description	Fig. No.
5A808170	EXTERNAL AUX PANEL	2
5A811980	SEPARATE SCREW (M3X3.2)	3
5A813710	MAGNET CATCH	6
5A815350	PHOTO SENSOR(2)	6
5A819520	KNOB LABEL(B)	6
5A823260	NOISE FILTER	1
5A823760	PHOTO SENSOR	5,6,7
5A823820	STICK MATERIAL	7
5A824330	RADF DRIVE MOTOR(1)	4
5A824810	RESIST SENSOR	3
5A825150	ELEVATION MOTOR ASS'Y	6
5A907150	COVER	2
5A907210	RF STAY	1
5A908030	STOPPER RUBBER	3,6
5A908160	ENTRANCE ROLLER	3
5A908190	DRIVING PULLEY/A	4
5A908450	RELEASE LEVER KNOB	3
5A910790	BELT HOLDER	4
5BA08000	ACTUATOR	2
5C314230	STOPPER RUBBER	3
5C317550	POWER SOURCE RELAY	2
5C330130	SEPARATION FULCRUM SHAFT HOLDER	6
5C330500	PAPER FEED SHAFT HOLDER	7
5C330600	PHOTO SENSOR	7
5C511100	SWITCH INSULATING SHEET	2
5C710620	INTER LOCK SWITCH	2
5FD02040	PAPER EXIT UP/DOWN SCREW	1
5F710010	EXIT GUIDE PLATE/A	1
5F710020	MOUNTING PLATE/1	1
5F710030	PREVENTING PART/1	1
5F710040	FINISHER MOUNTING PLATE	1
5F710050	FILTER MOUNTING PLATE	1
5F710060	FINISHER MOUNTING STAY/1	1
5F710070	FINISHER MOUNTING STAY/2	1
5F710080	FINISHER MOUNTING STAY/3	1
5F710090	CONVEYANCE MOUNTING SPACER	1
5F710100	FINISHER MOUNTING STAY/A	1
5F710110	FINISHER STAY	1
5F710120	FINISHER COVER PLATE	1
5F710130	POSITIONING PLATE/1	1

Parts No.	Description	Fig. No.
5F710170	EXTERNAL CONNECTING PLATE/A	2
5F710180	MOUNTING PLATE/RIGHT	2
5F710190	SWITCH OPEN/SHUT PLATE	2
5F710200	GUIDE PLATE/1	3
5F710210	GUIDE PLATE/2	3
5F710220	GUIDE PLATE/3	3
5F710230	GUIDE PLATE/5	3
5F710240	EXIT GUIDE PLATE/1	3
5F710250	EXIT GUIDE PLATE/2	3
5F710260	PAPER UP/DOWN LEVER/1	4
5F710270	RESIST DRIVING ROLLER	4
5F710280	RESIST DRIVEN ROLLER	4
5F710290	CONVEYANCE ROLLER	4
5F710300	PRESSING SPRING	3
5F710310	JAM RELEASE SPRING/1	3
5F710320	JAM RELEASE SPRING/2	3
5F710330	JAM RELEASE SPRING/7	3
5F710340	JAM RELEASE SPRING/8	3
5F710350	SOLENOID SPRING	7
5F710360	SOLENOID ARM/2	4
5F710370	WIRING GUIDE PLATE/2	7
5F710380	MOTOR MOUNTING PLATE/2	4
5F710390	RESIST SPRING	4
5F710400	TENSION PLATE/1 CAULKING	4
5F710410	CONVEYANCE DRIVING ROLLER	4
5F710420	REINFORCE PLATE/1	3
5F710430	REINFORCE PLATE/2	3
5F710440	REINFORCE PLATE/3	3
5F710450	GUIDE PART/1	4
5F710460	RESIST GUIDE PLATE	4
5F710470	GUIDE SHEET	4
5F710480	HINGE PLATE/FRONT	3
5F710490	HINGE PLATE/REAR	3
5F710500	BELT TENSION ROLLER	4
5F710510	CONVEYANCE GUIDE SHEET	3
5F710520	CONVEYANCE GUIDE SHEET/B	3
5F710530	TENSION PLATE/2 CAULKING	4
5F710540	HINGE PLATE CAULKING	3
5F710550	DC SOLENOID ASSEMBLY	7
5F710570	PUNCH MOUNTING PLATE	5

Parts No.	Description	Fig. No.
5F710580	SCREW CONVEYANCE CASING	6
5F710590	PUNCH COLLECTING BOX	6
5F710600	PUNCH COLLECTING DUCT	6
5F710610	ENTRANCE GUIDE PLATE/A	6
5F710620	ENTRANCE GUIDE PLATE/B	5
5F710630	SCREW COVER	6
5F710640	PUNCH RACK	5
5F710650	COVER/B	6
5F710660	SPACER/A	6
5F710670	MOUNTING PLATE/A	7
5F710680	MOUNTING PLATE/B	5
5F710690	NEUTRALIZING BRUSH/A	5
5F710700	ROTARY LEVER	6
5F710710	RELEASE SPRING	6
5F710720	PROTECTION RUBBER	5
5F710730	COUPLING	6
5F710740	GUIDE PART	5
5F710750	COVER/LOWER	6
5F710760	PUNCH ACTUATOR	5
5F710770	SPACER	5
5F710780	GUIDE COVER	6
5F710790	NEUTRALIZING BRUSH/B	6
5F710800	NEUTRALIZING BRUSH/C	5
5F710810	PUNCH COLLECTING PLATE	6
5F710820	DUCT HOLDING PLATE/UPPER	6
5F710830	MOTOR MOUNTING PLATE/C	6
5F710840	ENTRANCE SHEET	5
5F710850	CONVEYING SCREW/A	6
5F710860	ENTRANCE SHEET/B	5
5F710870	BRUSH	6
5F710880	HOLD PLATE	6
5F710890	PUNCH DRIVE GEAR ASSEMBLY	5
5F710900	SLIDE SHAFT HOLDER	5
5F710910	PUNCH ROCKING PULLEY	7
5F710920	FOLDING PULLEY/1(Z=42)	4
5F710930	MOTOR PULLEY/2(Z=24)	4
5F710940	CONVEYANCE PULLEY(Z=24)	4
5F710950	IDLING PULLEY(Z=24/30)	4
5F710960	CONVEYANCE GEAR(Z=30)	4
5F710970	PUNCH IDLING GEAR	5

Parts No.	Description	Fig. No.
5F710980	SCREW IDLING GEAR(Z=18/24)	6
5F710990	DRIVE BELT/1(L=333)	4
5F711000	DRIVE BELT/2	4
5F711010	PUNCH ROCKING BELT	7
5F711020	DC POWER SOURCE	2
5F711030	CIRCUIT BREAKER	2
5F711040	MAIN WIRING	8
5F711050	DC POWER SOURCE WIRING/1	8
5F711060	AC POWER SOURCE WIRING/1	2,8
5F711070	AC POWER SOURCE WIRING/2	8
5F711080	INTERNAL WIRING/1	5,8
5F711090	INTERNAL WIRING/2	7,8
5F711100	INTERNAL WIRING/3	8
5F711112	CONTROL BOARD UNIT	2
5F711122	ROM UNIT	2
5F711130	SIZE DETECT BOARD ASSEMBLY	5
5F711140	JAM PROCESSING LABEL	2
5F711150	SPRING CLUTCH	5
5F711160	PUNCH UNIT(3 HOLES)	5
5F715010	SHAFT HOLDER	4
5F715020	ADF MOUNTING SCREW	1
5F715030	SHAFT HOLDER	5
5F715040	ROTARY KNOB	4
5F715050	SHAFT HOLDER/A	6
5F715060	FNS MOTOR/2	7
5F715080	DEVELOPING POSITIONING ROLLER	7
5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)	7
5F715100	FIXING SHAFT HOLDER/LOWER	4
5F715110	POWER SOCKET	2
5F715130	POWER SOURCE CORD	2
5F715150	CONVEYANCE GEAR(Z=33)	6
5F715160	SHAFT HOLDER(RESIST)	4
5F715170	FIXING ROLLING SHAFT HOLDER/LOWER	4
5HA10440	MAIN BODY FAN MOTOR	1
5HJ10010	NEUTRALIZING BRUSH	1
5HJ10020	COVER PLATE	2
5HJ10030	FRONT DOOR	2
5HJ10040	EXTERNAL COVER/UPPER	2
5HJ10050	REAR COVER	2
5HJ10060	CONVEYANCE GUIDE SHEET/C	1

Parts No.	Description	Fig. No.
5HJ10070	PUNCH REGULATING LABEL	2
5HJ10080	REGISTRATION DRIVING SPACER	4
5HJ10090	REGISTRATION DRIVING BUSH	4

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

1410 Broadway 23rd floor
New York, NY 10018
TEL : (917) 286-5400
FAX : (917) 286-5402

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60191
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
Irvine, California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,
Ontario L5T 1S8, Canada
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
02130 Azcapotzalco
México, D.F. México
TEL : (55) 383-2741
FAX : (55) 383-7804

© 2002 KYOCERA MITA CORPORATION

 **KYOCERA** is a trademark of Kyocera Corporation

mita is a registered trademark of KYOCERA MITA CORPORATION

Printed in U.S.A.