



PZ-108

PARTS LIST

Published in Oct.'02
5F870770

NOTE

1.Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5F810010	STOPPER ROLLER/B	PZ-108	60Hz	1

2.Service calls and freight will be charged separately.

Parts List

PZ-108

———— CONTENTS ————

FIG.1	PZ-108 (1)	2
FIG.2	PZ-108 (2)	4
FIG.3	PZ-108 (3)	6
FIG.4	PZ-108 (4)	8
FIG.5	PZ-108 (5)	10
FIG.6	PZ-108 (6)	12
FIG.7	PZ-108 (7)	14
FIG.8	PZ-108 (8)	16
FIG.9	PZ-108 (9)	18
FIG.10	PZ-108 (10)	20
FIG.11	PZ-108 (11)	22
	• INDEX	24

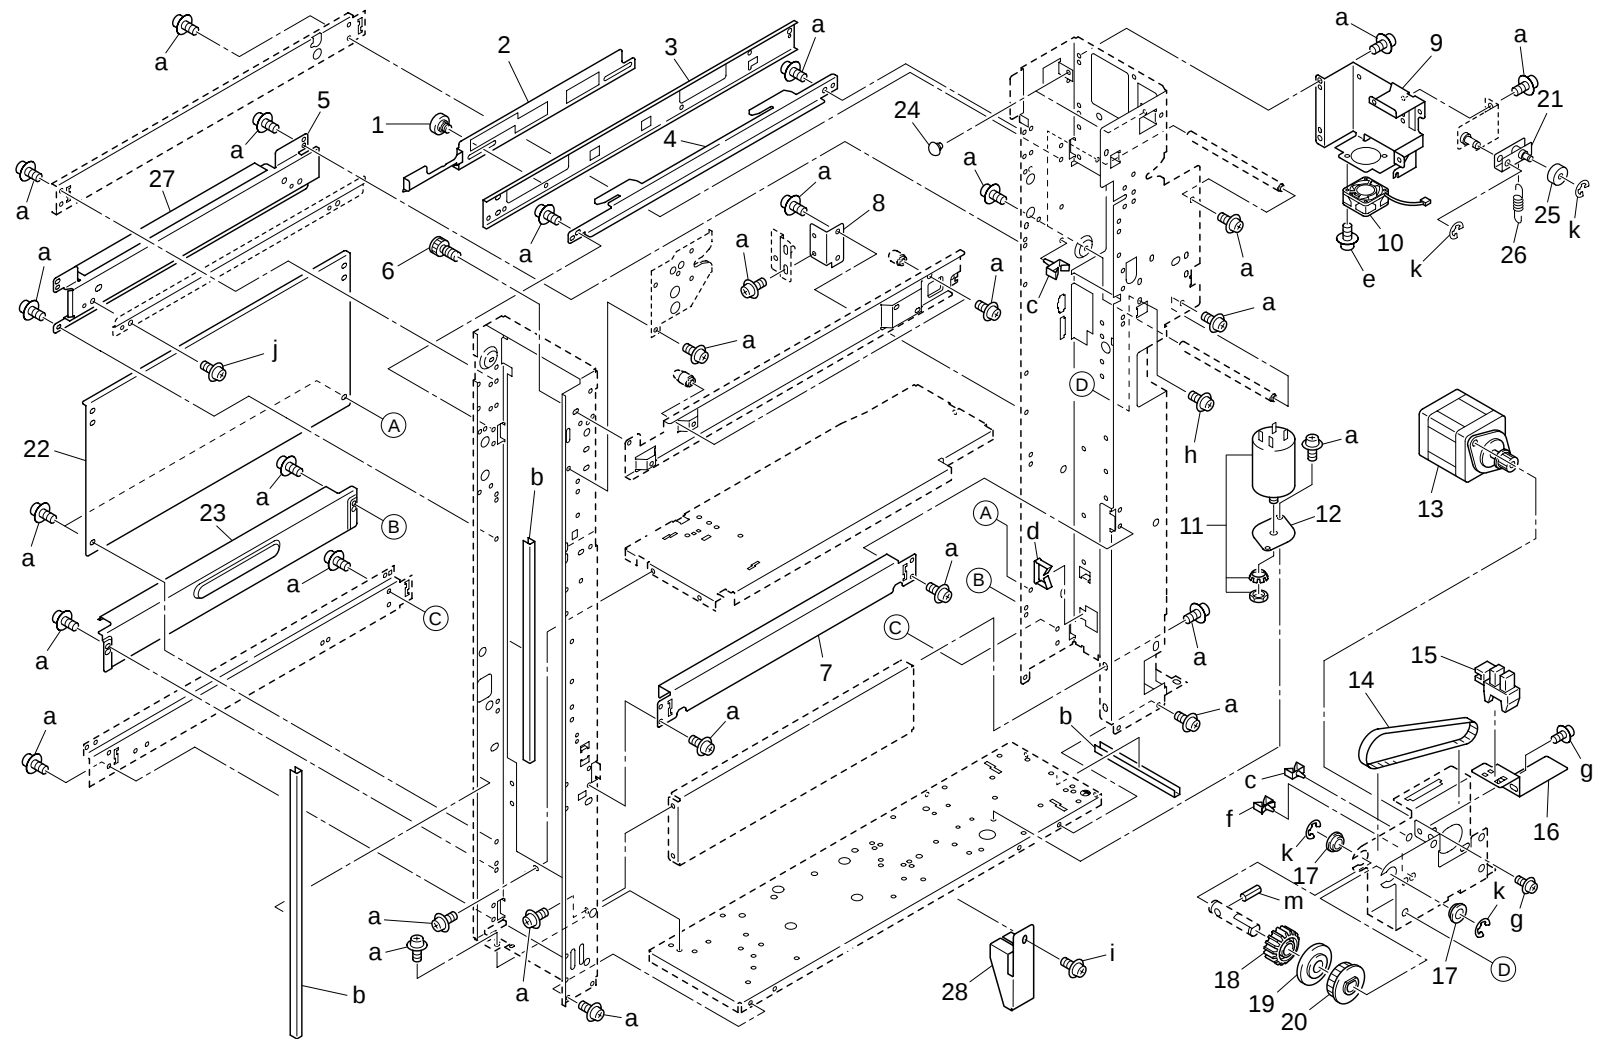


FIG. 1 PZ-108 (1)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5FD02040	PAPER EXIT UP/DOWN SCREW	a-5A807460
2	5F710070	FINISHER MOUNTING STAY/2	b-5A807930
3	5F710060	FINISHER MOUNTING STAY/1	c-5A811610
4	5F710040	FINISHER MOUNTING PLATE	d-5C332320
5	5F710010	EXIT GUIDE PLATE/A	e-5HA50170
6	5F715020	ADF MOUNTING SCREW	f-5A825250
7	5A907211	RF STAY	g-5A810180
8	5F810090	POSITIONING PLATE/1	h-5A810200
9	5F710020	MOUNTING PLATE/1	i-5A807450
10	5HA10440	MAIN BODY FAN MOTOR	j-5A822190
11	5A823260	NOISE FILTER	k-5A807490
12	5F710050	FILTER MOUNTING PLATE	m-5A814720
13	5F715060	FNS MOTOR/2	
14	5F711010	PUNCH ROCKING BELT	
15	5A823760	PHOTO SENSOR	
16	5F710670	MOUNTING PLATE/A	
17	5C330500	PAPER FEED SHAFT HOLDER	
18	5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)	
19	5F715080	DEVELOPING POSITIONING ROLLER	
20	5F710910	PUNCH ROCKING PULLEY	
21	5C511180	LOCK LEVER	
22	5F710120	FINISHER COVER PLATE	
23	5F710080	FINISHER MOUNTING STAY/3	
24	5C511170	STOPPER RUBBER	
25	5C511130	ROLLER	
26	5C410140	LOCK SPRING	
27	5HJ10060	CONVEYANCE GUIDE SHEET/C	
28	5F810150	SUPPORT PART	

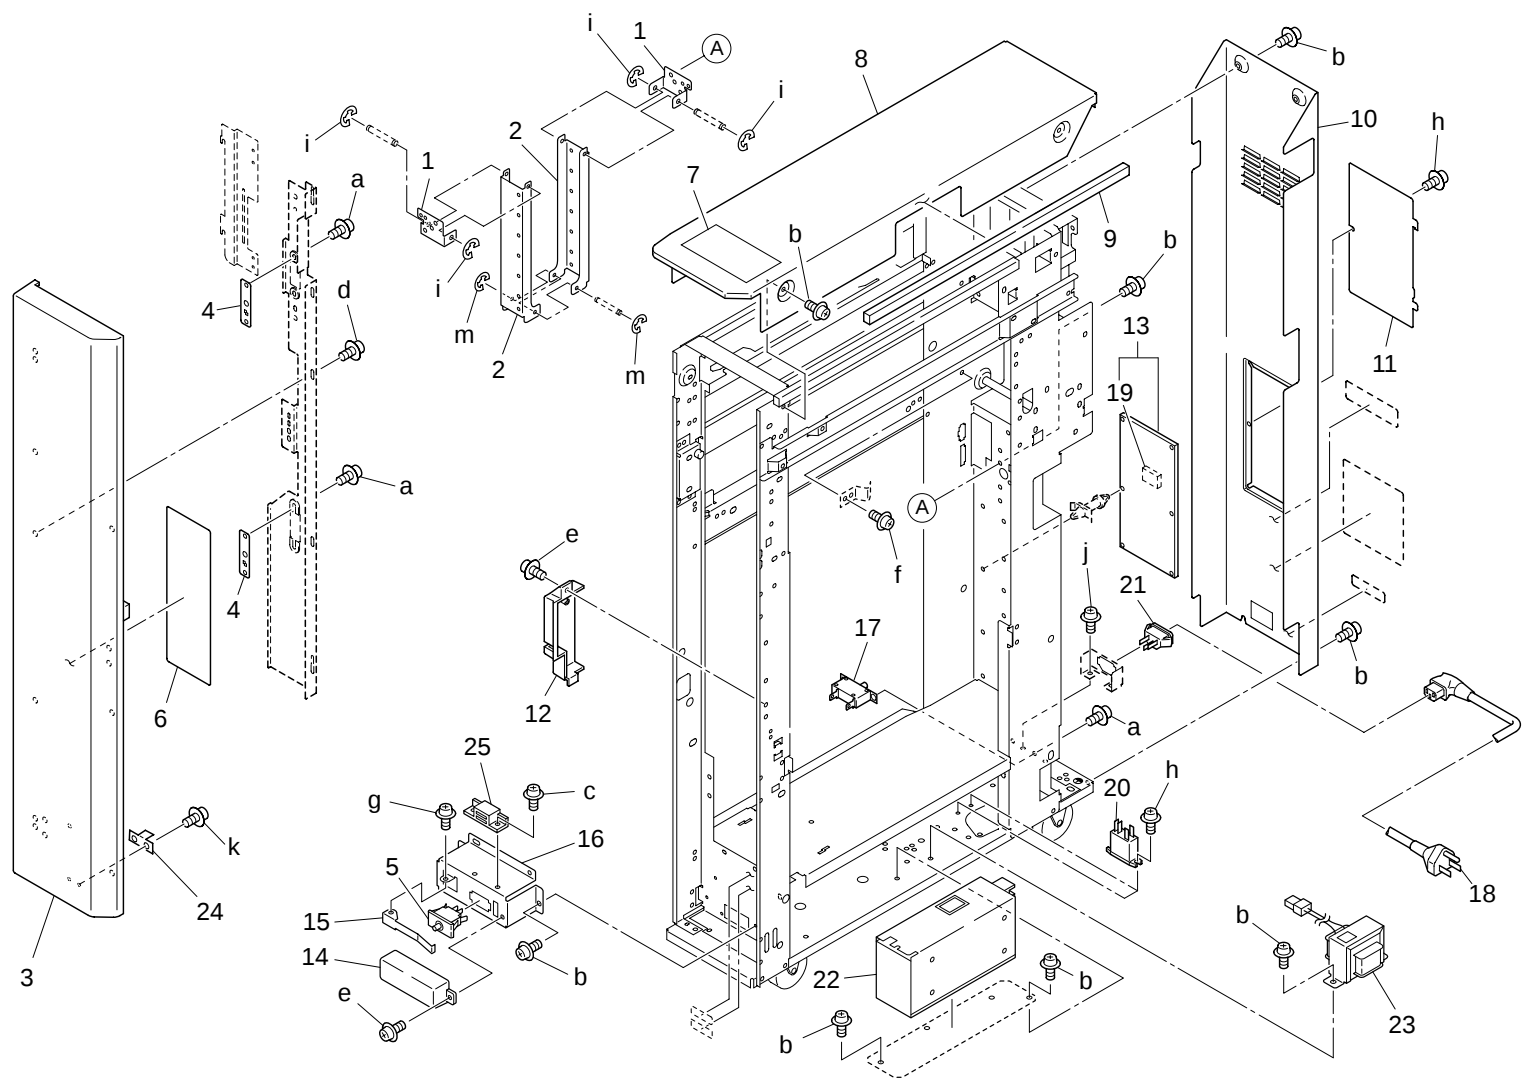


FIG. 2 PZ-108 (2)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810130	WIRING CONNECTING PLATE/A	a-5A811530
2	5F810120	WIRING GUIDE ARM	b-5A808350
3	5HJ10030	FRONT DOOR	c-5A810180
4	5F710180	MOUNTING PLATE/RIGHT	d-5C331740
5	5A877300	DOOR SWITCH	e-5A807450
6	5F810850	JAM PROCESSING LABEL	f-5A810700
7	5HJ10070	PUNCH REGULATING LABEL	g-5A912160
8	5HJ10040	EXTERNAL COVER/UPPER	h-5A808370
9	5F710030	PREVENTING PART/1	i-5A808640
10	5HJ10050	REAR COVER	j-5A807460
11	5A808170	EXTERNAL AUX PANEL	k-5C331740
12	5A907150	COVER	m-5A808630
13	5F810830	CONTROL BOARD	
14	5FD00030	SWITCH COVER	
15	5BA08000	ACTUATOR	
16	5F810140	SWITCH MOUNTING PLATE	
17	5F711030	CIRCUIT BREAKER	
18	5F715130	POWER SOURCE CORD	
19	5F810840	ROM ASSEMBLY	
20	5C317550	POWER SOURCE RELAY	
21	5F715110	POWER SOCKET	
22	5FD01480	DE POWER SOURCE	
23	5A823330	COIL (220V/240V)	
24	5A907720	ACTUATOR	
25	5A808220	MAGNET CATCH	

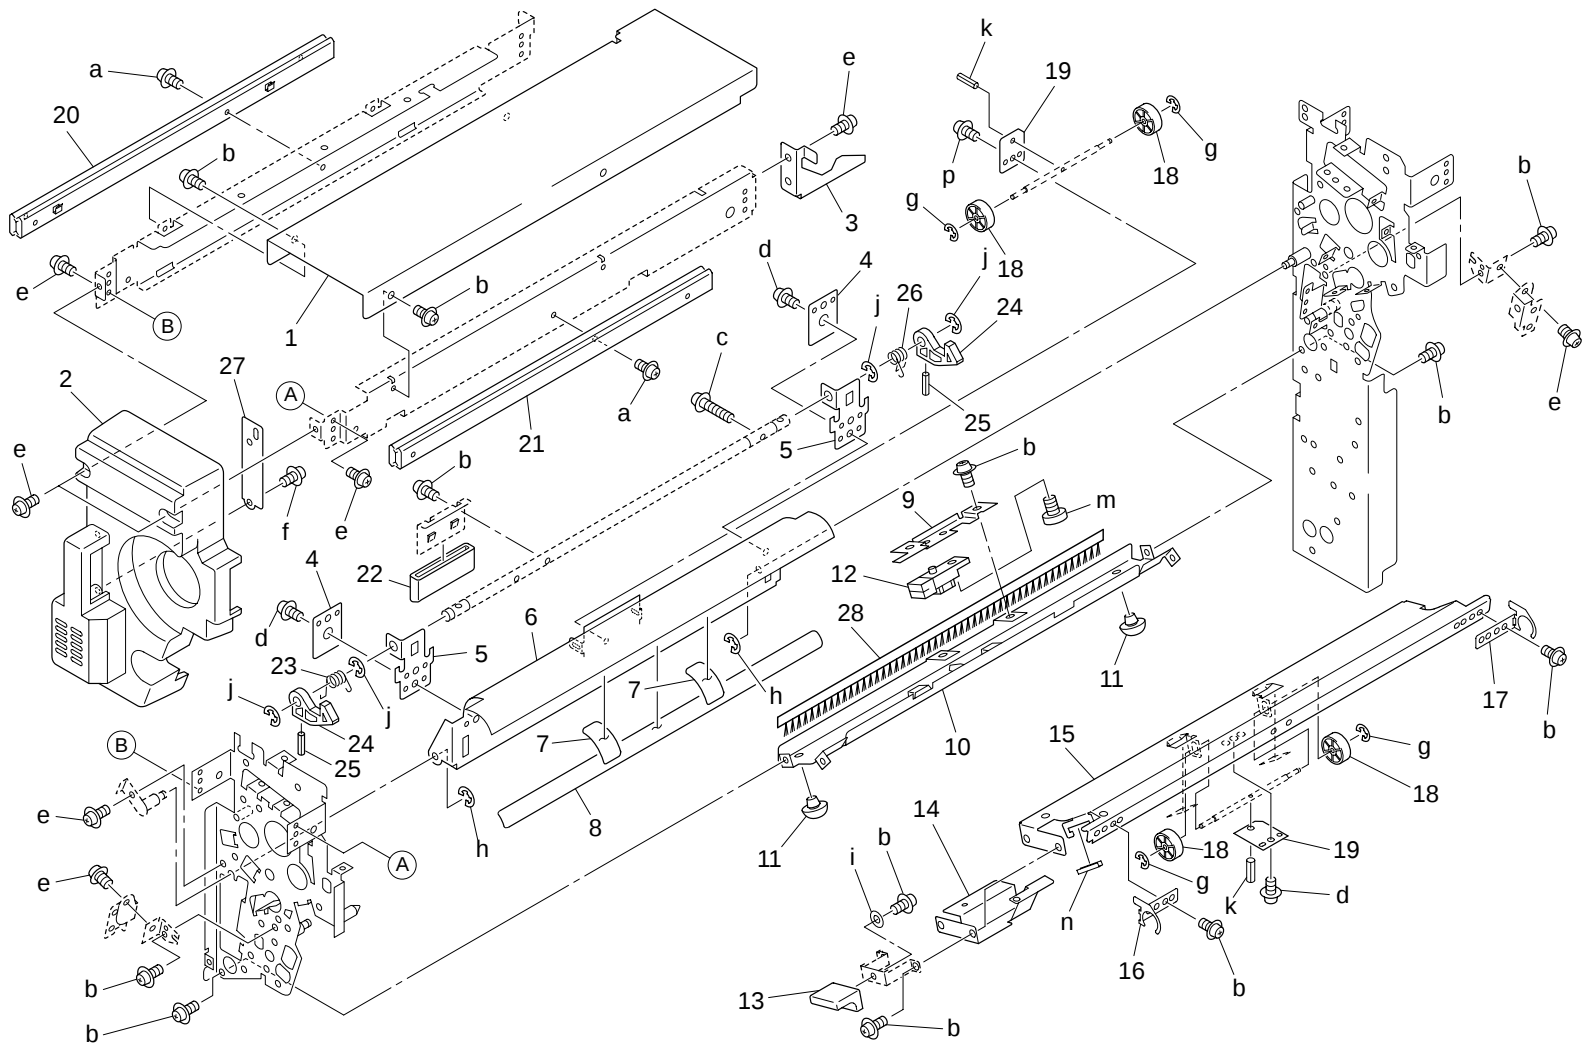


FIG. 3 PZ-108 (3)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810360	CONVEYANCE COVER/UPPER	a-5A807430
2	5F810210	COVER/FRONT	b-5A807450
3	5F810200	LOCKING CAM	c-5HA50070
4	5F810420	HOLDING SPRING	d-5A807440
5	5F810390	FULCRUM PLATE	e-5A807460
6	5F810180	GUIDE PLATE/5	f-5A808380
7	5F810480	GUIDE SHEET/3	g-5A812850
8	5F810370	GUIDE SHEET/2	h-5A808630
9	5F810460	SENSOR MOUNTING PLATE/4	i-5A814200
10	5F810190	EXIT GUIDE PLATE/1	j-5A808640
11	5A908030	STOPPER RUBBER	k-5A912230
12	5F810860	SENSOR/1	m-5A810700
13	5A908450	RELEASE LEVER KNOB	n-5C332340
14	5F710420	REINFORCE PLATE/1	p-5C331590
15	5F710250	EXIT GUIDE PLATE/2	
16	5F710480	HINGE PLATE/FRONT	
17	5F710490	HINGE PLATE/REAR	
18	5A908160	ENTRANCE ROLLER	
19	5F710300	PRESSING SPRING	
20	5F810110	SLIDE RAIL/LEFT	
21	5F810100	SLIDE RAIL/RIGHT	
22	5C330210	LEVER COVER	
23	5F810400	JAM RELEASE SPRING/7	
24	5C314110	BOTTOM PLATE LOCK CLAW	
25	5A811120	PIN (B) (3X12)	
26	5F810410	JAM RELEASE SPRING/8	
27	5HJ10020	COVER PLATE	
28	5F810580	NEUTRALIZING BRUSH	

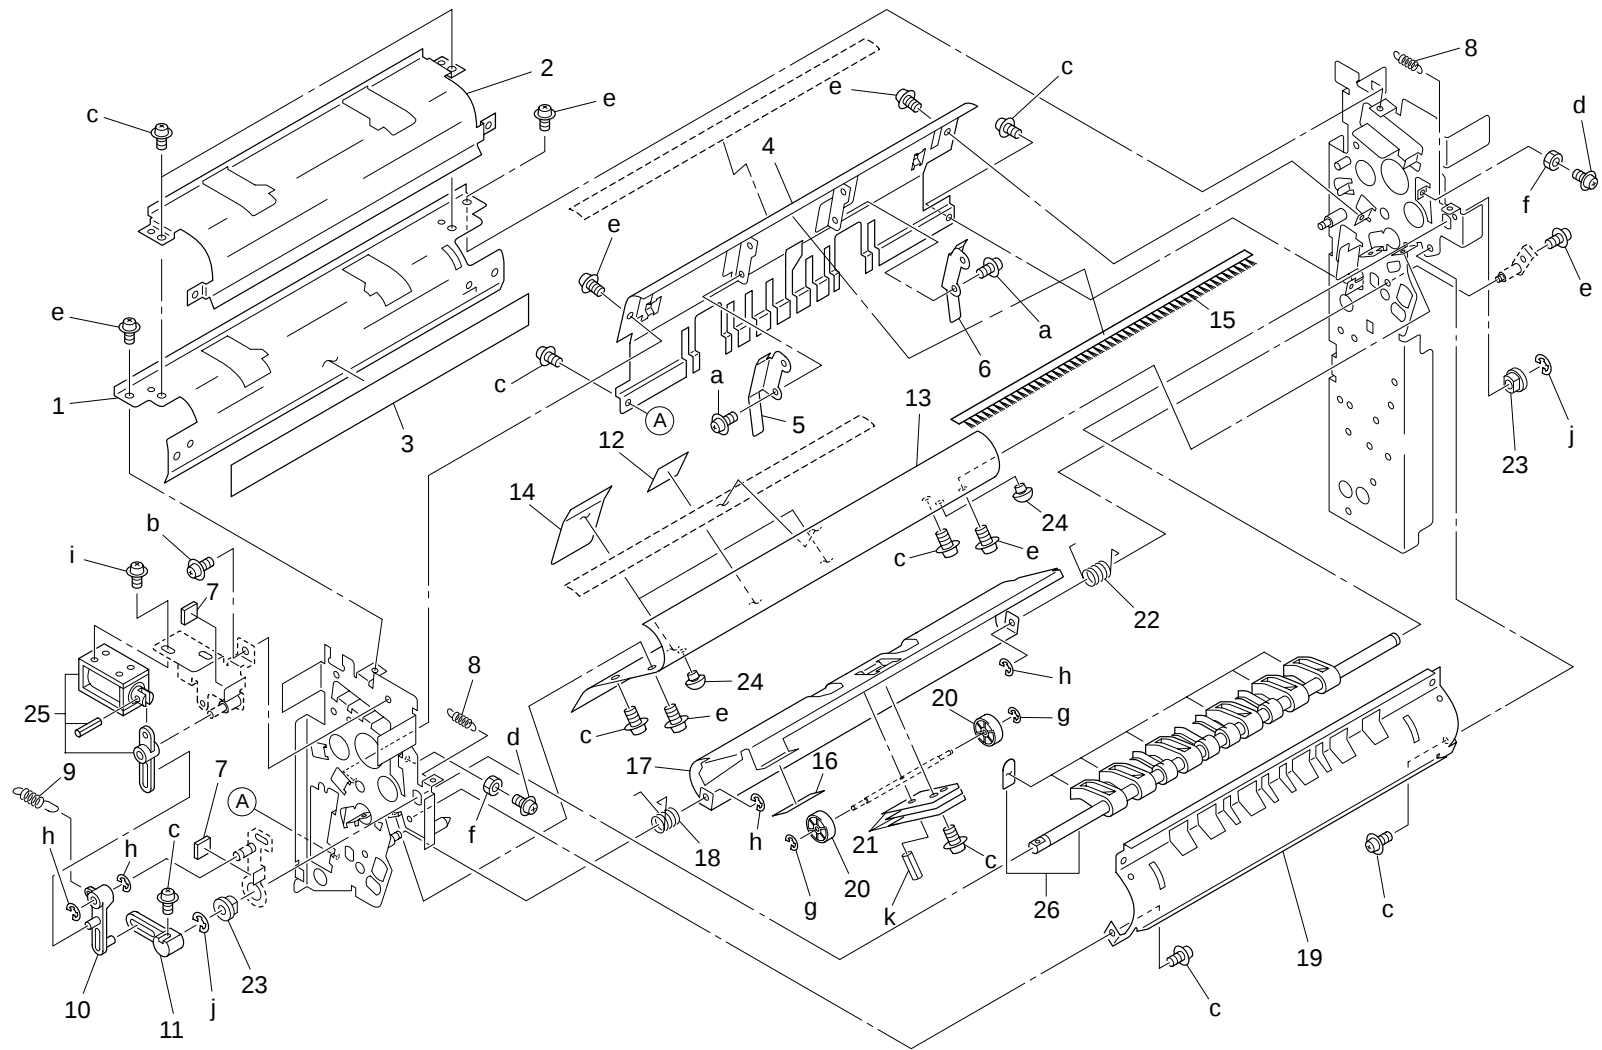


FIG. 4 PZ-108 (4)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810290	GUIDE PLATE/7	a-5A813080
2	5F810280	GUIDE PLATE/6	b-5A811530
3	5F810500	GUIDE SHEET/5	c-5A807450
4	5F810170	GUIDE PLATE/3	d-5A912160
5	5F810550	CONVEYANCE ADJUSTING PLATE/A	e-5A807460
6	5F810570	CONVEYANCE ADJUSTING PLATE/B	f-5A817750
7	5A823820	STICK MATERIAL	g-5A812850
8	5F810510	ADJUSTING SPRING	h-5A808630
9	5F810540	SOLENOID SPRING/2	i-5A912090
10	5F810520	SOLENOID ARM/3	j-5A808640
11	5F810530	SOLENOID ARM/4	k-5A912230
12	5F810560	SENSOR LIGHT SHIELD SEAL	
13	5F710200	GUIDE PLATE/1	
14	5F810490	GUIDE SHEET/4	
15	5F710790	NEUTRALIZING BRUSH/B	
16	5A819520	KNOB LABEL(B)	
17	5F810160	GUIDE PLATE/2	
18	5F810300	JAM RELEASE SPRING/3	
19	5F810430	GUIDE PLATE/A	
20	5A908160	ENTRANCE ROLLER	
21	5F710300	PRESSING SPRING	
22	5F810310	JAM RELEASE SPRING/4	
23	5F715010	SHAFT HOLDER	
24	5A908030	STOPPER RUBBER	
25	5F810590	SOLENOID/1 ASSEMBLY	
26	5F810600	PAPER UP/DOWN LEVER/2 ASSEMBLY	

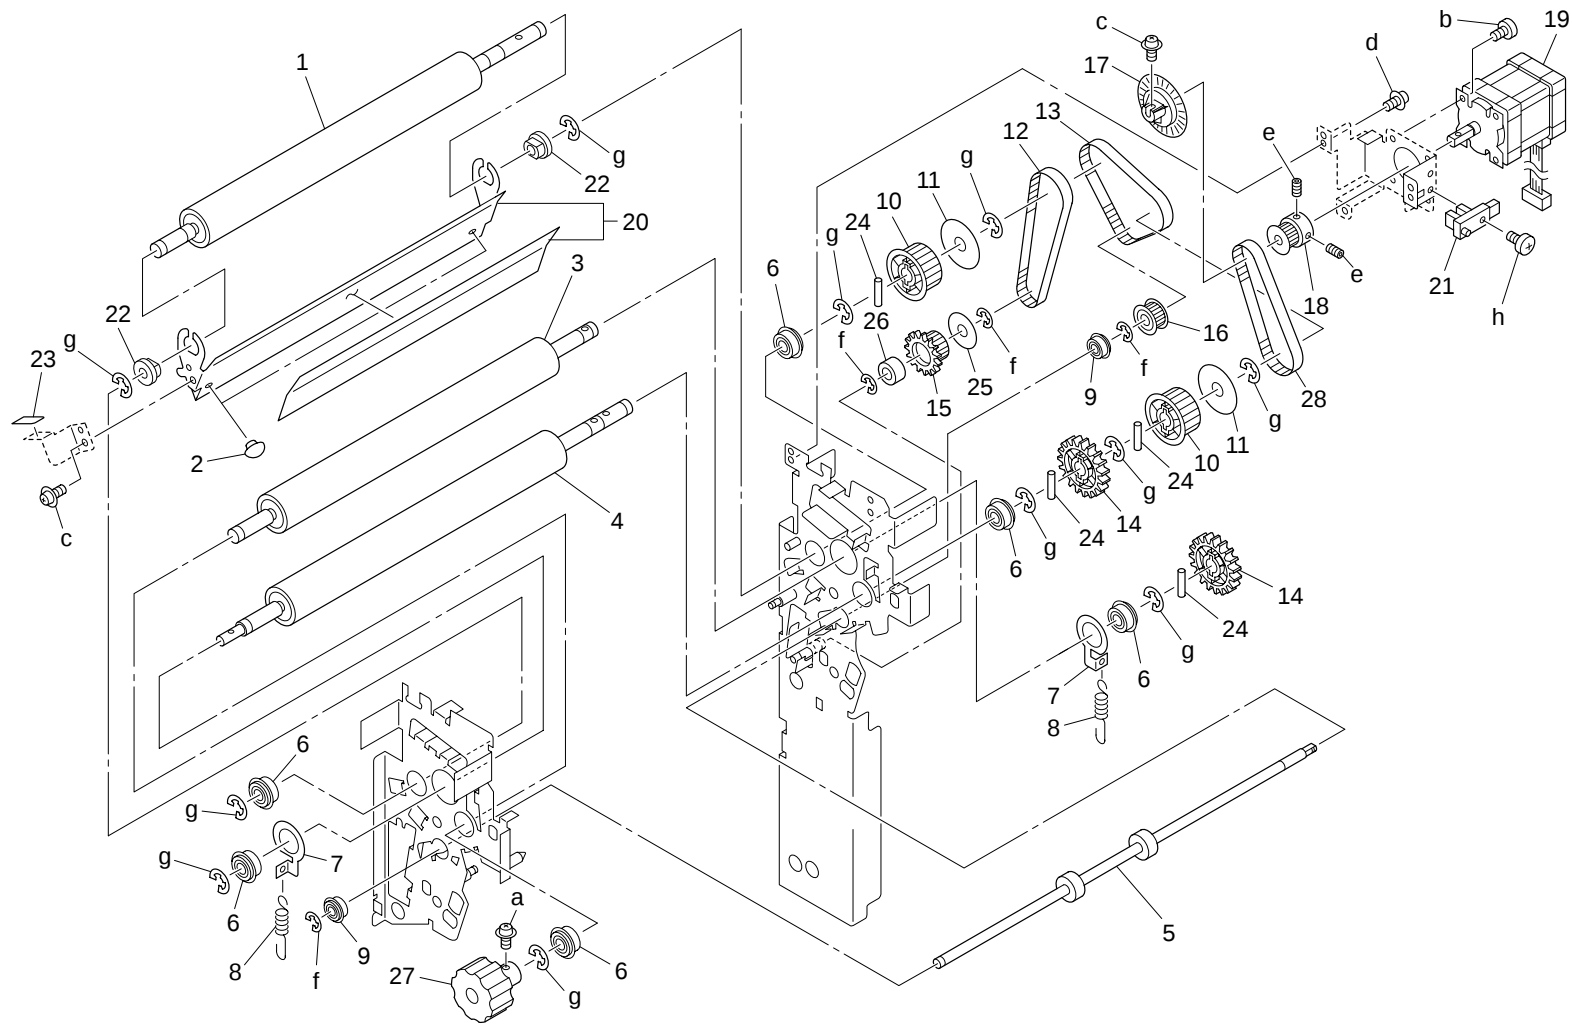


FIG. 5 PZ-108 (5)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810240	FOLDING ROLLER	a-5A813080
2	5A908030	STOPPER RUBBER	b-5A811540
3	5F810230	FOLDING ROLLER/2	c-5A807450
4	5F810220	FOLDING ROLLER/1	d-5A807460
5	5F810470	CONVEYANCE ROLLER/2	e-5A813720
6	5F715170	FIXING ROLLING SHAFT HALDER/LOWER	f-5A807490
7	5F810330	PULLING PLATE	g-5C331840
8	5F810320	PULLING SPRING	h-5A809700
9	5F715100	FIXING SHAFT HOLDER/LOWER	
10	5F810670	FOLDING PULLEY/1	
11	5F810450	FOLDING COLLAR	
12	5F810720	DRIVING BELT/3	
13	5F810710	DRIVING BELT/2	
14	5F810700	FOLDING GEAR/1	
15	5F710950	LDLING PULLEY(Z=24/30)	
16	5A908190	DRIVING PULLEY/A	
17	5F810440	MOTOR DETECTING PLATE	
18	5F710930	MOTOR PULLEY/2(Z=24)	
19	5F810770	DRIVING MOTOR	
20	5F810380	GUIDE PLATE/4 ASSEMBLY	
21	5HA11390	PHOTO SENSOR	
22	5C316130	RESIST SHAFT HOLDER	
23	5F810870	KNOB LABEL(A)	
24	5A910030	PIN C	
25	5A910790	BELT HOLDER	
26	5F810020	DEVELOPING SHAFT HOLDER/S	
27	5C510550	JAM RELEASE KNOB	
28	5F810730	DRIVING BELT/4	

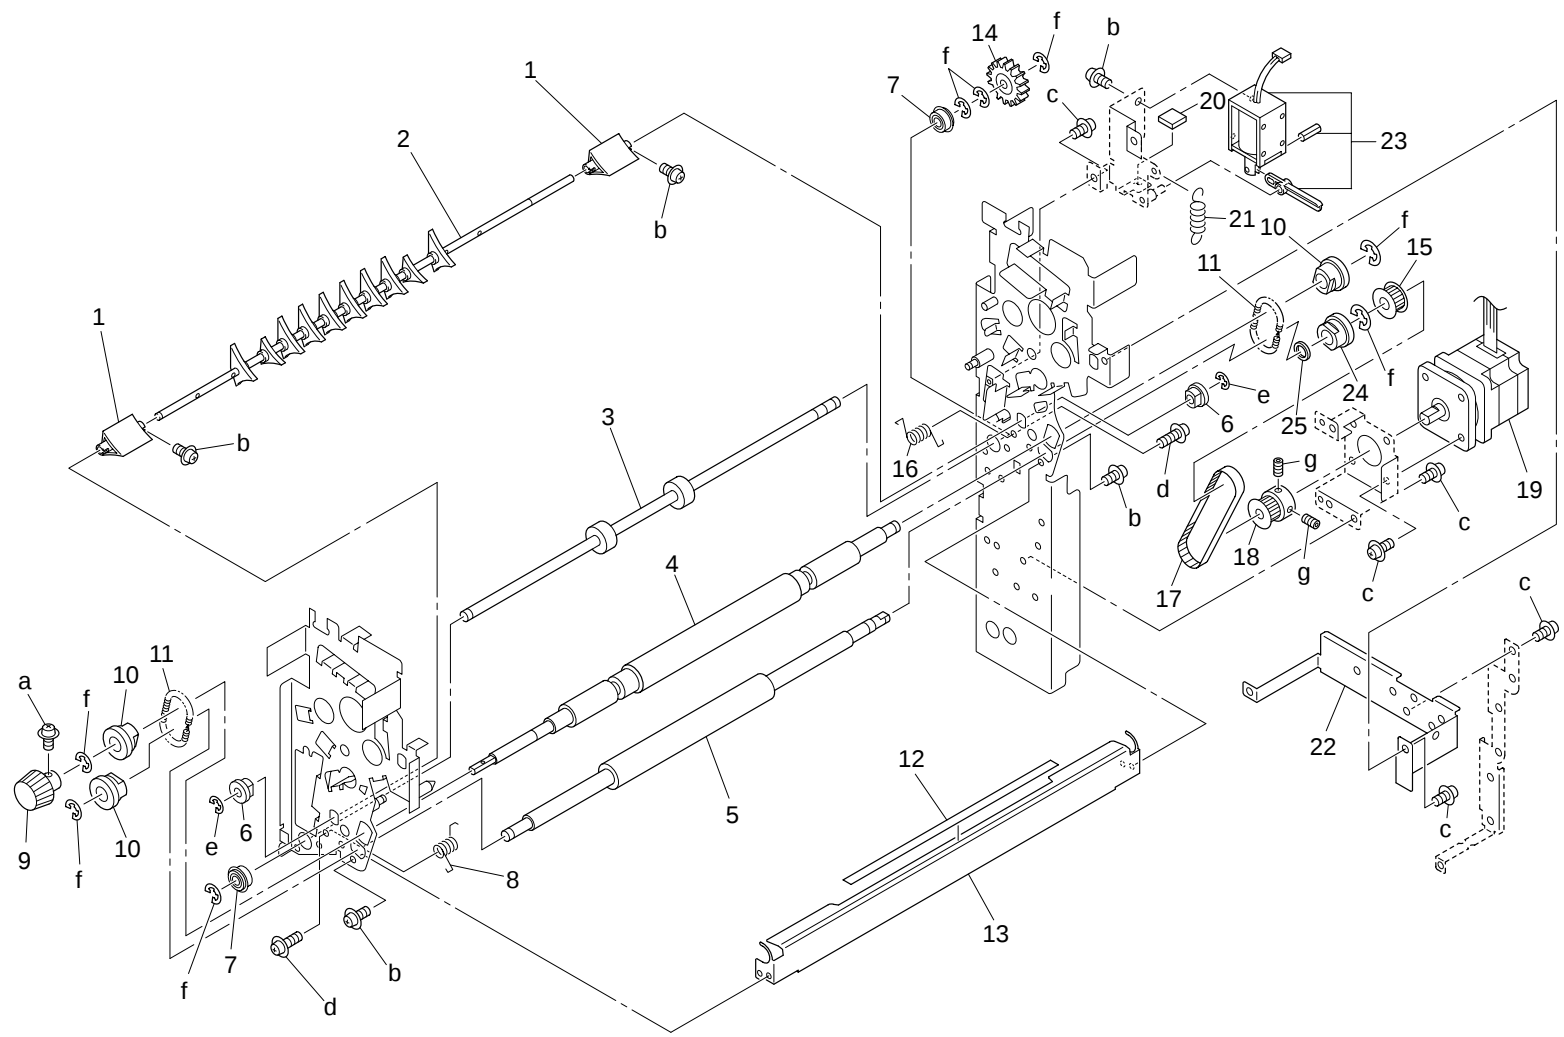


FIG. 6 PZ-108 (6)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F710450	GUIDE PART/1	a-5A813080
2	5F710260	PAPER UP/DOWN LEVER/1	b-5A807450
3	5F810270	CONVEYANCE ROLLER	c-5A807460
4	5F810260	REGISTRATION DRIVING ROLLER	d-5C331640
5	5F810250	REGISTRATION DRIVING ROLLER	e-5A808640
6	5F715010	SHAFT HOLDER	f-5A807490
7	5F715100	FIXING SHAFT HOLDER/LOWER	g-5A813720
8	5F710310	JAM RELEASE SPRING/1	
9	5F715040	ROTARY KNOB	
10	5F715160	SHAFT HOLDER(RESIST)	
11	5F810350	REGISTRATION SPRING	
12	5F710470	GUIDE SHEET	
13	5F710460	RESIST GUIDE PLATE	
14	5F710960	CONVEYANCE GEAR(Z=30)	
15	5A908190	DRIVING PULLEY/A	
16	5F710320	JAM RELEASE SPRING/2	
17	5F810730	DRIVING BELT/4	
18	5F710930	MOTOR PULLEY/2(Z=24)	
19	5A824330	RADF DRIVE MOTOR(1)	
20	5A823820	STICK MATERIAL	
21	5F810340	SOLENOID SPRING/1	
22	5F710370	WIRING GUIDE PLATE/2	
23	5F810590	SOLENOID/1 ASSEMBLY	
24	5HJ10090	REGISTRATION DRIVING BUSH	
25	5HJ10080	REGISTRATION DRIVING SPACER	

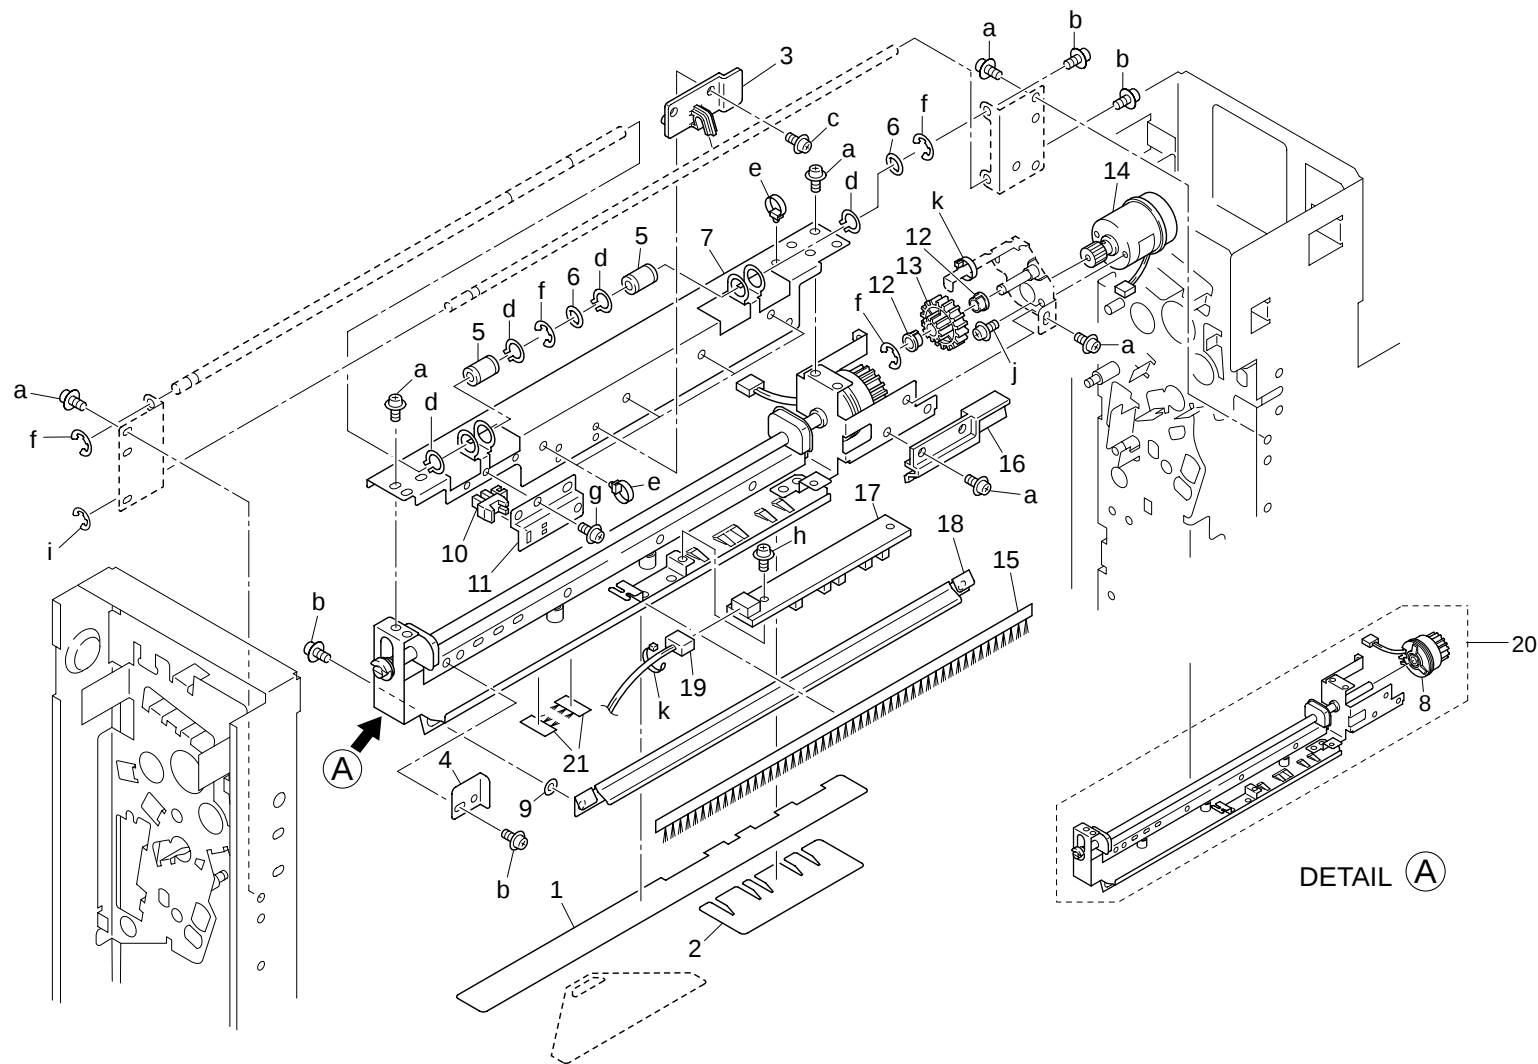


FIG. 7 PZ-108 (7)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F710840	ENTRANCE SHEET	a-5A807460
2	5F710860	ENTRANCE SHEET/B	b-5A807450
3	5F710740	GUIDE PART	c-5A822190
4	5F710760	PUNCH ACTUATOR	d-5HA50310
5	5F710900	SLIDE SHAFT HOLDER	e-5C332350
6	5F710720	PROTECTION RUBBER	f-5A808640
7	5F710570	PUNCH MOUNTING PLATE	g-5A810180
8	5F711150	SPRING CLUTCH	h-5A809690
9	5F710770	SPACER	i-5A808630
10	5A823760	PHOTO SENSOR	j-5A807440
11	5F710680	MOUNTING PLATE/B	k-5A810740
12	5F715030	SHAFT HOLDER	
13	5F710970	PUNCH IDLING GEAR	
14	5F710890	PUNCH DRIVE GEAR ASSEMBLY	
15	5F710690	NEUTRALIZING BRUSH/A	
16	5F710640	PUNCH RACK	
17	5F711130	SIZE DETECT BOARD ASSEMBLY	
18	5F710620	ENTRANCE GUIDE PLATE/B	
19	5F711080	INTERNAL WIRING/1	
20	5F711160	PUNCH UNIT(3 HOLES)	
21	5F710800	NEUTRALIZING BRUSH/C	

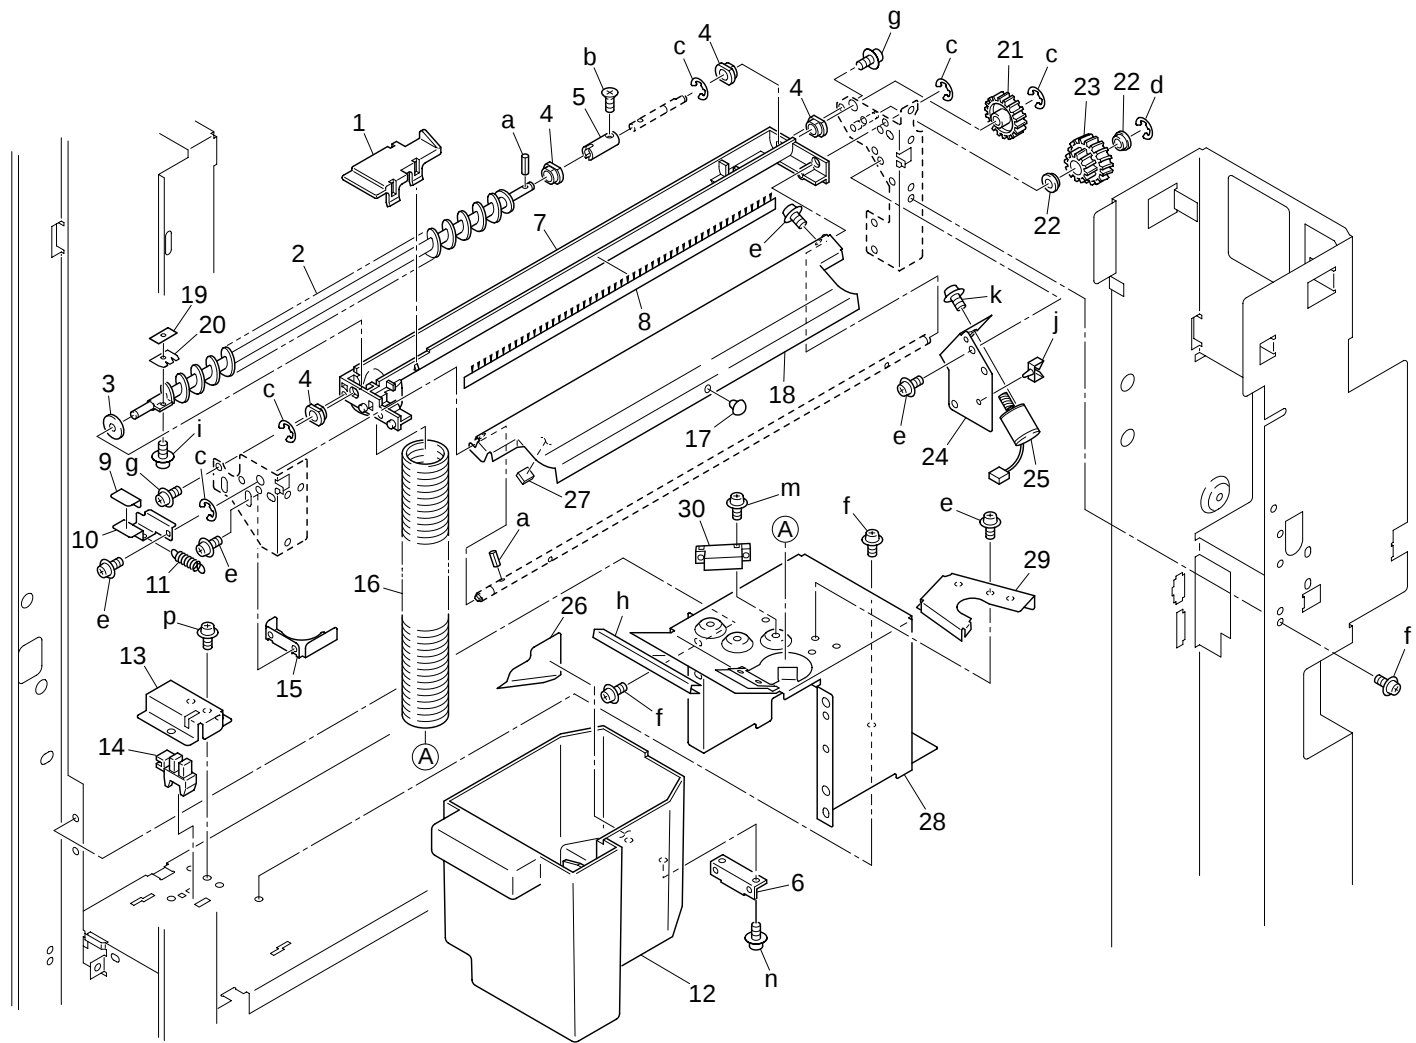


FIG. 8 PZ-108 (8)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F710630	SCREW COVER	a-5HA50330
2	5F710850	CONVEYING SCREW/A	b-5HA50040
3	5F710660	SPACER/A	c-5A808640
4	5F715050	SHAFT HOLDER/A	d-5A808630
5	5F710730	COUPLING	e-5A807450
6	5A813710	MAGNET CATCH	f-5A807460
7	5F710580	SCREW CONVEYANCE CASING	g-5A808380
8	5F710790	NEUTRALIZING BRUSH/B	h-5C332340
9	5A819520	KNOB LABEL(B)	i-5HA50150
10	5F710700	ROTARY LEVER	j-5A811610
11	5F710710	RELEASE SPRING	k-5A912130
12	5F710590	PUNCH COLLECTING BOX	m-5C331460
13	5F710750	COVER/LOWER	n-5A809270
14	5A823760	PHOTO SENSOR	p-5A822190
15	5F710820	DUCT HOLDING PLATE/UPPER	
16	5F710600	PUNCH COLLECTING DUCT	
17	5A908030	STOPPER RUBBER	
18	5F710610	ENTRANCE GUIDE PLATE/A	
19	5F710880	HOLD PLATE	
20	5F710870	BRUSH	
21	5F715150	CONVEYANCE GEAR(Z=33)	
22	5C330130	SEPARATION FULCRUM SHAFT HOLDER	
23	5F710980	SCREW IDLING GEAR(Z=18/24)	
24	5F710830	MOTOR MOUNTING PLATE/C	
25	5A825150	ELEVATION MOTOR ASS'Y	
26	5F710810	PUNCH COLLECTING PLATE	
27	5F810880	STOPPER PART	
28	5F710780	GUIDE COVER	
29	5F710650	COVER/B	
30	5A815350	PHOTO SENSOR(2)	

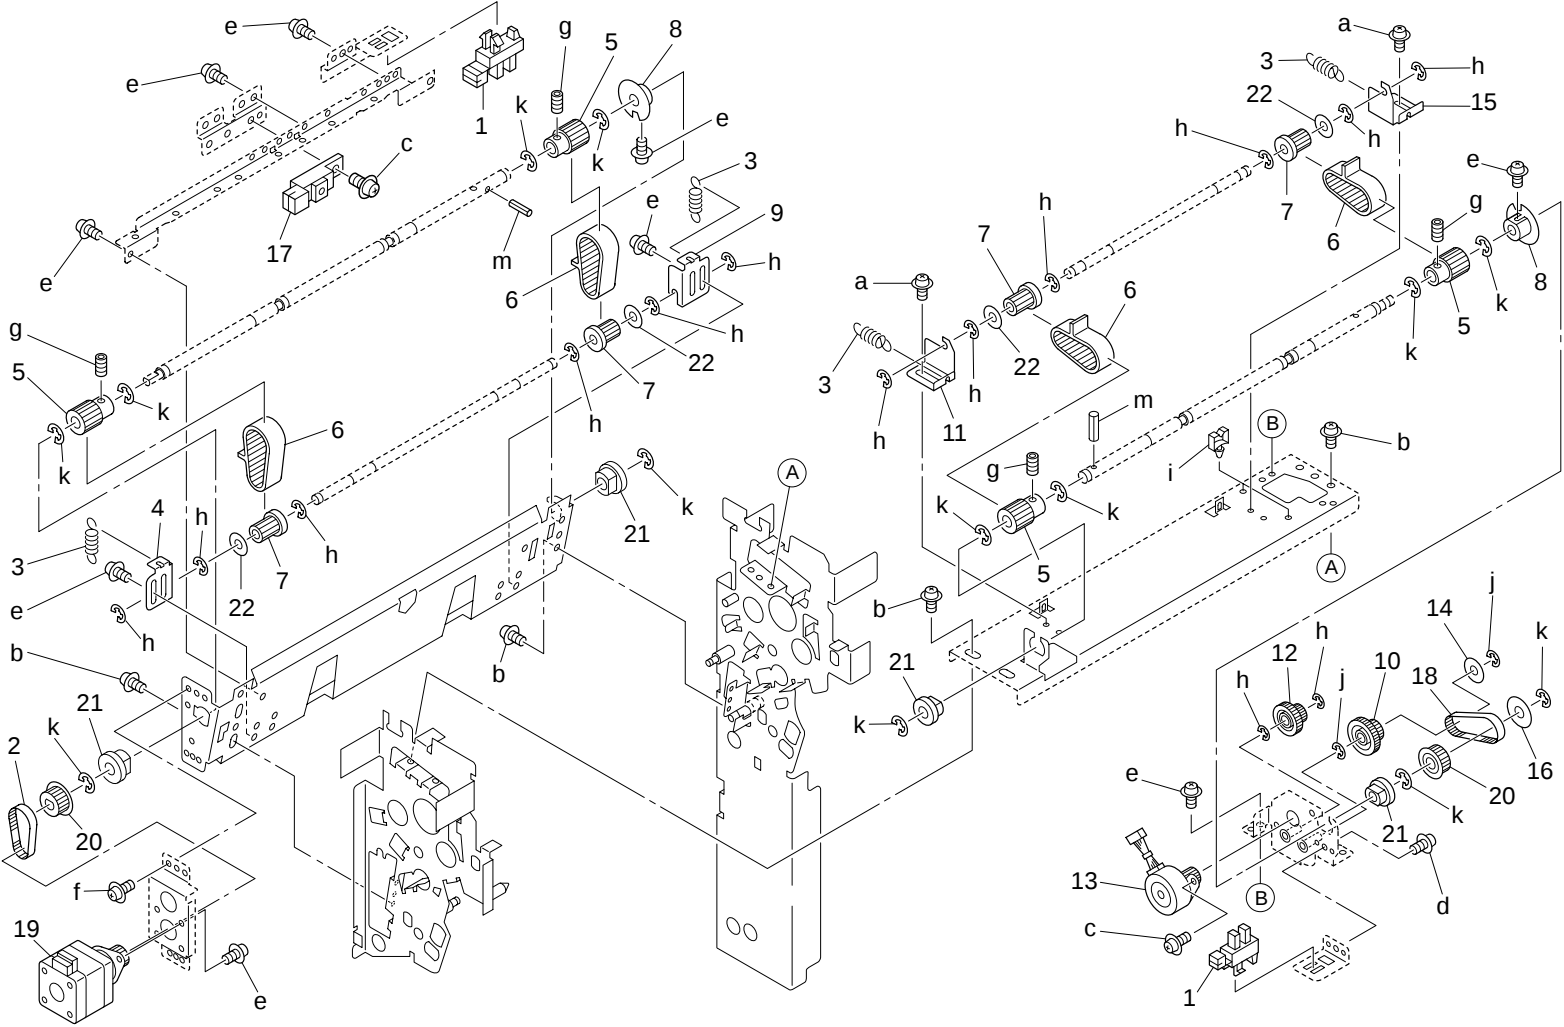


FIG. 9 PZ-108 (9)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5A823760	PHOTO SENSOR	a-5A810180
2	5F810750	DRIVE FOLDING BELT/2	b-5A811530
3	5F810630	TENSION SPRING	c-5A810700
4	5F810660	TENSION PLATE/4	d-5A807440
5	5F810690	FOLDING PULLEY/3	e-5A807450
6	5F810760	FOLDING BELT	f-5A822190
7	5F810680	FOLDING PULLEY/2	g-5A813720
8	5F810640	SENSOR PLATE	h-5A808640
9	5F810650	TENSION PLATE/3	i-5A811610
10	5F810060	REGULATING GEAR(Z=28/55)	j-5A813090
11	5F810610	TENSION PLATE/1	k-5A807490
12	5A911500	STAPLE DRIVING GEAR(Z=51,21)	m-5HA50340
13	5F810070	FNS MOTOR/1	
14	5A910840	BELT HOLDER/B	
15	5F810620	TENSION PLATE/2	
16	5F810030	COLLAR	
17	5F810860	SENSOR/1	
18	5F810740	DRIVE FOLDING BELT/1	
19	5F810050	DRIVING MOTOR/3	
20	5F810040	PAPER EXIT PULLEY/A(Z=32)	
21	5A811470	METAL	
22	5F810010	STOPPER ROLLER/B	

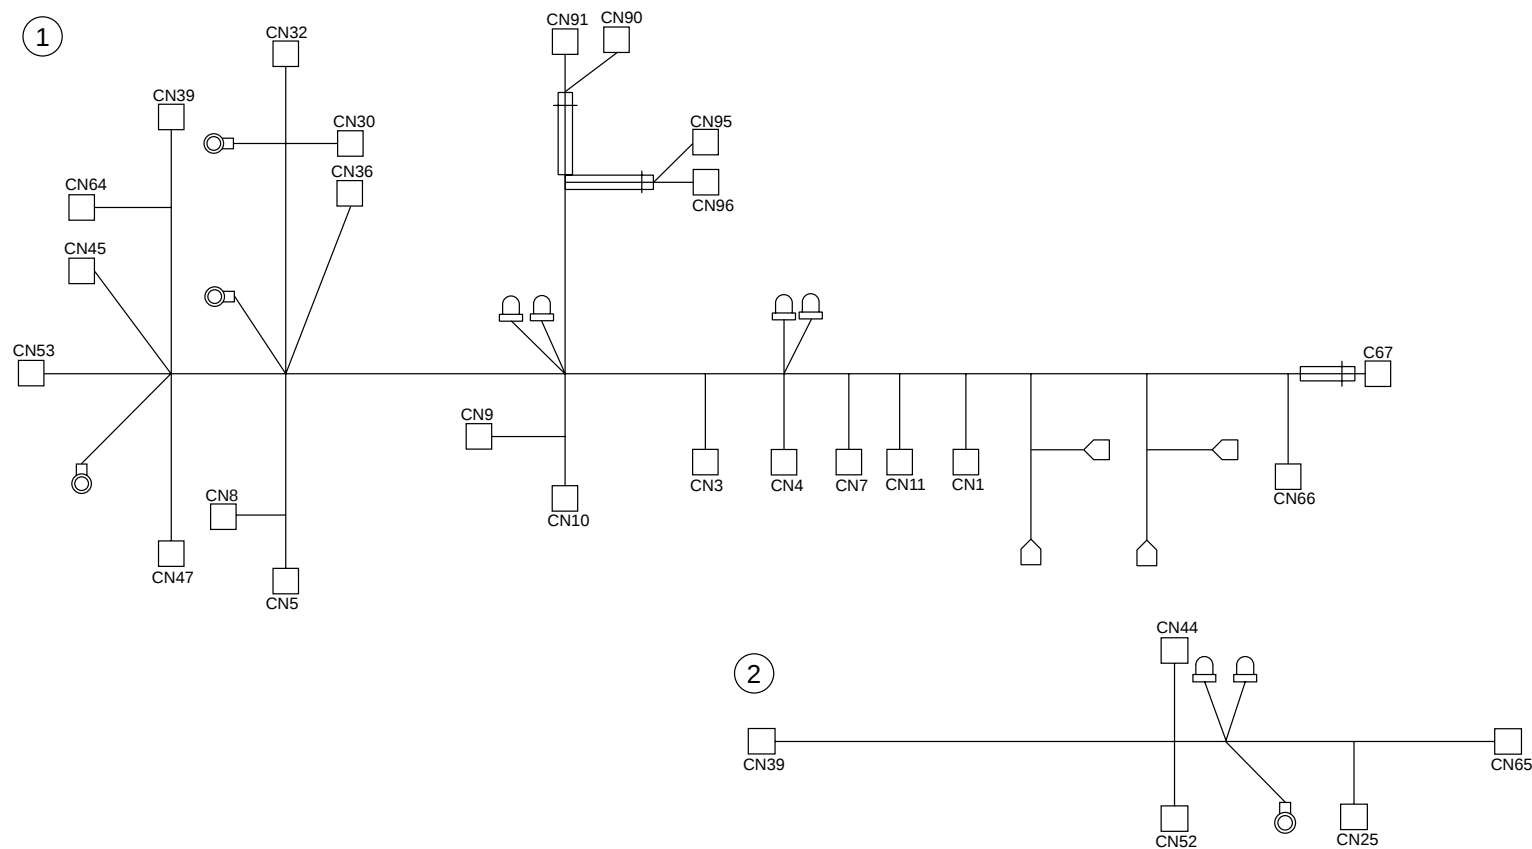


FIG. 10 PZ-108 (10)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810780	MAIN WIRING	
2	5F711080	INTERNAL WIRING/1	

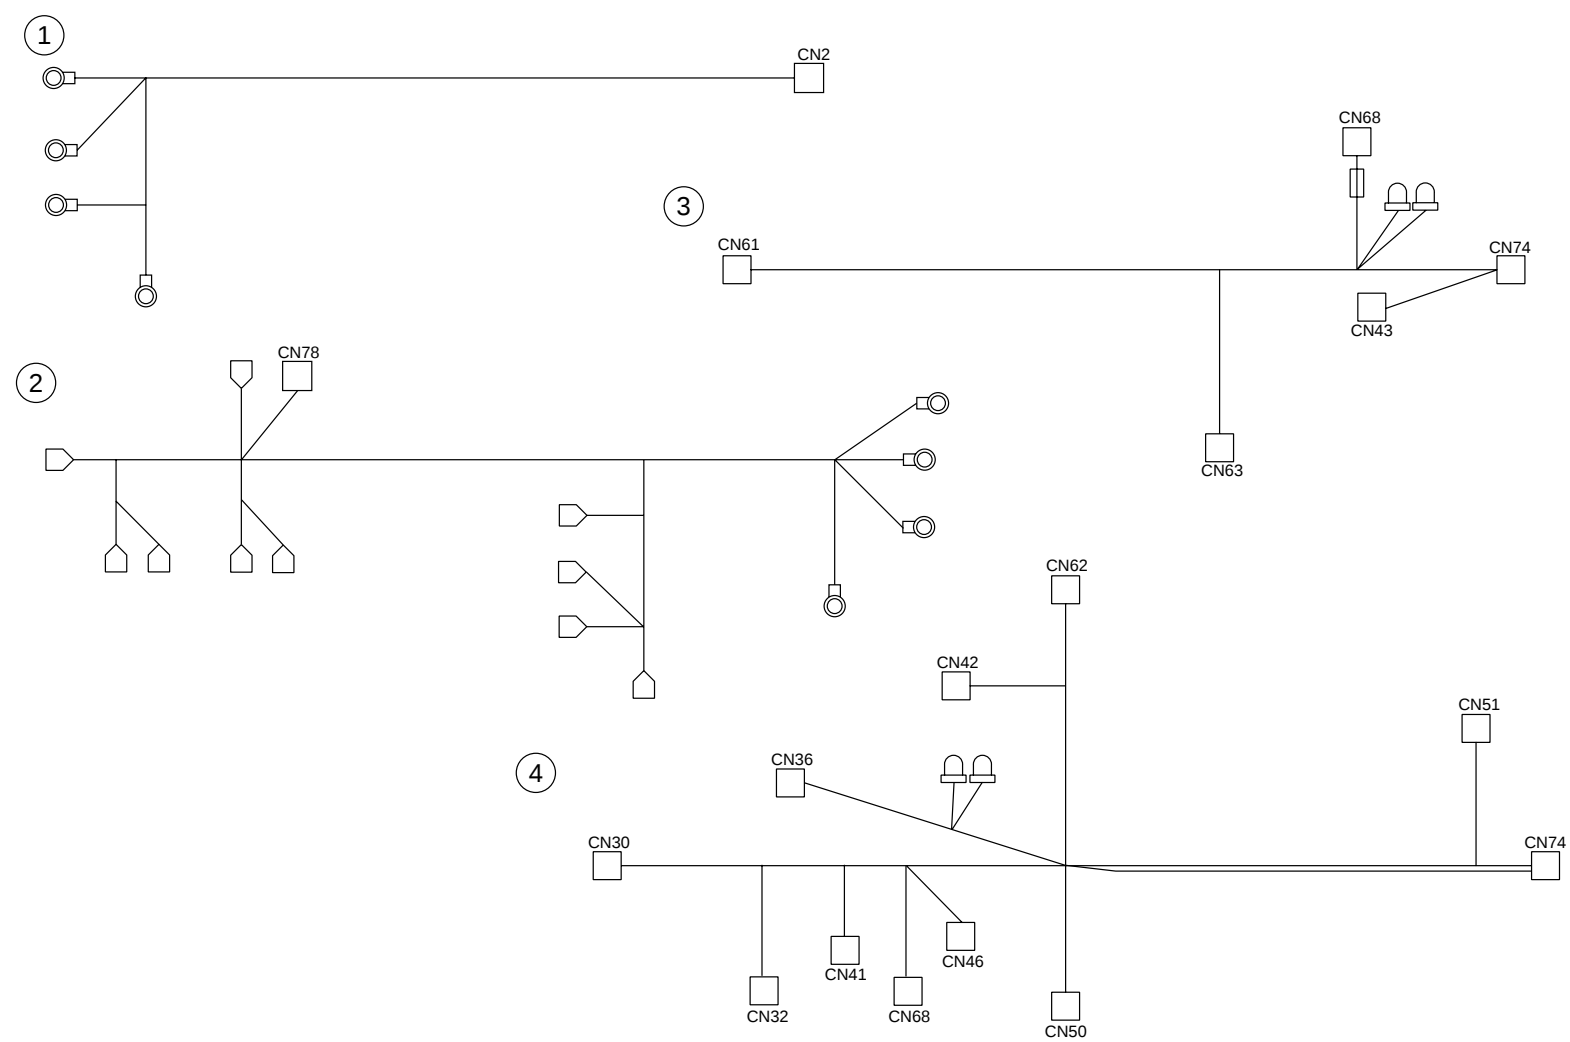


FIG. 11 PZ-108 (11)

5F8

Ref.No.	Parts No.	Description	Standard parts
1	5F810790	DC POWER SOURCE WIRING/1	
2	5F810800	DC POWER SOURCE WIRING/2	
3	5F810820	INTERNAL WIRING/2	
4	5F810810	RELAY WIRING/1	

INDEX

5F8

Parts No.	Description	Fig. No.
5A808170	EXTERNAL AUX PANEL	2
5A808220	MAGNET CATCH	2
5A811120	PIN (B) (3X12)	3
5A811470	METAL	9
5A813710	MAGNET CATCH	8
5A815350	PHOTO SENSOR(2)	8
5A819520	KNOB LABEL(B)	4,8
5A823260	NOISE FILTER	1
5A823330	COIL (220V/240V)	2
5A823760	PHOTO SENSOR	1,7,8,9
5A823820	STICK MATERIAL	4,6
5A824330	RADF DRIVE MOTOR(1)	6
5A825150	ELEVATION MOTOR ASS'Y	8
5A877300	DOOR SWITCH	2
5A907150	COVER	2
5A907211	RF STAY	1
5A907720	ACTUATOR	2
5A908030	STOPPER RUBBER	3,4,5,8
5A908160	ENTRANCE ROLLER	3,4
5A908190	DRIVING PULLEY/A	5,6
5A908450	RELEASE LEVER KNOB	3
5A910030	PIN C	5
5A910790	BELT HOLDER	5
5A910840	BELT HOLDER/B	9
5A911500	STAPLE DRIVING GEAR(Z=51,21)	9
5BA08000	ACTUATOR	2
5C314110	BOTTOM PLATE LOCK CLAW	3
5C316130	RESIST SHAFT HOLDER	5
5C317550	POWER SOURCE RELAY	2
5C330130	SEPARATION FULCRUM SHAFT HOLDER	8
5C330210	LEVER COVER	3
5C330500	PAPER FEED SHAFT HOLDER	1
5C410140	LOCK SPRING	1
5C510550	JAM RELEASE KNOB	5
5C511130	ROLLER	1
5C511170	STOPPER RUBBER	1
5C511180	LOCK LEVER	1
5FD00030	SWITCH COVER	2
5FD01480	DE POWER SOURCE	2
5FD02040	PAPER EXIT UP/DOWN SCREW	1

Parts No.	Description	Fig. No.
5F710010	EXIT GUIDE PLATE/A	1
5F710020	MOUNTING PLATE/1	1
5F710030	PREVENTING PART/1	2
5F710040	FINISHER MOUNTING PLATE	1
5F710050	FILTER MOUNTING PLATE	1
5F710060	FINISHER MOUNTING STAY/1	1
5F710070	FINISHER MOUNTING STAY/2	1
5F710080	FINISHER MOUNTING STAY/3	1
5F710120	FINISHER COVER PLATE	1
5F710180	MOUNTING PLATE/RIGHT	2
5F710200	GUIDE PLATE/1	4
5F710250	EXIT GUIDE PLATE/2	3
5F710260	PAPER UP/DOWN LEVER/1	6
5F710300	PRESSING SPRING	3,4
5F710310	JAM RELEASE SPRING/1	6
5F710320	JAM RELEASE SPRING/2	6
5F710370	WIRING GUIDE PLATE/2	6
5F710420	REINFORCE PLATE/1	3
5F710450	GUIDE PART/1	6
5F710460	RESIST GUIDE PLATE	6
5F710470	GUIDE SHEET	6
5F710480	HINGE PLATE/FRONT	3
5F710490	HINGE PLATE/REAR	3
5F710570	PUNCH MOUNTING PLATE	7
5F710580	SCREW CONVEYANCE CASING	8
5F710590	PUNCH COLLECTING BOX	8
5F710600	PUNCH COLLECTING DUCT	8
5F710610	ENTRANCE GUIDE PLATE/A	8
5F710620	ENTRANCE GUIDE PLATE/B	7
5F710630	SCREW COVER	8
5F710640	PUNCH RACK	7
5F710650	COVER/B	8
5F710660	SPACER/A	8
5F710670	MOUNTING PLATE/A	1
5F710680	MOUNTING PLATE/B	7
5F710690	NEUTRALIZING BRUSH/A	7
5F710700	ROTARY LEVER	8
5F710710	RELEASE SPRING	8
5F710720	PROTECTION RUBBER	7
5F710730	COUPLING	8

Parts No.	Description	Fig. No.
5F710740	GUIDE PART	7
5F710750	COVER/LOWER	8
5F710760	PUNCH ACTUATOR	7
5F710770	SPACER	7
5F710780	GUIDE COVER	8
5F710790	NEUTRALIZING BRUSH/B	4,8
5F710800	NEUTRALIZING BRUSH/C	7
5F710810	PUNCH COLLECTING PLATE	8
5F710820	DUCT HOLDING PLATE/UPPER	8
5F710830	MOTOR MOUNTING PLATE/C	8
5F710840	ENTRANCE SHEET	7
5F710850	CONVEYING SCREW/A	8
5F710860	ENTRANCE SHEET/B	7
5F710870	BRUSH	8
5F710880	HOLD PLATE	8
5F710890	PUNCH DRIVE GEAR ASSEMBLY	7
5F710900	SLIDE SHAFT HOLDER	7
5F710910	PUNCH ROCKING PULLEY	1
5F710930	MOTOR PULLEY/2(Z=24)	5,6
5F710950	LDLING PULLEY(Z=24/30)	5
5F710960	CONVEYANCE GEAR(Z=30)	6
5F710970	PUNCH IDLING GEAR	7
5F710980	SCREW IDLING GEAR(Z=18/24)	8
5F711010	PUNCH ROCKING BELT	1
5F711030	CIRCUIT BREAKER	2
5F711080	INTERNAL WIRING/1	7,10
5F711130	SIZE DETECT BOARD ASSEMBLY	7
5F711150	SPRING CLUTCH	7
5F711160	PUNCH UNIT(3 HOLES)	7
5F715010	SHAFT HOLDER	4,6
5F715020	ADF MOUNTING SCREW	1
5F715030	SHAFT HOLDER	7
5F715040	ROTARY KNOB	6
5F715050	SHAFT HOLDER/A	8
5F715060	FNS MOTOR/2	1
5F715080	DEVELOPING POSITIONING ROLLER	1
5F715090	BY-PASS FEED CONVEYANCE GEAR(Z=21)	1
5F715100	FIXING SHAFT HOLDER/LOWER	5,6
5F715110	POWER SOCKET	2
5F715130	POWER SOURCE CORD	2

Parts No.	Description	Fig. No.
5F715150	CONVEYANCE GEAR(Z=33)	8
5F715160	SHAFT HOLDER(REST)	6
5F715170	FIXING ROLLING SHAFT HALDER/LOWER	5
5F810010	STOPPER ROLLER/B	9
5F810020	DEVELOPING SHAFT HOLDER/S	5
5F810030	COLLAR	9
5F810040	PAPER EXIT PULLEY/A(Z=32)	9
5F810050	DRIVING MOTOR/3	9
5F810060	REGULATING GEAR(Z=28/55)	9
5F810070	FNS MOTOR/1	9
5F810090	POSITIONING PLATE/1	1
5F810100	SLIDE RAIL/RIGHT	3
5F810110	SLIDE RAIL/LEFT	3
5F810120	WIRING GUIDE ARM	2
5F810130	WIRING CONNECTING PLATE/A	2
5F810140	SWITCH MOUNTING PLATE	2
5F810150	SUPPORT PART	1
5F810160	GUIDE PLATE/2	4
5F810170	GUIDE PLATE/3	4
5F810180	GUIDE PLATE/5	3
5F810190	EXIT GUIDE PLATE/1	3
5F810200	LOCKING CAM	3
5F810210	COVER/FRONT	3
5F810220	FOLDING ROLLER/1	5
5F810230	FOLDING ROLLER/2	5
5F810240	FOLDING ROLLER	5
5F810250	REGISTRATION DRIVING ROLLER	6
5F810260	REGISTRATION DRIVING ROLLER	6
5F810270	CONVEYANCE ROLLER	6
5F810280	GUIDE PLATE/6	4
5F810290	GUIDE PLATE/7	4
5F810300	JAM RELEASE SPRING/3	4
5F810310	JAM RELEASE SPRING/4	4
5F810320	PULLING SPRING	5
5F810330	PULLING PLATE	5
5F810340	SOLENOID SPRING/1	6
5F810350	REGISTRATION SPRING	6
5F810360	CONVEYANCE COVER/UPPER	3
5F810370	GUIDE SHEET/2	3
5F810380	GUIDE PLATE/4 ASSEMBLY	5

Parts No.	Description	Fig. No.
5F810390	FULCRUM PLATE	3
5F810400	JAM RELEASE SPRING/7	3
5F810410	JAM RELEASE SPRING/8	3
5F810420	HOLDING SPRING	3
5F810430	GUIDE PLATE/A	4
5F810440	MOTOR DETECTING PLATE	5
5F810450	FOLDING COLLAR	5
5F810460	SENSOR MOUNTING PLATE/4	3
5F810470	CONVEYANCE ROLLER/2	5
5F810480	GUIDE SHEET/3	3
5F810490	GUIDE SHEET/4	4
5F810500	GUIDE SHEET/5	4
5F810510	ADJUSTING SPRING	4
5F810520	SOLENOID ARM/3	4
5F810530	SOLENOID ARM/4	4
5F810540	SOLENOID SPRING/2	4
5F810550	CONVEYANCE ADJUSTING PLATE/A	4
5F810560	SENSOR LIGHT SHIELD SEAL	4
5F810570	CONVEYANCE ADJUSTING PLATE/B	4
5F810580	NEUTRALIZING BRUSH	3
5F810590	SOLENOID/1 ASSEMBLY	4,6
5F810600	PAPER UP/DOWN LEVER/2 ASSEMBLY	4
5F810610	TENSION PLATE/1	9
5F810620	TENSION PLATE/2	9
5F810630	TENSION SPRING	9
5F810640	SENSOR PLATE	9
5F810650	TENSION PLATE/3	9
5F810660	TENSION PLATE/4	9
5F810670	FOLDING PULLEY/1	5
5F810680	FOLDING PULLEY/2	9
5F810690	FOLDING PULLEY/3	9
5F810700	FOLDING GEAR/1	5
5F810710	DRIVING BELT/2	5
5F810720	DRIVING BELT/3	5
5F810730	DRIVING BELT/4	5,6
5F810740	DRIVE FOLDING BELT/1	9
5F810750	DRIVE FOLDING BELT/2	9
5F810760	FOLDING BELT	9
5F810770	DRIVING MOTOR	5
5F810780	MAIN WIRING	10

Parts No.	Description	Fig. No.
5F810790	DC POWER SOURCE WIRING/1	11
5F810800	DC POWER SOURCE WIRING/2	11
5F810810	RELAY WIRING/1	11
5F810820	INTERNAL WIRING/2	11
5F810830	CONTROL BOARD	2
5F810840	ROM ASSEMBLY	2
5F810850	JAM PROCESSING LABEL	2
5F810860	SENSOR/1	3,9
5F810870	KNOB LABEL(A)	5
5F810880	STOPPER PART	8
5HA10440	MAIN BODY FAN MOTOR	1
5HA11390	PHOTO SENSOR	5
5HJ10020	COVER PLATE	3
5HJ10030	FRONT DOOR	2
5HJ10040	EXTERNAL COVER/UPPER	2
5HJ10050	REAR COVER	2
5HJ10060	CONVEYANCE GUIDE SHEET/C	1
5HJ10070	PUNCH REGULATING LABEL	2
5HJ10080	REGISTRATION DRIVING SPACER	6
5HJ10090	REGISTRATION DRIVING BUSH	6

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

1410 Broadway 23rd floor
New York, NY 10018
TEL : (917) 286-5400
FAX : (917) 286-5402

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60191
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
Irvine, California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,
Ontario L5T 1S8, Canada
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
02130 Azcapotzalco
México, D.F. México
TEL : (55) 383-2741
FAX : (55) 383-7804

© 2002 KYOCERA MITA CORPORATION

 **KYOCERA** is a trademark of Kyocera Corporation

mita is a registered trademark of KYOCERA MITA CORPORATION

Printed in U.S.A.