

Table of Contents



Safety Information

Operator Safety	1-1
Conventions Used in this Manual	1-1

Overview

Product Description	2-1
Key Benefits	2-1
Standard Accessories	2-2
Optional Accessories	2-2

Features and Accessories

Probe Head	3-1
AutoColor ID	3-1
Description of Standard and Optional Accessories	3-1
A. Tips	3-2
B. Clips	3-3
C. Leads	3-4
D. Probe Holder	3-5
E. Cartridges	3-6

Operation

Handling the Probe	4-1
Connecting the Probe to the Test Instrument	4-1
Connecting the Probe to the Test Circuit	4-1
Operation with a LeCroy Oscilloscope	4-1
Use with Non-LeCroy Instruments	4-2
Use with Older LeCroy Instruments	4-2

High Frequency Measurements

Input Loading	5-1
Inductive Loading (Lead Length)	5-1
Capacitive Loading	5-3

Care and Maintenance

Cleaning	6-1
Calibration Interval	6-1
Service Strategy	6-1
Returning a Defective Probe	6-1

HFP1000 High Frequency Probe

Replacement Parts	6-2
-------------------------	-----

Performance Verification

Test Equipment Required	7-1
Preliminary Procedure	7-2
Functional Check	7-3
Procedure	7-4
A. Output Zero Voltage	7-4
B. LF Attenuation Accuracy	7-5

Adjustment Procedure

Introduction	8-1
Test Equipment Required	8-1
Preliminary Procedure	8-2
Procedure	8-3
A. Adjust Output Zero	8-3
B. Verify Calibration	8-4

Specifications



Nominal Characteristics	9-1
Warranted Characteristics	9-1
Typical Characteristics	9-1
Environmental Characteristics	9-2
Physical Characteristics	9-2
Compliance and Certifications	9-4
.....	9-4

Appendix A

Performance Verification Test Record	A-1
Equipment Used:	A-1
HFP1000 Test Record	A-2