

# Table of Contents



## Safety Information

Operator Safety .....	1-1
Conventions Used in this Manual .....	1-1

## Overview

Product Description .....	2-1
Key Benefits .....	2-1
Standard Accessories .....	2-2

## Features and Accessories

Probe Head .....	3-1
AutoColor ID .....	3-1
Description of Standard and Optional Accessories .....	3-1
A. Tips .....	3-2
B. Clips .....	3-3
C. Leads .....	3-4
D. Probe Holder .....	3-5
E. Cartridges .....	3-6

## Operation

Handling the Probe .....	4-1
Connecting the Probe to the Test Instrument .....	4-1
Connecting the Probe to the Test Circuit .....	4-1
Operation with a LeCroy Oscilloscope .....	4-1
Offset .....	4-2
Use with Non-LeCroy Instruments .....	4-3
Use with Older LeCroy Instruments .....	4-3

## High Frequency Measurements

Input Loading .....	5-1
Inductive Loading (Lead Length) .....	5-1
Capacitive Loading .....	5-3



## Care and Maintenance

Cleaning .....	6-1
Calibration Interval .....	6-1
Service Strategy .....	6-1
Returning a Defective Probe .....	6-1
Replacement Parts .....	6-2

## Performance Verification

## HFP2500 High Frequency Probe

---

Test Equipment Required .....	7-1
Preliminary Procedure .....	7-2
Functional Check .....	7-3
Procedure .....	7-4
A. Output Zero Voltage .....	7-4
B. Offset Accuracy .....	7-5
C. LF Attenuation Accuracy .....	7-8

### Adjustment Procedure

Introduction .....	8-1
Test Equipment Required .....	8-1
Preliminary Procedure .....	8-2
Procedure .....	8-3
A. Adjust Output Zero Voltage .....	8-3
B. Adjust Offset Range .....	8-4
C. Verify Calibration .....	8-6

### Specifications

Nominal Characteristics .....	9-1
Warranted Characteristics .....	9-1
Typical Characteristics .....	9-1
Environmental Characteristics .....	9-2
Physical Characteristics .....	9-2
Compliance and Certifications .....	9-4



### Appendix A

Performance Verification Test Record .....	A-1
Equipment Used: .....	A-1
HFP2500 Test Record .....	A-2