This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

If you use Pay Pal or wish to use your credit card,

click on the secure site on my main page.



Leica M1 INSTRUCTIONS IN BRIEF

11-45/Engl.



INSTRUCTIONS IN BRIEF

A. Taking the Picture

- 1. Set aperture (11) and shutter speed (3).
- 2. View subject through finder eyepiece (18). Focus lens (12) to correct distance by scale (9).
- 3. Release shutter (1).
- 4. Work transport lever (2) as far as it will go: the M 1 is ready for the next exposure.

NOTE: Always remember to remove the lens cap. Pull out and lock the lens barrel if collapsible.

B. Changing the Lens

- Depress bayonet catch (14), turn lens to the left, and lift out. IMPORTANT: CAMERA OPENING SHOULD BE SHADED.
- Insert new lens: align red locating dots on camera (14) and lens mount (13), place lens in position, and turn to the right until lock engages with a click.

C. Inserting the Film

- 1. Unlock base plate (25) and lift off, swing open camera back, and withdraw take-up spool.
- 2. Push film leader under spring of take-up spool.

- 3. Insert cassette and take-up spool into camera as shown on diagram on camera. The film must lie parallel to the light guide line. Gently work transport lever to engage sprocket correctly in perforation holes of film. Pull out the rewind knob (6), and pull the film taut by carefully turning the knob in the direction shown by the arrow. Then close back, replace base plate, and lock.
- 4. Advance film, release shutter, advance film again, and release shutter a second time. Watch the pulled-out rewind knob during this process, and make sure that it turns when the film is being advanced. Finally push this knob in, and set the film counter (17) to No. 0. The counter now counts every frame.
- 5. Set film indicator (24).

D. Unloading the Exposed Film

- Depress reversing button (15) and keep depressed. Pull out extensible rewind knob (6) and turn in direction of arrow until film is completely rewound in cassette. Wind past a slight resistance as the film leaves the take-up spool.
- 2. Open base plate and remove cassette.

- 19. Electronic flash synchronizing outlet
- 20. Flash bulb synchronizing outlet

18. Finder eyepiece



25. Base plate locking key 24. Film indicator





The LEICE MAY hade a hour to appear to the LEICE MAY hade a hour to appear to 22 and 25 and 2

The **Leica** is a valuable precision instrument. So make a note of the serial number of your camera and lenses, and advise us in case of loss.

This may enable us to trace and restore LEICA equipment to its rightful owner.

Your local photo dealer



ERNST LEITZ GMBH WETZLAR GELMAN

Subsidiary: Ernst Leitz (Canada) Ltd., Midland, Ontaria

List

11-45/Engl.

Printed in Germany

#1/59/LX/B