

This manual is for reference and historical purposes, all rights reserved.

This creation is copyright© by M. Butkus, NJ, U.S.A.

These creations may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

### On-line camera manual library

If you find this manual useful, how about a donation of \$2 to:

M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701

and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or

\$18.00 for a hard to read Xerox copy.

**This will allow me to continue this site, buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**


**If you use Pay Pal, go to my web site**

**[www.orphancameras.com](http://www.orphancameras.com) and choose the secure PayPal donation icon.**

# Mamiya 645

**"ポラロイド"パックフィルム・ホルダー**  
**Polaroid Pack Film Holder**  
**Polaroidkassette**  
**Dos POLAROID**

[HP401]

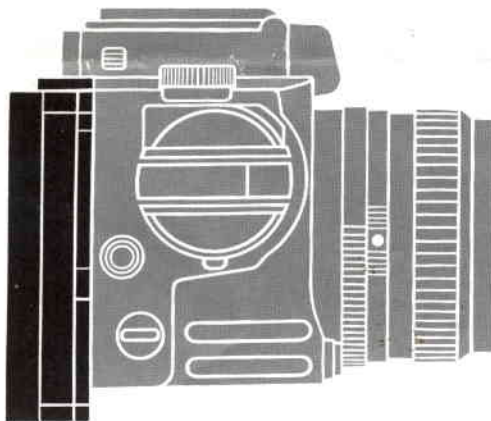

日本語

English

Deutsch

Francais

使用説明書

Instructions

Bedienungsanleitung

Mode d'emploi

## 日本語

ポラロイド パックフィルム	タイプ	感度 ISO	現像時間		備考
			(℃)	(秒)	
白黒フィルム	107	3000	21°	15	
	611	200	18~24°	45	CRT画像記録用
	612	2000			
	663	100	24°	30	プロ向き微粒子
	664	100			コートレス
	667	3000			ポジ・ネガバック式
カラーフィルム	665	80	21°	30	コートレス
	108	80	24°	60	
	668				
	669(シルク)				
	669	80	24°	240	
	691				OHP用

ピールアパートタイプ

## English

Polaroid Pack Films	Film type	Film speed ISO	Development	
			(℃)	Sec.
Black and white	107	3000	21°	15
	611	200	18~24°	45
	612	2000		
	• 663	100	24°	30
	● 664	100		
	667	3000		
Polacolor 2	665	80	21°	30
	108	80	24°	60
	668			
	669 (Silk)			
	669	80	24°	240
	691			

2075

# How to Use "Polaroid" Pack Film Holder

## Loading Film

Always do this in dim light, to avoid fogging the film.

**1. Open the package:** Handle the film bag carefully and only by the edges. Tear the bag along the dotted line and remove the pack. Discard the moisture-absorbing card packed with some film packs. Please be sure to read the film instruction sheet carefully.

Photo **1**




## 2. Unlock and open the holder back:

Push up both ends of the back door latch and open the back all the way. Be sure the dark slide is pushed all the way into the holder before loading film.

Photo **2**

**3. Insert the pack:** Hold the film pack by the edges as shown. Push the closed end of the pack under the light

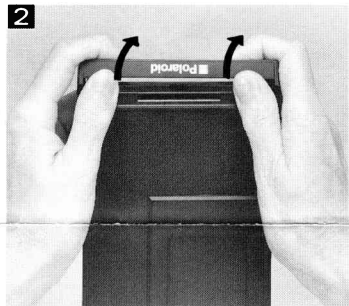

## Verwendung der Polaroidkassette

shield, and then down into the holder.  
Photo **3**

**4. Check the white tabs:** Be sure that they are not caught between the pack and the holder.

**5. Close and lock the back:** Hold the back closed and push down on the center of the latch. The black tab of the safety cover must stick out in front of the latch. Photo **4**



**6. Remove the safety cover:** Grasp the holder as shown, and get a grip on

the black tab, which is the end of the safety cover. Pull the safety cover all the way out of the holder. Pull straight and be careful not to tear it. Photo **5**

**7. Look for the white tab:** When the safety cover is removed, a white tab should stick out of the small slot next to the latch. Photo **6**

If you can see a white tab, the holder is now properly loaded.

Don't pull the white tab at this time. Now you're ready to attach the holder

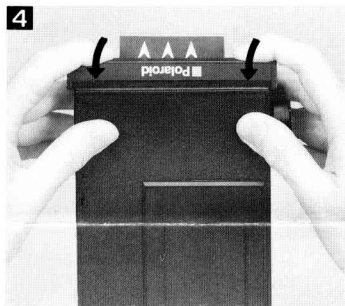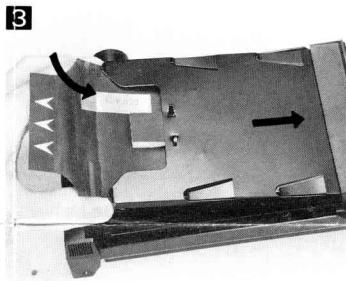

to the camera.

**8.** Set the film speed dial, found at the top of the holder, to the speed of the film in use.



**If no white tab appears when you pull out the safety cover:**

Do the following in dim light.

**1.** Unlock the back of the holder, open it part way and, without disturbing or moving the film pack, push the white tab out into the open.

**2.** Close and lock the back of the holder, making sure that the white tab is outside and in front of the latch. Since the holder is now ready for the first exposure, mount it on the camera back as described below.

- Remove the dark slide.
- Before removing a loaded holder, be sure to replace the dark slide.
- **In this case, however, the camera's double exposure prevention mechanism does not work.**

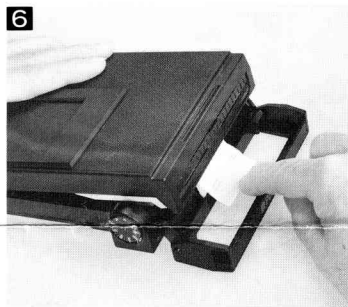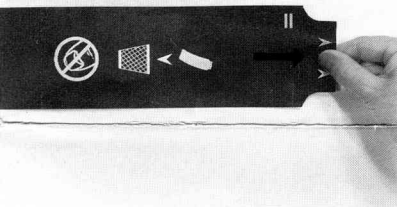

## English Introduction

This Polaroid Pack Film Holder allows you to use various types of film in the Polaroid Pack Film 100 and 600 series.

The actual negative size is 56mm × 41.5mm when the M645 is used. This instruction manual primarily explains the operation of this film holder with the M645.

Eager as you may be get at your new holder and begin making pictures, please take the time to go through this booklet carefully before loading film.



As you read the text and look at the pictures, go through all the motions of using the holder-without film.

Once you get the simple operating routine down pat, load a film pack. We suggest that you start with black and white.

**Read carefully the instruction sheet packed with your film. Those instructions may change from time to time, so it's a good idea to review them occasionally.**

## Name of parts

- ① **Dark Slide**
- ② **Electrical Contact**
- ③ **Lock Release Lever**
- ④ **Attaching Clip**
- ⑤ **Back Cover Latch**
- ⑥ **Film Speed Dial**  
Set this dial to the film speed of film used.
- ⑦ **Dark Slide Storage Slot**

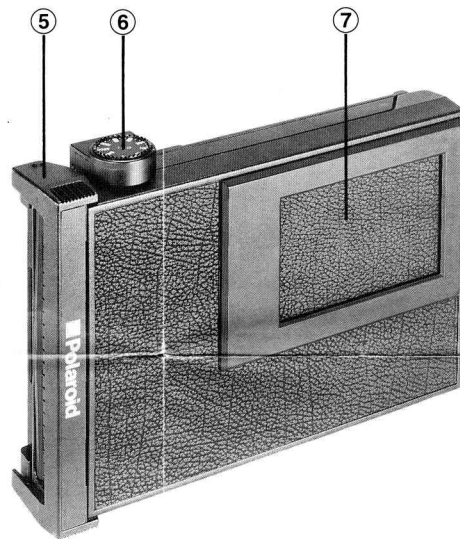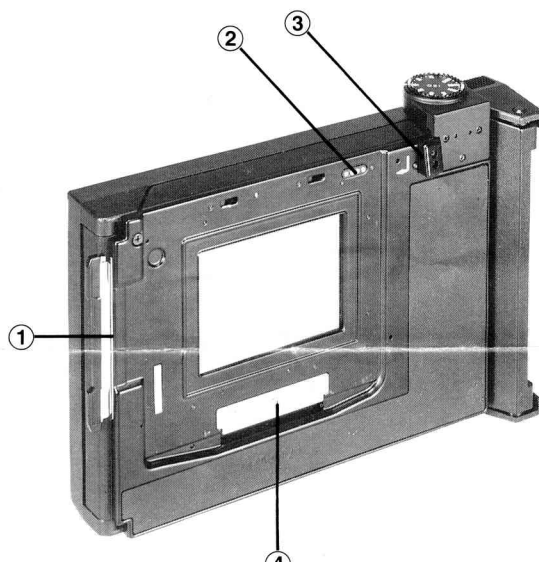

## Attaching and removing Polaroid Pack Film Holder

1. Position the Attaching Clip (A) of the holder properly to the holder mounting Bracket (B) of the body.

Press the upper part of the holder together with the body until clicks.

2. Insert the Dark Slide between both white lines. To remove the holder, push the Lock/Release Lever in the direction of the arrow ↵.

● Be sure to insert the dark slide before removing the holder. If it is not inserted, the safety lock will prevent it from being removed from the body.

● When photographing, store the

dark slide in the dark slide storage slot.

● The Dark Slide can be detached when the Polaroid Pack Film Holder being attached to the camerabody.

● Always pay your attention not to contaminate the electrical contacts on the Roll Film Holder.

Prior to use, always clean the contacts with soft cloth.

● Note that the Polaroid Pack Film Holder is not provided with a double exposure prevention mechanism.

● Be sure to use the Tripod Adapter N (optional) when using the Polaroid

Pack Film Holder, in as much as the M645 camera with Polaroid Land Pack Film Holder may not fit on certain types of tripods.

● The Neck Strap can not be used when the Power Drive Grip and the Polaroid Pack Film Holder are used at the same time.

