

---

## MAIN FEATURES: MAIN UNIT

---

# Indoor/Outdoor Wireless Thermometer with 433MHz Outdoor Sensor

MODEL: MD4528

### USER'S MANUAL

---

## INTRODUCTION

---

Congratulations on your purchase of the Indoor/Outdoor Wireless Thermometer with 433MHz Outdoor Sensor.


The basic package comes with a main unit, which is the temperature and calendar clock station, and a remote unit, the thermo-sensor.

The main unit has a large display for indoor temperature, calendar clock and temperatures collected and transmitted by the remote unit. The main unit can support up to three remote units.

The main unit is capable of keeping track of the maximum and minimum temperature of different sites. No wire installation is required as the operates at 433MHz.

You can set the calendar clock manually.

Other features include four-language display, four-step crescendo dual alarms and interchangeable display modes.

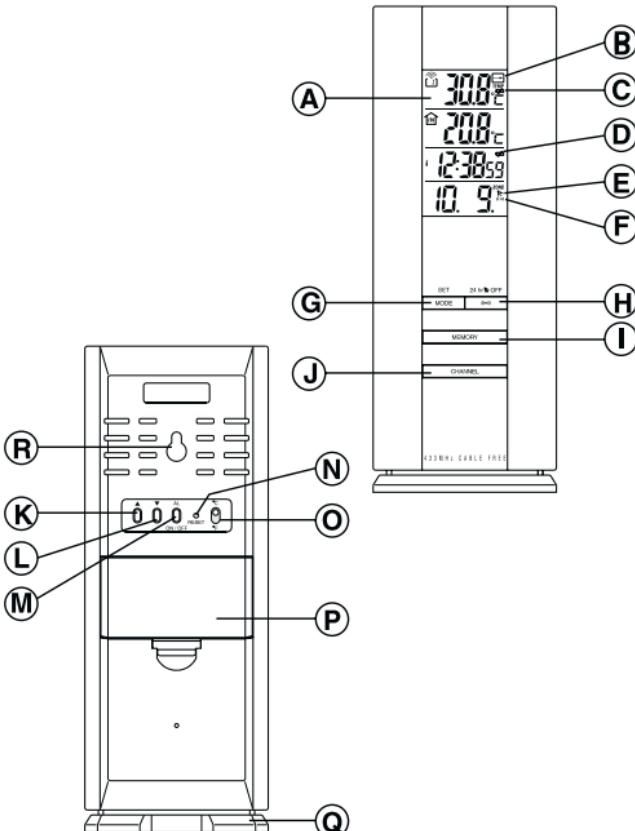

**(A) FOUR-LINE LCD DISPLAY**

Facilitates easy reading of remote and indoor temperatures and calendar clock

**(B) TEMPERATURE TREND INDICATOR**

Indicates the trend of temperature changes

**(C) [!Battery Low] BATTERY-LOW INDICATOR  
(REMOTE SENSOR)**

Activates when the remote-sensor battery is low

**(D) [!Battery Low] BATTERY-LOW INDICATOR**

Activates when the battery is low

**(E) [!Alarm On]/[!Alarm On] ALARM-ON ICONS**

Appears when the alarm is activated

**(F) [(1)]/[(2)] ALARM ICONS**

Appears when the alarm time is displayed

**(G) [SET/MODE]BUTTON**

Toggles between display modes and confirms entry while setting the values for display

**(H) [(.)]BUTTON**

Displays and sets alarm time

**(I) [MEMORY]BUTTON**

Displays maximum / minimum temperature

**(J) [CHANNEL]BUTTON**

Selects remote-sensor channels

**(K) [▲]BUTTON**

Advances the value of a setting

**(L) [▼]BUTTON**

Decreases the value of a setting

**(M) [ALON/OFF]BUTTON**

Enables or disables the alarms

**(N) [RESET]BUTTON**

Returns all settings to default values

**(O) °C/°F SLIDE SWITCH**

Selects between degree Centigrade (°C) and Fahrenheit (°F)

**(P) BATTERY COMPARTMENT**

Accommodates two (2) "AA" size batteries


**(Q) REMOVABLE TABLE STAND**

For standing the main unit on a flat surface

**(R) WALL-MOUNT HOLE**

For mounting the main unit on a wall

## MAIN FEATURES: REMOTE UNIT

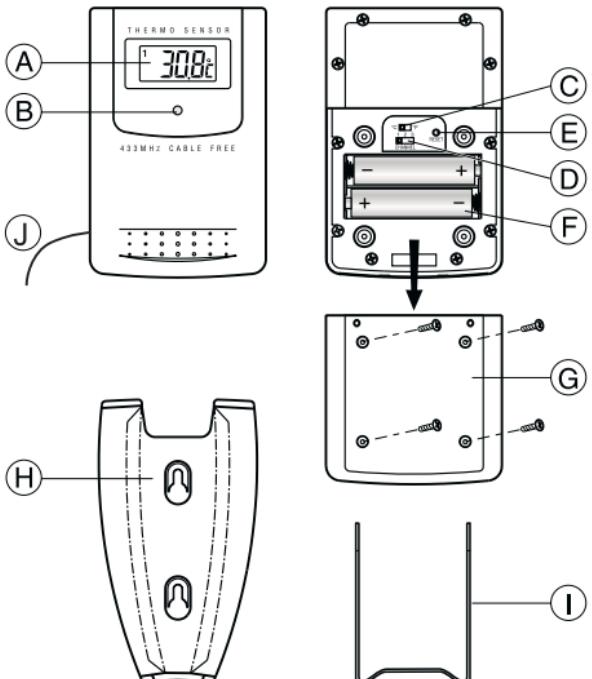

### A LCD DISPLAY

Displays the current temperature monitored by the remote unit

### B LED INDICATOR

Flashes when the remote unit transmits a reading

### C °C/F SLIDE SWITCH

Selects between Centigrade (°C) and Fahrenheit (°F)

### D CHANNEL SLIDE SWITCH

Designates the remote unit Channel 1, Channel 2 or Channel 3

### E RESET BUTTON

Returns all settings to default values

### F BATTERY COMPARTMENT

Accommodates two "AAA" size batteries

### G BATTERY DOOR

### H WALL-MOUNT HOLDER

Supports the remote unit in wall-mounting

### I REMOVABLE TABLE STAND

For standing the remote unit on a flat surface

### J 9 FOOT CABLE

For measuring the outside temperature

## BEFORE YOU BEGIN

For best operation,

1. Assign different channels to different remote units.
2. Insert batteries for remote units before doing so for the main unit.

3. Place the main unit as close as possible next to the remote unit and reset the main unit after installing batteries. This will ensure easier synchronization between the transmission and reception of signals.
4. Position the remote unit and main unit within effective transmission range, which, in usual circumstances, is 65 to 98 feet.

Note that the effective range is vastly affected by the building materials and where the main and remote units are positioned. Try various set-ups for best result.

Though the remote units are weather proof, they should be placed away from direct sunlight, rain or snow.



4. Install 2 alkaline batteries ("AAA" size 1.5V) strictly according to the polarities shown.
5. Replace the battery compartment door and secure its screws. Note that once a channel is assigned to a remote unit, you can only change it by removing the batteries or resetting the unit.

---

## BATTERY INSTALLATION: MAIN UNIT

---

1. Gently lift the tab on the battery compartment door.
2. Install 2 alkaline batteries ("AA" size 1.5V) strictly according to the polarities shown.
3. Replace the battery compartment door.

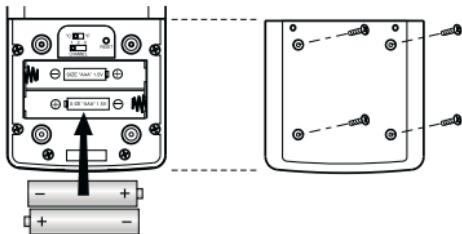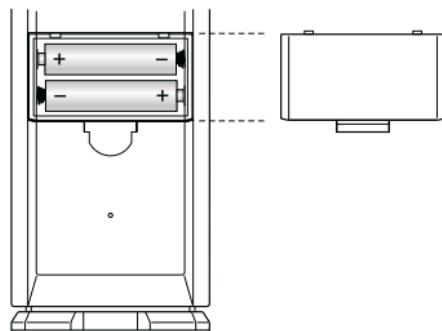

## LOW BATTERY WARNING

When it is time to replace batteries, the low-battery indicator will show up when the corresponding channel is selected. The battery level of the main unit will be shown on the indoor temperature when it is running low.

## HOW TO USE THE TABLE STAND OR WALL MOUNTING

The main unit has a removable table stand, which when installed, can support the unit on a flat surface. Or you can remove the stand and mount the unit on a wall using the recessed screw hole.

As for the remote unit, it comes with a wall-mount holder and a removable stand. Use either to hold the unit in place.

### Main unit

Wall-mount


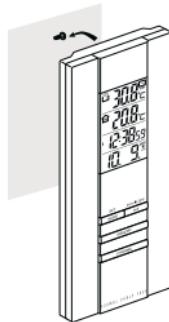


Table Stand

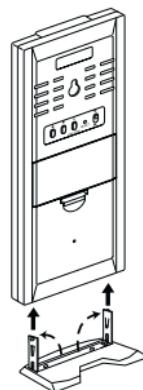

### Remote unit

Wall-mount

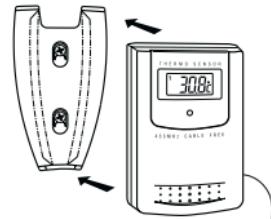


Table Stand



## THE RESET BUTTON

This button is only used when the unit is operating in an unfavorable way or malfunctioning. Use a blunt stylus to hold down the button. All settings will return to their default values.

## GETTING STARTED

Once batteries are in place for the remote units, they will start transmitting temperature readings at 30-second intervals.

The main unit will also start searching for signals for about a minute once batteries are installed. Upon successful reception, the individual channel temperatures will be displayed on the top line and the indoor temperature on the second line. The main unit will automatically update its readings at about 30-second intervals.

If no signals are received, blanks "----" will be displayed and the kinetic wave icon will show "□". Press [**CHANNEL**] and [**MEMORY**] simultaneously to enforce another search for about 30 seconds. This is useful in synchronizing the transmission and reception of the remote and main units.

Repeat this step whenever you find discrepancies between the reading shown on the main unit and that on the corresponding remote unit.

---

## HOW TO CHECK REMOTE AND INDOOR TEMPERATURES

The indoor temperature is shown on the second line of the display.

As for the remote sites or channels, press [**CHANNEL**] to go from one channel to another. The kinetic wave display on the channel number indicates if the reception of that particular channel is in good order.

If no readings are received from one particular channel for more than two minutes, blanks "\_\_\_" will be displayed until further readings are successfully searched. Check if the remote unit is sound and secure. You can wait for a moment or press [**CHANNEL**] and [**MEMORY**] simultaneously to enforce an immediate search. Of course no reading will be shown if no remote unit is assigned to that channel.

If the temperature goes above or below the temperature measuring range of the main unit or the remote unit (stated in specification), the display will show "**HHH**" or "**LLL**".

---

## TEMPERATURE TREND

The temperature trend indicator on the screen shows the trend of samplings collected at that particular remote site. Three trends, rising, steady and falling, will be shown.

Arrow indicator			
Temperature Trend	Rising	Steady	Falling

---

## MAXIMUM AND MINIMUM TEMPERATURES

The maximum and minimum recorded indoor temperatures and those of outdoor channels will be automatically stored in memory. To display them:

1. Select the channel to be checked.
2. Press [**MEMORY**] once to display the maximum temperature and again the minimum temperature. The respective indicators, **MAX** or **MIN** will be displayed.

To clear the memory, hold down [**MEMORY**] for two seconds. The maximum and minimum temperatures will be erased. If you press [**MEMORY**] now, the maximum and minimum temperatures will have the same values as the current ones until different readings are recorded.

---

## NOTE ON °C AND °F

---

The unit of temperature display is selected with the °C/°F slide switch. Select °C for Centigrade or °F for Fahrenheit.

Note that the remote temperature display on the main unit is dominated by the selection on the °C/F slide switch of the main unit. Whatever the display units of the remote sensors are, they will be automatically converted to the chosen one of the main unit.

---

## HOW TO READ THE KINETIC WAVE DISPLAY

---

The kinetic wave display shows the signal receiving status of the main unit. There are three possible forms:

The unit is in searching mode.	
Temperature readings are securely registered.	
No signals.	

---

## DISCONNECTED SIGNALS

---

If without obvious reasons the display for a particular channel goes blank, press [CHANNEL] and [MEMORY] to enforce an immediate search. If that fails, check:

1. The remote unit of that channel is still in place.
2. The batteries of both the remote unit and main unit. Replace as necessary.

*Note: When the temperature falls below freezing point, the batteries of outdoor units will freeze, lowering their voltage supply and the effective range.*

3. The transmission is within range and path is clear of obstacles and interference. Shorten the distance when necessary.

---

## TRANSMISSION COLLISION

---

Signals from other household devices, such as door bells, home security systems and entry controls, may interfere with those of this product and cause temporary reception failure. This is normal and does not affect the general performance of the product. The transmission and reception of temperature readings will resume once the interference recedes.

## CALENDAR CLOCK DISPLAY MODES

The main unit supports four display modes in the sequence of:

MODE 1.	Local Time	
	Hour, Minute, Second	
MODE 2.	Local Time	
	Day, Month	
MODE 3.	Local Time / Second Time-Zone Time	
	(local time) Hour, Minute, Weekday	
MODE 4.	(Second time-zone time) Hour, Minute	
	Day, Month	
Second Time-Zone		
	Hour, Minute, Weekday	
	Day, Month	

Each press on the [SET/MODE] button will toggle the display in the above order.

**Note:** The bottom line of the display will be replaced by the alarm time if the [(•)] button is pressed.

---

## HOW TO SET AND ARM THE ALARMS

---

The main unit has two alarms, ALARM 1 and ALARM 2. They can be invoked together or independently.

To set an alarm:

1. Press [(□)] once to select ALARM 1 or again to select ALARM 2. The last selected time of the alarm will be displayed. If you have never set the alarm before, the time will be displayed as 0:00.
2. Press [(□)] for three seconds. The hour digits will blink.
3. Enter the hour using ▲ or ▼.
4. Press [(□)]. The minute digits will blink.
5. Enter the minutes using ▲ or ▼.
6. Press [(□)] to exit.

The alarm ON icon [  ] for the alarm chosen will be displayed indicating the alarm set above is now armed.

You can also arm or disarm an alarm by pressing the [AL ON/OFF] button.

---

## HOW TO STOP AN ALARM

---

To stop an alarm, you can use either [(□)] or [AL ON/OFF].

Pressing [(□)] will stop the alarm, which is still armed and will go off at the set time the following day.

If [AL ON/OFF] is pressed instead, the alarm will be stopped and deactivated all together.

---

## HOW TO SET THE CLOCK

---

To set the clock, hold [SET/MODE] for three seconds.

The display will return to MODE 1, with the hour digits blinking.

Use ▲ or ▼ to select the hour. Holding down the button will increase or decrease the value rapidly.

Press [SET/MODE] to confirm. The minute digits will blink. Repeat the same procedure to set the minutes, then the day-of-month, month, display language, weekday and offset for the second time zone.

Note that the time and date are displayed in 24-HOUR clock and DAY-MONTH format, respectively. For display language, you can choose among English (E), German (D), French (F) and Italian (I) in order. Weekday is the usual sequence of Monday through Sunday.

For the second time zone, which is indicated by the ZONE ICON, enter the hour offset using the ▲ or ▼ buttons and the main unit will calculate the second time accordingly. For details, please refer to the section "Time Zone And Offset Table".

If there is an item you do not wish to change, simply press [SET/MODE] to bypass the item.

When you are done, press [SET/MODE] to exit. The display will return to the mode last chosen.

When the alarm goes off the sound which will gradually increase in volume and repeating speed will be turned on for about 2 minutes unless the [(□)] or [AL ON/OFF] button is pressed to mute the alarm. If neither key is pressed within these 2 minutes, the alarm will be repeated once after approximately 8 minutes.

---

## PRECAUTIONS

---

This product is engineered to give you years of satisfactory service if you handle it carefully. Here are a few precautions:

1. Do not immerse the unit in water.
2. Do not clean the unit with abrasive or corrosive materials. They may scratch the plastic parts and corrode the electronic circuit.
3. Do not subject the unit to excessive force, shock, dust, temperature or humidity, which may result in malfunction, shorter electronic life span, damaged battery and distorted parts.
4. Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary damage. The unit contains no user-serviceable parts.
5. Only use fresh batteries as specified in the user's manual. Do not mix new and old batteries as the old ones may leak.
6. Always read the user's manual thoroughly before using the unit.