

NOTEBOOK COMPUTER

MANUAL

WARRANTY

PLEASE READ THIS LIMITED WARRANTY CAREFULLY TO UNDERSTAND YOUR RIGHTS AND OBLIGATIONS.

The receipt is considered valid proof of purchase and should be kept in a safe place. This receipt will be required for receiving any warranty service. This warranty is transferable. When transferring ownership to a third party, please provide the receipt and warranty information.

Our company warrants to the end user that each product, including related software, accessories, media and supplies, shall be free from defects in materials and workmanship for twelve months from date of purchase. This warranty covers only those defects that arise as a result of normal use of the product. This warranty does not cover any other problems, including problems that arise as a result of improper maintenance or modification; software, accessories, media or supplies not provided or supported by the supplier; or operation outside the manufacturer's specifications.


Any part of this Notebook repaired or exchanged by a valid service representative will be covered under the original warranty period. Back up all programs and data before shipping this Notebook for repair under the warranty agreement. Do not leave any media in the disk drives. Products shipped without accessories will be returned without accessories. Any replacement product or component may be either new or like new, provided that its functionality is at least equal to that of the product being replaced.

The TFT display technology used in this Notebook is highly superior to the traditional DSTN technology. Transistors control more than 2 million color dots each. Despite state-of-the-art assembly methods, we cannot completely eliminate scattered defective color dots, called pixel errors, causing display errors in the range of micrometers. Pixel errors at a rate up to 0.0005% are not considered to cause a reduction of usability nor a claim of warranty (see regional court of appeal Cologne [OLG Köln] 1993, AZ 19 U 92/91: CR1993,208 and OLG Cologne 1994, AZ 19 U 183/93: NJW RR 1994, 1077).

One pixel consists of 3 dots (red, green, blue).

Definition of dot defect:

- 3 bright pixel (white color)
- 3 dark pixel
- 6 defect dots (red, green, blue) permanently bright or dark

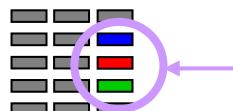

LIMITATION OF WARRANTY

To the extent allowed by local law, no other warranties are made with respect to this personal computer or the warranty services by any person, including but not limited to our company and its suppliers. The express warranty stated above is the only express warranty made to you and is provided in lieu of all other express or implied warranties and conditions (if any) including any created by any other documentation or packaging. For additional warranty information, please refer to enclosed warranty card.

LIMITS OF LIABILITY

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall the company or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damage, whether based on contract or any other legal theory and whether advised of the possibility of such damages. This includes loss or damage of personal data on your Notebook.

LOCAL LAW

This warranty statement gives you legal rights. You may also have other rights that vary from jurisdiction to jurisdiction. To the extent this warranty statement is inconsistent with local law, certain disclaimers and limitations of this statement may not apply to the customer.

MAKING COPIES OF THIS MANUAL

This manual contains information protected by law. All rights are reserved. Copyright law prohibits duplicating this information in mechanical, electronic, or any other form, without the written approval by the manufacturer.

©2003 Medion®. All rights reserved. Microsoft®, MS-DOS®, and Windows® are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein are the trademarks of their respective owners.

Information in this document is subject to change without notice.

Table of Contents:

Warranty.....	ii
Making Copies of This Manual	iii
INTRODUCTION.....	1
Notes on This manual	1
Audience.....	1
Quality	1
Document Your Notebook.....	2
Service	2
Included with your Notebook:.....	2
SAFETY	3
Safety Instructions.....	3
Data Security	3
Operational safety.....	4
General Safety Information	5
Ambient Temperature.....	5
CD-ROM/CD-RW/DVD Drive Safety.....	6
TFT Display Safety	6
Power Adapter.....	7
Battery operation.....	8
Modem	9
Touch pad.....	9
Cabling	9
Set-Up Location	9
Important Additional Safety Instructions.....	10
Upgrades and Repairs.....	10
Notes for Service Engineers.....	11
Standards	12
Electromagnetic Compatibility.....	12
Electrical Safety	13
Ergonomics	13
Supplementary Information.....	13
FCC Compliance Statement	14
Declaration of Conformity.....	15

Table of Contents: (continued)

MAINTENANCE	17
Maintenance Instructions	17
Cleaning and Care.....	17
Care of the TFT Display	17
Transporting the Notebook.....	18
VIEWS OF THE NOTEBOOK	19
Open Notebook.....	19
Front View	20
Left Side	20
Right Side	21
Rear Side.....	21
Bottom View.....	22
Indicators	23
Power Management Utility.....	25
GETTING STARTED	27
Step 1	27
Step 2	28
Step 3	28
Short description of the Windows® Desktop	29
POWER SUPPLY	31
On/Off switch	31
Power Adapter.....	31
Battery Operation	32
Inserting the Battery.....	32
Removing the battery.....	33
Charging the Battery.....	33
Battery Power	34
Power Management.....	35
APM and ACPI	35
Standby mode.....	36
Suspend (hibernate) mode.....	36
Power Management Utility.....	36

Table of Contents: (continued)

DISPLAY	37
Opening and Closing the Display	37
Screen Resolution	37
Connecting an External Monitor.....	38
DATA ENTRY	39
The Keyboard	39
Notebook-specific key combinations	39
Touch pad	40
MAIN COMPONENTS.....	41
The Hard drive.....	41
Important directories.....	42
USB memory stick [optional]	43
Usage.....	43
Write-/ Delete protection	44
First aid in the event of malfunction.....	44
The Optical Drive	45
Optical Drive as bootdrive	46
DVD Technology.....	47
Various DVD Formats.....	47
DVD-Video	48
Subjects Concerning the CD-Rewriter	49
Recordable/Rewriteable CDs (CD-R/CD-RW)	49
What Types of CDs Can Be Copied?.....	50
What Does ... Mean?	51
The Sound Card	55
External Audio Ports	55
Modem	57
Modem port.....	57
The Network.....	58
What is a network?.....	58
Fast Ethernet-Network.....	58
Wireless LAN	61

Table of Contents: (continued)

Memory card connections.....	61
Inserting memory cards.....	67
Removing memory cards	67
The PC card Slot	66
32-bit CardBus Port.....	68
Use of PC-cards	68
Connection Options	70
Serial Interface.....	70
Universal Serial Bus Port.....	70
PS/2 Interface.....	70
IEEE 1394 (Fire Wire).....	71
Application Options for IEEE1394.....	71
Technical Specifications.....	71
Infrared Interface	72
Instructions for Using the IR port.....	72
SOFTWARE	73
Getting to Know Windows XP.....	73
Installation of the Software.....	73
Windows Activation.....	75
The BIOS Set-up-Program.....	76
Running the BIOS Set-up.....	76
Navigating the BIOS Utility.....	76

Table of Contents: (continued)

CUSTOMER SERVICE	77
Data and System Security	77
Data Security	77
Maintenance Programs.....	77
Password Reset Disk.....	77
System Recovery	78
Correction	78
Restoring the Factory Settings.....	79
FAQ – Questions frequently asked	80
Troubleshooting	82
Localize the Cause	82
Additional Support.....	84
Driver Support.....	84
INDEX	85

INTRODUCTION

NOTES ON THIS MANUAL

This manual is divided into sections to help you find the information you require. Along with the Table of Contents, an Index has been provided to help you locate information.

In addition, many application programs include extensive help functions. As a general rule, you can access help functions by pressing F1 on the keyboard. These help functions are available to you when you use the Microsoft Windows® operating system or the various application programs.

We strongly recommend that you read the Online Manual for your Notebook, which can be found in the **Start Menu**.



Information about your PC

This interactive manual is designed to provide additional information about your Notebook as well as useful links accessible via the World Wide Web.

AUDIENCE

These instructions are intended for both the novice and advanced user. Regardless of the possible professional utilization, this Notebook is designed for day-to-day household use. The functions and applications for use with this Notebook have been designed with the entire family in mind.

QUALITY

Medion has selected the components in this computer for their high level of functionality, ease of use, safety and reliability.

Through balanced hardware and software design we are able to provide you with an innovative personal computer useful for applications relating to both work and leisure.

We are pleased to welcome you as our newest customer.

Thank you for choosing Medion.

DOCUMENT YOUR NOTEBOOK

It is important to document the details of your Notebook purchase in the event you need warranty service. The serial number can be found on the Service Hotline card or on the back of the Notebook:

Serial Number

Date of Purchase

Place of Purchase

SERVICE

Medion is pleased to provide individualized customer service throughout the life of your Notebook. Please feel free to contact a customer service representative with any questions relating to this Notebook. A separate section on Customer Service is included in this manual, starting on page 77.

INCLUDED WITH YOUR NOTEBOOK:

- 1 - Notebook
- 1 - Li-Ion Battery
- 1 - Power adaptor with power cord
- 1 - Modem cable
- 1 - Adapter S-Video ⇒ Composite (optional)
- 1 - USB-Memory Stick (optional)
- 1 - Application and Support CD (Drivers etc.)
- 1 - Microsoft Windows® Getting Started Manual + Recovery CD
(for re-installing the operation system, for factory roll-back refer to page 79)
- 1 - Instruction Manual
- 1 - Warranty card

SAFETY

SAFETY INSTRUCTIONS

This manual contains important information on the safe and proper setup, use and care of your Notebook computer. Please read this manual carefully and follow all instructions. These instructions should be kept with your computer at all times. Proper set up, use and care can help extend the life of your Notebook. In the event that you transfer ownership, please provide these instructions to the new owner.

Please follow the instructions in this section for the safe operation of your Notebook:

DATA SECURITY

How important is the information you will be storing on your Notebook? You need to guard against the loss of your data by making backup copies. You can backup your data onto CD, floppy disk, or other media such as Zip drives. It depends upon how much data you have. In this way, if something happens to the hard drive in your Notebook, you have another copy of your data.



The supplier does not assume liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or consequential losses.

OPERATIONAL SAFETY

It is important to follow all of the safety instructions in this manual to ensure the safety of you and your Notebook.



- **DO NOT** open the case of the Notebook, the battery or the power adaptor. When the case is open there is a danger of severe electric shock.



- **DO NOT** insert objects through the slots and openings of the Notebook. This may lead to electric shock, electrical short-circuit or fire that will damage your Notebook.
- **DO NOT** allow small children to play unattended with electrical equipment.



- **DO NOT** cover the slots and openings of the Notebook. These openings are for ventilation purposes. Covering these vents may lead to overheating.
- **This Notebook is NOT designed for use within industrial environments.**

GENERAL SAFETY INFORMATION

If you find that:

- The power cord/power adapter is worn or damaged.
- Liquid is spilled on the unit.
- The Notebook fails to work properly.
- The Notebook is dropped or the housing is damaged.

You should:

- Shut-down your Notebook immediately.
- Remove the power cord from the socket.
- Contact Customer Service.
- Do not restart unless you have contacted Customer Service.

AMBIENT TEMPERATURE

- The Notebook can be operated at an ambient temperature of between **+41°F** and **+95°F** and at a relative humidity of between **30%** and **70%** (without condensation).
- When powered off, the Notebook can be stored at temperatures between **32°F** and **140°F**.

CD-ROM/CD-RW/DVD DRIVE SAFETY




- CD-ROM-/CDRW-/DVD-drives are **Laser Class 1** devices. These lasers **must** remain in their sealed casing.
- **Danger** — Invisible laser radiation when open. Avoid direct exposure to beam. This product is certified by the manufacturer to comply with DHHS rules 21CFR, Chapter 1, Subchapter J, applicable at date of manufacturer. Refer to optical drive labels for additional details.
- **DO NOT** remove the drive covers, as exposure to the lasers may be harmful.
- **DO NOT** look directly into the laser, even when wearing eye protection.

TFT DISPLAY SAFETY



- To avoid damage to the TFT Display, **never** open it a full 180°. **Do not** forcibly open it.
- In order to avoid damage to the display, **do not** touch it with your fingers or sharp objects.
- **Never** lift the Notebook by the TFT Display; doing so could break the hinges.
- There is a risk of injury if the **TFT display breaks**. Use **protective gloves** to pack up the broken pieces and send them to your Service Center for proper disposal.

It is important to thoroughly wash your hands after handling a broken TFT display. There is a chance that **chemicals** may have been released.

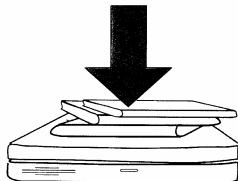

- **Never** place objects on top of the Notebook that would exert any pressure on the display. There is a danger that even slight pressure may break the TFT display.

POWER ADAPTER

- Do not open the power adapter housing. When the housing is open there is a **danger** of severe electric shock. It contains no user-serviceable parts.
- The electric outlet must be in the vicinity of the Notebook and within reach of the power adapter cables. **DO NOT** stretch the power cables tightly to reach an electric outlet.
- To disconnect your Notebook from the power source, or set the Notebook to battery operation, remove the power cord from the Notebook's power socket.
- Only use the Notebook with a power adaptor (**FSP090-1ADC21**) operating at **AC 115V~/60 Hz**. In European countries use the Notebook at **AC 220-240V~/50 Hz**.

For details on power consumption, please refer to the rating plate on the rear of your Notebook. If you are unsure of the type of power supply available at the point of use, ask your power supplier.

- Use **only** the supplied power cord.
- If using an extension cord, make certain that it meets your local safety requirements. If in doubt, consult an electrician.
- To provide additional protection against electric shock, power surges, lightning strikes, or other electrical damage to your Notebook, we recommend the use of a **surge protector**.

BATTERY OPERATION

To extend the life and power of your battery and guarantee secure operation, the instructions below should be followed:



- Never expose the battery to **direct sunlight** or **heat** for long periods.
- **Do not** dispose of the battery by fire as they may explode. Check with local codes for possible special disposal instructions.
- **Do not** open the battery housing; it contains no user-serviceable parts.
- Disregarding these instructions will lead to damage and under some circumstances may even cause the battery to **explode**.

- Keep the battery away from electrically conductive materials, chemical substances and cleaning agents.
- Only use the originally supplied power adapter to charge the battery (**FSP150-1ADE11**).
- Fully discharge the battery before recharging it.
- Replace the battery **only** with the same type or an equivalent type recommended by the manufacturer.
- Charge the battery only until the battery charging light goes out. Also, refer to the instructions under "Charging the Battery" on page 33 for instructions on checking the battery level.
- Only change the battery when the unit is switched off.
- **Batteries are classified as special waste** and should always be disposed of properly. Contact Customer Service for more details.
- Keep batteries away from children at all times.
- Use only the batteries and power adapter/cord indicated in this manual.

MODEM

- If your system has a modem, please make sure you connect it to an **analog** telephone line only. Connecting to a digital PBX, a digital line designed for broadband services or ISDN, a shared service line or a payphone will damage the modem or the devices to which it is connected.

TOUCH PAD

- Light pressure with the tip of your finger is all that is required to operate the touch pad. Because the touch pad is electrostatic sensitive, objects cannot be used in place of your fingers. Using a pen or other object can damage the touch pad or cause the Notebook to malfunction.

CABLING

- Arrange cables so no one can walk on or trip over them.
- **DO NOT** place objects on any of the cables.



Caution – To reduce the risk of fire, use only No. 26 AWG or larger telecommunication cords (applies to American Standards).

SET-UP LOCATION

- Keep your Notebook and all connected peripherals away from moisture, dust, heat and direct sunlight. Failure to do so can lead to Notebook malfunction or damage.
- It is highly recommended you do not use the Notebook outdoors.
- Operate the Notebook and all peripherals on a stable, balanced and vibration-free surface.
- **Do not** leave the base of your Notebook on your lap or any part of your body for a long period of time while the Notebook is turned **ON** or is charging. The Notebook can become very warm while it is turned on or charging and can cause discomfort or injury from heat exposure.

IMPORTANT ADDITIONAL SAFETY INSTRUCTIONS

When using any electronic equipment, basic safety precautions should always be taken. Following the guidelines below can reduce the risk of fire, electric shock and injury to person:

- Do not use this product near water (e.g., near a bathtub, lavatory or kitchen sink, in a wet basement or near a swimming pool).
- Avoid using a telephone/modem (other than a cordless type) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone/modem to report a gas leak in the vicinity of the leak.



Lithium batteries cannot handle intense pressure, high temperatures or fire. Danger of explosion if replaced incorrectly. Replace batteries with a compatible type as recommended by the manufacturer. Lithium batteries are **hazardous waste** and require proper disposal. Contact the Medion **Service Center** for additional information on battery disposal.

UPGRADES AND REPAIRS

- Only a qualified Service Engineer should perform upgrades and repairs to your Notebook.
- If you do not have the necessary qualifications, go to an appropriate **Service Engineer**. Please contact the **Service Center** if you are experiencing technical problems with your Notebook.

NOTES FOR SERVICE ENGINEERS

- Before opening the housing, disconnect the Notebook from all power sources and remove any connecting cables. If the Notebook has not been disconnected from the power outlet before being opened, there is a **danger** of severe electric shock. There is also a risk of damage to the components.
- Internal components of the Notebook may be damaged by **electrostatic discharge** (ESD). Perform system upgrades and changes in an **ESD-protected work area**. If no such work area is available, wear an **antistatic wrist strap** or touch a highly conductive metal object. You service center can repair damage sustained by inappropriate handling for a fee.
- Use only **original spare parts**.

CAUTION: The CMOS lithium batteries cannot tolerate intense pressure, high temperatures or fire. Keep away from children! Danger of explosion if replaced incorrectly. Only replace with a compatible type (CR2032) as recommended by the manufacturer. Lithium-Batteries are **hazardous waste** and need to be disposed of properly. If necessary, we will take back your used CMOS lithium battery.

Notes on Laser Radiation :

Laser devices of Laser Class 1 to Laser Class 3b may be used in the Notebook. Where the Notebook housing remains closed, the device meets the requirements of **Laser Class 1**. By opening the Notebook housing you will gain access to laser devices of up to Laser Class 3b.

- The CD-ROM-/CDRW-/DVD-drive contains no user-serviceable parts. Only the **manufacturer** should perform repairs to the CD-ROM-/CDRW-/DVD-drives.

When removing and/or opening laser devices, the following guidelines must be observed:

- **DO NOT** look into the laser beam, even while wearing optical protection.
- **DO NOT** allow yourself to be exposed to the laser beam. Avoid exposure of the eyes or skin to direct or stray radiation.

STANDARDS

This Notebook meets the requirements of the following standards:

ELECTROMAGNETIC COMPATIBILITY

This Notebook meets the following requirements for standards of electromagnetic compatibility and electrical safety:

EN 55022	Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement.
EN 55024	Information technology equipment - Immunity characteristics - Limits and methods of measurement.
EN 61000-3-2	Limits - Limits for harmonic current emissions (equipment input current up to and including 16 A per phase).
EN 61000-3-3	Limits - Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with a rated current up to 16 A.

- Keep the Notebook at least one meter (approximately three feet) away from **high frequency** and **magnetic interference sources** (e.g., televisions, loudspeaker cabinets, mobile telephones, etc.) in order to avoid malfunctions and/or loss of data.
- Please note that only **shielded** cables shorter than 3 meters (9.84 ft) should be used for the LPT, COM, USB, IEEE 1394, audio, video and network interfaces with this Notebook.
- When connecting additional components, please observe the *Guidelines on Electromagnetic Compatibility (EMC)*.

ELECTRICAL SAFETY

EN 60950	Safety of information technology equipment.
-----------------	---

- The connection of devices is limited to equipment that complies with EN60950 "Safety of information technology equipment" or EN60065 "Audio, video and similar electronic apparatus. Safety requirements"
- For U.S. / Canadian purposes: The Notebook should only be connected to equipment which complies with UL 60950 / CAN CSA 22.2 No 60950

ERGONOMICS

EN 29241-3	Ergonomic requirements for office work with visual display terminals (VDTs). Visual display requirements.
-------------------	---

EN ISO 9241-8	Ergonomic requirements for office work with visual display terminals (VDTs). Requirements for displayed colors.
----------------------	---

SUPPLEMENTARY INFORMATION

This product complies with the requirements of the R&TTE Directive 1999/5/EC and carries the CE-marking accordingly.

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

DECLARATION OF CONFORMITY

According to 47CFR, Parts 2 and 15 for Class B Personal Computers:

We:

Medion Aktiengesellschaft

(Name of the Responsible Party)

Located at:

Gänsemarkt 16 – 18

D-45127 Essen

Germany

(Address, City, State, Zip Code)

Fax : 0 201 / 81 081 – 227

(Facsimile Number **for conformity issues only**)

Declare under sole responsibility that the product identified herein, complies with 47CFR Parts 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsible for ensuring that the equipment complies with the standards of 47CFR §§15.101 to 15.109.

Trade Name: **Medion**

Type or
Model Number: **MD xxxx**

Party Responsible: **MEDION AG**


Executed on (Date), at (Place): **1st of April 2003, Essen**

MAINTENANCE

MAINTENANCE INSTRUCTIONS

This section provides information on the proper maintenance and care of your Notebook. Following these measures can extend its lifetime.

CLEANING AND CARE

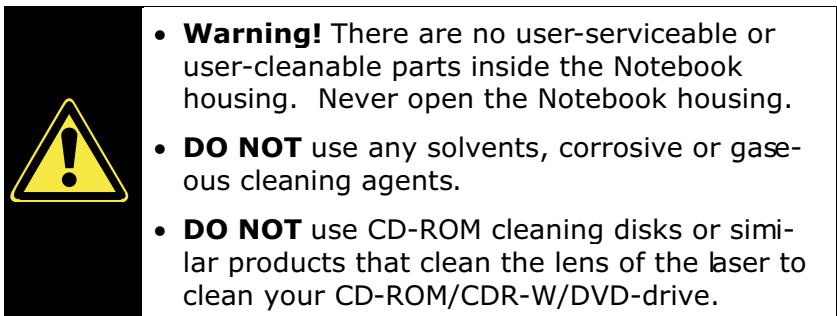

- **Warning!** There are no user-serviceable or user-cleanable parts inside the Notebook housing. Never open the Notebook housing.
- **DO NOT** use any solvents, corrosive or gaseous cleaning agents.
- **DO NOT** use CD-ROM cleaning disks or similar products that clean the lens of the laser to clean your CD-ROM/CDR-W/DVD-drive.

- Before cleaning, always remove the power adapter plug and all connecting cables.
- Only use a damp, lint-free cloth to clean the Notebook.

CARE OF THE TFT DISPLAY

- Always close the Notebook when not in use. Avoid touching or scratching the surface of the screen as it is easily damaged.
- Make sure that no water drops are allowed to remain on the screen. Water can cause permanent discoloration.
- Clean the screen with a dry, soft, lint-free cloth.
- Do not expose the screen to bright sunlight, or ultraviolet radiation.


TRANSPORTING THE NOTEBOOK

Please use the following guidelines when transporting the Notebook:

- Switch off the Notebook. This will prevent damage to the hard disk. When the Notebook is turned off, the hard disk heads are moved into a safe area.
- Remove any CD's. This will prevent damage to the disks or to the drive heads.
- Close the Notebook and ensure that the cover locks shut.
- Always use the Notebook carrying case. This helps to protect the Notebook from dirt, moisture, jolts and scratches.
- Fully charge your battery and any spare batteries immediately before a long journey.
- Should you need to ship your Notebook, always use the original packaging and make certain the shipper knows the contents contain fragile electronic equipment.
- Wait until the Notebook has reached ambient (room) temperature before turning it on or connecting it to the power adapter. Drastic variations in temperature and humidity can create condensation within the Notebook and may cause it to short-circuit.

IEWS OF THE NOTEBOOK


OPEN NOTEBOOK

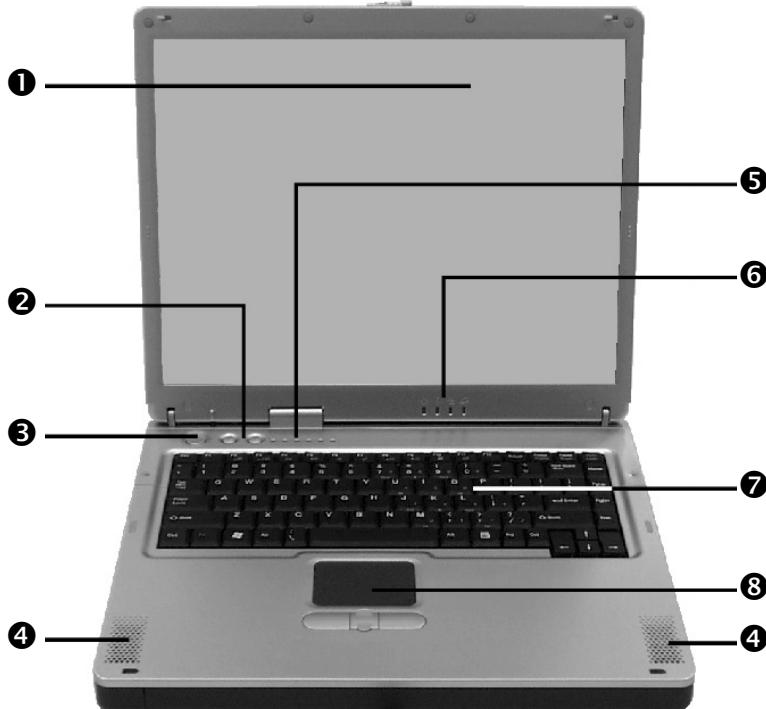

(Diagram the same)

1	TFT Display (⇒ p. 36)
2	Power Management Utility (⇒ p. 25, 36)
3	Power ON/OFF (⇒ p. 31)
4	Speakers
5	Indicators (⇒ p. 23)
6	Indicators (⇒ p. 23)
7	Keyboard (⇒ p. 39)
8	Touch pad (⇒ p. 40)


FRONT VIEW

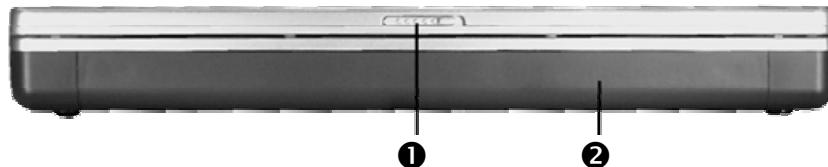

① Display catch (⇒ p. 37)

② Battery (⇒ p. 32)

LEFT SIDE

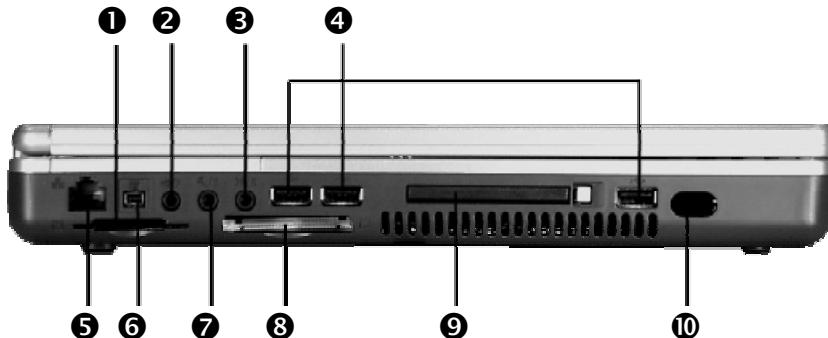

① 4 in 1 Card reader (⇒ p. 61)

② Line Out (⇒ p. 55)

③ Line in (⇒ p. 55)

④ USB port (⇒ p. 70)

⑤ LAN port (RJ-45) (⇒ p. 58)

⑥ IEEE 1394 (⇒ p. 70)

⑦ Microphone (⇒ p. 55)

⑧ CF Card reader (⇒ p. 61)

⑨ PC-card slot PCMCIA (⇒ p. 61)


⑩ Infrared port (⇒ p. 72)

RIGHT SIDE



- ①** Optical drive (⇒ p. 43)
- ②** PS/2 Port (⇒ p. 70)
- ③** Air outlet vent*
- ④** Modem (RJ-11) (⇒ p. 56)

REAR SIDE

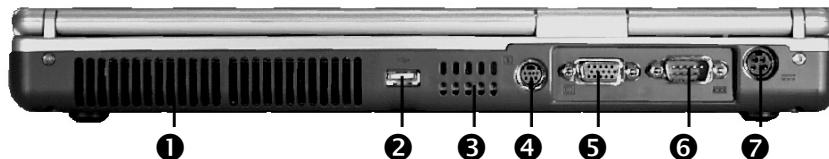

- ①** Air outlet vent*
- ②** USB port (⇒ p. 70)
- ③** Air outlet vent*
- ④** S-Video TV port (⇒ p. 38)
- ⑤** External monitor (⇒ p. 38)
- ⑥** Serial port (⇒ p. 70)
- ⑦** Power socket (⇒ p. 31)

* **Caution! Do not cover when in use!**


BOTTOM VIEW



- | | |
|----------|---------------------------------|
| ① | Air outlet vent* |
| ② | Battery lock latch (⇒ p. 32) |
| ③ | Battery release latch (⇒ p. 32) |
| ④ | Memory compartment |
| ⑤ | Wireless LAN/Modem compartment |
| ⑥ | Battery/Battery bay (⇒ p. 32) |


* **Caution! Do not cover when in use!**

INDICATORS

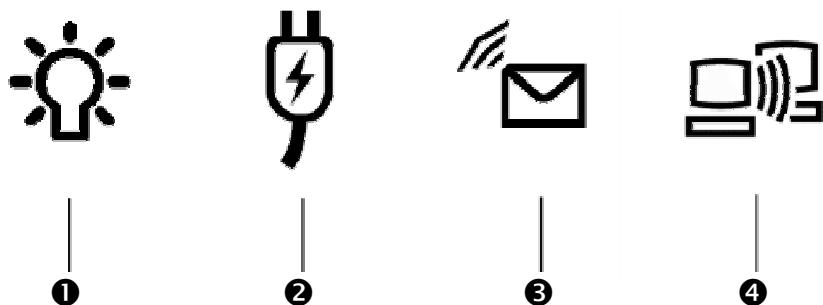

LED's indicate the power and operating system states of the Notebook. The meaning of each LED is:


①	Lights green when switched on (battery/adapter). Flashes green when in Stand-by mode. Lights amber if battery level is low.
②	Lights blue , when the battery is charging. Lights off to indicate that the battery is fully charged.
③	E-MAIL Lights green , to indicate that a new mail has arrived. This function is limited to the program Microsoft® Outlook . Outlook Express is not supported.
④	WIRELESS LAN Display for wireless data exchange. If the display lights continuously blue the wireless LAN function is installed. If the display flashes blue there is a link to another access point. (Factory option)

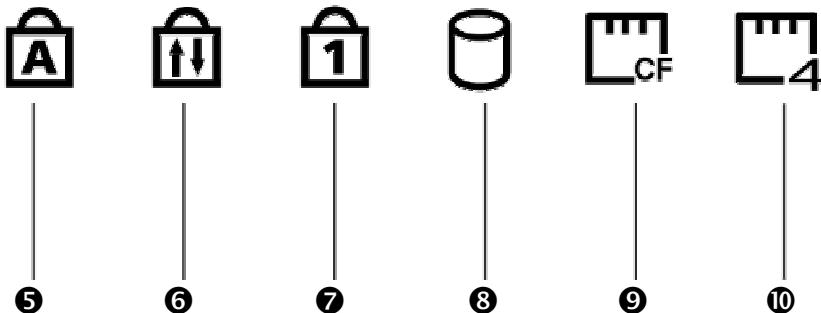

5	CAPITAL LOCK This LED lights when CAPS-Lock has been activated. This sets the keyboard to capital letters.
6	SCROLL LOCK This LED indicates that the Scroll Lock key on the keyboard is activated. The Scroll Lock key has different functions depending on the software you are using.
7	NUM LOCK This LED lights when NUM-Lock has been activated. It sets the keyboard so that numbers are assigned to certain characters, simplifying numerical data input.
8	ACCESS This LED lights when the Notebook is accessing the hard disk or the optical drive.
9	CF ACCESS This LED lights when the Notebook is accessing the CF cards/IBM® Micro drive.
10	4 IN 1 ACCESS This LED lights when the Notebook is accessing the 4 in 1 drive.

POWER MANAGEMENT UTILITY

The power management utility gives you the option of adjusting the power management of your notebook. You can either increase or decrease the speed in 25% steps. For more information see page 36.

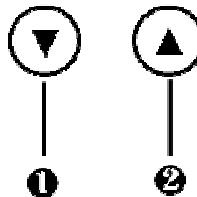

①	Press this key to increase the speed of your processor. This is particularly useful for highly sophisticated programs.
②	Press this key to reduce the speed of your processor. This setting extends the battery life and operating time.

GETTING STARTED

So, you can hardly wait to get going on your Notebook. This is quite understandable, but we ask that you first take a few moments to read the important section on **Safety**.

This Notebook comes with software **fully pre-installed**. You do not have to install any of the CD's supplied. However, with many programs (e.g., telephone-CD's or encyclopedias) it is necessary to insert the corresponding CD to access the data that is stored on it. The software will prompt you to do this when necessary.

STEP 1

Before starting the Notebook please insert the battery. For further information read the section titled "Power Supply" starting on page 31. Open the display (⇒ p.36) and switch on the Notebook using the On/Off switch (⇒ p. 19).



If the battery level is insufficient, connect the power adapter.



Note: Make sure there is not a disk in the floppy drive or a bootable CD (e.g., the Recovery-CD) in the CD-ROM drive. Such disks will prevent the operating system from loading off the hard drive.

The Notebook starts and goes through a number of phases:

1. The Notebook first performs a quick self-check.
2. Then the **operating system** is loaded from the hard disk. During this one-time initial set-up, the loading process takes slightly longer than normal. This time is needed for the system to completely register the operating system and the individual components.

3. Your operating system is finished loading when a welcome screen is shown on your display.

STEP 2

The greeting procedure will guide you through a series of dialogue boxes. The information in each dialogue box will explain the steps that need to be taken. So, just follow the instructions on the screen.

Should you have any questions just click on .

LICENSE AGREEMENT

The greeting procedure also displays the license agreement. Please read this carefully. It contains important legal information on the use of your software. In order to see the full text, use the mouse and the scroll bar on the right side of the screen to move downwards until you have reached the end of the document. You accept the agreement by clicking on the **I accept the agreement** option field. Only by doing so will you be entitled to use the product under lawful terms and conditions and be entitled to open the sealed Windows® manual.

STEP 3

After the login procedure the Windows® desktop appears on your screen. This can be adjusted so that the screen of your computer looks different. The basic operation, however, is ensured.

SHORT DESCRIPTION OF THE WINDOWS® DESKTOP

(The respective illustration is shown on the next page.)

1 The Start button

Click once on this button with your left mouse key to call the illustrated start menu.

2 Program bar

The most commonly used programs are listed here. The operating system recognizes them automatically. If you press the right mouse key on an entry you can determine which entry is kept and which is deleted from the list. The program associated with the entry will **not** be deleted.

3 All Programs

Here you find the entries to every program installed on your PC. Here, too, you can edit entries with the right mouse key.

4 Information about your PC

Click on this button once with the left mouse key to receive important information about your PC as well as valuable hints and additional assistance.

5 Switching off

Click on this button with the left mouse key to switch off the PC.

6 Task bar

Here you receive information and status reports about the operating system and the running programs.

7 „Icons“ on the „Desktop“

Icons are program links used to start the respective programs. A **double click** (press the left mouse key quickly twice) on the symbol starts the application.


The **Desktop** includes almost the complete screen and is the filing area for those entries or other links you would like to access quickly.

8 Logged in user

This shows the logged in user. The image is changed by clicking on it.

9 System control

This is the central control of your computer. Here you are able to configure your computer at will. However, you should read about the implications of possible changes in „Help and Support“.

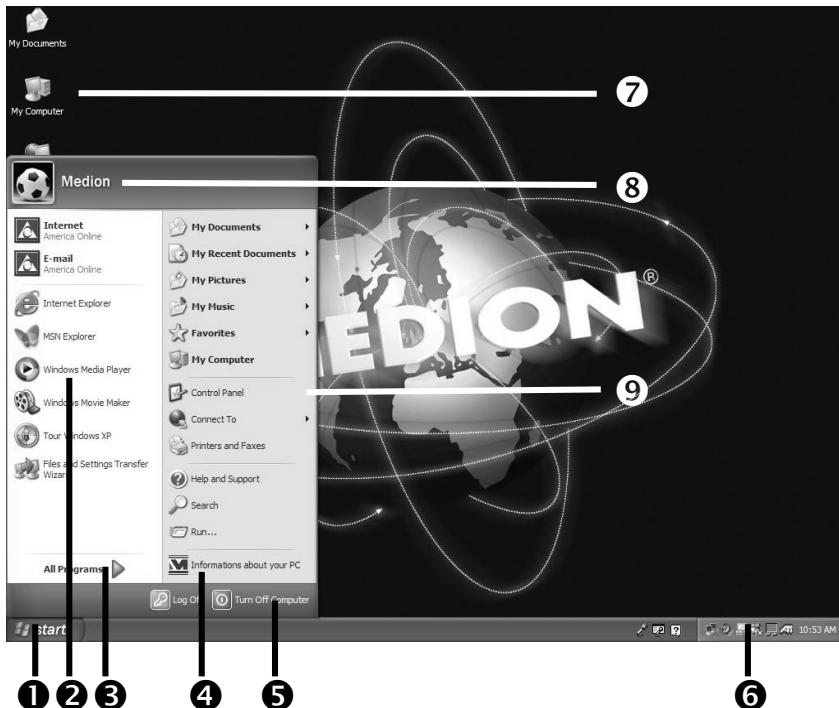

POWER SUPPLY

ON/OFF SWITCH

The On/Off switch (⇒ p. 19) is used to power up/down the Notebook. The system is powered down, independently of the operating system, if the switch is continuously pressed for longer than 4 seconds.



WARNING! Do not switch off your Notebook while the **hard disk** is running and the corresponding **media activity LEDs** are lit. Otherwise data may be lost. To protect the hard disk you should always wait for 20 seconds after powering down the Notebook before powering it up again.

POWER ADAPTER

Your Notebook is supplied with a universal A.C. power adapter, which automatically adjusts to the available power source. The following levels are supported: **AC 100-240V~/50-60 Hz.** Please follow the power supply **safety instructions** found on page 7. The power adapter is connected via a power cord to an a.c. wall socket. The d.c. power lead from the power adapter is connected to the rear of the Notebook (⇒ p. 21). The adapter provides the Notebook with power and also charges the battery. The power supply indicators on the Notebook (⇒ p. 19) provide details on the operating state. The battery is also being charged when you are working on your Notebook with the power adapter. The power adapter is still live if the Notebook is not connected with it. You should therefore unplug the power adapter from the wall socket if it is not connected to the Notebook.




WARNING! Use only the power adapter and power cord supplied with your Notebook.

BATTERY OPERATION

Batteries store electrical energy in their cells and discharge this again when required. In order to extend the life and power of your battery, and to guarantee reliable operation, it is essential that the safety instructions on page 8 are followed.


INSERTING THE BATTERY

Slide the battery, contacts first, into the battery compartment.

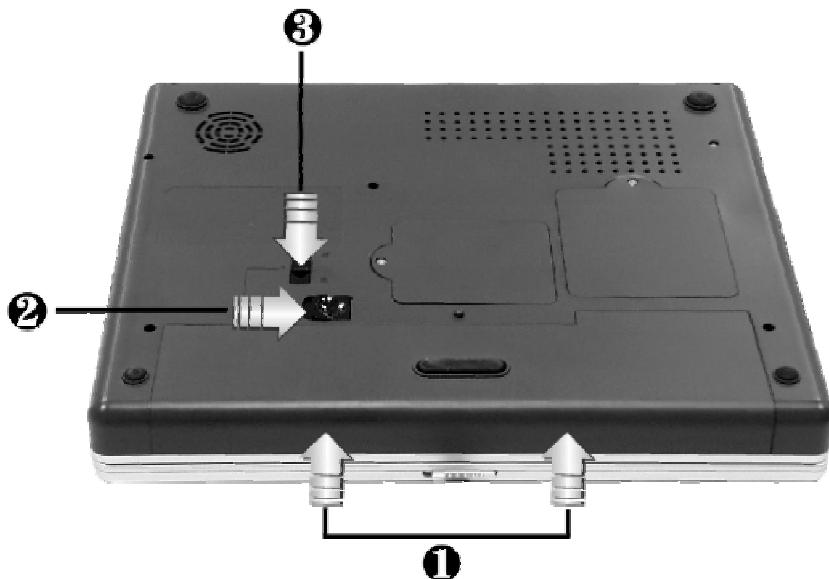

REMOVING THE BATTERY

Slide the battery locks to remove the battery.

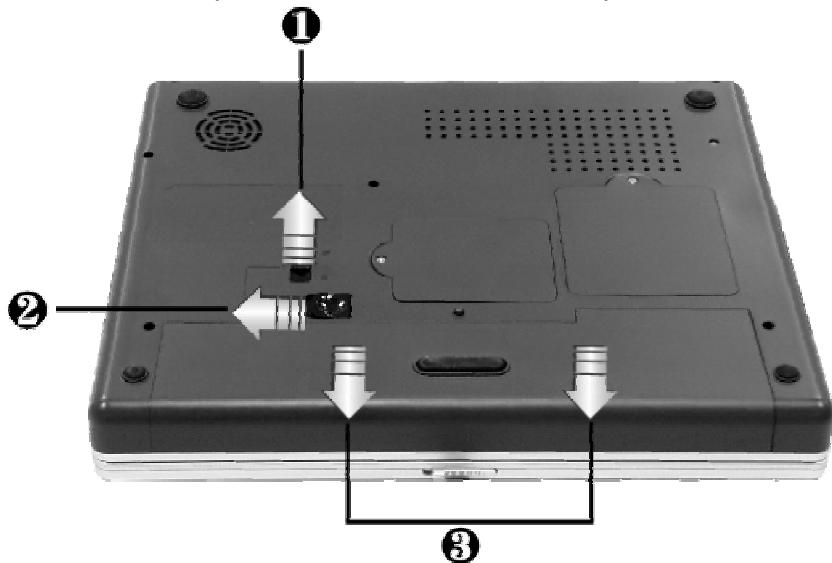

WARNING! Do not remove the battery while the Notebook is running on battery power. You increase the possibility of loosing data.

CHARGING THE BATTERY

The battery is charged via the power adapter. If the power adapter is connected, it charges the battery automatically, whether the Notebook is turned on or not.

When the Notebook is switched off, full charging takes a few hours. If the Notebook is switched on, the charging process takes a significantly shorter time since a fast charging procedure is performed. However, it is recommended that from time to time you discharge the battery completely and recharge it afterwards with the Notebook switched off.

BATTERY POWER

A fully charged Li-Ion battery will provide power for around 2 hours of operation. However, the battery life will vary according to how the power saving functions are set, the way you work, the size of the main memory and the display type.

When working in Windows an audible warning signal will be given off as soon as the battery level drops below a set minimum value. When this happens, the processing power is reduced in order to save power.



NOTE: Battery warning signals and "Low-Battery" mode will be heard immediately when the power pack is first connected.

CHECKING THE BATTERY LEVEL

In order to check the current level of the battery, move the cursor over the power symbol in the taskbar.



When in battery mode, a battery symbol is displayed and when the power adapter is in use a power connector is displayed. If the battery is being charged the power connector has a lightning symbol superimposed over it. Further information on power settings can be obtained by double clicking on the symbol.



NOTE: If you ignore the warning signal when the battery level is low, your Notebook goes into suspend mode.



WARNING! If the battery is empty, your data will not be retained for long in Save-to-RAM mode.

WARNING! Never remove the battery while the Notebook is switched on or if the Notebook has not yet gone into suspend mode, as this may lead to loss of data.

POWER MANAGEMENT

Your Notebook offers automatic and modifiable power saving functions that you can use to maximize battery life and reduce overall operating costs. The power saving modes are known as standby mode and suspend (hibernate) mode.

APM AND ACPI

Advanced Power Management (APM) was developed by Intel and Microsoft and controls the main power functions of the system. **Advanced Configuration and Power Management Interface (ACPI)** was developed by Intel, Microsoft and Toshiba, in order to control power saving and Plug&Play functions in systems. The new ACPI standard added many enhancements to APM.

Now the closing and opening of the display can be assigned various functions through power management. For example, the Notebook can be programmed to switch off when the display is closed. Likewise the On/Off switch can be set so it activates the standby mode.

ACPI offers you a number of setting options. (See: System Control, "**Power Management Features**")

STANDBY MODE

When in standby mode, the contents of the RAM of your Notebook are preserved while practically all other components of your Notebook are shut down, reducing your power consumption to a minimum.

By pressing any key on the keypad, you can bring your Notebook back to the fully operational state.

SUSPEND (HIBERNATE) MODE

The hibernate mode is an alternative to a complete shutdown of the Notebook.

In this mode all data from RAM (system and graphic data) are copied to the hard disk as a file. As soon as the data has been safely saved, the Notebook powers down. When the Notebook is switched on again, this file is written back to RAM by the BIOS.

In a few moments the Notebook is in the exact state as when it was last used.

If while working on a document the Notebook is closed (assuming the correct ACPI setting), the Notebook saves the data in RAM for you automatically.

You will restart at precisely the line in which you were working prior to the interruption.

POWER MANAGEMENT UTILITY

Choose the  icon in the taskbar and then **Configuration** to open the configuration dialog box and to set the power management to your requirements.

The function offers the following modes:

- **MaxPerf**
- **HighPerf**
- **MediumPerf**
- **MaxSaving**

DISPLAY

Unlike a normal monitor, the TFT display does not produce either radiation or flicker.

OPENING AND CLOSING THE DISPLAY

A display catch keeps the display closed when the Notebook is not in use. To open, use your thumbs to slide the bar left then lift the display with your thumbs and index finger and position it as desired.



WARNING! The display should **not** be opened fully to 180°. Do not try to forcibly open it.

The opening and closing of the display can be assigned various functions via the Power management feature. For example, the Notebook can be programmed to power down when the display is closed.

SCREEN RESOLUTION

The integral screen has 1024 x 768 pixels (14.1", XGA). If in the Windows help program "Display Properties" you select a display with different parameters, the display may not use up the full screen area. Enlargement can lead to distortion of the display, especially with text.

You could work with a higher resolution if you connect an external monitor with increased resolution. However, in order to increase the screen resolution you may have to decrease the depth of color since the video memory has a limited capacity. With the Windows "Display Properties" program you can adapt the display to the modes supported.

CONNECTING AN EXTERNAL MONITOR

➲ These instructions are generally applicable. They may vary, however. Depending on the configuration of your notebook and the operating system different settings may be available. Read the detailed information in your operating system Help.

The Notebook has a port for connecting an external monitor. To connect and configure the Notebook for an external monitor:



1. Turn off your notebook and make sure the monitor power switch is turned off.
2. Connect the signal cable of the external monitor to the VGA port of the Notebook (⇒ p. 21).
3. Connect the external monitor to the electrical socket and power it up.
4. Turn on your notebook. Both the display and the external monitor will show the desktop.

➲ **Note:** An external TV set can be connected in the same way. To do this use the TV port (⇒ see. 21) and adapt the display as described above. It may be necessary to restart the notebook.

DATA ENTRY

THE KEYBOARD


By dual assignment of certain keys you have the same range of functions available to you as with a normal Windows keyboard. Some functions are input using the FN key, which is normal on notebook computers.

NOTEBOOK-SPECIFIC KEY COMBINATIONS

	+		Enables and disables the built-in wireless LAN.
	+		Switches display between LCD, CRT, or LCD and CRT simultaneously.
	+		Increases the volume.
	+		Decreases the volume.
	+		Toggles the speakers on and off.
	+		Function of the power management. The default for these short-cut keys is set at shut down . To adapt these keys to your requirements, refer to Display Characteristics in the Power Management .
	+		Increases brightness. This is used if the display is too dark.
	+		Decreases brightness. This is used if the display is too bright.
	+		Activates the Internet connection.
	+		Activates the mail connection.

TOUCH PAD

The touch pad's primary function is to move the cursor around or select items displayed on the screen with the use of your fingertip. It is positioned in front of the keyboard (⇒ p. 19). The pointer follows the direction which is specified by moving your finger or thumb over the touch pad (❸).

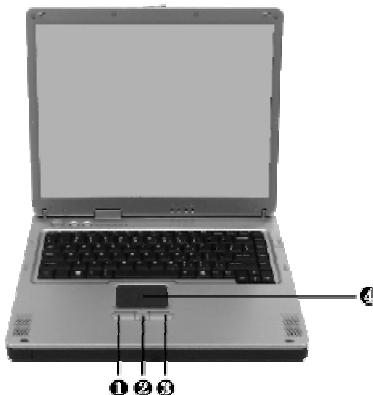

DO NOT use a ball-point pen or other object on the touch pad, as this could damage or cause a malfunction of your touch pad.

Below the touch pad are the left (❶), right (❸) and scroll (❷) (optional) mouse buttons which can be used as on a normal mouse. You can also perform a direct click or double click using the touch pad by tapping the surface briefly once or twice.

In Windows® System Control under the "Mouse" heading you will find a number of useful settings that will make your day to day work easier.

Although using a touch pad may take some getting used to, you will quickly find that it is just as easy to use as a normal mouse.

MAIN COMPONENTS

THE HARD DRIVE

The hard drive is the main storage medium combining large storage capacity and rapid data access. The Windows operating system cannot use the full capacity of the hard drive, which means that there will be a difference between the capacity that the BIOS displays and what the operating system displays.

The hard drive contains the operating system of the computer, other application programs and backup files. These programs and files are pre-installed on your Notebook, so you may note that some of the space on your hard drive is already taken.

The hard drive is addressed as drive **C**, **D** and **E**. If your notebook has been delivered with a smaller hard disk, it will have two partitions which will be addressed as drive **C** and **D**. In this case the "Recover" folder will be on partition **D**.

Whenever the computer is accessing the hard disk, the corresponding LED illuminates (⇒ p. 19).



WARNING! Never switch off the computer while the busy indicator is lit since this may result in loss of data.

Usually your hard disk is divided into 3 partitions, but there can be some variations.

In your first partition (**Boot**) you will find the operating system, application programs and the users' documents and settings.

The second partition (**Backup**) serves for data security and contains additional drivers and tools. The operating system of the PC, further application programs and backup files are located on the hard drive and reduce its total capacity.

The third partition (**Recover**) contains the copies of your Windows-installation in the delivery state.

IMPORTANT DIRECTORIES

In the following we listed the most important directories describing their contents.



Attention! Do not delete or modify these directories or their contents since data could be lost or the functionality of the system could be at risk.

- C:** The master directory of drive C: includes important files required to start Windows. In the factory setting these files are hidden for safety reasons.
- C:\Programs** As the name suggests, in this directory programs install the files belonging to the application.
- C:\Windows** The main directory of Windows.
This is where the files of the operating system are saved.
- C:\Documents and settings** This folder includes the settings and documents of all the PC users.
- D:\Driver** This folder includes the drivers required by your computer (pre-installed).
- D:\Tools** Here you find additional programs and other documentation for your PC.
- E:\Recover** Here the backup files are located enabling you to recover the factory setting (⇒ p. 79).

USB MEMORY STICK [OPTIONAL]

A USB memory stick is used to transport data and replaces the disk medium. One 64 MB memory stick is included in your pack. Before using your USB memory stick, please note the following:


- Keep the memory stick away from **moisture** and avoid **vibrations, dust, heat** and direct sunlight, in order to **prevent** malfunction.
- Never open the housing. This will void the warranty and may seriously damage the unit.
- Following **transport** wait until the unit has reached ambient temperature before putting it into use. Large variations in temperature or humidity can lead to a build-up of moisture through condensation. This may cause an **electrical short-circuit**. Secure the plug cover before transport.

USAGE

➲ This memory stick is suitable for use under Windows® XP/ME and 2000. No driver is needed with these operating systems.

1. Remove the protective covering from the USB memory stick and connect it to the unit via a spare USB port on your notebook.
2. The USB memory stick is now recognized and the operating system assigns it a free drive identifier letter. You can now use the device like a disk drive (copy and delete data, etc).

WRITE-/ DELETE PROTECTION

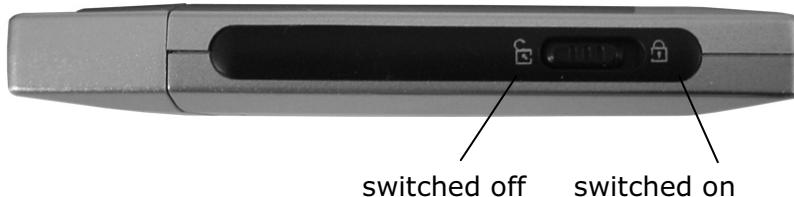

Press the write protect switch to switch the write and delete protection of the **USB memory stick** on or off. If this protection is switched on no data can be deleted or written to the USB memory stick.

FIRST AID IN THE EVENT OF MALFUNCTION

USB memory stick not recognized:

- Is the USB memory stick properly connected?
- Check in the Windows® device manager that the USB devices have been added correctly. If necessary add the USB controller.

No data can be read/written:

- have you activated the write/delete protection?
- Have you formatted the USB memory stick using a different computer? Different formats (FAT/FAT32/HFS) may not be compatible. Save your data and format the USB memory stick again in a compatible format.

THE OPTICAL DRIVE

Depending on the model, your Notebook will be fitted with a CD-ROM, a DVD-drive, a CD-Rewriter, or a Combo drive, which is capable of reading DVDs, CDs and to burn blank media. This section describes the CD-ROM drive.

With the CD-ROM drive data can be read or audio CD's played. Compact disks can store large quantities of data and offer relatively fast access.



NOTE: In this manual the terms "CD-ROM" or "CD" are normally used, as these are the most widespread, although for the DVD-ROM version the terms "CD/DVD-ROM" or "CD/DVD" would be appropriate.

INSERTING A CD/DVD

Unlike CD-ROM drives in a PC, the Notebook uses a retainer to secure the CD. When inserting the CD ensure that it is pressed securely onto the retainer.



WARNING! If the CD is not positioned correctly on the retainer, it may become damaged when the drive tray is closed.

1. Press the eject button on the CD-ROM drive, to open the tray.
2. Carefully pull the tray completely out.
3. Remove the CD from its wrapper, trying not to touch the unprinted side, which is where the data is stored.
4. Place the disk with the writing upwards on the tray. Carefully push it down, so that the surface rests on the tray and audibly latches onto the CD retainer.



5. Check that the CD can turn freely and carefully push the tray back into the CD-ROM drive.

In the delivered state your CD-ROM drive is given the drive letter "E" or "F". Using Windows-Explorer you can easily access the data on your CDs. Start Explorer by selecting \Rightarrow Start \Rightarrow Program \Rightarrow Windows Explorer, or by simultaneously pressing the Windows key and the "E" key.

When accessing audio and video disks (or audio and video files on normal CD's) the pre-installed media playback program will automatically start when the disks are inserted.

If you wish to remove a CD, press the eject button.



WARNING! While the Notebook is accessing the CD-ROM drive the media activity indicator is lit. Do not try to remove the CD from the drive while this LED is lit.

OPTICAL DRIVE AS BOOTDRIVE

The optical drive can be used for booting the operating system. If the PC doesn't boot from the disk, even if it is bootable, it could be possible that the drive isn't specified as a boot device in the BIOS. In this case, check the BIOS to be sure the optical drive is set as a boot device.

DVD TECHNOLOGY

The Compact Disc (CD) was introduced in 1982. Who could imagine doing without the CD as a storage medium for data, multimedia, computer games and video now? A CD can hold up to 700 MB of data, but that amount is too small to store the high-quality encoding of an entire feature film. The DVD (**Digital Versatile Disc**) has the same dimensions as a CD but stores more data at a greater density. In some cases, both sides of the DVD can be used to store information. Furthermore, each side can contain two layers of information (dual layer.)

Thanks to high data density, the transfer speed is considerably higher than for a CD, so that a DVD drive with 6 times speed can transfer considerably more data than a 6-speed CD drive. A DVD drive can also read both DVD-ROMs and CD-ROMs, providing the user access to an astounding amount of media.

VARIOUS DVD FORMATS

Format	Side A	Side B	Max. capacity
DVD-5	SL	-	4.7 GB
DVD-9	DL	-	8.5 GB
DVD-10	SL	SL	9.4 GB
DVD-14	DL	SL	13.2 GB
DVD-18	DL	DL	17.0 GB

SL=Single Layer, DL=Dual Layer

DVD-VIDEO

Some of the special characteristics of DVD-video are:

- Up to 8 hours of feature films on a single DVD.
- Up to 8 audio tracks and 32 subtitle tracks on a single DVD.
- Greater picture quality than VHS or SVHS.
- Time-frame navigation and picture stills.
- Selection of different camera angles in some media.
- **Parental Control**, in which certain scenes or an entire film or rating of films can be made accessible only to certain age groups. DVD players can, for example, be set so that scenes or films that have not been approved for younger audiences will not play.

In spite of the high storage capability of the DVD, the data must be extremely compressed in order for a complete feature film to be stored. This extreme compression combined with exceptional picture quality is provided by the MPEG2 image coding method on the DVD. This places high demands on the Notebook's processor, so when playing a DVD please close all other applications. To increase Notebook performance, you may also wish to purchase a plug-in MPEG2 decoder card, which has its own decompression processor and will thus free the Notebook's processor.



NOTE: The decoding software included with your Notebook may be changed for regional DVD decoding up to five times, after which the drive will only play DVD movies for the region setting last entered. Changing the region code after that will require factory resetting which is **not** covered by warranty. If resetting is desired, shipping and resetting costs will be billed to the user.

SUBJECTS CONCERNING THE CD-REWRITER

If you plan on making your own CDs, you should first have some information about CD-blanks.

RECORDABLE/REWRITEABLE CDs (CD-R/CD-RW)

Normal CDs are pressed from a digital, glass master and then sealed. In the case of blank CDs, the information is burnt onto the CD with the laser of the CD-Rewriter. These disks are more sensitive to environmental conditions than normal CDs. Please avoid the following when using recordable/rewriteable disks – especially blank CDs that have never been used before:

- radiation by direct sunlight (UVA/UVB)
- scratches and damage to the disk surface
- extreme temperatures

COLORS OF BLANK CDs

Blank CDs have a reflective layer (silver or gold) and a colored synthetic layer that is initially transparent. This synthetic layer is available in green or blue. The laser ray reflected back from the reflective layer hits the synthetic layer and “burns” it, making it impassable for the laser ray. This is how the information is imprinted onto the blank disk.

There is no one answer to the question about which color combination is best to use for a blank CD. The writing device (CD-Rewriter) and the reading devices (CD-ROM, hi-fi CD-player, Discman etc.) must be compatible. If you have problems reading a particular type of CD, we recommend you try a CD with a different colored synthetic layer.

WHAT TYPES OF CDs CAN BE COPIED?

CD-ROM, CD-R and CD-RW drives have technical limits. Copying all CDs perfectly is simply not possible. The source CD-ROM drive and source CD both can cause problems in duplication. We therefore recommend that before you permanently copy a CD you select the **Simulation** option. This process does a test run of the reproduction before attempting to burn data onto the CD.

Even if you use the simulation option, it is possible to make a damaged copy of a CD without an error message being displayed. This can occur if there is data or other information to protect against the CD being copied "hidden" between the tracks of the source CD. Using the software included with your Notebook, however, can help you make backup copies of almost any CD type.

The following table contains a list of CD types that can be copied, and some remarks on how to make backup copies.

CD-Type	Comments
Audio	If your drive is not a CD-R or a CD-RW drive, a source CD-ROM drive is required which can read digital audio data. Not all drives support the extraction of digital audio data. You can copy audio CDs in "Disk-at-Once" mode if the source CD-ROM drive is fast enough.
Boot-CD	Using the software included in delivery, you can make bootable CDs.
Data-CD 1/2 ISO 9660 Joliet	If no special formatting or methods to prevent copying have been used, it should be possible to copy this format without any problems.
Extended play CDs	CDs with a capacity of up to 80 Min./700 MB can be generated. Not every drive works perfectly with these CDs.

CD-Type	Comments
Mixed Mode	Some CDs can be copied without problems, others cannot. This might be because the formatting does not permit copies of CDs to be made or because of deviations from the standard. Some CDs do not comply with the standards.
PSX-CD	Playstation™ games are supported.
UDF (Packet Writing)	Some CD-ROM drives cannot read UDF-CDs. If the CD-ROM drive is able to read Multi-Session-CDs, there shouldn't be any problems. This format requires the nero – InCD program.

WHAT DOES ... MEAN?

Boot-CD	See  El Torito
Buffer Underrun	Due to an empty intermediate buffer, the continuous flow of data to the CD-RW has been interrupted and as a result data has been lost.
CD-Extra	CD-Format that contains audio and data-tracks. As the audio data is at the beginning, audio CD players can also play these CDs.
CD-R	Recordable CD
CD-RW	Re-writeable CDs
Disk at once (DAO)	Writing the data in one process. This is important for copying music CDs so they are true to the original.
El Torito	Required for Boot CDs. If a CD has been formatted with this format, a PC can be booted from this CD if it has the appropriate BIOS settings. It does not support long filenames.

Extraction	(Audio-) Taking digital audio data from a CD-ROM drive.
Finalizing	If an audio CD has not been finalized, the CD can only be played back in the CD-Rewriter. Hi-Fi players cannot play back CDs that have not been finalized.
Fixing	In contrast to finalizing which finalizes the entire CD, fixing is restricted to one session .
Hybrid-CD	Format with two data systems: HFS (Apple Mac) and ISO 9660 (other OS')
HFS	Hierarchical File System for Apple MacOS.
Image	Image of a CD or a partition structure.
ISO 9660	CD-ROM file system specified in 1984: Level 1 = 8.3 name convention (ABCD1234.EXT) Level 2 = 8.3 name convention + special signs Level 3 = up to 128 digits
Joliet	ISO 9660 -Format extended by Microsoft. File names up to 64 digits whereby this extension is only visible under Windows®9X/NT. Other systems only see the ISO 9660 -Format.
Lead-In / Out	- Marks the physical start and end of a session . The TOC is saved in the Lead-In area.
Mixed Mode	A CD containing both data and music tracks, whereby the data is contained in the first track and the music is contained in the second track.
MP3	MP3 (MPEG3) is a compression procedure that reduces a CD music track to approximately one tenth of its original size. Files which have been compressed using this procedure can usually be recognized due to their file extension *.mp3. To play back these files you need a software decoder. A conventional CD player is not capable of playing back these music tracks.

Multi-Read	CD-drives that have this capability are able to read CD-RWs. This is achieved by amplifying the laser unit.
Multi-Session	See Session ; To access other sessions of a CD click the right mouse button on the appropriate CD-ROM drive in Windows Explorer and select "properties". You can select a session from the file card "data carrier".
On the fly	This write procedure does not create an Image -file. A small project file with file references is used to write the CD. To be able to do this, you need a fast computer.
Packet Writing	The CD is treated like a hard disk. You can save (write) the data from an application directly onto the CD. This only works from Windows®95 or higher. Another pre-condition is that the first track of the CD contains an UDF -driver. This driver is loaded automatically when the CD is inserted into the drive.
PSX-CD	CD for the Sony™ Playstation™. To operate the PSX-CD backup copies, the Playstation™ must be equipped accordingly.
Sector	Smallest addressable unit of a CD.
Session	A session includes all data that has been burnt onto the CD in one writing process. Only one data track can be written per session, however a number of audio tracks can be written. Every CD can have a number of sessions, but these CDs can only be read by devices capable of reading multi-sessions.
TOC	(Table of contents) Directory of tracks .
Track	On a music CD, one track is equivalent to one song. In the case of data it is a summary of sectors of the same type to record data.

Track at once (TAO)	On multi-session CDs, all tracks are written onto the CD in one working process. The • TOC and the connections are written between the data blocks and cause a pause of approximately 2 seconds between the songs.
UDF (Universal Disk Format)	Platform-wide CD file system which is used in the • packet writing process. The required UDF driver is always loaded from the CD and makes it possible for CD writers and CD-Rewriters to access the CD as it would a hard disk.
Extended play CDs	By reducing the distance between tracks, the capacity of a CD can be extended. You require special CD blanks (80 Min./ 700MB) and a re-corder, as well as matching software that supports this. The products included in delivery are capable of these tasks.
Unicode	16-Bit-digit set. The standard ASCII-set of signs is saved in 8 Bit mode and therefore has a limited scope, for example no Arabic letters.

THE SOUND CARD

Your Notebook has an integrated stereo sound card (on-board) with 16-bit and 3D spatial sound effects (3D). The sound card is compatible with the industry standard **Sound Blaster** and **Microsoft Sound System Version 2.0**. This guarantees optimal support for all popular programs and games.

If you wish to alter the base volume, click on the loudspeaker symbol in the task bar. A double click opens the sound mixer.

EXTERNAL AUDIO PORTS

Line In	For recording via an external audio source. (It is set through the audio properties) (⇒ p. 20)
Microphone	For recording via an external microphone. (It is set through the audio properties) (⇒ p. 20)
Line Out SPDIF optional Headphone Speakers	For sound reproduction via external stereo equipment such as loudspeakers or headphones. Connection to a sound system (analog/digital*) is also via this output. The notebook automatically recognizes if an analog (3.5mm stereo plug) or a digital (optical) link has been created. The internal loudspeakers are switched off when this port is used. (⇒ p. 20)


Your Notebook has a loudspeaker, so you can always playback sounds without additional equipment. The connection of a Hi-Fi system increases the sound quality significantly.

If the external audio links have a dual function, then your notebook is equipped with a surround sound system. The bundled software allows you to make the necessary settings:

1. Click the following symbol in the taskbar:



The help program for the audio configuration is now invoked. A large number of settings can be carried out with this. It is also used to set the loudspeaker configuration you are going to use for the surround sound. Click the "Sound effect" tab to set the system for your needs.

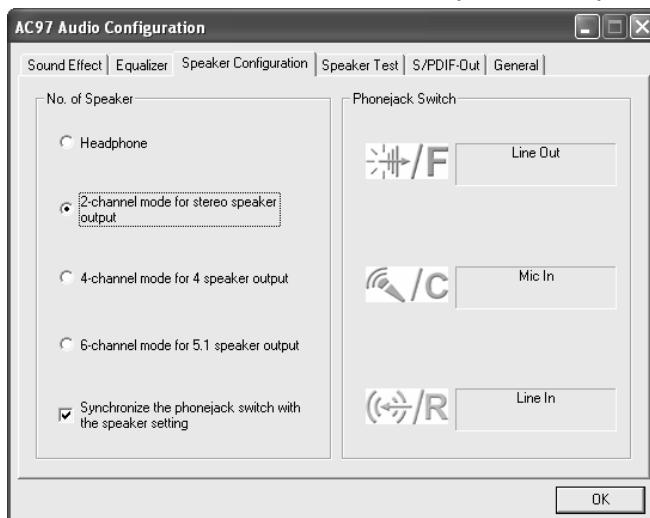

Four configurations modes are available to you:

- **headphone**
- **2-channel mode for stereo speaker output**
- **4-channel mode for 4 speaker output**
- **6-channel mode for 5.1 speaker output**

Your notebook is factory set to 2-channel mode.

MODEM

The modem is fitted with an RJ-11 interface, into which a standard telephone lead can be plugged. If your modem is a combo card please make sure that it is used only with the appropriate port.



WARNING! Use only with an analog telephone line. The modem cannot withstand the voltage levels of digital telephone systems such as PBX or lines such as ISDN or Broadband services.

MODEM PORT

Insert one end of the RJ11-connection (Western plug connector) into the modem/network interface and the other into an analogue telephone socket that is easily accessible.



NOTE: Do not place the Notebook in Suspend (or Sleep) mode if you are connected to your Internet provider, since this will cause the modem connection to be lost.

THE NETWORK

WHAT IS A NETWORK?

A network means connecting your Notebook to one or several other computers. Users can transfer data between computers and share resources such as printers, modems and hard disk drives.

Here are some practical examples:

- You can exchange E-mail and manage appointments in an office.
- Users can share a printer in a network and save their data on a central server.
- Users can share one modem or one ISDN card among computers for Internet access.
- Two or more computers can be connected to play network games or share data.

FAST ETHERNET-NETWORK

If your Notebook is provided with a Fast Ethernet-Network connector, you can connect it to a network. The following explanation refers to Notebooks with a network connector. You will find further information about networking in the **Help** section within the **Start** menu.

WHAT DO YOU NEED FOR NETWORKING?

Some requirements have to be fulfilled to successfully network computers:

1. The Notebook must have a network card that supports the same network technology as the other computers on the network. Unless otherwise quoted, your Notebook will support the current **Fast Ethernet** (10/100 Mbit) standard.
2. The network cards must be connected. You need a Shielded Twisted Pair-cable (CAT5) that has an **RJ-45**-connector.
 - If you want to directly connect two PCs you need a **Cross-Link** cable.
 - If more PCs must be connected you need a supplementary distributor (**Hub** or **Switch**) and a Patch cable.
3. All connected PCs need a network **operating system**. Windows® can act as a network operating system.
4. All networked PCs must speak the same "language" to understand one another. They use protocols for this purpose. The setting of protocols, therefore, must be the same for all networked PCs.
5. The correct protocols must be enabled to make shared access possible. This requires the installation of the server „**File and printer release for Microsoft® networks**“. It is also factory installed.
The release is awarded on the PC where the resource (folders or printers) are located.
Here the release name or, if necessary, a required password can be determined.
A successful release is indicated by a stretched out hand below the icon.
6. The released resources can be shown and linked via the network environment.

TROUBLESHOOTING WITHIN THE NETWORK

- ① Why does the network environment not show the releases?
- ② The network environment is delayed in time. Check the release by searching for the respective **computer name**.
- ③ Why does an error message appear when I click on the network environment?
 - ④ The **computer name** must be unique on the network and may not be the same as the **task group**.
- ⑤ It appears that the network boards are unable to communicate. What might be the problem?
 - ⑥ Maybe one of the used network boards works with a **different speed** (e. g. 10 instead 100 Mbit) and your network computer is unable to recognize this. If necessary, set the network driver to the compatible speed.
If two PCs should be linked you require a **cross-link cable**, otherwise use a **patch** cable.
In addition, check the **protocols** and the **configuration**.
- ⑦ The data transmission is incorrect or very slow. What might be the problem?
 - ⑧ Maybe you have the wrong cable (UTP / CAT3 or lower) or the problem is the proximity of a power cord or another source of interference.

For further hints on troubleshooting refer to the Windows help under „**Network errors**“.

WIRELESS LAN

Wireless LAN is an optional feature. This function allows you to create a wireless network link with a corresponding partner.

CONDITIONS

The partner used can be a so-called **LAN access point**. An access point is a wireless transmitter that communicates with your notebook and controls access to the network connected.

LAN access points are often found in large offices, airports, universities or Internet cafés. They offer access to enterprise services and networks or to the Internet. **Access authorizations** are normally needed. A toll is normally payable for these.

Access points often have an integrated DSL modem. These so-called **routers** create the link to the existing DSL Internet connection and the wireless LAN.

A link to another terminal with wireless LAN functionality can also be created **without an access point**. However, **without a router** the network is limited to directly connected devices.


The wireless network link works according to standard **IEEE 802.11b**. Other standards (802.11a, 802.11g etc.) are not supported.

If encrypted transmission is used, this must operate according to the **same principle on all devices**. Encryption is a method of protecting the network from unauthorized access.

The transmission speed (max. 11 Mbps) can vary according to the **distance** and **loading** of the partner.

CONFIGURATION EXAMPLE


To configure a wireless network link deactivate the "Use Windows to configure settings" option in the sub-menu under **Network** characteristics of the **Control** panel, in order to be able to use the extended setting options of the WLAN software.

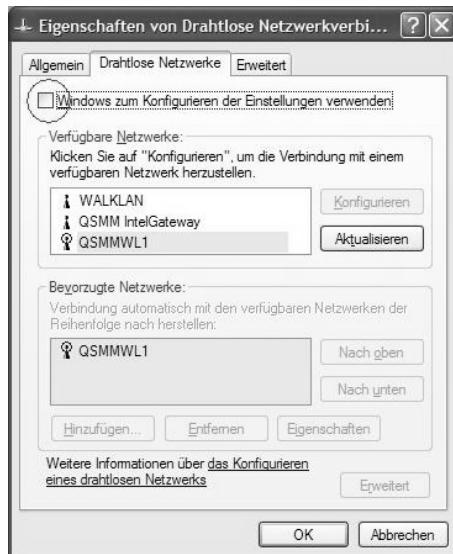

To start the software click the following icon in the taskbar:




PRISM Wireless Settings - Status

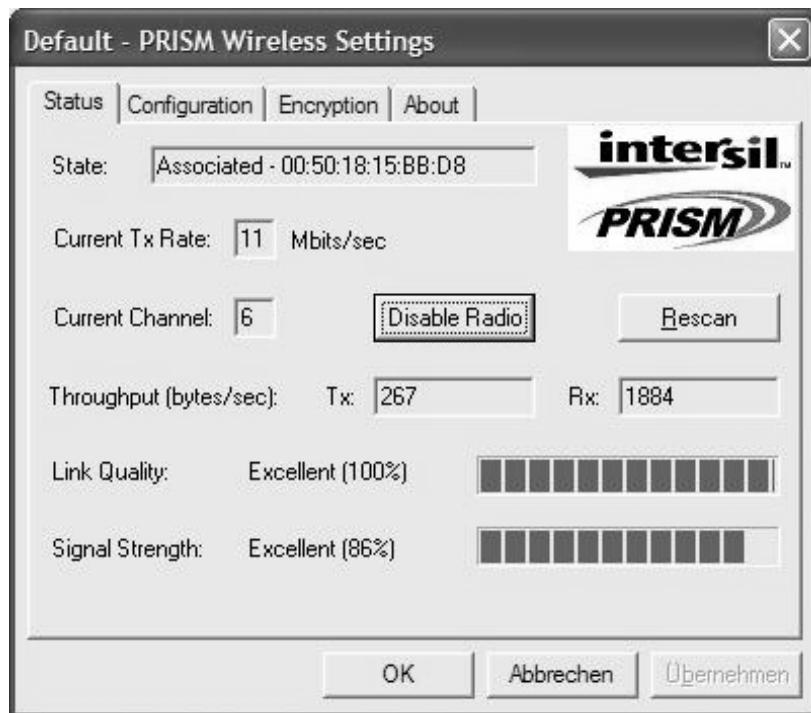

Function	Description
State	Information on the link to the next access point
Current Tx Rate	Indicates the current transmission speed
Current Channel	Indicates the current connection channel
Disable Radio	Use this button to enable/disable the WLAN connection.
Rescan	Scans all available channels for possible network connections
Throughput	Data throughput in bytes/second
Link Quality	Indicates the quality of the link between the wireless LAN card and the access point.
Signal Strength	Indicates the strength of the signal between the wireless LAN card and the access point.

PRISM Wireless Settings - Configuration

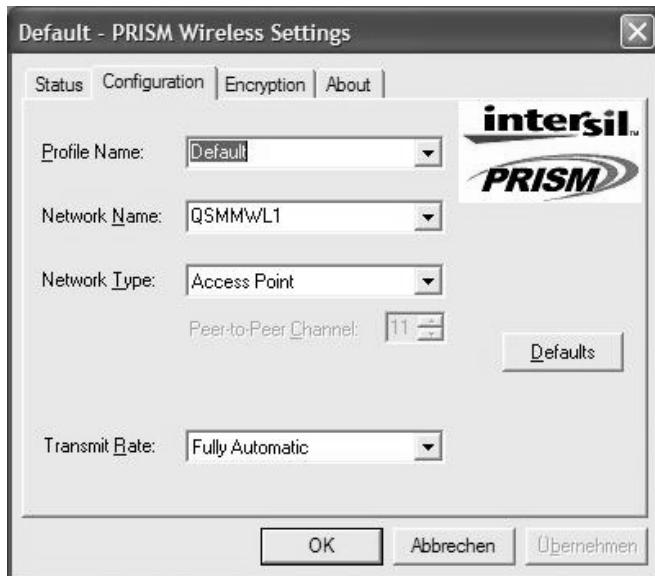

Function	Description
Profile Name	Use this to save the profile corresponding to your wireless network links
Network Name	Use this to enter the names of the networks with which a link is to be created
Network Type	Network link setting. Either to an access point or as peer-to-peer (direct link to another PC).
Peer to Peer Channel	Selects the corresponding channel for a peer-to-peer link.
Defaults	Resets the setting to the defaults
Transmit Rate	Sets the various transmission speeds

PRISM Wireless Settings - Encryption



Function	Description
Encryption (WEP security)	Sets the type of encryption that is already stored at the respective access point. "WEP" is a data encryption that prevents unauthorized access to your wireless network.
Create Keys Manually	Enter 4 different keys, either alphanumeric or hexadecimal.
Use WEP Key	Select the respective WEP key

MEMORY CARD CONNECTIONS

Memory cards are media that are being used, by way of example, in digital photography, and are increasingly replacing the floppy disk as a medium. The form and capacity of a memory card can vary according to the manufacturer.

Your notebook supports the following formats:

- MMC (MultiMediaCard)
- SD (Secure Digital)
- Memory Stick
- SmartMedia
- CF (Compact Flash)
- IBM® Microdrive

When inserting memory cards, ensure that the contacts are facing the right way. See table below. Incorrect insertion of a card can cause damage to the card reader and/or the card.

Slot	Card type	Contacts
4 in 1 (⇒ p. 20)	SD (Secure Digital) MMC (MultiMediaCard) SmartMedia Memory Stick	pointing down pointing down pointing down pointing up
CF (⇒ p. 20)	CF (Compact Flash) IBM® Microdrive	pointing forwards pointing forwards

INSERTING MEMORY CARDS

- Memory cards can only be installed in **one direction**. Refer to the instructions on the previous page.



REMOVING MEMORY CARDS



THE PC CARD SLOT

The PC card slot (⇒ p. 20) of the Notebook can be used to operate credit card-sized PC cards. Most PC cards are communications or interface devices such as ISDN-, Faxmodem-, Network- or SCSI-adapters.

Some PC cards contain memory chips or hard disks for data storage.

If you use such cards with your Notebook, the system assigns the card a drive name, so that you may access the resources.

The PC card drive in your Notebook supports PCMCIA 2.1 - (Type II), and CardBus cards.

32-BIT CARDBUS PORT

CardBus cards have a 32-bit architecture with which high data transfer speeds of up to 132 MB can be achieved, similar to PCI. Use the bottom, slot 1, for this purpose. In this way your Notebook can also support data intensive devices such as 100Mbps Fast Ethernet, Fast SCSI peripherals and video conferencing devices.


The CardBus port is backward compatible with 16-bit PC cards with a 5V power supply, though the CardBus only requires a power-saving 3.3V.

USE OF PC-CARDS

In order to run a PC card, special software is needed (drivers, etc.). The card manufacturer usually supplies this software. Support for the card port is a component of Windows® and at present represents the optimum in operational smoothness. You should consider this point when choosing between alternative operating systems.

INSTALLING A PC CARD

Follow the PC card installation instructions that are given for use under Windows® and have the necessary driver software ready.

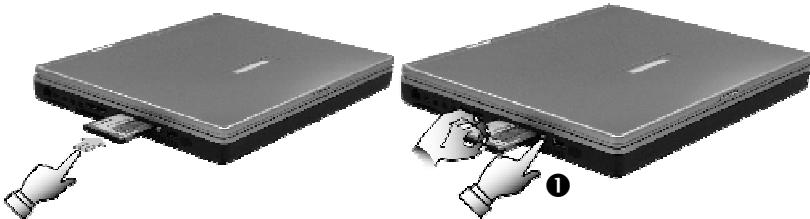

Once you have started Windows®, slip the card carefully into the slot provided.

When the card is fully inserted two audible signals will be heard, provided it has been correctly recognized and successfully configured. If only one signal is heard, this signifies a problem with the card recognition. In this case, follow the instructions that accompany your new PC card.

REMOVING A PC CARD

To remove your PC card:

1. In **System Properties** start the program \Rightarrow **PC Card (PCMCIA)**.
2. Stop the card to be removed.
3. Wait for confirmation from Windows®.
4. Press the corresponding eject button (①) next to the slot.

CONNECTION OPTIONS

The Notebook has a number of input and output interfaces for connection of peripheral devices such as a printer, scanner, keyboard, and so on. This section presents the individual ports. For further information, refer to page 21, where the positions of the respective ports are described.

SERIAL INTERFACE

The 9-pin serial interface is used as the port for serial devices such as modems, card readers or mice. The interfaces are addressed as **COM1** and are FIFO 16550-compatible.

UNIVERSAL SERIAL BUS PORT

The Universal Serial Bus (USB) is the newest standard for connecting input devices, scanners and other peripherals. On the USB port it is possible to connect up to 127 devices that correspond to the USB standard.

Devices connected directly to the USB bus should not draw more than 500 mA. Should the devices need more power than this, it will be necessary to provide a hub (distributor / booster). The data transfer speed is 1.5 Mbit or 12 Mbit, depending on the device connected.

PS/2 INTERFACE

This port is used to connect devices that use the PS/2-Standard, such as keyboards and pointing devices.

IEEE 1394 (FIRE WIRE)

The IEEE 1394 connector, also known as iLink® or Fire Wire is a serial bus standard used for fast digital data exchange.

APPLICATION OPTIONS FOR IEEE1394

- Connection of digital devices of the entertainment industry, such as set-top speakers, digital video and camcorder, 'Digital Video Disk' (DVD), television etc.
- Multimedia applications and video processing.
- Input and output devices such as printers, scanners, etc.

TECHNICAL SPECIFICATIONS

- Depending on the application, the maximum data transfer is about 100, 200 or 400 Mbit/s, corresponding to a data throughput of up to 50 MB per second.
- The device can be plugged in or unplugged during operation (hot plugging).
- The standardized cord ('Shielded Twisted Pair' - STP) includes 6 strands. Two lines are live (8V up to 40V, 1.5 A max.) and can be used as an external power supply. The four signal lines transfer data or control information. Some devices do not require a power supply via the cord so that four pole plugs are used.
- The voltage output of the 6-pole IEEE 1394 jack is protected by a fuse (limited power source according to EN60950).

INFRARED INTERFACE

The infrared port is located on the left side of the Notebook (⇒ p. 20). The IR port corresponds to the "IrDA Serial Infrared Data Link Version 1.1" standard. It is used for wireless point-to-point communication.

You can use SIR/FIR applications in order to exchange files with other devices which are IR-aware.

At present, the interface can be used to link up with other computers, peripherals and a number of PDA's (**P**ersonal **D**igital **A**ssistants). The Notebook identifies the infrared port as a serial port.

INSTRUCTIONS FOR USING THE IR PORT

When using IR be sure to follow these instructions:

- Make sure that the desired IR mode has been set in the BIOS set-up.
- The angle between the two IR ports should not be greater than $\pm 15^\circ$.
- Align the devices in such a way that the two infrared interfaces are at the same height and exactly opposite each other.
- Distance between devices should not be more than 1 meter.
- Do not move either of the devices during IR data transfer.
- In environments with a lot of noise or vibration, data transfer may be defective.
- Keep a safe distance from direct sunlight, lightning, incandescent and fluorescent light and other infrared devices such as remote controllers.



IMPORTANT: If you do not require the infrared for long periods, please deactivate the infrared function in the system control in order to save on Windows resources.

SOFTWARE

This section deals with software, differentiating between BIOS, application programs and operating systems.

GETTING TO KNOW WINDOWS XP

Windows XP offers different options to understand its operation. We will mention only a few of those options here:

WINDOWS XP HOME EDITION – FIRST STEP

This manual will provide general information about the operating system. We recommend that all beginning users or users of previous versions of Windows read this information.

WINDOWS^{XP} HELP AND SUPPORT

An answer to almost every question can be found in this program. You'll find it in the Start menu or you can launch it by simply pressing the F1 key.

MICROSOFT INTERACTIVE TRAINING – STEP BY STEP

Training is the best way to get skills that help you to perform tasks safe and effectively. You'll find it in **"All Programs"**, **"Accessories"**. It is also linked to **"Information about your PC"**. This is a very good feature.

INSTALLATION OF THE SOFTWARE



Note: If your operating system is configured so that the installation procedure accepts only signed drivers and software an information screen will appear. Confirm by clicking on **"Continue"**.

The software included with the Notebook was pre-installed at the factory.



WARNING! During software installation important files can be changed or deleted. To avoid problems in using older files after installation, make sure to safeguard your hard disk.

THIS IS HOW TO INSTALL YOUR SOFTWARE:


Please follow the instructions provided by the software vendor. We will describe a typical installation. Once you insert a CD, the installation menu is started automatically.



Note: If the installation program does not automatically start when the installation CD is inserted, it is likely that the **Autorun** function has been deactivated. Refer to Windows Help to activate this function.

To perform an installation without the Autorun function:

1. Open the **Start** menu and select  **Run...**
2. Now enter the letter of the CD-ROM drive followed by a colon and the setup program's name.

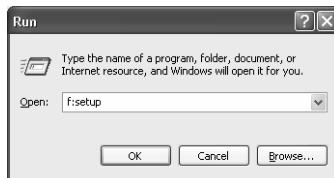

3. Click on "OK".
4. Follow the instructions given by the program.

WINDOWS ACTIVATION

Microsoft is committed to the protection of intellectual property rights and the reduction of software piracy. Windows XP contains software-based product activation technology. Your copy of Windows XP has already been activated for your Notebook. However, product activation is needed if some components of your Notebook have been replaced or you use non-authorized BIOS. If necessary, you can activate Windows XP as often as needed. You will probably need to activate Windows XP by telephone even if Internet Activation is available. This is due to the pre-activated SLP version that runs with a special Product-ID. However, activation needs your unique Product ID that can be found on the **Certificate of Authenticity** sticker on your Notebook housing. When you call, please inform the agent that you are running an OEM (SLP) version of the software.

THE BIOS SET-UP-PROGRAM

In BIOS setup (Basic Configuration) there are a number of configurable parameter settings available for your Notebook. For example, you can change the operating mode of the interfaces, security features or power management.



WARNING! The Notebook is factory pre-set to guarantee optimum operation. Only modify the parameters if necessary and if you are familiar with the configuration options.

RUNNING THE BIOS SET-UP

You can only run the BIOS configuration program at system start-up. If the Notebook has already started, power it down and then up again. Press the **F2** function key in order to start the BIOS-SET-UP.

NAVIGATING THE BIOS UTILITY

There are six menu options: System Information, Basic System Settings, Start up Configuration, Onboard Devices Configuration, System Security and Load Default Settings.

To enter a menu, highlight the item using the cursor up/down keys; then press **Enter**.

While in a menu, follow these instructions:

- Press the cursor up/down keys to move between parameters.
- Press the cursor left/right keys to change the value of a parameter.
- Press Esc while you are in any of the menus to return to the main menu.



Note: If you are unsure if your parameter settings are correct, you should load the "**Set-up-Defaults**".

CUSTOMER SERVICE

DATA AND SYSTEM SECURITY

The programs described below are part of your Windows operating system. You will find additional information on these programs in the Windows Help file.

DATA SECURITY

Back up data regularly on external media such as a CD-R or CD-RW. Windows offers both a **Backup** program and a **Files and Settings Transfer Wizard**.

Both programs are found in **Accessories/System Tools** within the Start menu. You should make a backup disk with all your passwords and the operating system's original configuration.

MAINTENANCE PROGRAMS

You can avoid some hardware and software errors with disk maintenance programs such as **Disk Defragmenter** and **Disk Cleanup**. The program **System Information** can also be helpful since it gives you detailed information about your system configuration. You will find these programs in **Accessories/System Tools**.

PASSWORD RESET DISK

To protect individual user accounts from complications resulting from lost passwords, users should create a password reset disk and keep it in a safe place. Windows Help describes how to create a password-reset disk.

SYSTEM RECOVERY

Windows^{XP} provides a useful function enabling the storage of the so-called **Recovery points**.

The system remembers the current configuration as a snapshot and returns to this, if necessary. The advantage is that an unsuccessful installation can be cancelled.

Recovery points are created automatically by the system, but they can also be set manually.

You can determine and configure yourself the maximum memory taken up by this. You find this program in the program file under **accessories, system programs**.

We recommend setting a **recovery point** before installing a new software or driver. If the system does not run stable any longer this enables you usually to return to a workable configuration without deleting newly created documents. In the next paragraph read your options for a repair of an incorrect installation.

CORRECTION

Windows^{XP} includes various functions ensuring that the PC as well as the installed applications and devices work correctly.

These functions assist you in solving the problems which might occur by adding, deleting or replacing files required for the functionality of the operating system, the applications and devices.

The recovery function or functions you use depend on the type of occurring problem or error. For detailed information refer to the Windows help.

Enter the search word „**Overview over the repair**“ in order to evaluate which of the following functions is the safest way to correct your problem:

- Backup
- Recovery of the driver
- Deactivation of the device
- System recovery
- Last function known to work
- Secured mode and system recovery
- Recovery console Windows installation CD

RESTORING THE FACTORY SETTINGS

Should your system not function correctly, you have the opportunity to recover the original set-up.

LIMITS OF THE RECOVERY

- Changes made to the original configuration (RAS, Desktop or Internet settings) and installed software will be ignored by recovery and will not be reloaded.
- Driver Updates or hardware installed by you will be ignored by this Recovery.

This recovery will reset your system to its condition when purchased. Printer installations or other additional software must be reinstalled.



WARNING! All data on drive C will be erased if recovery is used. If necessary, backup all required data on drive D.

Attention! If you delete the directory **E:\Recover** or the files located there a recovery is no longer possible. For safety reasons you can copy the file **RETTEM.EXE** and all other **RETTEM.00X** files to a CD-ROM.

PERFORMING A RESTORE

1. First, please read the entire **Restore** section of the Windows Help file.
2. Insert the Support-CD and reboot the Notebook.
3. Select the option **Start from CD-ROM**.
4. In the restore menu that now appears, please select option **1**.
5. Follow the on-screen instructions.

The Notebook restarts with its original factory settings.

FAQ – QUESTIONS FREQUENTLY ASKED



When do I have to activate Windows?



Your software has been preactivated in the factory.
An activation will only be required, if ...

... several components are replaced by others.

... your installed a new motherboard.

... a different BIOS version has been installed.

... you install the software to another computer.



What is the Windows activation?



Your operating instructions include a chapter about this subject.



How do I perform a data backup?



Use the program Backup for this.

It is important that you follow the operating instructions of this programs.

Make a backup and another backup of selected data to an external medium (CD-R), to familiarize yourself with the technique.

A backup is unsuitable if you are not able to recover the data, the medium (floppy disk, CD-R) is defective or no longer available.

- ① Do I still have to install the enclosed CDs/DVDs?
 - ! No. Basically all programs are already preinstalled.
The disks are only intended as backup copies.

- ② When is the recovery of the factory setting recommended?
 - ! This method should be chosen as the last resort.
Read chapter „**System recovery**“ on page 78 concerning the alternatives possible.

- ③ Why is the boot partition missing when booting from the support/ application CD?
 - ! The first partition is formatted with the file system NTFS. Compared to FAT32 this file system offers more security and a more efficient access. However, NTFS partitions can only be read from operating systems supporting this. This is not the case in the aforementioned CD.

TROUBLESHOOTING

LOCALIZE THE CAUSE

Errors can have simple causes, but sometimes they are caused by faulty equipment. We would like to give you some tips to help solve common problems. Should these instructions not lead to success, please feel free to call us.

CHECK CABLES AND CONNECTIONS

Visibly check all cables and connections. Should all lights be off, check whether all equipment is supplied with power.

- In battery mode, connect the Notebook to the power adapter and ensure that the battery is charged up.
- If you are operating the Notebook with the power adapter, check the electrical socket, power cord and all switches in the circuit of the electrical socket.
- Switch off the Notebook and check all cable connections. Check the connections to peripherals. Do not exchange cables, even though they may look similar. The polarity in the cables may be different. When it is confirmed that the computer has power and all connections are correct, turn the computer on again.

THE POWER ON SELF TEST (POST)

The Power On Self Test (POST) is executed during each boot process to test the memory, motherboard, display, keyboard and other components. If the Notebook does not pass the POST but beeps several times, or if the screen remains blank, call your Notebook support technician.

ERRORS AND POSSIBLE CAUSES

The display is blank:

- Confirm that the system is not in stand-by mode. Press any key on the keyboard to test this out.

Wrong Date and Time:

- Double-click the clock on the taskbar and correct the date and time.

No data can be accessed from the optical Drive:

- Check whether the CD is inserted correctly.
- Is the CD-ROM (Drive E) displayed in Windows Explorer? If so, test another CD.

The Printer does not work:

- Check the printer cable.
- Do a Printer Self Test.
- Should several pieces of equipment be operating from the same port, check all peripherals and reinstall the drivers.
- If you have access to the Internet, download and install the latest drivers from the manufacturer's Web site.

The mouse or touch pad does not work.

- Check the cable connection.
- Check to see if the mouse works in another application program and if there is a problem of compatibility between the mouse (e.g. Microsoft Intellimouse) and the touch pad.

ADDITIONAL SUPPORT

If the suggestions in the above section have not solved your problem, please contact the customer service hotline and we will attempt to help you solve the problem. Before you call, however, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- Have you upgraded or removed drivers or hardware?
- Can you manually repeat the problem?
- If you have been given a customer number previously, please have this available.

DRIVER SUPPORT

This Notebook has been extensively tested in our laboratories with a large number of compatible devices. It fulfils all required standards and complies with the standard "Designed for Windows", which certifies utmost compatibility. However, the software drivers for individual components are updated from time to time. This is a regular process provided by the manufacturer to mend possible compatibility problems that may occur with components (e.g., programs or hardware) that were not tested at the time of your Notebook's manufacture. Driver updates and the latest information on your product are available on the Internet.

 Visit Medion on the Web at
www.medion.com

INDEX

4 in 1 card reader	20
ACPI	35
Ambient temperature	5
APM	35
Audience	1
Audio CDs	50
Autorun	74
Battery operation	8, 32
Battery power	34
Charging the battery	33
Removing the battery	33
Battery power	34
BIOS Setup-Program	76
BIOS Utility	
Navigating	76
Boot-CD	50, 51
Buffer Underrun	51
Cabling	9
CardBus	68
Care of Displays	17
CD-blanks	49
CD-Extra	51
CD-R	51
CD-ROM	45
CD-Rom-/DVD-Drive as bootdrive	46
CD-RW	51
CF	66
CF card reader	20
Charging the battery	33
Checking the battery level	34
Cleaning agents	17
Cleaning and Care	17
Colours of the CD blanks	49
COM1	70
Compact Flash	66
Connect	
TV set	38

INDEX (CONTINUED):

Connection options	70
Connectors	
4 in 1 card reader	20
CF card reader	20
IEEE 1394	20
Monitor	21
PC-card slot PCMCIA	20
PS/2 Port	21
S-Video TV port	21
Customer service	77
DAO	51
Data and System Security	77
Data entry	39
Data security	77
Data Security	3
Data-CD	50
Declaration of Conformity	15
Directories	42
Disc-drive	45
Disk at once	51
Display	37
Wireless LAN	23
Display catch	20
DVD-Drive	45
DVD-Video	48
Electrical Safety	13
Electromagnetic Compatibility	12
EMC	12
Ergonomics	13
Extended play CDs	54
External audio ports	
Line In	55
Line Out	55
Microphone	55
External Monitor	21, 38
FAQ	80
FCC Compliance Statement	14
Finalising	52

INDEX (CONTINUED):

Fixing.....	52
Front View	20
Hard Drive.....	41
HD.....	See Hard Drive
HFS	52
Hotline	84
Hybrid-CD	52
IBM® Microdrive	66
IEEE 1394	20
Image	52
Included with your notebook.....	2
Indicators.....	19
Infrared interface.....	72
Inserting memory card.....	67
Installing a PC card.....	69
Instructions on using the Touch pad.....	9
Introduction.....	1
ISO 9660.....	50, 52
Joliet.....	50, 52
Keyboard.....	39
Laser Radiation	11
Lead-In / -Out.....	52
Left Side.....	20
Line In	55
Line Out	55
Main components.....	41
Mains operation.....	31
Maintenance programs	77
Memory.....	22
Memory card connections	66
Microphone.....	55
Mixed Mode	51, 52
MMC	66
Modem.....	9, 57
Port	57
Mouse	40
MP3	52
MPEG2	48

INDEX (CONTINUED):

MultiMediaCard	66
Multi-Read.....	53
Multi-Session	53
Network	
LAN Access Point.....	61
Troubleshooting	60
What do you need for networking?.....	59
What is a Network?.....	58
Wireless LAN.....	61
On the fly.....	53
On/Off switch	31
Open Notebook	19
Operational safety	4
Packet Writing	53
Password reset disk	77
PC card Slot.....	68
PC-card slot PCMCIA.....	20
PCMCIA.....	68
Playstation	53
POST	82
Power	35, 36
Power Management Utility	19, 25, 35, 36
HighPerf.....	36
MaxPerf	36
MaxSaving.....	36
MediumPerf	36
Power On Self Test	82
Power ON/OFF	19
Power supply	31
Battery operation	32
Mains operation.....	31
PS/2 Port	21, 70
PSX-CD	51, 53
Quality.....	1
Questions frequently asked.....	80
Reflection layer	49
Removing a PC card.....	69
Removing memory cards.....	67

INDEX (CONTINUED):

Removing the battery.....	33
Repairs.....	10
Restoring Factory Settings	79
Running the Bios Setup	76
Safety Instructions	
Battery operation.....	8
Cabling.....	9
Connections	17
Safety Instructions.....	
Modem	9
Screen resolution.....	37
SD	66
Sector	53
Secure Digital	66
Serial Interface	70
Serial Number.....	2
Service Engineers	11
Session	53
Set-Up Location.....	9
Sound Card.....	55
Standards	
Electrical Safety.....	13
Electromagnetic Compatibility.....	12
Ergonomics	13
FCC Compliance Statement.....	14
Standby mode.....	36
Start-up	27
Surround sound system.....	56
S-Video TV port.....	21
Synthetic layer	49
System Recovery.....	78
Table of contents	53
TAO	54
TOC	53
Touch pad	9, 19, 40
Track	53
Track at once	54
Transport	18, 43

INDEX (CONTINUED):

Troubleshooting	78, 82
Types of CDs	50
UDF	51, 54
Unicode	54
Universal Disk Format	54
Universal Serial Bus	70
Upgrades and Repairs	10
USB	70
USB memory stick	43
First aid	44
Usage	43
USB Memory stick	
Malfunction	44
USB-memory stick	
Write/delete protection	44
Use of PC cards	68
Video-CD	50
Views	19
Front view	20
Left Side	20
Open Notebook	19
Warranty	ii
What is DVD?	47
Windows®-Desktop	29
Wireless LAN	61