

NOTES ON THIS MANUAL

Keep these instructions with your computer at all times. The proper set up, use and care can help extend the life of your computer. In the event that you transfer ownership of this computer, please provide these instructions to the new owner.

This manual is divided into sections to help you find the information you require. Along with the **Table of Contents**, an **Index** has been provided to help you locate information.

In addition, many application programs include extensive help functions. As a general rule, you can access help functions by pressing F1 on the keyboard. These help functions are available to you when you use the Microsoft Windows® operating system or the various application programs.

Windows^{xp} invites you to a **tour** (notes on the task bar) to familiarize yourself with the operating system. We listed further useful sources of information starting on page 54.

AUDIENCE

These instructions are intended for both the novice and advanced user. Regardless of the possible professional utilization, this Notebook is designed for day-to-day household use. The functions and applications for use with this Notebook have been designed with the entire family in mind.

DOCUMENT YOUR NOTEBOOK

It is important to document the details of your Notebook purchase in the event you need warranty service. The serial number can be found on the back of the Notebook:

Serial Number
Date of Purchase
Place of Purchase

QUALITY

Medion has selected the components in this computer for their high level of functionality, ease of use, safety and reliability. Through balanced hardware and software design we are able to provide you with an innovative personal computer useful for applications relating to both work and leisure. We are pleased to welcome you as our newest customer. Thank you for choosing Medion.

SERVICE

Medion is pleased to provide individualized customer service throughout the life of your Notebook. Please feel free to contact a customer service representative with any questions relating to this Notebook.

Copyright© 2005 Medion®. All rights reserved. Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Information in this document is subject to change without notice.

Table of Contents:

SAFETY INSTRUCTIONS	3
Data Security	3
Operational Safety	3
General Safety Information	4
Important Additional Safety instructions	5
CD-ROM/CD-RW/DVD/DVD-RW Drive safety	6
TFT Display Safety	6
Set-Up Location	7
Ambient Temperature	7
Power Adapter	8
Cabling	9
Modem	9
Touch pad	9
Battery operation	10
VIEWS OF THE NOTEBOOK	13
Open Notebook	13
Front and Rear View	14
Side Views	15
Device Indicators	16
Wireless LAN	16
Suspend (Sleep) Mode	16
Battery	16
Hard Drive/Optical Drive Access Indicator	16
Num Lock	16
Capital Lock	16
Scroll Lock	16
GETTING STARTED	19
The Windows® XP Desktop	21
POWER SUPPLY	23
On/Off button	23
Power Adapter	24
Battery Operation	25
Inserting the Battery	25
Removing the battery	25
Charging the Battery	26
Battery Power	26
Checking the Battery Level	27
Power Management	28
Standby Mode	28
Suspend (sleep) mode	28
DISPLAY	29

Opening and Closing the Display	29
Screen Resolution	29
Connecting an External Monitor	29
DATA ENTRY	32
The Keyboard	32
Notebook-specific key combinations	32
Touch pad	33
THE HARD DRIVE	37
Important Directories	38
THE OPTICAL DRIVE	39
CD-RW/DVD-ROM Combo Drive	39
Handling Discs	39
Loading a Disc.....	40
Removing a Disc.....	41
Emergency Ejection of a blocked Disc	41
Playing Music CDs.....	42
Playing DVD Movies	42
Writing Discs.....	42
THE SOUND CARD	44
External Audio Ports	44
MODEM	45
Modem port	45
THE NETWORK	46
What is a network?	46
Fast Ethernet-Network	46
What do you need for networking?	47
Troubleshooting within the Network	48
Wireless LAN.....	49
Conditions	49
THE PC CARD SLOT	50
Use of PC-cards	50
Installing a PC card	51
Removing a PC card	51
CONNECTION OPTIONS	52
Universal Serial Bus (USB) Port	52
IEEE 1394 (FireWire®)	53
SOFTWARE	54
Getting to Know Windows XP	54
Windows® XP Manual	54

Windows® XP Tour	54
Microsoft® Interactive Training	54
Windows® XP Help and Support.....	54
Software Help	55
Device Drivers.....	55
Information about Your PC	56
Digital Signatures	56
Windows Activation	57
The BIOS Set-up-Program.....	57
Running the BIOS Set-up	57
Navigating the BIOS Utility	58
FAQ – FREQUENTLY ASKED QUESTIONS	61
DATA AND SYSTEM SECURITY	63
Data Security	63
Maintenance Programs	63
Password Reset Disk.....	63
Windows® Update	64
Windows Update Information for Data Security.....	65
SYSTEM RECOVERY	66
Restoring Microsoft Windows XP	66
System Restore.....	67
Limits of Restore Factory Settings (Restore option 3)	68
Performing the Restore	69
TROUBLESHOOTING	70
Localize the Cause	70
Check Cables and Connections	70
The Power On Self Test (POST)	70
Errors And Possible Causes.....	71
Additional Support	72
Driver Support	72
MAINTENANCE.....	73
Maintenance Instructions	73
Cleaning and Care	73
Care of the TFT Display	73
Transporting the Notebook	74
Upgrades and Repairs	74
Securing your Notebook.....	75
Setting a User Password	75
Using a safety lock.....	75
Notes for Service Engineers	76
STANDARDS.....	79

Electromagnetic Compatibility 79
Electrical Safety 80
Ergonomics 80
Noise Emission..... 80
FCC Compliance Statement 81
Macrovision Statement 82
Declaration of Conformity 82
WARRANTY..... 84
INDEX..... 87

Safety and Maintenance

Subject	Page
Data Security	3
Set-up Location	7
Ambient Temperature	7
Power Adapter	8
Modem	9
Touch Pad	9
Battery Operation	10

SAFETY INSTRUCTIONS

Please follow the instructions in this section for the safe operation of your Notebook:

- 👉 **DO NOT** allow small children to play unattended with electrical equipment.
- 👉 **DO NOT** open the case of the Notebook, the battery or the power adaptor. When the case is open there is a danger of severe electric shock.
- 👉 **DO NOT** insert objects through the slots and openings of the Notebook. This may lead to electric shock, electrical short-circuit or fire that will damage your Notebook.
- 👉 **DO NOT** cover the slots and openings of the Notebook. These openings are for ventilation purposes. Covering these vents may lead to overheating.
- 👉 **This Notebook is NOT designed for use within industrial environments.**

DATA SECURITY



The supplier does not assume liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or consequential losses.

OPERATIONAL SAFETY

It is important to follow all of the safety instructions in this manual to ensure the safety of you and your Notebook.

GENERAL SAFETY INFORMATION

If you find that:

- the power cord/power adapter is worn or damaged.
- liquid is spilled on the unit.
- the Notebook fails to work properly.
- the Notebook is dropped or the housing is damaged.

You should:

- shut-down your Notebook immediately.
- remove the power cord from the socket.
- contact Customer Service (1-866-633-4660).
- do not restart unless you have contacted Customer Service.

How important is the information you will be storing on your Notebook? You need to guard against the loss of your data by making backup copies. You can backup your data onto CD or DVD, which is dependent on the optical drive configuration of your Notebook and the quantity of data. It is a good idea to backup your data; this is to ensure that you have another copy of your data should something happen to the hard drive.

IMPORTANT ADDITIONAL SAFETY INSTRUCTIONS

When using any electronic equipment, basic safety precautions should always be taken. Following the guidelines below can reduce the risk of fire, electric shock and personal injury:

- Do not use this product near water (e.g., near a bathtub, lavatory or kitchens sink, in a wet basement or near a swimming pool).
- Avoid using a telephone/modem (other than a cordless type) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone/modem to report a gas leak in the vicinity of the leak.



Lithium batteries cannot handle intense pressure, high temperatures or fire. Danger of explosion if replaced incorrectly. Replace batteries with a compatible type as recommended by the manufacturer. Lithium batteries are **hazardous waste** and require proper disposal. Contact the Medion **Service Center** for additional information on battery disposal.

CD-ROM/CD-RW/DVD/DVD-RW DRIVE SAFETY



 
- CD-ROM-/CDRW-/DVD-drives are **Laser Class 1** devices. These lasers **must** remain in their sealed casing.
- **Danger** — Invisible laser radiation when open. Avoid direct exposure to beam. This product is certified by the manufacturer to comply with DHHS rules 21CFR, Chapter 1, Subchapter J, applicable at date of manufacturer. Refer to optical drive labels for additional details.
- **DO NOT** remove the drive covers, as exposure to the lasers may be harmful.
- **DO NOT** look directly into the laser, even when wearing eye protection.

TFT DISPLAY SAFETY



- To avoid damage to the TFT Display, **never** open it a **full 180°**. **Do not** forcibly open it.
- In order to avoid damage to the display, **do not** touch it with your fingers or sharp objects.
- **Never** lift the Notebook by the TFT Display; doing so could break the hinges.
- There is a risk of injury if the **TFT display breaks**. Use **protective gloves** to pack up the broken pieces and contact customer service to arrange for proper disposal.

It is important to thoroughly wash your hands after handling a broken TFT display. There is a chance that **chemicals** may have been released.

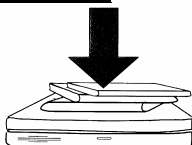

- **Never** place objects on top of the Notebook that would exert pressure on the display. There is a danger that even slight pressure may break the TFT display.

SET-UP LOCATION

- Keep your Notebook and all connected peripherals away from moisture, dust, heat and direct sunlight. Failure to do so can lead to Notebook malfunction or damage.
- It is highly recommended you do not use the Notebook outdoors.
- Operate the Notebook and all peripherals on a stable, balanced and vibration-free surface.
- **Do not** leave the base of your Notebook on your lap or any part of your body for a long period of time while the Notebook is turned **ON** or is charging. The Notebook can become very warm while it is turned on or charging and can cause discomfort or injury from heat exposure.

AMBIENT TEMPERATURE

- Notebook operation is most reliable at an ambient temperature between **+41°** and **+104° F** and at a relative humidity between **30%** and **70%** (without condensation).
- When powered off, the Notebook can be stored at temperatures between **32°** and **140° F**.

POWER ADAPTER

- Do not open the power adapter housing. When the housing is open there is a **danger** of severe electric shock. It contains no user-serviceable parts.
- The electric outlet must be in the vicinity of the Notebook and within reach of the power adapter cables. **DO NOT** stretch the power cables tightly to reach an electric outlet.
- To disconnect your Notebook from the power source, or set the Notebook to battery operation, remove the power cord from the Notebook's power socket.
- Only use the Notebook with a power adaptor (**ADP 20V65W LISHIN0335A2065 1A325**) operating at **AC 115V~/60 Hz**.

In European countries use the Notebook at **AC 220-240V~/50 Hz**.

For details on power consumption, please refer to the rating plate on the rear of your Notebook. If you are unsure of the type of power supply available at the point of use, ask your local power company. If travelling, ensure that use the proper power cord or adapter for the area. Contact Customer Service with questions before you travel.

- Use **only** the supplied power cord and power adapter.
- If using an extension cord, make certain that it meets your local safety requirements. If in doubt, consult an electrician.
- To provide additional protection against electric shock, power surges, lightning strikes, or other electrical damage to your Notebook, we recommend the use of a **surge protector**.

CABLING

- Arrange cables in a safe manner to ensure that no one can walk on or trip over them.
- **DO NOT** place the cables on, near or in liquid.
- **DO NOT** place objects on any of the cables.



Caution – To reduce the risk of fire, use only No. 26 AWG or larger telecommunication cords (applies to American Standards).

MODEM

- If your system has a modem, please make sure you connect it to an **analog** telephone line only. Connecting to a digital PBX, a digital line designed for broadband services or ISDN, a shared service line or a payphone will damage the modem or the devices to which it is connected.

TOUCH PAD

Light pressure with the tip of your finger is all that is required to operate the touch pad. Because the touch pad is electrostatic sensitive, objects cannot be used in place of your fingers. Using a pen or other object can damage the touch pad or cause the Notebook to malfunction.

BATTERY OPERATION

To extend the life and power of your battery and guarantee secure operation, the instructions below should be followed:




- Never expose the battery to **direct sunlight** or **heat** for long periods.
 - **Do not** dispose of the battery by fire as they may explode. Check with local codes for possible special disposal instructions.
 - **Do not** open the battery housing; it contains no user-serviceable parts.
 - Disregarding these instructions will lead to damage and under some circumstances may even cause the battery to **explode**.
-
- Keep the battery away from electrically conductive materials, chemical substances and cleaning agents.
 - Only use the originally supplied power adapter to charge the battery.
 - Fully discharge the battery before recharging it.
 - Replace the battery only with the same type or an equivalent type recommended by the manufacturer.
 - Charge the battery only until the battery charging light goes out. Also, refer to the instructions under "Checking the Battery Level" on page 27 for instructions on checking the battery level.
 - Only change the battery when the unit is switched off.
 - Batteries are classified as special waste and should always be disposed of properly. Contact Customer Service for more details. Do Not dispose of the battery in water, and do not disassemble the battery.
 - Keep batteries away from children at all times.
 - Use only the batteries and power adapter/cord indicated in this manual.
 - Handle a damaged or leaking battery with extreme care. If you come in contact with the electrolyte, wash the exposed area with soap and water. If it contacts the eye, flush the eye with water for 15 minutes and seek medical attention.
 - Do not charge the battery pack if the ambient temperature exceeds 45°C (113°F).

Views of the Notebook

Subject	Page
Open Notebook	13
Front And Rear View	14
Side Views	14
Device Indicators	16


VIEWS OF THE NOTEBOOK

 OPEN NOTEBOOK

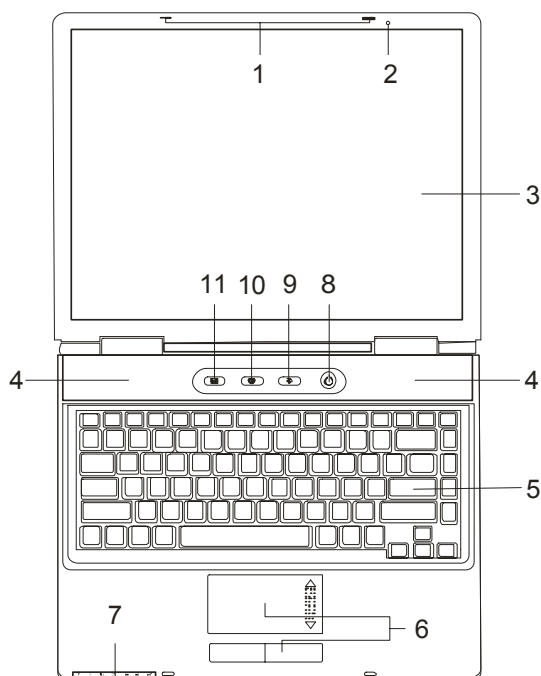


1	Display latch
2	Microphone
3	TFT display (⇒ p. 29)
4	Stereo speakers
5	Keyboard (⇒ p. 32)
6	Touch pad and keys (⇒ p. 33)
7	Device indicators (⇒ p. 16)
8	Power ON/OFF (⇒ p. 23)
9	Silent mode button
10	Internet quick key
11	E-Mail quick key

  FRONT AND REAR VIEW

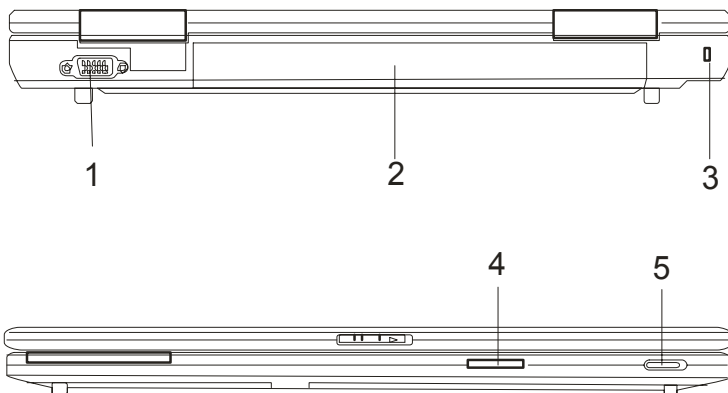





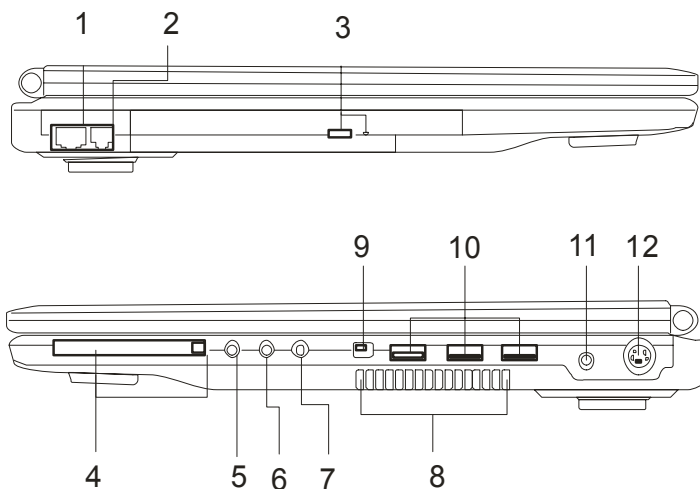

1	External monitor (VGA) (⇒ p. 29)
2	Battery pack
3	Kensington port (safety lock port) (⇒ p. 75)
4	4-in-1 card reader
5	Wireless ON/OFF switch

SIDE VIEWS



1	LAN port (RJ-45) (⇒ p. 46)
2	Modem port (RJ-11) (⇒ p. 45) USB port (⇒ p. 52)
3	Optical Drive (⇒ p. 39)
4	PC card slot (PCMCIA type II) (⇒ p. 50)
5	Microphone in (⇒ p. 44)
6	Audio in (⇒ p. 44)
7	SPDIF-out port
8	Ventilation grill
9	IEEE 1394 (FireWire®) (⇒ p. 53)
10	USB port (⇒ p. 52)
11	Power socket (⇒ p. 23)
12	TV (S-Video) port

DEVICE INDICATORS

						
1	2	3	4	5	6	7

LED's indicate the power and operating system states of the Notebook. The meaning of each LED is:

1	WIRELESS LAN Display for wireless data exchange. (optional feature)
2	SUSPEND (SLEEP) MODE This LED lights when the Notebook is in suspend mode.
3	BATTERY The color of the LED light indicates the battery status: Blinking ORANGE: Battery is being charged. Blinking RED: Battery is low. Constant GREEN/BLUE: Battery is full. OFF/No Color: Battery is not installed.
4	HARD DRIVE/OPTICAL DRIVE ACCESS INDICATOR This LED lights when the Notebook is accessing the hard drive or optical.
5	NUM LOCK This LED lights when NUM-Lock has been activated. It sets the keyboard so that numbers are assigned to certain characters, simplifying numerical data input.
6	CAPITAL LOCK This LED lights when CAPS-Lock has been activated. This sets the keyboard to capital letters.
7	SCROLL LOCK This LED indicates that the Scroll Lock key on the keyboard is activated. The Scroll Lock key has different functions that are dependent on the software application in use.

Handling

Subject	Page
Getting Started	19
On/Off Button	23
Power Adapter	24
Battery Operation	25
Power Management	28
Opening and Closing the Display	29
Screen Resolution	29
Connecting an External Monitor	29
Keyboard	32
Touchpad	33

GETTING STARTED

Before you start using your Notebook, take a few moments to read the important **Safety** section.

This Notebook comes with **fully pre-installed** software. You do not have to install software from any of the supplied CDs. However, with many programs (e.g., telephone CDs or encyclopaedias) it is necessary to insert the corresponding CD to access the data that is stored on it. The software will prompt you to do this when necessary.

Step 1

Before starting the Notebook, please insert the battery. For further information read the section titled "Power Supply" starting on page 23. Open the display (see page 29) and switch on the Notebook using the On/Off switch (see page 13.)



If the battery level is insufficient, connect the power adapter.



Note: Make sure there is no bootable CD (e.g., the Recovery CD) in the CD-ROM drive. Such disks will prevent the operating system from loading off the hard drive.

Your operating system is finished loading when a welcome screen is shown on your display.

Step 2

The greeting procedure will guide you through a series of dialogue boxes. The information in each dialogue box will explain the steps that need to be taken.

Should you have any questions just click on .

Enter Personal Details

In one of the initial start-up dialog boxes a request will appear on the screen for you to enter your personal details. Please enter the requested information in the white input fields. You can select the fields by clicking on them with the mouse. When you press Enter, or click on the Continue button you progress to the next window.

License Agreement

The greeting procedure also displays the license agreement. Please read this carefully. It contains important legal information on the use of your software. In order to see the full text, use the mouse and the scroll bar on the right side of the screen to move downwards until you have reached the end of the document. You accept the agreement by clicking on the **"I accept the agreement"** option field. Only by doing so will you be entitled to use the product under lawful terms and conditions and be entitled to open the sealed Windows® manual.

Step 3

After the login procedure the Windows® desktop appears on your screen. This can be adjusted so that the screen of your computer looks different.

THE WINDOWS® XP DESKTOP

After the login procedure the Windows® XP desktop appears on your screen. Note: Your desktop view may vary from the image shown below.



Start Button

Clicking the Start button brings up a menu where you can access help, software programs, files, and settings. For more information, click **Windows® XP Tour** on the **Start** menu.

1. Program Bar

The most commonly used software programs are listed here.

2. All Programs

All of the software programs installed on your Notebook are ordinarily listed here. Click **All Programs** to reveal an extensive menu.

3. Information about your PC

Click this button to receive important information about your Notebook as well as valuable hints and additional assistance.

4. Turn Off Computer

Click this button to shut down Windows® XP and the Notebook.

5. Task Bar

Here you receive information and status reports about Windows® XP and which programs are running.

6. Desktop Icons

Desktop icons link to their respective programs. To start a program, double-click its desktop icon.

7. Logged in User

This tells you which user is logged in to your Notebook.

8. Control Panel

You can use the icons in Control Panel to change the appearance and functionality of Windows® XP. These icons represent options for configuring your Notebook.

 
9. Windows® XP Help

Here you can find information on using your Notebook, networking, backup, and many other tasks.

POWER SUPPLY

ON/OFF BUTTON


The On/Off button (page 13) is used to power up/down the Notebook. Pressing the button briefly will turn off your computer using the operating system. This is the same as clicking **Start** then **Turn Off Computer**. If the button is held down for longer than 4 seconds, it will force the Notebook to power down without going through the operating system shut down process. This may be useful if your computer has crashed or stalled.

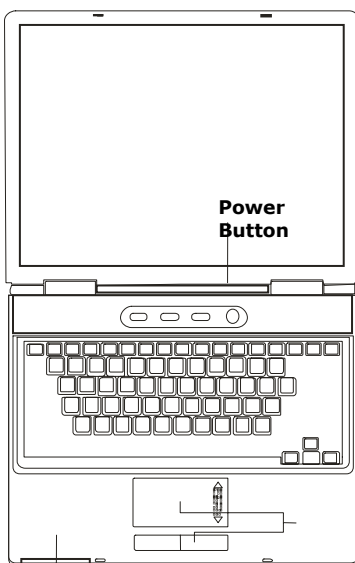

WARNING! Do not switch off your Notebook while the **hard disk** or the optical drive is running and the corresponding **media activity LEDs** are lit. Otherwise data may be lost. To protect the hard disk you should always wait for 20 seconds after powering down the Notebook before powering it up again.

POWER ADAPTER

 Your Notebook is supplied with a universal AC power adapter, which automatically adjusts to the available power source. The following levels are supported: **AC 100-240V~/ 50-60 Hz.** Please follow the power supply **safety instructions** found on page 8.

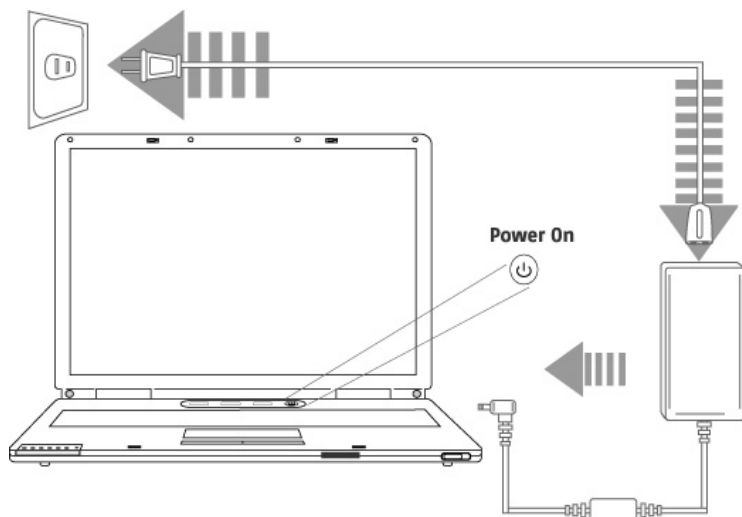

The power adapter is connected via a power cord to an AC outlet. The DC power lead from the power adapter is connected to the side of the Notebook.

The adapter provides the Notebook with power and also charges the battery. The power supply indicators of the Notebook (see page 13) provide details on the operating state. The battery is also being charged when you are working on your Notebook with the power adapter.

The power adapter is still live if the Notebook is not connected with it. You should therefore unplug the power adapter from the outlet if it is not connected to the Notebook.



 
WARNING! Use only the power adapter and power cord supplied with your Notebook.

BATTERY OPERATION

In order to extend the life and power of your battery, and to guarantee reliable operation, it is essential that the safety instructions on page 10 are followed.


INSERTING THE BATTERY

1. Slide the battery until it clicks into place and automatically locks.

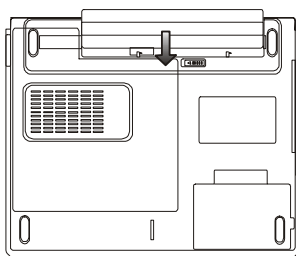

REMOVING THE BATTERY

 1. Slide the battery latch to the left to release.
2. Pull and remove the battery when the battery latch is in a released position.

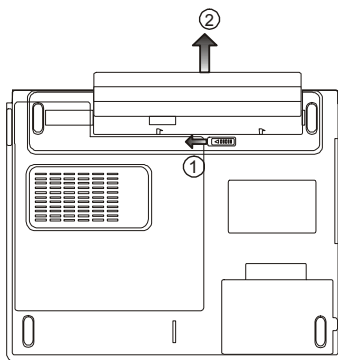

WARNING! Do not remove the battery while the Notebook is running on battery power. This increases the possibility of losing data.

CHARGING THE BATTERY

The battery is charged via the power adapter. If the power adapter is connected, it charges the battery automatically, whether the Notebook is on or off.

When the Notebook is switched off, full charging takes a few hours. If the Notebook is switched on, the charging process takes a significantly shorter time. However, it is recommended that from time to time you discharge the battery completely and recharge it afterwards with the Notebook switched off. You can discharge the battery without losing data, if you turn your Notebook on without using any application and no power adapter. As soon as the battery is empty your Notebook will enter the sleep mode. We recommend doing this procedure every time you think the battery power is losing efficiency.

BATTERY POWER

A fully charged Li-Ion battery will provide power for some hours of operation. However, the battery life will vary according to how the power saving functions are set, the way you work, the size of the main memory and the display type.

When working in Windows an audible warning alert will sound as soon as the battery level drops below a set minimum value. When this happens, the processing power is reduced in order to save power.



NOTE: Battery warning signals and "Low-Battery" mode will be heard immediately when the power pack is first connected.

CHECKING THE BATTERY LEVEL

In order to check the current level of the battery, move the cursor over the power symbol in the taskbar.



When in battery mode, a battery symbol is displayed and when the power adapter is in use a power connector is displayed. If the battery is being charged the power connector has a lightning symbol superimposed over it. Further information on power settings can be obtained by double clicking on the symbol.



NOTE: If you ignore the warning signal when the battery level is low, your Notebook goes into suspend mode. (Depending on the BIOS/OS setting this will be Save-to-Disk or Save-to-RAM).



WARNING! If the battery is empty, your data will not be retained for long in Standby/Save-to-RAM mode.

WARNING! Never remove the battery while the Notebook is switched on or if the Notebook has not yet gone into suspend mode, as this may lead to loss of data.

POWER MANAGEMENT

Your Notebook offers automatic and modifiable power saving functions that you can use to maximize battery life and reduce overall operating costs. The power saving modes are known as standby mode and suspend (sleep) mode.

STANDBY MODE

When in standby mode, the contents of the RAM of your Notebook are preserved while practically all other components of your Notebook are shut down, reducing your power consumption to a minimum. By pressing any key on the keypad, you can bring your Notebook back to the fully operational state. You will restart at precisely the line in which you were working prior to the interruption. The computer takes less time to go into and come out of standby mode, but uses more power than suspend (sleep) mode.

SUSPEND (SLEEP) MODE

The sleep mode is an alternative to a complete shutdown of the Notebook. In this mode all data from RAM (system and graphic data) are copied to the hard disk as a file. As soon as the data has been safely saved, the Notebook powers down. When the Notebook is switched on again, this file is written back to RAM by the BIOS. In a few moments the Notebook is in the exact state as when it was last used. If while working on a document the Notebook is closed (assuming the correct ACPI setting), the Notebook saves the data in RAM for you automatically. You will restart at precisely the line in which you were working prior to the interruption. The computer uses no power while it is in suspend (sleep) mode, but it takes a little longer for the computer to go into and come out of hibernation compared to standby.

DISPLAY

Unlike a normal monitor, the TFT display does not produce either radiation or flicker.

OPENING AND CLOSING THE DISPLAY

A display catch keeps the display closed when the Notebook is not in use.

To open the display, slide the display latch to release the display and then lift the display to the desired position.



WARNING! The display should **not** be opened fully to 180°.

DO NOT place any objects on top of the notebook. Even slight pressure may break or damage the TFT display.

SCREEN RESOLUTION

The integral screen has a native resolution of **1280 x 800** pixels. Using a higher resolution can lead to distortion of the display, especially with text. Using a lower resolution may cause the display to use only a portion of the screen area.

CONNECTING AN EXTERNAL MONITOR

The Notebook has a port for connecting an external monitor. To connect and configure an external monitor:

1. Shut down your Notebook.
2. Connect the video signal cable of the external monitor to the VGA port of the Notebook (⇒ p. 14).
3. Connect the external monitor to the electrical socket, power it up and start your Notebook.

There are two options for setting up an external monitor:

1. Clone your Desktop

This option allows you to display the same picture on both internal and external monitor.

Press **<Fn> + <F4>** to activate the external monitor. The Notebook display will be switched off. Adjust the display settings following the external monitor specification.

Press **<Fn> + <F4>** once more and both displays are switched on.

Press **<Fn> + <F4>** again to deactivate the external monitor. The Notebook display will be switched on.

 
2. Extend your Desktop

This option extends the picture from your internal monitor to your external monitor. Windows can be switched from one monitor to the other.

This option does not support the key combination **<Fn> + <F4>**.

Right click anywhere on your desktop and select **"Properties"** to start the **"Display Properties"** program.

- Select the **"Settings"** tab and left click on the second display **①**.
- Check the option **"extend my Windows desktop onto this monitor" ②** and press "ok".
- To deactivate the extension uncheck the option "extend my Windows desktop onto this monitor".

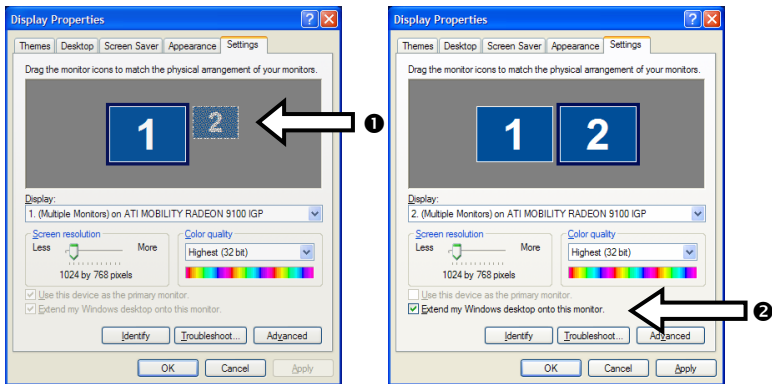

You can change the resolution and color depth for either display in this screen. However, you may have to decrease the depth of color if you increase the resolution since the video memory has a limited capacity.

DATA ENTRY

THE KEYBOARD

By dual assignment of certain keys, you have the same range of functions available to you as with a normal Windows keyboard. Some functions are input on a Notebook using the **Fn** key plus another key. These key combinations provide access to certain functions, see chart below.

NOTEBOOK-SPECIFIC KEY COMBINATIONS

Key Combination	Function
Fn + F1	Enters suspend (sleep) mode.
Fn + F3	Turns ON/OFF the audio battery warning (beeping signal).
Fn + F4	Toggles the display screen between internal monitor, external monitor and simultaneous display.
Fn + F5	Increases the volume.
Fn + F6	Decreases the volume.
Fn + F7	Increases screen brightness.
Fn + F8	Decreases screen brightness.
Fn + NumLock	Enables the embedded numeric keypad. The numbers are printed in the upper right corner of a key, in a color different from the alphabets. This key pad is complete with arithmetic operators (+, -, *, /). Press Fn+Num Lock to revert to normal character keys.
Fn + Scroll	Enables the scroll function. Use simultaneously with the up and down arrow keys to move between lines.

TOUCH PAD

The touch pad's primary function is to move the cursor around or select items displayed on the screen with the use of your fingertip instead of a mouse. It is positioned in front of the keyboard (see page 13). The pointer follows the direction which is specified by moving your finger or thumb over the touch pad.

DO NOT use a ball-point pen or other object on the touch pad, as this could damage or cause a malfunction of your touch pad.

Below the touch pad are the left and right mouse buttons which can be used as on a normal mouse. You can also perform a direct click or double click using the touch pad by tapping the surface briefly once or twice.

In the Windows Control Panel you will find a number of useful settings that will make using the touch pad easier. If the Control Panel is in category view, click **Printers and Other Hardware** and then **Mouse**. In classic view, double-click **Mouse**.

Main Components

Subject	Page
Hard Drive	37
Optical Drive	39
Sound Card	44
Modem	45
Network	46
PC Card Slot	50
Connection Options	52
Software	55

THE HARD DRIVE

The hard drive is the main storage medium combining large storage capacity and rapid data access.

The Windows operating system cannot use the full capacity of the hard drive, which means that there will be a difference between the capacity that the BIOS displays and what the operating system displays.

The hard drive contains the operating system of the computer, other application programs and backup files. These programs and files are pre-installed on your Notebook, so you may note that some of the space on your hard drive is already taken.

Whenever the computer is accessing the hard disk, the corresponding LED illuminates (see page 16).



WARNING! Never switch off the computer while the busy indicator is lit since this may result in loss of data.

If you are looking for a file on the hard drive and you know the name, go to Search on the Start menu to find the file. Following is some general information on where you might find some common files.

Usually your hard drive is divided into several partitions, as shown below. The partitions of your hard drive may vary from what is shown here.

Local Disk	C:	Windows XP Software programs Your documents
BOOT	D:	Drivers for internal PC components Installation files for software that came with your PC
Recover	E:	Restore software

IMPORTANT DIRECTORIES

The most important directories preinstalled on your Notebook are shown below. These directories may vary from what is shown here.

Caution: Don't delete files unless you know what they are. Windows XP might require these files for your computer to operate correctly. Also, do not alter or resize the partitions – this will make it difficult to restore your Notebook to the factory settings.

C: This is the main hard disk drive partition for your Notebook. It is where your program files, settings, and documents are stored, as well as files necessary for running Windows XP.

C:\Program Files Includes files belonging to software programs.

C:\Windows The main directory for Windows XP.

C:\Documents and Settings Includes the settings and documents for all users.

D: Includes files for restoring hardware components and software programs.

D:\Driver Drivers for internal Notebook components.

D:\Tools Includes installation files for software that came with your Notebook.

E: Includes files for restoring the entire Notebook to working order.

E:\Recover Includes the files needed to perform a system restore.

THE OPTICAL DRIVE

CD-RW/DVD-ROM COMBO DRIVE

Your Notebook has a CD-RW/DVD-ROM combo drive. This drive can play everything that a DVD-ROM drive can play: DVD movies, music CDs, and data DVDs and CDs. It can also run software programs from CDs and DVDs. In addition, this drive can write data and music CDs and copy CDs. It writes to CD-R or CD-RW.



NOTE: Some units may come with a DVD±RW/CD-RW Super Drive. The type of Optical Drive in a Notebook will vary and is configuration dependent. If the optical drive in your Notebook is a Super Drive, it is capable of reading, writing and rewriting to CD and DVD. The instructions in this section that pertain to writing to CD will also apply to writing to a DVD.

HANDLING DISCS

To maintain the life of CD and DVD discs, observe these guidelines.

- Avoid radiation by direct sunlight (UVA/UVB).
- Avoid scratches and damage to the disc surface.
- Avoid extreme temperatures.
- Do not attach labels or paper to DVD discs.
- Do not use record-cleaning or anti-static agents to clean your discs.

 
We also recommend that you avoid specially shaped discs such as hearts or polygons, or discs that are not standard size. Do not use warped or cracked discs as they may cause damage to your drive.

LOADING A DISC

⇒ **Tip:** Do not place protective foils or other stickers on your CD's. To avoid damage to your drive, do not use deformed or damaged CD's. **Attention:** Do not use scratched or dirty disks, discs with pieces broken off or disks of poor quality. Because of the high speeds in the drive the disks might break and damage your data as well as your drive. Examine the disks before you enter them. If damage or dirt is visible, you should not use them. Damage caused by faulty media is excluded from warranty and their repair must be charged.

1. Press the eject button on the front of the drive to open the tray.
2. Place the disc on the tray so that it lays flat with the label facing upward.
3. Gently push the tray in to close it.

Many discs automatically start when they are loaded and launch a playback software program. In some cases you might need to start a program (for example, a DVD player program).

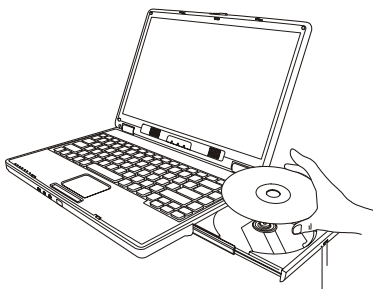

NOTE: The location of the optical drive will vary. Please refer to the following section for the specific location of your optical drive, Views of the Notebook on page 13.

REMOVING A DISC

Press the eject button on the front of the drive to reject the disc.



WARNING! While the Notebook is accessing the optical drive the media activity indicator is lit. Do not try to remove the disc from the drive while this LED is lit.

EMERGENCY EJECTION OF A BLOCKED DISC

If the tray fails to open automatically, then the tray can be opened manually provided there is an opening for emergency ejection.

Restart your Notebook and if the tray is still locked proceed as follows:

1. Shut down Windows and switch off your Notebook.
2. Insert a long thin object (like a straightened paper clip) into the emergency ejection opening until you feel resistance.
3. Press lightly and the tray will open.
4. Remove the disc and restart the Notebook.

PLAYING MUSIC CDS

Windows Media Player can be used to play music CDs.

PLAYING DVD MOVIES

To play DVD movies on your Notebook, you need a DVD playback software program, such as CyberLink's award-winning PowerDVD. To play DVD movies using this software, insert a movie DVD into the optical drive, click **Start**, select **All Programs**, and then select PowerDVD.

In spite of the high storage capability of the DVD, the data must be extremely compressed in order for a complete feature film to be stored. This extreme compression combined with exceptional picture quality is provided by the MPEG2 image coding method on the DVD. This places high demands on the Notebook's processor, so when playing a DVD please close all other applications. To increase Notebook performance, you may also wish to purchase a plug-in MPEG2 decoder card, which has its own decompression processor and will thus free the Notebook's processor.



NOTE: The decoding software included with your Notebook may be changed for regional DVD decoding up to five times, after which the drive will only play DVD movies for the region setting last entered.

WRITING DISCS

You can use your CD-RW/DVD-ROM combo drive to write ("burn") data and music CDs.

A data CD is a compact disc (CD) used to store PC data (for example, files and folders you have on your hard disk).

A music, or audio, CD is a compact disc (CD) used to record music that you can play on your home or car stereo CD player. Using a CD-R instead of a CD-RW for music CDs will help ensure a greater level of compatibility with conventional CD-players.

There are several different options for burning CDs. The first step for using any of these options is to insert a blank recordable CD into your combo drive.

Nero Burning ROM can create different types of audio, video, and data CDs quickly and easily. Click **Start**, then **All Programs**, then **Nero**, then **Nero OEM** to access Nero Burning ROM. Follow the step-by-step instructions given by the software wizard to create a CD.

Windows XP includes functionality for quickly and easily creating data CDs:

1. Select the files or folders you would like to write to your CD. To select more than one file, hold down the CTRL key while you click the files you want.
2. In the File and Folder Tasks menu on the left (Picture Tasks if the files are located in My Pictures), click **Copy this file**, **Copy this folder**, or **Copy the selected items**. If you do not see the File and Folder Tasks menu, select **Tools** on the main menu, then **Folder Options**. Under Tasks on the General tab, select **Show common tasks in folders**.
3. In the Copy Items dialog box, click the CD-RW, and then click **Copy**.
4. Double-click **My Computer**, then the CD-RW. Windows displays a temporary area where the files are held before they are copied to the CD. Verify that the files and folders that you intend to copy to the CD appear under Files Ready to be written to the CD.
5. Under CD Writing Tasks, click **Write these files** to CD. Windows displays the CD Writing Wizard. Follow the instructions in the wizard.

Media player programs (such as Windows Media Player) often offer alternatives for burning audio CDs. Refer to the help within the program for more information.

You can also purchase third-party CD burning software for writing files to a CD-R or CD-RW disc.



WARNING! Unless you own the copyright or the permission of the owner of the copyright, unapproved copying of copyrighted CDs or DVDs violates national and/or international laws and can result in serious punishment.

THE SOUND CARD

 
Your Notebook has an integrated stereo sound card (on-board).


If you wish to alter the base volume, click on the loudspeaker symbol in the task bar. A double click opens the sound mixer.

By means of the key combinations (⇒ page 32), you still have the possibility to regulate the volume.

Use the keys **Fn+F5** to increase the volume and use **Fn+F6** to decrease the volume.

EXTERNAL AUDIO PORTS

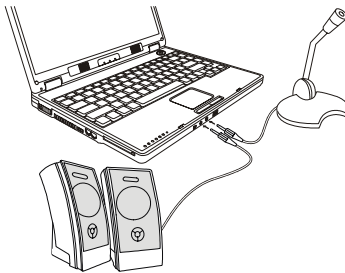

	NOTE: Port locations on your notebook may vary, see page 15.
Microphone in (⇒ page 15)	► For recording via an external microphone.
Audio out (⇒ page 15)	► For sound reproduction via external stereo equipment such as loudspeakers (active) or headphones.

Your Notebook has a loudspeaker, so you can always playback sounds without additional equipment. The connection of a Hi-Fi system increases the sound quality significantly.

 
MODEM

The modem is fitted with an RJ-11 interface, into which a standard telephone lead can be plugged.



WARNING! Use only with an analogue telephone line. The modem cannot withstand the voltage levels of digital telephone systems such as PBX or lines such as ISDN or Broadband services.

MODEM PORT



Insert one end of the RJ11-connection (telephone plug connector) into the modem/network interface and the other into an analogue telephone socket that is easily accessible.



NOTE: Do not place the Notebook in Suspend (or Sleep) mode if you are connected to your Internet provider, since this will cause the modem connection to be lost.

THE NETWORK

WHAT IS A NETWORK?

A network means connecting your Notebook to one or several other computers. Users can transfer data between computers and share resources such as printers, modems and hard disk drives.

Here are some practical examples:

- You can exchange E-mail and manage appointments in an office.
- Users can share a printer in a network and save their data on a central server.
- Users can share one modem among computers for Internet access.
- Two or more computers can be connected to play network games or share data.

FAST ETHERNET-NETWORK

Your PC has a Fast Ethernet Network connection. You can use this to connect to a network.



Connect one end to the RJ45 connection (Western plug) at the network interface of your Notebook (⇒ p. 15) and the other to another PC or a hub/switch.





The Windows XP Help and Support Centre offer extensive information about networking your PC. You can access this information by clicking on **Start**, then **Help**.

WHAT DO YOU NEED FOR NETWORKING?



Some requirements have to be fulfilled to successfully network computers:

1. The Notebook must have a network card that supports the same network technology as the other computers on the network. Unless otherwise quoted, your Notebook will support the current **Fast Ethernet** (10/100 Mbit) standard.
2. The network cards must be connected. You need a Shielded Twisted Pair-cable (CAT5) that has an **RJ-45**-connector.
 - If you want to directly connect two PCs you need a **Cross-Link** cable.
 - If more PCs must be connected you need a supplementary distributor (**Hub** or **Switch**) and a Patch cable.
3. All connected PCs need a network **operating system**. Windows® can act as a network operating system.
4. All networked PCs must speak the same "language" to understand one another. They use protocols for this purpose. The setting of protocols, therefore, must be the same for all networked PCs.

TROUBLESHOOTING WITHIN THE NETWORK

-  Why does an error message appear when I click on the network environment?
-  The **computer name** must be unique on the network and may not be the same as the **task group**.
-  It appears that the network boards are unable to communicate. What might be the problem?
 -  Maybe one of the used network boards works with a **different speed** (e. g. 10 instead 100 Mbit) and your network computer is unable to recognize this. If necessary, set the network driver to the compatible speed.

If two PCs should be linked you require a **cross-link cable**, otherwise use a **patch** cable.

In addition, check the **protocols** and the **configuration**.
-  The data transmission is incorrect or very slow. What might be the problem?
 -  Maybe you have the wrong cable (UTP / CAT3 or lower) or the problem is the proximity of a power cord or another source of interference.

For further hints on troubleshooting search for “network errors” in Windows Help and Support.

WIRELESS LAN

Wireless LAN is an optional feature. This function allows you to create a wireless network link with an access point or directly with another wireless-enabled PC.

You can enable or disable the wireless LAN function by turning the Wireless switch to the ON or OFF position, refer to ⇨ p. 14.

⇒ **ATTENTION:** Make sure the Wireless LAN option is switched OFF in any environment where it might interfere with critical and sensitive devices, e.g., on aircraft, in hospitals and other medical centres, etc.

CONDITIONS

An access point is a wireless transmitter that communicates with your Notebook and controls access to the network connection (e.g., a home network or a broadband connection such as DSL). Wireless access points are often found in offices, airports, universities or Internet cafés. They offer access to networks or to the Internet. **Access authorizations** are normally needed. A fee may be required to use a public access point. To set up a wireless network to share Internet access, files, and printers at home, you will need an access point, a router, and a broadband (DSL or cable) modem. Some access points can also serve as a router and/or a broadband modem. Check with your retailer or Internet Service Provider to find the best solution for your needs. A link to another computer with wireless LAN functionality can also be created **without an access point**. This will allow you to share files, but you will need an access point and a router to share an Internet connection.

The wireless network link works according to standard **IEEE 802.11g** which is also compatible with the IEEE 802.11b standard. The standard 802.11a is not supported. If encrypted transmission is used, this must operate according to the **same principle on all devices**. Encryption is a method of protecting the network from unauthorized access. The transmission speed (max. 54 Mbps) can vary according to the **distance** and **loading** of the partner.

THE PC CARD SLOT

The PC card slot on the left side (see page 14) of the Notebook can be used to operate credit card-sized PC cards. Most PC cards are communications or interface devices such as ISDN-, Faxmodem-, Network- or SCSI-adapters.

Some PC cards contain memory chips or hard disks for data storage. If you use such cards with your Notebook, the system assigns the card a drive name, so that you may access the resources. The PC card drive in your Notebook supports PCMCIA (Type II) and CardBus (Type I) cards.

USE OF PC-CARDS

 
In order to run a PC card, special software is needed (drivers, etc.). The card manufacturer usually supplies this software. Support for the card port is a component of Windows® and at present represents the optimum in operational smoothness. You should consider this point when choosing between alternative operating systems.

INSTALLING A PC CARD

Follow the PC card installation instructions that are given for use under Windows® and have the necessary driver software ready. Once you have started Windows®, slip the card carefully into the slot provided.

⇒ Remove the dummy card from the PCMCIA Slot before installation. Replace the card to protect contacts against dirt if the Slot is not used.

Note: The location of the PC Card slot may vary. Refer to Side Views on page 15.

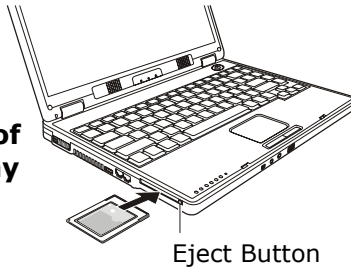

When the card is fully inserted two audible signals will be heard, provided it has been correctly recognized and successfully configured.

If only one signal is heard, this signifies a problem with the card recognition. In this case, follow the instructions that accompany your new PC card.

REMOVING A PC CARD

To remove your PC card:

1. Press the eject button next to the slot.

⇒ **Attention!** The Eject Button should be **pressed in** during transportation, because the danger will arise that the button will break off otherwise.

CONNECTION OPTIONS

The Notebook has a number of input and output interfaces for connection of peripheral devices such as a printer, scanner, keyboard, and so on. This section presents the individual ports. For further information, refer to page 15, where the positions of the respective ports are described.

UNIVERSAL SERIAL BUS (USB) PORT



USB ports provide an easy way to connect many peripheral devices to your PC. You can use any USB device with any USB port. **2 USB** ports are located on the back panel of the Notebook and **1 USB** port on the front side of the Notebook for your convenience. Some USB devices require that you reinstall software drivers when you connect the device to a different USB port than the one originally used. This can be avoided by always using the device with the same USB port. Devices connected directly to the USB bus should not draw more than 500 mA. Should the devices need more power than this, it will be necessary to provide a powered hub. The data transfer speed is 1.5 Mbit or 12 Mbit, depending on the device connected.

IEEE 1394 (FIREWIRE®)



IEEE 1394 (optional feature, also known as iLink® or FireWire®) ports provide an easy and high-performance way of connecting high-speed storage, imaging, and many new types of audio/video devices easily.

SOFTWARE

There are many kinds of help and information for using your PC. This section tells you where to get help with the Microsoft® Windows® XP operating system, software programs, and the Medion PC.

GETTING TO KNOW WINDOWS XP

WINDOWS® XP MANUAL

This printed manual provides general information about the operating system. We recommend that all beginning users or users of previous versions of Windows® read this information. It can be found with the CDs in the accessory box that came with your PC.

WINDOWS® XP TOUR

Windows® XP includes a tour that you can take to familiarize yourself with the operating system. This tour can usually be found by clicking on the **Start** menu. You can also find the tour by selecting **All Programs**, then **Accessories**.

MICROSOFT® INTERACTIVE TRAINING

Training is the most powerful way to acquire skills that help you perform a specific task efficiently. On the **Start** menu, choose **All Programs**, choose **Accessories**, and then choose **Microsoft® Interactive Training**.

WINDOWS® XP HELP AND SUPPORT



An answer to almost every question can be found in this program. You'll find it in the **Start** menu.

SOFTWARE HELP

Many software programs incorporate extensive help functions. As a general rule, you can access help functions by pressing F1 on the keyboard. Many software programs include Help as an option on the menu at the top of the screen or window. They may also provide an icon (or icons) with a question mark on them that you can click to access more information.

The software included with the Notebook was pre-installed at the factory.

During software installations, important files can be changed or even deleted. Medion recommends that you set a Windows® XP recovery point before installing software (p. 66).

For specific installation information, refer to the documentation that came with the software program. Here is a typical installation procedure.

1. Load the software program installation disc in the combo drive.
2. Most installer programs start automatically after a few moments.

If the installer program does not start automatically, you can manually start it by double-clicking My Computer, and then double-clicking the drive letter where you loaded the software program installation disc.

3. Follow the instructions given by the program.

DEVICE DRIVERS

If you install external devices, such as printers or digital cameras, you may also need to install device drivers. The drivers will be included with your peripheral devices. These are occasionally updated by the manufacturer. Check with the manufacturer of your peripheral device to find out if you have the most recent version of your device drivers.

INFORMATION ABOUT YOUR PC

Clicking on **Start** and then on **Information about your PC** will bring up more extensive information about your PC, as well as useful links to software tools and other resources. It also contains any last minute information about your PC that may not be included in this manual.

DIGITAL SIGNATURES

When installing software or drivers, you may receive the message "The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP." Although the software lacks the digital signature, it may work properly. Click on "Tell me why this testing is important" to get detailed information. Click on "Continue Anyway" to continue to install your software.

To set file signature verification options for Windows XP:

1. Click **Start**, then **Control Panel**. Double-click **System**.
2. On the **Hardware** tab, select **Driver Signing**.
3. Under **File Signature Verification**, select one of the following:

Ignore allows all device drivers and software to be installed on this PC regardless of whether they have a digital signature.

Warn displays a warning message when you attempt to install a software program or device driver without a digital signature.

Block prevents installation programs from installing device drivers without a digital signature.

If you are logged on to your PC as an administrator, you can click **Apply setting as system default** to apply the selected setting as the default for all users of your PC.



WARNING! During software installation important files can be changed or deleted. To avoid problems in using older files after installation, make sure to safeguard your hard disk.

WINDOWS ACTIVATION

Microsoft is committed to the protection of intellectual property rights and the reduction of software piracy. Windows XP contains software-based product activation technology. Your copy of Windows XP has already been activated for your Notebook. However, product activation is needed if some components of your Notebook have been replaced or you use non-authorized BIOS. If necessary, you can activate Windows XP as often as needed.

You will probably need to activate Windows XP by telephone even if Internet Activation is available. This is due to the pre-activated SLP version that runs with a special Product-ID. However, activation needs your unique Product ID that can be found on the **Certificate of Authenticity** sticker on your Notebook housing. When you call, please inform the agent that you are running an OEM (SLP) version of the software.

THE BIOS SET-UP-PROGRAM

In BIOS setup (Basic Configuration) there are a number of configurable parameter settings available for your Notebook. For example, you can change the operating mode of the interfaces, security features or power management.



WARNING! The Notebook is factory pre-set to guarantee optimum operation. Only modify the parameters if necessary and if you are familiar with the configuration options.

RUNNING THE BIOS SET-UP

You can only run the BIOS configuration program at system start-up. If the Notebook has already started, power it down and then up again. Press the **F2** function key in order to start the BIOS-SET-UP.

NAVIGATING THE BIOS UTILITY

To enter a menu, highlight the item using the cursor up/down keys; then press **Enter**.

While in a menu, follow these instructions:

- Press the cursor up/down keys to move between parameters.
- Press the cursor left/right keys to change the value of a parameter.
- Press Esc while you are in any of the menus to return to the main menu.



Note: If you are unsure if your parameter settings are correct, you should load the "**Set-up-Defaults**".

First Aid

Subject	Page
FAQ	61
Data and System Security	63
System Recovery	66
Troubleshooting	70
Maintenance	73

FAQ – FREQUENTLY ASKED QUESTIONS



When do I have to activate Windows?



Your software has been pre-activated in the factory.
An activation will only be required, if ...

... several components are replaced by others.

... you installed a new motherboard.

... a different BIOS version has been installed.

... you install the software to another computer.



What is the Windows activation?



Your operating instructions include a chapter about this subject.



How do I perform a data backup?



Use the program Backup for this.

It is important that you follow the operating instructions of these programs.

Make a backup and another backup of selected data to an external medium (CD-R, CD-RW, DVD-R, DVD-RW, SD card, etc.), to familiarize yourself with the technique.

A backup is unsuitable if you are not able to recover the data, the medium (floppy disk, CD-R, etc.) is defective or no longer available.



Do I still have to install the enclosed CDs/DVDs?



No, all programs are preinstalled. The disks are only intended as backup copies.



When is the recovery of the factory setting recommended?



This method should be chosen as the last resort. Read chapter "**System recovery**" on page 66 concerning the possible alternatives.



Why is the boot partition missing when booting from the support/ application CD?



The first partition is formatted with the file system NTFS. Compared to FAT32 this file system offers more security and a more efficient access. However, NTFS partitions can only be read from operating systems supporting this. This is not the case in the aforementioned CD.

DATA AND SYSTEM SECURITY

The programs described below are part of your Windows operating system. You will find additional information on these programs in the Windows Help file.

DATA SECURITY

Back up data regularly on external media such as a CD-R or CD-RW. Windows offers both a **Backup** program and a **Files and Settings Transfer Wizard**.

Both programs are found in **Accessories/System Tools** within the Start menu. You should make a backup disk with all your passwords and the operating system's original configuration.

MAINTENANCE PROGRAMS

You can avoid some hardware and software errors with disk maintenance programs such as **Disk Defragmenter** and **Disk Cleanup**. The program **System Information** can also be helpful since it gives you detailed information about your system configuration. You will find these programs in **Accessories/System Tools**.

PASSWORD RESET DISK

To protect individual user accounts from complications resulting from lost passwords, users should create a password reset disk and keep it in a safe place. Windows Help describes how to create a password-reset disk.

WINDOWS® UPDATE

Windows Update is the online updating of Windows. Use Windows Update to download elements such as security updates, important updates, the newest help files, drivers and Internet products from the Internet.

The website is regularly augmented by new content, so that you can download the newest updates and error corrections at any time, to protect the Notebook and guarantee its functioning.

Windows Update will search through the Notebook and provide a list of individual updates specially for the configuration of your Notebook.

Each update that Microsoft regards as important for the operation of the operating system, programs or hardware components will be classified as an "important update" and automatically selected for installation for you.

Important updates will be provided to remove known problems and to protect the Notebook against known security risks.

Carry out four simple steps, to download the updates needed and to keep your computer on the current status of technology:

1. Open **Windows Update** in the Help and Support Center.
2. Click on **Search for update**.
3. Click on **Add** to select the desired update and to add it to the updates to be installed, while you are searching through the available updates in each category. You can also read a complete description of each individual element by clicking on the **Read further** Link.
4. Click on **Check and install updates**, when you have selected all the desired updates, and then click on **Install now**.

WINDOWS UPDATE INFORMATION FOR DATA SECURITY

Windows Update needs certain information about the respective Notebook, so that a suitable list with updates can be provided for you. This information will include the following:

- Version number of the operating system
- Version number of Internet Explorer
- Version numbers of additional software programs
- Plug & Play identification key of the hardware devices

Windows Update will stand up for the protection of your private data and will not record your name, address, email address or other forms of personal data. The information collected will only be used during the time that you are visiting the website. It will also not be stored.

⇒ The update can only be executed via the Internet. Ensure that you are on-line with your Notebook when downloading the updates.

SYSTEM RECOVERY

Before performing a recovery, you should review the "Troubleshooting" section in this manual to see if you can resolve the problem. If not, it is possible that a software file required by Windows XP to operate the computer was damaged or deleted. If this is the case, there are basically two strategies for recovery.

- **Restoring your system using Windows XP System Restore**

This type of recovery is usually very quick and will solve most typical problems that occur after an unsuccessful installation of an application, device, or driver has caused instability in the system.

- **Restoring your system using the Application & Support Disc provided by Medion.**

There are several options for recovery available using the Application & Support Disc, including the ability to restore your entire system to its original factory settings.

RESTORING MICROSOFT WINDOWS XP

Windows XP System Restore allows you to set "recovery points." This feature enables you to take a snapshot of the current system configuration, which you can return to should an application, device, or driver cause instability in the system.

While Windows XP automatically creates recovery points, you can also set them manually. In addition, you can configure the maximum amount of memory used for this.

To use System Restore to set recovery points or restore your system, click the **Start** menu, then choose **All Programs**, then choose **Accessories**, then choose **System Tools**, then choose **System Restore**. Select the task that you would like to perform and follow the on screen instructions. For detailed information refer to Windows XP Help and Support.

System Restore includes various functions to help ensure that your Notebook and installed applications and devices work cor-

rectly. These functions assist you in solving the problems which might occur by adding, deleting or replacing files required for proper functioning of Windows XP, and your software and devices. The restore function you use depends on the type of problem or error.

In general, it is a good idea to set a recovery point before installing a new software program or driver. If the system becomes unstable during or after the installation, you can usually return to a workable configuration without deleting newly created documents. If Windows XP System Restore does not solve your problem refer to the next section, *System Restore*.

SYSTEM RESTORE

If your system is not functioning properly and Windows XP System Restore did not solve the problem, then you should use the Application Support Disc provided by Medion to restore your system. This recovery mode provides several options.

There are three options for restoring your system:

1. **Recovery of start-up files**

Use this option to restore the start-up files. This option is most useful when a virus has corrupted certain files necessary for your computer to boot. It is executed very quickly.

2. **Recovery of system and driver files**

This option will copy the original system and driver files to your hard disk. This feature shouldn't affect your personal files and settings. However, we recommend that you first back up your personal data just to be safe.

3. **Restoring the factory settings**

This recovery will reset your system to its condition at delivery. ALL DATA ON YOUR LOCAL DISC (C:) DRIVE WILL BE ERASED. If possible, back up your personal data to external media before performing this restore.

LIMITS OF RESTORE FACTORY SETTINGS (RESTORE OPTION 3)

Any changes made to the original factory configuration (for example, settings for your display, printers, network, or Internet connection) will be overwritten by this restoration.

Any software that you installed after purchasing the computer will be erased and will need to be reinstalled.

Everything on the C:\Local Disk partition will be erased. This includes all of your documents and settings.

Tampering with the Recover (E:) hard disk drive or its contents will make it more difficult to restore your Notebook. Do not alter, resize, or delete the Recover (E:) hard disk drive. Also, do not alter or delete the files on the Recover (E:) hard disk drive. We strongly recommend that you do not store any files, folders, or programs on the Recover (E:) hard disk drive.

PERFORMING THE RESTORE

Each step of the restore replaces an increasing number of files on your hard drive, and therefore takes longer to finish. We recommend that you attempt each of the restore options in order, starting with "Recovery of start-up files." After finishing each restore option, you should test your system to see if it has solved your problem. If the problem persists, then try the next restore option. To make selections in the restore program, use the up and down arrow keys to highlight the option you would like to select, and then press enter to make the selection.

1. **Copy your data files to external media (such as a floppy disk, CD-R, CD-RW, DVD-RW, or flash card) BEFORE you continue!**
2. Insert the "Application & Support" disc and restart (reboot) the Notebook.

Caution: Do not use the "Medion Product Recovery" CD-ROM (a Windows XP CD for restoring Windows XP itself) for restoration purposes. This disc does not restore the original factory setup of the Notebook.

3. Select the option "**Boot from CD-ROM**" from the first screen.
4. Use the arrow keys to read through the license agreement, and then press the **Esc** key to proceed.
5. Read the information screen that appears, and then press **Enter** to proceed.
6. Select option **1**, **2**, or **3** to perform a restore (the types of restore are described earlier in this chapter). Select option **4. Reboot** to cancel the restore process.
7. The next screen shows information about the type of restore that you have chosen. Select either **Abort** or **Back** to return to the previous screen, or select **Finish** to execute the restore.
8. When the restore is completed, it automatically restarts the Notebook. Remove and store the Application & Support disc.

TROUBLESHOOTING

LOCALIZE THE CAUSE

Errors can have simple causes, but sometimes they are caused by faulty equipment. We would like to give you some tips to help solve common problems. Should these instructions not lead to success, please feel free to contact us.

CHECK CABLES AND CONNECTIONS

Visibly check all cables and connections. Should all lights be off, check whether all equipment is supplied with power.

- In battery mode, connect the Notebook to the power adapter and ensure that the battery is charged up.
- If you are operating the Notebook with the power adapter, check the electrical socket, power cord and all switches in the circuit of the electrical socket.
- Switch off the Notebook and check all cable connections. Check the connections to peripherals. Do not exchange cables, even though they may look similar. The polarity in the cables may be different. When it is confirmed that the Notebook has power and all connections are correct, turn the Notebook on again.

THE POWER ON SELF TEST (POST)

The Power On Self Test (POST) is executed during each boot process to test the memory, motherboard, display, keyboard and other components. If the Notebook does not pass the POST but beeps several times, or if the screen remains blank, call your Notebook support technician.

ERRORS AND POSSIBLE CAUSES

The display is blank:

- Confirm that the system is not in stand-by mode. Press any key on the keyboard to test this.

Wrong Date and Time:

- Double-click the clock on the taskbar and correct the date and time.

An error message appears during boot-up:

- You may have a floppy disk in the disk drive so the system is looking for an operating system on that floppy. Remove the disk and press any key.

No data can be accessed from the optical Drive:

- Check whether the CD is inserted correctly.
- Is the CD-ROM displayed in Windows Explorer? If so, test another CD.

The Printer does not work:

- Check the printer cable.
- Do a Printer Self Test.
- Should several pieces of equipment be operating from the same port, check all peripherals and reinstall the drivers.
- If you have access to the Internet, download and install the latest drivers from the manufacturer's Web site.

The mouse does not work.

- Check the cable connection.

ADDITIONAL SUPPORT

If the suggestions in the above section have not solved your problem, please contact customer care and we will attempt to help you solve the problem. Before you call, however, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- Have you upgraded or removed drivers or hardware?
- Can you manually repeat the problem?
- If you have been given a customer number previously, please have this available.

DRIVER SUPPORT

This Notebook has been extensively tested in our laboratories with a large number of compatible devices. It fulfils all required standards and complies with the standard "Designed for Windows", which certifies utmost compatibility. However, the software drivers for individual components are updated from time to time. This is a regular process provided by the manufacturer to mend possible compatibility problems that may occur with components (e.g., programs or hardware) that were not tested at the time of your Notebook's manufacture. Driver updates and the latest information on your product are available on the Internet.

✧ Visit Medion USA, Inc. on the Web at

www.medionusa.com

MAINTENANCE

MAINTENANCE INSTRUCTIONS

This section provides information on the proper maintenance and care of your Notebook. Following these measures can extend its lifetime.

CLEANING AND CARE



- **Warning!** There are no user-serviceable or user-cleanable parts inside the Notebook housing. Never open the Notebook housing.
- **DO NOT** use any solvents, corrosive or gaseous cleaning agents.
- **DO NOT** use CD-ROM cleaning disks or similar products that clean the lens of the laser to clean your CD-ROM/CD-RW/DVD/DVD-RW drive.

- Before cleaning, always remove the power adapter plug and all connecting cables.
- Only use a damp, lint-free cloth to clean the Notebook.

CARE OF THE TFT DISPLAY

- Always close the Notebook when not in use. Avoid touching or scratching the surface of the screen as it is easily damaged.
- Make sure that no water drops are allowed to remain on the screen. Water can cause permanent discoloration.
- Clean the screen with a dry, soft, lint-free cloth.
- Do not expose the screen to bright sunlight or ultraviolet radiation.

TRANSPORTING THE NOTEBOOK

Please use the following guidelines when transporting the Notebook:

- Switch off the Notebook. This will prevent damage to the hard disk. When the Notebook is turned off, the hard disk heads are moved into a safe area.
- Remove any CDs and floppy disks. This will prevent damage to the disks or to the drive heads.
- Close the Notebook and ensure that the display catch secures the cover into a shut and locked position.
- Always use the Notebook carrying case. This helps to protect the Notebook from dirt, moisture, jolts and scratches.
- Fully charge your battery and any spare batteries immediately before a long journey.
- Should you need to ship your Notebook, always use the original packaging and make certain the shipper knows the contents contain fragile electronic equipment.
- Wait until the Notebook has reached ambient (room) temperature before turning it on or connecting it to the power adapter. Drastic variations in temperature and humidity can create condensation within the Notebook and may cause it to short-circuit.

UPGRADES AND REPAIRS

- Only a qualified Service Engineer should perform upgrades and repairs to your Notebook.
- If you do not have the necessary qualifications, go to an appropriate **Service Engineer**. Please contact the **Service Centre** if you are experiencing technical problems with your Notebook.

SECURING YOUR NOTEBOOK

SETTING A USER PASSWORD

You can prevent unauthorized access to your Notebook by setting a User Password. When starting the Notebook the password will be requested. The User Password is set in the **BIOS**.

⇒ Attention: Keep your password in safety place. If you forget your password you do not have the possibility to cancel it. In this case please call your service centre.

To protect your data from unauthorized access, you can also use the security option of Windows^{xp}. See also chapter „Data and System Security“ (p. 63).

USING A SAFETY LOCK

You can prevent theft by using a so called **Kensington-lock**, which can be bought at your local retailer.

The cable wraps around an object and the „T“ shaped end inserts into the Kensington lock port and a key or combination dial is used to secure the lock in place. Please keep your key at a safety place.



NOTES FOR SERVICE ENGINEERS

- Before opening the housing, disconnect the Notebook from all power sources and remove any connecting cables. If the Notebook has not been disconnected from the power outlet before being opened, there is a **danger** of severe electric shock. There is also a risk of damage to the components.
- Internal components of the Notebook may be damaged by **electrostatic discharge** (ESD). Perform system upgrades and changes in an **ESD-protected work area**. If no such work area is available, wear an **antistatic wrist strap** or touch a highly conductive metal object. Your service centre can repair damage sustained by inappropriate handling for a fee.
- Use only **original spare parts**.

CAUTION: The CMOS lithium batteries cannot tolerate intense pressure, high temperatures or fire. Keep away from children! Danger of explosion if replaced incorrectly. Only replace with a compatible type (CR2032) as recommended by the manufacturer. Lithium-Batteries are **hazardous waste** and need to be disposed of properly. If necessary, we will take back your used CMOS lithium battery.

Notes on Laser Radiation :

Laser devices of Laser Class 1 to Laser Class 3b may be used in the Notebook. Where the Notebook housing remains closed, the device meets the requirements of **Laser Class 1**. By opening the Notebook housing you will gain access to laser devices of up to Laser Class 3b.

- The CD-ROM/CD-RW/DVD/DVD-RW drive contains no user-serviceable parts. Only the **manufacturer** should perform repairs to the CD-ROM/CD-RW/DVD/DVD-RW drives.

When removing and/or opening laser devices, the following guidelines must be observed:

- **DO NOT** look into the laser beam, even while wearing optical protection.
- **DO NOT** allow yourself to be exposed to the laser beam. Avoid exposure of the eyes or skin to direct or stray radiation.

Appendix

Subject	Page
Standards	79
Warranty	84
Index	87

STANDARDS

This Notebook meets the requirements of the following standards:

ELECTROMAGNETIC COMPATIBILITY

This Notebook meets the following requirements for standards of electromagnetic compatibility and electrical safety:

EN 55022	Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement.
EN 55024	Information technology equipment - Immunity characteristics - Limits and methods of measurement.
EN 61000-3-2	Limits - Limits for harmonic current emissions (equipment input current up to and including 16 A per phase).
EN 61000-3-3	Limits - Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with a rated current up to 16 A.

- Keep the Notebook at least one meter (approximately three feet) away from **high frequency** and **magnetic interference sources** (e.g., televisions, loudspeaker cabinets, mobile telephones, etc.) in order to avoid malfunctions and/or loss of data.
- Please note that only **shielded** cables shorter than 3 meters (9.84 ft) should be used for the LPT, COM, USB, IEEE 1394, audio, video and network interfaces with this Notebook.
- When connecting additional components, please observe the *Guidelines on Electromagnetic Compatibility (EMC)*.
- This class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ELECTRICAL SAFETY

EN 60950	Safety of information technology equipment.
<ul style="list-style-type: none">• The connection of devices is limited to equipment that complies with EN60950 "Safety of information technology equipment" or EN60065 "Audio, video and similar electronic apparatus. Safety requirements"• For U.S. / Canadian purposes: The Notebook should only be connected to equipment which complies with UL 60950 / CAN CSA 22.2 No 60950	

ERGONOMICS

EN 29241-3	Ergonomic requirements for office work with visual display terminals (VDTs). Visual display requirements.
EN ISO 9241-8	Ergonomic requirements for office work with visual display terminals (VDTs). Requirements for displayed colors.

NOISE EMISSION

ISO 7779 (ISO 9296): Acoustics. Measurement of airborne noise emitted by information technology and telecommunications equipment.

This PC fulfills the requirements of noise emissions according to ISO 7779 with following values.

Operating Mode	Max. Sound power level LWAd (dB/A) (declared according to ISO 9296)
Idling	4.8
Operating	5.2
	Max. Sound pressure level LpAm (dB/A) (declared according to ISO 9296)
At bystander position Idling	40
St bystander position Operating	47

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

"Uniwill declare that 255xIy (with wireless card: Intel WM3B2200BG) is limited in CH1~CH11 by specified firmware controlled in USA."

MACROVISION STATEMENT

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

DECLARATION OF CONFORMITY

According to 47CFR, Parts 2 and 15 for Class B Personal Computers:

We:	Medion USA, Inc.
Located at:	1001 Bayhill Dr. Ste. 155, San Bruno, CA 94066
Fax :	650.875.1106 (for conformity issues only)

Declare under sole responsibility that the product identified herein complies with 47CFR Parts 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Sampling records continue to indicate that the equipment being produced can be expected to lie within the acceptable variation, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsi-

ble for ensuring that the equipment complies with the standards of 47CFR §§15.101 to 15.109.

Canadian Notice

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

Le present appareil numerique nemet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de Classe B prescrites dans le reglement sur le brouillage radioelectrique edicte par le Ministere des Communications du Canada.

Trade Name: Medion

Type or Model Number: MD95393 – UIM2010

Party Responsible: MEDION USA, Inc.

Executed on 21st of April 2005, at San Bruno

Copyrights

Microsoft, Windows, Windows Media, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries. Other company, product, and service names may be trademarks or service marks of others.

WARRANTY

MEDION warrants to our customers that this product is free from defects in materials and workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or a defective product returned to a MEDION repair facility or a MEDION Authorized Service Center ("ASC") for such product, as applicable, and proven to be defective upon inspection, will be exchanged for new or comparable rebuilt parts, or a refurbished product, as determined by the MEDION repair facility or the ASC.

Limited warranty repair or replacement shall not extend the original limited warranty period of the defective product. This limited warranty does not cover any supplies or accessories, including but not limited to: software, blank media, user-installed drives, etc.

EXCLUSIONS: this limited warranty does not apply, and you will have no remedy hereunder with respect to (a) products that have been modified, opened, repaired or otherwise altered, except by MEDION or an ASC, (b) products that have been damaged or destroyed after delivery to the customer, (c) any third party software, interfaces, parts, supplies, peripherals or other products or any defects resulting from use of the product in connection with such third party products, (d) defects resulting from improper or inadequate maintenance, calibration or site preparation, (e) defects resulting from any misuse, abuse, accident, neglect, negligence or any use other than in accordance with the handling or operating instructions provided by MEDION, (f) defects resulting from exposure to unusual physical or electrical stress or from any operation other than in accordance with the published environmental specifications for the product.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND MEDION SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND NO IMPLIED WARRANTY APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE. Some countries, states or provinces do not allow exclusions or limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This limited warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.

MEDION's limited warranty is valid in any country or locality where MEDION has a support presence for this product and where MEDION has marketed this product. The level of warranty service you receive may vary according to local standards. MEDION will not alter form, fit or function of the product to make it operate in a country for which it was never intended to function.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE REMEDIES IN THIS LIMITED WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL MEDION OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST MEDION BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY MEDION WHICH CAUSED THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF MEDION. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT AS LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Please note the following:

Be sure to keep your purchase receipt in a safe place. MEDION, at its option, may require a copy of the receipt to validate the warranty period effective date (i.e. date of purchase). Warranty liability only applies to material or factory faults. It does not apply to damage due to breakage, for example, a crack in the housing. Our service includes unit exchange or send-in repair:

Unit Exchange

In locations where Unit Exchange is available, MEDION will send you a replacement PC. You must return the defective PC to MEDION (using the shipping carton that the new one came in.)

Send-In Repairs

In locations where Send-In Repair Service is available, repair service can be obtained by shipping your PC to the MEDION Repair Center. The PC will be repaired and returned to you.

Replacement products may be either new or equivalent in performance to new. MEDION replacement or repaired products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

For either Unit Exchange or Send-In Repairs, you must have an authorized RMA number from Medion support before shipping your defective product.

Out-of-Warranty Support

In addition to providing free technical support during the warranty period, MEDION is also available to support your product after the warranty period has ended. This out-of-warranty support will be provided on a fee basis.

Networking

Medion warrants the operation of network capabilities as follows: Medion will ensure that the network (LAN) port is working properly. No network connectivity issues are supported.

Making Copies of This Manual

This manual contains information protected by law. All rights are reserved. Copyright law prohibits duplicating this information in mechanical, electronic, or any other form, without the written approval by the manufacturer.

INDEX

A

All programs..... 21
Ambient temperature..... 7
Appendix 77
Audience..... i

B

Battery operation 10, 25
 Battery Power..... 26
 Charging the Battery 26
 Checking the battery level..... 27
 Inserting the battery..... 25
Battery Power 26
BIOS Setup-Program 57
Burning CDs See writing CDs

C

Cabling 9
Care of displays 73
CD-ROM..... 39
CD-RW Drive 39
CDs
 Data..... 42
 Music..... 42
 Writing..... 42
Charging the Battery 26
Checking the battery level ... 27
Cleaning agents 73
Cleaning and Care 73
Click..... 32
Clone desktop..... 30
Connection options..... 52
Connectors

External monitor 29
Modem..... 45
PC card..... 50
USB..... 52
Control panel 22
Copyright© ii

D

Data and system security 63
Data entry 32
Data security 3, 63
Deleting files..... 38
Desktop 21
Digital Signatures 56
Directories..... 38
Disc-Drive 39
Discs
 Handling..... 39
 Loading..... 40
 Playing DVD movies 42
 Playing music CDs..... 42
 Removing..... 41
 Writing..... 42
Display..... 29
 Opening and closing the display .. 29
Double-click..... 32
Drag and drop..... 32
Driver support..... 72
Drivers..... 38, 55
DVD movies..... 42
DVD-Drive 39

E

Electrical safety 80
Electromagnetic compatibility
 79
EMC..... 79

Emergency Ejection of a blocked Disc	41
Enter personal details	20
Ergonomics	80
Extend desktop	30
External monitor	14, 29
Clone desktop	30
Extend desktop	30

F

Factory settings	
Recovery	67
FAQ	61
Fast Ethernet-Network	46
FCC Compliance Statement..	81
Files	
Deleting	38
Finding files	37
First Aid	59
Frequently asked questions .	61

G

Getting Started	19
-----------------------	----

H

Handling	17
Hard drive	37
Partitions	37
HD	See Hard drive
help	54
Help with software	55

I

Icons	22
IEEE 1394	15, 53

Indicators

Capital Lock	16
Hard disk drive access	16
Num Lock	16
Scroll Lock	16
Information about your PC...	22
Inserting the battery	25
Installing a PC card	51

K

Kensington-lock	75
Keyboard	32

L

Laser radiation	76
License agreement	20

M

Main components	35
Main Operation	24
Maintenance	73
Care of the TFT display	73
Cleaning and Care	73
Transporting the notebook	74
Maintenance programs	63
Mikrofonindgang	44
Model Number	83
Modem	9, 45
Mouse	33
MPEG2	42
MusicMatch Jukebox	42

N

Network	46
Fast Ethernet-Network	46
Troubleshooting	48

What do you need for networking?	47
What is a Network?	46
Wireless LAN.....	49

O

On/Off button	23
Operational safety	3

P

Partitions	37
Password reset disk	63
PC card	
Installing.....	51
Removing.....	51
PC card slot.....	50
Peripheral devices	55
Playing DVD movies.....	42
Playing music CDs	42
Point	32
POST	70
Power	28
Turning off your computer	22
Power adapter	8
Power management.....	28
Power On Self Test	70
Power supply	23
Battery operation.....	25
Suspend mode	28
Power Supply	
Main Operation	24
PowerDVD	42
Program bar	21
Programs	
Installing.....	67
Location	38

Q

Quality	ii
---------------	----

R

Recovery	66
Factory settings	67
Windows ^{xp}	66
recovery points	66
Removing a PC card	51
Repairs	74
Restoring	66
Limits	68
Running the Bios Setup	57

S

Safety	
Data.....	38
Safety and maintenance	1
Safety instructions	3
Additional safety instructions.....	5
Ambient temperature.....	7
Battery operation.....	10
Cabling.....	9
Data security	3
General safety information.....	4
Modem.....	9
Operational safety	3
Optical drive safety	6
Power adapter.....	8
Set-Up location	7
TFT Display safety.....	6
Touch pad.....	9
Upgrades and repairs.....	74
Screen resolution.....	29
Scroll	32
Search	37
Securing your Notebook	75
Serial Number	ii
Service	ii

Service engineers.....	76
Setting a User Password.....	75
Set-Up Location	7
Software	54
for playing CDs.....	42
Software help	55
Sound card.....	44
Standards	79
Electrical safety.....	80
Electromagnetic compatibility	79
Ergonomics	80
FCC Compliance Statement.....	81
Standby mode	28
Start button	21
Support	72
Suspend to disk	28

T

Task bar	22
Touch pad	9, 33
trademarks	ii
Transport.....	74
Troubleshooting	70
Errors and possible causes	71
Turn off computer	22

U

Universal Serial Bus.....	52
Upgrades and repairs.....	74
Use of PC cards.....	50
Using a safety lock	75

V

Views	
Battery charge indicator	13

Device indicators	13
IEEE 1394.....	15
Infrared Port.....	14
Keyboard	13
LAN Port (RJ-45)	15
Line out.....	14
Microphone.....	13
Microphone in.....	14
Modem Port (RJ-11)	15
Monitor (external).....	14
Open notebook.....	14
PC card slot PCMCIA.....	15
Power ON/OFF	13
Stereo speaker	13
TFT Display.....	13
Touchpad	13
USB port	15
Views of the notebook	11
Voyants	
Wireless LAN	16

W

Warranty.....	84
Windows activation	57
Windows Logo testing	56
Windows Media Player	42
Windows XP	
Control Panel	22
Desktop.....	21
help	54
Help	22
Help and support	54
Interactive training.....	54
Manual	54
Recovery point	55
Tour	54
Windows ^{xp}	
Recovery	66
Wireless LAN.....	49
Writing CDs	42