

## **NOTES ON THIS MANUAL**

Keep these instructions with your computer at all times. The proper set up, use and care can help extend the life of your computer. In the event that you transfer ownership of this computer, please provide these instructions to the new owner.

This manual is divided into sections to help you find the information you require. Along with the **Table of Contents**, an **Index** has been provided to help you locate information.

In addition, many application programs include extensive help functions. As a general rule, you can access help functions by pressing F1 on the keyboard. These help functions are available to you when you use the Microsoft Windows® operating system or the various application programs.

We strongly recommend that you read the Online Manual for your Notebook, which can be found in the **Start Menu**.



### **Information about your PC**

This interactive manual is designed to provide additional information about your Notebook as well as useful links accessible via the World Wide Web.

Windows® invites you to a **tour** (notes on the task bar) to familiarize yourself with the operating system. We listed further useful sources of information starting on page 74.

## **AUDIENCE**

These instructions are intended for both the novice and advanced user. Regardless of the possible professional utilization, this Notebook is designed for day-to-day household use. The functions and applications for use with this Notebook have been designed with the entire family in mind.

## **DOCUMENT YOUR NOTEBOOK**

It is important to document the details of your Notebook purchase in the event you need warranty service. The serial number can be found on the back of the Notebook:

Serial Number .....

Date of Purchase .....

Place of Purchase .....

## **QUALITY**

Medion has selected the components in this computer for their high level of functionality, ease of use, safety and reliability.

Through balanced hardware and software design we are able to provide you with an innovative personal computer useful for applications relating to both work and leisure.

We are pleased to welcome you as our newest customer.  
Thank you for choosing Medion.

## **SERVICE**

Medion is pleased to provide individualized customer service throughout the life of your Notebook. Please feel free to contact a customer service representative with any questions relating to this Notebook.

Copyright<sup>®</sup> 2004 Medion<sup>®</sup>. All rights reserved. Microsoft<sup>®</sup>, MS-DOS<sup>®</sup>, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium<sup>®</sup> is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

**Information in this document is subject to change without notice.**

## **Table of Contents:**

Notes on This manual.....	i
Audience .....	i
Document Your Notebook .....	ii
Quality .....	ii
Service.....	ii
<b>SAFETY INSTRUCTIONS .....</b>	<b>3</b>
Data Security .....	3
Operational Safety .....	4
General Safety Information .....	4
Important Additional Safety instructions .....	5
CD-ROM/CD-RW/DVD/DVD-RW Drive safety .....	6
TFT Display Safety .....	6
Set-Up Location.....	7
Ambient Temperature .....	7
Power Adapter .....	8
Cabling .....	9
Modem.....	9
Touch pad .....	9
Battery operation .....	10
<b>VIEW OF THE NOTEBOOK .....</b>	<b>13</b>
Open Notebook .....	13
Left Side.....	14
Right Side.....	14
Rear Side .....	15
Underside .....	16
Indicators .....	17
Hotkeys.....	19
<b>GETTING STARTED .....</b>	<b>23</b>
The Windows® XP Desktop.....	25
<b>POWER SUPPLY .....</b>	<b>27</b>
On/Off button .....	27
Power Adapter .....	28

Battery Operation .....	29
Inserting the Battery .....	29
Removing the battery .....	30
Charging the Battery .....	31
Battery Power.....	31
Checking the Battery Level.....	32
Power Management.....	33
Standby Mode .....	33
Suspend (hibernate) mode .....	33
<b>DISPLAY .....</b>	<b>34</b>
Opening and Closing the Display .....	34
Screen Resolution .....	35
Connecting an External Monitor .....	35
Connecting a TV .....	37
<b>DATA ENTRY .....</b>	<b>38</b>
The Keyboard .....	38
Notebook-specific key combinations .....	38
Touch pad.....	39
<b>THE HARD DRIVE.....</b>	<b>43</b>
Important Directories .....	44
USB memory stick [optional] .....	45
Usage.....	45
Write-/ Delete protection .....	46
First aid in the event of malfunction .....	46
<b>THE OPTICAL DRIVE .....</b>	<b>47</b>
CD-RW/DVD-ROM Combo Drive .....	47
Handling Discs.....	47
Loading a Disc .....	48
Removing a Disc.....	49
Emergency Ejection of a blocked Disc .....	49
Playing Music CDs .....	50
Playing DVD Movies.....	50
Writing CDs.....	51
<b>THE SOUND CARD .....</b>	<b>53</b>
External Audio Ports .....	53

<b>MODEM .....</b>	<b>56</b>
Modem port .....	56
<b>THE NETWORK .....</b>	<b>57</b>
What is a network? .....	57
Fast Ethernet-Network .....	58
Wireless LAN .....	61
<b>MEMORY CARD CONNECTIONS .....</b>	<b>66</b>
Inserting Memory Cards .....	67
Removing Memory Cards .....	67
<b>THE PC CARD SLOT.....</b>	<b>68</b>
32-bit CardBus Port .....	68
Use of PC-cards.....	68
Installing a PC card.....	69
Removing a PC card .....	69
<b>CONNECTION OPTIONS.....</b>	<b>70</b>
Serial Interface .....	70
Universal Serial Bus (USB) Port .....	71
PS/2 Interface.....	72
IEEE 1394 (FireWire <sup>®</sup> ).....	72
Infrared Interface .....	73
Instructions for Using the IR port.....	73
<b>SOFTWARE.....</b>	<b>74</b>
Getting to Know Windows XP .....	74
Windows <sup>®</sup> XP Manual .....	74
Windows <sup>®</sup> XP Tour .....	74
Microsoft <sup>®</sup> Interactive Training .....	74
Windows <sup>®</sup> XP Help and Support .....	74
Software Help .....	75
Device Drivers.....	75
Information about Your PC.....	76
Digital Signatures .....	76
Windows Activation.....	77
The BIOS Set-up-Program .....	77
Running the BIOS Set-up.....	78
Navigating the BIOS Utility .....	78

<b>FAQ – FREQUENTLY ASKED QUESTIONS.....</b>	<b>81</b>
<b>DATA AND SYSTEM SECURITY.....</b>	<b>83</b>
Data Security .....	83
Maintenance Programs .....	83
Password Reset Disk .....	83
Windows® Update .....	83
<b>SYSTEM RECOVERY.....</b>	<b>84</b>
Restoring Microsoft Windows XP .....	84
System Restore powered by PowerQuest .....	85
Limits of Restore Factory Settings (Restore option 3).....	86
Performing the Restore .....	87
<b>TROUBLESHOOTING.....</b>	<b>88</b>
Localize the Cause .....	88
Check Cables and Connections.....	88
The Power On Self Test (POST).....	88
Errors And Possible Causes .....	89
Additional Support .....	90
Driver Support.....	90
<b>MAINTENANCE.....</b>	<b>91</b>
Maintenance Instructions .....	91
Cleaning and Care.....	91
Care of the TFT Display .....	91
Transporting the Notebook.....	92
Upgrades and Repairs.....	92
Securing your Notebook.....	93
Notes for Service Engineers.....	94
<b>STANDARDS.....</b>	<b>97</b>
Electromagnetic Compatibility.....	97
Electrical Safety.....	98
Ergonomics .....	98
Supplementary Information.....	98
ISO 13406-2 Class II.....	98
<b>RESOLUTION .....</b>	<b>100</b>
FCC Compliance Statement .....	101

<b>WARRANTY .....</b>	<b>102</b>
Limits of Liability .....	104
Local Law .....	104
Making Copies of This Manual.....	104
<b>INDEX.....</b>	<b>105</b>



## ■ Chapter 1

### Safety and Maintenance

<b>Subject</b>	<b>Page</b>
Data Security _____	3
Set-up Location_____	7
Ambient Temperature _____	7
Power Adapter_____	8
Modem _____	9
Touch Pad _____	9
Battery Operation _____	10



# SAFETY INSTRUCTIONS

---

Please follow the instructions in this section for the safe operation of your Notebook:



- **DO NOT** open the case of the Notebook, the battery or the power adaptor. When the case is open there is a danger of severe electric shock.



- **DO NOT** insert objects through the slots and openings of the Notebook. This may lead to electric shock, electrical short-circuit or fire that will damage your Notebook.
- **DO NOT** allow small children to play unattended with electrical equipment.



- **DO NOT** cover the slots and openings of the Notebook. These openings are for ventilation purposes. Covering these vents may lead to overheating.
- **This Notebook is NOT designed for use within industrial environments.**

## DATA SECURITY



The supplier does not assume liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or consequential losses.

## **OPERATIONAL SAFETY**

It is important to follow all of the safety instructions in this manual to ensure the safety of you and your Notebook.

## **GENERAL SAFETY INFORMATION**

If you find that:

- the power cord/power adapter is worn or damaged.
- liquid is spilled on the unit.
- the Notebook fails to work properly.
- the Notebook is dropped or the housing is damaged.

You should:

- shut-down your Notebook immediately.
- remove the power cord from the socket.
- contact Customer Service.
- do not restart unless you have contacted Customer Service.

How important is the information you will be storing on your Notebook? You need to guard against the loss of your data by making backup copies. You can backup your data onto CD, floppy disk, or other media such as Zip drives. It depends upon how much data you have. In this way, if something happens to the hard drive in your Notebook, you have another copy of your data.

## **IMPORTANT ADDITIONAL SAFETY INSTRUCTIONS**

When using any electronic equipment, basic safety precautions should always be taken. Following the guidelines below can reduce the risk of fire, electric shock and personal injury:

- Do not use this product near water (e.g., near a bath-tub, lavatory or kitchen sink, in a wet basement or near a swimming pool).
- Avoid using a telephone/modem (other than a cordless type) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone/modem to report a gas leak in the vicinity of the leak.



Lithium batteries cannot handle intense pressure, high temperatures or fire. Danger of explosion if replaced incorrectly. Replace batteries with a compatible type as recommended by the manufacturer. Lithium batteries are **hazardous waste** and require proper disposal. Contact the Medion **Service Center** for additional information on battery disposal.

## CD-ROM/CD-RW/DVD/DVD-RW DRIVE SAFETY




- CD-ROM-/CDRW-/DVD-drives are **Laser Class 1** devices. These lasers **must** remain in their sealed casing.
- **Danger** — Invisible laser radiation when open. Avoid direct exposure to beam. This product is certified by the manufacturer to comply with DHHS rules 21CFR, Chapter 1, Subchapter J, applicable at date of manufacturer. Refer to optical drive labels for additional details.
- **DO NOT** remove the drive covers, as exposure to the lasers may be harmful.
- **DO NOT** look directly into the laser, even when wearing eye protection.

## TFT DISPLAY SAFETY



- To avoid damage to the TFT Display, **never** open it a **full 180°**. **Do not** forcibly open it.
- In order to avoid damage to the display, **do not** touch it with your fingers or sharp objects.
- **Never** lift the Notebook by the TFT Display; doing so could break the hinges.
- There is a risk of injury if the **TFT display breaks**. Use **protective gloves** to pack up the broken pieces and contact customer service to arrange for proper disposal.

It is important to thoroughly wash your hands after handling a broken TFT display. There is a chance that **chemicals** may have been released.

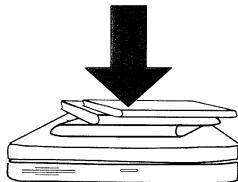

- **Never** place objects on top of the Notebook that would exert any pressure on the display. There is a danger that even slight pressure may break the TFT display.

## SET-UP LOCATION

- Keep your Notebook and all connected peripherals away from moisture, dust, heat and direct sunlight. Failure to do so can lead to Notebook malfunction or damage.
- It is highly recommended you do not use the Notebook outdoors.
- Operate the Notebook and all peripherals on a stable, balanced and vibration-free surface.
- **Do not** leave the base of your Notebook on your lap or any part of your body for a long period of time while the Notebook is turned **ON** or is charging. The Notebook can become very warm while it is turned on or charging and can cause discomfort or injury from heat exposure.

## AMBIENT TEMPERATURE

- The Notebook is most reliably operated at an ambient temperature between **+41°** and **+104° F** and at a relative humidity between **30%** and **70%** (without condensation).
- When powered off, the Notebook can be stored at temperatures between **32°** and **140° F**.

## POWER ADAPTER

- Do not open the power adapter housing. When the housing is open there is a **danger** of severe electric shock. It contains no user-serviceable parts.
- The electric outlet must be in the vicinity of the Notebook and within reach of the power adapter cables. **DO NOT** stretch the power cables tightly to reach an electric outlet.
- To disconnect your Notebook from the power source, or set the Notebook to battery operation, remove the power cord from the Notebook's power socket.
- Only use the Notebook with a power adaptor (**FSP120-AAC**) operating at **AC 115V~/60 Hz**. In European countries use the Notebook at **AC 220-240V~/50 Hz**.  
For details on power consumption, please refer to the rating plate on the rear of your Notebook. If you are unsure of the type of power supply available at the point of use, ask your local power company.
- Use **only** the supplied power cord and power adapter.
- If using an extension cord, make certain that it meets your local safety requirements. If in doubt, consult an electrician.
- To provide additional protection against electric shock, power surges, lightning strikes, or other electrical damage to your Notebook, we recommend the use of a **surge protector**.

## CABLING

- Arrange cables so no one can walk on or trip over them.
- **DO NOT** place objects on any of the cables.



**Caution** – To reduce the risk of fire, use only No. 26 AWG or larger telecommunication cords (applies to American Standards).

## MODEM

- If your system has a modem, please make sure you connect it to an **analog** telephone line only. Connecting to a digital PBX, a digital line designed for broadband services or ISDN, a shared service line or a payphone will damage the modem or the devices to which it is connected.

## TOUCH PAD

Light pressure with the tip of your finger is all that is required to operate the touch pad. Because the touch pad is electrostatic sensitive, objects cannot be used in place of your fingers. Using a pen or other object can damage the touch pad or cause the Notebook to malfunction.

## BATTERY OPERATION

To extend the life and power of your battery and guarantee secure operation, the instructions below should be followed:



- Never expose the battery to **direct sunlight** or **heat** for long periods.
- **Do not** dispose of the battery by fire as they may explode. Check with local codes for possible special disposal instructions.
- **Do not** open the battery housing; it contains no user-serviceable parts.
- Disregarding these instructions will lead to damage and under some circumstances may even cause the battery to **explode**.

- Keep the battery away from electrically conductive materials, chemical substances and cleaning agents.
- Only use the originally supplied power adapter to charge the battery.
- Fully discharge the battery before recharging it.
- Replace the battery **only** with the same type or an equivalent type recommended by the manufacturer.
- Charge the battery only until the battery charging light goes out. Also, refer to the instructions under "Charging the Battery" on page 31 for instructions on checking the battery level.
- Only change the battery when the unit is switched off.
- **Batteries are classified as special waste** and should always be disposed of properly. Contact Customer Service for more details.
- Keep batteries away from children at all times.
- Use only the batteries and power adapter/cord indicated in this manual.

## ■ Chapter 2

### Views of the Notebook


<b>Subject</b>	<b>Page</b>
Open Notebook	13
Front view	13
Left Side	14
Right Side	14
Rear Side	15
Underside	16
Power and Status Indicators	17



# IEWS OF THE NOTEBOOK

---


## OPEN NOTEBOOK

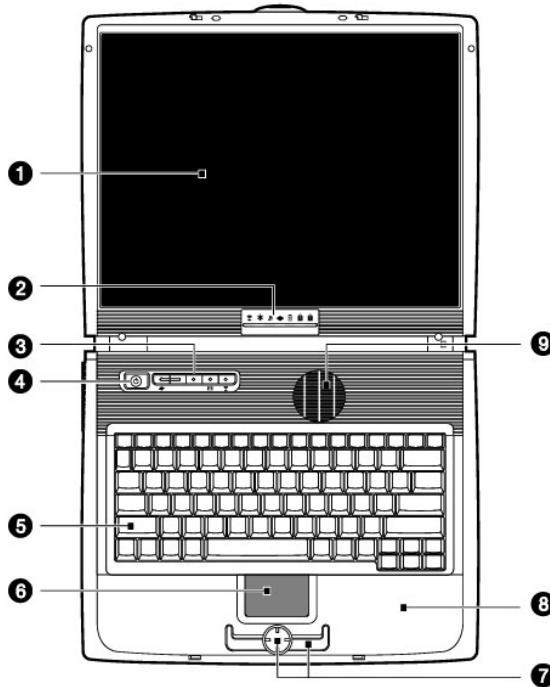

- |   |   |
|---|---|
| ① | TFT display (⇒ p. 34)                           |
| ② | Status LED Indicators (⇒ p. 17)                 |
| ③ | Hotkeys (⇒ p. 19)                               |
| ④ | Power ON/OFF (⇒ p. 27)                          |
| ⑤ | Keyboard (⇒ p. 38)                              |
| ⑥ | Touch pad (⇒ p. 39)                             |
| ⑦ | Touch pad keys / Touch pad scroll key (⇒ p. 39) |
| ⑧ | Palm rest                                       |
| ⑨ | Fan slot*                                       |


**\*Caution! Do not cover when in use!**

## LEFT SIDE

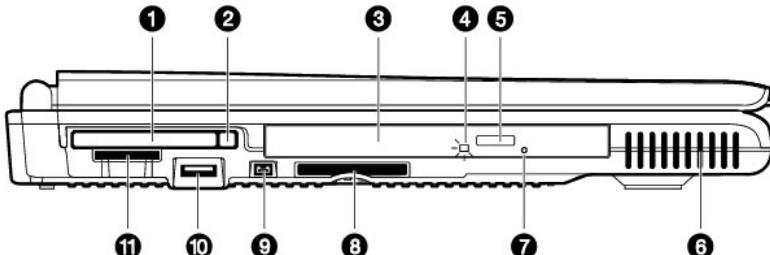


①	PC card slot PCMCIA (⇒ p. 68)
②	PC card eject button (⇒ p. 68)
③	Optical Drive (⇒ p. 45)
④	Activity LED optical drive
⑤	Disc eject button (⇒ p. 49)
⑥	Stereo Speaker
⑦	Disc emergency eject
⑧	Compact Flash Card reader (⇒ p. 66)
⑨	IEEE 1394 (FireWire®) (⇒ p. 72)
⑩	USB port (⇒ p. 71)
⑪	3 in 1 Card reader (⇒ p. 66)

## RIGHT SIDE

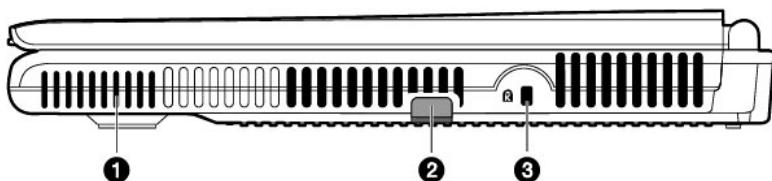

①	Stereo Speaker
②	Infrared port (⇒ p. 73)
③	Kensington lock (⇒ p. 93)


## REAR SIDE

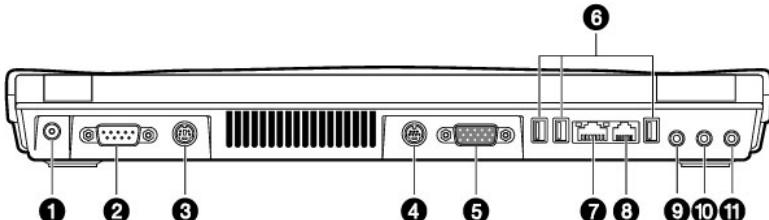

<b>1</b>	Power socket (⇒ p. 27)
<b>2</b>	Serial port
<b>3</b>	PS/2 Port (⇒ p. 72)
<b>4</b>	S-Video TV out port
<b>5</b>	External monitor (VGA) (⇒ p. 35)
<b>6</b>	USB port (⇒ p. 71)
<b>7</b>	LAN port (RJ-45) (⇒ p. 61)
<b>8</b>	Modem port (RJ-11) (⇒ p. 56)
<b>9</b>	Microphone / Center Subwoofer <sup>1</sup> (⇒ S. 53)
<b>10</b>	Loudspeaker out / SPDIF <sup>1</sup> (⇒ p. 53)
<b>11</b>	Audio In / Speaker backwards <sup>1</sup> (⇒ S. 53)


<sup>1</sup> Function of port depends on speaker configuration.  
(⇒ p. 53/54)

## UNDERSIDE

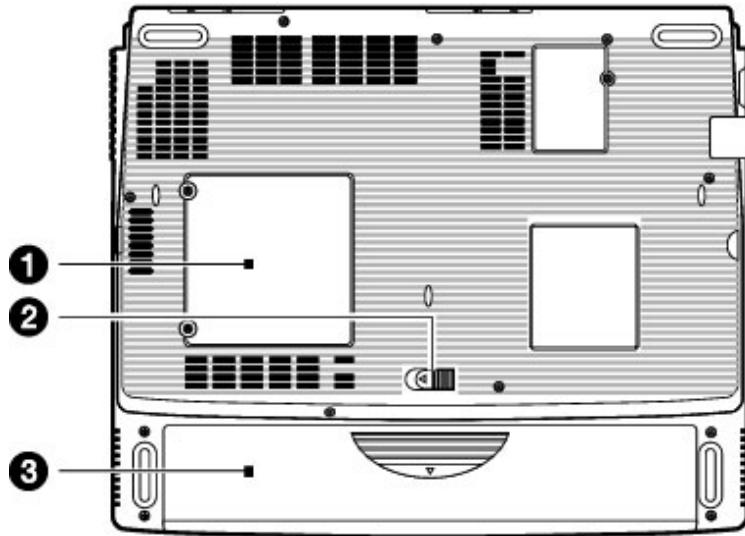

- |          |                                     |
|----------|-------------------------------------|
| <b>1</b> | Memory compartment                  |
| <b>2</b> | Battery lock/unlock latch (⇒ p. 29) |
| <b>3</b> | Battery Bay                         |

## INDICATORS

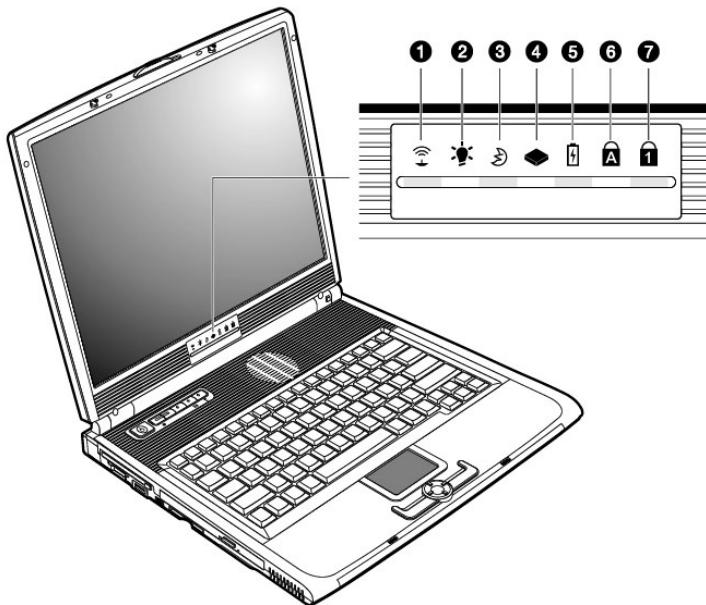


LED's indicate the power and operating system states of the Notebook. The meaning of each LED is:

WIRELESS LAN	
①	Display for wireless data exchange. If the display lights <b>steadily</b> blue the wireless LAN function is enabled (optional feature).
②	This LED lights when operation (battery / power).
③	This LED <b>flashes</b> when the Notebook is in stand-by mode.
④	This LED lights when the Notebook is accessing the hard disk.
⑤	This LED lights when the battery is charging. When the battery is charged the light goes out.

<b>6</b>	<b>CAPITAL LOCK</b> This LED lights when CAPS-Lock has been activated. This sets the keyboard to capital letters.
<b>7</b>	<b>NUM LOCK</b> This LED lights when NUM-Lock has been activated. It sets the keyboard so that numbers are assigned to certain characters, simplifying numerical data input.

## HOTKEYS

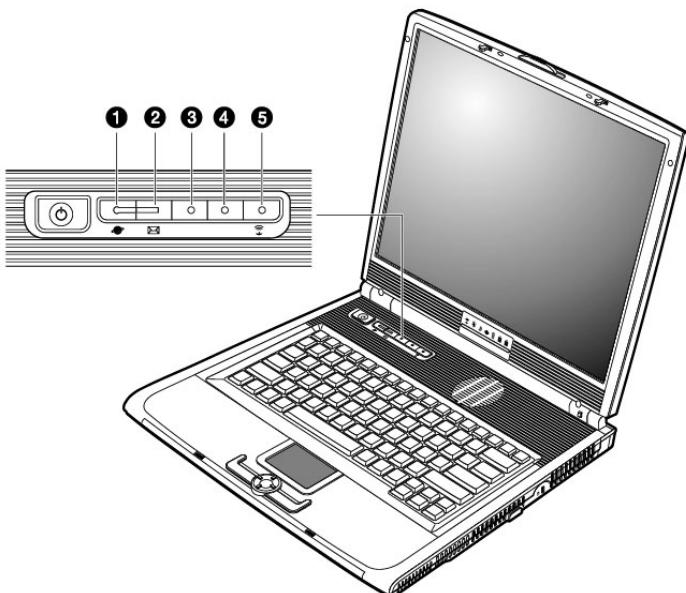

<b>1</b>		Launches the E-Mail Program.
<b>2</b>	WWW	Launches the Internet Browser.
<b>3</b>		This key is to enable/disable the TV-out option. Connect a TV set to the proper port first.
<b>4</b>		This key switches between the following display resolutions: 640 x 480, 800 x 600 und 1024 x 768.
<b>5</b>		To enable or disable the wireless LAN.



# ■ Chapter 3

## Handling

<b>Subject</b>	<b>Page</b>
Getting started	23
On/Off Button	27
Power Adapter	28
Battery Operation	29
Power Management	104
Open and Closing the Display	34
Screen Resolution	35
Connecting an External Monitor	35
Keyboard	38
Touchpad	39



# GETTING STARTED

---

Before you get started using your notebook, first take a few moments to read the important section on **Safety**.

This Notebook comes with software **fully pre-installed**. You do not have to install any of the CDs supplied. However, with many programs (e.g., telephone CDs or encyclopedias) it is necessary to insert the corresponding CD to access the data that is stored on it. The software will prompt you to do this when necessary.

## Step 1

Before starting the Notebook please insert the battery. For further information read the section titled "Power Supply" starting on page 27. Open the display (see page 34) and switch on the Notebook using the On/Off switch (see page 13.)



If the battery level is insufficient, connect the power adapter.



**Note:** Make sure there is no bootable CD (e.g., the Recovery CD) in the CD-ROM drive. Such disks will prevent the operating system from loading off the hard drive.

Your operating system is finished loading when a welcome screen is shown on your display.

## Step 2

The greeting procedure will guide you through a series of dialogue boxes. The information in each dialogue box will explain the steps that need to be taken.

Should you have any questions just click on

## **Enter Personal Details**

In one of the initial start-up dialog boxes a request will appear on the screen for you to enter your personal details. Please enter the requested information in the white input fields. You can select the fields by clicking on them with the mouse. When you press Enter, or click on the Continue button you progress to the next window.

## **License Agreement**


The greeting procedure also displays the license agreement. Please read this carefully. It contains important legal information on the use of your software. In order to see the full text, use the mouse and the scroll bar on the right side of the screen to move downwards until you have reached the end of the document. You accept the agreement by clicking on the "**I accept the agreement**" option field. Only by doing so will you be entitled to use the product under lawful terms and conditions and be entitled to open the sealed Windows® manual.

## **Step 3**

After the login procedure the Windows® desktop appears on your screen. This can be adjusted so that the screen of your computer looks different.

# THE WINDOWS® XP DESKTOP

After the login procedure the Windows® XP desktop appears on your screen. (Your desktop might not look exactly like the one shown here.)

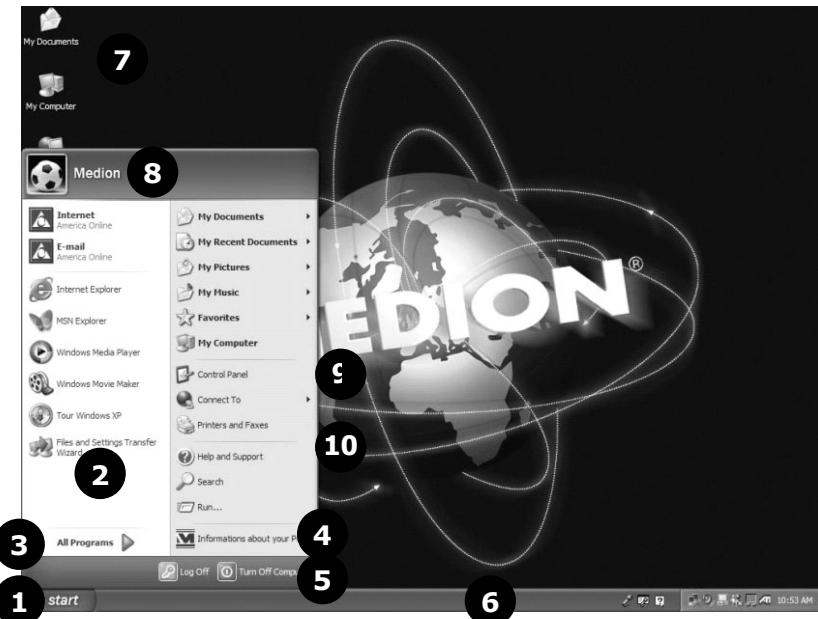

## 1. Start Button

Clicking the Start button brings up a menu where you can access help, software programs, files, and settings. For more information, click **Windows® XP Tour** on the **Start** menu.

## 2. Program Bar

The most commonly used software programs are listed here.

### **3. All Programs**

All of the software programs installed on your Notebook are ordinarily listed here. Click **All Programs** to reveal an extensive menu.

### **4. Information about your PC**

Click this button to receive important information about your Notebook as well as valuable hints and additional assistance.

### **5. Turn Off Computer**

Click this button to shut down Windows® XP and the Notebook.

### **6. Task Bar**

Here you receive information and status reports about Windows® XP and which programs are running.

### **7. Desktop Icons**

Desktop icons link to their respective programs. To start a program, double-click its desktop icon.

### **8. Logged in User**

This tells you which user is logged in to your Notebook.

### **9. Control Panel**

You can use the icons in Control Panel to change the appearance and functionality of Windows® XP. These icons represent options for configuring your Notebook.

### **10. Windows® XP Help**

Here you can find information on using your Notebook, networking, backup, and many other tasks.

# POWER SUPPLY

---

## ON/OFF BUTTON


The On/Off button (page 13) is used to power up/down the Notebook. Pressing the button briefly will turn off your computer using the operating system. This is the same as clicking **Start** then **Turn Off Computer**. If the button is held down for longer than 4 seconds, it will force the notebook to power down without going through the operating system shut down process. This may be useful if your computer has crashed or stalled.



**WARNING!** Do not switch off your Notebook while the **hard disk** or the optical drive is running and the corresponding **media activity LEDs** are lit. Otherwise data may be lost. To protect the hard disk you should always wait for 20 seconds after powering down the Notebook before powering it up again.

## POWER ADAPTER

Your Notebook is supplied with a universal AC power adapter, which automatically adjusts to the available power source. The following levels are supported: **AC 100-240V~/ 50-60 Hz**. Please follow the power supply **safety instructions** found on page 8.

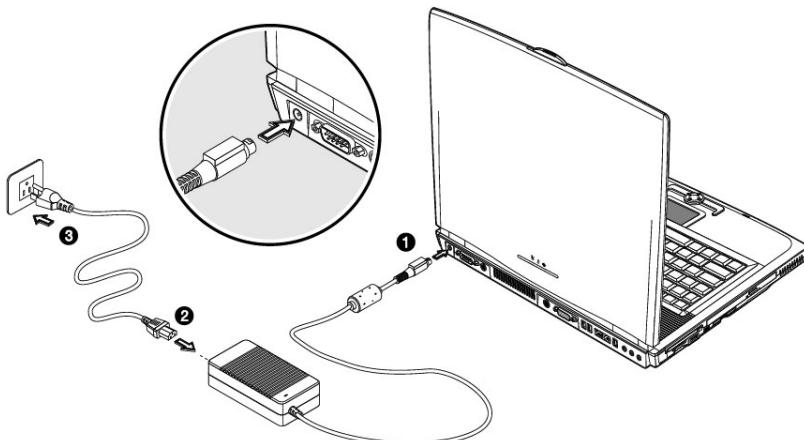

The power adapter is connected via a power cord to an AC outlet. The DC power lead from the power adapter is connected to the rear side of the Notebook (see page 15).

The adapter provides the Notebook with power and also charges the battery. The power supply indicators of the Notebook (see page 15) provide details on the operating state. The battery is also being charged when you are working on your Notebook with the power adapter.

The power adapter is still live if the Notebook is not connected with it. You should therefore unplug the power adapter from the outlet if it is not connected to the Notebook.




**WARNING!** Use only the power adapter and power cord supplied with your Notebook.

## **BATTERY OPERATION**

In order to extend the life and power of your battery, and to guarantee reliable operation, it is essential that the safety instructions on page 10 are followed.


### **INSERTING THE BATTERY**

Slide the battery, contacts first, into the battery compartment.

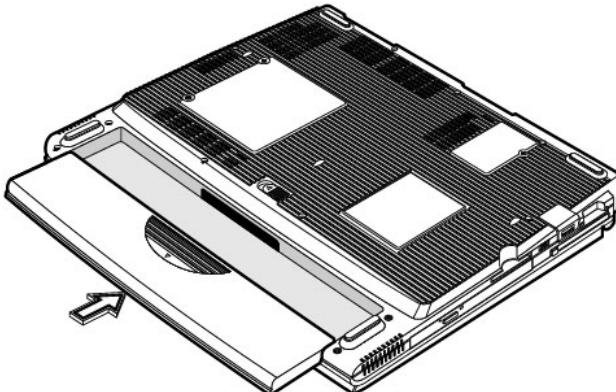

## REMOVING THE BATTERY

Slide the battery locks (⇒ p. 16, ②) to remove the battery.

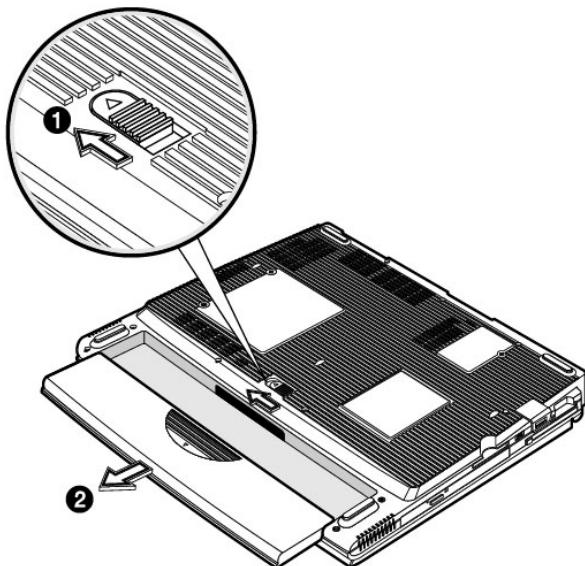

**WARNING!** Do not remove the battery while the Notebook is running on battery power. You increase the possibility of losing data.

## CHARGING THE BATTERY

The battery is charged via the power adapter. If the power adapter is connected, it charges the battery automatically, whether the Notebook is turned on or not.

When the Notebook is switched off, full charging takes a few hours. If the Notebook is switched on, the charging process takes a significantly shorter time. However, it is recommended that from time to time you discharge the battery completely and recharge it afterwards with the Notebook switched off. You can discharge the battery without losing data, if you turn your notebook on without using any application and no power adapter. As soon as the battery is empty your notebook will enter the hibernate mode. We recommend doing this procedure every time you think the battery power is losing efficiency.

## BATTERY POWER

A fully charged Li-Ion battery will provide power for some hours of operation. However, the battery life will vary according to how the power saving functions are set, the way you work, the size of the main memory and the display type.

When working in Windows an audible warning alert will sound as soon as the battery level drops below a set minimum value. When this happens, the processing power is reduced in order to save power.



**NOTE:** Battery warning signals and "Low-Battery" mode will be heard immediately when the power pack is first connected.

## CHECKING THE BATTERY LEVEL

In order to check the current level of the battery, move the cursor over the power symbol in the taskbar.



When in battery mode, a battery symbol is displayed and when the power adapter is in use a power connector is displayed. If the battery is being charged the power connector has a lightning symbol superimposed over it. Further information on power settings can be obtained by double clicking on the symbol.



**NOTE:** If you ignore the warning signal when the battery level is low, your Notebook goes into suspend mode. (Depending on the BIOS/OS setting this will be Save-to-Disk or Save-to-RAM).



**WARNING!** If the battery is empty, your data will not be retained for long in Standby/Save-to-RAM mode.

**WARNING!** Never remove the battery while the Notebook is switched on or if the Notebook has not yet gone into suspend mode, as this may lead to loss of data.

## **POWER MANAGEMENT**

Your Notebook offers automatic and modifiable power saving functions that you can use to maximize battery life and reduce overall operating costs. The power saving modes are known as standby mode and suspend (hibernate) mode.

### **STANDBY MODE**

When in standby mode, the contents of the RAM of your Notebook are preserved while practically all other components of your Notebook are shut down, reducing your power consumption to a minimum. By pressing any key on the key-pad, you can bring your Notebook back to the fully operational state. You will restart at precisely the line in which you were working prior to the interruption. The computer takes less time to go into and come out of standby mode, but uses more power than suspend (hibernate) mode.

### **SUSPEND (HIBERNATE) MODE**


The hibernate mode is an alternative to a complete shutdown of the Notebook. In this mode all data from RAM (system and graphic data) are copied to the hard disk as a file. As soon as the data has been safely saved, the Notebook powers down. When the Notebook is switched on again, this file is written back to RAM by the BIOS. In a few moments the Notebook is in the exact state as when it was last used. If while working on a document the Notebook is closed (assuming the correct ACPI setting), the Notebook saves the data in RAM for you automatically. You will restart at precisely the line in which you were working prior to the interruption. The computer uses no power while it is in suspend (hibernate) mode, but it takes a little longer for the computer to go into and come out of hibernation compared to standby.

# DISPLAY

Unlike a normal monitor, the TFT display does not produce either radiation or flicker.

## OPENING AND CLOSING THE DISPLAY

A display catch keeps the display closed when the Notebook is not in use.

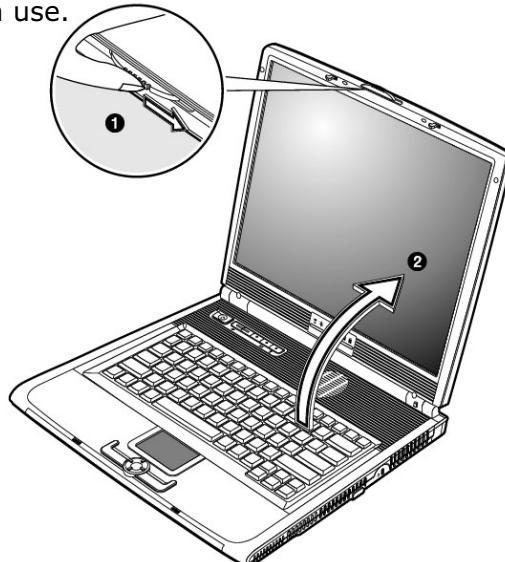

To open, use your thumbs to push the bar to the right (1) then lift (2) the display with your thumbs and index finger and position it as desired.



**WARNING!** The display should **not** be opened fully to 180°. Do not try to forcibly open it.

The opening and closing of the display can be assigned various functions via the Power management feature. For example, the Notebook can be programmed to power down when the display is closed.


## SCREEN RESOLUTION

The integral screen has a native resolution of 1024 x 768 pixels. Using a higher resolution can lead to distortion of the display, especially with text. Using a lower resolution may cause the display to use only a portion of the screen area.

## CONNECTING AN EXTERNAL MONITOR

The Notebook has a VGA port for connecting an external monitor. To connect and configure an external monitor:

1. Shut down your notebook.
2. Connect the video signal cable of the external monitor to the VGA port of the Notebook (see page 15).
3. Connect the external monitor to the electrical socket, power it up and start your notebook.

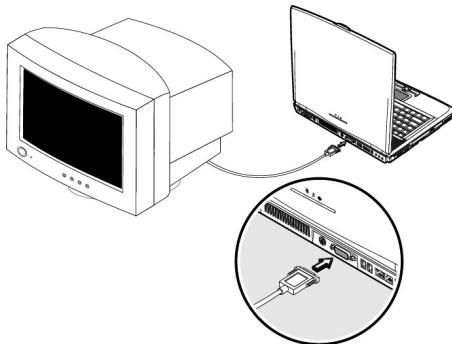

There are two options for setting up an external monitor:

### 1. Clone your Desktop

Press **<FN> + <F3>** to activate the external monitor. The notebook display will be switched off. Adjust the display settings following the external monitor specification.

Press **<FN> + <F3>** once more and both displays are switched on.


Press **<FN> + <F3>** again to deactivate the external monitor. The notebook display will be switched on.

## 2. Extend your Desktop

This option does not support the key combination **<FN> + <F3>**.

Right click anywhere on your desktop and select "**Properties**" to start the "**Display Properties**" program.

- Select the "**Settings**" tab and left click on the second display **①**.
- Check the option "**extend my Windows desktop onto this monitor**" **②** and press "ok".
- To deactivate the extension uncheck the option "extend my Windows desktop onto this monitor".

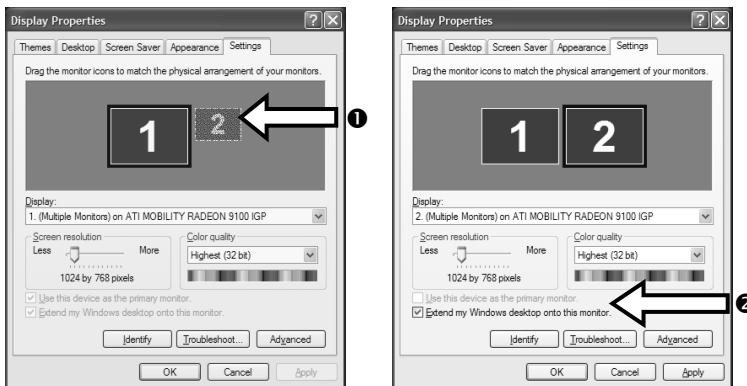


You can change the resolution and color depth for either display in this screen. However, you may have to decrease the depth of color if you increase the resolution since the video memory has a limited capacity.

## CONNECTING A TV

The Notebook has a port for connecting a TV. To connect and configure the Notebook for a TV:

1. Shut down your notebook.
2. Connect the signal cable of the TV to the optional composite video adapter provided with your notebook, then connect the other end of the adapter to the TV out port of the Notebook (⇒ p. 15).
3. First turn on your TV, then turn on your notebook.

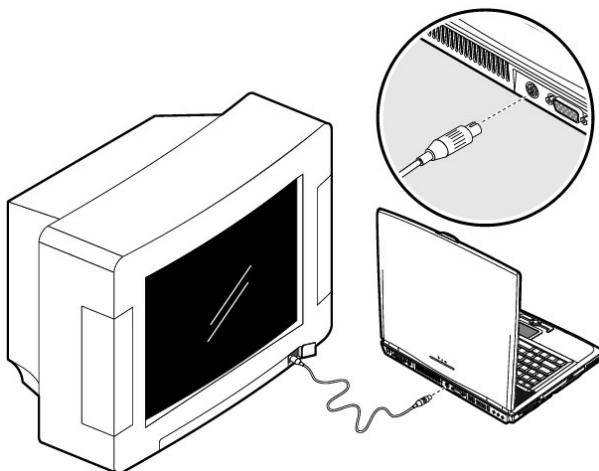

Switch on your notebook and boot it properly.

If the notebook is set to clone mode you can change your display to the TV set using the quick start key .

☞ Ist die Option **Windows Desktop auf diesem Monitor erweitern** im Programm **Eigenschaften von Anzeige** aktiviert, muss diese erst deaktiviert werden, um das Bild auf den Fernseher zu übertragen.

# DATA ENTRY

---

## THE KEYBOARD

By dual assignment of certain keys you have the same range of functions available to you as with a normal Windows keyboard. Some functions are input using the FN key, which is normal on notebook computers.

### NOTEBOOK-SPECIFIC KEY COMBINATIONS

Combination	Function	Description
Fn + F1	?	A list of the combinations is displayed.
Fn + F2	⌚	Power saving functions. This key combination is set to <b>power down</b> by default. To adjust this key to your own needs go to display <b>properties</b> in <b>power saving</b> .
Fn + F3	LCD/CRT	Toggles the display screen between LCD, CRT and simultaneous display.
Fn + F4	✳️LCD	Switches the backlight off to save power. Pressing <b>any</b> key switches the backlight on again.
Fn + F5	🔊/🔇	Switches the loudspeakers on / off.
Fn + F11	Num↓	Activates Num-Lock.
Fn + F12	Roll↓	<Scroll Lock> key. Most applications use it to scroll the screen without moving the cursor.
Fn + Bild ↑	POS1	Executes function HOME.
Fn + Bild ↓	ENDE	Executes function END.
Fn + ←	☀️	Reduces screen brightness
Fn + →	☀️	Enhances screen brightness.
Fn + ↑	↑	Increases the volume
Fn + ↓	↓	Decreases the volume.

## TOUCH PAD

The touch pad's primary function is to move the cursor around or select items displayed on the screen with the use of your fingertip instead of a mouse. It is positioned in front of the keyboard (see page 13). The pointer follows the direction which is specified by moving your finger or thumb over the touch pad.

**DO NOT** use a ball-point pen or other object on the touch pad, as this could damage or cause a malfunction of your touch pad.

Below the touch pad are the left and right mouse buttons which can be used as on a normal mouse. You can also perform a direct click or double click using the touch pad by tapping the surface briefly once or twice.

In the Windows Control Panel you will find a number of useful settings that will make using the touch pad easier. If the Control Panel is in category view, click **Printers and Other Hardware** and then **Mouse**. In classic view, double-click **Mouse**.



## ■ Chapter 4

### Main Components

<b>Subject</b>	<b>Page</b>
Hard Drive _____	43
USB Memory Stick_____	45
Optical Drive _____	45
Sound Card _____	53
Modem _____	56
Network _____	57
Memory Card Connections _____	66
PC Card Slot _____	68
Connection Options _____	70
Software _____	74



# THE HARD DRIVE

---

The hard drive is the main storage medium combining large storage capacity and rapid data access.

The Windows operating system cannot use the full capacity of the hard drive, which means that there will be a difference between the capacity that the BIOS displays and what the operating system displays.

The hard drive contains the operating system of the computer, other application programs and backup files. These programs and files are pre-installed on your Notebook, so you may note that some of the space on your hard drive is already taken.

Whenever the computer is accessing the hard disk, the corresponding LED illuminates (see page 13.)



**WARNING!** Never switch off the computer while the busy indicator is lit since this may result in loss of data.

If you are looking for a file on the hard drive and you know the name, go to Search on the Start menu to find the file. Following is some general information on where you might find some common files.

Usually your hard drive is divided into several partitions, as shown below. The partitions of your hard drive may vary from what is shown here.

Local Disk	C:	Windows XP Software programs Your documents
BOOT	D:	Drivers for internal PC components Installation files for software that came with your PC
Recover	E:	Restore software

## IMPORTANT DIRECTORIES

The most important directories preinstalled on your Notebook are shown below. These directories may vary from what is shown here.

**Caution:** Don't delete files unless you know what they are. Windows XP might require these files for your computer to operate correctly. Also, do not alter or resize the partitions – this will make it difficult to restore your Notebook to the factory settings.

**C:\** This is the main hard disk drive partition for your Notebook. It is where your program files, settings, and documents are stored, as well as files necessary for running Windows XP.

**C:\Program Files** Includes files belonging to software programs.

**C:\Windows** The main directory for Windows XP.

**C:\Documents and Settings** Includes the settings and documents for all users.

**D:\** Includes files for restoring hardware components and software programs.

**D:\Driver** Drivers for internal Notebook components.

**D:\Tools** Includes installation files for software that came with your Notebook.

**E:\** Includes files for restoring the entire Notebook to working order.

**E:\Recover** Includes the files needed to perform a system restore.

## USB MEMORY STICK [OPTIONAL]

A USB memory stick is used to transport data and replaces the disk medium. One 64 MB memory stick is included in your pack. Before using your USB memory stick, please note the following:


- Keep the memory stick away from **moisture** and avoid **vibrations, dust, heat** and direct sunlight, in order to **prevent** malfunction.
- Never open the housing. This will void the warranty and may seriously damage the unit.
- Following **transport** wait until the unit has reached ambient temperature before putting it into use. Large variations in temperature or humidity can lead to a build-up of moisture through condensation. This may cause an **electrical short-circuit**. Secure the plug cover before transport.

## USAGE

- ➲ This memory stick is suitable for use under Windows® XP/ME and 2000. No driver is needed with these operating systems.

1. Remove the protective covering from the USB memory stick and connect it to the unit via a spare USB port on your notebook.
2. The USB memory stick is now recognized and the operating system assigns it a free drive identifier letter. You can now use the device like a disk drive (copy and delete data, etc).

## WRITE-/ DELETE PROTECTION

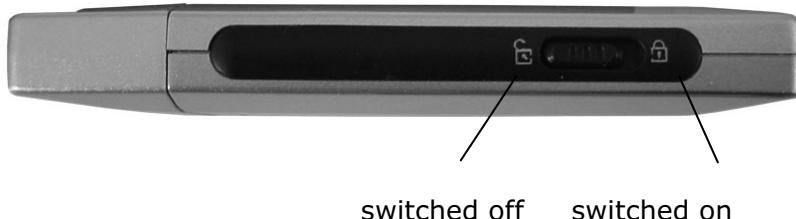

Press the write protect switch to switch the write and delete protection of the **USB memory stick** on or off. If this protection is switched on no data can be deleted or written to the USB memory stick.

## FIRST AID IN THE EVENT OF MALFUNCTION

### USB memory stick not recognized:

- Is the USB memory stick properly connected?
- Check in the Windows® device manager that the USB devices have been added correctly. If necessary add the USB controller.

### No data can be read/written:

- have you activated the write/delete protection?
- Have you formatted the USB memory stick using a different computer? Different formats (FAT/FAT32/HFS) may not be compatible. Save your data and format the USB memory stick again in a compatible format.

# THE OPTICAL DRIVE

---

## **CD-RW/DVD-ROM COMBO DRIVE**

Your Notebook has a CD-RW/DVD-ROM combo drive. This drive can play everything that a DVD-ROM drive can play: DVD movies, music CDs, and data DVDs and CDs. It can also run software programs from CDs and DVDs. In addition, this drive can write data and music CDs and copy CDs. It writes to CD-R or CD-RW.

## **HANDLING DISCS**


To maintain the life of CD and DVD discs, observe these guidelines.

- Avoid radiation by direct sunlight (UVA/UVB).
- Avoid scratches and damage to the disc surface.
- Avoid extreme temperatures.
- Do not attach labels or paper to DVD discs.
- Do not use record-cleaning or anti-static agents to clean your discs.

We also recommend that you avoid specially shaped discs such as hearts or polygons, or discs that are not standard size. Do not use warped or cracked discs as they may cause damage to your drive.

## LOADING A DISC

☞ **Hinweis:** Bekleben Sie die CDs nicht mit Schutzfolien oder anderen Aufklebern. Benutzen Sie keine verformten oder beschädigten CDs, um Schäden an Ihrem Laufwerk vorzubeugen. Achtung: Benutzen Sie keine verkratzten, angebrochenen, verschmutzten oder qualitativ schlechten Discs. Durch die hohen Geschwindigkeiten im Laufwerk können diese brechen und Ihre Daten zerstören sowie Ihr Gerät beschädigen. Schauen Sie sich die Discs genau an, bevor Sie diese einlegen. Sind Schäden oder Verschmutzungen erkennbar, dürfen Sie diese nicht benutztten. Schäden, die durch defekte Medien entstehen, sind von der Gewährleistung ausgenommen und müssen kostenpflichtig repariert werden.

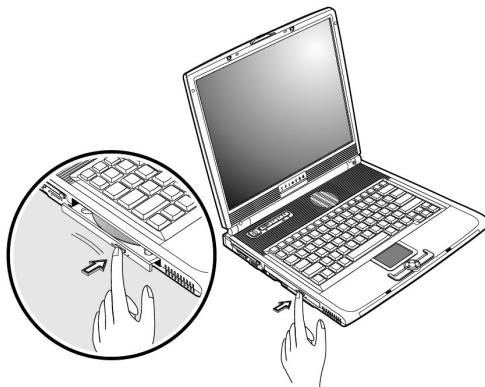

1. Press the eject button on the front of the drive to open the tray.
2. Place the disc on the tray so that it lays flat with the label facing upward.
3. Gently push the tray in to close it.

Many discs automatically start when they are loaded and launch a playback software program. In some cases you might need to start a program (for example, a DVD player program).

## REMOVING A DISC

Press the eject button on the front of the drive to open the tray.




**WARNING!** While the Notebook is accessing the CD-ROM drive the media activity indicator is lit. Do not try to remove the CD from the drive while this LED is lit.

## EMERGENCY EJECTION OF A BLOCKED DISC

If the tray fails to open automatically, then the tray can be opened manually provided there is an opening for emergency ejection. (⇒ p. 14).

Restart your notebook and if the tray is still locked proceed as follows:

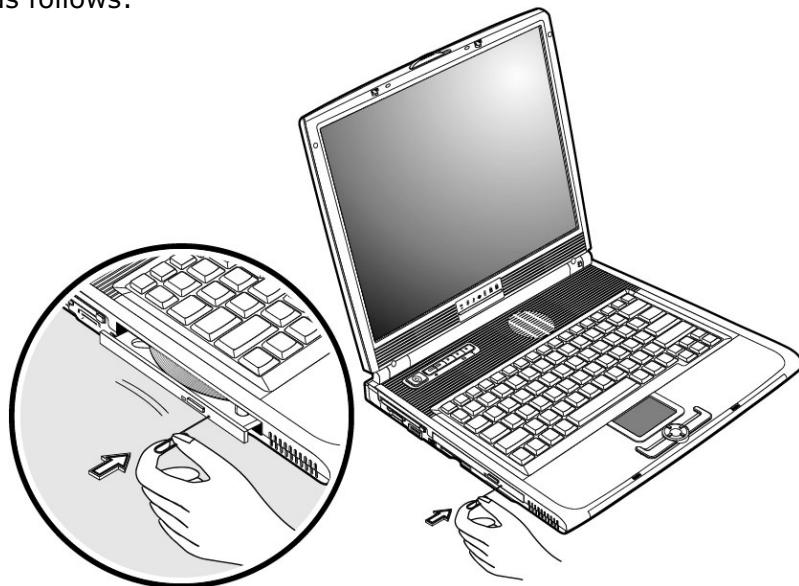

1. Shut down Windows and switch off your notebook.
2. Insert a long thin object (like a straightened paper clip) into the emergency ejection opening until you feel resistance.
3. Press lightly and the tray will open.
4. Remove the disc and restart the notebook.

## PLAYING MUSIC CDs

Windows Media Player and MusicMatch Jukebox can be used to play music CDs. Please refer to the documentation for these programs to decide which program you would like to use.

## PLAYING DVD MOVIES

To play DVD movies on your Notebook, you need a DVD playback software program, such as CyberLink's award-winning PowerDVD. To play DVD movies using this software, insert a movie DVD into the DVD-ROM or DVD-RW drive, then click **Start**, then **All Programs** and select PowerDVD.

In spite of the high storage capability of the DVD, the data must be extremely compressed in order for a complete feature film to be stored. This extreme compression combined with exceptional picture quality is provided by the MPEG2 image coding method on the DVD. This places high demands on the Notebook's processor, so when playing a DVD please close all other applications. To increase Notebook performance, you may also wish to purchase a plug-in MPEG2 decoder card, which has its own decompression processor and will thus free the Notebook's processor.



**NOTE:** The decoding software included with your Notebook may be changed for regional DVD decoding up to five times, after which the drive will only play DVD movies for the region setting last entered.

## WRITING CDs

You can use your CD-RW/DVD-ROM combo drive to write ("burn") data and music CDs.

A data CD is a compact disc (CD) used to store PC data (for example, files and folders you have on your hard disk).

A music, or audio, CD is a compact disc (CD) used to record music that you can play on your home or car stereo CD player. Using a CD-R instead of a CD-RW for music CDs will help ensure a greater level of compatibility with conventional CD-players.

There are several different options for burning CDs. The first step for using any of these options is to insert a blank recordable CD into your combo drive.

Nero Burning ROM can create different types of audio, video, and data CDs quickly and easily. Click **Start**, then **All Programs**, then **Nero**, then **Nero OEM** to access Nero Burning ROM. Follow the step-by-step instructions given by the software wizard to create a CD.

Windows XP includes functionality for quickly and easily creating data CDs:

1. Select the files or folders you would like to write to your CD. To select more than one file, hold down the CTRL key while you click the files you want.
2. In the File and Folder Tasks menu on the left (Picture Tasks if the files are located in My Pictures), click **Copy this file**, **Copy this folder**, or **Copy the selected items**. If you do not see the File and Folder Tasks menu, select **Tools** on the main menu, then **Folder Options**. Under Tasks on the General tab, select **Show common tasks in folders**.
3. In the Copy Items dialog box, click the CD-RW, and then click **Copy**.

4. Double-click **My Computer**, then the CD-RW. Windows displays a temporary area where the files are held before they are copied to the CD. Verify that the files and folders that you intend to copy to the CD appear under Files Ready to be Written to the CD.
5. Under CD Writing Tasks, click **Write these files** to CD. Windows displays the CD Writing Wizard. Follow the instructions in the wizard.

Music jukebox and media player programs (such as Windows Media Player) often offer alternatives for burning audio CDs. Refer to the help within the program for more information.

You can also purchase third-party CD burning software for writing files to a CD-R or CD-RW disc.

More information about copying CDs reliably can be found in the "Technical Reference" section of this manual under "CD Facts."



**WARNING!** Unless you own the copyright or the permission of the owner of the copyright, unapproved copying of copyrighted CDs or DVDs violates national and/or international laws and can result in serious punishment.

# THE SOUND CARD

---

Your Notebook has an integrated stereo sound card (on-board) with 16-bit and 3D spatial sound effects (3D). The sound card is compatible with the industry standard **Sound Blaster** and **Microsoft Sound System Version 2.0**. This guarantees optimal support for all popular programs and games.

If you wish to alter the base volume, click on the loudspeaker symbol in the task bar. A double click opens the sound mixer.

By means of the key combinations (⇒ S. 38) you still have the possibility to regulate the volume.

By using the keys **Fn+↑** you increase the volume and by using **Fn+↓** you decrease it.

## EXTERNAL AUDIO PORTS

<b>Audio in</b> (⇒ page 15)	<ul style="list-style-type: none"><li>▶ For recording via an external audio source.</li><li>▶ Speaker connection for rear speakers in the 4- resp. 6-channel mode.</li></ul>
<b>Microphone in</b> (⇒ page 15)	<ul style="list-style-type: none"><li>▶ For recording via an external microphone.</li><li>▶ Loudspeaker output for Center/Subwoofer in the 6-channel mode.</li></ul>
<b>Audio out</b> (⇒ page 15)	<ul style="list-style-type: none"><li>▶ For sound reproduction via external stereo equipment such as loudspeakers (active) or headphones.</li><li>▶ Connection to a sound system (analog or digital optical SPDIF).</li></ul> <p>The notebook automatically recognizes if an analog (3.5mm stereo plug) or a digital (optical) link has been created. The internal loudspeakers are switched off when this port is used. (⇒ p. 14)</p>

Your Notebook has a loudspeaker, so you can always playback sounds without additional equipment. The connection of a Hi-Fi system increases the sound quality significantly.

By using the external connections you have the possibility to connect your notebook with external appliances.

If the external audio links have a dual function, then your notebook is equipped with a surround sound system. The bundled software allows you to make the necessary settings:

1. Click the following symbol in the taskbar:



The help program for the audio configuration is now invoked. A large number of settings can be carried out with this. It is also used to set the loudspeaker configuration you are going to use for the surround sound.

Click the "Sound effect" tab to set the system for your needs. Four configurations modes are available to you:

- **headphones**
- **2-channel mode for stereo loudspeaker output**
- **4-channel mode for 4 loudspeaker output**
- **6-channel mode for 5.1.-loudspeaker output**

## Overview:

Configuration of speakers	Port at the notebook		Function
2-channel mode*	Audio in	⇒	Loudspeaker output
4-channel mode	Audio in	⇒	Loudspeaker output front
	Audio in	⇒	Loudspeaker output back
6-channel mode	Audio out	⇒	Loudspeaker output front
	Audio in	⇒	Loudspeaker output back
	Microphone in	⇒	middle/Subwoofer Out

Your notebook is factory set to 2-channel mode.


## MODEM

The modem is fitted with an RJ-11 interface, into which a standard telephone lead can be plugged.



**WARNING!** Use only with an analog telephone line. The modem cannot withstand the voltage levels of digital telephone systems such PBX or lines such as ISDN or Broadband services.

## MODEM PORT

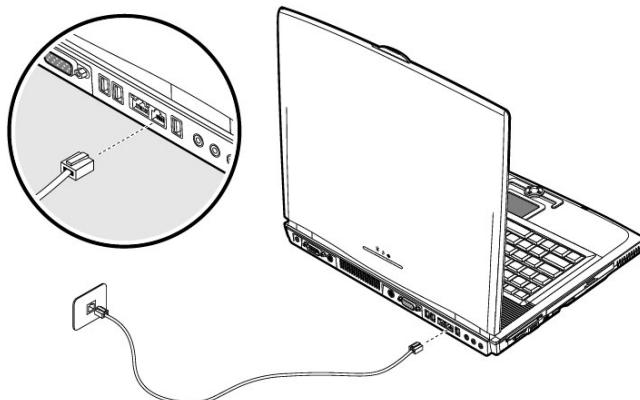

Insert one end of the RJ11-connection (telephone plug connector) into the modem/network interface and the other into an analog telephone socket that is easily accessible.



**NOTE:** Do not place the Notebook in Suspend (or Sleep) mode if you are connected to your Internet provider, since this will cause the modem connection to be lost.

# THE NETWORK

---

## WHAT IS A NETWORK?


A network means connecting your Notebook to one or several other computers. Users can transfer data between computers and share resources such as printers, modems and hard disk drives.

Here are some practical examples:

- You can exchange E-mail and manage appointments in an office.
- Users can share a printer in a network and save their data on a central server.
- Users can share one modem among computers for Internet access.
- Two or more computers can be connected to play network games or share data.

## FAST ETHERNET-NETWORK

Your PC has a Fast Ethernet Network connection. You can use this to connect to a network.

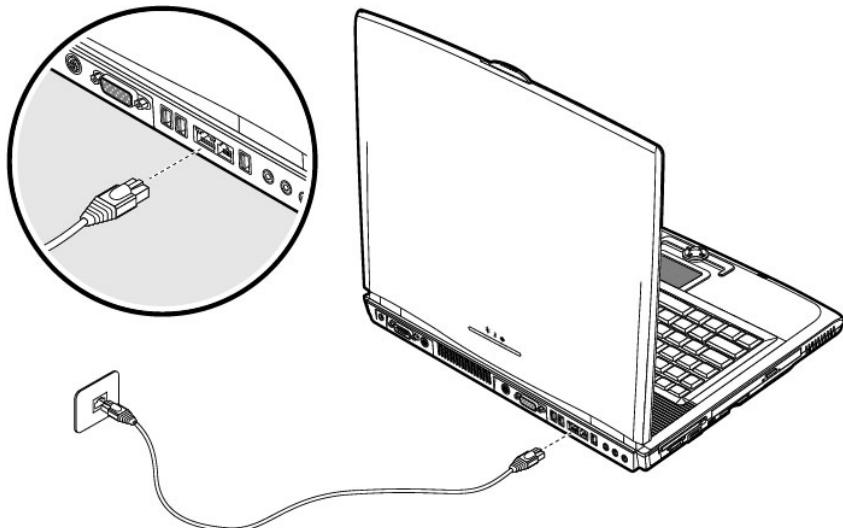

The Windows XP Help and Support Center offers extensive information about networking your PC. You can access this information by clicking on **Start**, then **Help**.

## WHAT DO YOU NEED FOR NETWORKING?

Some requirements have to be fulfilled to successfully network computers:

1. The Notebook must have a network card that supports the same network technology as the other computers on the network. Unless otherwise quoted, your Notebook will support the current **Fast Ethernet** (10/100 Mbit) standard.
2. The network cards must be connected. You need a Shielded Twisted Pair-cable (CAT5) that has an **RJ-45**-connector.
  - If you want to directly connect two PCs you need a **Cross-Link** cable.
  - If more PCs must be connected you need a supplementary distributor (**Hub** or **Switch**) and a Patch cable.
3. All connected PCs need a network **operating system**. Windows® can act as a network operating system.
4. All networked PCs must speak the same "language" to understand one another. They use protocols for this purpose. The setting of protocols, therefore, must be the same for all networked PCs.

## TROUBLESHOOTING WITHIN THE NETWORK

 Why does an error message appear when I click on the network environment?

 The **computer name** must be unique on the network and may not be the same as the **task group**.

 It appears that the network boards are unable to communicate. What might be the problem?

 Maybe one of the used network boards works with a **different speed** (e. g. 10 instead 100 Mbit) and your network computer is unable to recognize this. If necessary, set the network driver to the compatible speed.

If two PCs should be linked you require a **cross-link cable**, otherwise use a **patch** cable.

In addition, check the **protocols** and the **configuration**.

 The data transmission is incorrect or very slow. What might be the problem?

 Maybe you have the wrong cable (UTP / CAT3 or lower) or the problem is the proximity of a power cord or another source of interference.

For further hints on troubleshooting search for "network errors" in Windows Help and Support.

## WIRELESS LAN

Wireless LAN is an optional feature. This function allows you to create a wireless network link with an access point or directly with another wireless-enabled PC.

☞ **ATTENTION:** Make sure the Wireless LAN option is switched OFF in any environment where it might interfere with critical and sensitive devices, e.g., on aircraft, in hospitals and other medical centers, etc.

### CONDITIONS

An access point is a wireless transmitter that communicates with your notebook and controls access to the network connection (e.g., a home network or a broadband connection such as DSL).

Wireless access points are often found in offices, airports, universities or Internet cafés. They offer access to networks or to the Internet. **Access authorizations** are normally needed. A fee may be required to use a public access point.

To set up a wireless network to share Internet access, files, and printers at home, you will need an access point, a router, and a broadband (DSL or cable) modem. Some access points can also serve as a router and/or a broadband modem. Check with your retailer or Internet Service Provider to find the best solution for your needs.

A link to another computer with wireless LAN functionality can also be created **without an access point**. This will allow you to share files, but you will need an access point and a router to share an Internet connection.

The wireless network link works according to standard **IEEE 802.11g** which is also compatible with the IEEE 802.11b standard. The standard 802.11a is not supported.

If encrypted transmission is used, this must operate according to the **same principle on all devices**. Encryption is a method of protecting the network from unauthorized access.

The transmission speed (max. 11 Mbps) can vary according to the **distance** and **loading** of the partner.

## CONFIGURATION EXAMPLE


To configure a wireless network link deactivate the “Use Windows to configure settings” option in the sub-menu under **Network** characteristics of the **Control** panel, in order to be able to use the extended setting options of the WLAN software.

To start the software click the following icon in the taskbar:




There you choose the option **Advanced Configuration** to make the corresponding changes. The configuration you have made will only be activated in case you build up the Wireless LAN connection via the hotkey (⇒ S. 19, **8**).

## PRISM Wireless Settings - Status

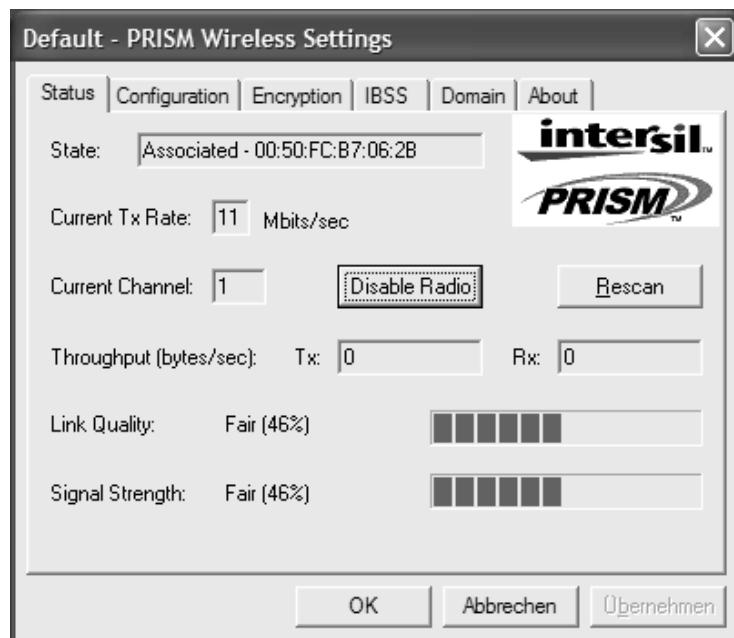


Function	Description
State	Information on the link to the next access point
Current Tx Rate	Indicates the current transmission speed
Current Channel	Indicates the current connection channel
Disable Radio	Use this button to enable/disable the WLAN connection.
Rescan	Scans all available channels for possible network connections
Throughput	Data throughput in bytes/second
Link Quality	Indicates the quality of the link between the wireless LAN card and the access point.
Signal Strength	Indicates the strength of the signal between the wireless LAN card and the access point.

## PRISM Wireless Settings - Configuration

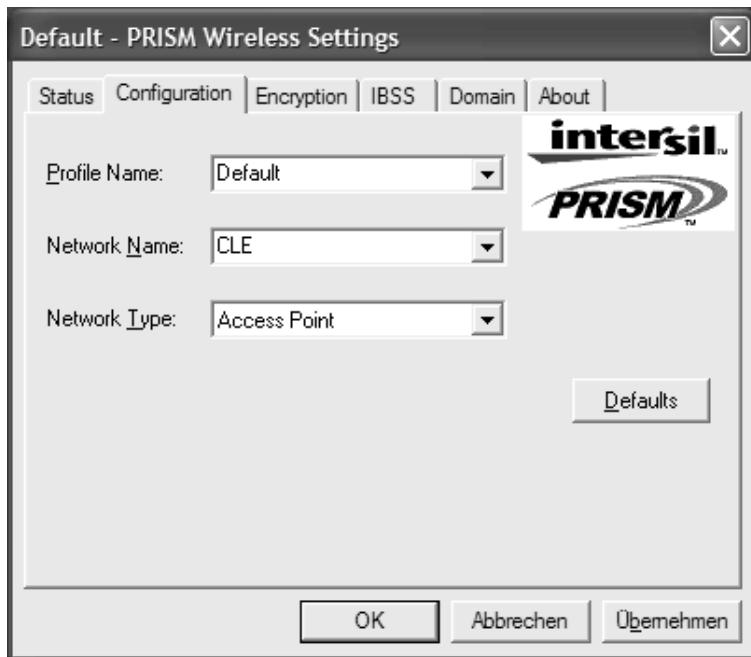

Function	Description
Profile Name	Use this to save the profile corresponding to your wireless network links
Network Name	Use this to enter the names of the networks with which a link is to be created
Network Type	Network link setting. Either to an access point or as peer-to-peer (direct link to another PC).
Peer to Peer Channel	Selects the corresponding channel for a peer-to-peer link.
Defaults	Resets the setting to the defaults
Transmit Rate	Sets the various transmission speeds

## PRISM Wireless Settings - Encryption

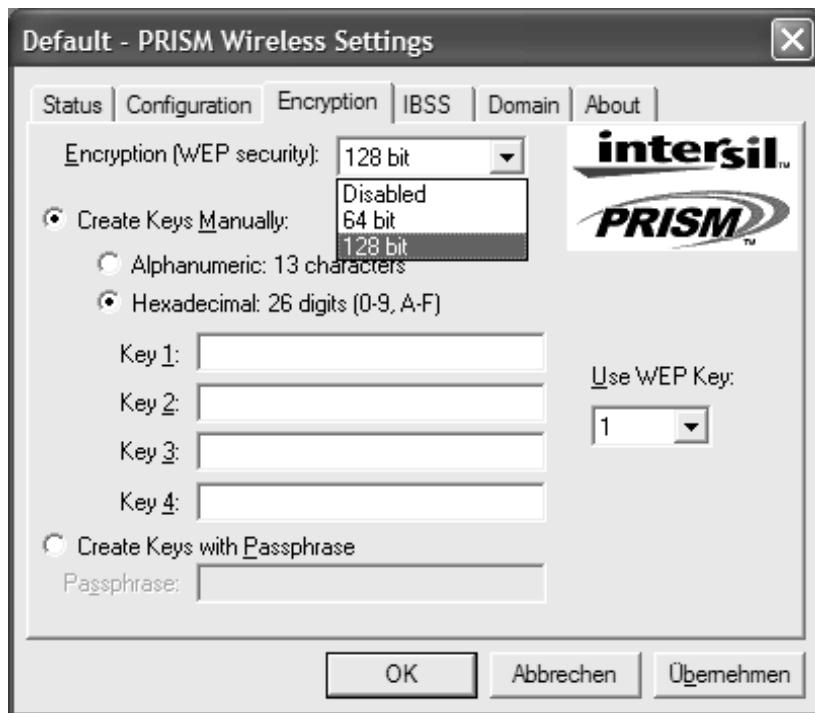

Function	Description
Encryption (WEP security)	Sets the type of encryption that is already stored at the respective access point. "WEP" is a data encryption that prevents unauthorized access to your wireless network.
Create Keys Manually	Enter 4 different keys, either alphanumeric or hexadecimal.
Use WEP Key	Select the respective WEP key

# MEMORY CARD CONNECTIONS

---

Memory cards are media that are being used for a variety of purposes, especially in digital photography. They are increasingly replacing the floppy disk. The form and capacity of a memory card can vary according to the manufacturer.

Your notebook supports the following formats:

- MMC (MultiMediaCard)
- SD (Secure Digital)
- Memory Stick / Memory Stick Pro
- SmartMedia
- CF (Compact Flash)
- IBM® Microdrive


When inserting memory cards, ensure that the contacts are facing the right way. See table below. Incorrect insertion of a card can cause damage to the card reader and/or the card.

Slot	Card type	Contacts
3 in 1 (⇒ p. 14)	SD (Secure Digital) MMC (MultiMediaCard) Memory Stick Memory Stick Pro	pointing down pointing down pointing down pointing down
CF (⇒ p. 14)	CF (Compact Flash) IBM® Microdrive	pointing forwards pointing forwards

## INSERTING MEMORY CARDS

- Memory cards can only be installed in **one direction**. Refer to the instructions on the previous page.

Push the memory card into the slot until it clicks into place.

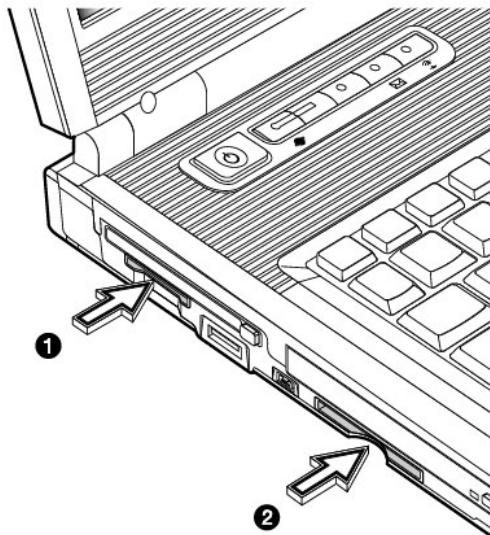

## REMOVING MEMORY CARDS

To remove the SD/MMC-cards or memory sticks press the card further into the slot. Then pull out and remove the card.

**TO REMOVE THE CF- AND MICRODRIVE CARDS PULL OUT AND REMOVE THE CARD.**

---

TO REMOVE THE CF- AND MICRODRIVE CARDS PULL OUT AND REMOVE THE CARD. THE PC CARD SLOT

# THE PC CARD SLOT

---

The PC card slot on the left side (see page 14) of the Notebook can be used to operate credit card-sized PC cards. Most PC cards are communications or interface devices such as ISDN-, Faxmodem-, Network- or SCSI-adapters.

Some PC cards contain memory chips or hard disks for data storage. If you use such cards with your Notebook, the system assigns the card a drive name, so that you may access the resources. The PC card drive in your Notebook supports PCMCIA 2.1 - (Type II), and CardBus (Type I) cards. Cards of Type I are 3.3 mm, and Type II 5 mm thick.

## 32-BIT CARDBUS PORT

CardBus cards have a 32-bit architecture with which high data transfer speeds of up to 132 MB can be achieved, similar to PCI. In this way your Notebook can also support data intensive devices such as 100Mbps Fast Ethernet, Fast SCSI peripherals and video conferencing devices.


The CardBus port is backward compatible with 16-bit PC cards with a 5V power supply, though the CardBus only requires a power-saving 3.3V.

## USE OF PC-CARDS

In order to run a PC card, special software is needed (drivers, etc.). The card manufacturer usually supplies this software. Support for the card port is a component of Windows® and at present represents the optimum in operational smoothness. You should consider this point when choosing between alternative operating systems.

## INSTALLING A PC CARD

Follow the PC card installation instructions that are given for use under Windows® and have the necessary driver software ready. Once you have started Windows®, slip the card carefully into the slot provided.

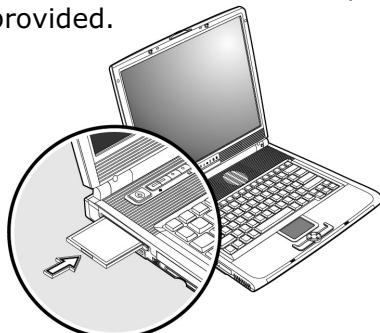


When the card is fully inserted two audible signals will be heard, provided it has been correctly recognized and successfully configured.

If only one signal is heard, this signifies a problem with the card recognition. In this case, follow the instructions that accompany your new PC card.

## REMOVING A PC CARD

To remove your PC card:

1. Press the eject button next to the slot.

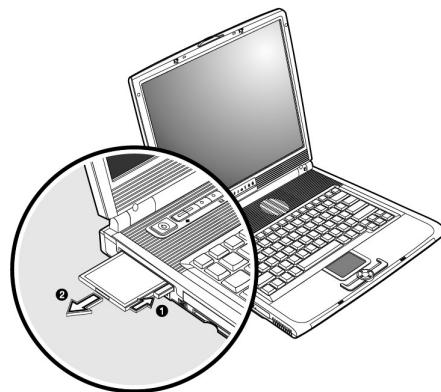

---


TO REMOVE THE CF- AND MICRODRIVE  
CARDS PULL OUT AND REMOVE THE CARD. THE  
PC CARD SLOT

# CONNECTION OPTIONS

---


The Notebook has a number of input and output interfaces for connection of peripheral devices such as a printer, scanner, keyboard, and so on. This section presents the individual ports. For further information, refer to page 15, where the positions of the respective ports are described.

## SERIAL INTERFACE

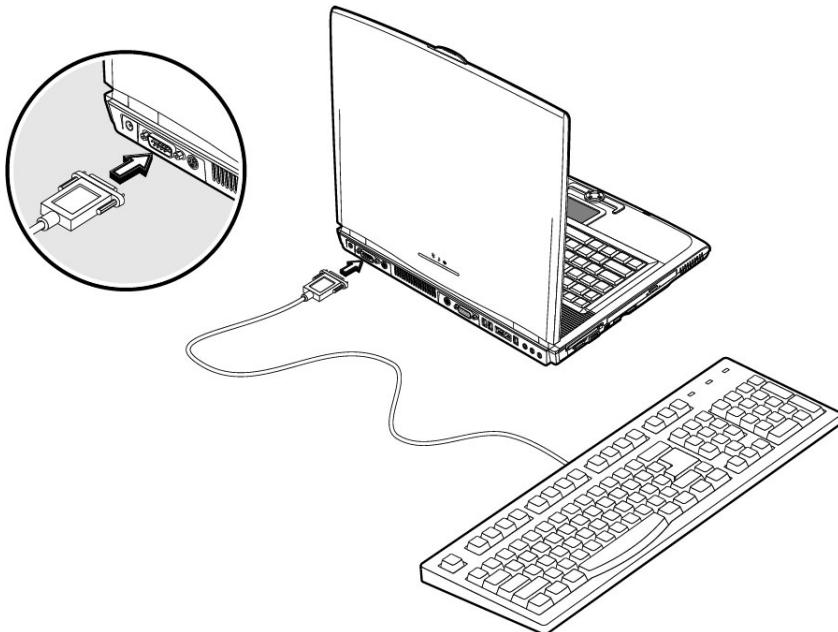


The 9-pin serial interface is used as the port for serial devices such as modems, card readers or mice. The interfaces are addressed as **COM1** and are FIFO 16550-compatible.

## UNIVERSAL SERIAL BUS (USB) PORT

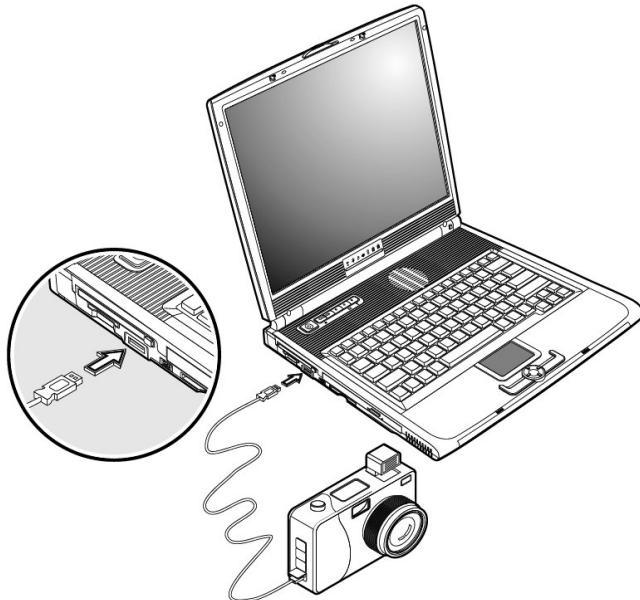


USB ports provide an easy way to connect many peripheral devices to your PC. You can use any USB device with any USB port. **3 USB** ports are located on the back panel and **1 USB** port is located at the left side of the Notebook for your convenience. Some USB devices require that you reinstall software drivers when you connect the device to a different USB port than the one originally used. This can be avoided by always using the device with the same USB port. Devices connected directly to the USB bus should not draw more than 500 mA. Should the devices need more power than this, it will be necessary to provide a powered hub. The data transfer speed is 1.5 Mbit or 12 Mbit, depending on the device connected.

## PS/2 INTERFACE

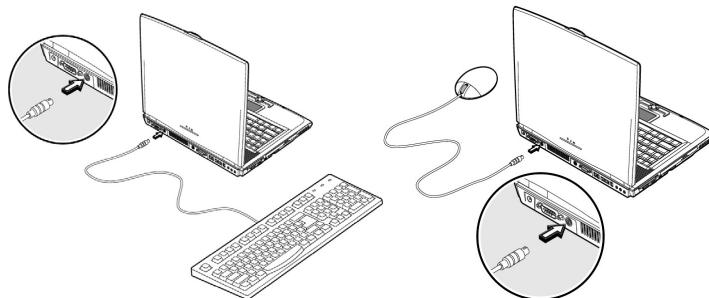

This port is used to connect devices that use the PS/2-Standard, such as keyboards and pointing devices. Here, the notebook has to be switched off.

## IEEE 1394 (FIREWIRE®)

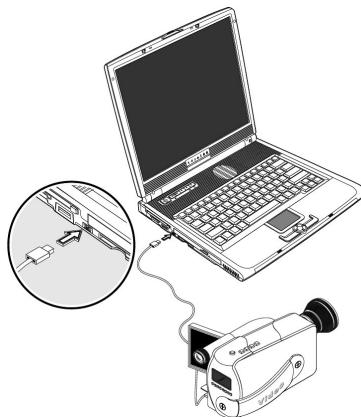

(optional feature) IEEE 1394 (also known as iLink® or FireWire®) ports provide an easy and high-performance way of connecting high-speed storage, imaging, and many new types of audio/video devices easily.

## INFRARED INTERFACE

The infrared port is located on the left side of the Notebook (⇒ p. 14). The IR port corresponds to the "IrDA Serial Infrared Data Link Version 1.1" standard. It is used for wireless point-to-point communication.

You can use SIR/FIR applications in order to exchange files with other devices which are IR-aware.

At present, the interface can be used to link up with other computers, peripherals and a number of PDA's (**Personal Digital Assistants**). The Notebook identifies the infrared port as a serial port.

### INSTRUCTIONS FOR USING THE IR PORT

When using IR be sure to follow these instructions:

- Make sure that the desired IR mode has been set in the BIOS set-up.
- The angle between the two IR ports should not be greater than  $\pm 15^\circ$ .
- Align the devices in such a way that the two infrared interfaces are at the same height and exactly opposite each other.
- Distance between devices should not be more than 1 meter.
- Do not move either of the devices during IR data transfer.
- In environments with a lot of noise or vibration, data transfer may be defective.
- Keep a safe distance from direct sunlight, lightning, incandescent and fluorescent light and other infrared devices such as remote controllers.



**IMPORTANT:** If you do not require the infrared for long periods, please deactivate the infrared function in the system control in order to save on system resources.

Align the devices in such a manner that both IR interfaces are level and are facing each other.

# SOFTWARE

---

There are many kinds of help and information for using your PC. This section tells you where to get help with the Microsoft® Windows® XP operating system, software programs, and the Medion PC.

## GETTING TO KNOW WINDOWS XP

### WINDOWS® XP MANUAL

This printed manual provides general information about the operating system. We recommend that all beginning users or users of previous versions of Windows® read this information. It can be found with the CDs in the accessory box that came with your PC.

### WINDOWS® XP TOUR

Windows® XP includes a tour that you can take to familiarize yourself with the operating system. This tour can usually be found by clicking on the **Start** menu. You can also find the tour by selecting **All Programs**, then **Accessories**.

### MICROSOFT® INTERACTIVE TRAINING

Training is the most powerful way to acquire skills that help you perform a specific task efficiently. On the **Start** menu, choose **All Programs**, choose **Accessories**, and then choose **Microsoft® Interactive Training**.

### WINDOWS® XP HELP AND SUPPORT



Help and Support

An answer to almost every question can be found in this program. You'll find it in the **Start** menu.

## **SOFTWARE HELP**

Many software programs incorporate extensive help functions. As a general rule, you can access help functions by pressing F1 on the keyboard. Many software programs include Help as an option on the menu at the top of the screen or window. They may also provide an icon (or icons) with a question mark on them that you can click to access more information.

The software included with the Notebook was pre-installed at the factory.

During software installations, important files can be changed or even deleted. Medion recommends that you set a Windows® XP recovery point before installing software (p. 64).

For specific installation information, refer to the documentation that came with the software program. Here is a typical installation procedure.

1. Load the software program installation disc in the combo drive.
2. Most installer programs start automatically after a few moments.

If the installer program does not start automatically, you can manually start it by double-clicking My Computer, and then double-clicking the drive letter where you loaded the software program installation disc.

3. Follow the instructions given by the program.

## **DEVICE DRIVERS**

If you install external devices, such as printers or digital cameras, you may also need to install device drivers. The drivers will be included with your peripheral devices. These are occasionally updated by the manufacturer. Check with the manufacturer of your peripheral device to find out if you have the most recent version of your device drivers.

## INFORMATION ABOUT YOUR PC

Clicking on **Start** and then on **Information about your PC** will bring up more extensive information about your PC, as well as useful links to software tools and other resources. It also contains any last minute information about your PC that may not be included in this manual.

## DIGITAL SIGNATURES

When installing software or drivers, you may receive the message "The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP." Although the software lacks the digital signature, it may work properly. Click on "Tell me why this testing is important" to get detailed information. Click on "Continue Anyway" to continue to install your software.

To set file signature verification options for Windows XP:

1. Click **Start**, then **Control Panel**. Double-click **System**.
2. On the **Hardware** tab, select **Driver Signing**.
3. Under **File Signature Verification**, select one of the following:

**Ignore** allows all device drivers and software to be installed on this PC regardless of whether they have a digital signature.

**Warn** displays a warning message when you attempt to install a software program or device driver without a digital signature.

**Block** prevents installation programs from installing device drivers without a digital signature.

If you are logged on to your PC as an administrator, you can click **Apply setting as system default** to apply the selected setting as the default for all users of your PC.



**WARNING!** During software installation important files can be changed or deleted. To avoid problems in using older files after installation, make sure to safeguard your hard disk.

## WINDOWS ACTIVATION

Microsoft is committed to the protection of intellectual property rights and the reduction of software piracy. Windows XP contains software-based product activation technology. Your copy of Windows XP has already been activated for your Notebook. However, product activation is needed if some components of your Notebook have been replaced or you use non-authorized BIOS. If necessary, you can activate Windows XP as often as needed.

You will probably need to activate Windows XP by telephone even if Internet Activation is available. This is due to the pre-activated SLP version that runs with a special Product-ID. However, activation needs your unique Product ID that can be found on the **Certificate of Authenticity** sticker on your Notebook housing. When you call, please inform the agent that you are running an OEM (SLP) version of the software.

## THE BIOS SET-UP-PROGRAM

In BIOS setup (Basic Configuration) there are a number of configurable parameter settings available for your Notebook. For example, you can change the operating mode of the interfaces, security features or power management.



**WARNING!** The Notebook is factory pre-set to guarantee optimum operation. Only modify the parameters if necessary and if you are familiar with the configuration options.

## RUNNING THE BIOS SET-UP

You can only run the BIOS configuration program at system start-up. If the Notebook has already started, power it down and then up again. Press the **F2** function key in order to start the BIOS-SET-UP.

## NAVIGATING THE BIOS UTILITY

There are six menu options: System Information, Basic System Settings, Start up Configuration, Onboard Devices Configuration, System Security and Load Default Settings.

To enter a menu, highlight the item using the cursor up/down keys; then press **Enter**.

While in a menu, follow these instructions:

- Press the cursor up/down keys to move between parameters.
- Press the cursor left/right keys to change the value of a parameter.
- Press Esc while you are in any of the menus to return to the main menu.



**Note:** If you are unsure if your parameter settings are correct, you should load the "**Set-up-Defaults**".

# ■ Chapter 5

## First Aid

<b>Subject</b>	<b>Page</b>
FAQ _____	81
Data and System Security _____	83
System Recovery _____	84
Troubleshooting _____	88
Maintenance _____	91



## FAQ – FREQUENTLY ASKED QUESTIONS

---



When do I have to activate Windows?



Your software has been preactivated in the factory.  
An activation will only be required, if ...

... several components are replaced by others.

... you installed a new motherboard.

... a different BIOS version has been installed.

... you install the software to another computer.



What is the Windows activation?



Your operating instructions include a chapter about this subject.



How do I perform a data backup?



Use the program Backup for this.

It is important that you follow the operating instructions of these programs.

Make a backup and another backup of selected data to an external medium (CD-R, CD-RW, DVD-R, DVD-RW, SD card, etc.), to familiarize yourself with the technique.

A backup is unsuitable if you are not able to recover the data, the medium (floppy disk, CD-R, etc.) is defective or no longer available.



Do I still have to install the enclosed CDs/DVDs?



No. Basically all programs are already preinstalled.  
The disks are only intended as backup copies.



When is the recovery of the factory setting recommended?



This method should be chosen as the last resort.  
Read chapter "**System recovery**" on page 84 concerning the possible alternatives.



Why is the boot partition missing when booting from the support/ application CD?



The first partition is formatted with the file system NTFS. Compared to FAT32 this file system offers more security and a more efficient access. However, NTFS partitions can only be read from operating systems supporting this. This is not the case in the aforementioned CD.

# DATA AND SYSTEM SECURITY

---

The programs described below are part of your Windows operating system. You will find additional information on these programs in the Windows Help file.

## DATA SECURITY

Back up data regularly on external media such as a CD-R or CD-RW. Windows offers both a **Backup** program and a **Files and Settings Transfer Wizard**.

Both programs are found in **Accessories/System Tools** within the Start menu. You should make a backup disk with all your passwords and the operating system's original configuration.

## MAINTENANCE PROGRAMS

You can avoid some hardware and software errors with disk maintenance programs such as **Disk Defragmenter** and **Disk Cleanup**. The program **System Information** can also be helpful since it gives you detailed information about your system configuration. You will find these programs in **Accessories/System Tools**.

## PASSWORD RESET DISK

To protect individual user accounts from complications resulting from lost passwords, users should create a password reset disk and keep it in a safe place. Windows Help describes how to create a password-reset disk.

## WINDOWS® UPDATE



To keep your notebook up to date to the latest version, we recommend to regularly run Windows Update from the Internet. To select this option go to **Start** ⇒ **Programs** ⇒ **Windows Update**.

- ➲ The update can only be executed via the Internet. Ensure that you are on-line with your notebook when downloading the updates.

# SYSTEM RECOVERY

---

Before performing a recovery, you should review the "Troubleshooting" section in this manual to see if you can resolve the problem. If not, it is possible that a software file required by Windows XP to operate the computer was damaged or deleted. If this is the case, there are basically two strategies for recovery.

- **Restoring your system using Windows XP System Restore**

This type of recovery is usually very quick and will solve most typical problems that occur after an unsuccessful installation of an application, device, or driver has caused instability in the system.

- **Restoring your system using the Application & Support Disc provided by Medion and powered by PowerQuest**

There are several options for recovery available using the Application & Support Disc, including the ability to restore your entire system to its original factory settings.

## RESTORING MICROSOFT WINDOWS XP

Windows XP System Restore allows you to set "recovery points." This feature enables you to take a snapshot of the current system configuration, which you can return to should an application, device, or driver cause instability in the system.

While Windows XP automatically creates recovery points, you can also set them manually. In addition, you can configure the maximum amount of memory used for this.

To use System Restore to set recovery points or restore your system, click the **Start** menu, then choose **All Programs**, then choose **Accessories**, then choose **System Tools**, then choose **System Restore**. Select the task that you would like

to perform and follow the on screen instructions. For detailed information refer to Windows XP Help and Support.

System Restore includes various functions to help ensure that your Notebook and installed applications and devices work correctly. These functions assist you in solving the problems which might occur by adding, deleting or replacing files required for proper functioning of Windows XP, and your software and devices. The restore function you use depends on the type of problem or error.

In general, it is a good idea to set a recovery point before installing a new software program or driver. If the system becomes unstable during or after the installation, you can usually return to a workable configuration without deleting newly created documents. If Windows XP System Restore does not solve your problem refer to the next section, *System Restore powered by PowerQuest*.

## **SYSTEM RESTORE POWERED BY POWERQUEST**



### **PROVEN SOLUTIONS FOR STORAGE MANAGEMENT**

If your system is not functioning properly and Windows XP System Restore did not solve the problem, then you should use the Application Support Disc provided by Medion to restore your system. This recovery mode provides several options.

There are three options for restoring your system:

**1. Recovery of start-up files**

Use this option to restore the start-up files. This option is most useful when a virus has corrupted certain files necessary for your computer to boot. It is executed very quickly.

**2. Recovery of system and driver files**

This option will copy the original system and driver files to your hard disk. This feature shouldn't affect your personal files and settings. However, we recommend that you first back up your personal data just to be safe.

**3. Restoring the factory settings**

This recovery will reset your system to its condition at delivery. ALL DATA ON YOUR LOCAL DISC (C:) DRIVE WILL BE ERASED. If possible, back up your personal data to external media before performing this restore.

### **LIMITS OF RESTORE FACTORY SETTINGS (RESTORE OPTION 3)**

Any changes made to the original factory configuration (for example, settings for your display, printers, network, or Internet connection) will be overwritten by this restoration.

Any software that you installed after purchasing the computer will be erased and will need to be reinstalled.

***Everything*** on the C:\Local Disk partition will be erased. This includes all of your documents and settings.

Tampering with the Recover (E:) hard disk drive or its contents will make it more difficult to restore your Notebook. Do not alter, resize, or delete the Recover (E:) hard disk drive. Also, do not alter or delete the files on the Recover (E:) hard disk drive. We strongly recommend that you do not store any files, folders, or programs on the Recover (E:) hard disk drive.

## PERFORMING THE RESTORE

Each step of the restore replaces an increasing number of files on your hard drive, and therefore takes longer to finish. We recommend that you attempt each of the restore options in order, starting with "Recovery of start-up files." After finishing each restore option, you should test your system to see if it has solved your problem. If the problem persists, then try the next restore option.

To make selections in the restore program, use the up and down arrow keys to highlight the option you would like to select, and then press enter to make the selection.

- 1. Copy your data files to external media (such as a floppy disk, CD-R, CD-RW, DVD-RW, or flash card) BEFORE you continue!**
2. Insert the "Application & Support" disc and restart (reboot) the Notebook.

**Caution:** Do not use the "Medion Product Recovery" CD-ROM (a Windows XP CD for restoring Windows XP itself) for restoration purposes. This disc does not restore the original factory setup of the Notebook.

3. Select the option "**Boot from CD-ROM**" from the first screen.
4. Use the arrow keys to read through the license agreement, and then press the **Esc** key to proceed.
5. Read the information screen that appears, and then press **Enter** to proceed.
6. Select option **1, 2, or 3** to perform a restore (the types of restore are described earlier in this chapter). Select option **4. Reboot** to cancel the restore process.
7. The next screen shows information about the type of restore that you have chosen. Select either **Abort** or **Back** to return to the previous screen, or select **Finish** to execute the restore.
8. When the restore is completed, it automatically restarts the Notebook. Remove and store the Application & Support disc.

# TROUBLESHOOTING

---

## LOCALIZE THE CAUSE

Errors can have simple causes, but sometimes they are caused by faulty equipment. We would like to give you some tips to help solve common problems. Should these instructions not lead to success, please feel free to contact us.

## CHECK CABLES AND CONNECTIONS

Visibly check all cables and connections. Should all lights be off, check whether all equipment is supplied with power.

- In battery mode, connect the Notebook to the power adapter and ensure that the battery is charged up.
- If you are operating the Notebook with the power adapter, check the electrical socket, power cord and all switches in the circuit of the electrical socket.
- Switch off the Notebook and check all cable connections. Check the connections to peripherals. Do not exchange cables, even though they may look similar. The polarity in the cables may be different. When it is confirmed that the Notebook has power and all connections are correct, turn the Notebook on again.

## THE POWER ON SELF TEST (POST)

The Power On Self Test (POST) is executed during each boot process to test the memory, motherboard, display, keyboard and other components. If the Notebook does not pass the POST but beeps several times, or if the screen remains blank, call your Notebook support technician.

## **ERRORS AND POSSIBLE CAUSES**

**The display is blank:**

- Confirm that the system is not in stand-by mode. Press any key on the keyboard to test this.

**Wrong Date and Time:**

- Double-click the clock on the taskbar and correct the date and time.

**An error message appears during boot-up:**

- You may have a floppy disk in the disk drive so the system is looking for an operating system on that floppy. Remove the disk and press any key.

**No data can be accessed from the optical Drive:**

- Check whether the CD is inserted correctly.
- Is the CD-ROM displayed in Windows Explorer? If so, test another CD.

**The Printer does not work:**

- Check the printer cable.
- Do a Printer Self Test.
- Should several pieces of equipment be operating from the same port, check all peripherals and reinstall the drivers.
- If you have access to the Internet, download and install the latest drivers from the manufacturer's Web site.

**The mouse does not work.**

- Check the cable connection.

## **ADDITIONAL SUPPORT**

If the suggestions in the above section have not solved your problem, please contact customer care and we will attempt to help you solve the problem. Before you call, however, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- Have you upgraded or removed drivers or hardware?
- Can you manually repeat the problem?
- If you have been given a customer number previously, please have this available.

## **DRIVER SUPPORT**

This Notebook has been extensively tested in our laboratories with a large number of compatible devices. It fulfills all required standards and complies with the standard "Designed for Windows", which certifies utmost compatibility. However, the software drivers for individual components are updated from time to time. This is a regular process provided by the manufacturer to mend possible compatibility problems that may occur with components (e.g., programs or hardware) that were not tested at the time of your Notebook's manufacture. Driver updates and the latest information on your product are available on the Internet.

 Visit Medion on the Web at  
[www.medion.com](http://www.medion.com)

# MAINTENANCE

---

## MAINTENANCE INSTRUCTIONS

This section provides information on the proper maintenance and care of your Notebook. Following these measures can extend its lifetime.

### CLEANING AND CARE



- **Warning!** There are no user-serviceable or user-cleanable parts inside the Notebook housing. Never open the Notebook housing.
- **DO NOT** use any solvents, corrosive or gaseous cleaning agents.
- **DO NOT** use CD-ROM cleaning disks or similar products that clean the lens of the laser to clean your CD-ROM/CD-RW/DVD/DVD-RW drive.

- Before cleaning, always remove the power adapter plug and all connecting cables.
- Only use a damp, lint-free cloth to clean the Notebook.

### CARE OF THE TFT DISPLAY

- Always close the Notebook when not in use. Avoid touching or scratching the surface of the screen as it is easily damaged.
- Make sure that no water drops are allowed to remain on the screen. Water can cause permanent discoloration.
- Clean the screen with a dry, soft, lint-free cloth.
- Do not expose the screen to bright sunlight or ultraviolet radiation.

## TRANSPORTING THE NOTEBOOK

Please use the following guidelines when transporting the Notebook:

- Switch off the Notebook. This will prevent damage to the hard disk. When the Notebook is turned off, the hard disk heads are moved into a safe area.
- Remove any CDs and floppy disks. This will prevent damage to the disks or to the drive heads.
- Close the Notebook and ensure that the cover locks shut.
- Always use the Notebook carrying case. This helps to protect the Notebook from dirt, moisture, jolts and scratches.
- Fully charge your battery and any spare batteries immediately before a long journey.
- Should you need to ship your Notebook, always use the original packaging and make certain the shipper knows the contents contain fragile electronic equipment.
- Wait until the Notebook has reached ambient (room) temperature before turning it on or connecting it to the power adapter. Drastic variations in temperature and humidity can create condensation within the Notebook and may cause it to short-circuit.

## UPGRADES AND REPAIRS

- Only a qualified Service Engineer should perform upgrades and repairs to your Notebook.
- If you do not have the necessary qualifications, go to an appropriate **Service Engineer**. Please contact the **Service Center** if you are experiencing technical problems with your Notebook.

## SECURING YOUR NOTEBOOK

### SETTING A USER PASSWORD

You can prevent unauthorized access to your Notebook by setting a User Password. When starting the Notebook the password will be requested. The User Password is set in the **BIOS**.


- ☞ **Attention:** Keep your password in safety place. If you forget your password you do not have the possibility to cancel it. In this case please call your service centre.

To protect your data from unauthorized access, you can also use the security option of Windows<sup>XP</sup>. See also chapter „Data and System Security“ (p. 83).

### USING A SAFETY LOCK

You can prevent theft by using a so called **Kensington-lock**, which can be bought at your local retailer.

The cable wraps around an object and the „T“ shaped end inserts into the Kensington lock port and a key or combination dial is used to secure the lock in place. Please keep your key at a safety place.

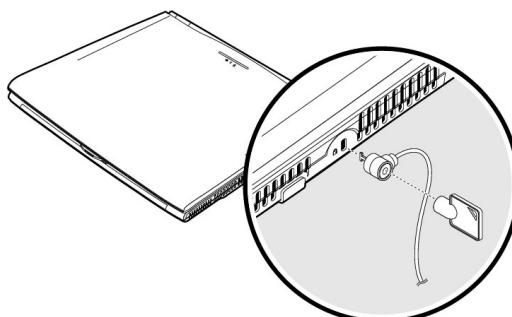

## NOTES FOR SERVICE ENGINEERS

- Before opening the housing, disconnect the Notebook from all power sources and remove any connecting cables. If the Notebook has not been disconnected from the power outlet before being opened, there is a **danger** of severe electric shock. There is also a risk of damage to the components.
- Internal components of the Notebook may be damaged by **electrostatic discharge** (ESD). Perform system upgrades and changes in an **ESD-protected work area**. If no such work area is available, wear an **antistatic wrist strap** or touch a highly conductive metal object. Your service center can repair damage sustained by inappropriate handling for a fee.
- Use only **original spare parts**.

**CAUTION:** The CMOS lithium batteries cannot tolerate intense pressure, high temperatures or fire. Keep away from children! Danger of explosion if replaced incorrectly. Only replace with a compatible type (CR2032) as recommended by the manufacturer. Lithium-Batteries are **hazardous waste** and need to be disposed of properly. If necessary, we will take back your used CMOS lithium battery.

### Notes on Laser Radiation :

Laser devices of Laser Class 1 to Laser Class 3b may be used in the Notebook. Where the Notebook housing remains closed, the device meets the requirements of **Laser Class 1**. By opening the Notebook housing you will gain access to laser devices of up to Laser Class 3b.

- The CD-ROM/CD-RW/DVD/DVD-RW drive contains no user-serviceable parts. Only the **manufacturer** should perform repairs to the CD-ROM/CD-RW/DVD/DVD-RW drives.

When removing and/or opening laser devices, the following guidelines must be observed:

- **DO NOT** look into the laser beam, even while wearing optical protection.
- **DO NOT** allow yourself to be exposed to the laser beam. Avoid exposure of the eyes or skin to direct or stray radiation.

## ■ Chapter 6

### Appendix

<b>Subject</b>	<b>Page</b>
Standards _____	97
Warranty _____	102
Index _____	105



# STANDARDS

---

This Notebook meets the requirements of the following standards:

## ELECTROMAGNETIC COMPATIBILITY

This Notebook meets the following requirements for standards of electromagnetic compatibility and electrical safety:

<b>EN 55022</b>	Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement.
<b>EN 55024</b>	Information technology equipment - Immunity characteristics - Limits and methods of measurement.
<b>EN 61000-3-2</b>	Limits - Limits for harmonic current emissions (equipment input current up to and including 16 A per phase).
<b>EN 61000-3-3</b>	Limits - Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with a rated current up to 16 A.

- Keep the Notebook at least one meter (approximately three feet) away from **high frequency** and **magnetic interference sources** (e.g., televisions, loudspeaker cabinets, mobile telephones, etc.) in order to avoid malfunctions and/or loss of data.
- Please note that only **shielded** cables shorter than 3 meters (9.84 ft) should be used for the LPT, COM, USB, IEEE 1394, audio, video and network interfaces with this Notebook.
- When connecting additional components, please observe the *Guidelines on Electromagnetic Compatibility (EMC)*.

## ELECTRICAL SAFETY

<b>EN 60950</b>	Safety of information technology equipment.
-----------------	---

- The connection of devices is limited to equipment that complies with EN60950 "Safety of information technology equipment" or EN60065 "Audio, video and similar electronic apparatus. Safety requirements"
- For U.S. / Canadian purposes: The Notebook should only be connected to equipment which complies with UL 60950 / CAN CSA 22.2 No 60950

## ERGONOMICS

<b>EN 29241-3</b>	Ergonomic requirements for office work with visual display terminals (VDTs). Visual display requirements.
<b>EN ISO 9241-8</b>	Ergonomic requirements for office work with visual display terminals (VDTs). Requirements for displayed colors.

## SUPPLEMENTARY INFORMATION

This product has been tested for operation in UK and complies with the European Directives on Radio and Telecommunications Terminal Equipment (R&TTE 1999/5/EC).

## ISO 13406-2 CLASS II


Active matrix LCDs (TFT) with a resolution of 1024 x 768 pixel (XGA), which are in turn composed of three sub-pixels each (red, green, blue), contain about 2.4 million addressable transistors. Because of this very high number of transistors and their extremely complex production process occasionally defective or incorrectly addressed pixels or sub-pixels may occur.

There have been several attempts in the past to define the acceptable number of defective pixels. But this can be difficult and varies widely between different manufacturers.

We, therefore, adhere to the clear and strict requirements of **ISO 13406-2, class II**, for the warranty handling of all TFT display products. These requirements are summarized below.

Within ISO-standard 13406-2 the general requirements regarding pixel defects are defined. Pixel defects are classified into three failure types and four failure classes. Each individual pixel is made up of three sub-pixels in the primary colors (red, green, blue).

### **Pixelstructure**

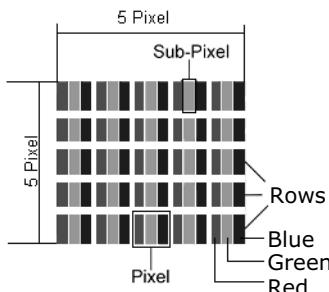

### **Types of Pixel Failures:**

- Type 1: A constantly lit pixel (a bright, white spot), even though it is *not addressed*  
A white pixel is caused when all three sub-pixel are lit.
  - Type 2: A pixel that does not light up (dark, black spot), although it is addressed
  - Type 3: Abnormal or defective red, green or blue sub-pixels.  
(E.g. constantly lit with half the brightness, one color is not shining, blinking or flickering, but not belonging to Type 1 or 2 Pixel Failures)
- In addition: A cluster of type 3 (= 2 or more defective sub-pixels in an array of 5 x 5 pixel). A cluster is an array of 5 x 5 pixel (15 x 5 sub-pixel).

## **ISO 13406-2, Class II**

<b><u>Resolution</u></b>	<b><u>Type 1</u></b>	<b><u>Type 2</u></b>	<b><u>Type 3</u></b>	<b><u>Cluster Type 1, Type 2</u></b>	<b><u>Cluster Type 3</u></b>
1024 x 768	2	2	4	0	2
1280 x 854	3	3	6	0	3
1280 x 1024	3	3	7	0	3
1400 x 1050	3	3	8	0	3

### **Example:**

A 17" - SXGA-display consists of 1280 horizontal and 1024 vertical picture dots (pixel), which amounts to a total of 1,31 million pixels. Based on one million pixels this translates into a factor of about 1.31.

Class II type failure consequently allows for three defects each of type 1 and type 2 and 7 defects of type 3 and 3 cluster of type 3.

These cases are normally not covered by warranty.

If the number of failures exceeds the figures of any category mentioned above then this may be covered by the warranty.

## FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

# WARRANTY

---

MEDION warrants to our customers that this product is free from defects in materials and workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or a defective product returned to a MEDION repair facility or a MEDION Authorized Service Facility ("ASF") for such product, as applicable, and proven to be defective upon inspection, will be exchanged for new or comparable rebuilt parts, or a refurbished product, as determined by the MEDION repair facility or the ASF.

Limited warranty repair or replacement shall not extend the original limited warranty period of the defective product. This limited warranty does not cover any supplies or accessories, including but not limited to: software, blank media, user-installed drives, etc.

**EXCLUSIONS:** this limited warranty does not apply, and you will have no remedy hereunder with respect to (a) products that have been modified, opened, repaired or otherwise altered, except by MEDION or an ASF, (b) products that have been damaged or destroyed after delivery to the customer, (c) any third party software, interfaces, parts, supplies, peripherals or other products or any defects resulting from use of the product in conjunction with such third party products, (d) defects resulting from improper or inadequate maintenance, calibration or site preparation, (e) defects resulting from any misuse, abuse, accident, neglect, negligence or any use other than in accordance with the handling or operating instructions provided by MEDION, (f) defects resulting from exposure to unusual physical or electrical stress or from any operation other than in accordance with the published environmental specifications for the product.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND MEDION SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND NO IMPLIED WARRANTY APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE. Some countries, states or provinces do not allow exclusions or limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This limited warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.

MEDION's limited warranty is valid in any country or locality where MEDION has a support presence for this product and where MEDION has marketed this product. The level of warranty service you receive may vary according to local standards. MEDION will not alter form, fit or function of the product to make it operate in a country for which it was never intended to function.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE REMEDIES IN THIS LIMITED WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL MEDION OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST MEDION BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY MEDION WHICH CAUSED THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF MEDION. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT AS LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Please note the following:

Be sure to keep your purchase receipt in a safe place. MEDION, at its option, may require a copy of the receipt to validate the warranty period effective date (i.e. date of purchase). Warranty liability only applies to material or factory faults. It does not apply to damage due to breakage, for example, a crack in the housing. Our service includes unit exchange or send -in repair:

#### Unit Exchange

In locations where Unit Exchange is available, MEDION will send you a replacement notebook. You must return the defective notebook to MEDION (using the shipping carton that the new one came in.)

#### Send-In Repairs

In locations where Send-In Repair Service is available, repair service can be obtained by shipping your notebook to the MEDION Repair Center. The notebook will be repaired and returned to you.

For either Unit Exchange or Send-In Repairs, you must have an authorized RMA number from Medion support before shipping your defective product.

Replacement products may be either new or equivalent in performance to new. MEDION replacement or repaired products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

#### Out-of-Warranty Support

In addition to providing free technical support during the warranty period, MEDION is also available to support your product after the warranty period has ended. This out-of-warranty support will be provided on a fee basis.

## **Networking**

Medion warrants the operation of network capabilities as follows: Medion will ensure that the network (LAN) port is working properly. No network connectivity issues are supported.

## **LIMITS OF LIABILITY**

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall the company or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damage, whether based on contract or any other legal theory and whether advised of the possibility of such damages. This includes loss or damage of personal data on your Notebook.

## **LOCAL LAW**

This warranty statement gives you legal rights. You may also have other rights that vary from jurisdiction to jurisdiction. To the extent this warranty statement is inconsistent with local law, certain disclaimers and limitations of this statement may not apply to the customer.

## **MAKING COPIES OF THIS MANUAL**

This manual contains information protected by law. All rights are reserved. Copyright law prohibits duplicating this information in mechanical, electronic, or any other form, without the written approval by the manufacturer.

# INDEX

---

---

3

3 in 1 card reader ..... 14

---

A

All programs ..... 26

Ambient temperature ..... 7

Appendix ..... 95

Audience ..... i

Audio In ..... 15, 53

Audio Out ..... 15, 53

---

B

Battery operation ..... 10, 29

    Checking the battery level ..... 32

    Inserting the battery ..... 29

    Removing the battery ..... 30

Battery Operation

    Battery Power ..... 31

    Charging the Battery ..... 31

    Battery Power ..... 31

    BIOS Setup-Program ..... 77

    BIOS Utility

        Navigating ..... 78

    Burning CDs.. See writing CDs

---

C

Cabling ..... 9

CardBus ..... 68

Care of displays ..... 91

CD-ROM ..... 47

CD-RW Drive ..... 47

CDs

    Data ..... 51

    Music ..... 51

    Writing ..... 51

CF card reader ..... 14

Charging the Battery ..... 31

Checking the battery level ..... 32

Cleaning agents ..... 91

Cleaning and Care ..... 91

Clone desktop ..... 35

COM1 ..... 70

Compact Flash ..... 66

Connection options ..... 70

Connectors

    Audio IN ..... 53

    Audio OUT ..... 53

    External monitor ..... 35

    Infrared Interface ..... 73

    Memory card ..... 66

    Microphone IN ..... 53

    Modem ..... 56

    PC card ..... 68

PS/2 .....	72	EMC.....	97
SPDIF .....	53	Emergency Ejection of a blocked Disc .....	49
TV .....	37	Enter personal details.....	24
USB .....	71	Ergonomics.....	98
Control panel .....	26	Extend desktop .....	36
Copyright <sup>©</sup> .....	ii	External audio ports.....	53
Customer service .....	104	External monitor.....	15, 35
<hr/>			
D		Clone desktop .....	35
		Extend desktop .....	36
Data and system security	83		
Data entry .....	38		
Data security .....	3, 83		
Deleting files .....	44		
Desktop.....	25		
Digital Signatures .....	76		
Directories .....	44		
Disc-Drive.....	47		
Discs			
Handling.....	47		
Removing .....	49		
Display .....	34		
Opening and closing the display .....	34		
Driver support.....	90		
Drivers .....	44, 75		
DVD movies .....	50		
DVD-Drive .....	47		
<hr/>			
E		Getting Started .....	23
Electrical safety .....	98		
Electromagnetic compatibility .....	97		
<hr/>			
H		Handling.....	21

Hard drive .....	43	License agreement.....	24
Partitions .....	43		
HD..... See Hard drive			
help .....	74		
Help with software .....	75		
<hr/>			
I		M	
IBM® Microdrive .....	66	Microphone In .....	53
Icons .....	26	Main components.....	41
IEEE 1394.....	14, 72	Main Operation .....	28
Indicators .....	17	Maintenance .....	91
Capital Lock .....	18	Care of the TFT display ...	91
Num Lock .....	18	Cleaning and Care .....	91
Wireless LAN .....	17	Transporting the notebook.....	92
Information about your PC .....	26	Maintenance programs .....	83
Infrared Interface .....	73	Memory card connections ..	66
Inserting memory cards.....	67	Memory Stick .....	66
Inserting the battery .....	29	MMC .....	66
Installing a PC card .....	69	Modem.....	9, 56
Introduction .....	3	Port .....	56
ISO 13406-2 Class II.....	98	Mouse .....	39
<hr/>			
K		MPEG2 .....	50
Kensington-lock.....	93	MultiMediaCard.....	66
Keyboard .....	38	MusicMatch Jukebox.....	50
<hr/>			
L		N	
Laser radiation .....	94	Network .....	57
Left side .....	11	Fast Ethernet-Network ...	58
		Troubleshooting.....	60
		What do you need for networking? .....	59
		What is a Network? .....	57
		Wireless LAN.....	61

---

**O**

On/Off button.....	27
Open notebook.....	11
Operational safety .....	4
Optical drive .....	14

---

**P**

Partitions.....	43
Password reset disk .....	83
PC card slot .....	68
PCMCIA.....	68
Peripheral devices.....	75
Playing DVD movies .....	50
Playing music CDs .....	50
POST .....	88
Power .....	33, 104
Turning off your computer.....	26
Power adapter.....	8
Power management .....	33
Power Management.....	104
Power On Self Test.....	88
Power supply .....	27
Battery operation.....	29
Suspend mode .....	33
Power Supply	
Main Operation.....	28
Powe rDVD .....	50
Program bar.....	25
Programs	
Installing .....	85
Location .....	44

---

PS/2 Interface.....	15,72
---------------------	-------

---

**Q**

Quality .....	ii
---------------	----

---

---

**R**

Rear side .....	11, 15
Recovery .....	84
Factory settings.....	85
Windows <sup>XP</sup> .....	84
Recovery points.....	84
Removing a PC card .....	69
Removing memory cards ...	67
Removing the battery.....	30
Repairs .....	92
Restoring.....	84
Limits .....	86
Right side .....	11
Running the Bios Setup .....	78

---

**S**

Safety	
Data .....	44
Safety and maintenance .....	1
Safety instructions .....	3
Additional safety instructions.....	5
Ambient temperature .....	7
Battery operation .....	10
Cabling .....	9

Data security .....	3	Support.....	90
General safety information	4	Surround sound system.....	54
Modem.....	9	Suspend to disk.....	33
Operational safety .....	4	S-Video TV-Port.....	15
Optical drive safety .....	6		
Power adapter .....	8		
Set-Up location.....	7		
TFT Display safety .....	6		
Touch pad.....	9		
Upgrades and repairs .....	92		
Screen resolution .....	35		
SD .....	66		
Search .....	43		
Secure Digital.....	66		
Securing your Notebook.....	93		
Serial Interface.....	70		
Serial Number .....	ii		
Service.....	ii		
Service engineers .....	94		
Setting a User Password .....	93		
Set-Up Location .....	7		
Software.....	74		
for playing CDs.....	50		
Software help .....	75		
Sound card .....	53		
Standards .....	97		
Electrical safety .....	98		
Electromagnetic compatibility .....	97		
Ergonomics .....	98		
FCC Compliance Statement .....	101		
Standby mode.....	33		
Start button .....	25		
		T	
		Table of Contents .....	vii
		Task bar.....	26
		Touch pad .....	9, 39
		trademarks .....	ii
		Transport .....	45, 92
		Troubleshooting.....	88
		Errors and possible causes .....	89
		Turn off computer.....	26
		U	
		Underside .....	11
		Universal Serial Bus .....	71
		Upgrades and repairs .....	92
		USB memory stick .....	45
		First aid.....	46
		Usage .....	45
		Malfunction .....	46
		Write/delete protection .....	46
		Use of PC cards .....	68
		Using a safety lock.....	93
		V	
		views	

Front view .....	11	Underside .....	11
Views		USB port .....	14, 15
3 in 1 card reader .....	14	Views of the notebook .....	11
Battery bay .....	16		
CF card reader .....	14		
Fan slot .....	13		
IEEE 1394 .....	14		
Indicators .....	17	Warranty .....	102
Infrared Port .....	14	Limits of liability .....	104
Keyboard .....	13	Local law .....	104
LAN Port (RJ-45) .....	15	Windows activation .....	77
Left side .....	11	Windows Logo testing .....	76
Modem Port (RJ-11) .....	15	Windows Media Player .....	50
Monitor (external) .....	15	Windows XP	
Open notebook .....	11	Control Panel .....	26
Open Notebook .....	13	Desktop .....	25
Optical Drive .....	14	help .....	74
PC card slot PCMCIA .....	14	Help .....	26
Power ON/OFF .....	13	Help and support .....	74
Power socket .....	15	Interactive training .....	74
PS/2 Port .....	15	Manual .....	74
Rear side .....	11, 15	Recovery point .....	75
Right side .....	11	Tour .....	74
Status LED .....	13	Windows <sup>XP</sup>	
TFT Display .....	13	Recovery .....	84
Touchpad .....	13	Wireless LAN .....	61
		Writing CDs .....	51