

User Manual

[Basic Operations]

The essentials of imaging

Di2010f/Di2510f/Di3010f/Di3510f



2

- Introduction
- Available Features
- Before Making Copies
- Basic Copy Operations
- -- Copy Paper
 - Original Documents
- Specifying Copy Settings
 - Touch Panel Messages
- Troubleshooting

Contents

The following items are written under "Basic Operations". Read "Advanced Operations" and "Fax Operations" for all other items.

1 Introduct		oduction			
	1.1	Introduction1-2			
	1.2	Explanation of Manual Conventions1-3			
	1.3	Explanation of Basic Concepts and Symbols1-4			
	1.4	Components and Their Functions1-6			
	1.5	Part Names and Their Functions1-9			
2	Ava	ilable Features			
	2.1	Useful Operations2-2 Copying While Erasing an Area Around the Document2-12			
3	Bef	Before Making Copies			
	3.1	Names of Control Panel Parts and Their Functions3-2			
	3.2	Checking the Settings3-4			
		To check the settings			
	3.3				
	3.3	User Accessibility Operations			
		("Confirming Screen" function)			
		("Notification Screen" function)3-7 To change the volume of touch panel beeps and alarms			
		("Sound Setting" function)3-8			
	3.4	Enlarging the Touch Panel Screens3-9			
	3.5	Turning the Machine On and Off			
	3.6	Adjusting the Angle of the Control Panel3-13			
	3.7	Using the Touch Panel3-14			
		To use the memory recall feature3-22			

4	Bas	sic Copy Operations	
	4.1	Copying from the Fax and Copy Screen	4-2
	4.2	Making Basic Copies	4-3
	4.3	Stopping Copying To stop/restart/delete a copy job	
	4.4	Interrupting a Copy Job To interrupt copying	
	4.5	Making Copies Using Accounts To make copies when accounts are specified	
5	Cop	by Paper	
	5.1	Paper Specifications	5-2
	5.2	Unsuitable Paper	5-5
	5.3	Print Area	5-6
	5.4	Paper Storage	5-7
	5.5	Automatically Selecting the Paper Source	5-8
	5.6	Loading Paper	5-9
		To load plain paper	5-13
		To load postcards	
		To load envelopes To load overhead projector transparencies	
		To load overnead projector transparencies	
		To set a non-standard (custom) paper size	
		To store a non-standard (custom) paper size	
		To select a stored non-standard (custom) paper size	5-20
	5.7	Selecting the Paper Setting	
		To select paper loaded into a paper drawer	
		To select paper loaded into the multiple bypass tray	5-22
6	Ori	ginal Documents	
	6.1	Feeding the Document	6-2
	6.2	Feeding the Document Through the Duplexing Document Feeder6	
		To load a document of mixed sizes	
		("Mixed Orig Detection" function)	6-6
	6.3	Positioning Documents on the Original Glass	
		To position sheet documents	
		To position transparent or translucent documents	
		To position books or magazines	ხ- 10

	6.4	Loading Documents for Specific Applications	6-11
	6.5	Large Documents	6-30
7	Spe	ecifying Copy Settings	
	7.1	Specifying Finishing Settings	7-2
		To make copies using the "Crease" setting	
	7.2	Specifying a Zoom Setting	7-14
		To select a Zoom setting	
		To enter a custom zoom ratio	7-15
		To store CustomZoom and Minimal zoom ratios	
		To recall a stored custom zoom ratio	7-17
		To specify different vertical and horizontal scaling proportions ("X/Y Zoom" setting)	7-17
		,	
	7.3	Selecting the Orig. > Copy Settings	
		To specify Orig. ► Copy settings	
	7.4	Specifying a Copy Density	7-32
8	Tou	ıch Panel Messages	
	8.1	When the Message "Please add toner." Appears	8-2
		To replace the toner bottle	
	8.2	When the Message "Stapler empty." Appears	8-6
		To replace the staple cartridge for finisher FN-117	
		To replace the staple cartridge for the saddle finisher	8-9
	8.3	When a Paper Misfeed Occurs	8-11
		To clear a paper misfeed in the duplexing document feeder	
		To clear a paper misfeed in the fusing section	
		To clear a paper misfeed in the duplex unit	
		To clear a paper misfeed in the multiple bypass tray	
		To clear a paper misfeed in the 1st or 2nd paper drawer To clear a paper misfeed in the 3rd or 4th paper drawer	
		To clear a paper misfeed in the large-capacity cabinet	
		To clear a paper misfeed in the finisher (FN-117)	
		To clear a paper misfeed in the mailbin (MK-1)	8-24
		To clear a paper misfeed in the saddle kit	8-26
	8.4	When the Message "Cannot Staple." Appears	8-28
	8.5	When the Message "Empty punch scraps." Appears	8-33
		To empty the punch box	8-33
9	Tro	ubleshooting	
	9.1	Main Messages and Their Remedies	9-2

	9.2	When Incorrect Copies Are Printed	9-3
	9.3	When the Machine Is Not Operating Correctly	9-6
	9.4	The Fax Does not Work Properly	9-7
	9.5	Replacing the Completion Stamp	9-10
		Replacing the Storage (Transmission) Stamp	9-10
10	Inde	ex	
	10.1	Index	10-2

Advanced Operations

Read the User Manual: Advanced Operations for the following items.

- 1 Introduction
- 2 Safety Information
- 3 Precautions
- 4 Auxiliary Functions
- 5 Utility Mode Operations
- 6 Administrator Management Operations
- 7 Appendix
- 8 Index

Fax Operations

Read the User Manual: Fax Operations for the following items.

- 1 Before Using
- 2 Basic Transmission
- 3 Basic Reception
- 4 Using as a Telephone
- 5 Verification of Results
- 6 Transmitting Various Faxes
- **7** Receiving Various Faxes
- 8 Using the Document Functions
- 9 Appendix
- 10 Index

Introduction



1.1 Introduction

Structure of the Manual

The User Manual for this product is made up of three sections: "Basic Operations", "Advanced Operations", and "Fax Operations".

"User Manual: Basic Operations, Fax Operations" can be read as needed during use.

Be sure to read the "User Manual: Advanced Operations" before using this product as it contains cautionary items on use.

Be sure to keep this manual after reading. It will be useful should there be anything you do not understand during use, or if a problem arises.

- User Manual: Basic Operations
 Here, we will explain the basic methods of operation, precautions for using this
 product and operation of the copy functions. Read "Basic Operations" if you
 wish to use this machine.
- User Manual: Advanced Operations
 Here we will describe the precautions prior to use, the operation of the application functions, the functions used by administrators (utilities, administrator mode), troubleshooting, specifications, etc.
- User Manual: Fax Operations
 Here we will explain the operation of the fax functions.

 Read "Fax Operations" when using the fax function.

1.2 Explanation of Manual Conventions

The marks and text formats used in this manual are described below.



WARNING

Failure to observe instructions highlighted in this manner may result in fatal or critical injuries.

→ Observe all warnings in order to ensure safe use of this machine.



CAUTION

Failure to observe instructions highlighted in this manner may result in serious injuries or property damage.

→ Observe all cautions in order to ensure safe use of this machine.



Note*

(*May also appear as "Important" or "Tip")

Text highlighted in this manner contains useful information and tips to ensure safe use of this machine.

- 1 The number 1 as formatted here indicates the first step of a sequence of actions.
- 2 Subsequent numbers as formatted here indicate subsequent steps of a sequence of actions.
 - **Text formatted in this style provides** additional assistance.
 - → Text formatted in this style describes the action that will ensure the desired results are achieved.

[Copy] key

The names of keys on the control panel are written as shown above.


An illustration inserted here shows what operations must be performed.

1.3 Explanation of Basic Concepts and Symbols

The use of words and symbols in this manual are explained below.


"Width" and "Length"

Whenever paper dimensions are mentioned in this manual, the first value always refers to the width of the paper (shown as "Y" in the illustration) and the second to the length (shown as "X").

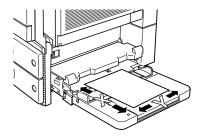


Lengthwise

If the width (Y) of the paper is shorter than the length (X), the paper has a vertical or portrait orientation, indicated by either "L" or .

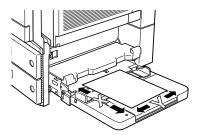

Crosswise

If the width (Y) of the paper is longer than the length (X), the paper has a horizontal or landscape orientation, indicated by either "C" or \square .

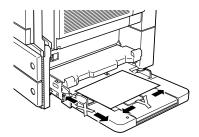

Portrait and Landscape

Portrait



With the "portrait" orientation, the paper is vertical, like a portrait.

Landscape



With the "landscape" orientation, the paper is horizontal, like a landscape.

Display Icons



Plain paper



Thick paper



Overhead projector transparencies



Envelope


Paper Supply Icons

The icons shown below are displayed to indicate the amount of paper that remains.


The paper is empty.



1.4 Components and Their Functions

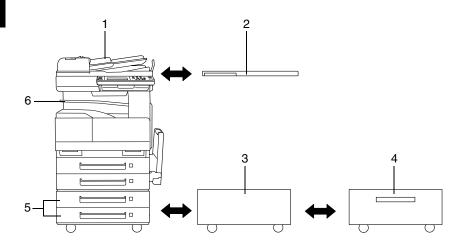

No.	Part Name	Description
1	Duplexing Document Feeder AFR-19 (optional)	Automatically feeds one document sheet at a time for scanning, and automatically turns over double-sided documents for scanning Referred to as the "duplexing document feeder" throughout the manual.
2	Original Cover Kit OC-6 (optional)	Presses down on the loaded document to keep it in place Referred to as the "original cover" throughout the manual.
3	Copy Desk CD-4M (optional)	This machine can be placed on the copy desk. Using the copy desk allows the machine to be set up on the floor. Referred to as the "copy desk" throughout the manual.
4	Large Capacity Cabinet PF-122 (optional)	Equipped with a large-capacity paper drawer that can supply 2,500 sheets of paper Referred to as the "large-capacity cabinet" throughout the manual.
5	2 way Paper Feed Cabinet PF-210 (optional)	Equipped with two paper drawers that can supply 1,000 sheets of paper Referred to as the "paper feed cabinet" throughout the manual.
6	Job Separator JS-203 (optional)	Allows printed pages to be separated Pull the lever when taking out the paper. *In order to use the job separator, the switchback unit must be installed.

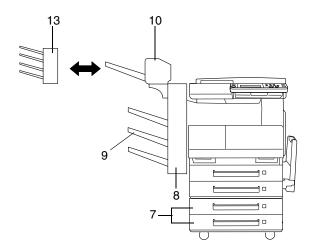



No.	Part Name	Description
7	Paper Feed Unit PF-124 (optional)	Equipped with a paper drawer that can supply 500 sheets of paper, for upper paper feed unit only. Referred to as the "paper feed cabinet" throughout the manual.
8	Buitlt in Finisher FN-117 (optional)	Finishes printed pages according to the selected finishing mode (sorting or stapling), then feeds out the pages Referred to as the "finisher" throughout the manual.
9	Additional Bin Kit AK-1 (optional)	If this option is attached to the finisher, the bins for separating printed pages increases. Referred to as the "3rd paper output tray" throughout the manual.
10	Saddle Kit SK-1 (optional)	If this option is attached to the finisher, stapling, hole-punching, creasing and booklet-printing are available as Finishing settings. Referred to as the "saddle kit" throughout the manual.
11	Stapling kit for saddle kit MS-2C*	If this option is attached to the saddle kit, center stapling is available as a Finishing setting. Referred to as the "stapling kit" throughout the manual.
12	Stapling kit for Finisher MS-5D*	If this option is attached to the finisher, corner stapling and center stapling are available as a Finishing setting. Referred to as the "stapling kit" throughout the manual.
13	Mail Bin Kit MK-1 (optional)	If this option is attached to the finisher, the printed pages can be divided and fed into the appropriate bin assigned to a specific individual or group. *This option can only be used with computer printouts. Referred to as the "mail bin kit" throughout the manual.
14	Punch Kit PK-6 (optional)*	If this option is attached to the finisher, hole-punching is possible. Referred to as the "punch kit" throughout the manual.

No.	Part Name	Description
15	32MB/64MB/128MB Memory M32-4/M64-2/M128-3 (optional)*	Increases the memory of this machine to as much as 192 MB (64 MB standard memory + 32/64/128 MB expanded memory) By expanding the memory, the number of pages that can be stored in the memory can be increased. Referred to as the "expansion memory" throughout the manual.
16	Hard Disk Drive Kit HDD-6 (optional)*	Allows more pages to be stored In addition, by installing hard disk drive HDD-6 and the expansion memory, the Distribution # function can be used. Referred to as the "hard disk" throughout the manual.
17	Printer controller Pi3505e, Pi3505e/PS (optional)	External printer controller that allows this machine to be used as both a printer and a scanner configured into a computer network For more details, refer to the manual of the printer controller.
18	Network interface kit SU-5 (optional)*	Allows e-mails to be sent and this machine to be used as a printer

^{*} The internal options are not shown.


How to use the job separator (JS-203)?

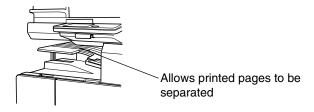

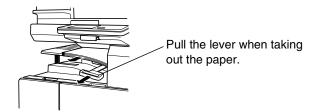


1.5 Part Names and Their Functions

Main Unit

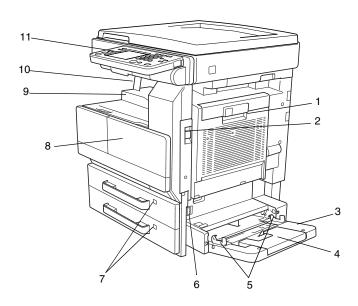


No.	Part Name	Description
1	Right-side door	Opened when clearing paper misfeeds
2	Right-side door release lever	Used to open the right-side door
3	Multiple bypass tray	Used for manual feeding paper for making copies and printouts Can be loaded with 100 sheets of paper Can be loaded with special paper \rightarrow page 5-13
4	Tray extension	Open the tray extension when loading large-sized paper.
5	Paper guide	Adjust to the width of the paper
6	Release lever	Opened when clearing paper misfeeds
7	Paper supply indicator	As the amount of paper in the paper drawer decreases, the area that appears in red increases.
8	Front door	Opened when replacing the toner bottle → page 8-2
9	Paper output tray	Collects printed pages fed out of the machine facing down
10	Paper stopper	Prevents printed pages from falling out of the paper output tray Used when the optional sorter is installed
11	Touch panel	Liquid crystal display in the control panel Used to specify various copy and fax settings and program or change functions

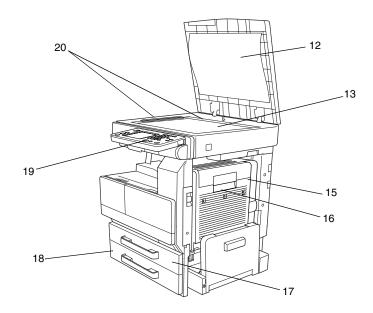


No.	Part Name	Description
12	Document pad (optional)	Presses down on the document positioned on the original glass
13	Original glass	When manually feeding the document, place it on the glass so the document can be scanned. Place the document face down on the glass.
14	Switchback unit *	Built into the printer to turn over the paper when printing double-sided pages
15	Duplex unit	Turns over printed pages, allowing double-sided pages to be printed automatically If a printer controller and the duplex unit are installed onto the Pi3505e or Pi3505e/PS, the memory must be expanded. If the optional memory is not installed, double-sided pages cannot be printed automatically. Referred to as the "duplex unit" throughout the manual.
16	Duplex unit door	Opened when clearing a paper misfeed within the duplex unit
17	1st paper drawer	Holds up to 500 sheets of paper The paper size can be adjusted freely. → page 5-10
18	2nd paper drawer	Holds up to 500 sheets of paper The paper size can be adjusted freely. → page 5-10
19	Control panel	Used to start scanning and printing operations. Used when starting fax transmission or when starting fax reception following a telephone conversation.
20	Document scales	Used to align the document

^{*} The internal options are not shown.

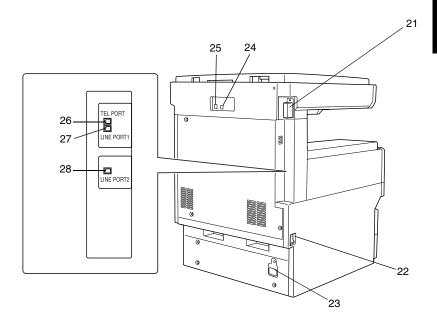

No.	Part Name	Description
21	Duplexing Document Feeder connector	Used for connecting the duplexing document feeder hookup cord
22	Power switch	Used to turn the machine on and off \rightarrow page 3-10
23	Power cord socket	Used for connecting the machine's power cord
24	Printer USB connector	Used for connecting the printer hookup cord
25	LAN cable connector	Used for connecting the LAN cable
26	External telephone jack (TEL PORT)	Used for connecting a line to a telephone.
27	Telephone line jack for line 1 (LINE PORT1)	Used for connecting to a standard telephone line.
28	Telephone line jack for line 2 (LINE PORT2)	Used for connecting to a standard telephone line. In order to use LINE PORT2, the optional multi port must be installed.

Options

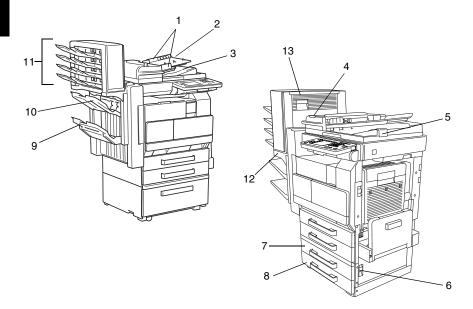

Duplexing Document Feeder (AFR-19)

No.	Part Name	Description
1	Document guides	Adjust to the width of the document
2	Document feed tray	Load the documents to be copied face up.
3	Document output tray	Collects documents that have been copied
4	Print indicator	Lights up or flashes to indicate the status of the machine
5	Paper stopper	Prevents the documents from falling out of the document output tray.

Paper Feed Unit

No.	Part Name	Description
6	Lower-right door release lever	Used to open the lower-right door
7	3rd paper drawer	Holds up to 500 sheets of paper
8	4th paper drawer	The paper size can be adjusted freely.

Built in Finisher (FN-117)


No.	Part Name	Description
9	2nd paper output tray (sorted copy tray)	Collects printed pages that are sorted
10	1st paper output tray (non-sorted copy tray)	Collects printed pages that are not sorted (made with the "Non-Sort" setting)


Mail Bin Kit (MK-1)

No.	Part Name	Description
11	Mail Bin	Collects copies that are sorted
12	Output tray cover	Opened when clearing paper misfeeds
13	Misfeed-clearing door	Opened when clearing paper misfeeds

Precautions for using the finisher, saddle kit and mail bin kit

- Do not place objects on top of the saddle kit or mail bin kit.
- Do not place objects under the paper output trays of the finisher.

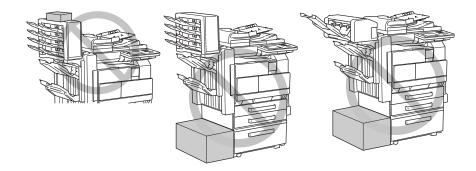

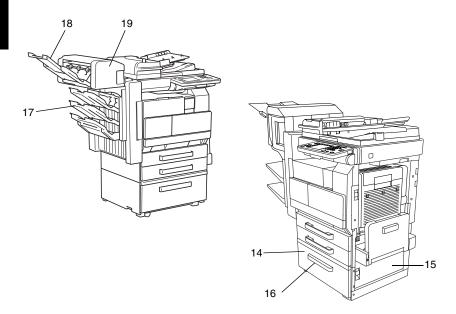

Large Capacity Cabinet (PF-122)

No.	Part Name	Description
14	3rd paper drawer (LCC)	Holds up to 2,500 sheets of paper
15	Lower-right door	Opened when clearing paper misfeeds
16	Drawer release button	Pressed when loading paper

Additional Bin Kit (AK-1)

No.	Part Name	Description
17	3rd paper output tray	Collects printed pages


Saddle Kit (SK-1)

No.	Part Name	Description
18	Paper output tray	Collects printed pages
19	Misfeed-clearing door	Opened when clearing paper misfeeds that occurred in the finisher

Fax Option Names and Functions

The external telephone used should match the type of telephone line. Some types of external telephones cannot be used. For details, contact your service representative.

- Multi Port (MP-5)
 Accommodates a number of lines to permit independent operation of each.
- Storage (Transmission) Stamp Unit (TX Marker STAMP UNIT 2)
 A stamp on originals that have been scanned makes confirmation possible. This can only be attached to the duplexing document feeder.

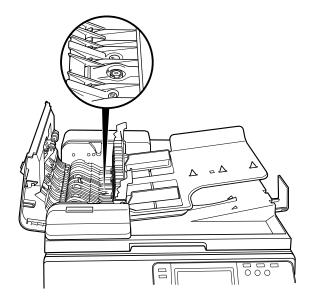

Introduction Chapter 1


Available Features

2.1 Useful Operations

Installing the optional accessories expands the functionality of this machine.

Copying a Book or Magazine

The individual pages of a book or magazine can be duplicated onto double-sided copies (one page per side) in the original page order.

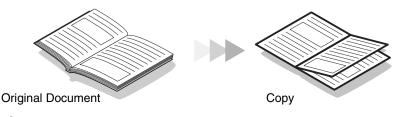




Note

In order to perform the following procedure, the optional duplex unit and switch-back unit must be installed (for Di2010f).

1


Position the document on the original glass with the center aligned with the book mark on the document scale.

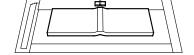

 Start copying from the lower numbered pages.


2

Press the [Copy] key, and then touch [Orig. ►Copy] followed by [Book] on the touch panel.

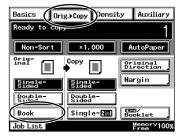


For book-binding, touch [Standard Book] or [RightBound], and then touch [Separation].

Next, touch [Enter].

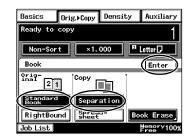


4

Touch [Double-Sided], and then touch [Page Order].

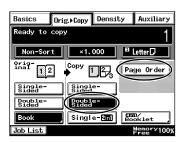


Touch [Book Order], and then touch [Enter].

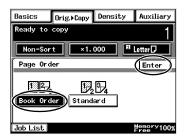

6

Press the [Start] key.

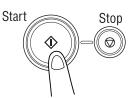


After the message shown at the right appears, turn the page of the book or magazine, re-position the document on the original glass, and then press the [Start] key.

Repeat step 7 for all other pages, and then touch [Finish] before pressing the [Start] key to scan the last page.



Copying to Form a Booklet

A document can be copied like a book so the pages can easily be put together to form a booklet.

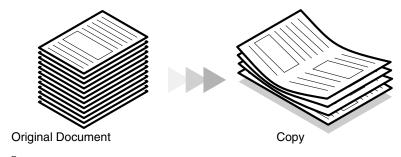



Note

In order to perform the following procedure, the optional duplexing document feeder, duplex unit and switchback unit (for Di2010f) must be installed.

- Load the document into the duplexing document feeder.
 - The document can also be positioned on the original glass.




2

Press the [Copy] key, and then touch [Orig. ▶ Copy] followed by [4in1/Booklet] on the touch panel.




Touch [Booklet Creation], and then touch [Enter].

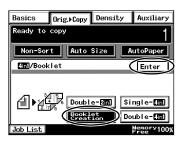

4

Press the [Start] key.

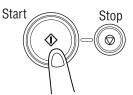


5

After all copies are printed, fold the pages in half to form a booklet.



Tip


If the optional saddle finisher is installed, the crease can be made automatically. For details, refer to "To make copies using the "Crease" setting" on page 7-10.

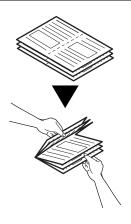

Chapter 2

Automatically Stapling Pages While Copying

Each set of copies can easily be stapled together.

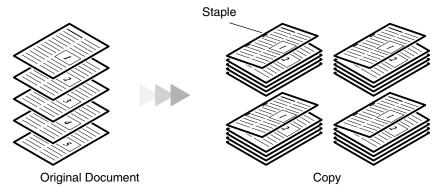



Note

In order to perform the following procedure, the optional duplexing document feeder, finisher and stapling kit must be installed.


Load the document into the duplexing document feeder.

 The document can also be positioned on the original glass.




2

Press the [Copy] key, and then touch [Finishing] on the touch panel.

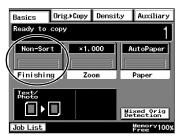


3 Touch [Sort].

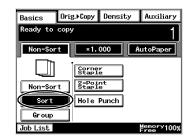


4

Touch [2-Point Staple].

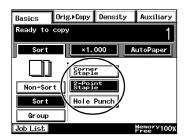

5


Press the [Start] key.

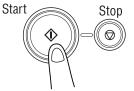

Printing Multiple Copies of Tickets

Tickets for a concert or some other event can easily be made.

As an example, the procedure for reducing an 8 in. \times 2-3/4 in. document by 50% and copying it onto thick Letter-size paper is described below.

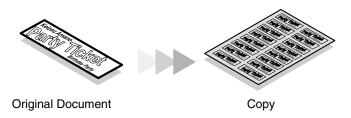



Important

Copying certain type of documents is prohibited by law. Making copies of these documents may be punishable as a crime. (For more details, refer to Legal Restrictions on Copying of "Precautions" in the Advanced Operations volume.)




Note

If the document is placed directly on the original glass and the size is detected automatically, the document will be scanned with a standard size.

If the document has a non-standard size, first measure the size of the document.



Position the document to be copied.

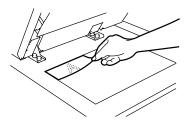


Chapter 2

2

Open the multiple bypass tray and load it with paper.

 A maximum of 50 sheets of thick paper can be loaded.

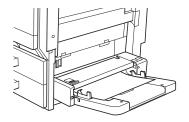

3

Press the [Copy] key, and then touch [Paper] on the touch panel.



4

Touch the button for the multiple bypass tray, and then touch [Mode Change].



5

Touch [Card], and then touch [Enter].

 If paper with a non-standard size is loaded, touch [Custom Size], and then specify the paper size. (For details, refer to page 5-16.)




Chapter 2


6 Touch [Zoom].



7 Touch [× 0.500].

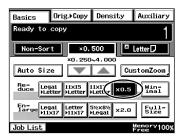


8 Touch [Auxiliary], and then touch [Image Repeat].

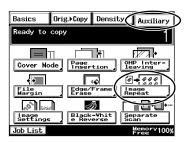

Touch [Size Input].



1 Touch [Custom Size].

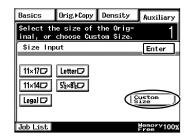


- Touch X . Then, touch and to select the length of side X for the document.
 - O Touch X or so that the cursor moves below the fraction that you wish to change.
 - For this example, set the length of side X to "8".



- Touch Y. Then, touch and to select the length of side Y for the document, and then touch [Enter].
 - O Touch Y •• until the cursor moves below the fraction that you wish to change.
 - For this example, set the length of side Y to "2 3/4".




13 Press the [Start] key.
Sixteen 4 in. × 1-3/8 in. tickets are copied onto one sheet of paper.

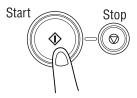

Copying While Erasing an Area Around the Document

When copying documents with unwanted markings, headers or punch holes, the pages can be printed with a frame or one side of the document erased.

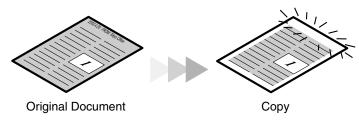



Note

The position and width of the area to be erased can be set so that it is appropriate for the document being copied.

The width of the erased area refers to how much of the document will be erased. If enlarged or reduced copies are made, the same width is erased and an enlarged or reduced copy is printed.

1


Position the document to be copied.






2


Press the [Copy] key, and then touch [Auxiliary] followed by [Edge/Frame Erase] on the touch panel.

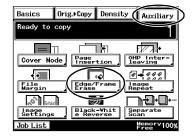

Select the desired position of the erased area.
(Example: Erasing a frame)

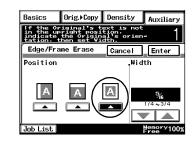


Touch and to specify the width of the erased area.

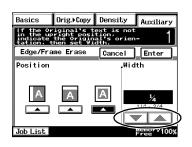

5 Touch [Enter].



6 Press the [Start] key.

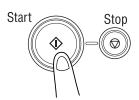


Chapter 2

Reducing Paper Usage

Double-sided copying and 2in1 copying are useful in economizing on printed pages or reducing the size of a thick document.

As an example, the procedure for combining two single-sided document pages into a double-sided copy is described below.

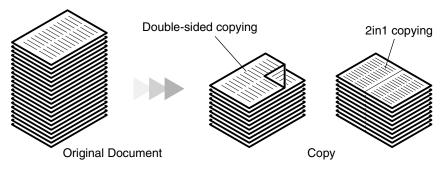



Note

In order to perform the following procedure, the optional duplexing document feeder, duplex unit and switchback unit (for Di2010f) must be installed.



Tip

Double-sided 2in1 copying and single-sided 4in1 copying reduce the paper usage by one fourth, and double-sided 4in1 copying reduces paper usage by one eighth.



Load the document into the duplexing document feeder.

 The document can also be positioned on the original glass.




2

Press the [Copy] key, and then touch [Orig. ▶Copy] followed by [4in1/Booklet] on the touch panel.




3 Touch [Double-2in1].

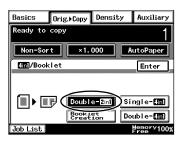

4

Press the [Start] key.

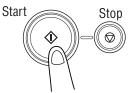

Chapter 2

Reducing Electricity Usage

When this machine is not being used, it can be turned off.

In addition, the machine can be set to a low power mode to conserve energy.

In order to perform these operations, the Energy Save mode and the Sleep mode can be used to automatically set the machine to an energy-saving mode when the machine is not used for a specified length of time.


1

Press the [Utility] key.



2


Touch [User's Choice].

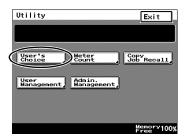

3


Touch [3/6].

- To specify settings for the Energy Save mode, continue with step 4.
- To specify settings for the Sleep mode, skip to step 7.

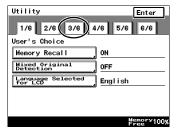



Touch [Energy Save Mode].

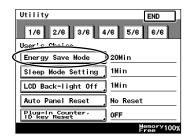

5

Press the [C] (clear) key to erase the current value, and then use the keypad to specify the desired length of time until the machine enters Energy Save mode.




6

Touch [Enter].



7

Touch [Sleep Mode Setting].

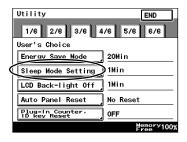

8

Use the keypad to specify the desired length of time until the machine enters Sleep mode.



9


Touch [Enter].



Before Making Copies

3

3.1 Names of Control Panel Parts and Their Functions

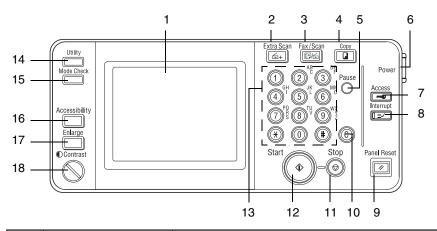

No.	Part Name	Function
1	Touch panel	Displays various screens and messages Touch items in the touch panel to select screens and specify settings.
2	[Extra Scan] key	Press to use the scanning functions. (In order to use the scanning functions, the network interface card must be installed.)
3	[Fax/Scan] key	Used to change between Fax and Scan modes. → Fax Operations (In order to use the scanning functions, the network interface card must be installed.)
4	[Copy] key	Press to enter Copy mode.
5	[Pause] key	An approximately 3 second wait can be set when dialing a fax number. This is convenient when sending from an internal line to an external line and for the wait when information services are used.
6	Sub power switch	Use to turn the machine on and off.
7	[Access] key	Press when an access code must be entered. • If the "Copy Track Mode" parameter is set to "OFF", nothing happens when this key is pressed. → Advanced Operations volume
8	[Interrupt] key	 Press to enter Interrupt mode. → page 4-6 To cancel Interrupt mode, press the [Interrupt] key again.
9	[Panel Reset] key	Press to reset all modes and functions to their default settings.
10	[C] (clear) key	Press to reset the number of copies to "1". Press to erase a setting (such as the zoom ratio or size) selected using the keypad. Any letters and numbers being entered are deleted.
11	[Stop] key	 Press to stop a copy operation. Press to stop the scanning of a document. Fax transmission is stopped.

No.	Part Name	Function
12	[Start] key	Press to start a scanning or copy operation. Fax transmission starts.
13	Keypad	Use to enter a number, such as the number of copies or a fax number.
14	[Utility] key	Used to display the Utility screen. For more details, refer to "Utility Mode Operations" in the Advanced Operations volume of the User Manual.
15	[Mode Check] key	 Press to display a list of all specified settings. From this list, the screen to specify each setting can be displayed and the setting can be changed. From this screen, the current settings can also be stored as a copy program.
16	[Accessibility] key	Press to activate or deactivate the user accessibility functions.
17	[Enlarge] key	Press to enlarge the screens that appear in the touch panel.
18	[Contrast] dial	Use to adjust the contrast of the touch panel.

3.2 Checking the Settings

The currently selected settings can be reviewed. In addition, the specified settings can be changed or stored for later use.

There are two screens that allow you to check the settings.

To check the settings

Press the [Mode Check] key in the control panel.

The first screen showing the current settings appears.

- 2 Touch [Next] to display the second screen of settings.
- 3 Touch [Exit] to return to the Basics screen.



Tip

To change a setting, touch the button for the function that you wish to change. The screen to change the setting for the selected function appears. In the screen that appeared, change the setting as desired.

To change the settings

Press the [Mode Check] key in the control panel.

The first screen showing the current settings appears.


- 2 Touch [Next] or [Back] until the screen containing the setting that you wish to change is displayed.
- 3 Touch the button for the setting that you wish to change.


The screen for specifying the setting appears.

Change the setting according to the corresponding procedure.



Mode Check

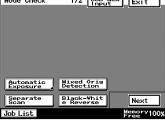

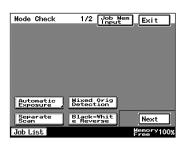

To store and delete copy programs

For details on storing settings as a copy program, refer to "Using Copy Programs" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

3.3 User Accessibility Operations

Various functions, such as the screen mode and the volume of alarms, can be specified, allowing the machine to be used more easily.

- Press the [Accessibility] key in the control panel.
- 2 Touch either [Set] or [Reset].
 - The user accessibility functions can be enabled or disabled.
 - When the user accessibility functions are enabled, the [Accessibility] key lights up in green. When the user accessibility functions are disabled, the [Accessibility] key is not lit.






To change the screen display setting ("Screen Mode" function)


Select whether the screens appear in the touch panel in black on white or in white on black.

- 1 Press the [Accessibility] key in the control panel.
- 2 Touch [Screen Mode].
- 3 Touch [Inverted Screen] to display the screens in white on black. To return the screens to the normal display, touch [Normal Screen].

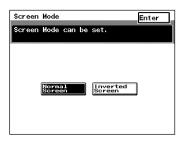


4 Touch [Enter].

Normal Screen

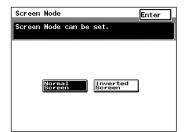


Inverted Screen

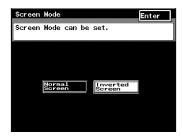


To change the key settings ("Key Speed Settings" function)

If the same key is held down, characters and number can be repeatedly entered.

- 1 Press the [Accessibility] key in the control panel.
- 2 Touch [Key Speed Settings].
- 3 Touch and to adjust the time periods.
 - Delay Time:
 Time until the repeat feature for a key begins after the key is held down
 - Interval Time:
 Length of time (in seconds)
 that a key must be held down before repeatedly entering characters and numbers

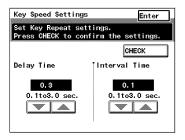

Example) When the [1] key is held down:

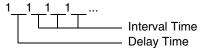



Tip

Touch [CHECK] to check the specified settings.


4 Touch [Enter].

To change the auto panel reset time ("Confirming Screen" function)

If no operation is performed for a specified length of time, the Basics screen is displayed and all modes and functions are reset to their default settings.

With the "Confirming Screen" function, the length of time until the machine is reset can be specified.

- 1 Press the [Accessibility] key in the control panel.
- 2 Touch [Confirming Screen].
- 3 Select the desired length of time for displaying the screen requesting confirmation to reset the machine.
 - O Touch [30 sec.], [60 sec.], [90 sec.] or [120 sec.].
 - To immediately display the Basics screen without displaying a screen requesting confirmation to reset the machine, touch [None].

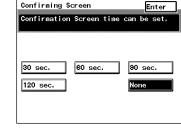


4 Touch [Enter].

To change the display time for the "The job is accepted." screen ("Notification Screen" function)

The length of time that the "The job is accepted." screen, which requests confirmation of a reception number or job ID after copying is finished, can be specified.

- 1 Press the [Accessibility] key in the control panel.
- 2 Touch [Notification Screen].
- 3 Select the desired time setting.
 - Touch [3 sec.], [10 sec.] or [60 sec.].
 - To leave the "The job is accepted." screen displayed until [Enter] is touched, touch [No Limit].
- 4 Touch [Enter].

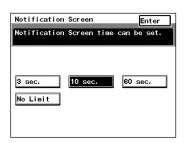

To change the volume of touch panel beeps and alarms ("Sound Setting" function)


The volumes of the beep that is sounded when a touch panel button is touched and of the alarm that is sounded when a malfunction occurs can be specified.


- 1 Press the [Accessibility] key in the control panel.
- 2 Touch [Sound Setting].
- 3 Select the desired volume setting.
- 4 Touch [Enter].



3.4 Enlarging the Touch Panel Screens

Press the [Enlarge] key to enlarge the screens that appear in the touch panel. Press the [Enlarge] key again to return the screens to the standard size. The usual touch panel operations can be performed even when the screens are enlarged.

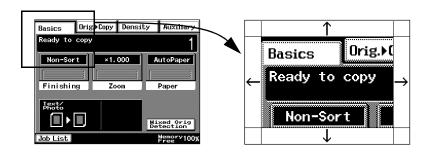


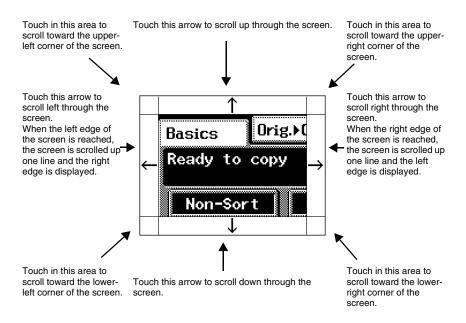


3.5 Turning the Machine On and Off

To turn on the machine

1 Set the power switch to "I".

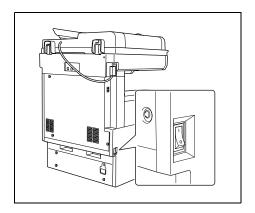

2 Make sure that the sub power switch has been pressed in.

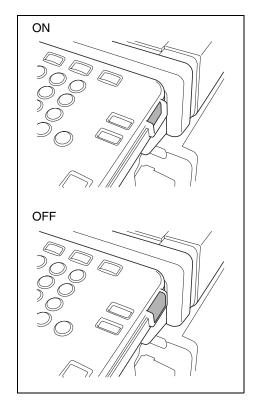

0

When the machine is turned on

→ A few seconds after the machine is turned on, the message "Now warming-up. Ready to scan," appears in the touch panel and the indicator on the [Start] lights up in green. When the indicator on the [Start] key lights up in green, a job can be queued.

If the power switch is set to "I" while the sub power switch is in the off position, the machine is turned on, but, after a few seconds, the touch panel goes off.

If no operation is performed for one minute, the machine enters Sleep mode.

To turn off the machine

- Touch [Activity List] to check that no jobs are queued.
- 2 If any printed pages remain in the paper output tray, remove them.
- 3 Press the sub power switch to turn off the machine.
- 4 Set the power switch to "O".



qiT

Normally, it is not necessary to set the power switch to "O".



Note

When turning the machine off, then on again, wait five seconds after turning it off before turning it on again. If no time passes between turning the machine off until turning on again, the machine may not operate correctly.

Do not turn off the machine while it is making copies or printing, otherwise a paper misfeed may occur.

Do not turn off the machine while it is scanning or sending or receiving data. otherwise all scanned data or transmission data will be deleted.

Do not turn off the machine while a queued job or stored data is waiting to be printed, otherwise the jobs will be deleted.

When the machine is turned off

- Settings that are not programmed, such as the number of copies, are cleared.
- Jobs that are queued to be printed are deleted.
- Data scanned using the "Scan to Memory" function is deleted.
- Scanned data that could be printed using the "Memory Recall" function is deleted.

Auto Panel Reset

When the auto panel reset operation is performed, all settings that are not programmed, such as the number of copies, are cleared and reset to their default settings automatically.

<Conditions for auto panel resetting>

- No machine operation is performed for one minute.
- The magnetic card is removed from the data controller or the key counter is removed.



Note

The settings specifying whether or not and the time until the auto panel reset operation is performed can be changed. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Energy Save Mode

In order to conserve energy, the machine will automatically enter a stand-by mode (Energy Save mode) if no operation is performed for a specified length of time. When the machine enters Energy Save mode, the indicator on the [Start] key remains lit in green, but the touch panel goes off.

<Conditions for entering Energy Save mode>

No machine operation is performed for 15 minutes.



Note

To recover from Energy Save mode, press any key in the control panel or touch the touch panel.

The settings specifying whether or not and the time until the machine enters Energy Save mode can be changed. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Chapter 3

Sleep Mode

In order to conserve energy, the machine's heater goes off and the machine automatically enters Sleep mode if no operation is performed for a specified length of time.

<Conditions for entering Sleep mode>

- The optional printer controller or network-related accessories are installed.
- No machine operation is performed for 1 minute.



Note

To recover from Sleep mode, press any key in the control panel or touch the touch panel.


The settings specifying whether or not and the time until the machine enters Sleep mode can be changed. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

3.6 Adjusting the Angle of the Control Panel

The control panel can be adjusted to any of three angles.

Adjust the control panel to the angle that allows for easy operation.

→ Pull the control panel release lever, and then adjust the angle of the control panel.

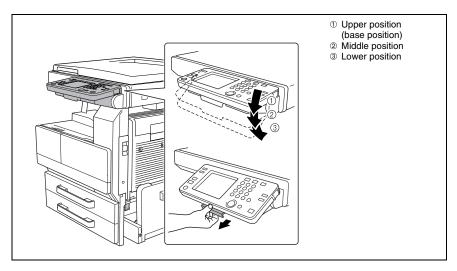

3.7 Using the Touch Panel

Description of the Touch Panel

When the power is turned on, a screen for operations such as copying, sending and receiving faxes, programming and making settings is displayed on the touch panel.

The screen shows, with messages and graphics, the currently selected settings, the settings that are available, and the machine status.



Tip

Depending on your applications, you can choose from an "Auto Screen", "Fax Screen", "Copy Screen", or "Scanner Screen" (optional) for the basic screen.

Default Settings

The settings selected when the machine is turned on are called the default settings. The default settings serve as a reference for all settings that are to be specified.

Copy mode

Number of copies: 1Finishing: Non-SortZoom: 1.000 (Full Size)

Paper: AutoPaperDensity: Text/Photo

Orig. ▶Copy: Single-Sided ▶Single-Sided


Fax mode

Resolution: StandardContrast: Medium

Transmission mode: Memory transmission
 Reception mode: Automatic reception
 Transmission source: Within document


< FAX and Copy Screen >

This screen allows you to fax and copy without worrying about switching between them.

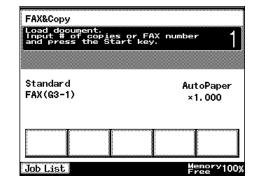

< Copy Screen >


This screen is for using copy functions.

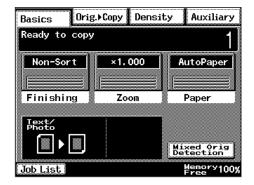

< Fax Screen >

This screen is for using fax functions.

You can choose from the "One-touch Dialing Screen", "Name Search Screen", "Dialing Screen" and "Index Screen" for the screen that is displayed first. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

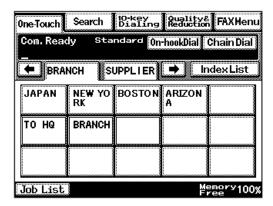

Operating the Touch Panel

To activate a function or to select a setting, lightly touch the desired function or setting shown on the touch panel.



CAUTION

Be careful not to damage the touch panel.

→ Never push down on the touch panel with force, and never use a hard or pointed object to make a selection in the touch panel.




Tip

The language of the displays in the touch panel can be changed using the "Language Selected for LCD" function on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

The default settings can be changed using the various functions on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Description of the Screens

Settings screen

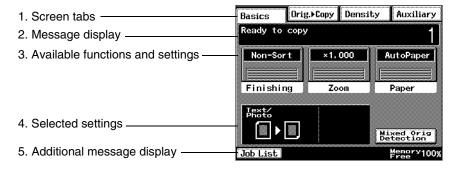

No.	Item Name	Description
1	Screen tabs	Each screen contains various functions that can be specified. Touch a tab to display the corresponding screen.
2	Message display	The current fax and machine status, operating instructions, warnings/precautions, and other data, including the number of copies, are displayed here.
3	Available functions and settings	Selecting a screen displays various functions that can be specified. Touch the button for a function to display the corresponding settings.
4	Selected settings	The current settings are shown with graphics.
5	Additional message display	The status of the job is shown with graphics. The remaining amount of memory and graphics warning about empty toner or an empty paper drawer are displayed here.

Job List Screen

The operating status of the machine and the printing order of queued jobs can be viewed from this screen.



There are five tabs in the Job List screen.

- Job:
 - Displays a list of operations that are being performed
- Print Order:

Displays the order of documents that are being copied or printed or waiting to be copied or printed

- Print:
 - Displays the print status of documents being copied or printed
- Com.:
 - Displays the results from sending and receiving faxes.
- Doc.:
 - Bulletin board documents, documents in the confidential box, and stored documents can be checked.

To check the status of a job

1 Touch [Job List].



2 Select the job whose status you wish to check.



Tip

The statuses of up to four jobs are displayed. To view the status of a job that is not displayed, touch $\lceil \uparrow \rceil$ or $\lceil \downarrow \rceil$.



- 3 Check the details, and then touch [Enter].
 - O To delete a job, touch [Delete].

To check the printing order

Touch [Job List].



Touch [Print Order].



- 3 Check the printing order.
 - Touch [↑] and [↓] to view other parts of the list.
- 4 After checking the necessary information, touch [Enter].



To check/delete listed items from the Print screen

1 Touch [Job List].



2 Touch [Print].



- 3 Select the job whose status you wish to check.
 - Touch [↑] and [↓] to view other parts of the list.
 - O To delete a job, touch [Delete].
- 4 After checking the necessary information, touch [Enter].



Memory Recall

After printing of a copy job is finished, the image that was just copied can be printed again without the document being loaded.



Note

The memory recall feature is only available if the "Memory Recall" function (a User's Choice function in the Utility mode) is set to "ON". For details, refer to "Utility Mode Operations" in the Advanced Operations volume of the User Manual.



Tip

The memory recall feature cannot be used if any of the following have occurred.

- A new document has been scanned. (The [Start] key has been pressed.)
- The machine has been turned off.
- The [Access] key or the [Interrupt] key has been pressed.
- The [Panel Reset] key was pressed while printing was stopped.

To use the memory recall feature

1 After copying is finished, touch [Job List].



2 Touch [Memory Recall Waiting].
The information for the job still saved in the memory is displayed.



3 Touch [Memory Recall]

O To delete the job still saved in the memory, touch [Delete].



Tip

At this time, the Finishing setting and the number of copies can be changed.



4 Press the [Start] key.

The copies are printed.



Tip

After copying confidential documents, press the [Panel Reset] key to erase the data from the memory.

To verify transmission activity

- 1 Touch [Job List].
- 2 Touch [Com.], then touch [TX Doc.].
 - This displays the transmission activity.




- 3 Verify the transmission activity.
 - Press the arrow keys to display the next result.
 - Touching [Interim Rep.] while it is displayed outputs a transmission interim activity report.
 - Documents awaiting transmission can only be deleted when [Delete] is displayed.
 - The mark is displayed when designated time transmission is set.
- 4 Touch [Enter] until the original screen is returned to.




To verify the documents saved on the bulletin board

- 1 Touch [Job List].
- 2 Touch [Doc.], then touch [Bultn. Board].

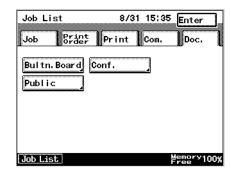


3 Select the documents to be verified.

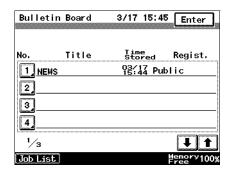

- 4 Verify the details of the documents.
 - Touch [Print] to print a document.
 - O Touch [Delete] to delete a document.
- 5 Touch [Enter] until the original screen is returned to.

To verify the documents stored in the private mailbox

- 1 Touch [Job List].
- 2 Touch [Doc.], then touch [Conf.].

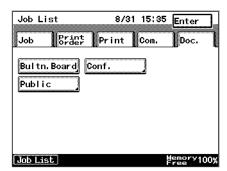


Select the private mailbox.



- 4 Verify the documents in the private mailbox.
 - Press the arrow keys to search for the desired document. Touching [Check] displays the detailed data.
 - Touch [Print] to print a document.
 - O Touch [Delete] to delete a document.
 - O To transmit, touch [Check], then touch [Forwarding].
- 5 Touch [Enter].

To check the general documents stored

- 1 Touch [Job List].
- 2 Touch [Doc.], then touch [Public].

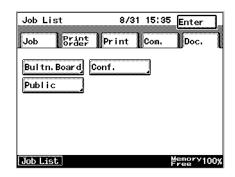

- 3 Verify the stored documents.
 - O Press the arrow keys to search for the desired document.
 - O Touch [Print] to print a document.
 - O Touch [Delete] to delete a document.
 - O To transmit, touch [Check], then touch [Forwarding].
- 4 Touch [Enter].


Basic Copy Operations

4


4.1 Copying from the Fax and Copy Screen

Copies can be made directly from the Auto Screen.

- 1 Position the document(s) to be copied.
 - O For details, refer to "6 Original Documents".

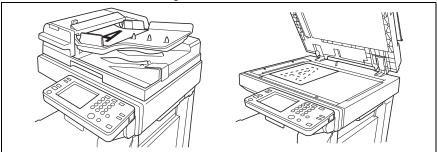

2 Use the keypad to enter the desired number of copies, and press the [Start] key.

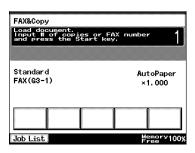



Tin


The Fax Screen is displayed when you input 0 or a number of three or more digits starting with a non-zero number.

On the Di3501f, the Fax Screen is displyed when you input 0 or number of four or more digits starting with a non-zero number.

4.2 Making Basic Copies

The procedure for making basic copies is described below.

- 1 Position the document(s) to be copied.
 - For details, refer to "6 Original Documents".

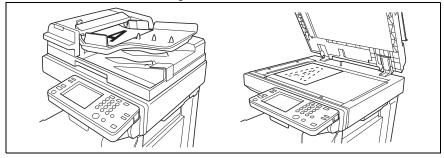

- 2 Press the [Copy] key.
 - The Basics screen appears in the touch panel.





- 3 Specify any necessary copy settings.
 - To change the paper size (paper drawer), touch [Paper].
 For details, refer to "Selecting the Paper Setting" (page 5-22).
 - To change the zoom ratio, touch [Zoom].
 For details, refer to "Specifying a Zoom Setting" (page 7-14).
 - To sort, staple or punch holes in the copies, touch [Finishing].
 For details, refer to "Specifying Finishing Settings" (page 7-2).
 - To copy a book or copy while using less paper, touch [Orig. ▶ Copy].
 For details, refer to "Selecting the Orig. ▶ Copy Settings" (page 7-19).
 - To change the density of the copy, touch [Density].
 For details, refer to "Selecting a Copy Density" (page 7-32).

- To erase a margin in the copy, to insert interleave while copying onto overhead projector transparencies, or to perform any other special operation, touch [Auxiliary].
 For details, refer to "Auxiliary Functions" in the Advanced Operations volume of the User Manual.
- 4 Use the keypad to enter the desired number of copies.
 - On the Di3510f, up to 999 copies can be printed. On the Di3010f, Di2510f or Di2010f up to 99 copies can be printed.
 - To change the setting, press the [C] (clear) key, and then enter the correct setting.

	2	3	
4	5	6	
7	8	9	
*	0	#	(C)




Tip

A limit on the number of copies can be specified from the Administrator Management screen of the Utility mode.

For details, refer to "Administrator Management Operations" in the Advanced Operations volume of the User Manual.

5 Press the [Start] key.

The copies are printed.

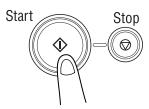


4.3 Stopping Copying

Follow the procedure described below to cancel a copy job.

To stop/restart/delete a copy job


1 Press the [Stop] key while the job is being printed.

Copying stops.

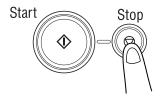


- 2 The message "Copy cycle temporarily suspended." appears.
- 3 To continue copying, press the [Start] key.

Copying continues.

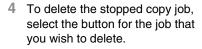

The job is deleted.

5 Touch [Exit].

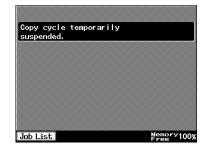





4.4 Interrupting a Copy Job

The current copy job can be paused so that a copy of a different document can be made.

This is convenient if you wish to quickly make copies of a short document while a large job is being printed.



Note

If certain functions are specified, it may not be possible to interrupt the copy job. In addition, some functions are not available while a copy job is interrupted. For details, refer to the "Function Combination Table" of "Appendix" in the Advanced Operations volume of the User Manual.

To interrupt copying

- 1 Press the [Interrupt] key while a job is being printed.
 - The indicator on the [Interrupt] key lights up.
 - O The message "Now in the interrupt mode." appears.
 - The copy settings return to their defaults.
 (The copy settings of the job before the interruption and the remaining number of copies are recorded.)
 - If no operation is performed for one minute after the [Interrupt] key is pressed, the Interrupt mode is automatically cancelled.
- 2 Position the document(s) to be copied.
- 3 Select the desired copy settings.
- 4 Press the [Start] key.
 - Scanning of the document begins.
- 5 Press the [Interrupt] key.

The indicator on the [Interrupt] key goes off and the Interrupt mode is cancelled. The copy settings for the job before copying was interrupted appear, and copying of the job that was interrupted automatically continues.

4.5 Making Copies Using Accounts

Using the "Copy Track Mode" Parameter

The number of copies allowed for each registered account can be restricted.

The accounts can be managed by touching [Account management] on the Admin. 1 screen (displayed by touching [Admin. Management] on the Utility screen). The Administrator Management settings should be specified by the administrator.




Note

The Administrator Management parameters cannot be set by anyone without knowledge of the administrator access code.

For details on the administrator access code, contact your service representative.

To make copies when accounts are specified

1 If accounts have been specified, the screen shown at the right appears, allowing you to select an account.

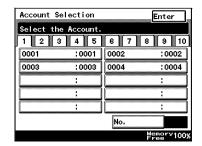

- 2 Touch the button for your account.
- 3 Using the keypad, enter the 6-digit access code assigned to your account.



- 4 Press the [Access] key.
 The Basics screen appears.
- 5 Make copies using the desired copy settings.
- 6 When you are finished making copies, press the [Access] key. The access code input screen appears again.





Copy Paper

5.1 Paper Specifications

Use paper that meets the following specifications.

Paper Types

Paper Type Weight (lbs.)	Plain Paper	Special Media	Recycled Paper
Paper Source, Etc.	15 lbs. to 24 lbs.	24-1/4 lbs. to 55-3/4 lbs.	16 lbs. to 24 lbs.
Manual bypass tray	0	0	0
1st paper drawer	0	_	0
2nd paper drawer	0	_	0
3rd paper drawer (LCC*)	0	_	0
3rd paper drawer	0	_	0
4th paper drawer	0	_	0
Double-sided copies	0	_	0

Paper Type Paper Source, Etc.	Postcards	Overhead Projector Transparenci es	Label Sheets	Envelopes
Manual bypass tray	0	0	0	0
1st paper drawer	_	_	_	_
2nd paper drawer	_	_	_	_
3rd paper drawer (LCC*)	_	_	_	_
3rd paper drawer	_	_	_	_
4th paper drawer	_	_	_	_
Double-sided copies	_	_	_	_

^{*} LCC: Large-capacity cabinet

O: Available

—: Not available

Paper Sizes

Non-standard-sized paper

Paper Source	Paper Width	Paper Length
Manual bypass tray	3-1/2 in. to 11-3/4 in.	5-1/2 in. to 17 in.
1st paper drawer	_	_
2nd paper drawer	_	_
3rd paper drawer (LCC*)	_	_
3rd paper drawer	_	_
4th paper drawer	_	_

^{*} LCC: Large-capacity cabinet

-: Not available

Standard-sized paper

Paper Size Paper Source, Etc.	Ledger L (11 in. X 17 in. L)	11×14 L	Legal L	Letter C	Letter L	8 × 10- 1/2 L	Invoice C (5-1/2 in. × 8- 1/2 in. C)	Invoice L (5-1/2 in. X 8- 1/2 in. L)
Manual bypass tray	0	0	0	0	0	0	0	0
1st paper drawer	0	0	0	0	0	0	_	0
2nd paper drawer	0	0	0	0	0	0	_	0
3rd paper drawer (LCC*)	_	_	_	0	_	_	_	_
3rd paper drawer	0	0	0	0	0	0	_	0
4th paper drawer	0	0	0	0	0	0	_	0
Double-sided copies	0	0	0	0	0	0	_	0

Paper Size Paper Source, Etc.	10×8 C	10×8L	Executi ve C	Executi ve L	Envelo pes
Manual bypass tray	0	0	0	0	0
1st paper drawer	_	_		_	_
2nd paper drawer	_	_	_	_	_
3rd paper drawer (LCC*)	_	_	_	_	_
3rd paper drawer	_	_	_	_	_
4th paper drawer	_	_	_	_	_
Double-sided copies	_	_	_	_	_

^{*} LCC: Large-capacity cabinet

O: Available

—: Not available

Paper Capacity

Paper Type Weight (lbs.)	Plain Paper	Special Media	Recycled Paper
Paper Source, Etc.	15 lbs. to 24 lbs.	24-1/4 lbs. to 55-3/4 lbs.	16 lbs. to 24 lbs.
Manual bypass tray	150 sheets	100 sheets	150 sheets
1st paper drawer	500 sheets	1	500 sheets
2nd paper drawer	500 sheets	1	500 sheets
3rd paper drawer (LCC*)	2,500 sheets	_	2,500 sheets
3rd paper drawer	500 sheets		500 sheets
4th paper drawer	500 sheets	_	500 sheets

Paper Type	Special Media					
Paper Source, Etc.	Special Media	Postcards	Label Sheets	Envelopes		
Manual bypass tray	50 sheets	50 sheets	50 sheets	10 sheets		
1st paper drawer	_	_	_			
2nd paper drawer	_	_	_	_		
3rd paper drawer (LCC*)	_	_	_	_		
3rd paper drawer	_	_	_	_		
4th paper drawer	_	_	_	_		

- * LCC: Large-capacity cabinet
- -: Not available



Note

The 3rd paper drawer (large-capacity cabinet), the 3rd paper drawer and the 4th paper drawer are optional.

If the duplex unit is used to make double-sided copies, only plain paper can be used.

If the optional finisher is used to sort/group, punch holes and staple, only plain paper can be used.

The paper size setting for the 3rd paper drawer (large-capacity cabinet) can be changed in order to load A4-size paper. Contact your service representative to change the paper size setting.

5.2 Unsuitable Paper

The following types of paper should not be used, otherwise decreased print quality, paper misfeeds or damage to the machine may occur.


- Overhead projector transparencies that have already been fed through the machine
 - Even if the transparency is still blank, do not reuse it.
- Paper that has been printed on by a heat-transfer printer or an inkjet printer
- Paper that is either extremely thick or extremely thin
- Folded, curled, wrinkled, or torn paper
- Paper that has been left unwrapped for a long period of time
- Damp paper
- Perforated paper or paper with punched holes
- Extremely smooth or extremely rough paper, or paper with an uneven surface
- Paper that has been treated, such as carbon-backed, heat-sensitive or pressure-sensitive paper
- Paper that has been decorated with foil or embossing
- Paper of various sizes
- Paper of a non-standard shape (not rectangular)
- Paper that is bound with glue, staples or paper clips
- Paper with labels attached
- Paper with ribbons, hooks, buttons, etc. attached
- Curled or wrinkled paper
- Art paper, coated paper or inkjet printer paper

5.3 Print Area

Any part of the image within the area indicated below is not copied.

- A margin 0.16 ± 0.08 in. (4 ± 2 mm) (at full size) from the leading edge of the paper (A)
- A margin 0.16 ± 0.08 in. (4 ± 2 mm) (at full size) from the trailing edge of the paper (B)
- A margin 0.16 ± 0.08 in. $(4 \pm 2 \text{ mm})$ (at full size) on both sides of the paper (C)

For details on using the machine to print from a computer when the printer controller is installed, refer to User Manual for the printer controller.

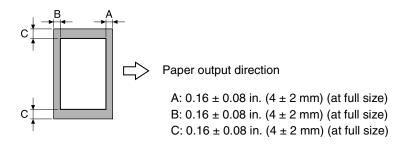

5.4 Paper Storage

Observe the following precautions when storing the paper.

- Store the paper in a location that meets the following requirements.
 - O Not exposed to direct sunlight
 - Not exposed to a flame
 - Not exposed to high humidity
 - Not extremely dusty
- Unwrapped paper should be placed in a plastic bag and stored in a cool, dark location.
- Keep paper out of the reach of children.

5.5 Automatically Selecting the Paper Source

If the selected paper drawer runs out of paper while a copy job is being printed and a different paper drawer is loaded with paper meeting the following conditions, the other paper drawer is automatically selected so printing can continue.

If the optional large-capacity cabinet (LCC) is installed, a maximum of 3,750 pages can be printed or 3,750 copies made continuously. (With Letter C paper)

This feature is convenient when printing a large number of pages or making a large number of copies continuously.

Operating conditions

- The paper is the same size.
- The paper is the same type.
- The paper is positioned in the same orientation.

When printing a large number of pages or making a large number of copies continuously, load all paper drawers with paper satisfying the conditions listed above.

Order for Selecting Another Paper Drawer


When a different paper drawer is automatically selected, the next paper drawer in the following list is chosen.

1st paper drawer \rightarrow 2nd paper drawer \rightarrow 3rd paper drawer \rightarrow 4th paper drawer


5.6 Loading Paper

While loading paper, be sure to observe the following precautions.


If the paper is curled, flatten it before loading it.

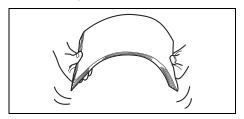


 Do not load so much paper that the top of the stack is higher than the ▼ mark or exceeds the specified number of sheets.

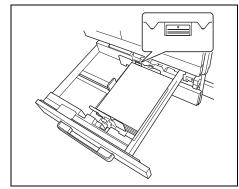

 Make sure that the paper guides are pushed up against the edges of the paper.

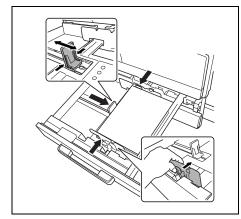

When loading additional paper, remove any paper remaining in the drawer, place it on top of the new paper, and then align the paper in the stack well before loading it into the drawer.

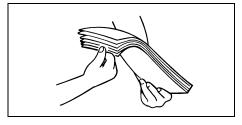



Tip

We recommend replenishing the paper only after all of the paper in the drawer has been used.

Loading Paper Into the 1st/2nd/3rd/4th Paper Drawer


Load paper into the 1st or 2nd paper drawer, the optional paper feed unit or the paper feed cabinet as described below.

- 1 Pull out the paper drawer to be loaded with the paper.
- 2 Slide the paper guides to fit the size of the paper to be loaded.



Note

Make sure that the paper guides fit firmly in their slots.

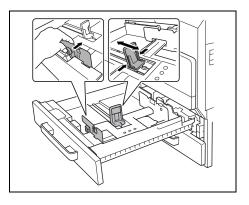


Sopy Paper

3 Load the paper into the drawer so that the front side of the paper (the side facing up when the package was unwrapped) faces up.




Note

Be careful not to touch the mylar.

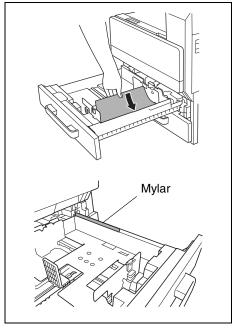


- 4 Re-adjust the paper guides to fit the size of the paper.
- 5 Close the paper drawer.

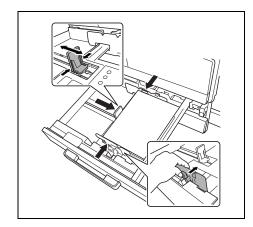

Loading Paper Into the Large-Capacity Cabinet

Load paper into the large-capacity cabinet as described below.

1 Press the drawer release button.

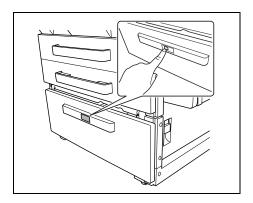


2 Load the paper into the right side of the drawer so that the front side of the paper (the side facing up when the package was unwrapped) faces up.



Note

Be careful not to touch the mylar.

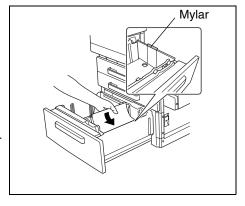


3 Load the paper into the left side of the drawer so that the front side of the paper (the side facing up when the package was unwrapped) faces up.



Пр

Load paper into the right side of the drawer first.

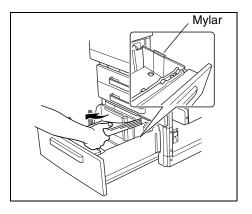


Loading Paper Into the Multiple Bypass Tay

Use the multiple bypass tray when printing on plain paper, postcards, envelopes, overhead projector transparencies and label sheets.

To load plain paper

Open the multiple bypass tray.
 When loading large-sized paper, open the tray extension.

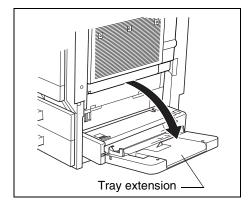


Adjust the paper guides to fit the size of the paper, and then insert the paper as much as possible into the feed slot.



Note

Do not load so much paper that the top of the stack is higher than the ▼mark.

Make sure that the paper guides are pushed up against the edges of the paper.

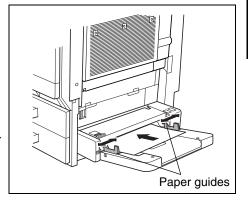

To load postcards


→ When loading postcards, load them with the shorter side as the leading edge, as shown in the illustration, and with the side to be printed on facing down.



Note

Do not load more than 50 post-cards.

Do not load postcards crosswise.

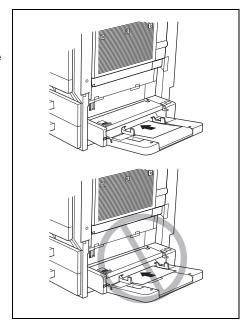

To load envelopes


When loading envelopes, load them with the flap facing up, as shown in the illustration.



Note

Before loading envelopes, press them down to make sure that all air is removed, and make sure that the folds of the flaps are firmly pressed, otherwise the envelopes may become wrinkled or a paper misfeed may occur.


Do not load more than 10 envelopes.

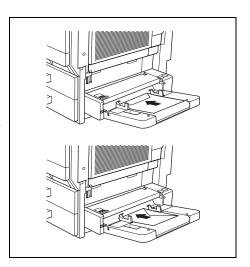



Note

Do not load envelopes crosswise.

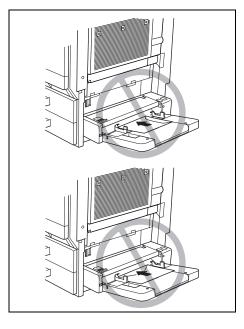


To load overhead projector transparencies

→ When loading overhead projector transparencies, load them in the same orientation as the document.



Note

Do not load more than 50 transparencies.

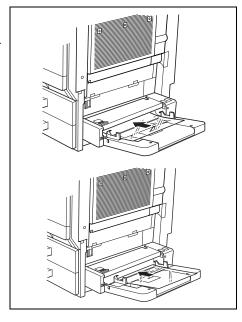


To load label sheets

When loading label sheets, load them in the same orientation as the document.



Note

Do not load more than 50 label sheets.

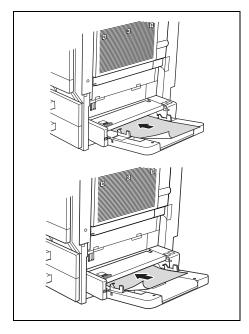

To set a non-standard (custom) paper size

If non-standard-sized paper is loaded, it will be necessary to enter the paper size.

Two non-standard paper sizes can be stored for easy selection. For details, refer to the next section.

- 1 Touch [Paper].
- 2 Touch the button for the multiple bypass tray, and then touch [Mode Change].



3 Touch [Custom Size].
The Custom Size screen appears.



Orig.)Copy Density

×1.000

Input the custom paper size using the keys below.

Basics

Job List

Non-Sort

Custom Size


Auxiliary

□ Letter □

Enter

Cancel

- 4 Touch X Then, touch and to select the length of side X for the paper that is loaded.
 - Touch so that the cursor moves below the digit that you wish to change.

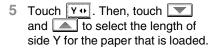

 Touch Y · until the cursor moves below the digit that you wish to change.



6 Touch [Enter].

To store a non-standard (custom) paper size

Two non-standard paper sizes can be stored. Storing paper sizes that are used often enables the paper size to be selected quickly.

 Touch the button for the multiple bypass tray, and then touch [Mode Change].



2 Touch [Custom Size].
The Custom Size screen appears.



Touch [Memorize Paper Size].




Auxiliary

Enter

□ Letter □

1 🛨

- 4 Touch X Then, touch and to select the length of side X for the paper that is loaded.
 - Touch with until the cursor moves below the digit that you wish to change.
- 5 Touch Y ⋅ . Then, touch ▼ and ▲ to select the length of side Y for the paper that is loaded.
 - Touch Y · until the cursor moves below the digit that you wish to change.

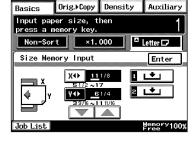

Orig.≯Copy Density

×1.000

Input paper size, then

press a memory key.

Size Memory Input

Non-Sort

Basics

- 6 Touch [1] or [2].
 - If a paper size has already been stored at the selected button, the previously assigned paper size is deleted and the new paper size is stored.
 - To store another custom paper size, repeat steps 4 and 5.



7 Touch [Enter].

This completes the storing of custom paper sizes.

To select a stored non-standard (custom) paper size

Copies can be made using the stored custom paper size.

- Position the document(s) to be copied.
- 2 Touch [Paper].
- 3 Touch the button for the multiple bypass tray, and then touch [Mode Change].



4 Touch [Custom Size].



Touch either [1] or [2] to select the stored custom paper size, and then touch [Enter].



6 Press the [Start] key.
The copies are printed.



5.7 Selecting the Paper Setting

The paper loaded into a paper drawer or the multiple bypass tray can be selected for making copies.

To select paper loaded into a paper drawer

- Position the document(s) to be copied.
- 2 Touch [Paper].
- 3 Touch the button for the paper drawer loaded with the desired size of paper, and then press the [Start] kev.


The copies are printed.



To select paper loaded into the multiple bypass tray

- Position the document(s) to be copied.
- 2 Touch [Paper].
- Touch the button for the multiple bypass tray, and then touch [Mode Change].
- 4 Touch the button for the type of paper loaded into the multiple bypass tray, and then touch [Enter].
- 5 Press the [Start] key.
 The copies are printed.



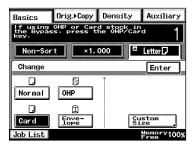

Original Documents


6.1 Feeding the Document


Using the Duplexing Document Feeder


The duplexing document feeder automatically feeds in, scans, then feeds out each page of a multi-page document, one page at a time. The correct type of document must be loaded in order for the duplexing document feeder to function properly.

If the wrong type of document is loaded, a paper misfeed or damage to the document may occur.

Document Types

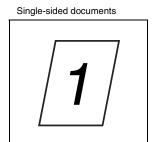

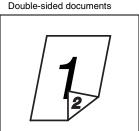

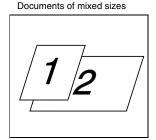

Documents of Uniform Sizes

	Single-Sided Documents	Double-Sided Documents
Paper Type	Plain Paper (9-1/4 lbs. to 34 lbs.)	Plain Paper (13-1/4 lbs. to 34 lbs.)
Document Size		L, Letter C, Invoice L (5-1/ e C (5-1/2 in. × 8-1/2 in. C)

"Mixed Orig Detection" Function

	Single-Sided Documents	Double-Sided Documents		
Paper Type	Plain Paper (13-1/4 lbs. to 34 lbs.)			
Document Size	Refer to "Mixed Width Document Sizes".			

Mixed Width Document Sizes


Maximui	m Document Width	11	in.	8-1/2 in.		5-1/2 in.	
Mixed Width Detection	n Document	11 × 17 L	Letter C	Legal L	Letter L	8-1/2 × 5-1/2 C	8-1/2 × 5-1/2 L
11 in.	11 × 17 L	0	0	_	_	_	_
	Letter C	0	0	_	_	_	_
8-1/2 in.	Legal L	0	0	0	0	0	_
	Letter L	0	0	0	0	0	_
	8-1/2 × 5-1/2 C	_	_	0	0	0	_
5-1/2 in.	8-1/2 × 5-1/2 L	_	_	_	_	_	0

O: Copying possible

—: Copying not possible

Sizes of Documents That Can Be Faxed


If the automatic document feeder is used, documents with the A3L- to A5-size can be faxed. With non-standard-sized documents, documents with the following maximum and minimum sizes can be scanned.

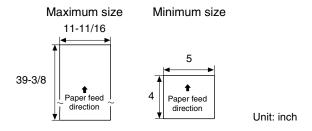



Note

An area of 10 mm on all sides of the document cannot be scanned. When positioned on the original glass, any document with the A3T-size or smaller can be faxed.

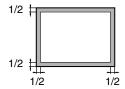

Unit: inch

Precautions Concerning the Documents

The following types of documents should not be loaded into the duplexing document feeder, otherwise paper misfeeds or damage to the document may occur. Instead, these types of documents should be positioned on the original glass.

Documents on special paper

- Folded documents (folded in half or fanned)
- Highly translucent or transparent documents, such as diazo photosensitive paper
- Documents with binder holes
- Documents with many binder holes, such as loose-leaf paper
- Coated documents, such as heat-sensitive or carbon-backed paper
- Inkjet printer paper
- Documents that have just been printed with this machine

Documents on paper that cannot be fed

- Curled documents
- Wrinkled or torn documents.
- Overhead transparencies


If non-standard-sized paper is determined to be close to a standard size, copying with the "Auto Paper" or "Auto Size" settings is possible.

Original Documents Chapter 6

6.2 Feeding the Document Through the Duplexing Document Feeder

Loading the Document

 Slide the adjustable document guides to fit the size of the document.

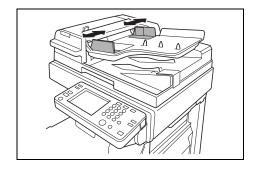


2 Load the documents to be faxed or copied face up.



Note

A document consisting of up to 80 pages can be loaded. Do not load so many pages that the top of the stack is higher than the \blacktriangledown mark.

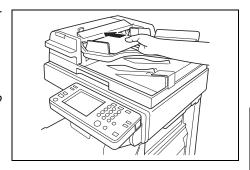


3 Adjust the document guides to the size of the document.



Note

Be sure to load the document correctly, otherwise the pages may not be fed in straight.

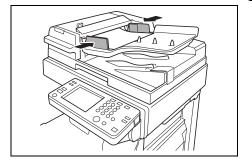


4 Make the various settings for faxing or copying.


5 < Copying > Touch [Original Direction], and then select the setting appropriate for your document.



Note

If the orientation of the document is different from that of the selected Original Direction setting, certain copy operations, such as 2in1 or 4in1 copying, will not be printed correctly.

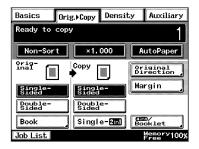

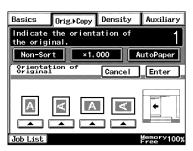


6 Press the [Start] key.

The pages of the document are fed in, starting with the topmost page.


To load a document of mixed sizes ("Mixed Orig Detection" function)

With mixed width document detection, documents of various standard-sized pages can be scanned and copied as a set using the duplexing document feeder.


Stack the pages of the document face up as shown, making sure that all pages are aligned at the top edge and on the left side.

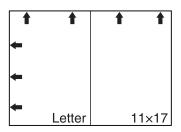

2 Slide the adjustable document guides to fit the size of the largest page.

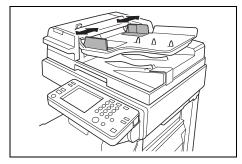

- 3 Load the document so that all pages are aligned along the document guide toward the rear of the machine.
- 4 Adjust the document guides to the size of the document.
 - Be sure to load the document correctly, otherwise the pages may not be fed in straight.

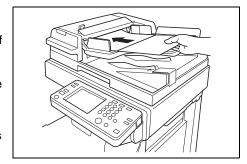



Note

Certain document size combinations are not possible with the "Mixed Orig Detection" function. For details, refer to page 6-3.


- 5 In the Basics screen, touch [Mixed Orig Detection].
- 6 Select the desired copy settings, and then press the [Start] key.



6.3 Positioning Documents on the Original Glass

The procedure for positioning the document differs depending on the type of document being copied, therefore be sure the document is positioned correctly. For information on using the duplexing document feeder, refer to "Feeding the Document Through the Duplexing Document Feeder" (page 6-5).


When placing the document directly on the original glass, position it with the orientation shown below. Lift open the original cover, or the duplexing document feeder if it is installed, 15° or more.

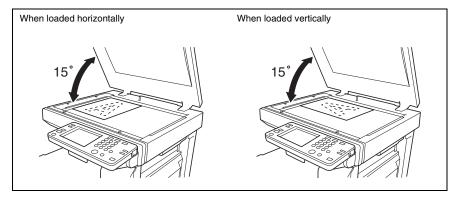


To position sheet documents

Follow the procedure described below when copying plain paper or documents that cannot be fed through the duplexing document feeder.

1 Lift open the original cover, or the duplexing document feeder if it is installed, and then position the document face down on the original glass.

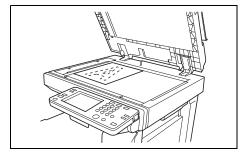

2 Position the document so that it aligns with the arrow in the upperleft corner of the document scales.

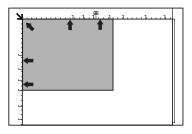


3 Carefully close the original cover, or the duplexing document feeder if it is installed.


To position transparent or translucent documents

Follow the procedure described below when copying documents, such as overhead transparencies, tracing paper or diazo photosensitive paper.

- Lift open the original cover, or the duplexing document feeder if it is installed, and then position the document face down on the original glass.
- Position the document so that it aligns with the arrow in the upperleft corner of the document scales.

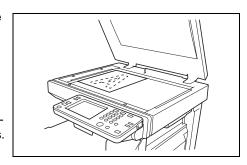


- 3 Place a blank sheet of paper of the same size over the document.
- 4 Carefully close the original cover, or the duplexing document feeder if it is installed.

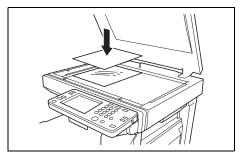

To position books or magazines

Follow the procedure described below when copying bound documents, such as books and magazines.

- Lift open the original cover, or the duplexing document feeder if it is installed.
- Position the document face down on the original glass, with the top of the book toward the rear of the machine and with the center of the book aligned with the book mark in the document scale.

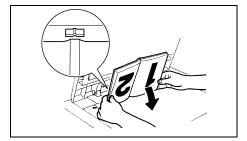

3 Carefully close the original cover, or the duplexing document feeder if it is installed.



Note

For thick documents, make the copy without closing the original cover or duplexing document feeder.

While the document is being scanned with the original cover or duplexing document feeder open, do not look directly at the bright light that may shine through the original glass.

If the document is not positioned correctly, the copies will not be printed in the correct sequence.

Lift open the original cover, or the duplexing document feeder if it is installed, 15° or more, otherwise the document size will not be detected and the correct paper size or zoom ratio cannot be selected.


Do not place objects exceeding 6-1/2 lbs. on the original glass.

If a book is placed on the original glass, do not press it down with extreme force, otherwise the original glass may be damaged.

6.4 Loading Documents for Specific Applications

The most appropriate document feed method and copy settings for specific applications are described below.

For details on specifying the various copy settings, refer to "7 Specifying Copy Settings".

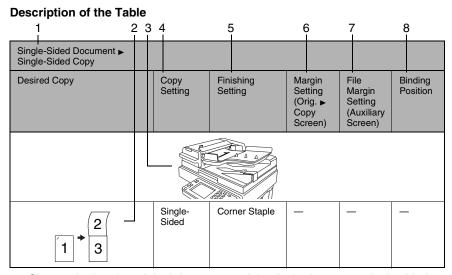

- Shows whether the original document and the desired copy are single-sided or double-sided
- 2. Shows how the copy will appear
- 3. Shows how the document should be positioned (page 6-5)
- Shows the selected Copy setting (Single-Sided, Double-Sided, 2in1 or 4in1) on the Orig. ► Copy screen (page 7-19)
- 5. Shows the selected Finishing setting (Corner Staple, 2-Point Staple or Hole Punch) (page 7-2)
- 6. Shows the selected Margin setting from the Orig. ▶ Copy screen if a margin is specified for the document (page 7-24)
- 7. Shows the selected File Margin setting from the Auxiliary screen if a binding margin is specified for the copy (Advanced Operations volume)
- 8. Shows the stapling or hole-punching position that must be selected (page 7-7 and page 7-9)
- * A dash (—) indicates that no setting should be selected.

pter 6

Single-Sided Documents

Single-Sided Document ▶ Single-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
		A A				
1 2	Single- Sided	Corner Staple	_	_	_	
1 2	Single- Sided	Corner Staple	_	_	_	
1 2	Single- Sided	Hole Punch 2-Point Staple	_	_	_	
1 2	Single- Sided	Hole Punch 2-Point Staple	_	_	Å	
1 2	Single- Sided	Corner Staple	_	_	_	
1 + 2	Single- Sided	Corner Staple	_	_	_	
÷ 1 • 2	Single- Sided	Hole Punch 2-Point Staple	_	_	: 4	
<u>°-°-°</u> → 2	Single- Sided	Hole Punch 2-Point Staple	_	_	_	

Single-Sided Document ▶ Single-Sided Copy							
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position		
12 34	Single- 2in1	Corner Staple	_	_	_		
12 34	Single- 2in1	Corner Staple	_	_	_		
§12 → 34	Single- 2in1	Hole Punch 2-Point Staple	_	_	: 🛦		
[°- ° -°] → 3 4	Single- 2in1	Hole Punch 2-Point Staple	_	_	_		
1 3 4	Single- 2in1	Corner Staple	_	_	_		
1 3 4	Single- 2in1	Corner Staple	_	_	_		
(° 1	Single- 2in1	Hole Punch 2-Point Staple	_	_	_		
3 2	Single- 2in1	Hole Punch 2-Point Staple	_	_	Ä		

Single-Sided Document ► Single-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
		A A A A A A A A A A A A A A A A A A A				
1 2 5 6 7 8	Single- 4in1	Corner Staple	_	_	l	
1 2 5 6 3 4 7 8	Single- 4in1	Corner Staple	_	_	-	
1 3 2 4	Single- 4in1	Hole Punch 2-Point Staple	_	_	_	
1 2 5 6 7 8	Single- 4in1	Hole Punch 2-Point Staple	_	_	- 4	
5 6 3 4	Single- 4in1	Corner Staple	_	_	_	
1 2 5 6 7 8	Single- 4in1	Corner Staple	_	_	_	
\$ 1 2 ↑ 3 4 5 6 7 8	Single- 4in1	Hole Punch 2-Point Staple		_	:A	
5 6 3 4 5 6 7 8	Single- 4in1	Hole Punch 2-Point Staple	_	_	_	

Circle Cided Descriptors Devide Cided Conv.								
Single-Sided Document ▶ Double Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position			
	Screen) Screen)							
1 2 3	Double- Sided	Corner Staple	_	_	_			
1 + 2	Double- Sided	Corner Staple	_	Å	_			
1 2 3	Double- Sided	Hole Punch 2-Point Staple	_	_	_			
1 3	Double- Sided	Hole Punch 2-Point Staple	_	_	Ā			
1 2 3	Double- Sided	Corner Staple	_	Á	_			
1 + 2 3	Double- Sided	Corner Staple	_	_	_			
÷1 ÷ 2 3	Double- Sided	Hole Punch 2-Point Staple	_	_	:A			
°- i - ° 3	Double- Sided	Hole Punch 2-Point Staple	_	_	_			

\circ
uments
ె
ā
č
⊑
Ö
\simeq
\Box
_
מ
Ĕ
D
.≝′
$\overline{}$
\cup

Single-Sided Document ▶ Double-Sided Copy								
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position			
		1 A A						
12 34 56	Double- 2in1	Corner Staple	_	à	_			
1 2 3 4 5 6	Double- 2in1	Corner Staple	_	_	_			
§12 → 34 56	Double- 2in1	Hole Punch 2-Point Staple	_	_	: 🖈			
⁰⁻⁰⁻⁰ → 3 4 (5 6)	Double- 2in1	Hole Punch 2-Point Staple	_	_	_			
1 3 5 4 6	Double- 2in1	Corner Staple	_	_	_			
1 3 4 5 6	Double- 2in1	Corner Staple	_	A	_			
[↑] 1 → 3 5 4 6	Double- 2in1	Hole Punch 2-Point Staple	_	_	_			
*1 * 3 4 5 6	Double- 2in1	Hole Punch 2-Point Staple	_	_	Ā			

Single-Sided Document ▶ Double							
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position		
		1 A A					
1 2 3 4 5 6 9 10 7 8 11 12	Double- 4in1	Corner Staple	_	_	_		
1 2 3 4 5 6 7 8 9 10 11 12	Double- 4in1	Corner Staple	_	A	_		
\$\big ^1 2 \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \	Double- 4in1	Hole Punch 2-Point Staple	_	_	1		
5 6 7 8 9 10 11 12	Double- 4in1	Hole Punch 2-Point Staple	_	_	Â		
1 2 3 4 5 6 9 10 7 8 11 12	Double- 4in1	Corner Staple	_	A	_		
1 2 3 4 5 6 7 8 9 10 11 12	Double- 4in1	Corner Staple	_	_	_		
\$\begin{array}{c c c c c c c c c c c c c c c c c c c	Double- 4in1	Hole Punch 2-Point Staple	_	_	: 4		
$\begin{bmatrix} \overset{\circ}{1} & \overset{\circ}{2} \\ 1 & 2 \end{bmatrix} \begin{bmatrix} 5 & 6 \\ 7 & 8 \\ 9 & 10 \\ 11 & 12 \end{bmatrix}$	Double- 4in1	Hole Punch 2-Point Staple	_	_	_		

ter 6

Left-Bound Double-Sided Documents

Left-Bound Double-Sided Document ▶Single-Sided Copy								
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position			
1 2	Single- Sided	Corner Staple	_	_	_			
1 2	Single- Sided	Corner Staple	_	_	_			
§1 + 2	Single- Sided	Hole Punch 2-Point Staple	_	_	_			
1 2	Single- Sided	Hole Punch 2-Point Staple	_	_				
1 2	Single- Sided	Corner Staple	A	_	_			
1 - 2	Single- Sided	Corner Staple	Á	_	_			
1 2	Single- Sided	Hole Punch 2-Point Staple	A		_			
<u>°-°-°</u> → 2	Single- Sided	Hole Punch 2-Point Staple	À	_	A			

Left-Bound Double-Sided Document ▶ Single-Sided Copy							
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position		
12 34	Single- 2in1	Corner Staple	_	_	ı		
12 34	Single- 2in1	Corner Staple	_	_	_		
§12 → 34	Single- 2in1	Hole Punch 2-Point Staple	_	_	: ^		
[°- ° -°] → 3 4	Single- 2in1	Hole Punch 2-Point Staple	_	_	_		
1 3 4	Single- 2in1	Corner Staple	A	_	_		
1 3 4	Single- 2in1	Corner Staple	À	_	_		
°1 → 3 ½2 4	Single- 2in1	Hole Punch 2-Point Staple	A	_	_		
**************************************	Single- 2in1	Hole Punch 2-Point Staple	À	_	Ā		

	Chapt	
	S	
	cument	
2	5 2 2	
-	rigina	
(C	

Left-Bound Double-Sided Document ▶Single-Sided Copy							
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position		
1 2 5 6 7 8	Single- 4in1	Corner Staple	_	_	_		
1 2 5 6 7 8	Single- 4in1	Corner Staple	_	_	_		
1 2	Single- 4in1	Hole Punch 2-Point Staple	_	_	_		
1 2 3 4 5 6 7 8	Single- 4in1	Hole Punch 2-Point Staple	_	_	Ā		
1 2 5 6 7 8	Single- 4in1	Corner Staple	á	_	_		
1 2 3 4 5 6 7 8	Single- 4in1	Corner Staple	À	_	_		
[1 2	Single- 4in1	Hole Punch 2-Point Staple	A		_		
0 1 2 0 5 6 7 8 5 6 7	Single- 4in1	Hole Punch 2-Point Staple	á	_	Ä		

Left-Bound Double-Sided Document ▶ Double-Sided Copy								
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position			
1 2 3	Double- Sided	Corner Staple	_	ı	_			
1 + 2	Double- Sided	Corner Staple	_	A	_			
· 1 • 2 3	Double- Sided	Hole Punch 2-Point Staple	_	ı	_			
1 3	Double- Sided	Hole Punch 2-Point Staple	_	_				
1 + 2 3	Double- Sided	Corner Staple	À	_	_			
1 + 2	Double- Sided	Corner Staple	A	A	_			
1 2 3	Double- Sided	Hole Punch 2-Point Staple	À	À	_			
°-1°-° → 2 3	Double- Sided	Hole Punch 2-Point Staple		_	_			

Left-Bound Double-Sided Document ▶ Double-Sided Copy					
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position
12 34 56	Double- 2in1	Corner Staple	_	A	_
1 2 + 3 4 5 6	Double- 2in1	Corner Staple	_	_	_
§12 → 34 56	Double- 2in1	Hole Punch 2-Point Staple	_	1	: _A
0 3 4 1 2 → 5 6	Double- 2in1	Hole Punch 2-Point Staple	_	_	_
1 3 5 4 6	Double- 2in1	Corner Staple	A	_	_
1 3 4 5 6	Double- 2in1	Corner Staple	À	Å	_
↑ 1 → 3 5 ↓ 2 → 4 6	Double- 2in1	Hole Punch 2-Point Staple	A	_	-
1 3 4 5 6	Double- 2in1	Hole Punch 2-Point Staple	A	_	Ä

Left-Bound Double-Sided Document ▶ Double-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
1 2 3 4 5 6 9 10 7 8 11 12	Double- 4in1	Corner Staple	_	_	_	
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Double- 4in1	Corner Staple	_		-	
○ 1 2	Double- 4in1	Hole Punch 2-Point Staple	_		1	
5 6 7 8 9 10 11 12	Double- 4in1	Hole Punch 2-Point Staple	_	_	Ā	
1 2 5 6 9 10 7 8 11 12	Double- 4in1	Corner Staple	Á			
1 2 3 4 5 6 7 8 9 10 11 12	Double- 4in1	Corner Staple	A	A	_	
5 6 9 10 7 8 11 12	Double- 4in1	Hole Punch 2-Point Staple	À		:A	
$\begin{bmatrix} \circ\bar{1} & \circ\bar{2} \\ 3 & 4 \end{bmatrix} \rightarrow \begin{bmatrix} 5 & 6 \\ 7 & 8 \\ 9 & 10 \\ 11 & 12 \end{bmatrix}$	Double- 4in1	Hole Punch 2-Point Staple		_	_	

Top-Bound Double-Sided Documents

Top-Bound Double-Sided Document ▶ Single-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
		1 A A				
1 2	Single- Sided	Corner Staple		_	_	
1 2	Single- Sided	Corner Staple	Á	_	_	
§1 * 2	Single- Sided	Hole Punch 2-Point Staple	Á	_	:A	
1 2	Single- Sided	Hole Punch 2-Point Staple	A	_	_	
1 2	Single- Sided	Corner Staple	_	_	_	
1 2	Single- Sided	Corner Staple	_	_	_	
1 2	Single- Sided	Hole Punch 2-Point Staple	_	_	: A	
°-°-° → 2	Single- Sided	Hole Punch 2-Point Staple	_	_	_	

Top-Bound Double-Sided Document ▶Single-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
12 34	Single- 2in1	Corner Staple		A	_	
12 + 34	Single- 2in1	Corner Staple	À	_		
§1 2 • 3 4	Single- 2in1	Hole Punch 2-Point Staple	Â	_	· A	
1 2 → 3 4	Single- 2in1	Hole Punch 2-Point Staple	A	_	_	
1 3 4	Single- 2in1	Corner Staple	_	_	_	
1 3 4	Single- 2in1	Corner Staple	-	À	_	
[1	Single- 2in1	Hole Punch 2-Point Staple	-	_	_	
1° 1° 3 4	Single- 2in1	Hole Punch 2-Point Staple	-	_	Å	

Top-Bound Double-Sided Document ▶Single-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
1 2 5 6 7 8	Single- 4in1	Corner Staple			_	
1 2 5 6 3 4 7 8	Single- 4in1	Corner Staple	A	_	_	
↑1 2 ↓3 4 5 6 7 8	Single- 4in1	Hole Punch 2-Point Staple	à	_		
5 6 3 4	Single- 4in1	Hole Punch 2-Point Staple	À	_	_	
1 2 3 4 5 6 7 8	Single- 4in1	Corner Staple	_	_	_	
1 2 5 6 7 8	Single- 4in1	Corner Staple	_	_	_	
1 2 3 4	Single- 4in1	Hole Punch 2-Point Staple	_	_	:	
° 1 ° 2° 3	Single- 4in1	Hole Punch 2-Point Staple	_	_	_	

Top-Bound Double-Sided Document ▶ Double-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
1 2 3	Double- Sided	Corner Staple	á	_	_	
1 + 2	Double- Sided	Corner Staple	A	Å	_	
† 1 2 3	Double- Sided	Hole Punch 2-Point Staple	á	_	ia.	
1 × 2 3	Double- Sided	Hole Punch 2-Point Staple	A	_	_	
1 2 3	Double- Sided	Corner Staple	_	à	_	
1 * 3	Double- Sided	Corner Staple	_	_	_	
1 2 3	Double- Sided	Hole Punch 2-Point Staple	_	à	_	
°-°-° → 2 3	Double- Sided	Hole Punch 2-Point Staple	_	_	_	

Top-Bound Double-Sided Docum					5. 6
Desired Copy	Copy Setting	Finishing Setting	Margin Setting	File Margin	Binding Position
	County	Com.ig	(Orig. ▶	Setting	
			Copy Screen)	(Auxiliary Screen)	
			ocieeii)	Octobert)	
	(P				
		7.83 / A	1	1	
• • • • • • • • • • • • • • • • • • • •	Double- 2in1	Corner Staple			_
1 2 3 4 5 6	21111		A	A	
34	Double- 2in1	Corner Staple	00000000	_	_
· -			A		
12 56					
	Double-	Hole Punch			**********
1 2 3 4 5 6	2in1	2-Point Staple	A		i A


(2.4)	Double-	Hole Punch		_	_
○ ○ ○ ○ ○ ◆	2in1	2-Point Staple	À		
1 2 5 6					
	Double-	Corner Steple			
1 + 3 5	2in1	Corner Staple	_	_	_
2 4 6					
	5	0 0 :			
3	Double- 2in1	Corner Staple	_		_
\ 4 \				A	
1 5					
2 6					
	Double-	Hole Punch	_	_	_
[↑] 1 → 3 5 4 6	2in1	2-Point Staple			
<u>2</u> 4 6					
	Double-	Hole Punch	_	_	
$\begin{pmatrix} 3 \\ 4 \end{pmatrix}$	2in1	2-Point Staple			4
-°•° → 4					****
1 5 5 6					

Top-Bound Double-Sided Document ▶ Double-Sided Copy						
Desired Copy	Copy Setting	Finishing Setting	Margin Setting (Orig. ► Copy Screen)	File Margin Setting (Auxiliary Screen)	Binding Position	
1 2 3 4 5 6 9 10 7 8 11 12	Double- 4in1	Corner Staple	£	á	_	
1 2 3 4 5 6 7 8 9 10 11 12	Double- 4in1	Corner Staple	A	_	_	
\$\big 1 2 \\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	Double- 4in1	Hole Punch 2-Point Staple	Å	_	i	
5 6 7 8 9 10 11 12	Double- 4in1	Hole Punch 2-Point Staple	Α.	_	_	
1 2 3 4 5 6 7 8 11 12	Double- 4in1	Corner Staple	_	á	_	
1 2 3 4 5 6 7 8 9 10 11 12	Double- 4in1	Corner Staple	_	_	_	
\$\begin{array}{c ccccccccccccccccccccccccccccccccccc	Double- 4in1	Hole Punch 2-Point Staple	_	_	:A	
$ \begin{array}{c c} $	Double- 4in1	Hole Punch 2-Point Staple	_	_	_	

6.5 Large Documents

Precautions for 11 × 17 L/Legal L Copies

When making 11×17 L or Legal L copies, observe the following precautions concerning the orientation of the document and the positions of 2-point stapling or hole-punching.

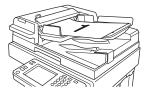




Note

If the document is being fed through the duplexing document feeder, the "Original Direction" function is not available.

When making 11×17 L or Legal L copies, the "2-Point Staple" and "Hole Punch" settings are not available with the following positions.

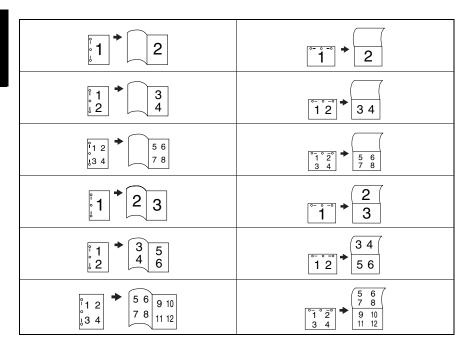


Specifying Copy Settings

7.1 Specifying Finishing Settings


Various finishing settings for sorting or grouping, stapling or punching holes in copies are available.

In the touch panel, touch [Basics], and then touch [Finishing]. A screen appears, showing the available Finishing settings.

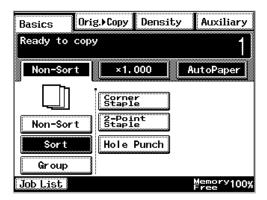


Available Finishing Settings

Non-Sort
 The copies are fed out and stacked on top of each other as they are printed.

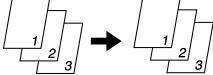


Sort
 The copies are automatically divided into the specified number of sets with each set containing a copy of each page.

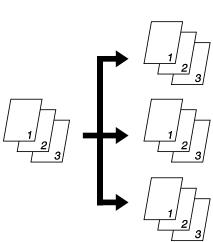

Group

The copies are automatically divided into stacks containing copies of the same page.

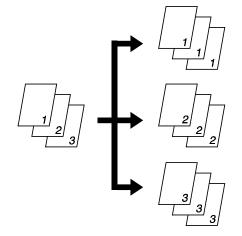


<Only when the finisher and the saddle kit are installed>

Corner Staple
 Copies printed with the "Sort" or
 "Group" setting are automatically
 stapled together in the upper-left
 corner.



Note

Thick paper, envelopes and overhead projector transparencies cannot be stapled.

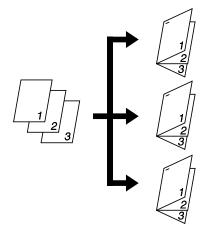


<Only when the finisher and the saddle kit are installed>

2-Point Staple
 Copies printed with the "Sort" or
 "Group" setting are automatically
 stapled together at two points on
 the left edge.



Note

Thick paper, envelopes and overhead projector transparencies cannot be stapled.

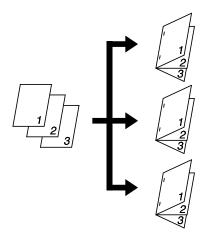


<Only when the finisher and the saddle kit are installed>

Hole Punch
 Holes are punched in the copies
 so they can be filed.
 This setting can be combined with
 the "Non-Sort", "Sort", "Group" or a
 staple setting.



Note

Holes cannot be punched in envelopes and overhead projector transparencies.

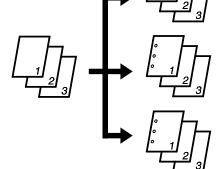



Tip

As a default, "Non-Sort" or "Sort" are automatically selected depending on the number of pages in the document. The default setting is "Non-Sort". The default setting can be changed using a function on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Notes on Using the "Sort" and "Group" Settings


- If a document positioned on the original glass is copied using the "Sort" setting, copying is automatically performed using the "Separate Scan" function.
 For details, refer to "Auxiliary Functions" in the Advanced Operations volume of the User Manual.
- If the finisher or the mailbin finisher is installed, each set of copies is fed out shifted to alternating sides.
- If the job tray is installed, but the finisher or the mailbin finisher is not, each set of copies is fed out in an alternating crisscross pattern.

<Conditions for crisscross sorting>

- Paper of the same size must be loaded horizontally in one paper drawer and vertically in another drawer.
- Paper of the same type must be loaded horizontally in one paper drawer and vertically in another drawer.
- The "Mixed Orig Detection" function must not be selected.
- None of the following can be selected: a stapling or the "Hole Punch" setting and the "Page Insertion", the "Cover Mode" and the "Image Repeat" functions.
- A paper drawer cannot be selected.


Shift Sorting

Each copy set is fed out shifted to alternating sides.

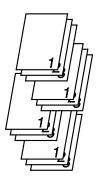


Crisscross Sorting

Each copy set is fed out in an alternating crisscross pattern.

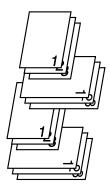


Shift Grouping

Each page set is fed out shifted to alternating sides.

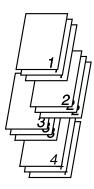


Crisscross Grouping

Each page set is fed out in an alternating crisscross pattern.

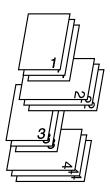


To make copies using a stapling setting

- 1 Position the document(s) to be copied.
- 2 Press the [Copy] key.
- 3 Select "Non-Sort", "Sort" or "Group", and then select a stapling setting.
 - If "Corner Staple" was selected, skip to step 7.
 - If "2-Point Staple" was selected, continue with step 4.
- 4 Touch [Select Position].

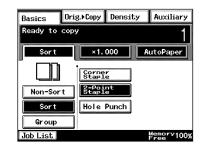



- 5 Touch the button for the desired stapling position.
- 6 Touch [Enter].

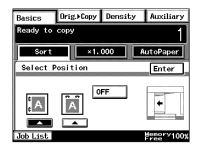

7 Press the [Start] key.

The copies are printed.



Note

A stapling setting cannot be selected if another job has been interrupted.

When making copies while using a staple setting, be careful of the selected stapling position.

For details, refer to page 7-11.


If "Corner Staple" was selected, the stapling position cannot be specified. However, if the "Corner Staple" setting is used together with the "Hole Punch" setting, the stapling position can be specified.

If a document positioned on the original glass is copied using a stapling setting, copying is automatically performed using the "Separate Scan" function. For details, refer to "Auxiliary Functions" in the Advanced Operations volume of the User Manual.

When copying while using a stapling setting, be sure that the maximum number of pages that can be stapled together is not exceeded.


To make copies using the "Hole Punch" setting

- Position the document(s) to be copied.
- 2 Press the [Copy] key.
- 3 Select "Non-Sort", "Sort" or "Group", and then touch [Hole Punch].
- 4 Touch [Select Position].

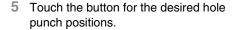

- To allow the hole punch position to automatically be specified, touch [OFF].
- 6 Touch [Enter].
- 7 Press the [Start] key.

The copies are printed.

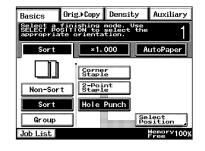






Tip

If copying is started without the hole punch position specified or if "OFF" was selected, the hole punch position is automatically specified according to the document orientation, as shown below.

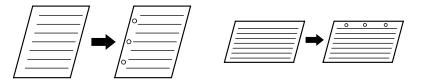

To adjust the position of the punched holes, contact your service representative.


Chapter 7

To make copies using the "Crease" setting

If the optional finisher or saddle finisher is installed, copies can be folded in half when the "Booklet Creation" setting is selected.

Before selecting the "Crease" setting, be sure to select the "Booklet Creation" setting from the Orig. ▶ Copy screen. (Refer to page 7-22.)

- 1 Position the document(s) to be copied.
- 2 Press the [Copy] key.
- 3 Select "Non-Sort", "Sort" or "Group", and then touch [Crease].

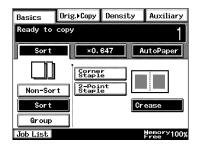

4 Press the [Start] key.

The copies are printed.

Notes on the Staple Position

The location that can be stapled differs depending on the paper size and the paper orientation.

Refer to the following table when selecting the paper for copying.

<When the "Corner Staple" setting is selected>

When the	he finisher (FN-117) is installed		
Screen	Document Orientation		Staple Position
lcon	Feeding From the Duplexing Document Feeder	Scanning From the Original Glass	
	Document size: Letter C	Document size: Letter C	Paper size: Letter C
			1
	Document size: 5-1/2 × 8-1/2C	Document size: 5-1/2 × 8-1/2C	Paper size: 5-1/2 × 8-1/2C
			1
	Document size: Letter or Legal L	Document size: Letter or Legal L	Paper size: Letter or Legal L
			1
	Document size: 11 × 17 L	Document size: 11 × 17 L	Paper size: 11×17 L
			1

<When the "2-Point Staple" setting is selected>

When the	When the finisher (FN-117) is installed				
Screen	Document Orientation		Staple Position		
Icon	Feeding From the Duplexing Document Feeder	Scanning From the Original Glass			
0FF	Document size: Letter C or 5-1/ 2×8 -1/2C	Document size: Letter C or 5-1/ 2×8 -1/2C	Paper size: Letter C or $5-1/2 \times 8-1/2C$		
c c			11		
	Document size: Letter C or Legal C	Document size: Letter C or Legal C	Paper size: Letter L or Legal L		
A			1		
OFF	Document size: Letter L or 5-1/ 2×8 -1/2C	Document size: Letter L or 5-1/ 2×8 -1/2C	Paper size: Letter C or $5-1/2 \times 8-1/2C$		
C C			1		
	Document size: Letter L or Legal L	Document size: Letter L or Legal L	Paper size: Letter L or Legal L		
c A			1		
OFF	Document size: 11 × 17 L	Document size: 11 × 17 L	Paper size: 11 × 17 L		
C A			1		

Notes on the Number of Possible Stapled Sets

While copying with a stapling setting, pages may become misaligned or fall. We recommend that no more than the number of sets listed below be stapled.

Maximum number of sets				
Number of bound pages	Finisher (11 × 17 L to 5.5 × 8.5 C)			
2 sheets	100 sets			
3 to 5 sheets	80 sets			
6 to 10 sheets	60 sets			
11 to 20 sheets	40 sets			
21 to 30 sheets	33 sets			
31 to 40 sheets	25 sets			
41 to 50 sheets	20 sets			

Notes on the Hole Punch Position

When copying with the "Hole Punch" setting selected, be careful of the orientation of the document.


When the finisher (FN-117) and saddle kit are installed				
Screen	Document Orientation			
Icon	Feeding From the Duplexing Document Feeder	Scanning From the Original Glass		
A				
Å				
. A				
A				

Chapter 7

7.2 Specifying a Zoom Setting

Copies of documents can be enlarged or reduced.

In the touch panel, touch [Basics], and then touch [Zoom]. A screen appears, showing the available Zoom settings.

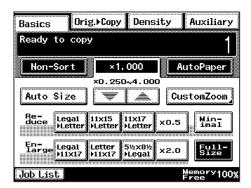

There are seven ways to change the zoom ratio.

Auto Size

The most appropriate zoom ratio based on the size of the document loaded and the specified paper size is automatically selected.

- Full-Size
 - A copy that is the same size as the document (1.000) is selected.
- Enlarge

Various zoom settings for making enlarged copies from common standard document sizes to standard paper sizes are available.

For example:

- A Letter-size document can be copied onto the larger 11 x 17-size paper.
- O A Legal-size document can be copied onto the larger 11×17 -size paper.
- Reduce

Various zoom settings for making reduced copies from common standard document sizes to standard paper sizes are available.

For example:

- \circ An 11 \times 17-size document can be copied onto the smaller Letter-size paper.
- O A Legal-size document can be copied onto the smaller Letter-size paper.
- Minimal

The copy is slightly reduced (0.930).

- Selecting the "Minimal" setting ensures that any part of the original positioned at the edge of the page will not be cut off in the copy.
- The zoom ratio of the "Minimal" setting can be changed to any ratio between 0.900 and 0.999.

- Zooming
 - Any zoom ratio (between 0.250 and 4.000) can be specified.
 - Touch and to select the desired zoom ratio. Each time or is touched, the zoom ratio is increased or decreased by an increment of 0.001.
- CustomZoom

Any zoom ratio (between 0.250 and 4.000) can be specified.

- O Use the keypad to enter the desired zoom ratio.
- Up to two zoom ratios entered using the keypad can be stored.
- X/Y Zoom


The copy size can be changed by specifying different scaling proportions (between 0.250 and 4.000) for the vertical and the horizontal dimensions.

To select a Zoom setting

- 1 Press the [Copy] key.
- 2 Touch [Zoom].

A screen appears, showing the available Zoom settings.

3 Select the desired Zoom setting.

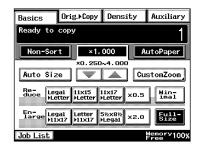

Specifying a "CustomZoom" Setting

To enter a custom zoom ratio

- 1 Press the [Copy] key.
- 2 Touch [Zoom].

A screen appears, showing the available Zoom settings.

Chapter 7

- 3 Touch [CustomZoom].
- 4 Use the keypad to type in the desired zoom ratio (between 0.250 and 4.000).
- 5 Touch [Enter].

The entered zoom ratio is displayed and is specified as the custom Zoom setting.




To store CustomZoom and Minimal zoom ratios

- 1 Press the [Copy] key.
- 2 Touch [Zoom].
 A screen appears, showing the available Zoom settings.
- 3 Touch [CustomZoom].
- 4 Touch [Memorize Zoom].



- 5 Use the keypad to type in the desired zoom ratio (between 0.250 and 4.000).
 - To store a Minimal zoom ratio, type in the desired zoom ratio between 0.900 and 0.999. The entered zoom ratio is displayed.
- 6 Touch [1], [2] or [Minimal].
- 7 Touch [Enter].

The entered zoom ratio is stored.

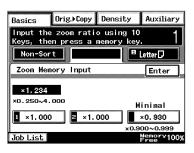

To recall a stored custom zoom ratio

- 1 Press the [Copy] key.
- 2 Touch [Zoom].

A screen appears, showing the available Zoom settings.

- 3 Touch [CustomZoom].
- 4 Touch [1], [2] or [Minimal].
 Touch [Enter]. The entered zoom ratio is recalled.




To specify different vertical and horizontal scaling proportions ("X/Y Zoom" setting)


- 1 Press the [Copy] key.
- 2 Touch [Zoom].
 A screen appears, showing the available Zoom settings.
- 3 Touch [CustomZoom].
- 4 Touch [X/Y Zoom].
 The X/Y Zoom screen appears.



- 5 Use the keypad to type in the desired length of side X (between 0.250 and 4.000).
- 6 Use the keypad to type in the desired length of side Y (between 0.250 and 4.000).
- 7 Touch [Enter].

The entered zoom ratio is applied.

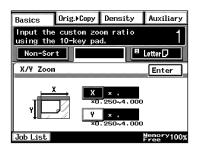

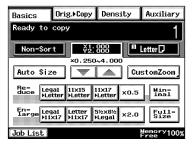


7.3 Selecting the Orig. > Copy Settings


In the touch panel, touch [Orig. ►Copy]. A screen appears, showing the available document and copy settings.

Orig. ▶ Copy Settings


Single-Sided ► Single-Sided
 A single-sided copy is produced from a single-sided document.

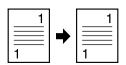


Single-Sided ➤ Double-Sided
 A double-sided copy is produced from two single-sided documents.

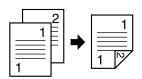


Single-Sided ► Single-2in1
 A single-sided copy is produced from two single-sided documents.

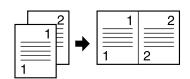

Single-Sided ▶ Double-2in1
 A double-sided copy is produced from four single-sided documents.

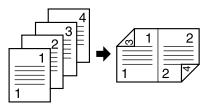



 Double-Sided Single-Sided
 Only if the duplexing document feeder is installed>
 Two single-sided copies are produced from a double-sided document.

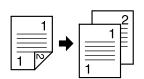


- Double-Sided Double-Sided
 Only if the duplexing document feeder is installed
 A double-sided copy is produced from a double-sided document.
- Double-Sided ► Single-2in1
 <Only if the duplexing document feeder is installed>
 A single-sided copy is produced from a double-sided document.
- Double-Sided ➤ Double-2in1
 Only if the duplexing document feeder is installed>
 A double-sided copy is produced from two double-sided documents.
- Single-Sided ▶ Single-4in1
 A single-sided copy is produced from four single-sided documents.


Single-Sided Double-4in1
 A double-sided copy is produced from eight single-sided documents.

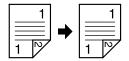

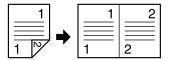




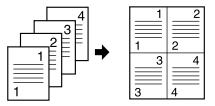


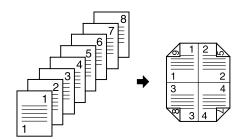


Single-Sided ► Booklet Creation
 A double-sided copy is produced from four single-sided documents.

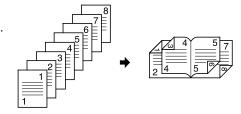


 Double-Sided Single-4in1
 Only if the duplexing document feeder is installed>
 A single-sided copy is produced from two double-sided documents.

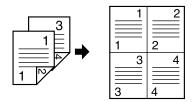

Double-Sided ▶ Double-4in1
 <Only if the duplexing document feeder is installed>
 A double-sided copy is produced from four double-sided documents.

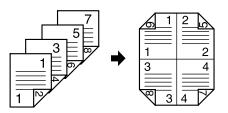


- Book (Separation) ► Single-Sided Two single-sided copies are produced from a bound document.
- Book (Spreadsheet) ▶ Single-Sided
 A single-sided copy is produced from a bound document.
- Book (Separation) ➤ Double-Sided
 A double-sided copy is produced from a bound document.

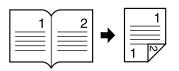


Book (Spreadsheet) Double-Sided

A double-sided copy is produced from a bound document.

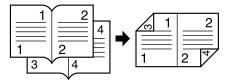

To specify Orig. ▶ Copy settings

- 1 Position the document(s) to be copied.
 - For details, refer to "6 Original Documents".

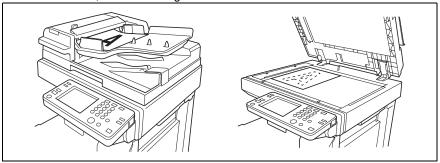

- 2 Press the [Copy] key.
- 3 Touch [Orig ▶ Copy].
- 4 Select the setting for the type of document to be copied. (For the example at the right, touch [Single-Sided].)




5 Select the setting for the desired type of copy. (For the example at the right, touch [Double-Sided].)




To select the "Double-2in1", "Booklet Creation", "Single-4in1" or "Double-4in1" settings, touch [4in1/Booklet].



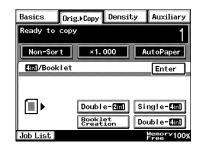

- 6 Touch [Original Direction].
 - Select an Original Direction setting if the document is loaded in an orientation other than the standard.
- 7 Select the appropriate document orientation setting.

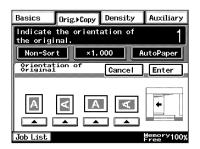


- 8 Touch [Enter].
- 9 Press the [Start] key.
 The copies are printed.

Chapter 7

Copying a Bound Document

The scanning position for bound documents can be adjusted.


The binding width can be seen by making copies with the "Single-Sided ▶ Double-Sided" or the "Double-Sided ▶ Single-Sided" settings selected.

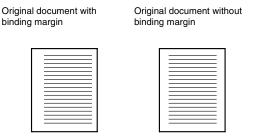


- 1 Position the document(s) to be copied.
 - O For details, refer to "6 Original Documents".
- 2 Press the [Copy] key.
- 3 Touch [Orig ▶ Copy].
- 4 Touch [Margin].



- 5 Select the appropriate binding margin position.
 - There are two locations for the binding position, as shown in the illustrations at the right.

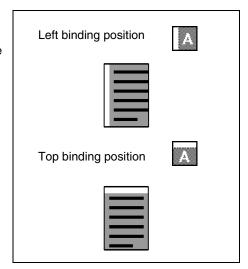

- 6 Touch and ▲ to select the desired binding margin width.
 - The binding margin can be set between 0 in. and 3/4 in., in 1/ 16 in. increments.

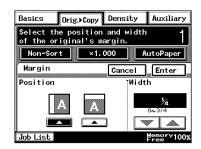


- 7 Touch [Enter].
- 8 Press the [Start] key.
 The copies are printed.



Tip


If the setting for the left binding position is selected, the front and back sides of the page will be printed with the same orientation.



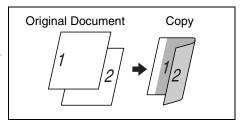

If the setting for the top binding position is selected, the top of the second side of the page is printed at the bottom of the first side.



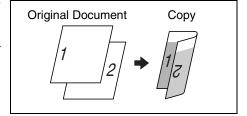

To adjust the width of the area erased from the bottom of the second side, contact your service representative.

Copying a Book

- 1 Position the document(s) to be copied.
 - For details, refer to "6 Original Documents".
- 2 Press the [Copy] key.
- 3 Touch [Orig ▶ Copy].
- 4 Touch [Book].





- 5 Select the appropriate setting for the binding position of the book ("Standard Book" or "RightBound").
- 6 Select whether to copy both pages of the book onto one sheet ("Spreadsheet") or onto two separate sheets ("Separation").
- 7 To erase around the text or along the binding, touch [Book Erase].
- 8 Select the desired Book Erase setting.



Tip

To adjust the width of the area erased from the center of the page, contact your service representative.

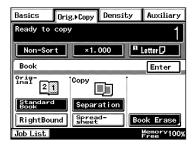

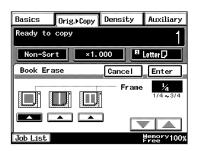




Tip


The pages can be copied with a blank area framing the text.



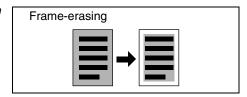


The pages can be copied with a blank area along the binding.



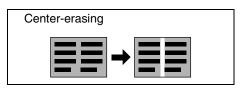

The pages can be copied with a blank area framing the text and along the binding.



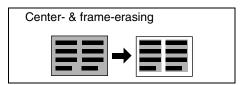

Density

×1.000

Orig. > Copy

Auxiliary

El Letter 🖸

Cancel Enter

- 9 Touch and to specify the width of the erased area.
 - The erased area can be set between 1/4 in. and 3/4 in., in 1/16 in. increments.



Tip

As a default, the width of the area erased along the binding

is 5/16 in. To change this default setting, consult your service representative.

Job List

Basics

Ready to copy

Non-Sort

Book Erase

10 Touch [Enter].

11 Select the desired copy settings.



Note

The "Book" Orig. setting cannot be selected if a 2in1, 4in1 or the Booklet Copy setting are selected.


12 Press the [Start] key.


The copies are printed.





Copying Book Pages onto Separate Double-Sided Pages

- 1 In the Basics screen, touch [Orig ► Copy], and then touch [Book]. The Book screen appears.
- 2 Select the appropriate setting for the binding position of the book ("Standard Book" or "RightBound").
- 3 Touch [Separation], and then touch [Enter].
- 4 Touch [Double-Sided].
- 5 Touch [Page Order].

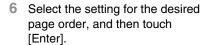

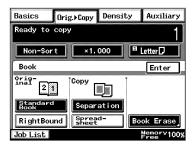

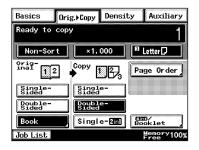

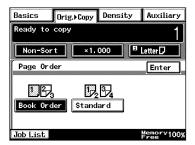




Tip


Both the left and the right sides are double-sided.



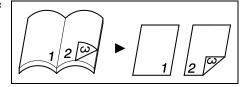

Book page order



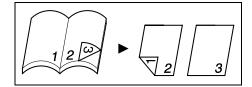

7 Press the [Start] key.

The copies are printed.

Quickly Selecting Default Settings

The default Orig. ▶ Copy setting is "Single-Sided ▶ Single-Sided". The default setting can be changed to "Single-Sided ▶ Double-Sided" or "Double-Sided ▶ Double-Sided".





Tip

The default settings can be changed using the various functions on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Chapter 7

7.4 Specifying a Copy Density

Selecting a Density Setting

In the touch panel, touch [Density]. A screen appears, showing the available Density settings.

Select the appropriate setting for the document to be copied ("Text", "Photo" or "Text/Photo"). Then, adjust the density as necessary.



Tip

The Density setting "Auto" is the default setting. The default Density setting can be changed using a function on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.


Selecting the "Text" Setting

Select the "Text" setting to emphasize contours and reproduce text documents with sharpness.

<"Auto" Density>

The density is automatically adjusted for the document.

- 1 Position the document(s) to be copied.
 - For details, refer to "6 Original Documents".
- 2 Press the [Copy] key.
- 3 Touch [Density].
- 4 Touch [Text].
- 5 Touch [Auto], or touch [Lighter] and [Darker] to select the desired Density setting.

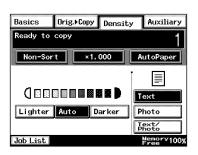

Selecting the "Photo" Setting


Select the "Photo" setting when copying documents with halftones such as photographs.

- 1 Position the document(s) to be copied.
 - O For details, refer to "6 Original Documents".
- 2 Press the [Copy] key.
- 3 Touch [Density].
- 4 Touch [Photo].
- 5 Touch [Lighter] and [Darker] to select the desired Density setting.



Note

The "Auto" Density setting cannot be selected if the "Photo" setting is selected. Selecting the "Auto" setting automatically selects the "Text" setting.

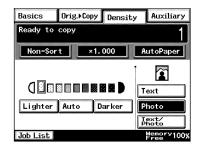


Selecting the "Text/Photo" Setting

Select the "Text/Photo" setting when copying documents containing both text and photos.

- 1 Position the document(s) to be copied.
 - O For details, refer to "6 Original Documents".
- 2 Press the [Copy] key.
- 3 Touch [Density].

- 4 Touch [Text/Photo].
- 5 Touch [Auto], or touch [Lighter] and [Darker] to select the desired Density setting.

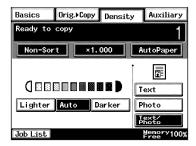



Tip

If the "Auto" Density setting is selected, the density of the copy is adjusted as necessary. However, the density can be made lighter or darker using a function on the User's Choice screen. For details, refer to "Changing Default Settings" of "Utility Mode Operations" in the Advanced Operations volume of the User Manual.

Touch Panel Messages


8

Chapter 8

8.1 When the Message "Please add toner." Appears


When the toner is empty, the message shown below appears and printing can no longer be performed.

Follow the procedure described below to replace the toner bottle.

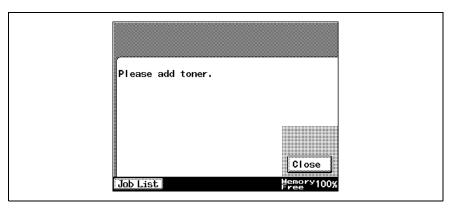


To replace the toner bottle


- 1 Open the front door.
- 2 Pull the toner hopper out as far as possible.

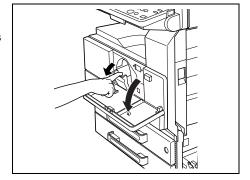


3 Flip up the toner bottle holder.

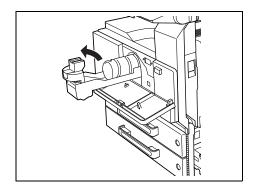


- 4 Carefully pull out the empty toner bottle.
 - Do not throw away the empty toner bottle. Instead, keep it so that it can be collected by your service representative.

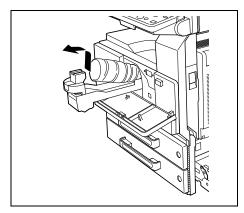


- 5 Hit one end of the new toner bottle against a hard surface, such as a desk or table, four or five times, and then hit the other end four or five times.
 - Since the toner within the bottle may have become compacted, be sure to break it up by performing this step.

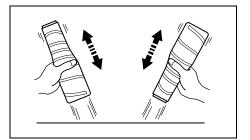


6 Shake the new toner bottle up and down about five times.

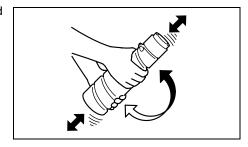


7 With the seal on the toner bottle facing upward, insert the bottle.

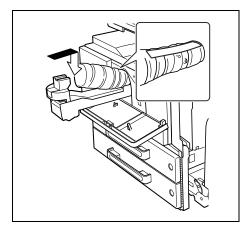

8 Flip down on the toner bottle holder until it locks into place. Grab the seal on the toner bottler, and then slowly pull it off toward you.

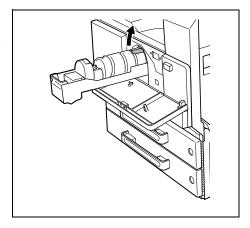

9 Fold down the toner bottle holder, and then push in the toner hopper.

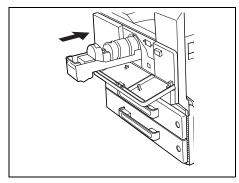

10 Close the front door.



Note

When the front door is closed, the toner automatically begins refilling.

While toner is being refilled, do not turn off the machine or open any other doors.



Tip


If the print is faint immediately after the toner bottle is replaced, replenish the toner. (Refer to page 9-3.)

Chapter 8

8.2 When the Message "Stapler empty." Appears

When the staple cartridge is empty, the message shown below appears and stapling can no longer be performed.

Follow the procedure described below to replace the staple cartridge.

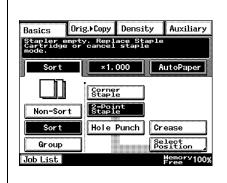






Note


Be sure to replace the staple cartridge only after the message appears. The machine may be damaged if the staple cartridge is removed before the message appears.

To replace the staple cartridge for finisher FN-117


Open the front door.

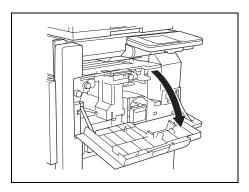


2 Pull the staple cartridge holder out toward you.

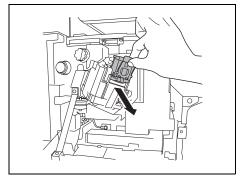


3 Press in the area marked "PUSH" to unlock the staple holder.

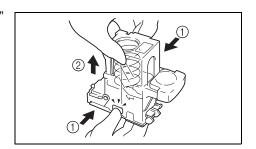


4 Remove the empty staple cartridge from the staple cartridge holder.

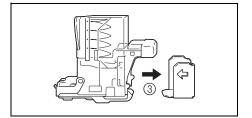

Insert the new staple cartridge into the staple cartridge holder, and then carefully remove the stopper.

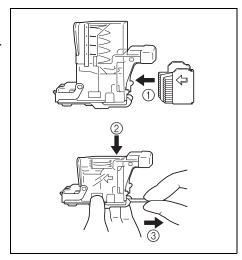


6 Insert the refilled staple cartridge holder until it locks into place.

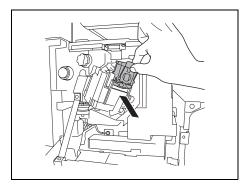


7 Close the front door.

To replace the staple cartridge for the saddle finisher


1 While holding up the paper output tray, remove the staple cartridge.

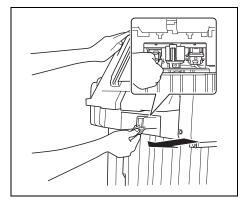


2 Press in the area marked "PUSH" to unlock the staple holder.

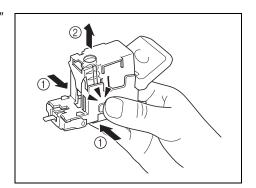


3 Remove the empty staple cartridge from the staple cartridge holder.

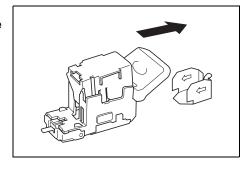

4 Insert the new staple cartridge into the staple cartridge holder.

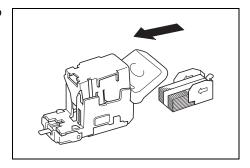

5 Carefully remove the stopper.

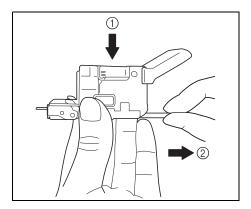


6 Insert the refilled staple cartridge holder until it locks into place.



CAUTION

Be careful when installing the staple cartridge holder.

→ Be sure that the staple cartridge holder is inserted facing the correct direction.

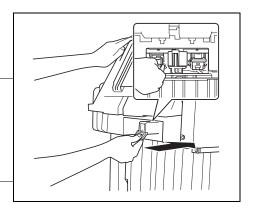


7 Lower the paper output tray.

Chapter 8

8.3 When a Paper Misfeed Occurs

Locations of Paper Misfeeds

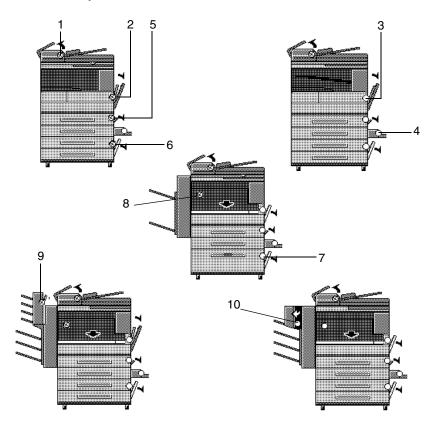


Message	Description	Message	Description
1	A paper misfeed in the duplexing document feeder (page 8-12)	6	A paper misfeed in the 2nd, 3rd or 4th paper drawer (page 8-19)
2	A paper misfeed in the fusing section (page 8-13)	7	A paper misfeed in the large-capacity cabinet (page 8-20)
3	A paper misfeed in the duplex unit (page 8-17)	8	A paper misfeed in the finisher (page 8-21)
4	A paper misfeed in the multiple bypass tray (page 8-17)	9	A paper misfeed in the mailbin (page 8-24)
5	A paper misfeed in the 1st or 2nd paper drawer (page 8-18)	10	A paper misfeed in the saddle kit (page 8-26)


To clear a paper misfeed in the duplexing document feeder

Follow the instructions that appear in the touch panel to open the document guide and remove any misfed paper.


 Pull up the lever for the misfeedclearing cover, and then open the cover.

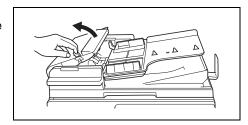


2 Carefully pull out any misfed documents.

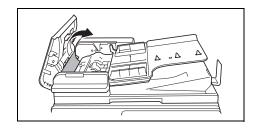


3 Swing up the document guide lever.

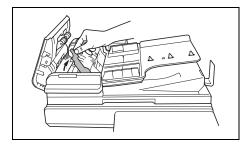

4 Turn the dial to feed out any misfed documents.

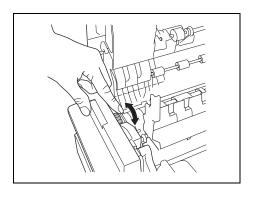

5 While supporting the document feed tray with your right hand, carefully pull out any misfed paper.

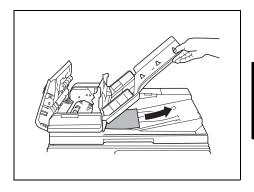

6 Return the document guide to its original position, and then close the misfeedclearing cover.

To clear a paper misfeed in the fusing section




CAUTION


The area around the fusing unit is extremely hot.



→Touching any part other those indicated may result in burns. If you get burnt, immediately cool the skin under cold water, and then seek professional medical attention.

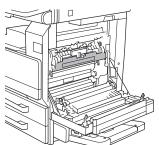

 Pull up the right-side door release lever, and then open the right-side door.

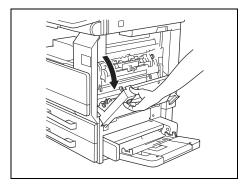




CAUTION


Decreased copy quality may result if the surface of the image transfer roller is touched.




→Be careful not to touch the surface of the image transfer roller.

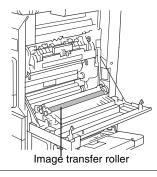


2 Carefully pull out any misfed paper.

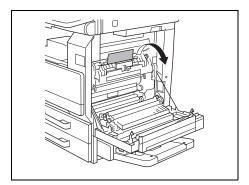


3 Open the fusing unit guide.

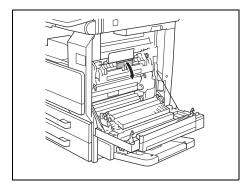


4 Carefully pull out any misfed paper.

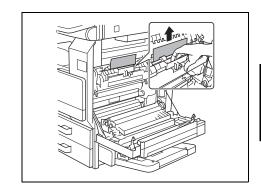


5 Open the switching guide, and then carefully pull out any misfed paper in the switchback unit.

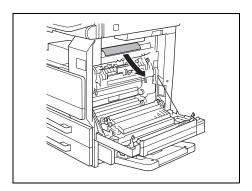


6 Carefully pull out any misfed paper in the fusing section.

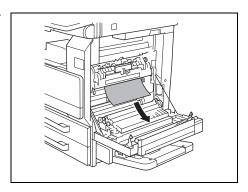

7 Carefully pull out any misfed paper around the image transfer roller.

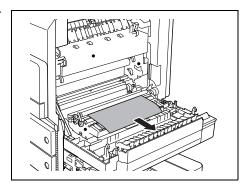

8 Carefully pull out any misfed paper.

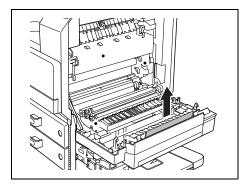

9 Close the right-side door.




Note

If the paper is misfed as described below, contact your service representative.

- The paper is wrapped around the image transfer roller.
- The paper is folded or shredded by the image transfer roller.
- The paper that was removed tore and partly remains in the fusing unit.

To clear a paper misfeed in the duplex unit


- 1 Open the duplex unit door.
- 2 Carefully pull out any misfed paper.

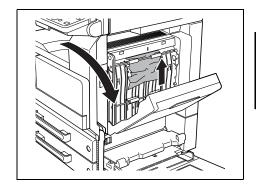


3 Close the duplex unit door.

To clear a paper misfeed in the multiple bypass tray


1 Pull out any misfed paper from the multiple bypass tray.

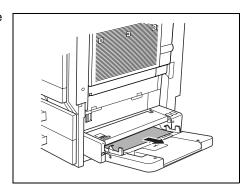

If the misfed paper cannot be pulled out, pull the lever for the sliding plate of the multiple bypass tray, and then pull the sliding plate toward you.

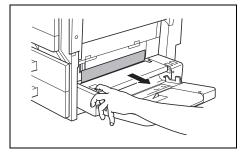


3 Press down on the sliding plate with your left hand and carefully pull out any misfed paper.

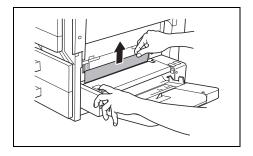


4 Return the multiple bypass tray to its original position.

To clear a paper misfeed in the 1st or 2nd paper drawer


1 Open the multiple bypass tray.

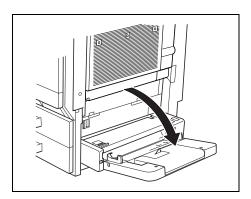

Pull up the lower-right door release lever to open the lowerright door of the paper feed unit indicated in the touch panel message.

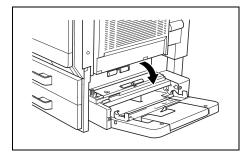


3 Carefully pull out any misfed paper.

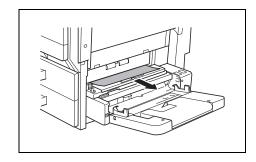


- 4 Close the lower-right door.
- 5 Close the multiple bypass tray.

To clear a paper misfeed in the 3rd or 4th paper drawer

 Pull up the lower-right door release lever to open the lowerright door of the paper feed unit indicated in the touch panel message.

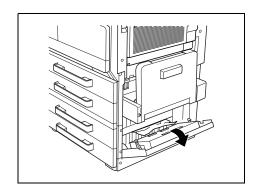


2 Carefully pull out any misfed paper.

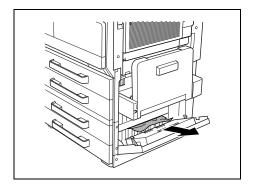


3 Close the lower-right door.

To clear a paper misfeed in the large-capacity cabinet

Pull up the lower-right door release lever to open the lowerright door of the paper feed unit indicated in the touch panel message.

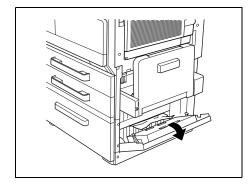


2 Carefully pull out any misfed paper.

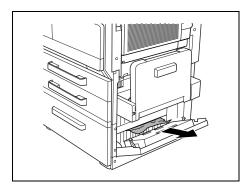


3 Close the lower-right door.

To clear a paper misfeed in the finisher (FN-117)


1 Open the front door.

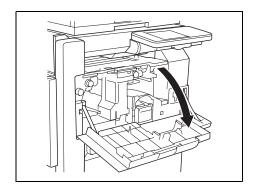


2 Lower lever FN1, and then pull out any misfed paper.

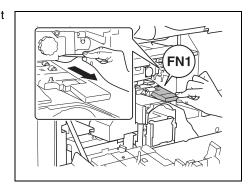


3 Turn knob FN2.

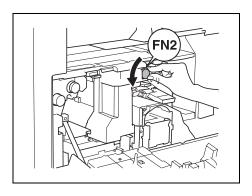


4 <If the punch kit is installed> Pull out the punch box.

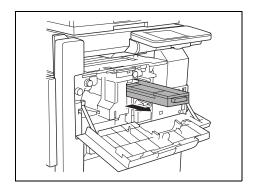


5 Lower lever FN3, and then pull out any misfed paper.

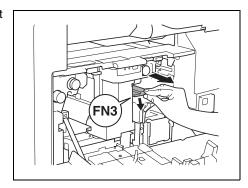

- 6 Return lever FN1 and lever FN3 to their original position.
- 7 <If the punch kit is installed> Insert the punch box into its original position.
- 8 Lower lever FN4.

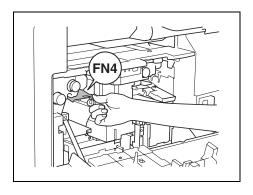


- 9 Turn dial FN5 or dial FN6, and then pull out any misfed paper.
- **10** Return lever FN4 to its original position.

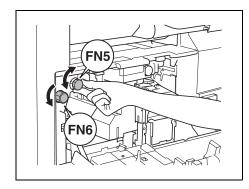


11 Close the front door.

To clear a paper misfeed in the mailbin (MK-1)


1 Open the front door.

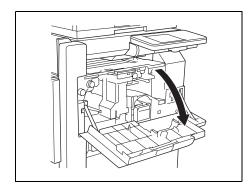


2 Turn dial FN5 or dial FN6, and then pull out any misfed paper.

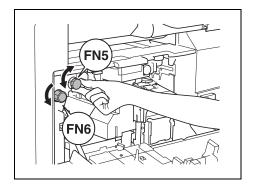


3 While pressing down lever FN7, pull out any misfed paper.

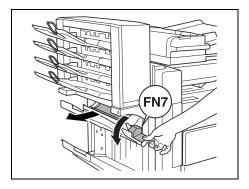

4 Pull handle FN8 to open the misfeed-clearing door.

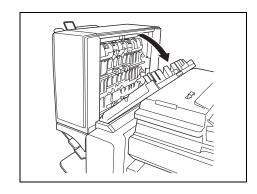


5 Pull out any misfed paper in the mailbin.

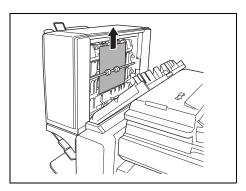


- 6 Close the misfeed-clearing door.
- 7 Close the front door.

To clear a paper misfeed in the saddle kit


1 Open the front door.

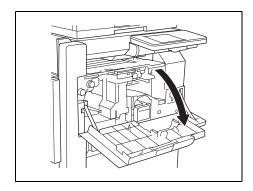


2 Turn dial FN5 or dial FN6, and then pull out any misfed paper.

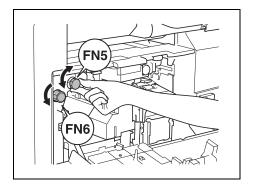

3 Remove all paper from the paper output tray.

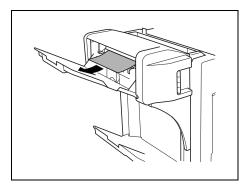

4 Open the misfeed-clearing door, and then pull out any misfed paper.

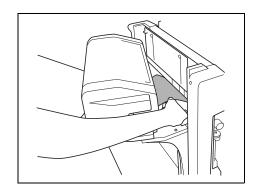


- 5 Close the misfeed-clearing door.
- 6 Close the front door.

8.4 When the Message "Cannot Staple." Appears

To clear jammed staples

When a finisher is installed and the staples are jammed, the message shown below appears.

Follow the procedure described below to clear the jammed staples.

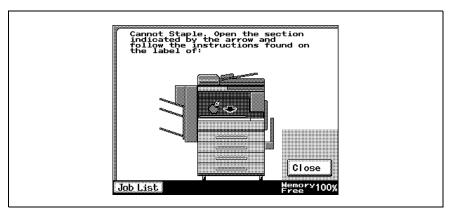

Follow the procedure described below to remove the paper and staples.




Note


When the message "Cannot Staple." appears, clear the jammed staples as described below.

If the following procedure is not followed and the paper is pulled out with too much force, the stapler unit may be damaged.


1 Remove all paper from the finisher.

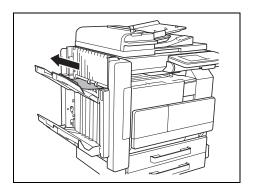


2 Open the front door.

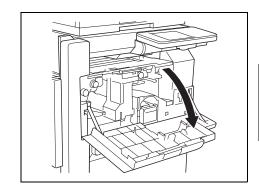


3 Lower lever FN1, and then pull out any misfed paper.

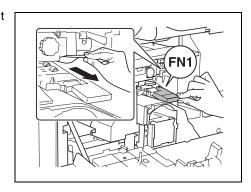


4 Turn dial FN2.

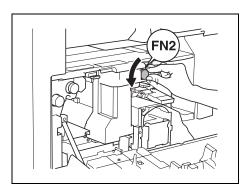


5 <If the punch kit is installed> Pull out the punch box.

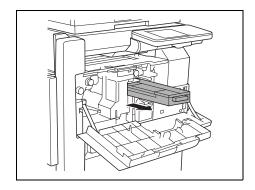


6 Lower lever FN3, and then pull out any misfed paper.

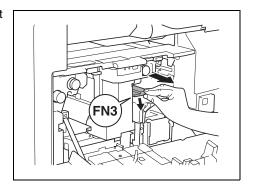


- 7 Return lever FN1 and lever FN3 to their original position.
- 8 <If the punch kit is installed> Insert the punch box into its original position.
- 9 Lower lever FN4.

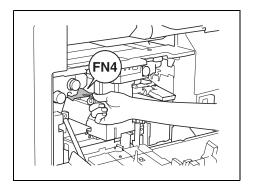


- 10 Turn dial FN5 or dial FN6, and then pull out any misfed paper.
- 11 Return lever FN4 to its original position.

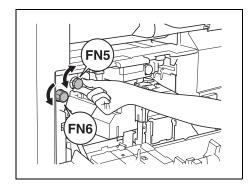


12 Turn the dial to the left to move the stapler toward the front.

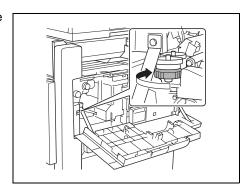


13 Pull the staple cartridge holder out toward you.

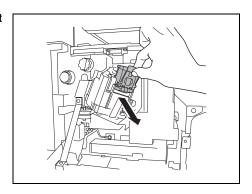

- 14 Push the staple holder guide up, and then pull out one sheet of staples.
- **15** Return the guide to its original position.

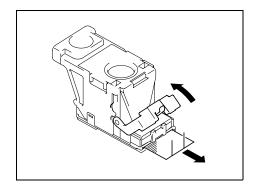

16 Insert the staple cartridge holder until it locks into place.

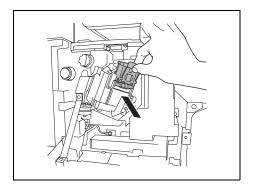

17 Close the front door.



Note


If stapling still cannot be performed, even after performing the above procedure, contact your service representative.

Chapter 8

8.5 When the Message "Empty punch scraps." Appears

If the punch kit is attached to the finisher, the following message will appear when the punch box is full.


Follow the procedure described below to empty the punch box.

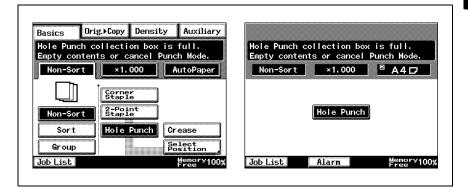


To empty the punch box

Empty and re-install the punch box as described below.


1 Open the front door.

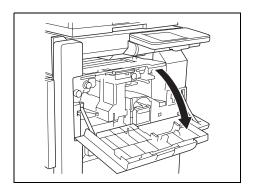

2 Pull out the punch box.

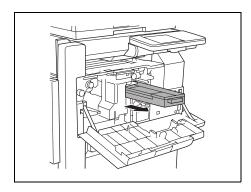

3 Empty the punch box.

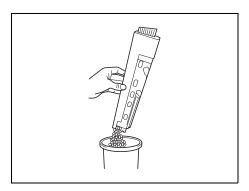

- 4 Insert the punch box into its original position.
- 5 Close the front door.

Troubleshooting



9.1 Main Messages and Their Remedies

Message	Cause	Remedy
A malfunction was detected. Please call your technical representative and provide the code listed below:	The machine malfunctioned and is unable to print.	Inform your service representative of the code displayed on the touch panel.
Please add toner.	Since the toner has run out, the machine is unable to make copies.	Replace the toner bottle. ("When the Message "Please add toner." Appears" → page 8-2)
The PC Drum needs to be replaced. Call your technical representative.	Since the drum unit has reached the end of its service life, the machine is unable to make copies.	Contact your service representative.
The Imaging Unit needs to be replaced. Call your technical representative.	Since the imaging unit has reached the end of its service life, the machine is unable to make copies.	Contact your service representative.
Stapler empty. Replace Staple Cartridge.	The staples ran out.	Replace the staple cartridge. ("When the Message "Stapler empty." Appears" → page 8-6)
4	The time to perform a periodic inspection on the machine has arrived.	Contact your service representative. Touch 1 to display the code. When contacting the service representative, inform them of the code.
Re-insert the following number of document pages: OO	After clearing a paper misfeed, it is necessary to reload certain pages of the document that have already been fed through the duplexing document feeder.	Load the indicated document pages into the duplexing document feeder.
Cannot XXXXXXXX (not enough free memory). Press Start to resume.	Since the memory is full, no more pages can be scanned.	Print pages or delete queued jobs to clear some of the memory.
This mode cannot be selected with XXXXXXXX.	Functions that cannot be used together are selected.	Make copies using only one of the functions.
Pause.	When making 2in1 copies, the second document page could not be scanned while scanning manually.	Position the second document page or press [Finish].
Properly close the section(s) indicated by the arrow(s).	The door or cover indicated by the arrow is open.	Make sure that all doors and covers are properly closed.

9.2 When Incorrect Copies Are Printed

Symptom	Possible Cause	Remedy
The printed output is too light.	The "Auto" Density setting is set too light.	Adjust the "Default Copy Output Levels" function on the User's Choice screen. Otherwise, cancel the "Auto" Density setting, and then select the desired setting.
	A Density setting that is too light is selected.	Touch [Density], and then select a darker Density setting.
	Many documents containing photos or large printed areas were printed.	The print density was dark and reduced the toner supply. Use the "Toner Replenisher" function in the Utility mode to replenish the toner.
	The toner bottle was just replaced.	The toner supply was reduced. Use the "Toner Replenisher" function in the Utility mode to replenish the toner until the copy density is darker.
	The toner is empty and the message "Please add toner." appears in the touch panel.	Replace the toner bottle with a new one.
	The paper is damp.	Replace the paper.
The printed output is too dark.	The "Auto" Density setting is set too dark.	Adjust the "Default Copy Output Levels" function on the User's Choice screen. Otherwise, cancel the "Auto" Density setting, and then select the desired setting.
	A Density setting that is too dark is selected.	Touch [Density], and then select a lighter Density setting.
	The original glass is dirty.	Wipe the glass with a dry soft cloth.
	The document was not pressed close enough against the original glass.	Position the document so that it is pressed closely against the original glass.
The printed output is blurry.	The paper is damp.	Replace the paper.
	The document was not pressed close enough against the original glass.	Position the document so that it is pressed closely against the original glass.

Symptom	Possible Cause	Remedy
There are dark specks or spots throughout the printed output.	The original glass is dirty.	Wipe the glass with a dry soft cloth.
19 Carlos Car	Either the document pad is dirty.	Clean the document pad with a soft cloth dampened with a mild detergent.
	The original document is printed on highly translucent material, such as diazo photosensitive paper or overhead projector transparencies.	Place a blank sheet of paper on top of the document.
There are streaks in the printed output.	A double-sided document is being copied.	If a thin double-sided document is being copied, the information on the back side may be reproduced in the copy. Touch [Density], and then select a lighter density for the background.
The image is not aligned properly on the paper.	The document is not positioned correctly.	Correctly position the document against the document scales. If the duplexing document feeder is installed, correctly adjust the document guides for the size of the document.
	The document is not positioned correctly in the duplexing document feeder.	Lift open the duplexing document feeder, and correctly position the document against the document scales.
	The original glass is dirty (while using the duplexing document feeder).	Wipe the glass with a dry soft cloth.
	The document guides are not slid up against the edges of the document.	Slide the document guides against the edges of the document.
	Curled paper was loaded into the paper drawer.	Flatten the paper before loading it.
The printed page is curled.	The paper that was used (as with recycled paper) curls easily.	Remove the paper from the paper drawer, turn it over, and then load it again.
		Replace the paper with paper that is not damp.

Symptom	Possible Cause	Remedy
The edge of the printed output is dirty.	The document pad is dirty.	Clean the document pad with a soft cloth dampened with a mild detergent.
	The selected paper size is larger than the document (with Zoom set to "×1.000").	Select a paper size that is the same size as the document. Otherwise, set Zoom to "Auto Size" to enlarge the copy to the selected paper size.
	The orientation of the document is different from the orientation of the copy (with Zoom set to "×1.000").	Select a paper size that is the same size as the document. Otherwise, select a paper orientation that is the same as the that of the document.
	The copy was reduced to a size smaller than the paper (a Custom Zoom setting was selected).	Select a zoom ratio that adjusts the document size to the selected paper size. Otherwise, set Zoom to "Auto Size" to reduce the copy to the selected paper size.

^{*} If the problem is not corrected even after the operations described above are performed, contact your service representative.

9.3 When the Machine Is Not Operating Correctly

Symptom	Possible Cause	Remedy
Nothing appears in the touch panel.	If only the indicator on the [Start] key is lit, the machine is in Energy Saver mode or Sleep mode.	Press any key in the operation panel to cancel Energy Saver mode.
	The machine has not been turned on.	Check that the machine's power switch has been set to "I" and that the sub power switch has been pressed in.
	The contrast control knob for the touch panel has been set either too light or too dark.	While looking at the touch panel, adjust the contrast control knob.
	The scanner power cord or the interface cable is disconnected.	Set the power switch for the machine to "O", and then reconnect the scanner power cord and the interface cable.
The indicator on the [Start] key does not light up in green.	An access code has not been entered.	Enter the access code according to the procedure described in "Making Copies Using Accounts".
Even though the [Start] key is pressed, no copies are made.	The copy/print job is queued and waiting to be printed.	Touch [Job List] to check the jobs that are queued. Wait until printing begins.
	The machine is still warming up after just being turned on.	The machine takes about 17 seconds to warm up after it is turned on. Wait until the machine has finished warming up.
	The machine is malfunctioning.	Follow any messages that appear on the touch panel.
The machine cannot be set to Copy mode.	The machine is in Interrupt mode (the "Interrupt" indicator is lit).	Press the [Interrupt] key to cancel Interrupt mode.
	Interrupt ☐ <u>=</u> -/	
The machine cannot be turned on.	The power supply cord has been unplugged from the electrical outlet.	Plug the power supply cord into the electrical outlet.
	The breaker for the electrical circuit has been tripped.	Close the breaker for the electrical circuit.

If the problem is not corrected even after the operations described are performed, turn off the machine,unplug its power supply cord, and the contact your service representative.

9.4 The Fax Does not Work Properly

Transmission is Poor

Fax Status	Apparent Cause	Countermeasures
Original cannot be scanned.	Is the document too thick?	Place the original on the glass and then transmit the document.
	Is the original too thin or too small?	Place the original on the glass and then transmit the document.
	Is the glass dirty?	Wipe the glass with a soft cloth.
The original is fed crooked.	Does the width of the original match the setting guide?	Match the width of the original to the setting guide.
When the image	Is the original set correctly?	Set the original correctly.
received by the destination is unclear.	Is the glass dirty?	Wipe the glass with a soft cloth.
	Is the writing on the original faint?	Set the scan density.
	Is there any problem with the connection to the receiving fax?	Check by making a copy with the product. If the image of the copy is clear, transmit again.
The image received by the destination is blank.	Is the surface of the document to be transmitted set face-down? (When using the paper feed tray)	Set the surface of the document to be transmitted set face-upward, and transmit again.
Automatic transmission	Is the phone number incorrect?	Check the phone number.
is not possible.	Is the number telephone-dedicated?	Check the phone number.
	Is the reason on the destination side? (Paper empty, automatic reception disabled, power is OFF, etc.)	Check the destination.
	Is the memory remaining low?	After the document stored in memory has been sent and the memory remaining increased, send again.
When the transmission stamp is faint. (optional)	Is the stamp (replaceable stamp) close to the end of its operational life?	Replace the stamp (replaceable stamp).

Reception is Poor

Fax Status	Apparent Cause	Countermeasures
The received image is	Is the correct paper being used?	Use the correct paper.
not clear.	Is the paper wrinkled by humidity?	Replace the paper with new paper.
	Is there any toner left?	Replace toner bottle.
	Is the toner bottle inserted correctly?	Insert the toner bottle correctly.
	Is there any problem with the connection to the receiving fax?	Check by making a copy with the product. If the copy image is clear, transmit to the destination again.
The received paper is	Is there any toner left?	Replace toner bottle.
blank.	Does the destination have the document set backwards?	Check the destination.
No auto reception.	Is the product set to manual reception?	Set to automatic reception.
	Is the memory remaining low?	Add paper if the paper runs out, and print the documents accumulated in the memory.
	Is a report being printed?	Wait until the report printout is complete.
	Is a message displayed?	Understand the message according to the display.
There are black streaks on the received paper.	Is there any problem with the connection to the receiving fax?	Make a copy from the product. If there are no back streaks on the paper, transmit again to the destination.

Telephone Calls are Difficult to Make

At this Time	Apparent Cause	Countermeasures
Nothing can be heard from the external	Is the external telephone cord connected to the product?	Connect the external telephone cord to the product.
telephone receiver.	Is the circuit cord connected to the product?	Connect the line cord to the product.
	During Communication	Confirm again after communication completes.
No ringing sound is audible even if a number is dialed.	Is the line type set correctly?	Set the line type correctly.
The destination's voice is not easily audible during on-hook dialing.	Is the monitor volume too low?	Increase the monitor volume.
The telephone ring is too quiet (loud).	Is the monitor volume too quiet (loud)?	Adjust the monitor volume.
The destination's voice is hard to hear on the receiver of the external telephone receiver.	Is the receiver volume too low?	Increase the receiver volume.

9.5 Replacing the Completion Stamp

Replace the stamp by the following procedure if the storage (transmission) completion stamp becomes faint.




Tip


An optional completion stamp is necessary.

Replacing the Storage (Transmission) Stamp


1 Pull the lever for the paper feed cover, and open it.

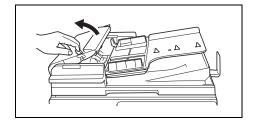


Pull the lever for the setting guide, and open it.

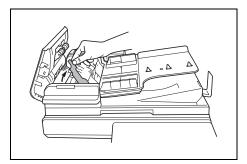

3 Remove the stamp.

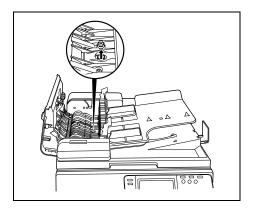

4 Set the new stamp.

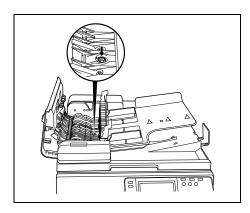

5 Replace the guide, and return the paper feed cover.

Index 1

10.1 Index

Numerics

1st paper drawer	1-10
1st paper output tray	1-13
2 way paper feed cabinet	1-6
2nd paper drawer	1-10
2nd paper output tray	1-13
2-point staple	7-4
3rd paper drawer	1-12, 1-14
3rd paper output tray	1-14
4th paper drawer	1-12
A	
Accessibility	3-5
Additional bin kit	1-7, 1-14
Additional message display	3-17
Auto panel reset	3-12
Automatically selecting the paper source	5-8
Available functions and settings	3-17
В	
Basic copy operations	4-3
Book	7-21, 7-27
Bound document	7-24
Buitlt in finisher	1-7
С	
Checking listed items	3-21
Checking the print order	3-20
Checking the settings	3-4
Checking the status of a job	3-19
Clearing jammed staples	8-28
Control panel	1-10, 3-2
Access key	
Accessibility key	
Clear kev	3-2

Copy key	3-2
Enlarge key	3-3
Extra Scan key	
Fax/Scan key	
Interrupt key	
keypad	
Mode Check key	
Panel Reset key Pause key	
Start key	
Stop key	
sub power switch	
touch panel	
Utility key	
Copy density	7-32
Copy desk	1-6
Copy track mode	
Corner staple	
Crease setting	
Orisscross grouping	
Custom paper size	
Sustom paper size	5-10
D	
Default settings	3-14
Deleting listed items	3-21
Document feed tray	1-12
Document guides	1-12
Document output tray	1-12
Document pad	1-10
Document scales	1-10
Oouble-2in1	7-19
Double-4in1	7-20
Double-sided	7-19
Double-sided Drawer release button	7-19 1-14
Oouble-sided	7-19 1-14 1-10
Double-sided	7-19 1-14 1-10
Double-sided	7-19 1-14 1-10 1-10
Double-sided	7-19 1-14 1-10 1-10

Contrast dial3-3

	-	
	_	
C	Э	١
Ġ	d	
¢	Ξ	
Č	5	

E
Empty the punch box 8-33 Energy save mode 3-12 Enlarging the touch panel screens 3-9 External telephone jack 1-11
F
Feeding the document 6-2 duplex document feeder 6-5 Finisher 1-7 Front door 1-9
G
Group
Н
Hard disk drive
I
Interrupting a copy job4-6
J
Job list screen
L
Landscape
Lower-right door

Lower-right door release lever	1-12
M	
Mail bin	1-13
Mail bin kit	1-7
Making copies using accounts	4-7
Memory	1-8
Memory recall	3-22
Message display	3-17
Messages	9-2
Misfeed-clearing door	1-13, 1-14
Mixed original detection	6-6
Mixed width document sizes	6-3
Multi port	1-15
Multiple bypass tray	1-9
N	
Network interface kit	1-8
Non-sort	7-2
Non-standard paper size	5-16
0	
Orig. > Copy settings	7-19
specifying	
Original cover kit	
Original glass	
Output tray cover	
Overhead projector transparencies	5-2, 5-15
P	
Paper feed unit	1-7
Paper guide	1-9
Paper misfeed	
1st or 2nd paper drawer	
3rd or 4th paper drawer	
duplex unitduplexing document feeder	
aupicking accument reeder	12

finisher	
fusing sectionlarge-capacity cabinet	
mailbin	
multiple bypass tray	
saddle kit	
Paper misfeeds	
locations	
Paper orientation	
Paper output tray	
Paper setting	
Paper specifications	
Paper stopper	
Paper storage	5-7
Paper supply indicator	1-9
Portrait	1-5
Positioning documents	
original glass	6-8
Power cord socket	1-11
Power switch	1-11
Print area	5-6
Print indicator	1-12
Printer controller	1-8
Punch kit	1-7
R	
Replacing the staple cartridge	
finisher	0.0
saddle finisher	
Replacing the toner bottle	
Right-side door	
Right-side door release lever	
hight-side door release lever	1-9
S	
Saddle kit	1-7
Screen tabs	
Selected settings	3-17
Shift grouping	
Shift sorting	

	>	d
í	'n	ľ
_	×	
	╚	
1	C	_

Single-2in1	7-19
Single-4in1	7-20
Single-sided	7-19
Sleep mode	3-13
Sort	7-2
Stamp	9-10
Stapling kit for finisher	1-7
Stapling kit for saddle kit	1-7
Stapling setting	7-7
Stopping copying	4-5
Т	
Telephone line jack for line 1	1-11
Telephone line jack for line 2	1-11
Touch panel	. 1-9, 3-14
Transmission stamp	9-10
Transmission stamp unit	1-15
Tray extension	1-9
Turning the machine on and off	3-10
U	
Useful operations	2-2
X	
X/Y zoom setting	7-17
Z	
Zoom setting	7-14



Copyright 2003 MINOLTA CO., LTD.

The information contained in this manual is subject to change without notice to incorporate improvements made on the product or products the manual covers.