

User Manual

The essentials of imaging

www.minolta.com

PageScope Light

Contents

4	Lin	tro	بالم	icti	010

	1.1	Welcome	1-1
	1.2	System Requirements	1-2
	1.3	Accessing PageScope Light	1-3
	1.3.1	Using PageScope Light	1-3
	1.3.2	Logging Into Administrator Mode	1-4
	1.3.3	Selecting the Display Language	1-5
	1.4	Structure of Pages	
2	Use	r Mode	
	2.1	System Tab	2-1
	2.1.1	System configuration (Summary)	2-1
	2.1.2	Printer information (Detail)	2-2
		Input Tray	
		Output Tray	
		Hard Disk	
		Interface Info	
	2.1.3	Counters (Meter Count)	2-7
	2.1.4	Online Assistance	2-8
	2.2	Job List Tab	2-9
	2.2.1	Job List	2-9
		List of print jobs (Print)	2-9
		List of transmission jobs (TX)	
		List of reception jobs (RX)	2-11
	2.3	File Tab	2-12
	2.3.1	Mail Boxes	2-12
		Creating a mail box	2-13
		List of files in a mail box	2-14
	2.3.2	External Server Link	2-15

	2.4	Print Tab	2-16
	2.4.1	Default Settings	2-16
		General settings (Settings)	2-16
		PCL Configuration	
		PS Configuration	2-19
	2.4.2	Test Print	2-20
	2.5	Scan Tab	2-21
	2.5.1	One-Touch Key Registration	2-21
		Registering a new one-touch key	2-23
		Specifying TX: PC(E-mail) settings	2-25
		Specifying TX: PC(FTP Server) settings	
		Specifying TX: PC(FTP Client) settings	
		Specifying TX: HDD settings	
		Specifying TX: PC(Scanner) settings	
		Specifying TX: FAX(G3/G3-1/G3-2) settings	
		Specifying TX: InternetFAX(E-mail) settings	
		Specifying TX: InternetFAX(LAN-FAX) settings	
		Changing the settings for a registered one-touch key	
	2.5.2	FAX Program Registration	
		Registering a new fax program	
		Changing the settings for a registered fax program	
	2.5.3	Domain Name Registration	2-42
3	Δdm	inistrator Mode	
	3.1	System Tab	
	3.1.1	User's Choice	
		User's Choice 1	
		User's Choice 2	
		User's Choice 3	
		User's Choice 4 User's Choice 5	
		User's Choice 6	
	040		
	3.1.2	Administrator Management	
		Administrator Settings	
		Administrator Password	
		Account Registration	
		Registering a new account	
		Changing the settings for a registered account	
		Account Counter	

3.1.3	Preference	3-17
3.1.4	Online Assistance	3-18
3.2	File Tab	3-19
3.2.1	Mail Boxes	3-19
3.2.2	File Storage Life	3-20
3.3	Print Tab	3-21
3.3.1	IPP	3-21
3.4	Scan Tab	3-22
3.4.1	One-Touch Key Registration	3-22
	File Export	
	File Import	3-23
3.4.2	Initial Setting	3-24
3.4.3	TSI Registration	3-25
3.4.4	Send	3-26
3.4.5	Receive	3-28
3.4.6	Scan Setting	3-29
3.4.7	FAX Setting	3-31
	RX Functions	
	Password Communication	3-32
3.4.8	Doc. Manage	
	F-Code	
	Registering an F code	
	Changing the settings for a registered F code	
	Port Changing the settings for a port where documents are	3-36
	managed	3-38
	Public Document	
3.4.9	Report Setting	
3.5	Network Tab	
3.5.1	Common Setting	
3.3.1	TCP/IP	
	IPP	
	NetWare	
	NetWare Status	
	Windows	
	AppleTalk	3-48

3.5.2	Mail/Internet FAX	3-49
	POP3	3-49
	SMTP	
	Subject/Text	3-52
	Other	
3.5.3	FTP Server	3-54
	FTP Configuration	3-54
	FTP Server Registration	
	Registering an FTP server	3-56
	Changing the settings for a registered FTP server	

1 Introduction

PageScope Light is a utility for managing devices supported by the HTTP server integrated into the printer/scanner controller. Using a Web browser, PageScope Light can remotely control the printer/scanner controllers on the network.

1.1 Welcome

This manual provides descriptions on the use of PageScope Light.

For precautions concerning the use and safety of the main device, refer to the User Manual provided with the device.

Trademark Acknowledgements

Windows®, Windows NT®, Microsoft® and its logo are registered trademarks of Microsoft Corporation in the United States and other countries.

IBM and PC/AT are registered trademarks of International Business Machines Corporation in the United States and other countries.

Ethernet is a registered trademark of Xerox Corporation.

Netscape Navigator, Netscape Communicator, and the Netscape are trademarks of Netscape Communications Corporation.

PCL is a registered trademark of Hewlette-Packard Company Limited.

PostScript is a trademark of Adobe Systems Incorporated.

Minolta, PageScope Light and DiALTA are registered trademarks of Minolta Co., Ltd.

All other company names and product names mentioned in this manual are trademarks or registered trademarks of their respective companies.

This product uses the Software Development Kit developed by Peerless Systems Corporation.

Copyright© 2001 Peerless Systems Corporation. All rights reserved.

This product uses the NEST Office SDK developed by Novell, Inc. Copyright© 1999 Novell, Inc. NEST is a trademark of Novell, Inc. in the United States and other countries.

1.2 System Requirements

The following operating environment is required in order to use PageScope Light.

Computer (Software)

Operating System	Web Browser
Windows 95/98/Me/NT4.0	Internet Explorer 4 or later Netscape Communicator 4.7 or later
Windows 2000	Internet Explorer 5 or later Netscape Navigator 7.0
Windows XP	Internet Explorer 6 or later Netscape Navigator 7.0
MacOS 8.6 or 9.x	Internet Explorer 4.5 or later Netscape Navigator 6.1 or later
MacOS X	Internet Explorer 5.1 or later Netscape Navigator 6.1 or later

Network

- Ethernet
- TCP/IP protocol

Di3510/Di3010/Di2510/Di2010/Di3510f/Di3010f/Di2510f/Di2010f

Network Interface Card

Any of the following options must be installed.

- Pi3505e Printer Controller
- Pi3505e/PS Printer Controller
- Network Scan Kit
- Internet Fax & Network Scan Kit



Note

The dialog boxes shown in this manual may differ from those that appear on your computer. In addition, the specifications and other information concerning this product may change without notice.

1.3 Accessing PageScope Light



Note

In order to use PageScope Light, the IP address must be set in advance.

PageScope Light can be accessed through a Web browser.

- 1 Start up the Web browser.
- 2 In the Address bar, type the IP address of the controller in the format shown below, and then press the computer keyboard's [Enter] key. http://controller_IP_address/
 (Example) If the controller IP address is 192.168.0.10: http://192.168.0.10/
- 3 The initial page of PageScope Light appears.



Note

If your Web browser is set to use a proxy server, it may not be able to access PageScope Light. In this case, specify the IP address of the printer/scanner controller as an exception for access through the proxy server.

(Example) With Internet Explorer 5

- 1 Click [Tools] in the menu bar, and then click [Internet Options....].
- 2 Click the [Connections] tab.
- 3 Click the [LAN Settings] button.
- 4 Click the [Advanced] button in the "Proxy server" group box.
- 5 Type the IP address of the printer/scanner controller into the "Exceptions" list box.


1.3.1 Using PageScope Light

PageScope Light is used in the same way that Internet Web pages are viewed. Click Web page links to display those pages, or click the [Back] (or [Forward]) button to display the previous (or next) page.


1.3.2 Logging Into Administrator Mode

By logging into PageScope Light in Administrator mode, printer/scanner controller system settings can be specified or checked.

- 1 In the Admin Password box in the upper-left corner of the page, type the administrator password.
- 2 Click the [Log-in] button to log into the Administrator mode.

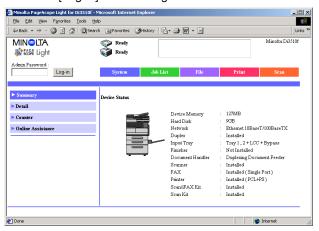

3 To log out, click the [Log-out] button.

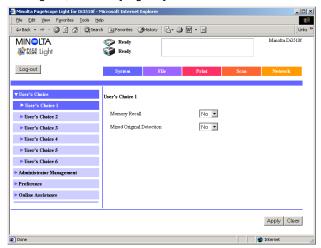



Note

For the administrator password, use the administrator access code for the copier. For details, contact the administrator for your copier.


If no operation is performed for 10 minutes after logging into PageScope Light in Administrator mode, the user is automatically logged out.

While logged into PageScope Light in Administrator mode, not all operations can be performed from the copier's control panel.

1.3.3 Selecting the Display Language

If necessary, the language in which PageScope Light pages are displayed can be changed. This setting only applies to PageScope Light pages.


- 1 Log into PageScope Light in Administrator mode.
- 2 Click [Preference] in the menu on the [System] tab.
- 3 From the PageScope Light Language list, select the desired language.
- 4 Click the [Apply] button.

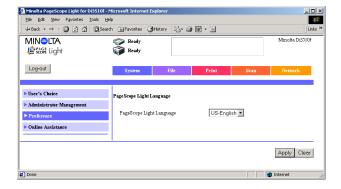

1.4 Structure of Pages

The following page (called the User mode page) can be viewed by anyone. If the administrator password is typed into the **Admin Password** box on the User mode page, the Administrator mode page can be displayed.

The pages of PageScope Light are constructed as shown below.

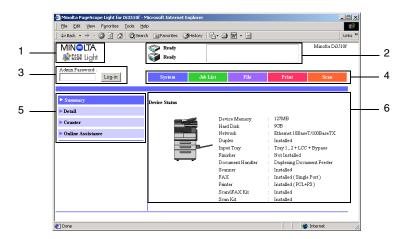

1 Minolta PageScope Light logo Click the Minolta logo to go to the following Web site.

www.minolta.com

Click the PageScope Light logo to display the version information in a separate window.



The version and copyright information for PageScope Light appear in this window. Click the Minolta logo to go to the Minolta Web site.

Click the PageScope Light logo to go to the PageScope Web site.

2	Status	disp	lay

The statuses of the printer and scanner are shown with text and icons.

In addition, the status warnings for the printer and scanner appear as messages.

To view the most recent status messages, click the [Refresh] button in the Web browser.

3 Admin Password box

Use to log in Administrator mode. (For details on logging in, refer to "Logging Into Administrator Mode" on page 1-4.)

4 Tabs

The categories that can be controlled by PageScope Light are displayed.

User mode

- System
- Job List
- File*¹
- Print*²
- Scan*3

Administrator mode

- System
- File*⁴
- Print*²
- Scan*3
- Network

For details on each tab, refer to the appropriate section.

- *¹ Available only if the network scan kit is installed
- *2 Available only if the printer controller is installed
- *3 Available only with the Di3510f, Di3010f, Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed *4 Available only if the hard disk drive kit and the network scan kit are installed

5 Menu

The information and setting items for the selected tab are listed.
For details on each menu, refer to the

For details on each menu, refer to the appropriate section.

6 Information and settings

The details of the item selected from the menu are displayed.

1 Introduction


2 User Mode

2.1 System Tab

The information and settings concerning the system configuration of the copier can be viewed from the [System] tab.

2.1.1 System configuration (Summary)

This is the first page that is displayed when http://controller_IP_address/ is accessed with the Web browser. This page can also be displayed by clicking [Summary] in the menu on the [System] tab. The system configuration of the copier and its status are displayed on this page.

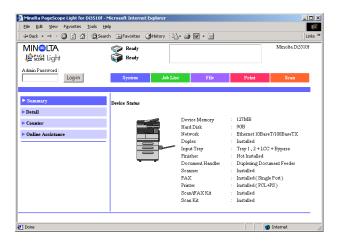

Device configuration diagram:

A diagram of the copier with all installed options is displayed.

Configuration summary:


A summary of the system configuration for the copier is listed.

2.1.2 Printer information (Detail)

If [Detail] in the menu on the [System] tab is clicked, a sub-menu appears, allowing you to select the unit whose detailed information is displayed.

Input Tray

This page appears after clicking [Input Tray] in the sub-menu that appeared after clicking [Detail] in the menu. The configuration details of each input tray installed on the copier are displayed on this page.

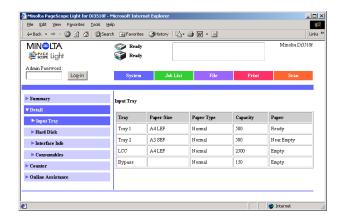

Input Tray: The names of the trays are displayed.

Paper Size: The size of paper that is loaded is displayed.

Paper Type: The type of paper that is loaded is displayed.

Capacity: The maximum number of sheets that can be

loaded into each tray is displayed.

The indicated maximum number of sheets is for

plain paper.


Paper: The number of sheets remaining in each tray is

displayed.

Output Tray

<Available only if an optional output tray is installed>

This page appears after clicking [Output Tray] in the sub-menu that appeared after clicking [Detail] in the menu. The configuration details of each output tray installed on the copier are displayed on this page.

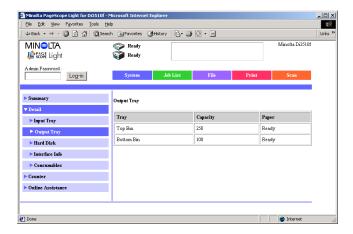

Tray: The names of optional trays that are installed are

displayed.

Capacity: The number of sheets of A4- or Letter-size plain


paper that can be fed into each tray is displayed.

Paper: The status of each tray is displayed.

Hard Disk

<Available only if the hard disk drive kit is installed>

This page appears after clicking [Hard Disk] in the sub-menu that appeared after clicking [Detail] in the menu. Information about the hard disk drive kit installed on the copier is displayed on this page.

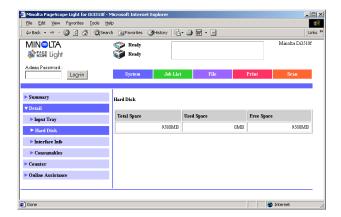

Total Space: The total amount of space on the installed hard

disk is displayed.

Used Space: The amount of used hard disk space is


displayed.

Free Space: The amount of the available hard disk space is

displayed.

Interface Info

This page appears after clicking [Interface Info] in the sub-menu that appeared after clicking [Detail] in the menu. Information about the interface installed on the copier is displayed on this page.

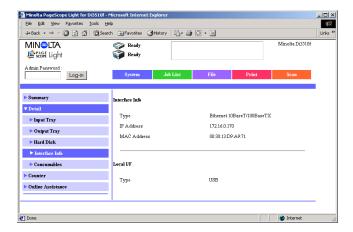

Interface Info

Type: The type of network used is displayed.

IP Address: The IP address of this machine is displayed.MAC Address: The MAC address of this machine is displayed.

Local I/F


Type: The local interface that can be used with this

machine is displayed.



Consumables

This page appears after clicking [Consumables] in the sub-menu that appeared after clicking [Detail] in the menu. The statuses of consumables for the copier and optional units is displayed on this page.

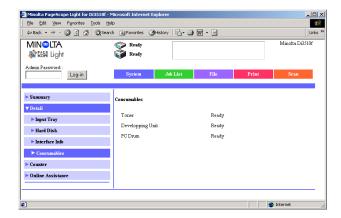

Toner: The status of the toner bottle is displayed.

Developping Unit: The status of the developping unit is displayed.

PC Drum: The status of the PC drum is displayed.

Staple Cartridge: <Available only if the built in finisher is installed>

> The status of the staple cartridge is displayed. <Available only if the built in finisher and saddle

Saddle Staple

Cartridge1: kit are installed>

The status of saddle staple cartridge 1 is

displayed.

Saddle Staple Cartridge2:

<Available only if the built in finisher and saddle

kit are installed>

The status of saddle staple cartridge 2 is

displayed.

Dust Box: <Available only if the built in finisher and punch


kit are installed>

The status of hole-punch waste container is

displayed.

Counters (Meter Count) 2.1.3

This page appears after clicking [Counter] in the menu on the [System] tab. The various counters for the copier are displayed on this page.

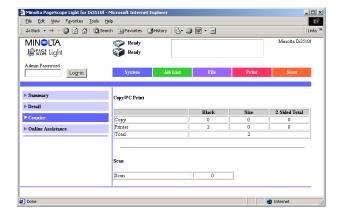

Copy/PC Print

Copy Black: The total number of copies produced by the

copier is displayed.

The number of large-size copies taken from the Copy Size:

total number of copies produced by the copier is

displayed.

Copy 2-Sided

Total:

The number of double-sided copies taken from the total number of copies produced by the

copier is displayed.

Printer Black: The total number of printouts produced by the

copier is displayed.

Printer Size: The number of large-size printouts taken from

the total number of printouts produced by the

copier is displayed.

Printer 2-Sided

Total:

The number of double-sided printouts taken from

the total number of printouts produced by the

copier is displayed.

Total: The total number of copies and printouts

produced by the copier is displayed.


Scan

Scan: The total number of scans produced by the

copier is displayed.

2.1.4 Online Assistance

This page appears after clicking [Online Assistance] in the menu on the [System] tab. Information concerning product support is displayed on this page. This information can be edited from Administrator mode. (Refer to page 3-18.)

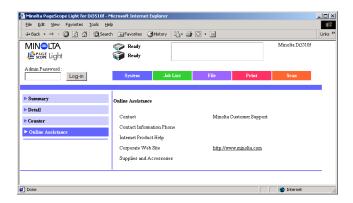

Contact: The name of the contact for the product is

displayed.

Contact

Information Phone:

Internet Product

Help:

Corporate Web

Site:

Supplies and Accessories:

The phone number of the contact for the product

is displayed.

The URL of the Web site for product information is displayed. Click the URL to go to the Web site.

The URL of the home page for the manufacturer

is displayed. Click the URL to go to the Web site.

Information for ordering supplies is displayed.

2.2 Job List Tab


The status of print jobs, transmission jobs and reception jobs can be viewed from the [Job List] tab.

2.2.1 **Job List**

If [Job List] in the menu on the [Job List] tab is clicked, a sub-menu appears, allowing you to select the type of jobs whose detailed information is displayed.

List of print jobs (Print)

This page appears after clicking [Print] in the sub-menu that appeared after clicking [Job List] in the menu. A list of jobs that are being printed or queued to be printed is displayed on this page. A maximum of 32 jobs can be listed.

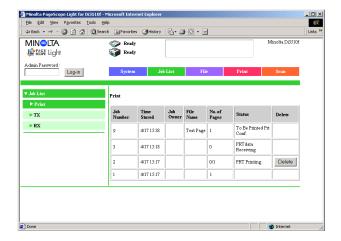

Job Number: The number assigned to the job when it was

queued in the copier is displayed.

Time Stored: The date and time that the job was received is

displayed.

Job Owner: For a printout, the name of the sender of the job

is displayed.

File Name: For a printout, the name of the file for the job is

displayed.

No. of Pages: The number of sent pages, the number of printed

pages and the total number of pages are

displayed.

Status: The status of the job being printed or queued to

be printed by the copier is displayed.

[Delete] button: Click this button to delete the print job.




Note

A print job that is deleted from PageScope Light does not immediately disappear. The same job deleting operation, however, can be performed again. To check that the job has been deleted, wait a while, and then click the [Refresh] button in the Web browser.

List of transmission jobs (TX)

This page appears after clicking [TX] in the sub-menu that appeared after clicking [Job List] in the menu. A list of jobs that are being transmitted, queued to be transmitted or have been transmitted is displayed on this page. A maximum of 32 jobs can be listed on one page, and a maximum of 296 jobs can be displayed (of which 96 are in the history).

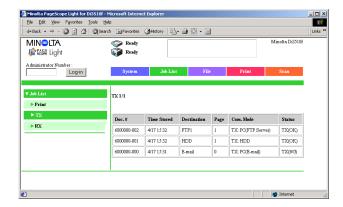

Doc. #: The number assigned to the document when the

job was queued in the copier is displayed.

Time Stored: The date and time that the job was received is

displayed.

Destination: The recipient of the job is displayed.

Page: The number of pages sent is displayed.

Com. Mode: The communication mode is displayed.



Status: The status of the job is displayed.

[Next] button: Click this button to display the next page in the


list of transmission jobs.

[Back] button: Click this button to display the previous page in

the list of transmission jobs.

List of reception jobs (RX)

This page appears after clicking [RX] in the sub-menu that appeared after clicking [Job List] in the menu. A list of jobs that are being received, queued to be received or have been received is displayed on this page. A maximum of 32 jobs can be listed on one page, and a maximum of 456 jobs can be displayed (of which 256 are in the history).

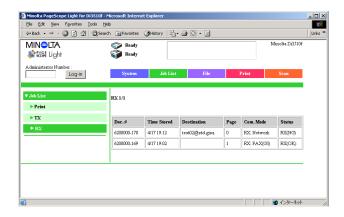

Doc. #: The number assigned to the document when the

job was queued in the copier is displayed.

Time Stored: The date and time that the job was received is

displayed.

Destination: The sender of the job is displayed.

Page: The number of pages in the job is indicated.

Com. Mode: The communication mode is displayed.

Status: The status of the job is displayed.

[Next] button: Click this button to display the next page in the

list of reception jobs.

[Back] button: Click this button to display the previous page in

the list of reception jobs.



2.3 File Tab


<Available only if the network scan kit is installed>

The mail boxes on the hard disk can be controlled from the [File] tab.

2.3.1 Mail Boxes

<Available only if the hard disk drive kit and the network scan kit are</p> installed>

This page appears after clicking [Mail Box] in the menu on the [File] tab. A list of the public box and registered mail boxes, which are used to store data scanned to the hard disk, are displayed on this page.

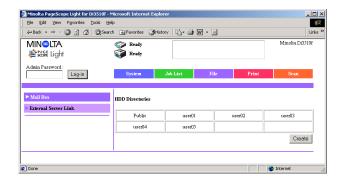

HDD Directories: The names of the public box and registered mail

boxes, which are used to store data scanned to

the hard disk, are displayed.

Click the name of the box to display a list of files stored in that box.

In order to display a list of files in a mail box, the password specified when the mail box was created is required. (Refer to page 2-13.)

[Create] button: Click this button to display the Create Mail Box

page.




Note

If the hard disk is reformatted from the copier's control panel, the mail boxes are deleted so that only the Public box remains.

Creating a mail box

Clicking the [Create] button on the HDD Directories page displays the Create Mail Box page.

A maximum of 115 mail boxes can be created.

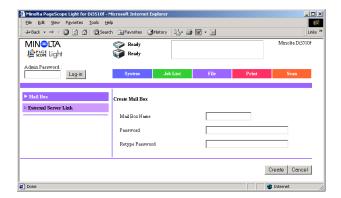

Mail Box Name: Type in the name of the mail box.

(12 alphanumeric characters or less)

Password: Type in the password.

(64 alphanumeric characters or less)

Retype Password: Type in the password again.

[Create] button: Click this button to create a mail box with the

entered details.

[Cancel] button: Click this button to cancel the creation of the mail

box and return to the HDD Directories page.




Tip

From the list of files in a mail box, the mail box name and password can be changed or the mail box can be deleted.

List of files in a mail box

Click the name of a box on the HDD Directories page to display a list of files stored in that box.

From this page, files can be deleted, a mail box name and password can be changed, and a mail box can be deleted.

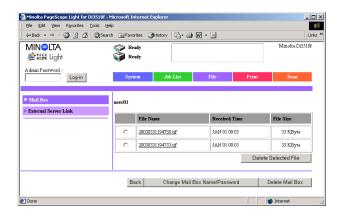

File Name: The name of the file stored in the mail box is

displayed. Click the name of a file to download

the file to the computer.

Received Time: The date and time that the file was stored in the

mail box is displayed.

File Size: The size of the file (in kilobytes) is displayed.

[Delete Selected File] button:

Select a file, and then click this button to delete the selected file from the copier's hard disk.

[Back] button: Click this button to return to the HDD Directories

page.

[Change Mail Box Name/Password]

Click this button to display a page from where the name or password specified for a mail box can

Click this button to delete the mail box that is

be changed.

[Delete Mail Box]

currently displayed.

button:

button:




Tip

When a mail box is deleted, the one-touch dialing information with that box registered as a recipient is also deleted.

2.3.2 External Server Link

This page appears after clicking [External Server Link] in the menu on the [File] tab. The FTP servers that were registered with "External Server Link" set to "Yes" (servers that appear as "Anonymous" on the copier's touch panel) are listed on this page.

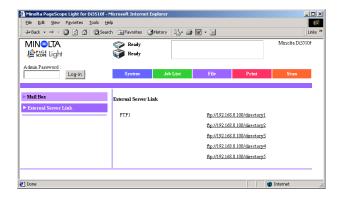

Server Address:

From the FTP servers registered in Administrator mode, the addresses of FTP servers where "External Server Link" was set to "Yes" are displayed.

Click an address to access the FTP server from the browser.



Note

A server link is access to an FTP server while logging in as "anonymous". An FTP server that does not give access to anonymous users cannot be accessed.

PageScope Light

2.4 Print Tab

<Available only if the printer controller (Pi3505e) or printer controller (Pi3505e/PS) is installed>


The printer controller settings can be specified from the [Print] tab.

2.4.1 Default Settings

If [Default Setting] in the menu on the [Print] tab is clicked, a sub-menu appears, allowing you to select the type of printer settings that are to be specified.

General settings (Settings)

This page appears after clicking [Settings] in the sub-menu that appeared after clicking [Default Setting] in the menu. The general default settings can be specified from this page.

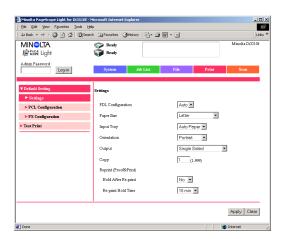

PDL Configuration: Select the PDL.

Paper Size: Specify the paper size that will be used if the

controller receives a print job where the paper

size is not specified.

Input Tray: Specify the paper source that will be used if the

controller receives a print job where the paper

source is not specified.

Orientation: Specify the image orientation that will be used if

the controller receives a print job where the

image orientation is not specified.

Output: Specify the print method that will be used if the

controller receives a print job where double-

sided printing is not specified.

(If the duplex unit is installed: "Single Sided", "2-Sided (Left Binding)" or "2-Sided (Top Binding)" If the duplex unit is not installed: "Single Sided")

Copy: Specify the number of copies that will be printed

if the controller receives a print job where the

number of copies is not specified.

Reprint (Proof&Print)

Hold After Re-

print:

Select whether or not the print data is saved after

reprinting is finished.

 Re-print Hold Time: Specify the length of time that the reprint data is

saved.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.


[Clear] button: Click this button to clear the new settings that

were specified or selected.



PCL Configuration

This page appears after clicking [PCL Configuration] in the sub-menu that appeared after clicking [Default Setting] in the menu. The default PCL configurations can be specified from this page.

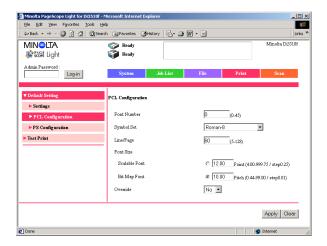

Font Number: Specify the default font number.

Symbol Set: Specify the default symbol set.

Line/Page: Specify the default number of lines per page.

Font Size

Bit Map Font: Specify the default bitmap font size.
 Scalable Font: Specify the default scalable font size.

Override: Select whether or not A4 (or Letter)-size paper is

printed on if Letter (or A4)-size paper was specified, but paper of that size is not loaded.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.


[Clear] button: Click this button to clear the new settings that

were specified or selected.

PS Configuration

<Available only if the printer controller (Pi3505e/PS) is installed>

This page appears after clicking [PS Configuration] in the sub-menu that appeared after clicking [Default Setting] in the menu. The default PS configurations can be specified from this page.

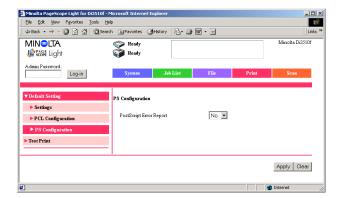

PostScript Error

Report

Select whether or not an error report is printed if

an error occurs during PS printing.

[Apply] button:

Click this button to change the setting to the new

one that was selected.


[Clear] button:

Click this button to clear the new setting that was

selected.

2.4.2 Test Print

This page appears after clicking [Test Print] in the menu on the [Print] tab. The page to be test printed can be selected and the test print can be started from this page.

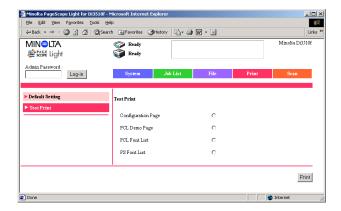

Configuration Select this radio button to print a page containing

Page: a list of the printer controller settings.

PCL Demo Page: Select this radio button to print the PCL demo

page.

PCL Font List: Select this radio button to print the PCL font list.

PS Font List: <Available only if the printer controller (Pi3505e/

PS) is installed>

Select this radio button to print the PS font list.

[Print] button: Click this button to begin printing the selected

page.


2.5 Scan Tab

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed>

The Scan mode settings can be specified from the [Scan] tab. (For details on the Scan mode, refer to "Scanner Mode User's Manual".)

2.5.1 One-Touch Key Registration

This page appears after clicking [One-Touch Key Registration] in the menu on the [Scan] tab. The recipients of scanned data can be specified from this page.

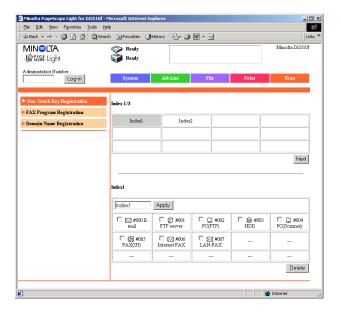

Index list: If an index name is clicked, the recipients

registered to the selected index are displayed at the bottom of the page (one-touch key/fax

program list).

36 indexes can be displayed with 12 indexes per

page.

Index name: The name of the specified index is displayed at

the top of the one-touch key/fax program list at the bottom of the page. The index name can be

changed here.

(8 alphanumeric characters or less)

One-touch key/fax program list:

The transmission mode for a registered onetouch key or the registered fax program is indicated with icons. In addition, the registered speed dial number is displayed.

In the page that appears after clicking [One-Touch Key Registration] in the menu, only items with one-touch key icons can be selected.

TX: PC(E-mail)*1

TX: PC(FTP Server)*2

TX: PC(FTP Client)*2

TX: HDD*3

TX: PC(Scanner)*4

TX: FAX(G3)*5

TX: FAX(G3-1)*⁶

TX: FAX(G3-2)*⁶

TX: InternetFAX(E-mail)*4

TX: InternetFAX(LAN-FAX)*4

FAX Program

--- Not specified

*1 Available only if the internet fax & network scan kit or network scan kit is installed

*2 Available only if the network scan kit is installed

*3 Available only if the hard disk drive kit and the network scan kit are installed

*4 Available only if the internet fax & network scan kit is installed

*5 Available only with the Di3510f, Di3010f, Di2510f or Di2010f

*6 Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is installed

Speed dial number:

The registered speed dial number is displayed.

Recipient/program

name:

The name of the recipient for registered one-

touch keys or the name of the fax program is displayed.

[Next] button: Click this button to display the next page of the

index list.

[Back] button: Click this button to display the previous page of

the index list.

[Apply] button: Click this button to register the entered index

name.


[Delete] button: Click this button to delete the selected one-touch

key/fax program from the index.

Registering a new one-touch key

Up to 540 one-touch keys can be registered. However, the total number of one-touch keys and fax programs must not exceed 540. 36 indexes can be registered with up to 15 one-touch keys per index.


- 1 In the one-touch key/fax program list at the bottom of the page, click a box where nothing has been registered ("---") to display a page for registering a new one-touch key.
- 2 Select the transmission mode to be used, and then click the [Next] button.
- 3 Specify the settings for the transmission mode, and then click the [Apply] button.

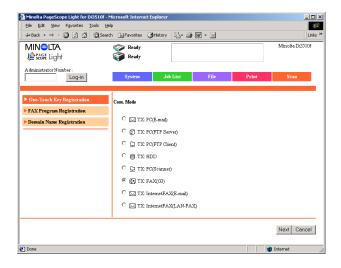

For details on the settings for each transmission mode, refer to the appropriate page indicated below.

- TX: PC(E-mail) <Available only if the internet fax & network scan kit or network scan kit is installed> → page 2-25
- TX: PC(FTP Server) < Available only if the network scan kit is installed and at least one FTP server has been registered> → page 2-26
- TX: HDD <Available only if the hard disk drive kit and the network scan kit are installed> → page 2-28
- TX: PC(Scanner) <Available only if the internet fax & network scan kit is installed> → page 2-29
- TX: FAX(G3) <Available only with the Di3510f, Di3010f, Di2510f or Di2010f> → page 2-30
- TX: FAX(G3-1) <Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is installed> → page 2-30
- TX: FAX(G3-2) <Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is installed> → page 2-30
- TX: InternetFAX(E-mail) <Available only if the internet fax & network scan kit is installed> → page 2-31
- TX: InternetFAX(LAN-FAX) <Available only if the internet fax & network scan kit is installed> → page 2-32

Specifying TX: PC(E-mail) settings

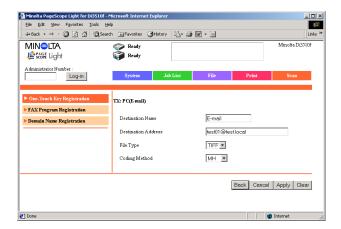

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Type in the e-mail address of the recipient. Address:

(64 alphanumeric characters or less)


File Type and Coding Method:

File type: Select the file type for PC (e-mail) transmissions.

 Coding method: Select the coding format for PC (e-mail)

transmissions.

Specifying TX: PC(FTP Server) settings

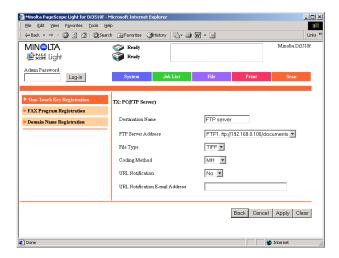

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

FTP Server Address:

From the list, select the address of the FTP

server where the data will be sent.

The FTP servers that were registered by clicking [Network] → [FTP Server] → [FTP Server Registration] in Administrator mode are

displayed in the list. For details on registering an

FTP server, refer to page 3-55.

File Type and Coding Method:

File type: Select the file type for PC (FTP server) transmissions.

Coding method: Select the coding format for PC (FTP server)

transmissions.

URL Notification: Select whether or not an e-mail should be sent as

notification of the URL where the image data is


saved.

URL Notification E- Type in the e-mail address where the URL

mail Address: notification is to be sent.

(64 alphanumeric characters or less)

Specifying TX: PC(FTP Client) settings

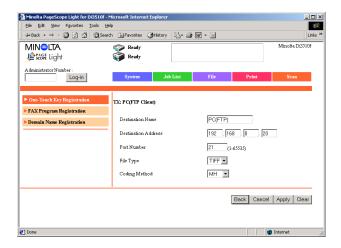

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Type in the IP address of the recipient (client

Address: computer).

Port Number: Type in the port number.

File Type and Coding Method:


• File type: Select the file type for PC (FTP client)

transmissions.

• Coding method: Select the coding format for PC (FTP client)

transmissions.

Specifying TX: HDD settings

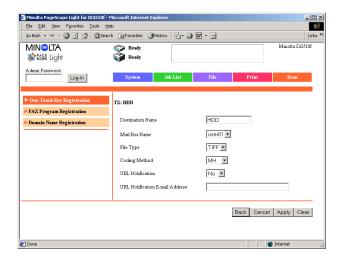

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Mail Box Name: From the list, select the mail box where the data

will be saved during HDD transmissions. For details on creating mail boxes, refer to

page 2-12.

File Type and Coding Method:

File type: Select the file type for HDD transmissions.

• Coding method: Select the coding format for HDD transmissions.

URL Notification: Select whether or not an e-mail should be sent as

notification of the URL where the image data is

saved.


URL Notification E-

mail Address: notification is to be sent.

Type in the e-mail address where the URL

(64 alphanumeric characters or less)

Specifying TX: PC(Scanner) settings

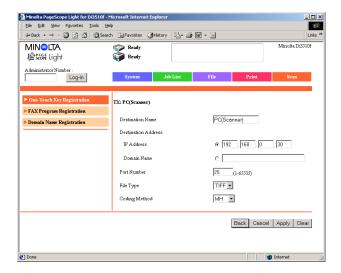

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Address:

Select the format for specifying the recipient.

(IP Address or Domain Name)

• IP Address: Type in the IP address of the recipient.

• **Domain Name:** Type in the domain name for the recipient.

(64 alphanumeric characters or less)

*This parameter appears if "DNS Settings" is set to "Yes" on the page that appears after clicking "TCP/IP" in the sub-menu that appeared after clicking "Common Setting" in the menu on the [Network] tab after logging into the Administrator

mode.

Port Number: Type in the port number.


File Type and Coding Method:

• File type: Select the file type for PC (Scanner) transmissions.

• Coding method: Select the coding format for PC (Scanner)

transmissions.

Specifying TX: FAX(G3/G3-1/G3-2) settings

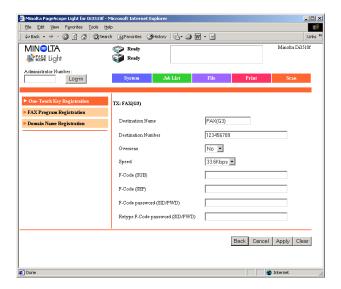

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Type in the fax number of the recipient.

(Up to 64 characters including 0 through 9, "*",

"#", "P"(pause) and "T"(tone))

Overseas: Select whether or not an overseas transmission

is to be sent.

Speed: Select the speed of the fax transmission.

F-Code (SUB): Type in the sub-address (SUB) of the F code.

(Up to 20 characters including 0 through 9, "*"

and "#")

F-Code (SEP): Type in the selective polling address (SEP) for

the F code.

(Up to 20 characters including 0 through 9, "*"

and "#")

F-Code password

(SID/PWD):

Number:

Type in the password (SID/PWD) for the F code.

(Up to 20 characters including 0 through 9, "*"


and "#")



Retype F-Code password (SID/ PWD):

Retype the password (SID/PWD) for the F code.

Specifying TX: InternetFAX(E-mail) settings

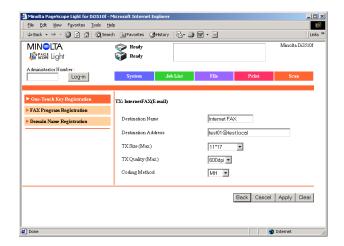

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Type in the e-mail address of the recipient.

Address: (64 alphanumeric characters or less)

TX Size (Max.): Select the maximum size for transmissions.

TX Quality (Max.): Select the maximum resolution for transmissions.

Coding method: Select the coding format for transmissions.




Note

If the recipient's transmission size, transmission resolution and coding method settings are incompatible, an error will occur.

PageScope Light



Specifying TX: InternetFAX(LAN-FAX) settings

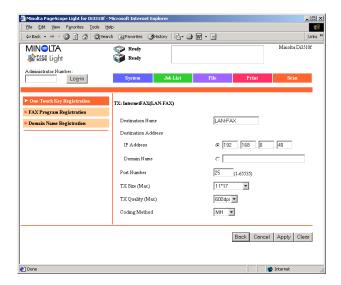

Destination Name: Type in the name of the recipient that will be

displayed on the one-touch key in the copier's

control panel.

(12 alphanumeric characters or less)

Destination Address:

Select the format for specifying the recipient.

(IP Address or Domain Name)

• IP Address: Type in the IP address of the recipient.

• **Domain Name:** Type in the domain name for the recipient.

(64 alphanumeric characters or less)

*This parameter appears if "DNS Settings" is set to "Yes" on the page that appears after clicking "TCP/IP" in the sub-menu that appeared after clicking "Common Setting" in the menu on the [Network] tab after logging into the Administrator

mode.

Port Number: Type in the port number.

TX Size (Max.): Select the maximum size for transmissions.

TX Quality (Max.): Select the maximum resolution for transmissions.

Coding method: Select the coding format for transmissions.



Note

If the recipient's transmission size, transmission resolution and coding method settings are incompatible, an error will occur.


Changing the settings for a registered one-touch key

In the one-touch key/fax program list at the bottom of the page, click the one-touch key whose settings you wish to change. The One-Touch Key Registration page appears. Change the settings, and then click the [Apply] button.



2.5.2 FAX Program Registration

This page appears after clicking [FAX Program Registration] in the menu on the [Scan] tab. The recipients of scanned data can be specified from this page.

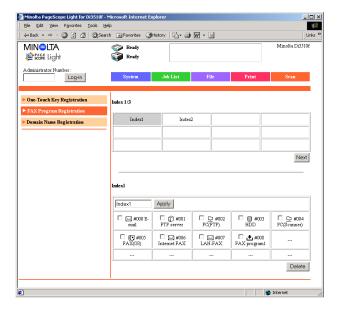

Index list: If an index name is clicked, the recipients

registered to the selected index are displayed at the bottom of the page (one-touch key/fax

program list).

36 indexes can be displayed with 12 indexes per

cage.

Index name: The name of the specified index is displayed at

the top of the one-touch key/fax program list at the bottom of the page. The index name can be

changed here.

(8 alphanumeric characters or less)

One-touch key/fax program list:

The transmission mode for a registered onetouch key or the registered fax program is indicated with icons. In addition, the registered speed dial number is displayed.

In the page that appears after clicking [FAX Program Registration] in the menu, only items with fax program icons can be selected.

TX: PC(E-mail)*1

TX: PC(FTP Server)*2

TX: PC(FTP Client)*2

↑ TX: HDD*3

TX: PC(Scanner)*4

TX: FAX(G3)*5

TX: FAX(G3-1)*⁶

TX: FAX(G3-2)*6

 $TX: InternetFAX(E-mail)^{*4}$

TX: InternetFAX(LAN-FAX)*4

FAX Program

Not specified

*1 Available only if the internet fax & network scan kit or network scan kit is installed

*2 Available only if the network scan kit is installed

*3 Available only if the hard disk drive kit and the network scan kit are installed

*4 Available only if the internet fax & network scan kit is installed

*5 Available only with the Di3510f, Di3010f, Di2510f or Di2010f

*6 Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is installed

Speed dial number:

The registered speed dial number is displayed.

Recipient/program

name:

The name of the recipient for registered onetouch keys or the name of the fax program is

displayed.

[Next] button: Click this button to display the next page of the

index list.

[Back] button: Click this button to display the previous page of

the index list.

[Apply] button: Click this button to register the entered index

name.


[Delete] button: Click this button to delete the selected one-touch

key/fax program from the index.

Registering a new fax program

Up to 30 fax programs can be registered. However, the total number of one-touch keys and fax programs must not exceed 540.

- 1 In the one-touch key/fax program list at the bottom of the page, click a box where nothing has been registered ("---") to display a page for registering a new fax program.
- 2 Specify the various settings, and then click the [Apply] button.

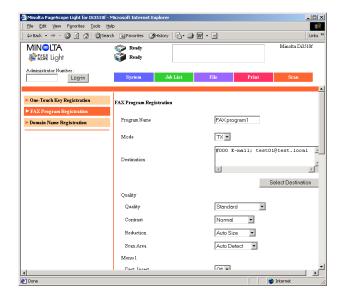

Program Name: Type in the name of the fax program.

(12 alphanumeric characters or less)

Mode: Select the fax program type.

As a default, "TX" is selected.

Destination: Click the [Select Destination] button, and then

select a recipient (maximum of 300 locations) from the registered one-touch keys. A registered fax program cannot be selected as a recipient.

Quality

Quality: Select the image quality for transmissions.

• **Contrast**: Select the image contrast for transmissions.

• **Reduction:** Select the zoom ratio for transmissions.

• Scan Area: Select the area that is scanned during

transmissions.

Menu 1 <Available only with the Di3510f, Di3010f, Di2510f or Di2010f, or if the Internet Fax & Network Scan Kit is installed>

• TSI: If a transmission source is specified, the

information about the source is printed at the

edge of the received document.

• **Dest. Insert:** The name of the recipient can be written on the

document that is sent so the intended recipient can easily be identified on the receiving end.

• TX Report: Select how the report showing the transmission

result is output.

• 2in1: <Available only if the duplexing document feeder

is installed>

Two pages of the document can be scanned and sent as one document page. This can be used, for example, to reduce two A4-size document

pages to one A4-size page.

· 2-Sided TX:

<Available only if the duplexing document feeder

is installed>

Double-sided document pages can be scanned and sent. The document will be received as single-sided pages.



Note

"2-Sided TX" cannot be used together with "Real-Time" or "2in1".

Margin: Select the document binding margin for double-

sided transmissions.

Original Direction: Select the desired document orientation for

double-sided transmissions.

• Rotation TX: Specify the rotation for transmission with the

registered fax program.

Priority TX: If documents are queued for transmission, a

document specified as urgent can be given

priority and sent.



Note

Priority TX cannot be used if multiple recipients are specified.

"Priority TX" cannot be used together with "Timer" or "TX Marker".

• Timer:

A document can be scanned and stored in the memory to be sent at a specified time.



Note

"Timer" cannot be used together with "Real-Time" or "Priority TX".

Time: Specify the time for sending timer transmissions.

• TX Marker:

<Available only if the TX Marker Stamp Unit is

installed>

After specifying that a stamp be added to the document indicating that it has been sent, each page of the document can be verified for whether

or not it has been scanned.

"TX Marker" cannot be used together with "2-

Sided TX".

• Real-Time: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, and if the duplexing

document feeder is installed>

Each page of the document can be scanned according to the transmission status. This ensures that even documents with many pages can be sent.



Note

"Real-Time" cannot be used if multiple recipients are specified.

"Real-Time"cannot be used together with "Timer" or "2-Sided TX".

Password TX:

Data can only be transmitted if the same transmission password has been registered at the origin and by the recipient. Password transmission is used, for example, to prevent the wrong recipient from receiving important documents.

The transmission password must first be specified. Refer to page 3-32.

Remote Copy:

Two or more copies of the same document can be sent to the recipient. The number of copies specified here are printed by the recipient.

Copies: Type in the number of copies for remote copying.

• Conf. TX: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f>

Specify mailbox transmission for the registered

fax program.

Password: Specify the password used with mailbox

transmission for the registered fax program.

(4-digit number)

Mail Number: Specify the mailbox number used with mailbox

transmission for the registered fax program.

(3-digit number)



Note

"Real-Time", "Password TX", "Remote Copy" and "Conf. TX" are available only with normal fax transmissions using a common telephone line.

Menu 2

• **Subject** Specify the subject for the registered fax

Selection: program.

For details on specifying how the subject is

registered, refer to page 3-52.

 Set Reply E-mail Address: <Available only if the internet fax & network scan

kit or network scan kit is installed>

Click the [Set Reply E-mail Address] button, and then, from the registered one-touch keys, select the e-mail address that replies are sent to (only 1 location). However, the only recipients that can be selected are those where the transmission mode of the one-touch key was set to "TX: PC(E-

mail)" or "TX: InternetFAX(E-mail)".

• **Set File Name:** <Available only if the internet fax & network scan

kit or network scna kit is installed>

Specify the file name for the registered fax

program.

(16 alphanumeric characters or less)

• [Apply] button: Click this button to register the fax program with

the specified or selected settings.

• [Cancel] button: Click this button to cancel the registration of the

fax program.

• [Clear] button: Click this button to clear the new settings that

were specified or selected.

Changing the settings for a registered fax program

In the one-touch key/fax program list at the bottom of the page, click the fax program whose settings you wish to change. The FAX Program Registration page appears. Change the settings, and then click the [Apply] button.



Note


With fax programs specified as polling reception or batch transmission, the settings cannot be changed using PageScope Light. The settings for these types of fax programs can only be changed from the control panel of the copier.



2.5.3 Domain Name Registration

<Available only if the internet fax & network scan kit or network scan kit is installed>

This page appears after clicking [Domain Name Registration] in the menu on the [Scan] tab. Some domain names, which can be used to enter addresses from the copier's control panel, can be registered in advance from this page. The domain names registered here can be recalled when registering addresses from the copier's control panel.

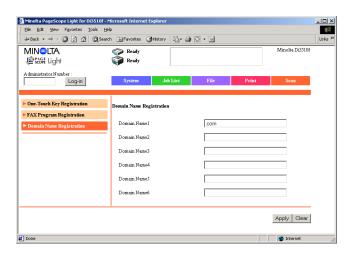

Domain Name1 Type in the domain name.

through 6: (64 alphanumeric characters or less)

[Apply] button: Click this button to register the entered domain

name.

[Clear] button: Click this button to clear the entered setting.

3 Administrator Mode

By logging into PageScope Light in Administrator mode, system settings can be specified or checked.

For details on logging into the Administrator mode, refer to page 1-4.

3.1 System Tab


The settings concerning the system configuration of the copier can be specified from the [System] tab.

3.1.1 User's Choice

If [User's Choice] in the menu on the [System] tab is clicked, a sub-menu appears, allowing you to select different pages containing various default settings that are selected when the copier is turned on or the control panel is reset.

User's Choice 1

This page appears after clicking [User's Choice 1] in the sub-menu that appeared after clicking [User's Choice] in the menu.

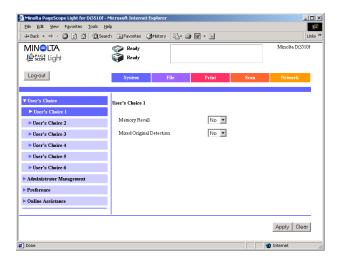

Memory Recall:

Select whether or not the "Memory Recall" function is used.

Mixed Original Select whether or not the "Mixed Original Detection: Detection" function is selected as a default.

[Apply] button: Click this button to change the settings to the


new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.

User's Choice 2

This page appears after clicking [User's Choice 2] in the sub-menu that appeared after clicking [User's Choice] in the menu.

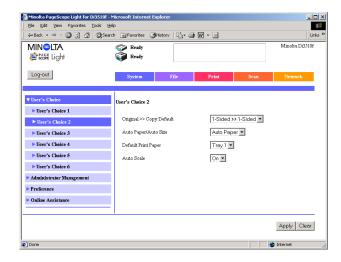

Original → Copy Default:

<Available only if the duplex unit and switchback

unit are installed>

Specify the Original \rightarrow Copy settings that are selected when the copier is turned on or the

control panel is reset.

Auto Paper/Auto

Size:

Select the setting that is selected when the copier is turned on or the control panel is reset.

Default Print Paper:

Select the paper drawer that is selected as a

default.

Auto Scale:

Select whether or not the recommended zoom ratio is specified when a 2in1 or 4in1 copy mode

is selected.

[Apply] button: Click this button to change the settings to the


new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.

User's Choice 3

This page appears after clicking [User's Choice 3] in the sub-menu that appeared after clicking [User's Choice] in the menu.

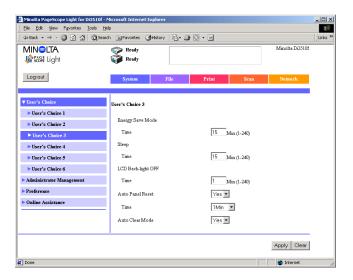

Energy Save Mode

Time:

Specify the desired length of time until the copier

automatically enters Energy Save mode.

Sleep Time: <Available only if "Sleep" on the User's Choice

6 page is set to "Yes">

Specify the desired length of time until the copier

automatically enters Sleep mode.

Time: Specify the desired length of time until the LCD

backlight goes off.

Auto Panel Reset: Select whether or not the auto panel reset

operation is performed.

• Time: Specify the desired length of time until the auto

panel reset operation is performed.

Auto Clear Mode: Select whether or not the control panel is reset

when the magnetic card is removed from the data controller or the key counter is removed.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

User's Choice 4

This page appears after clicking [User's Choice 4] in the sub-menu that appeared after clicking [User's Choice] in the menu.

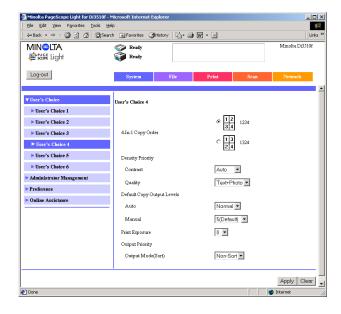

4-In-1 Copy Order: Select the page order when a 4in1 copy mode is

selected.

Density Priority

• **Contrast:** Select the default contrast for the Density setting.

• Quality: Select the default image quality for the Density

setting.

Administrator Mode

Default Copy Output Levels

• Auto: Select the default density level when "Density

Priority" is set to "Auto".

• Manual: Select the default density level when "Density

Priority" is set to "Manual".

Print Exposure: <Only available with Di3510/Di3010/Di3510f/

Di3010f>

Specify the default density level for printing.

Output Priority

• Output Select the default sorting setting.

Mode(Sort):

(Staple):

• Output Mode <Only when a built in finisher is installed>

Select the default stapling setting.

• Output Mode <Only when a built in finisher and punch kit are (Punch): installed>

Select the default hole-punching setting.

[Apply] button: Click this button to change the settings to the


new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.

User's Choice 5

This page appears after clicking [User's Choice 5] in the sub-menu that appeared after clicking [User's Choice] in the menu.

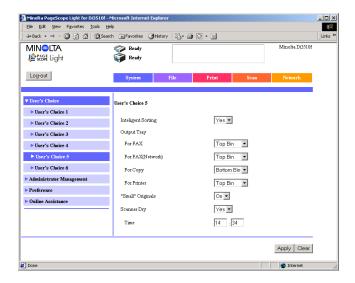

Intelligent Sorting:

If "ON" is selected, the "Non-Sort" setting is automatically selected if a document loaded into the duplexing document feeder consists of only one page, or the "Sort" setting is automatically selected if the document consists of two or more pages.

Output Tray:

<Available only if a built in finisher is installed>

For FAX:

<Available only with the Di3510f, Di3010f,

Di2510f or Di2010f>

Select the paper output tray for fax output.

• For FAX(Port1):

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is

installed>

Select the paper output tray for fax output (port

• For FAX(Port2):

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is</p>

installed>

Select the paper output tray for fax output (port

2).

Administrator Mode 3

• For <Available only if the internet fax & network scan

FAX(Network): kit or network scan kit is installed>

Select the paper output tray for fax output

(network).

• For Copy: Select the paper output tray for copies.

• For Printer: <Available only if the printer controller is

installed>

Select the paper output tray for printouts.

"Small" Originals: Select whether or not copying is possible when a

special document size is not available with the "Auto Paper" setting. If "On" is selected, the document is copied according to the paper size

selected in "Default Print Paper".

Scanner Dry: Specify whether or not to periodically dehumidify

the scanner.

Time: Specify the time to begin periodically

dehumidifying the scanner.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

User's Choice 6

This page appears after clicking [User's Choice 6] in the sub-menu that appeared after clicking [User's Choice] in the menu.

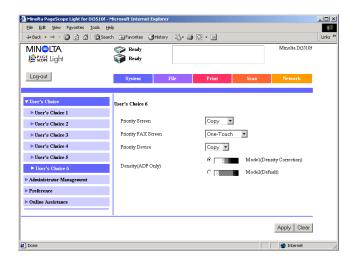

Priority Screen: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed> Specify the application that is used as a default, for example, when the control panel is reset.

Priority FAX Screen (Priority Mail Screen): <[Priority FAX Screen]: Available only with the Di3510f, Di3010f, Di2510f or Di2010f; [Priority Mail Screen]: Available only if the network scan kit or the internet fax & network scan kit is installed onto the Di3510, Di3010, Di2510 or Di2010>

Select the screen that is given priority in the fax

screen (e-mail screen).

Priority Device: <Available only if the printer controller is

installed>

Select whether copying or printing has priority when a print job is received from a computer.

Administrator Mode



Density(ADF Only): < Available only if the duplexing document feeder

is installed>

Select the copy density level that is selected when a duplexing document feeder is installed.

Mode1 (Density Correction): For a normal document (for example, one created with a word processor)

Mode2(Default): For a faint document that you wish to improve

Sleep: <Available only if "Disable Sleep Mode" (on the

page displayed by clicking [Administrator Settings] in the sub-menu that appeared after clicking [Administrator Management] in the

menu) is set to "ON".>

Select whether or not the Sleep mode is used.

[Apply] button: Click this button to change the settings to the

new ones that were selected.

[Clear] button: Click this button to clear the new settings that


were selected.

3.1.2 Administrator Management

If [Administrator Management] in the menu on the [System] tab is clicked, a sub-menu appears, allowing you to select different pages containing specify various settings for operating and managing how the copier is controlled.

Date/Time Set

This page appears after clicking [Date/Time Set] in the sub-menu that appeared after clicking [Administrator Management] in the menu.

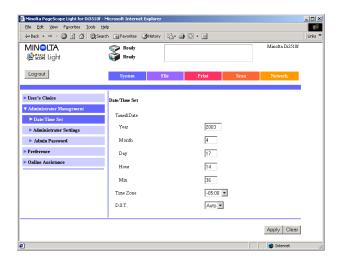

Time&Date: Specify the current date and time.

• Year: 2003 through 2060

Month: 1 through 12
 Day 1 through 31
 Hour: 00 through 23
 Min: 00 through 59

Time Zone: Select the time zone. The time zone appears as

a time difference from Standard Time and is included in the header when e-mails are sent.

D.S.T.: Specify whether or not the time should be

adjusted for daylight savings time.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

Administrator Settings

This page appears after clicking [Administrator Settings] in the sub-menu that appeared after clicking [Administrator Management] in the menu.

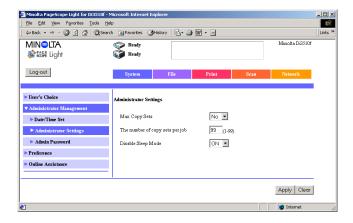

Max. Copy Sets: Select whether or not to limit the number of

copies that can be printed at one time.

The number of Type in the maximum number of copies when the copy sets per job:

Type in the maximum number of copies when the number of copies that can be printed at one time

is limited.

Disable Sleep Select whether to turn on or off "Sleep Mode

Mode: Setting" on the [User's Choice 6] page.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

Administrator Password

This page appears after clicking [Admin Password] in the sub-menu that appeared after clicking [Administrator Management] in the menu. The administrator password can be changed from this page.

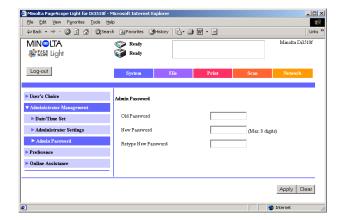

Old Password: Type in the administrator password before it is

changed. (blank or number with a maximum of 8

digits)

New Password: Type in the new administrator password.

(blank or number with a maximum of 8 digits)

Retype New

Password:

Retype the new administrator password.

[Apply] button: Click this button to change the setting to the new


one that was entered.

[Clear] button: Click this button to clear the entered setting.

Account Registration

<Available only if a "100 Accounts" setting is selected from the copier. For details on setting the "Copy Track Mode" parameter, refer to the User Manual for the copier.>

This page appears after clicking [Account Registration] in the sub-menu that appeared after clicking [Administrator Management] in the menu.

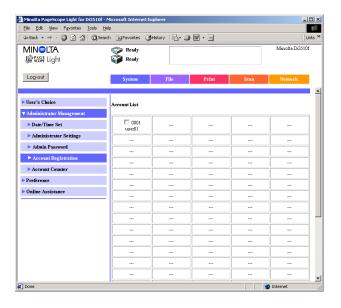

Account List: The account numbers and names of registered

accounts are displayed.


If no account has been registered in the box,

("---") is displayed.

[Delete] button: Click this button to delete the registered account.

Registering a new account

- In the Account List, click a box where an account has not been registered ("---") to display a page for registering a new account.
- Specify the various settings, and then click the [Apply] button.

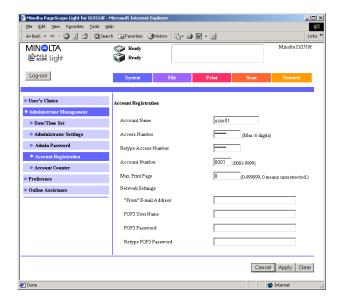

Account Name: Type in the name of the account.

(12 alphanumeric characters or less)

Access Number: Type in the account access code.

(number with a maximum of 6 digits)

Retype Access

Account Number:

Number:

Retype the account access code.

Type in the account number.

Max. Print Page: Type in the maximum number of pages that can

be printed by the account.

Network Settings: < Available only if the network scan kit or internet

fax & network scan kit is installed>
These settings are specified to prevent

anonymous e-mail from being sent. To identify which account sent e-mail messages, specify a "From" E-mail Address. (These parameters appear only when bit 5 of software switch mode 366 is set to 1.) To receive authentication from the POP3 server before the e-mail is sent to the SMTP server, specify a POP3 User Name and POP3 Password. (These parameters appear only when bit 5 of software switch mode 366 is set to 1 and bit 6 of mode 350 is set to 1.)

"From" E-mail

Address:

Type in the e-mail address for the account. (64

alphanumeric characters or less)

POP3 User Name: Type

Type in the POP3 user name for the account. (64

alphanumeric characters or less)

POP3 Password:

Type in the POP3 password for the account. (32

alphanumeric characters or less)

Retype POP3
Password:

Retype the POP3 password for the account.

[Cancel] button:

Click this button to cancel the registration of the

account and return to the Account List page.

[Apply] button:

Click this button to register the account with the

entered information.

[Clear] button: Click this button to clear the entered setting.



Tip

For details on setting the soft switches, refer to the Scanner Mode User Manual.


Changing the settings for a registered account

In the Account List, click the account whose settings you wish to change. The Account Registration page appears. Change the settings, and then click the [Apply] button.

Account Counter

<Available only if a "100 Accounts" setting is selected from the copier. For details on setting the "Copy Track Mode" parameter, refer to the User Manual for the copier.>

This page appears after clicking [Account Counter] in the sub-menu that appeared after clicking [Administrator Management] in the menu.

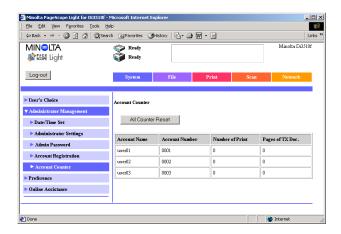

Account Name: The account name is displayed.

Account Number: The account number is displayed.

Number of Print: The number of pages printed by the account is

displayed.

Pages of TX Doc.: The number of pages transmitted by the account


is displayed.

[All Counter Reset] button:

<Not displayed if the accounts are being managed by PageScope Remote Care> Click this button to reset the counters for the number of prints and the number of transmitted pages for all accounts.

3.1.3 Preference

This page appears after clicking [Preference] in the menu on the [System] tab. The display language for PageScope Light can be specified from this page.

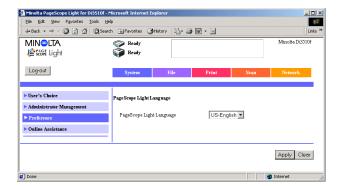

PageScope Light Select

Language:

Select the display language of PageScope Light.


[Apply] button: Click this button to change the setting to the new one that was selected.

[Clear] button: Click this button to clear the new setting that was

selected.

3.1.4 Online Assistance

This page appears after clicking [Online Assistance] in the menu on the [System] tab. The information concerning product support can be specified from this page.

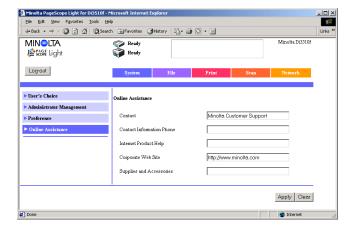

Contact: Type in the name of the contact for the product.

Contact Type in the phone number of the contact for the

Information Phone: product.

Internet Product

Help:

Type in the URL of the Web site for product

information.

Corporate Web

Site:

Type in the URL of the home page site for

product information.

Supplies and Accessories: Type in the contact information for ordering

supplies and accessories.

[Apply] button: Click this button to change the settings to the

new ones that were entered.

[Clear] button: Click this button to clear the entered settings.


3.2 File Tab

<Available only if the hard disk drive kit and the network scan kit are installed>

The mail boxes on the hard disk can be controlled from the [File] tab.

3.2.1 Mail Boxes

This page appears after clicking [Mail Box] in the menu on the [File] tab. A list of the public box and registered mail boxes, which are used to store data scanned to the hard disk, are displayed on this page.

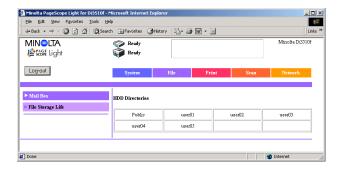

Perform operations as described for the list of mail boxes in the Mail mode. (Refer to page 2-12.)



Note

If the hard disk is reformatted from the copier's control panel, the mail boxes are deleted so that only the Public box remains.




Tip

In Administrator mode, mail boxes can not be created.

When a mail box is deleted, the one-touch dialing information with that box registered as a recipient is also deleted.

3.2.2 File Storage Life

This page appears after clicking [File Storage Life] in the menu on the [File] tab. From this page, the length of time that files are saved on the hard disk can be specified.

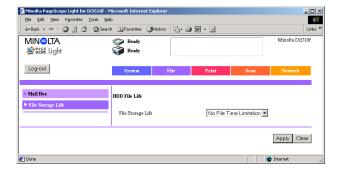

File Storage Life: Select the length of time that files are saved on

the hard disk.

[Apply] button: Click this button to change the setting to the new

one that was selected.

[Clear] button: Click this button to clear the new setting that was

selected.


3.3 Print Tab

<Available only if the printer controller is installed>

The printer controller settings can be specified from the [Print] tab.

3.3.1 IPP

This page appears after clicking [IPP] in the menu on the [Print] tab. The IPP print settings can be specified from this page.

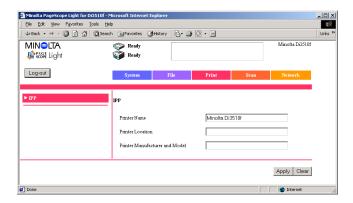

Printer Name: Type in the name of the printer. (127

alphanumeric characters or less)

Printer Location: Type in the location of the printer. (127)

alphanumeric characters or less)

Printer

Manufacturer and

Model:

Type in the manufacturer information for the printer. (127 alphanumeric characters or less)

[Apply] button: Click this button to change the settings to the

new ones that were entered.

[Clear] button: Click this button to clear the entered settings.

3.4 Scan Tab

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed>


The Scan mode settings can be specified from the [Scan] tab. (For details on the Scan mode, refer to "Scanner Mode User's Manual".)

3.4.1 One-Touch Key Registration

If [One-Touch Key Registration] in the menu on the [Scan] tab is clicked, a sub-menu appears, allowing you to select different pages for importing or exporting one-touch key information.

File Export

This page appears after clicking [File Export] in the sub-menu that appeared after clicking [One-Touch Key Registration] in the menu. Copier one-touch key information can be exported as a CSV file from this page.

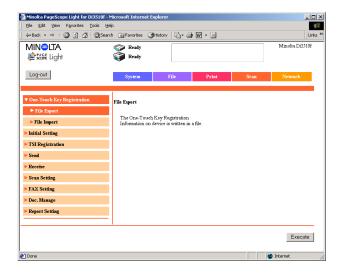


[Execute] button:

Click this button to export one-touch key information from the copier to a CSV file. (The File Download dialog box appears.)

File Import

This page appears after clicking [File Import] in the sub-menu that appeared after clicking [One-Touch Key Registration] in the menu. From this page, one-touch key information can be imported into the copier from a CSV file on the computer.

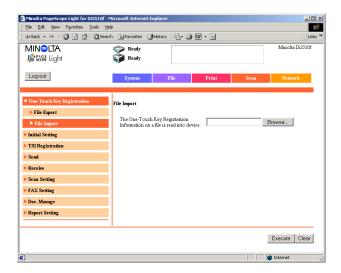

[Refer to] button: Click this button to browse for the CSV file that

contains the one-touch key information.

[Execute] button: Click this button to read the one-touch key

information in the specified CSV file and write the


information to the copier.

[Clear] button: Click this button to clear the specified settings.

3.4.2 Initial Setting

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f>

This page appears after clicking [Initial Setting] in the menu on the [Scan] tab. The default fax settings can be specified from this page.

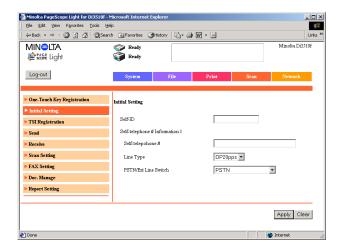

Self-ID: Type in the unit's ID.

(12 alphanumeric characters or less)

Self-telephone # Information 1

Switch:

• Self-telephone #: Type in the unit's telephone number.

Up to 20 characters including 0 through 9 and +

• **Line Type:** Select the type of telephone line that is being used.

• PSTN/Ext Line Select whether an internal or an external line is

being used.

Self-telephone # Information 2 <Available only if the multi port is installed>

• **Self-telephone** #: Type in the unit's telephone number.

Up to 20 characters including 0 through 9 and +

• **Line Type:** Select the type of telephone line that is being used.

Switch: being used.


[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

3.4.3 TSI Registration

This page appears after clicking [TSI Registration] in the menu on the [Scan] tab. From this page, source information for faxes and scans can be specified.

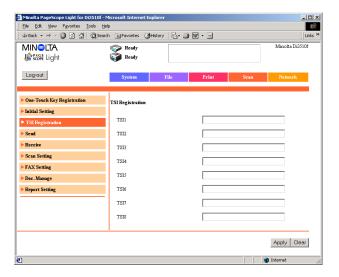

TSI1 through 8: Type in the name of the transmission source.

(40 alphanumeric characters or less)


[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

3.4.4 Send

This page appears after clicking [Send] in the menu on the [Scan] tab. The transmission settings for faxes and scans can be specified from this page.

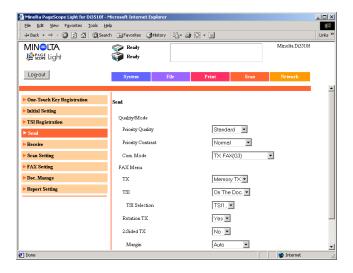

Quality/Mode

Priority Quality: Select the image quality that has priority when

fax programs are registered.

• Priority Contrast: Select the contrast setting that has priority when

fax programs are registered.

• Com. Mode: Select the transmission mode that has priority

when fax programs are registered.

(Available only with the Di3510f, Di3010f,

Di2510f or Di2010f: [TX: FAX(G3)]

Available only with the Di3510f, Di3010f, Di2510f or Di2010f, and if the multi port is installed: "TX:

FAX(G3-1)" or "TX: FAX(G3-2)"

When the internet fax & network scan kit is

installed: "TX: PC(E-mail)" or "TX:

InternetFAX(E-mail)"

When the network scan kit is installed: "TX:

PC(E-mail)")

FAX Menu

• TX: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, and if the duplexing

document feeder is installed>

Select the transmission method that has priority

when fax programs are registered.

• **TSI:** <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed> Select the transmission source information setting that has priority when fax programs are

registered.

• TSI Selection: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, or if the network scan kit or internet fax & network scan kit is installed> Select the transmission source information that has priority when fax programs are registered.

• Rotation TX: Select the rotation setting for transmission that

has priority when fax programs are registered.

• Margin: <Available only if the duplexing document feeder

is installed>

Select the document binding margin setting for double-sided transmissions that has priority

when fax programs are registered.


[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

3.4.5 Receive

This page appears after clicking [Receive] in the menu on the [Scan] tab. The reception settings for faxes and scans can be specified from this page.

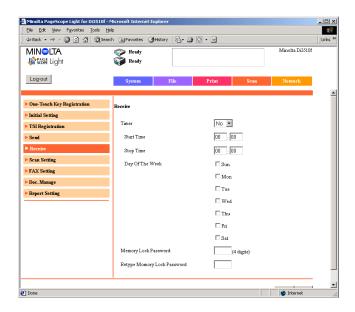

Timer: Select whether to enable or disable the function

for printing received documents only within the

specified time period.

• **Start Time:** Type in the starting time for the specified time

period.

• **Stop Time:** Type in the ending time for the specified time period.

• Day Of The Specify

Week:

Specify the days of the week when the timer is enabled.

CHADICU

Select the check boxes for the days of the week

to be specified.

Memory Lock Type in a password to control printing.

Password: (blank or 4 digits)

Retype Memory Retype the password to control printing.

Lock Password: (blank or 4 digits)

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

3.4.6 Scan Setting

<Available only if the internet fax & network scan kit or network scan kit is</p> installed>

This page appears after clicking [Scan Setting] in the menu on the [Scan] tab. The scanning settings can be specified from this page.

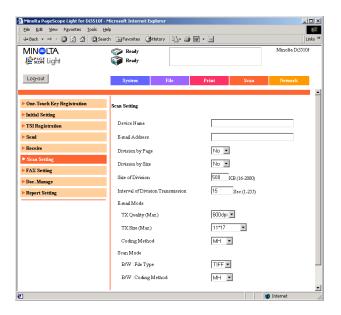

Device Name: Type in the name of the device. This is used as

part of the subject with Internet fax transmissions

or Scan to E-mail transmissions. (16 alphanumeric characters or less)

F-mail Address: Type in the e-mail address of this unit.

(64 alphanumeric characters or less)

Division by Page: Select whether or not scan data that exceeds the

specified file size is divided into its separate

pages and sent.

Division by Size: Select whether or not scan data that exceeds the

specified file size is divided into binary parts and

sent.

Size of Division: Type in the division size of sent e-mails.

Interval of Division Type in the length of time between the Transmission:

transmission of each e-mail when data is sent in

parts.

E-mail Mode: <Available only if the internet fax & network scan

kit is installed>

 TX Quality (Max.): Select the maximum resolution that has priority with Internet fax (e-mail) transmissions or Internet fax (LAN-FAX) transmissions

The transmission resolution specified here is the default resolution when registering new one-

touch keys.

• TX Size (Max.): Select the maximum transmission size that has

priority with Internet fax (e-mail) transmissions or

Internet fax (LAN-FAX) transmissions
The transmission size specified here is the default transmission size when registering new

one-touch keys.

• Coding method: Select the coding method that has priority with

Internet fax (e-mail) transmissions or Internet fax

(LAN-FAX) transmissions

The coding method specified here is the default coding method when registering new one-touch

kevs.

Scan Mode

• B/W: File type: Select the file type that has priority with PC (e-

mail) transmissions, PC (FTP server)

transmissions, PC (FTP client) transmissions,

HDD transmissions or PC (scanner)

transmissions.

The file type specified here is the default file type

when registering new one-touch keys.

 B/W: Coding method: Select the coding method that has priority with PC (e-mail) transmissions, PC (FTP server)

transmissions, PC (FTP client) transmissions,

HDD transmissions or PC (scanner)

transmissions.

The coding method specified here is the default coding method when registering new one-touch

keys.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that


3.4.7 FAX Setting

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f>

If [FAX Setting] in the menu on the [Scan] tab is clicked, a sub-menu appears, allowing you to select different pages containing various fax settings that are to be specified.

RX Functions

This page appears after clicking [RX Functions] in the sub-menu that appeared after clicking [FAX Setting] in the menu. Settings for fax reception functions can be specified from this page.

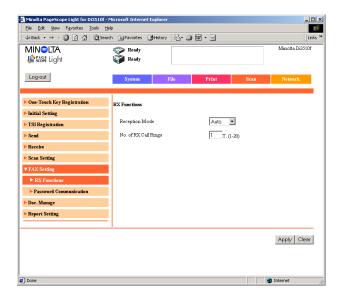

Reception Mode: Select the fax reception method.

No. of RX Call Type in the number of rings for a fax that is being

Rings: received.


[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

Password Communication

This page appears after clicking [Password Communication] in the submenu that appeared after clicking [FAX Setting] in the menu. Settings concerning password fax transmissions can be specified from this page.

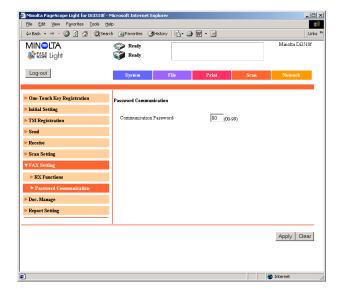

Communication Type in the password used for password

Password: transmissions.

[Apply] button: Click this button to change the setting to the new

one that was entered.

[Clear] button: Click this button to clear the entered setting.


3.4.8 Doc. Manage

If [Doc. Manage] in the menu on the [Scan] tab is clicked, a sub-menu appears, allowing you to select different pages containing various settings for managing documents.

F-Code

<Available only with the Di3510f, Di3010f, Di2510f or Di2010f>

This page appears after clicking [F-Code] in the sub-menu that appeared after clicking [Doc. Manage] in the menu. The list of F codes where documents are managed is displayed on this page. A maximum of 10 F codes can be registered.

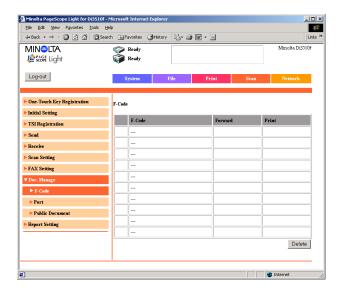

F-Code: The list of F codes that are registered is displayed.

If no F code has been registered in the box,

("---") is displayed.

Forward: The number of times that forwarding is

performed for documents received for the

registered F code is displayed.

If "RX Doc. Settings" is set to "Print", nothing is

displayed.

Print: Whether or not documents received for the

registered F code are printed is displayed. If "RX Doc. Settings" is set to "Print" or "Prt&Forward", "Yes" is displayed. If "RX Doc. Settings" is set to "Forward", nothing is


displayed.

[Delete] button: Click this button to delete the selected F code.

Registering an F code

1 In the F-Code list, click a box where nothing has been registered ("---") to display a page for registering a new F code.

Specify the various settings, and then click the [Apply] button.

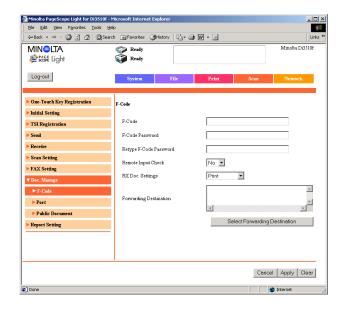

F-Code: Type in the F code to be managed.

(Up to 20 characters including 0 through 9, * and

#)

F-Code Password: Type in the password for the F code to be

managed.

(Up to 20 characters including 0 through 9, * and

#)

Retype F-Code

Password:

Retype the password for the F code.

Remote Input

Select whether or not the reception of F code documents is regulated by a password.

Check:

documents is regulated by a password.

RX Doc. Settings: Speci

Specify how received F code documents are

handled.

Forwarding Destination:

Click the [Select Forwarding Destination] button,

and then select a forwarding destination

(maximum of 300 locations) from the registered one-touch keys. A registered fax program cannot

be selected as a forwarding destination.

[Cancel] button:

Click this button to cancel the registration of the

F code and return to the F-Code list.

[Apply] button:

Click this button to change the settings to the new ones that were specified or selected.

[Clear] button:

Click this button to clear the new settings that

were specified or selected.


Changing the settings for a registered F code

In the F-Code list, click the F code whose settings you wish to change. The page for registering the F code appears.

Change the settings, and then click the [Apply] button.

Port

This page appears after clicking [Port] in the sub-menu that appeared after clicking [Doc. Manage] in the menu. The list of ports where documents are managed is displayed on this page.

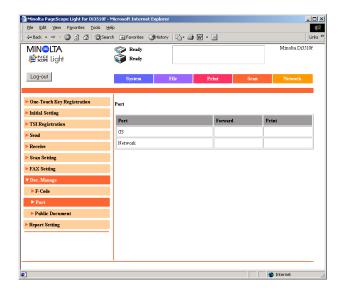

Port

• **G3:** <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f>

• **G3-1:** <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, and if the multi port is

installed>

• **G3-2:** <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, and if the multi port is

installed>

• **Network:** <Available only if the internet fax & network scan

kit is installed>

Forward: The number of times that forwarding is

performed for the ports is displayed.

If "RX Doc. Settings" is set to "Print", nothing is


displayed.

Print:

Whether or not documents received for the port are printed is displayed. If "RX Doc. Settings" is set to "Print" or "Prt&Forward", "Yes" is displayed. If "RX Doc. Settings" is set to "Forward", nothing is displayed.

Changing the settings for a port where documents are managed

- 1 In the Port list, click the port whose settings you wish to change. The page for specifying port settings appears.
- Specify the various settings, and then click the [Apply] button.

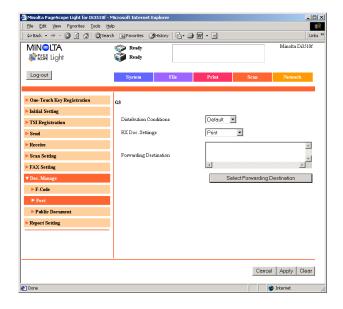

Distribution Specify whether or not "RX Doc. Settings" and **Conditions:** "Forwarding Destination" are available for

received documents for ports.

RX Doc. Settings: Specify how received documents are handled.

Forwarding Click the [Select Forwarding Destination] button, and then select a forwarding destination

(maximum of 300 locations) from the registered one-touch keys. A registered fax program cannot

be selected as a forwarding destination.

[Cancel] button: Click this button to cancel changing the settings

and return to the Port list.

[Apply] button: Click this button to change the settings to the


new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.

Public Document

This page appears after clicking [Public Document] in the sub-menu that appeared after clicking [Administrator Management] in the menu. The management settings for received public documents can be changed from this page.

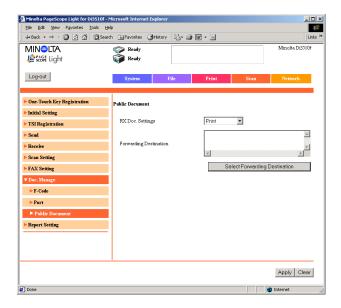

RX Doc. Settings: Specify how received public documents are

handled.

Forwarding Click the [Select Forwarding Destination] button,

Destination: and then select a forwarding destination

(maximum of 300 locations) from the registered one-touch keys. A registered fax program cannot

be selected as a forwarding destination.

[Apply] button: Click this button to change the settings to the


new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.

3.4.9 Report Setting

This page appears after clicking [Report Setting] in the menu on the [Scan] tab. The settings for outputting reports can be specified from this page.

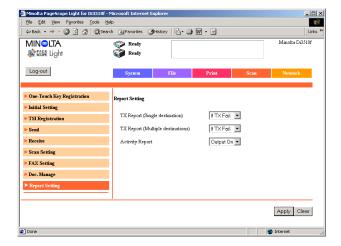

TX Report (Single destination):

Specify how to output reports for verifying the transmission result for a single destination.

TX Report (Multiple destinations):

Specify how to output reports for verifying the transmission result for multiple destinations.

Activity Report:

Specify whether or not to output the activity

report.

[Apply] button:

Click this button to change the settings to the

new ones that were selected.

[Clear] button:

Click this button to clear the new settings that were selected.

3.5 Network Tab


The network settings for the printer controller can be specified from the [Network] tab.

3.5.1 Common Setting

If [Common Setting] in the menu on the [Scan] tab is clicked, a sub-menu appears, allowing you to select different pages containing various network settings that are to be specified.

TCP/IP

This page appears after clicking [TCP/IP] in the sub-menu that appeared after clicking [Common Setting] in the menu. The TCP/IP settings can be specified from this page.

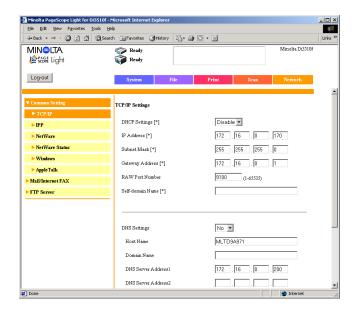

DHCP Settings*: Specify whether or not the DHCP (Dynamic Host

Configuration Protocol) function is used.

IP Address*: Type in the IP address of this unit.

*Type in the IP address only if "DHCP Settings"

is set to [Disable].

Subnet Mask*: Type in the subnet mask of the connected

network.

*Type in the subnet mask only if "DHCP Settings"

is set to [Disable].

Type in the default gateway address of the Gateway Address*:

connected network.

*Type in the default gateway address only if

"DHCP Settings" is set to [Disable].

RAW Port Number: Type in the port number for RAW printing.

Self-domain Name*:

<Available only if the internet fax & network scan

kit is installed>

Type in the domain name for the controller. (64 alphanumeric characters or less)

DNS Settings: Specify whether or not the DNS (Domain Name

System) function is used.

Host Name: Type in the DNS host name.

(64 alphanumeric characters or less)

*Type in the host name only if "DNS Settings" is

set to [Yes].

Domain Name: Type in the DNS domain name.

(64 alphanumeric characters or less)

*Type in the domain name only if "DNS Settings"

is set to [Yes].

DNS Server

Address1 through

Type in the IP address of the DNS server. *Type in the DNS server address only if "DNS

Settings" is set to [Yes].

DNS Query Specify the amount of time until inquiries to the

Timeout: DNS server time out.

*Specify the timeout period only if "DNS Settings"

is set to [Yes].

Click this button to change the settings to the [Apply] button:

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.



Note


After changing the settings for parameters marked with an asterisk (*), turn the copier off, then on again.

3-42 PageScope Light

IPP

<Available only if the printer controller is installed>

This page appears after clicking [IPP] in the sub-menu that appeared after clicking [Common Setting] in the menu. The IPP (Internet Printing Protocol) settings can be checked and specified from this page.

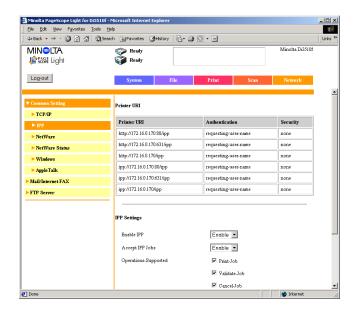

Printer URI: The URI of the printer that can be used with IPP

printing is displayed.

Enable IPP: Select whether to enable or disable the IPP

function.

Accept IPP Jobs: Select whether to enable or disable the IPP

reception function.

Operations- Select the corresponding check boxes to specify

Supported: the print operations that support IPP.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

NetWare

<Available only if the printer controller is installed>

This page appears after clicking [NetWare] in the sub-menu that appeared after clicking [Common Setting] in the menu. The NetWare settings can be specified from this page.

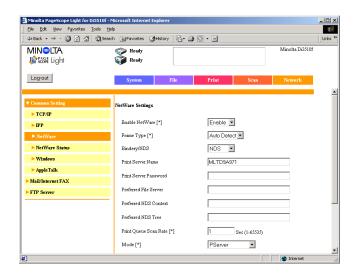

Enable NetWare*: Select whether to enable or disable NetWare

printing.

Frame Type*: Select the frame type.

Bindery/NDS: Select either "Bindery" or "NDS".

Print Server Name: Specify the name of the NetWare print server.

(63 alphanumeric characters or less)

Print Server Specify the password for the NetWare print

Password: server.

(127 alphanumeric characters or less)

Preferred File Specify the preferred NetWare file server. Server:

(47 alphanumeric characters or less)

Preferred NDS Specify the preferred NDS context name for

Context: NetWare.

(191 alphanumeric characters or less)

Preferred NDS Specify the preferred NDS tree name for

Tree: NetWare.

(63 alphanumeric characters or less)

Print Queue Scan

Rate*:

Specify the queue scan rate for NetWare.

Mode*: Select the operating mode for the printer service.

Printer Number*: Specify the NetWare printer number. "255" is

automatically assigned.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.




Note

After changing the settings for parameters marked with an asterisk (*), turn the copier off, then on again.

NetWare Status

<Available only if the printer controller is installed>

This page appears after clicking [NetWare Status] in the sub-menu that appeared after clicking [Common Setting] in the menu. NetWare information is displayed on this page.

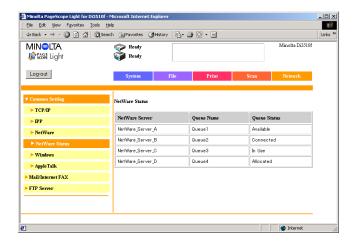

NetWare Server: The name of the NetWare server is displayed.

Queue Name: The queue name for the NetWare server is

displayed.


Queue Status: The queue status for the NetWare server is

displayed.

Windows

<Available only if the printer controller is installed>

This page appears after clicking [Windows] in the sub-menu that appeared after clicking [Common Setting] in the menu. The Windows printing service settings can be specified from this page.

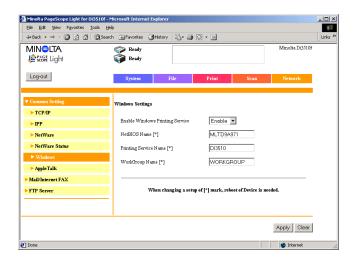

Enable Windows Specify whether or not the Windows printing

Printing Service*: service is used.

NetBIOS Name: Type in the NetBIOS name.

(15 alphanumeric characters or less)

Printing Service

Specify the name of the printing service. Name*: (13 alphanumeric characters or less)

WorkGroup Name*:

Specify the name of the workgroup. (15 alphanumeric characters or less)

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.




Note

After changing the settings for parameters marked with an asterisk (*), turn the copier off, then on again.

AppleTalk

<Available only if the printer controller (Pi3505e/PS) is installed>

This page appears after clicking [AppleTalk] in the sub-menu that appeared after clicking [Common Setting] in the menu. The AppleTalk settings can be specified from this page.

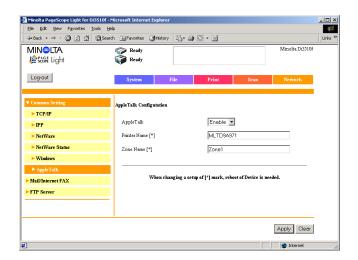

AppleTalk: Select whether to enable or disable AppleTalk

printing.

("Enable" or "Disable")

Printer Name: Type in the name of the AppleTalk printer.

(31 alphanumeric characters or less)

Zone Name: Type in the name of the AppleTalk zone.

(31 alphanumeric characters or less)

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

3.5.2 Mail/Internet FAX


<Available only if the internet fax & network scan kit or network scan kit is installed>

If [Mail/Internet FAX] in the menu on the [Network] tab is clicked, a submenu appears, allowing you to select different pages containing various e-mail/Internet fax settings that are to be specified.

POP3

<Available only if the internet fax & network scan kit is installed>

This page appears after clicking [POP3] in the sub-menu that appeared after clicking [Mail/Internet FAX] in the menu. Settings concerning e-mail reception can be specified from this page.

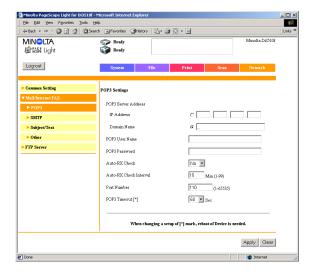

POP3 Server Address:

Select the format for specifying the POP3 server address.

• IP Address:

Type in the IP address of the POP3 server.

· Domain Name:

Type in the domain name for the POP3 server. (64 alphanumeric characters or less)

*This parameter appears if "DNS Settings" is set to "Yes" on the page that appears after clicking "TCP/IP" in the sub-menu that appeared after clicking "Common Setting" in the menu on the [Network] tab after logging into the Administrator mode.

POP3 User Name: Type in the login name for the POP3 server.

(63 alphanumeric characters or less)

POP3 Password: Type in the password for logging into the POP3

server.

(15 alphanumeric characters or less)

Auto-RX Check: Select whether or not to automatically check for

received e-mails.

Auto-RX Check

Interval:

Specify the time interval for automatically

checking for received e-mails.

Port Number: Type in the port number of the POP3 server.

POP3 Timeout*: Specify the amount of time until transmissions to

the POP3 server time out.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.




Note

After changing the settings for parameters marked with an asterisk (*), turn the copier off, then on again.

SMTP

This page appears after clicking [SMTP] in the sub-menu that appeared after clicking [Mail/Internet FAX] in the menu. Settings concerning e-mail transmission can be specified from this page.

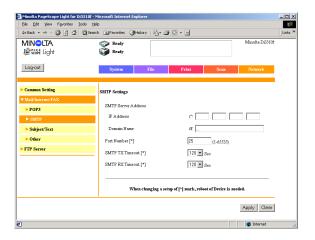

SMTP Server Address: Select the format for specifying the SMTP server

address.

IP Address:

Type in the IP address of the SMTP server.

Domain Name:

Type in the domain name for the SMTP server.

(64 alphanumeric characters or less)

*This parameter appears if "DNS Settings" is set to "Yes" on the page that appears after clicking "TCP/IP" in the sub-menu that appeared after clicking "Common Setting" in the menu on the [Network] tab after logging into the Administrator

mode.

Port Number*:

Type in the port number of the SMTP server.

SMTP TX Timeout*:

Specify the amount of time until transmissions to

the SMTP server time out.

SMTP RX Timeout*: Specify the amount of time until receptions from

the SMTP server time out.

[Apply] button:

Click this button to change the settings to the new ones that were specified or selected.

[Clear] button:

Click this button to clear the new settings that




Note

After changing the settings for parameters marked with an asterisk (*), turn the copier off, then on again.

Subject/Text

This page appears after clicking [Subject/Text] in the sub-menu that appeared after clicking [Mail/Internet FAX] in the menu. Settings concerning the subject and text can be specified from this page.

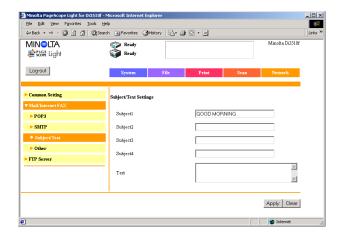

Subject1 through Type in the subject for the e-mail. **4:** (40 alphanumeric characters or less)

Text: The text entered here will be used if "TX Doc.

Text Insert" is set to "Custom" on the page that appears after clicking "Other" in the sub-menu.

(256 alphanumeric characters or less)


[Apply] button: Click this button to change the settings to the

new ones that were entered.

[Clear] button: Click this button to clear the entered settings.

Other

This page appears after clicking [Other] in the sub-menu that appeared after clicking [Mail/Internet FAX] in the menu. Other e-mail/Internet fax settings can be specified from this page.

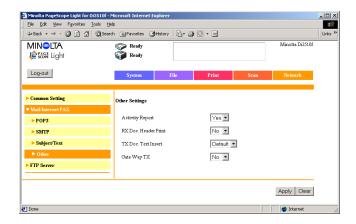

Activity Report: <Available only if the internet fax & network scan

kit is installed>

Select whether or not an activity report is

generated.

RX Doc. Header

Print:

<Available only if the internet fax & network scan

kit is installed>

Select whether or not a header is printed in

received documents.

TX Doc. Text Insert:

Select whether or not text is inserted into sent

documents.

Gate Way TX: <Available only with the Di3510f, Di3010f,

Di2510f or Di2010f, and if the internet fax &

network scan kit is installed>

Select whether or not gateway transmissions are

permitted.

(If the multi port is not installed: "Yes" or "No" When the multi port is installed: "Yes(G3-1)",

"Yes(G3-2)" or "No")

[Apply] button: Click this button to change the settings to the

new ones that were selected.

[Clear] button: Click this button to clear the new settings that

were selected.


3.5.3 FTP Server

<Available only if the network scan kit is installed>

If [FTP Server] in the menu on the [Network] tab is clicked, a sub-menu appears, allowing you to select different pages containing various FTP server settings that are to be specified.

FTP Configuration

This page appears after clicking [FTP Configuration] in the sub-menu that appeared after clicking [FTP Server] in the menu. Settings for the FTP proxy server and the FTP server can be specified from this page.

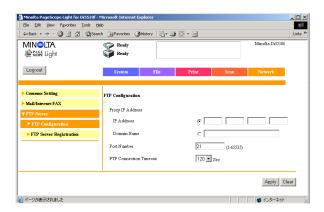

Proxy IP Address: Select the format for specifying the proxy server

address.

• IP Address: Type in the IP address of the proxy server.

• **Domain Name:** Type in the domain name for the proxy server.

(64 alphanumeric characters or less)

*This parameter appears if "DNS Settings" is set to "Yes" on the page that appears after clicking "TCP/IP" in the sub-menu that appeared after clicking "Common Setting" in the menu on the [Network] tab after logging into the Administrator

mode.

Port Number: Type in the port number of the proxy server.

FTP Connection Specify the amount of time until the connection with the FTP server times out.

[Apply] button: Click this button to change the settings to the


new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

FTP Server Registration

This page appears after clicking [FTP Server Registration] in the submenu that appeared after clicking [FTP Server] in the menu. The registration status of each FTP server is displayed on this page. A maximum of five FTP servers can be registered.

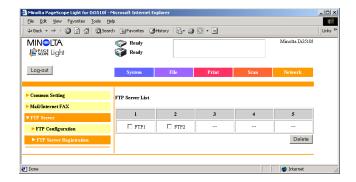

FTP Server List: The names of FTP servers that are registered

are displayed.

If no FTP server has been registered in the box,


("---") is displayed.

[Delete] button: Click this button to delete the selected FTP

server.

Registering an FTP server

- 1 In the FTP Server List, click a box where nothing has been registered ("---") to display a page for registering a new FTP server.
- 2 Specify the various settings, and then click the [Apply] button.

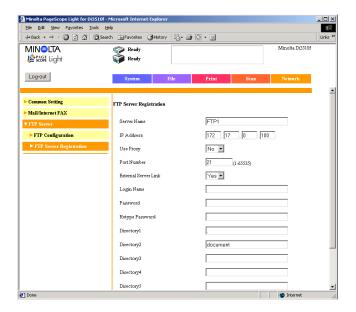

Server Name: Type in the name of the FTP server.

(32 alphanumeric characters or less)

IP Address: Type in the IP address of the FTP server.

Use Proxy: Select whether or not a proxy server is used.

Port Number: Type in the port number of the FTP server.

External Server Link:

Select whether or not a user can make an FTP connection from the PageScope Light to the FTP server.



Note

A server link is access to an FTP server while logging in as "anonymous". An FTP server that does not give access to anonymous users cannot be accessed.

If "External Server Link" is set to "Yes" (the server appears as "Anonymous" on the copier's touch panel), the login name and password are ignored, so the FTP server is registered with these blank.

Login Name: Type in the login name for the FTP server.

(32 alphanumeric characters or less)

Password: Type in the password for logging into the FTP

server.

(64 alphanumeric characters or less)

Retype Password: Retype the password for logging into the FTP

server.

Directory1 through Type in the directory where scan data is saved

5: on the FTP server. Type in more than one directory. By typing in "." (period), the root

directory can be specified.

(128 alphanumeric characters or less)

Passive Mode: Select whether to enable or disable the passive

mode.

[Cancel] button: Click this button to cancel the registration of the

FTP server and return to the FTP Server List.

[Apply] button: Click this button to change the settings to the

new ones that were specified or selected.

[Clear] button: Click this button to clear the new settings that

were specified or selected.

Changing the settings for a registered FTP server

In the FTP Server List, click the FTP server whose settings you wish to change. The page for specifying the FTP server settings appears. Specify the various settings, and then click the [Apply] button.

Administrator Mode



Copyright 2003 MINOLTA CO., LTD.

The information contained in this manual is subject to change without notice to incorporate improvements made on the product or products the manual covers.