
SETUP INSTRUCTIONS

PF-117

Large Capacity Cabinet

CF1501/CF2001



WARNING

- *Before setting up this unit, be sure to unplug the power cord of the copier.*



CAUTION


- *Keep all packing materials out of the reach of children.*
-

Large Capacity Cabinet

■ Unpacking the Large Capacity Cabinet


1. Remove the large-capacity cabinet from its box, and then check that the following accessories are also enclosed.

(1) Fixing plates	4
(2) Flat-head screws	4
(3) L-shaped stopper	1
(4) Stoppers	4
(5) Stopper covers	2
(6) Thumbscrews (short)	4
(7) Thumbscrews (long)	2
(8) Power supply harness	1
(9) Setup Instructions (this manual)	1

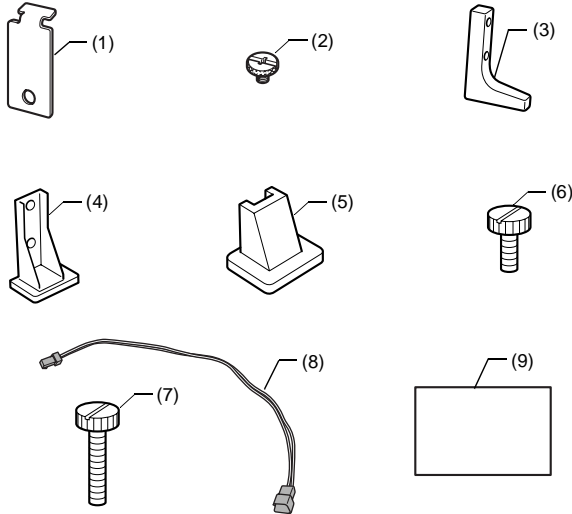


C4659U001CA

2. Remove all protective tape from the large-capacity cabinet.

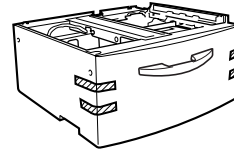


C4659U029AA

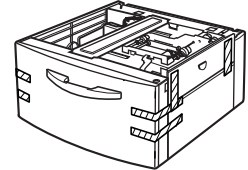

C4659U030AA

3. Pull out the paper drawer of the large-capacity cabinet, and remove the packing material.

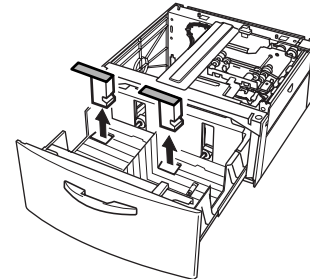

C4659U004AA

4. Close the paper drawer.

* Do not use the enclosed power supply harness with the CF1501/CF2001.


Large Capacity Cabinet

■ Installing the Stoppers


NOTE

If the copier stand is used, do not install the stoppers or the L-shaped stopper.


1. Using the thumbscrews (short), attach the four enclosed stoppers at the locations shown in the illustration.

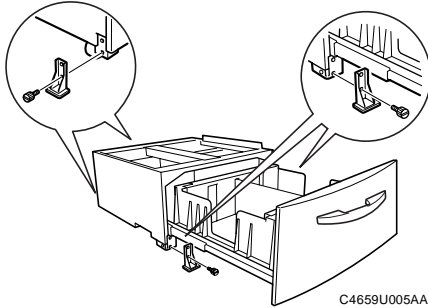

2. Attach the stopper covers to the two stoppers installed at the front of the large-capacity cabinet.

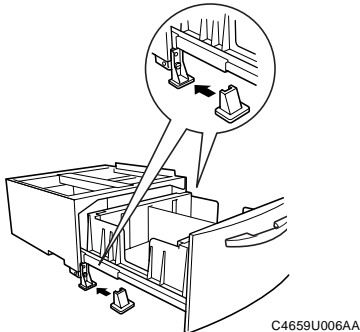


3. Using the two thumbscrews (long), attach the enclosed L-shaped stopper to the right-rear corner of the large-capacity cabinet.

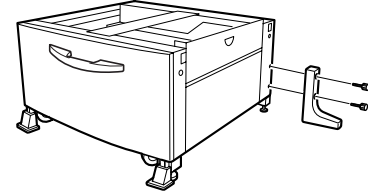

■ Adjusting the Adjusters


To stabilize the large-capacity cabinet, adjust the height of the two adjusters at the front of the cabinet.

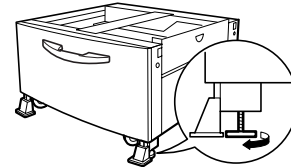

Large Capacity Cabinet


■ Installing the Large Capacity Cabinet

1. Before installing the large-capacity cabinet, make sure that the harness is secured with the harness clamp on the cabinet as shown in the illustration.

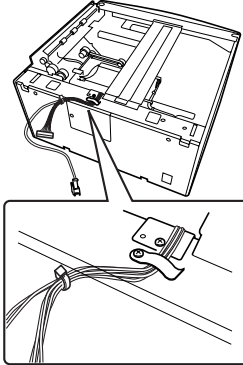


C4659U009AA

2. Grasp the handles of the copier, and then place it on top of the large-capacity cabinet so that the rubber feet on the copier align with the positioning pins of the cabinet.

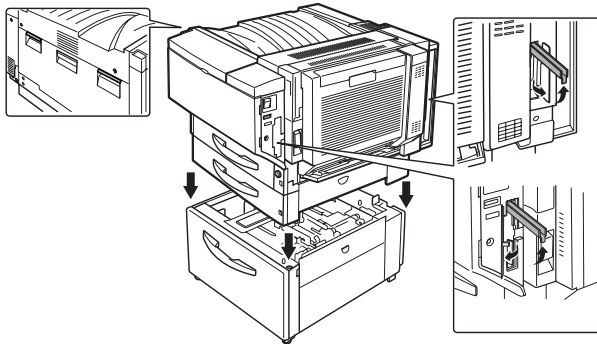


C4659U010AA

3. Pull out the paper drawers of the copier's paper feed unit and the large-capacity cabinet, and then secure the large-capacity cabinet to the copier with the enclosed fixing plates and flat-head screws.

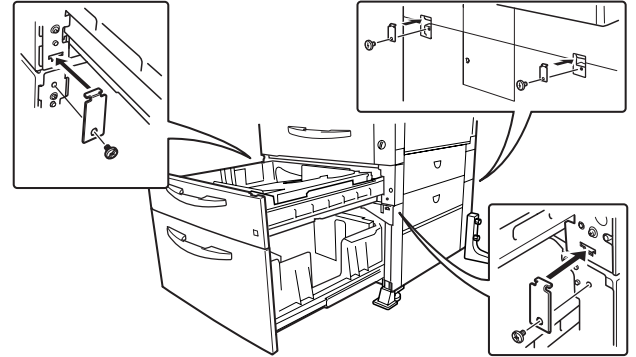

C4659U011AA

4. Remove the connector cover from the copier.

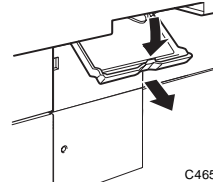


C4659U014AA

Large Capacity Cabinet


- Remove the rear cover and bracket from the paper feed unit.

NOTE

Before removing the bracket from the copier's paper feed unit, unplug the power supply harness (white connector) on the paper feed unit.

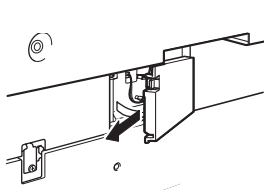


C4659U012AA

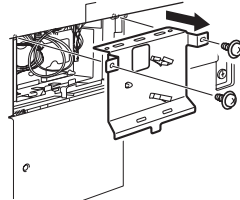

C4659U013AA

- Plug the connector on the large-capacity cabinet's controller harness into the connector on the copier's paper feed unit as shown.

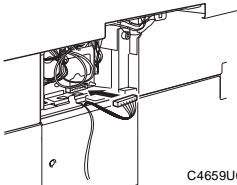


C4659U015AA


- With the cables moved to the left as shown below, install the bracket.

NOTE

- Check that the cables are not visible through the hole (C). If the cables are visible, remove the bracket, adjust the cables, and then reinstall the bracket.
- Make sure the bracket fits securely over the tabs.

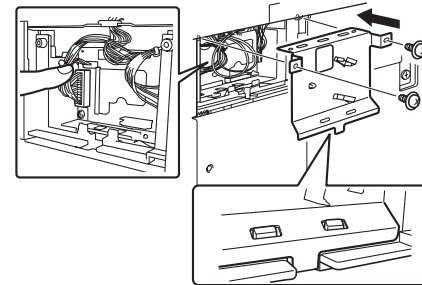


C4659U025AA

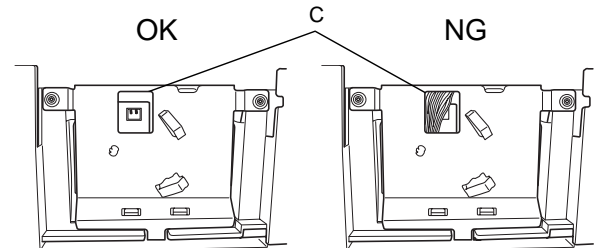


C4658U026AA

Large Capacity Cabinet

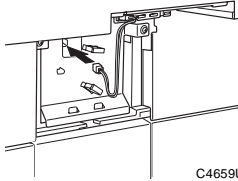

C4659U016AA

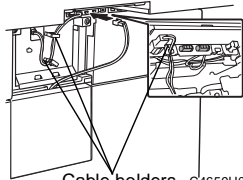

Cable holders C4659U017AA

8. Plug the white connector of the power supply harness from the paper feed unit into the connector shown in the illustration.

9. Plug the connector on the power supply harness from the large-capacity cabinet into the connector on the copier as shown in the illustration. Secure the harnesses with the cable holders on the brackets.


10. Reinstall the rear cover of the paper feed unit.
11. Reinstall the connector cover of the copier.

■ If the Large Capacity Cabinet Is To Be Used Together With the Copier Stand

NOTE

Make sure that the stoppers and the L-shaped stopper are not installed. If they are installed, remove them.


1. Position the scanner (attached to the copier stand) over the printer engine (attached to the large-capacity cabinet).

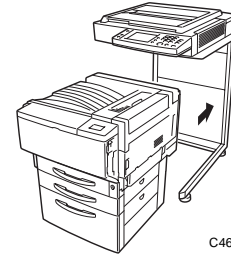

C4659U023AA


Large Capacity Cabinet

2. Turn the adjusters on the copier stand (one on each leg) until the four holes in the copier stand align with the holes in the large-capacity cabinet.

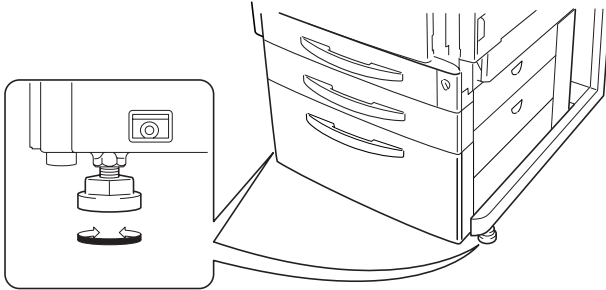

C4659U027AA


3. Attach the large-capacity cabinet to the copier stand using the four screws supplied with the copier stand. Do not tighten the screws. Then, insert the two spacers (supplied with the copier stand) as shown.

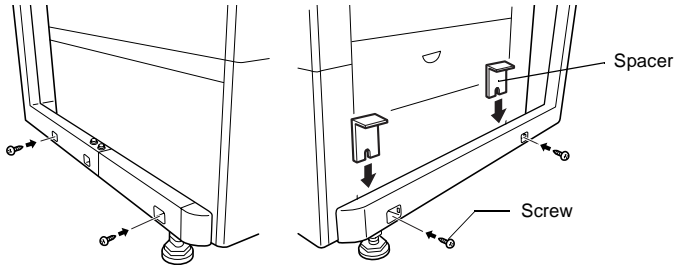

C4659U028AA

4. Firmly tighten the four screws installed in step 3.

5. Install the five decorative covers supplied with the copier stand.

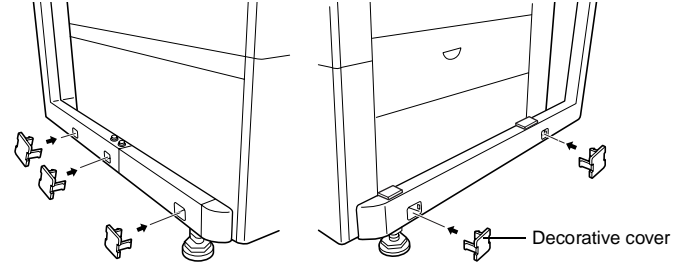


C4659U024AA

Large Capacity Cabinet


■ Specifying the Paper Size

(Except U.S.A. and Canada)

The default paper size setting is "A4Y".

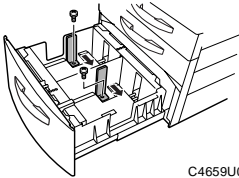

C4659U019AA

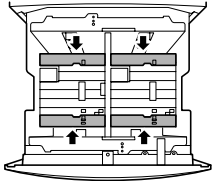


C4659U018AA

1. Remove the screw on the left side guide and the screw on the right side guide, and then remove the two side guides.
2. Install the side guides while adjusting them to the desired paper size, and then secure the guides with the screws.
3. Move the slides at the bottom of the cabinet fully in the direction of the arrows.

4. Remove the screw on the front guide plate and the screw on the rear guide plate, and then lift up the two guide plates.
5. Insert the tabs on the bottom of the front and rear guide plates into the slots for the desired paper size.
6. Insert the tabs on the top of the front and rear guide plates into the slots for the desired paper size.

NOTE


Make sure that all tabs on both the front and rear guide plates are inserted into the slots for the same paper size.

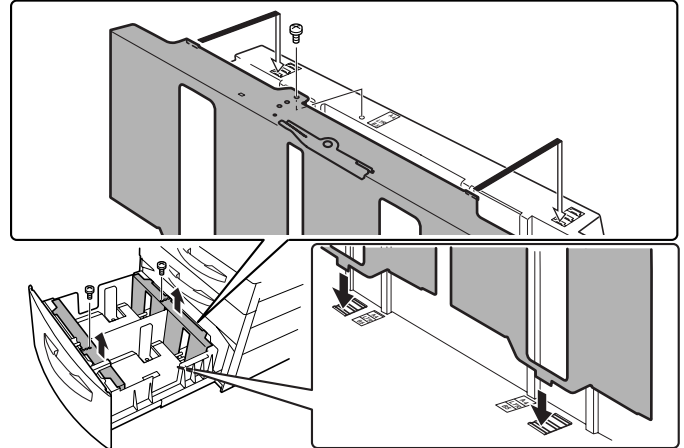

C4659U026AA


Large Capacity Cabinet

7. Check that the tabs on the front and rear guide plates are securely inserted into the paper size slots, and then secure the two guide plates with the screws.

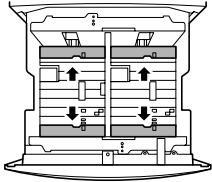


C4659U022AA

8. Move the slides at the bottom of the cabinet (moved in step 3) fully in the direction of the arrows until they contact the front and rear guide plates.

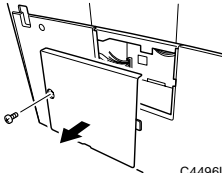

C4496U018AA

9. Remove the rear cover from the large-capacity cabinet.

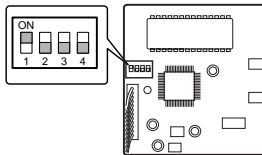

C4496U020AA


10. Set the dip switches to select the desired paper size.
* Adjust the dip switches according to the following chart.

SW	1	2	3	4
LetterY	OFF	OFF	OFF	OFF
A4Y	ON	OFF	OFF	OFF
B5T	OFF	ON	OFF	OFF

11. Reinstall the rear cover of the large-capacity cabinet.


■ Checking and Adjusting the Paper Reference Position

1. Load A4-size (or Letter-size) paper into the paper drawer of the large-capacity cabinet.
2. Display the Tech. Rep. Mode screen.
(For details about displaying the Tech. Rep. Mode screen, refer to the Service Manual.)

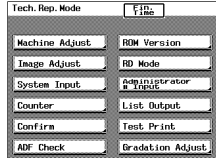


C4658P001CA

3. Touch "Machine Adjust".
4. Touch "PRT Area".

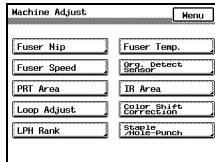


C4659P004CA


5. Touch "Left Margin".

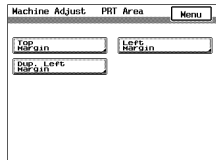

C4658P003CA

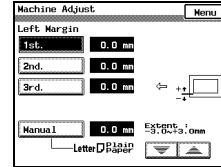

C4659P002CA

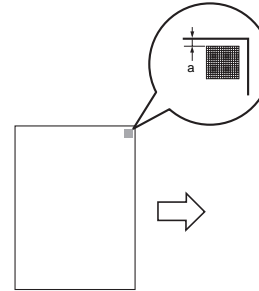

C4658U028AA

6. Touch the key for the third paper drawer, and then press the Start key.

7. Measure the margin from the edge of the paper to the pattern printed in the top-right corner of the test page.

Standard width (a):
3.0 mm ± 1.0 mm

Touch the up and down arrows in the lower-right corner of the screen to enter the difference (in millimeters) between the measured width and the standard width.

8. Print another test page and check the paper reference position.