



# CF9001

## Quick Guide

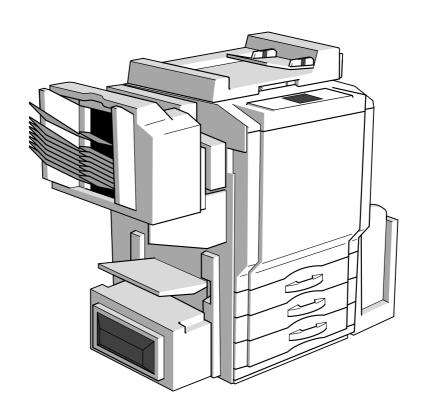

## **Using Control Panel Keys**

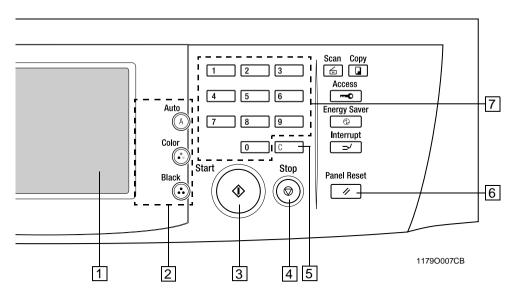

#### 1 Touch Panel

• Shows various screens and messages.

## 2 Auto Color/Full Color/Black Kevs

- When Auto Color is selected, the copier automatically checks and determines whether the original is in color or black-andwhite and makes a full-color or black-andwhite copy according to the original.
- When Full Color is selected, the copier makes a full-color copy even if the original is in black-and-white.
- When Black is selected, the copier makes a black-and-white copy even if the original is in color.

## 3 Start Key

- Press to start a copy cycle.
- If pressed while the copier is warming up, it enables the Auto Copy Start Function.

## 4 Stop Key

• Press to stop a multi-copy cycle.

#### 5 Clear Key

Press to:

- Reset the multi-copy entry to 1.
- Clear a zoom ratio entered when setting one using the 10-Key Pad.

#### 6 Panel Reset Key

• Press to set the copier into the initial mode, clearing all settings made previously on the control panel.

## 7 10-Key Pad

Use to:


- •Enter the number of copies to be made.
- Enter the zoom ratio to be used.
- Enter the number of originals.

## **Making Copies**

## Placing Originals on the Glass

Raise the Original Cover or Duplexing Document Feeder and place the original face down on the Glass

Align the rear left corner of the original with the \( \sim \) marker on the Width Scale of the copier glass and gently lower the Original Cover or Duplexing Document Feeder.

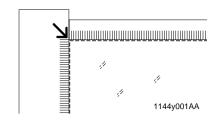

Auto

Color

Black

1179O008CA

1179004444

Press either Auto Color, Full Color, or the Black Key on the Control Panel.

Auto Color: The copier automatically

determines whether the original is in color or black-and-white and makes a full-color or blackand-white copy according to the

original.

Full Color: The copier makes a full-color

copy regardless of the type of

original.

: The copier makes a black-and-Black


white copy regardless of the

type of original.

From the 10-Key Pad, set the desired number of copies to be made.

> If you want to use the auxiliary functions, touch Digital Art | Color Adjust | or the Input ▶ Output Key and set the appropriate functions.

Press the Start Key.

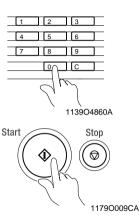

#### Using the Duplexing Document Feeder

**1** Slide the Document Guide Plate to the size of the originals.

When using large size originals, flip up the Document Feed Tray Extender.



1151O015AA

2 Load a neat stack of originals face up on the Document Feed Tray.


Make sure that the top level of the original stack does not exceed the  $\nabla$  marking.



1151O016AA


**3** From the 10-Key Pad, set the desired number of copies to be made and press the Start Key.

If you want to use the auxiliary functions, touch Digital Art | Color Adjust | , or the Input ▶ Output | Key and set the appropriate functions.

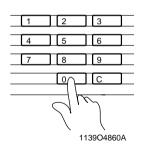


<Using the Single Automatic Document Feeding Mode (SADF Mode)> Open the Document Feed Tray and insert the original face down into the Tray.

The original is automatically taken up and the copy cycle is started.

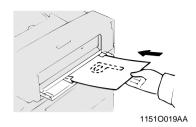


#### Using the Manual Bypass Tray (For Metric Area)

1 Swing down the Manual Bypass Tray.

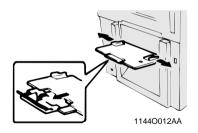

2 Insert a neat stack of copy paper into the Manual Bypass Tray until it stops and slide the Paper Guide Plates to the size of the copy paper.

When inserting paper with one side previously printed, load the paper stack so that the blank side faces down. Make sure that the top level of the original stack does not exceed the ▼ marking.

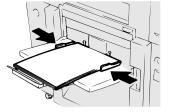

1144O013AA

**?** Select a copy paper size.


If the copy paper is a non-standard size, touch Custom Size .



1179P177DB


Touch Paper Type and select the type of copy paper.

Only CF Paper can be used for 2-sided copies.

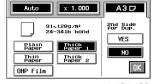

1179P178DB


5 If this is going to be the copy cycle for making the first side of the copy, select No for 2nd Side for Dup. If this is going to be the copy cycle for making the second side of the copy, select Yes.

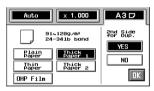

1179P179DB


<If the original is a non-standard size>

**1** Touch Custom Size on the screen given in step 3.

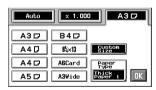

1179P413DA


Touch X and enter the length of the copy paper from the 10-Key Pad. Then touch Y and enter the width of the copy paper from the 10-Key Pad.

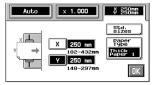

1179P414DA

#### Using the Manual Bypass Tray (For Inch Area)

Swing down the Manual Bypass Tray.

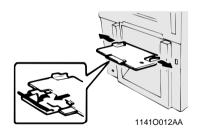

Insert a neat stack of copy paper into the Manual Bypass Tray until it stops and slide the Paper Guide Plates to the size of the copy paper.


> When inserting paper with one side previously printed, load the paper stack so that the blank side faces down. Make sure that the top level of the original stack does not exceed the  $\nabla$ marking.



1144O013AA


Select a copy paper size.

If the copy paper is a non-standard size, touch Custom Size .

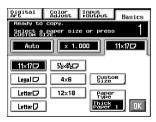


1179P214EB

Touch Paper Type and select the type of copy paper.

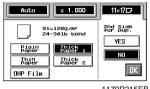

1179P215EB


If this is going to be the copy cycle for making the first side of the copy, select  $\boxed{N_0}$  for 2nd Side for Dup. If this is going to be the copy cycle for making the second side of the copy, select Yes .

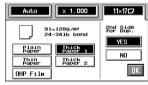

1179P216EB


<If the original is a non-standard size>

**1** Touch Custom Size on the screen given in step 3.

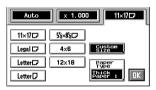



1179P415EA


Touch X and enter the length of the copy paper from the 10-Key Pad. Then touch Y and enter the width of the copy paper from the 10-Key Pad.

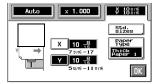

1179P416CA

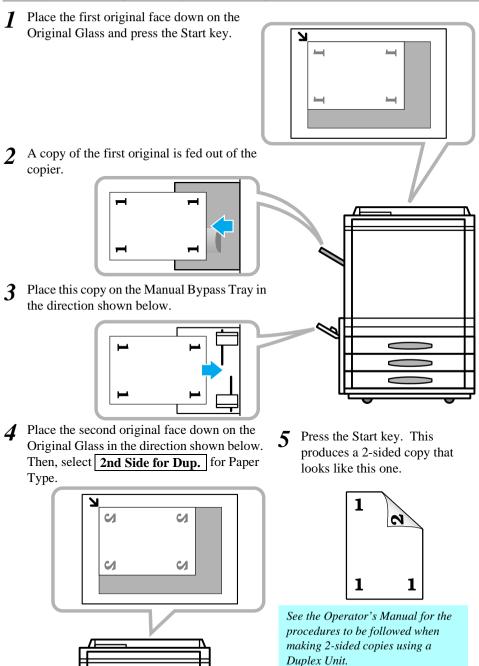


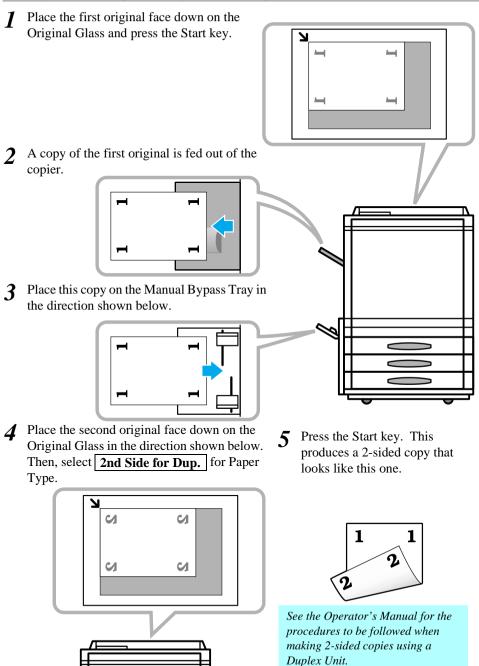

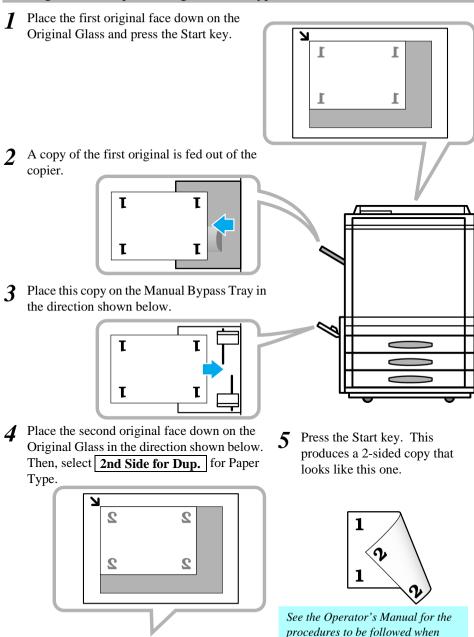

making 2-sided copies using a

Duplex Unit.

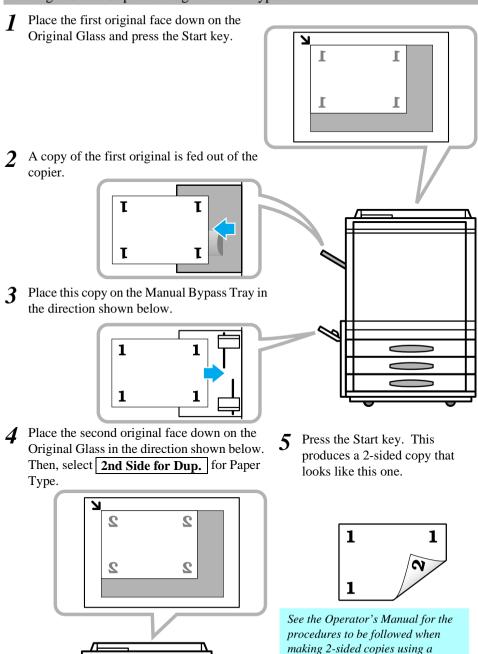


Duplex Unit.

## **Loading Paper**


## Loading Paper in the Trays

**1** Slide the Tray out.

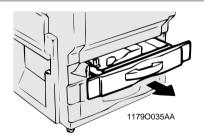


2 Load the paper stack into the Tray so that its front side (the side facing up when the package was unwrapped) faces down. Then, slide the Tray back in.

The paper should be loaded no higher than the ▼ (Max. Level Indicator).

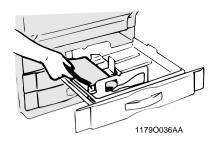

## Changing the Paper Size for the Middle Tray (Universal Tray)


Grasp the tab of the Edge Guide and slide it to the size of the paper to be loaded. Pressing the plastic part of the Trailing Edge Stop, slide it to the size of the paper to be loaded.

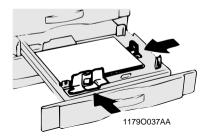


## Large Capacity Cassette

**1** Grasping the Door Lock Release Lever, open the Cassette Door.

When adding paper to a partially loaded Cassette, press the Paper Plate Descent Key to lower the Paper Plate before opening the Cassette Door.

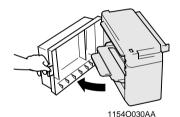




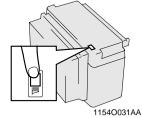


Place the paper stack onto the Paper Plate so that its front side **faces up** and close the Cassette Door.

The paper should be loaded no higher than the  $\nabla$  (Max. Level Indicator).

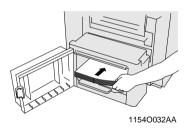


## Replenishing Toner


**1** Open the Front Door.

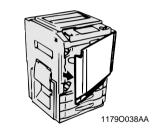

2 Slide out the Toner Hopper Unit.

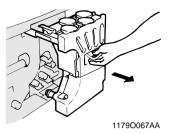

3 Sharply tap the new Toner Bottle against a desk or other hard object four to five times. Then turn the Toner Bottle upside down and tap it the same way again.

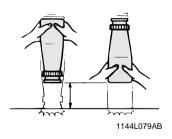


**4** Shake the Toner Bottle well.




**5** Remove the bottle cap.



6 Open the Toner Hopper Lid.

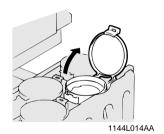

7 Align the tab on the Bottle with the cutout on the Toner Receptacle and turn the Bottle clockwise until it stops.

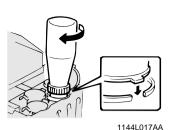

Wait until the toner stops falling in (approx. 60 seconds), then tap the Bottle a few times to ensure that all the toner falls into the Hopper.




1144L018AA

**9** Making sure that the toner has emptied completely, turn the Bottle counterclockwise and lift it out from the Receptacle. Close the Toner Hopper Lid.



10 Slide the Toner Hopper Unit back in and close the Front Door.

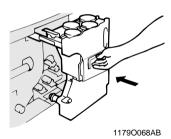


## Replacing the Staple Cartridge

Grasping the Lock Release Lever, slide the Staple Sorter away from the copier.




1144O252AA

Open the Stapler Door and, while pushing up the Staple Cartridge Release Lever, pull the Staple Cartridge out of its port.

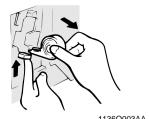

1136O003AA

Pull the staple sheet about 3 cm out of the new Staple Cartridge and break off that portion.

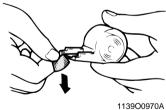


Insert the new Staple Cartridge until a click is heard




1139O1440A

Close the Stapler Door and slide the Staple Sorter back against the copier

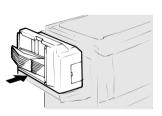


1144O253AA

6 Place a sheet of paper into the 2nd Bin of the Staple Sorter.

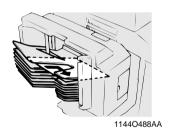


7 Touch Staple on the Touch Panel.

Then, the Staple Sorter test-staples the paper several times automatically.

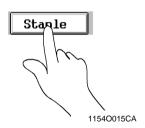


- **8** Remove the sheet of paper from the 2nd Bin and check that it has been stapled.
  - \*If no staples are evident, place another sheet of paper into the 2nd Bin and repeat steps 6, 7, and 8.

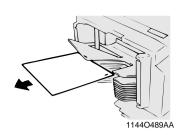

## Clearing Misfed Paper


## Misfeed Location Displays

Different procedures are used to clear a misfed sheet of paper depending on the location. First, isolate the location, then clear the misfeed following the procedure applicable to where the misfeed occurred.

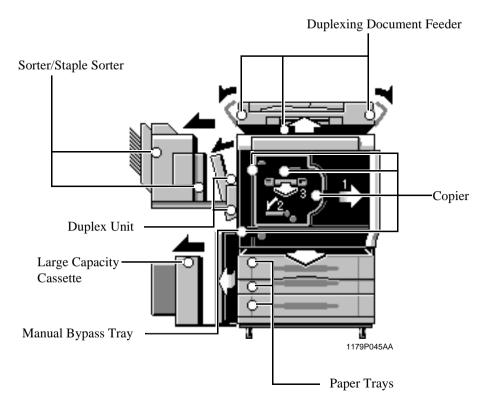

## Copier

1 Open the Left Door L1.

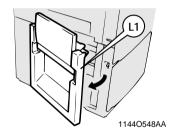


2 Pull out the sheet of paper from the Transport Section.




1144L022AA

Raise Guide Plate (M2) and, turning Knob (M1), pull out the sheet of paper.

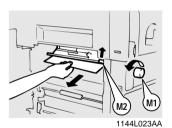


**4** Press down Guide Plate M3 and pull out the sheet of paper.

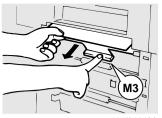


1144L024AA

**5** Close the Left Door (L1).

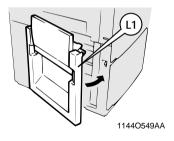

**6** Open the Front Door.

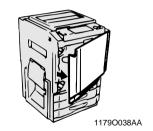


7 Turn the Lever (M4) to the left.
Press Guide Plate (L2) and, turning Knob
(M5), pull out the sheet of paper.



1144L026AB


**8** Grasp Lever M6 and slide out the Transfer/ Fusing Unit.

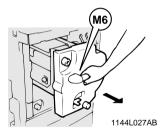



**9** Grasp the Fusing Unit Lever (M7) and open the Fusing Unit.

## **⚠** CAUTION

DO NOT touch any parts except paper as the Fusing Unit and its surrounding areas are extremely hot.

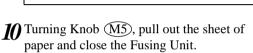


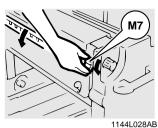

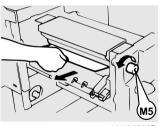


1144L029AB

**11** Pull out the sheet of paper from the Upper Area of the Transfer/Fusing Unit.

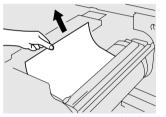

1154O016AA


12 Turning Knob (M9), remove the sheet of paper. If paper is stuck to the Transfer Film, carefully disengage the leading edge of the paper and remove it with care not to damage the Transfer Film.

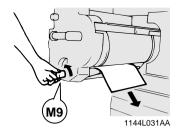


**13** Press down the Roller as shown and remove the sheet of paper if present inside.



14 Slide the Transfer/Fusing Unit back into the copier and turn the Release Lever (M4) to the right.

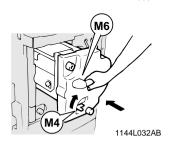

15 Close the Front Door.

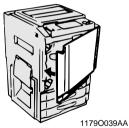


## **Duplexing Document Feeder**

**1** Remove the original stack from the Document Feed Tray.




1151O097AA

**2** Swing open Document Feed Unit Door F1 and gently pull out the original.

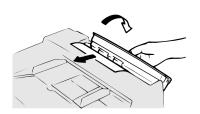


1151O031AA

3 Holding down the Lock Release Button, swing open Document Turnover/Exit Unit Door F2 and carefully pull out the original from the Exit Unit.

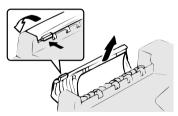

1151O032AB

4 Close F1 and F2.

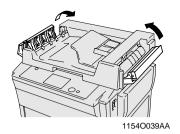

5 Raise the Duplexing Document Feeder.
Opening the Document Turnover/Feed Unit
Guide Plate, gently pull out the original from
the Unit.



1151O033AA

**6** Remove the original from the Original Glass and lower the Duplexing Document Feeder.



1139O0840A


When the message "Re-insert the following # of originals" is shown on the Display, return the number of originals indicated on the Display to the bottom of the original stack removed in step 1 and reload it onto the Document Feed Tray.



1151O098AA

## Paper Trays

1 Open the Left Door L1.

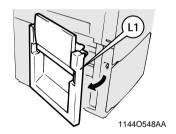

Pull out the sheet of paper from the Transport Section and close the Left Door (L1).




1144I 022AA


3 Slide the Tray out and unload the paper stack from the Tray.



4 Fan the paper thoroughly, reload it in the Tray, and slide the Tray back in.

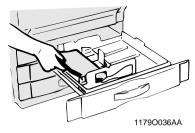


Open the Front Door and then close it to reset the misfeed indication/message on the Touch Panel.

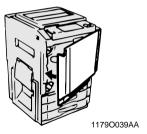

## Manual Bypass Tray

*I* Unload the paper stack from the Manual Bypass Tray. Then open the Left Door (L1).

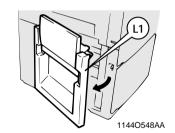

2 Raise Guide Plate (M2) and, turning Knob (M1), pull out the sheet of paper. Then, close the Left Door.



1144L023AA

**3** Fan the paper stack thoroughly and place it back on the Tray.



1144O013AA

**4** Open the Front Door and then close it to reset the misfeed indication/message on the Touch Panel.




## Large Capacity Cassette


**1** Press the Paper Descent Key.




2 Grasping the Door Lock Release Lever, open the Cassette Door and remove the sheet of paper.

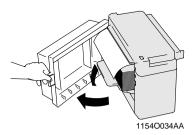


**?** Close the Cassette Door.

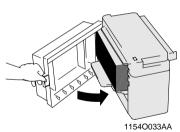

**4** Grasp the Cassette Release Lever and slide the Cassette away from the copier.

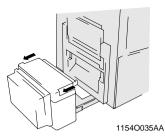

Framework Remove the sheet of paper and slide the Cassette back against the copier.

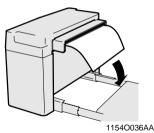

## Duplex Unit

Grasping the Lock Release Lever, open the Duplex Unit.



**2** Open the Misfeed Removal Guide D and pull out the sheet of paper.




1144L035AA

**3** Close the Duplex Unit.




## Sorter/Staple Sorter

**1** Grasping the Lock Release Lever, slide the Sorter away from the copier.

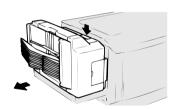


1144O252AA

**2** Pull out the copy from the Transport Section.

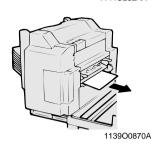

**3** Slide the Sorter back against the copier.

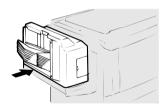

1144O253AA



## Copyright 2000 MINOLTA CO., LTD.

The information contained in this manual is subject to change without notice to incorporate improvements made on the product or products the manual covers.

Minolta Co., Ltd.