

Service Manual [Field Service]

The essentials of imaging

Di850

Dual references may be used on the following:

Official Options name : Popular Options name

EDH-5 : RADF

C-403/C-404 : LT and LCT

FN-115 : FNS

FN-7 : FNS

Cover Inserter C : PI PK-3 : PU

> TMG-2 TU

ZK-2 : PZ

In-System Writer : ISW

CONTENTS

SAFETY AND IMPORTANT WARNING ITEMS S-1
IMPORTANT NOTICE
DANGER, WARNING, AND CAUTION
SYMBOLS AND EXPRESSIONSS-1
SAFETY WARNINGS S-2
SAFETY INFORMATION
IMPORTANT INFORMATION S-9
SAFETY CIRCUITSS-10
INDICATION OF WARNING ON THE MACHINES-12

Y

EXTERN	NAL SECTION	1-A-1
[1]	Replacing Ozone Filters	1-A-1
[2]	Removing and Reinstalling	
	the External Cover	1-A-1
[3]	Removing and Reinstalling	
	the Front Right Door	1-A-2
[4]	Removing and Reinstalling	
1.3	the Front Left Door	1-A-3
[5]	Removing and Reinstalling	
[0]	the Operation Panel	1-A-3
חפועב	SECTION	
	Removing and Reinstalling	1-0-1
[1]		4.0.4
[0]	the Drum Motor	I-B-I
[2]	Removing and Reinstalling	
	the Main Motor	
READ S	ECTION	1-C-1
[1]	Screw that Must not be Removed/	
	Loosened	1-C-1
[2]	Removing and Reinstalling	
	the CCD Unit	1-C-1
[3]	Replacing the Exposure Lamp	1-C-3
[4]	Replacing and Reinstalling	
	the Exposure Unit	1-C-4
[5]	Installing the Optics Wire	
[6]	Cleaning the Slit Glass and White	
[0]	Color Reference Plate Glass	1-0-8
[7]	Cleaning the Platen Glass	
	SECTION	1-D-1
[1]	Removing and Reinstalling	
	the Write Unit	
[2]	Cleaning the Dust-proof Glass	1-D-2
[3]	Removing and Reinstalling the Image	
	Control Board	1-D-3
DRUM U	JNIT	1-E-1
[1]	Removing and Reinstalling	
	the Drum Unit	1-E-1
[2]	Cleaning and Installing the Coupling	
[3]	Removing and Reinstalling	
	the Drum Temperature Sensor Board.	1-E-2
[4]	Cleaning the Toner Control Sensor	
1.1	Board	1-F-3
[5]	Removing, Cleaning and Reinstalling	0
[0]	the Drum	1-E-4
[6]	Removing and Reinstalling	1-6-4
[O]	the Separation Claws	1 5 5
	IA UNIT SECTION	1-F-1
[1]	Screws that Must not be Removed/	
	Loosened	1-F-1
[2]	Removing and Reinstalling	
	the Charging Corona Unit	1-F-1
[3]	Removing and Reinstalling	
	the Charge Control Plate	1-F-2
[4]	Replacing the Charging Wires	

CONTENTS

[5]	Removing and Reinstalling
	the Charging Wire Cleaning Pad1-F-3
[6]	Removing and Reinstalling the PCL 1-F-3
[7]	Cleaning the Charging Corona
[8]	Unit/PCL1-F-4 Removing and Reinstalling the Transfer/
[O]	Separation Corona Unit1-F-4
[9]	Removing and Reinstalling
	the Plunger Prevention Plate1-F-5
[10]	Replacing the Transfer/Separation Wires,
	Transfer/Separation Wire Cleaning
	Block and Support Rubbers1-F-5
[11]	Removing and Reinstalling
DEVELO	the TSL Unit1-F-7
[1]	DPING UNIT 1-G-1 Screws that must not be Removed/
[1]	Loosened1-G-1
[2]	Removing and Reinstalling
	the Developing Unit 1-G-1
[3]	Replacing the Developer 1-G-2
[4]	Removing and Reinstalling
	the Developing Suction Filter 1-G-4
	SUPPLY UNIT1-H-1
[1]	Replacing and Cleaning
[0]	the Toner Cartridge1-H-1
[2]	Drawing out the Toner Supply Unit1-H-1 Removing and Reinstalling
[3]	the Toner Supply Sleeves 1 and 21-H-2
[4]	Removing and Reinstalling
	the Toner Supply Unit1-H-3
CLEANI	NG/TONER RECYCLE UNIT 1-I-1
[1]	Removing and Reinstalling the
	Cleaning/Toner Recycle Unit1-I-1
[2]	Cleaning the Cleaning/Toner
[0]	Recycle Unit
[3]	Removing and Reinstalling the Cleaning Blade 1-I-2
[4]	Removing and Reinstalling
1.1	the Toner Guide Brush and Plunger
	Prevention Felt 1-I-4
[5]	Replacing Guide Plate Assembly 1-I-6
PAPER	FEED UNITS OF TRAYS 1 AND 2 1-J-1
[1]	Removing and Reinstalling Paper Feed
	Trays 1 and 2 1-J-1
[2]	Removing and Reinstalling the Front
[0]	Covers of Trays 1 and 2 1-J-1
[3]	Cleaning the Paper Dust Removing Brush 1-J-2
[4]	Cleaning the Paper Pre-registration
1.1	PS/Paper Feed PS1-J-2
[5]	Removing and Reinstalling the Paper
	Feed Roller and the Feed Roller 1-J-3
[6]	Removing and Reinstalling the Double
	Feed Prevention Roller1-J-4
[7]	Replacing the Pre-registration and the Feed Clutches (MCs)
	110 1 000 UIUIUI 00 (IVIOS) 1-J-3

[8]	Removing and Reinstalling the Up/	
	Down Unit	
[9]	Replacing the Up/Down Plate Wires	
	3 PAPER FEED UNIT	1-K-1
[1]	Removing and Reinstalling	
	the Paper Feed Tray 3	1-K-1
[2]	Removing and Reinstalling the Front	
	Cover of Paper Tray 3	1-K-1
[3]	Cleaning the Paper Dust Removing	
	Brush	1-K-2
[4]	Cleaning the Paper Pre-registration	
	PS/the Paper Feed PS	1-K-2
[5]	Removing and Reinstalling the Paper	
	Feed Roller and the Feed Roller	
[6]	Removing and Reinstalling the Double	
r==1	Feed Prevention Roller	1-K-4
[7]	Replacing the Pre-registration	
	MC3 (MC8) and the Feed MC3 (MC7)) 1-K-5
[8]	Removing and Reinstalling the Up/	
	Down Unit	
[9]	Replacing the Up/Down Plate Wires	
	SS TRAY	1-L-1
[1]	Removing and Reinstalling	
	the By-pass Tray	1-L-1
[2]	Cleaning the Paper Size Detection	
	Sensors	1-L-1
[3]	Replacing the Paper Feed Roller/	
	the Feed Roller Rubbers	1-L-2
[4]	Replacing the Double Feed	
	Prevention Roller Rubber	
VERTI	CAL CONVEYANCE SECTION	1-M-1
[1]	Removing and Reinstalling the	
	Vertical Conveyance Section	
[2]	Removing and Reinstalling the Vertica	
	Conveyance MC (MC9, MC10)	1-M-1
[3]	Replacing the Vertical Conveyance	
	Roller (Upper)	
[4]	Removing and Reinstalling the Vertica	
	Conveyance Rollers (Middle/Lower).	1-M-2
[5]	Cleaning the Vertical Conveyance	
	PS/Loop PS	1-M-3
ADU U	NIT	1-N-1
[1]	Drawing out and Reinstalling	
	the ADU Stand	1-N-1
[2]	Cleaning the Paper Dust Removing	
	Brush for Registration Roller	1-N-1
[3]	Cleaning the Paper Dust Removing	
	Brushes for the Registration Roller	1-N-2
[4]	Cleaning PS44 (Registration PS)	1-N-2
[5]	Cleaning Paper Mis-centering PS (PS	31)/
	Leading Edge Detection PS (PS45)	1-N-3
[6]	Cleaning Paper Reverse PS (PS57)/	
	ADU Deceleration PS (PS59)	1-N-3
[7]	Removing and Reinstalling	
	the ADU Cover	1-N-4

4 ELECTRIC PARTS LIST

[8]	Removing and Reinstalling Registration MC (MC1)1-N-5
[9]	Removing and Reinstalling ADU
[10]	Pre-registration MC (MC2)1-N-6 Removing and Reinstalling
[[11]	the Second Paper Feed Unit 1-N-6 Removing and Reinstalling
-	12]	the ADU Stand
	-	the Registration Roller 1-N-9
[13]	Removing and Reinstalling the Registration Motor (M12) Assembly 1-N-10
[14]	Removing and Reinstalling the Loop Roller, ADU Paper Exit Roller, and
[15]	Pre-registration Roller
[16]	Pre-registration Loop Roller 1-N-13 Removing and Reinstalling
[[17]	the ADU Reverse Roller 1-N-15 Removing and Reinstalling the
[[18]	ADU Stand Drive Board Assembly 1-N-17 Removing and Reinstalling the ADU Horizontal Conveyance Rollers 1 and 2
[19]	Removing and Reinstalling the Paper Reverse/Exit Rollers 1, 2, and 3 1-N-20
[20]	Removing and Reinstalling the Paper Reverse/Exit Unit Entrance Roller 1-N-22
[21]	Removing and Reinstalling the Paper Reverse/Exit Switchover Gate
[22]	Removing and Reinstalling
-171	NO I	the Paper Exit Roller1-N-25
	ing c [1]	JNIT1-O-1 Removing and Reinstalling
٠		the Fixing Unit1-O-1
[2]	Removing and Reinstalling
		the Fixing Unit Top Cover1-O-1
[3]	Replacing the Cleaning Web 1-O-2
[4]	Replacing the Fixing Heater Lamps (Upper/Roller) (L2, L3)
[5]	Removing and Reinstalling the Fixing Upper Roller1-0-4
[6]	Removing and Reinstalling the Fixing Lower Roller1-0-4
[7]	Removing and Reinstalling the Fixing Heat Roller Assembly1-0-5
[[8]	Replacing the Heater Lamp
[9]	(Heat roller) (L4)
[10]	Heat Roller
[11]	the Fixing Separation Claws (Lower) 1-O-7 Removing and Reinstalling the Fixing Separation Claws (Upper) 1-O-8
		3 p (- p p / 1 0 0

[12]	Removing and Reinstalling
		the Actuator for Fixing Exit PS (PS2)1-O-8
[Removing and Reinstalling
		Fixing Temperature Sensors 1 and 21-O-9
Į		Removing and Reinstalling
		Fixing Temperature Sensors 3 and 41-O-10 Removing and Reinstalling
L		the Thermostat (Upper)1-O-12
Г		Removing and Reinstalling
·		the Thermostat (Lower)1-O-14
	ADE	
	ADF >	
		AL SECTION1-P-1 Removing the RADF1-P-1
-		Reinstalling the RADF1-P-2
		L FEED/CONVEYANCE/EXIT
		L FEED/CONVEYANCE/EXTT J1-P-4
		Replacing the Pickup Roller and
ı		Conveyance Roller Rubber1-P-4
ſ		Cleaning the Cleaning Pad1-P-5
-		Replacing the Original Feed Roller/
		Separation Roller/Auxiliary Separation
		Roller1-P-5
[-	Cleaning the Paper Separation
		Rubber1-P-7
[Replacing the Double Feed Prevention
		Roller/Torque Limiter1-P-7
l		Cleaning Photo Sensors/Mirrors for Photo Sensors1-P-8
		Prioto Sensors1-P-8
< LC	CT >	
PAF	ER F	EED SECTION1-Q-1
[1]	Cleaning the Paper Dust Removing
		Brush1-Q-1
[Cleaning the LT feed PS (PS106)/
		LT first paper feed PS(PS107)1-Q-1
Į		Removing and Reinstalling the
		Paper Feed Roller Unit1-Q-2 Replacing the Paper Feed Roller Rubber/
L	-	Feed Roller Rubber1-Q-2
Г		Replacing the Double Feed
ı		Prevention Roller Rubber1-Q-3
Γ		Replacing the LT feed MC (MC101)/
		LT first paper feed MC (MC102)1-Q-5
ſ		Replacing the C-403 Up/Down Wires1-Q-6
-		Replacing the C-404 Up/Down Wires1-Q-10

CONTENTS

< FN >		
EXTERN	NAL SECTION	1-R-1
[1]	Removing and Reinstalling the	
	Rear Cover	1-R-1
[2]	Removing and Reinstalling the	
	Front Cover	1-R-1
[3]	Removing and Reinstalling the	
	Top Cover	1-R-1
[4]	Removing and Reinstalling the	4.0.0
[6]	Paper Exit Cover Removing and Reinstalling the	I-H-2
[5]	Main Tray	1-D-9
[6]	Removing and Reattaching the	1-11-2
[O]	Front Side Cover	1-B-3
[7]	Removing and Reinstalling the	
	Paper Exit Stopper Plate	1-R-3
PAPER	FEED UNIT	1-R-5
[1]	Replacing a Paper Exit Roller	
	(Sponge Roller)	1-R-5
[2]	Removing and Reinstalling the	
	Paper Exit Unit/Shift Unit	1-R-5
[3]	Removing and Reinstalling the	
	Stacker/Stapler Unit	
	R UNIT	1-R-10
[1]	Exchanging the clincher	
ro1	(FN-7 only)	1-R-10
[2]	Removing and Reinstalling a Stapler (For FN-115)	1 D 1
[3]	Removing and Reinstalling a Stapler	I-N-I
اوا	(For FN-7)	1-R-12
MAINTE	RAY SECTION	
[1]	Removing and Reinstalling the	
[11]	Up-Down Stay	1-R-13
[2]	Exchanging the Up-Down Wire	
FOLDIN	G UNIT (FN-7 ONLY)	1-R-15
[1]	Removing and Reinstalling the	
	Folding Unit	1-R-15
[2]	Removing and Reinstalling the	
	Adjustment Cover	1-R-16
< PI >		
PAPER	FEED UNIT	1-S-1
[1]	Replacing the Paper feed roller and	
	Feed roller	
[2]	Replacing the Double-feed prevention	1

roller......1-S-3

< PU >		
EXTERN	IAL SECTION	1-T-1
[1]	Removing the PU (Puncher)	1-T-1
PUNCH	SECTION	1-T-2
[1]	Replacing the Punch unit	
[2]	Replacing the Punch Clutch (MC1)	1-T-3
	SCRAPS CONVEYANCE SECTION	1-T-4
[1]	Replacing the Punch Scraps	
	Conveyance motor (M7)	1-Т-4
< P7 >		
EXTERN	IAL SECTION	1-11-1
[1]	Removing the PZ	
PUNCH	SECTION	
[1]	Replacing the Punch unit	
[2]	Replacing the Punch Clutch (MC1)	1-U-3
PUNCH	SCRAPS CONVEYANCE SECTION	1-U-4
[1]	Replacing the Punch Scraps	
	Conveyance motor (M7)	1-U-4
Z-FOLDI	NG SECTION	1-U-5
[1]	Removing and Installing the Z-folding/	
	Conveyance Unit	1-U-5
< TU >		
	R SECTION	1-V-1
[1]	Replacing the Upper and Lower	4.11.
	Knives	1-V-1

4 ELECTRIC PARTS LIST

ADJU	STMENT		(Image adjustment)2-72
HOW T	O USE THIS SECTION 2-1	[15]	Running Test Mode2-72
[1]	Scope and Precautions2-1	[16]	Test pattern output mode2-73
	TMENTS MADE WHEN REPLACING	[17]	Test pattern density setting2-80
	2-1	[18]	Finisher adjustment2-80
[1]	[How to Read Tables]2-1	[19]	List Output Mode2-86
	F ADJUSTMENT ITEMS2-2	47 MOD	E2-87
		111	47 Mode / Multi Mode Setting Method2-87
	JUSTMENT2-4	[4]	Adjustment Data Display2-89
[1]	LCD Control Panel Adjustment	[0]	Hard Disk Check2-89
[2]	LCD Panel Contrast/Key Sound Adjustment2-4	[4]	Input checklist2-90
OFTTIN	·	ری	Output checklist2-95
	GS AND ADJUSTMENTS MADE WITH	i	ADJUSTMENT2-101
	TLITY FUNCTION	111	Centering Adjustment2-101
[1]	Checking and Printing the	[2]	Paper Feed Roller Load Adjustment2-104
[0]	Utility Function	[0]	Paper up/down plate horizontal
[2]	Setting up the Utility Function2-4		adjustment2-105
	CHANGING MENU2-5		Skew adjustment2-107
[1]	Mode Selection	[-]	Tray spring pressure adjustment2-109
[2]	Display transition of 36 modes		Paper feed height (upper limit)
[3]	Display transition of 25 modes		adjustment2-111
[4]	Display transition of Key Operation modes	[7]	Pick-up release amount adjustment2-113
		[-]	EDH mounting position adjustment2-115
	DE		EDH Skew adjustment2-116
[1]	Setting the 25 Mode		EDH paper skew adjustment2-117
[2]	Setting Software DIP Switches		EDH Hinge Spring Pressure
[3]	Setting the Paper Size		Adjustment2-118 FNS Adjusting the Magnets on
[4]	PM Count Resetting		Conveyance Guide Plate B2-119
5]	Setting the PM Cycle		FNS Adjusting the Magnets on
[6]	Collecting Data2-24 Copy Count by Parts to be Replaced	[10]	Conveyance Guide Plate C2-120
[7]	(Fixed Parts)2-40	[14]	FNS Adjusting the Sub-tray Paper
[8]	Copy Count by Parts to be Replaced	, [:-1]	Exit Gate2-121
[O]	(Optional Parts)2-44	[15]	FNS Adjusting the Paper-Path
[9]	Setting Passwords 2-45		Switching Gate2-122
[10]	· ·	[16]	
[10]	Fax Number of the Service Center 2-46		FNS Adjusting the Shift Position2-124
[11]			FNS Adjusting Opening/Closing at
[12]			the Paper Exit2-125
	List of Adjustment Items for 25 Mode 2-48		FNS Adjusting the Paper Exit-Opening
	DE2-49		Solenoid2-126
[1]	Setting Method	[00]	FNS Adjusting the Paper Exit Opening
[2]	High Voltage Adjustment 2-49		Lower Guide Plate2-127
[3]	Drum Peculiarity Adjustment		FNS Adjusting the Mount Location of
[4]	Drum Peculiarity Adjustment (Manual) 2-57		the Paper Exit Arm2-128
[5]	User Paper Setting2-57	[00]	FNS Adjusting the Mount Location of
[6]	Recall Standard Data		the Upper Alignment Plates2-128
	(Process Adjustment)2-58	[23]	FNS Adjusting the Tension of the Upper
[7]	Tray Adjustment2-58	3	Alignment Plate Drive Timing Belt2-129
[8]	Magnification Adjustment2-59	[0.4]	FNS Adjusting the Mount Location of the
[9]	Timing Adjustment 2-62		Lower Alignment Plates (FN-7 only)2-130
[10]	EDH Adjustment2-66	[25]	FNS Adjusting the Tension of the Lower
[11]	Centering Adjustment2-68	3	Alignment Plate Drive Timing Belt
[12]	Distortion adjustment (Copier) 2-70		(FN-7 only)2-131
[13]	Non-image area erase check2-71	[26]	FNS Adjusting the Stapling Position
[14]	Recall standard data		(Flat Stapling)2-131

2.

CONTENTS

[27]	FNS Adjusting the Stapler Vertical	
	Positioning (FN-7 only)	2-132
[28]	FNS Adjusting the Angle of the Stapling	
	Stopper (FN-7 only)	2-134
[29]	FNS Adjusting the Angle of the Folding	
	Stopper (FN-7 only)	2-135
[30]	FNS Adjusting the Tension of the Staple	er
	Movement Timing Belt (FN-7 only)	2-136
[31]	FNS Adjusting the Tension of the Staple	er
	Rotation Timing Belt (FN-7 only)	2-136
[32]	FNS Adjusting the Folding Force	
	(FN-7 only)	2-137
[33]	FNS Adjusting the Mount Location of the	е
	Folding Knife Motor (FN-7 only)	2-137
[34]	TU Trimming Parallelism Adjustment	2-138
[35]	Adjusting the PZ Paper-Path Switching	
	Solenoid	2-138
[36]	Adjusting the Tension of the PZ Punch	
	Shift Timing Belt	2-140
[37]	Adjusting the 1st Folding Skew	2-140
[38]	Adjusting the Position of the 2nd Folding	g
	Stopper	2-142
[39]	Adjusting the 2nd Folding Skew 2nd	
	Stopper Assembly	2-143

3. SERVICE

SERVIC	E SCHEDULE	3-1
[1]	Service Schedule	3-1
[2]	Maintenance Items	3-3
[3]	Main Body Periodic Inspection Items	3-10
[4]	RADF [EDH-5]	3-13
[5]	FNS [FN-115]	3-14
[6]	FNS [FN-7]	3-14
[7]	LCT [C-403/404]	3-15
[8]	PI [Cover Inserter C]	3-15
[9]	TU [TMG-2]	3-16
[10]	PU [PK-3]	3-16
[11]	PZ [ZK-2	
[12]	Replacement parts list	3-17
COPY M	ATERIALS	3-22
[1]	Single unit supply	3-22
SERVIC	E MATERIAL LIST	3-23

4. ELECTRIC PARTS LIST

Parts	Layout Drawing	4-1
[1]	Di850 Parts Layout Drawing	4-1
[2]	EDH-5 Parts Layout Drawing	4-9
[3]	C-403/C-404 Parts Layout Drawing	4-10
[4]	FN-7/FN-115 Parts Layout Drawing	4-11
[5]	TMG-2 Parts Layout Drawing	4-14
[6]	PK-3 Parts Layout Drawing	4-15
[7]	ZK-2 Parts Layout Drawing	4-16
[8]	Cover Inserter C Parts Layout Drawing	4-17
Connector Layout Drawing		4-18
[1]	Di850 Connector Layout Drawing	4-18
[2]	EDH-5 Connector Layout Drawing	4-31
[3]	C-403/C-404 Connector Layout	
	Drawing	4-32
[4]	FN-7/FN-115 Connector Layout	
	Drawing	4-33
[5]	Cover Inserter C Connector Layout	
	Drawing	
[6]	PK-3 Connector Layout Drawing	4-34
[7]	, ,	
[8]	TMG-2 Connector Layout Drawing	4-36
Jam C	Code List	4-37
Error	Code List	4-49
Timin	g chart	4-86
[1]	Di850 Timing Chart	4-86
[2]	EDH-5 Timing Chart (1)	4-87
[3]	EDH-5 Timing Chart (2)	4-88
[4]	C-403/C-404 Timing Chart	4-89
[5]	FN-7/FN-115 TIming Chart (1)	4-90
[6]	FN-7/FN-115 Timing Chart (2)	4-91
[7]	FN-7/FN-115 Timing Chart (3)	4-92
[8]	PK-3 Timing Chart (1)	4-93
[9]	PK-3 Timing Chart (2)	4-94
[10)] ZK-2 Timing Chart	4-95
[1]	1] TMG-2 Timing Chart (1)	4-96
[12	2] TMG-2 Timing Chart (2)	4-97

5. ISW

What's I	SW?	5-1
SETUP		5-2
[1]	ISW-compatible boards	5-2
[2]	Data flow	5-2
[3]	Prepare the copier to start an ISW	
	transfer	5-2
[4]	HELP + CHECK mode operation flow.	5-4
[5]	HELP + CHECK mode operating	
	procedure	5-5
[6]	Error code table for ISW Setup	5-8
[7]	Preparing the copier to transfer	5-9
[8]	Relationships between processing	
	states and operational LEDs	5-10
[9]	Rewriting procedure after an error	
	interruption	
[10]	Connecting the ISW connector	5-11
UPDAT	NG WITH ISW Trns	
[1]	Setting Up ISW Trns	5-12
[2]	Copying Transfer Data (Update Data).	5-17
[3]	Connecting the Di850	
[4]	Updating	5-18
[5]	ISW Trns Messages	5-23
[6]	Troubleshooting ISW Trns	5-25

APPENDIX

[1] Overall Wiring Diagram

SAFETY AND IMPORTANT WARNING ITEMS

Read carefully the Safety and Important Warning Items described below to understand them before doing service work.

IMPORTANT NOTICE

Because of possible hazards to an inexperienced person servicing this copier as well as the risk of damage to the copier, Minolta Corporation strongly recommends that all servicing be performed only by Minolta-trained service technicians.

Changes may have been made to this copier to improve its performance after this Service Manual was printed. Accordingly, Minolta Corporation does not warrant, either explicitly or implicitly, that the information contained in this Service Manual is complete and accurate.

The user of this Service Manual must assume all risks of personal injury and/or damage to the copier while servicing the copier for which this Service Manual is intended.

Therefore, this Service Manual must be carefully read before doing service work both in the course of technical training and even after that, for performing maintenance and control of the copier properly.

Keep this Service Manual also for future service.

DANGER, WARNING, AND CAUTION SYMBOLS AND EXPRESSIONS

In this Service Manual, each of three expressions " \triangle DANGER," " \triangle WARNING," and " \triangle CAUTION" is defined as follows together with a symbol mark to be used in a limited meaning.


When servicing the copier, the relevant works (disassembling, reassembling, adjustment, repair, maintenance, etc.) need to be conducted with utmost care.

PANGER :Action having a high possibility of suffering death or serious injury

WARNING: Action having a possibility of suffering death or serious injury

CAUTION :Action having a possibility of suffering a slight wound, medium trouble, and property damage

Symbols used for important warning items are defined as follows:

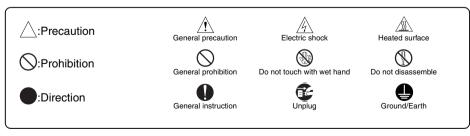

SAFETY WARNINGS

[1] MODIFICATIONS NOT AUTHORIZED BY MINOLTA

Minolta copiers are renowned for their high reliability. This reliability is achieved through high-quality design and a solid service network.

Copier design is a highly complicated and delicate process where numerous mechanical, physical, and electrical aspects have to be taken into consideration, with the aim of arriving at proper tolerances and safety factors. For this reason, unauthorized modifications involve a high risk of degradation in performance and safety. Such modifications are therefore strictly prohibited. the points listed below are not exhaustive, but they illustrate the reasoning behind this policy.

PROHIBITED ACTIONS: Using any cables or power cord not specified by Minolta. · Using any fuse or thermostat not specified by Minolta. Safety will not be assured, leading to a risk of fire and injury. · Disabling fuse functions or bridging fuse terminals with wire, metal clips, solder or similar object. Disabling relay functions (such as wedging paper between relay contacts) · Disabling safety functions (interlocks, safety circuits, etc.) Safety will not be assured, leading to a risk of fire and injury. Making any modification to the copier unless instructed by Minolta · Using parts not specified by Minolta

[2] CHECKPOINTS WHEN PERFORMING ON-SITE SERVICE

Minolta copiers are extensively tested before shipping, to ensure that all applicable safety standards are met, in order to protect the customer and customer engineer (hereafter called the CE) from the risk of injury. However, in daily use, any electrical equipment may be subject to parts wear and eventual failure. In order to maintain safety and reliability, the CE must perform regular safety checks.

1. Power Supply

! WARNING: Wall Outlet

 Check that mains voltage is as specified. Plug the power cord into the dedicated wall outlet with a capacity greater than the maximum power consumption.

If excessive current flows in the wall outlet, fire may result.

 
 If two or more power cords can be plugged into the wall outlet, the total load must not exceed the rating of the wall outlet.

If excessive current flows in the wall outlet, fire may result.



NARNING: Power Plug and Cord

Make sure the power cord is plugged in the wall outlet securely.
 Contact problems may lead to increased resistance, overheating, and the risk of fire.




 Check whether the power cord is damaged. Check whether the sheath is damaged.


If the power plug, cord, or sheath is damaged, replace with a new power cord (with plugs on both ends) specified by Minolta. Using the damaged power cord may result in fire or electric shock.



 - When using the power cord (inlet type) that came with this copier, be sure to observe the following precautions:
 - Make sure the copier-side power plug is securely inserted in the socket on the rear panel of the copier.
 - Secure the cord with a fixture properly.
 - If the power cord or sheath is damaged, replace with a new power cord (with plugs on both ends) specified by Minolta.
 - If the power cord (inlet type) is not connected to the copier securely, a contact problem may lead to increased resistance, overheating, and risk of fire.



 Overheating may occur there, leading to a risk of fire.



NARNING: Power Plug and Cord

 Do not bundle or tie the power cord. Overheating may occur there, leading to a risk of fire.



· Check whether dust is collected around the power plug and wall outlet. Using the power plug and wall outlet without removing dust may result in fire



• Do not insert the power plug into the wall outlet with a wet hand. The risk of electric shock exists.



 When unplugging the power cord, grasp the plug, not the cable. The cable may be broken, leading to a risk of fire and electric shock.





! WARNING: Wiring

· Never use multi-plug adapters to plug multiple power cords in the same outlet.



When an extension cord is required, use a specified one.

If used, the risk of fire exists.

Current that can flow in the extension cord is limited, so using a too long extension cord may result in fire.





Do not use an extension cable reel with the cable taken up. Fire may result.

NARNING: Ground Lead

· Check whether the copier is grounded properly.

If current leakage occurs in an ungrounded copier, you may suffer electric shock while operating the copier. Connect the ground lead to one of the following points:



- a. Ground terminal of wall outlet
- b. Ground terminal for which Class D work has been done

WARNING: Ground Lead

· Pay attention to the point to which the ground lead is connected.

Connecting the ground lead to an improper point such as the points listed below results in a risk of explosion and electric shock:

- a. Gas pipe (A risk of explosion or fire exists.)
- b. Lightning rod (A risk of electric shock or fire exists.)
- c. Telephone line ground (A risk of electric shock or fire exists in the case of lightning.)
- d. Water pipe or faucet (It may include a plastic portion.)



2.Installation Requirements

NARNING: Prohibited Installation Place

 Do not place the copier near flammable materials such as curtains or volatile materials that may catch fire.

A risk of fire exists.

Do not place the copier in a place exposed to water such as rain water.
 A risk of fire and electric shock exists.



! WARNING: Nonoperational Handling

 When the copier is not used over an extended period of time (holidays, etc.), switch it off and unplug the power cord.

Dust collected around the power plug and outlet may cause fire.



! CAUTION: Temperature and Humidity

 Do not place the copier in a place exposed to direct sunlight or near a heat source such as a heater.

A risk of degradation in copier performance or deformation exists.

Do not place the copier in a place exposed to cool wind.

Recommended temperature and humidity are as follows:

Temperature: 10°C to 30°C 50°F to 86°F

Humidity: 10% to 80% (no dew condensation) Avoid other environments as much as possible.



! CAUTION: Ventilation

 
 Do not place the copier in a place where there is much dust, cigarette smoke, or ammonia gas.

Place the copier in a well ventilated place to prevent machine problems and image faults.



! CAUTION: Ventilation


- The copier generates ozone gas during operation, but it is not sufficient to be harmful to the human body.
 - If a bad smell of ozone is present in the following cases, ventilate the room.
 - a. When the copier is used in a poorly ventilated room
 - b. When taking a lot of copies
 - c. When using multiple copiers at the same time



CAUTION: Vibration

 When installing the copier, read the Installation Guide thoroughly. Be sure to install the copier in a level and sturdy place.

 Constant vibration will cause problems.



In the case of an earthquake and so on, the copier may slide, leading to a injury.





/ CAUTION: Inspection before Servicing

· Before conducting an inspection, read all relevant documentation (Service Manual, technical notices, etc.) and proceed with the inspection following the prescribed procedure, using only the prescribed tools. Do not make any adjustment not described in the documentation.



If the prescribed procedure or tool is not used, the copier may break and a risk of injury or fire exists.

 Before conducting an inspection, be sure to disconnect the power plugs from the copier and options.

When the power plug is inserted in the wall outlet, some units are still powered even if the POWER switch is turned OFF. A risk of electric shock exists.



 The area around the fixing unit is hot. You may get burnt.





NOTION DANGER: Work Performed with the Copier Powered

 Take every care when making adjustments or performing an operation check with the copier powered.

If you make adjustments or perform an operation check with the external cover detached, you may touch live or high-voltage parts or you may be caught in moving gears or the timing belt, leading to a risk of injury.





A DANGER: Work Performed with the Copier Powered

· Take every care when servicing with the external cover detached. High-voltage exists around the drum unit. A risk of electric shock exists.



NARNING: Safety Checkpoints

 Check the exterior and frame for edges, burrs, and other damages. The user or CE may be injured.



 Do not allow any metal parts such as clips, staples, and screws to fall into the copier.





They can short internal circuits and cause electric shock or fire.

Current can leak, leading to a risk of electric shock or fire.

· Check wiring for squeezing and any other damage.



· When disconnecting connectors, grasp the connector, not the cable. (Specifically, connectors of the AC line and high-voltage parts) Current can leak, leading to a risk of electric shock or fire.





· Carefully remove all toner remnants and dust from electrical parts and electrode units such as a charging corona unit. Current can leak, leading to a risk of copier trouble or fire.



 Check high-voltage cables and sheaths for any damage. Current can leak, leading to a risk of electric shock or fire.



 


· Check electrode units such as a charging corona unit for deterioration and sign of leakage.



Current can leak, leading to a risk of trouble or fire.










sure that the power cord has been disconnected. The laser light can enter your eye, leading to a risk of loss of eyesight.

 · Do not remove the cover of the write unit. Do not supply power with the write unit shifted from the specified mounting position.







· When replacing a lithium battery, replace it with a new lithium battery specified in the Parts Guide Manual. Dispose of the used lithium battery using the method specified by local authority.





Improper replacement can cause explosion.

interlock functions properly.

 
WARNING: Safety Checkpoints

After replacing a part to which AC voltage is applied (e.g., optical lamp and





fixing lamp), be sure to check the installation state. A risk of fire exists





If the interlock does not function, you may receive an electric shock or be injured when you insert your hand in the copier (e.g., for clearing paper iam).



 Make sure the wiring cannot come into contact with sharp edges, burrs, or other pointed parts.





Current can leak, leading to a risk of electric shock or fire.

· Make sure that all screws, components, wiring, connectors, etc. that were removed for safety check and maintenance have been reinstalled in the original location. (Pay special attention to forgotten connectors, pinched cables, forgotten screws, etc.)





A risk of copier trouble, electric shock, and fire exists.

! HANDLING OF MATERIALS FOR SERVICING

· Unplug the power cord from the wall outlet.

Drum cleaner (isopropyl alcohol) and roller cleaner (acetone-based) are highly flammable and must be handled with care. A risk of fire exists.





· Do not replace the cover or turn the copier ON before any solvent remnants on the cleaned parts have fully evaporated. A risk of fire exists





· Use only a small amount of cleaner at a time and take care not to spill any liquid. If this happens, immediately wipe it off.



A risk of fire exists.

· When using any solvent, ventilate the room well. Breathing large quantities of organic solvents can lead to discomfort.



ADANGER: HANDLING OF MATERIALS FOR SERVICING

Toner and developer are not harmful substances, but care must be taken not
to breathe excessive amounts or let the substances come into contact with
eyes, etc. It may be stimulative.



If the substances get in the eye, rinse with plenty of water immediately. When symptoms are noticeable, consult a physician.

Never throw the used cartridge and toner into fire.
 You may be burned due to dust explosion.



[3] CONCLUSION

- Safety of users and customer engineers depends highly on accurate maintenance and administration.
 Therefore, safety can be maintained by the appropriate daily service work conducted by the customer engineer.
- When performing service, each copier on the site must be tested for safety. The customer engineer must verify the safety of parts and ensure appropriate management of the equipment.

SAFETY INFORMATION

IMPORTANT INFORMATION

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products manufactured since August 1, 1976. Compliance is mandatory for products marketed in the United States.

This copier is certified as a "Class 1" laser product under the U.S.

Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. Since radiation emitted inside this copier is completely confined within protective housings and external covers, the laser beam cannot escape during any phase of normal user operation.


SAFETY CIRCUITS

This machine is provided with the following safety circuits to prevent machine faults from resulting in serious accidents.

- [1] Overall protection circuit
- [2] L2 and L4 (fixing heater lamps) overheating prevention circuit

These safety circuits are described below to provide the service engineer with a renewed awareness of them in order to prevent servicing errors that may impair their functions.

[1] Overall Protection Circuit

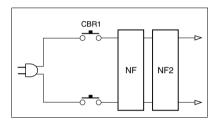


1. Protection by CBR1 (circuit breakers)

CBR1 interrupt the AC line instantaneously when an excessive current flows due to a short in the AC line.

↑ CAUTION:

The CBR1 functions must not be deactivated under any circumstances.

[2] Protection by L2 and L4 (fixing heater lamps) overheating prevention circuit

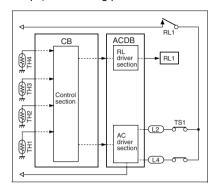

1. Protection by software

The output voltage from TH1 (fixing temperature sensor 1) is read by the CPU. If this voltage is abnormal, L2 (fixing heater lamp 1), and L4 (fixing heater lamp 3), and RL1 (main relay) are turned OFF.

↑ CAUTION:

Do not change the gap between the roller and TH1. When replacing TH1, check the specified mounting dimensions.

The RL1 function must not be deactivated under any circumstances.

2. Protection by the hardware circuit

The output voltages from TH1 and TH2 (fixing temperature sensor 2), TH3 (fixing temperature sensor 3), and TH4 (fixing temperature sensor 4) are compared with the abnormality judgement reference value in the comparator circuit. If the output voltage from TH1, TH2, TH3, or TH4 exceeds the reference value, L2, L4, and RL1 are turned off in hardware means.

↑ CAUTION:

Periodically check the TH2 and TH4 faces contacting the roller, and replace TH2 and/or TH4 if any abnormality is detected. Do not change the gap between the roller and each sensor TH2 and TH4. When replacing TH2 or TH4, check the specified mounting dimensions.

The RL1 function must not be deactivated under any circumstances.

Protection by TS1 (thermostat (upper)) and TS2 (thermostat (lower))

TS1 is turned off when the temperature of the fixing roller (upper) exceeds the specified value, and TS2 is turned off when the temperature of the heating (upper) roller exceeds the specified value, thus interrupting the power to L2 and L4 directly.


↑ CAUTION:

Do not use any other electrical conductor in place of TS1 and TS2.


INDICATION OF WARNING ON THE MACHINE

Caution labels shown below are attached in some areas on/in the machine areas.


When accessing these areas for maintenance, repair, or adjustment, special care should be taken to avoid burns and shock hazards.

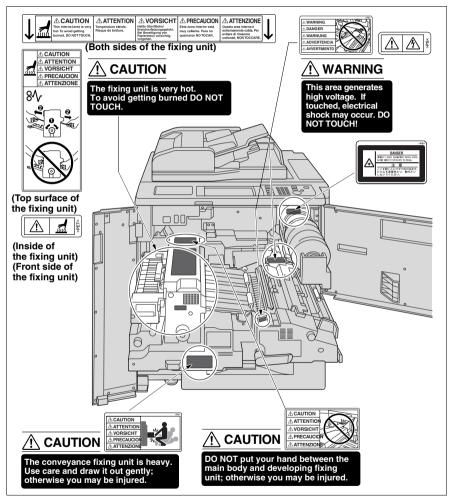


∆ CAUTION

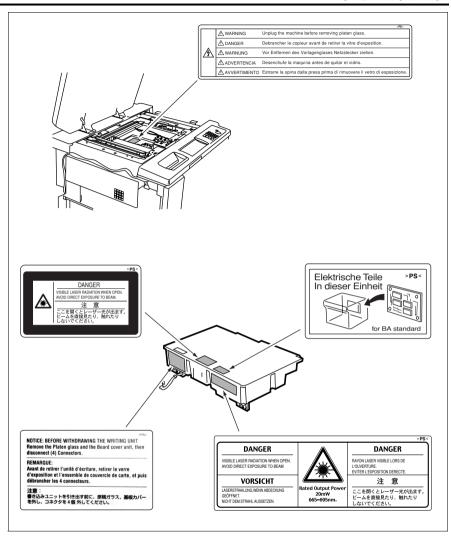


∴ CAUTION

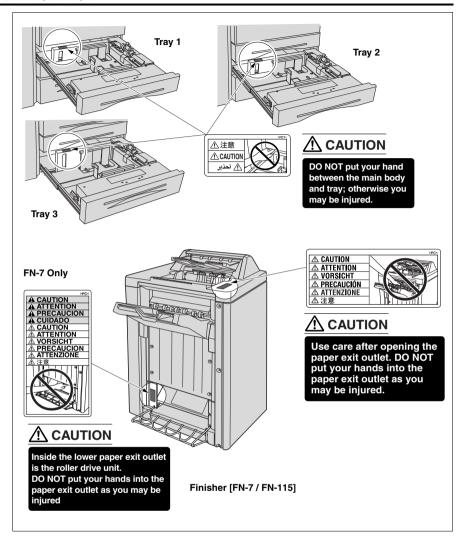

∆ CAUTION

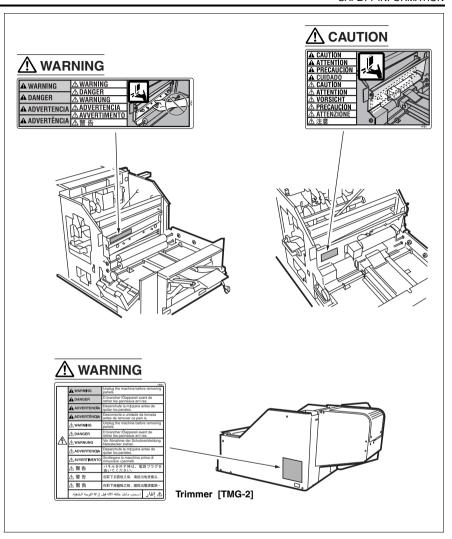

∴ CAUTION

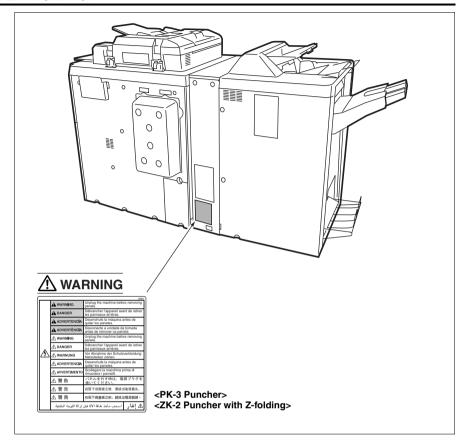

∴ CAUTION