
シリンダゲージ専用ID-C(ID-C112GB) デジマチックシリンダゲージ(CG-D100/160)

操作説明書

User's Manual No.99MAH015B SERIES No.543, 511

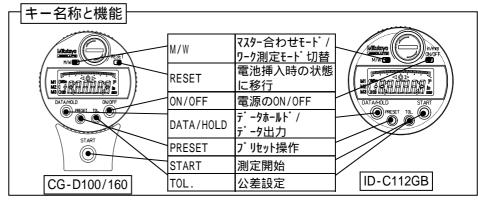



マスター合わせ

 ${\cal M} \bigcirc$

新規にマスター値を登録する場合

マスター合わせモートへの移行





メモリー選択





M1,M2,M3を選択する

マスター値のプリセット





桁の移動 **PRESET**





変更したい桁が点滅したら指 を離します。

数値の変更

PRESET



押した回数分だけ値が変わり ます。

PRESET



+050.000∆

"P"が点滅するまで押し続け ます。

マスター値のプリセット完了





までの操作でプリセットしたマス ター値が点滅します。ここまで の操作で、プリセットした値はメモ リーに記憶されますが、マスター値 としては登録されていません。 引き続き以降の操作を行って ください。


マスターリングのセット





シリンダケージ をマスターリング にセット してからキーを押してください。

マスターリングの最小値検出

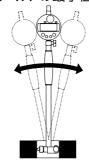

シリンダケーシを前後又は左右に振っ て最小値を探って〈ださい。

表示値のホールド

DATA/HOLD





の操作を2~3回繰返し、表 示がゼロで安定することを確認し てください。

誤操作によって最小値がずれてし まう恐れがある場合は、 [DATA/HOLD] キーを短く押して表

示をホールトしてください。

("H"が点灯します)

マスター値の呼出し



50000_

マスターリングからシリンダケージを抜き、 キーを押してください。

までの操作でプリセットしたマスター 値が呼び出され点滅します。

マスター値の登録

PRESET



50000_

キ-を押すと点滅が点灯に変わり、 マスター値が登録されます。

マスター値の登録完了





測定待機状態に戻ります。

マスター合わせ

予めマスター値が登録されている場合

マスター値の呼出し





登録されているマスター値が点滅し ます。


マスターリング のセット





シリンダケージをマスターリングにセットして からキーを押してください。

マスターリングの最小値検出

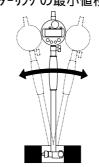

シリンダゲージを前後又は左右に振っ て最小値を探ってください。

表示値のホールド

DATA/HOLD





マスター値の呼出し

PRESET



マスター値の登録

PRESET



50000_

50.000**.**

マスター値の登録完了





測定待機状態に戻ります。

内径測定


最小値測定の開始





シリンダケーシ をマスターリング にセットして からキーを押してください。

ワークの最小値の検出

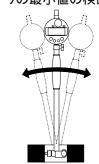

シリンダケーシを前後又は左右に振っ て最小値を探ってください。

最小値の表示



最小値が検出されるとデジタル表示 はその値をホールドします。

注意


前日測定した同一ワークを測定する 場合でも、測定を開始する際には 「マスタ-合わせ」の動作を再度行 い、セ゚ロ点の確認を必ず行ってくだ


ここで表示した数値はあくまでも参考です。実際に表示される値とは異なります。

Digimatic Indicator for Bore Gage ID-C112GB Digimatic Bore Gage CG-D100/160

Operation Manual

User's Manual No.99MAH015B SERIESNo.543, 511

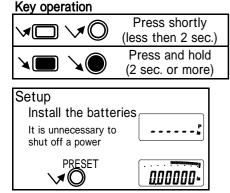

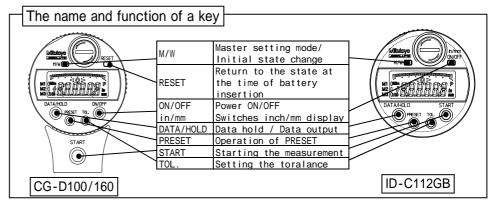

Master setting

When a master value is registered newly

To the master setting mode





Selection of a memory





Secretion of M1, M2, M3.

Presetting the master value **PRESET**





Moving a digit PRESET





Hold until a desired digit starts blinking.

> Change of a value **PRESET**





Only the pushed number of times changes a value.

PRESET





Please continue pushing until "P" blinks.

> Comoletion of presetting the master value





The master value preseted by operation to is blinks. Although the value which preseted by the operation so far is memorized by the memory, it is not registered as a master value. Please perform subsequent


> Setting the master ring START





Please push a key after setting a bore gage to master ring.

Detect the minimum value of the master ring

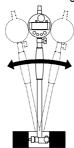

Shake at forward and backward or right and left, and explore the minimum value.

> Holding the displayed value DATA/HOLD





Repeat operation several to times and check a display is stabilized in zero.

If there is a possibility of an accidental change of the minimum value detected, press the [DATA/HOLD] key shortly to hold the display value.("H" is lighting.)

> Recall the master value PRESET





Please push a key after drawing out a bore gage from master ring. The value preseted by operation is called and it blinks.

Registering the master value





If a key is pushed, blinking will change to lighting, and a master value will be registered.

> Completion of registration of the master value





Returns to the state where measurement is stood by.

Master setting

When the master value is registering beforehand

Recall the master value





The registered master value


Setting the master ring STĂRT





Please push a key after setting a bore gage to master ring.

> Detect the minimum value of the master ring

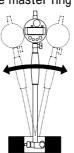

Shake at forward and backward or right and left, and explore the minimum value.

> Holding the displayed value DATA/HOLD







Recall the master value **PRESET**





Registering the master value PRESET





Completion of registration of the master value





Returns to the state where measurement is stood by.

Measuring the inside diameter


Starting of minimum value measurement

START



Please push a key after setting a bore gage to master ring.

> Detect the minimum value of the work

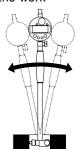

Shake at forward and backward or right and left, and explore the minimum value.

> The minimum value is displayed



If the minimum value is detected, a digital display will hold the value.

CAUTION

Even when measuring the same work measured on the previous day, in case you start measurement, please operate "Master setting" again, and be sure to check a zero point.

The value displayed here is reference. It differs from the value actually displayed.