

***** CAL. **FSXX** MOV'T PARTS LIST *****

HIGH HAND

ORIGINAL PARTS, MADE IN JAPAN

<u>PART NAME</u>	<u>FS03/04</u>	<u>FS13/14</u>	<u>FS23/24</u>
HOUR WHEEL	075-563	075-A47	075-A47
CANON PINION WITH DRIVING WHEEL	028-348	028-A00	028-A00
MINUTE RECORDING WHEEL	291-120	291-208	291-208
PUSH BUTTON SPACER(FOR FS04/14/24)	282-960	282-960	282-960
SECOND CHRONOGRAPH WHEEL	251-250	251-306	251-306
SECOND WHEEL	025-121	025-999	025-999
SUPPORTOR FOR CHRONOGRAPH PLATE	720-871	720-910	720-912
24 HOUR DRIVING WHEEL	100-720	100-812	100-812

*Other parts are same as ...

FS03 (=FS00)

FS04 (=FS01)

FS13 (=FS10)

FS14 (=FS11)

FS23 (=FS20)

FS24 (=FS21)

***** **CAL. FSXX MOV'T PARTS LIST** *****

ORIGINAL PARTS, MADE IN JAPAN

PART NAME	FS00/01	FS10/11	FS20/21
ANTI MAGNETIC PLATE	186-920	186-920	186-920
BATTERY	280-3908	280-3908	280-3908
BATTERY CONNECTOR SPRING	231-381	231-381	231-381
CALENDAR CORRECTOR LEVER	116-121	116-126	116-126
CALENDAR CORRECTOR WHEEL	-	213-540	213-540
CALENDER PLATE	-	714-051	714-051
CANNON PINION WITH DRIVING WHEEL	028-337	028-345	028-345
CENTER WHEEL COCK	711-202	711-202	711-202
CHRONOGRAPH COIL UNIT 1	246-207	246-207	246-207
CLUTCH WHEEL	064-670	064-670	064-670
COIL UNIT	246-207	246-207	246-207
DATE DIAL	108-F4XX	108-F4XX	108-F4XX
DATE DIAL DRIVING WHEEL	103-993	103-993	103-993
DATE DIAL GUARD	293-126	293-129	293-129
DATE JUMPER	109-630	109-730	109-730
DAY DIAL DRIVING WHEEL	-	-	-
DIAL GUARD	713-139	-	-
DAY JUMPER	-	-	-
DAY WHEEL	-	-	-
ELECTRIC CIRCUIT UNIT	279-E83	279-E83	279-E83
FIFTH WHEEL AND PINION	084-900	084-900	084-900
FLY-BACK LEVER	260-117	260-117	260-117
24 HOUR DRIVING WHEEL	100-690	100-700	100-700
FORTH WHEEL AND PINION	023-376	023-376	023-376
HOURL WHEEL	075-542	075-556	075-556
INTERMEDIATE MINUTE WHEEL	087-138	087-138	087-138
INTERMEDIATE DATE CORRECTING WHEEL	087-620	087-620	087-620
INTERMEDIATE DATE CORRECTING WHEEL 2	-	087-217	087-217
INTERMEDIATE DATE CORRECTING WHEEL 3	-	087-235	087-235
INTERMEDIATE DAY WHEEL 1	-	-	-
INTERMEDIATE DAY WHEEL 2	-	-	-
INTERMEDIATE FLY-BACK WHEEL	087-229	087-234	087-234
INTERMEDIATE SECOND-RECORDING WHEEL 1	087-226	087-226	087-226
INTERMEDIATE SECOND-RECORDING WHEEL 2	087-227	087-227	087-227
INTERMEDIATE MINUTE WHEEL	087-138	087-138	087-138
INTERMEDIATE MINUTE-RECORDING WHEEL	087-228	087-228	087-228
INTERMEDIATE DATE WHEEL	087-231	087-231	087-231
JUMPER SPRING FOR INTERMEDIATE DAY WHEEL	-	-	-
LEVER STOPPER	117-290	117-290	117-290
MINUTE RECORDING WHEEL	291-100	291-110	291-110
MINUTE WHEEL AND PINION	072-132	072-132	072-132
PUSH BUTTON SPACER (FOR FS01/FS11/FS21/FS61)	282-960	282-960	282-960
ROTOR	285-232	285-232	285-232
ROTOR FOR CHRONOGRAPH	285-233	285-233	285-233
SCREW FOR CENTER WHEEL COCK (X2)	923-980	923-980	923-980
SCREW FOR CHRONOGRAPH GURD 1	930-650	930-650	930-650
SCREW FOR CHRONOGRAPH GURD 2(×3)	929-490	929-490	929-490

SCREW FOR DATE DIAL GUARD (X3)	929-480	929-640	929-640
SCREW FOR ELECTRIC CIRCUIT (X2)	922-166	922-166	922-166
SCREW FOR TRAIN WHEEL BRIDGE 1	923-980	923-980	923-980
SCREW FOR TRAIN WHEEL BRIDGE 2	934-470	934-470	934-470
SECOND CHRONOGRAPH WHEEL	251-230	251-240	251-240
SECONDS WHEEL	025-118	025-119	025-119
SETTING LEVER	067-993	067-993	067-993
SETTING LEVER SPRING	019-270	019-270	019-270
SETTING STEM	065-549	065-549	065-549
SETTING WHEEL	076-680	076-680	076-680
SPACER FOR SETTING STEM	212-301	212-309	212-309
STATOR	190-203	190-203	190-203
STATOR FOR CHRONOGRAPH 1	190-205	190-205	190-205
STOP LEVER	204-550	204-570	204-570
SUPPORTER FOR PLATE COMPLETE	226-508	226-508	226-508
SUPPORTOR FOR CHRONOGRAPH PLATE	720-568	720-593	720-595
SUPPORTER FOR CHRONOGRAPH PLATE SPRING	903-228	903-228	903-228
THIRD WHEEL AND PINION	017-171	017-171	017-171
TRAIN WHEEL BRIDGE	701-F39	701-F39	701-F39
YOKE	071-144	071-144	071-144
LONGER SETTING STEM(24.00MM)	065-557	065-557	065-557